
Veronte Ops

Release 8.2/1.1

Embention Sistemas Inteligentes, S.A.

2026-08-19

Contents

Scope of Changes	7
Quick Start	8
System requirements	8
Minimum	8
Recommended	8
Software Requirements	9
Download and Installation	9
Executable	10
Firewall Configuration	10
Additional apps	11
Veronte Terrain Provider	11
Download and Installation	11
Configuration	11
Operation	12
Web Converter	13
Download	13
Installation	13
Configuration	11
Operation	12
Panels	16
1. Veronte Ops configuration	16
Status bar	17
Notification	18
More options	21
Changelog	22
Light/Dark mode	23
Status bar settings	23
Setup	24
Preferences	24
Manage	35
Terms and Conditions	50
Log in	51
2. Mission	53

Operation	56
Mission Point.....	56
Waypoint	59
Segment	70
Orbit	73
Shape	76
Prism	79
Sphere	84
Cylinder	87
Geocaging area	90
Runway.....	97
Spot	101
Marks	105
Generate route	109
Spiral	109
Photogrammetry Mission.....	112
Figure	117
Mission panel	119
Edit mission	127
Turn on multiselection	128
Remove mission	130
Import features.....	130
Export features	131
Ruler	132
Turn on ruler	132
Offline	134
Show downloaded tiles	134
Save tiles	136
Remove tiles	138
3. Operation	138
Operation Panel	140
Customize.....	140
Operation Variables	141
Mission Points.....	144
Events Volumes	146

Events Waypoints	148
Action Waypoints.....	150
Events Marks	150
Runways	154
Spots	156
Initial position UAV	158
Operator position	160
Calibrations	162
Calibrate Atmosphere.....	163
Calibrate Wind.....	164
Advanced Calibrations.....	165
Complementary Telemetry	168
License	169
STANAG 4586 Scheduled Updates	171
Operations	172
Operation actions.....	173
4. Platform.....	174
Platform name	175
Platform connection status	176
Platform actions	178
DRx features	179
5. Workspace.....	181
Map options	181
Workspace options.....	190
Workspace toolbar	194
Workspaces	196
Widgets	198
Main	203
Map	203
Veronte Panel	203
Group Conditional	213
Group button.....	219
Script	220
Safety	221
Veronte alerts.....	222

Flight Termination	230
Alerts	230
Electrical Report.....	231
Display	232
Text	232
Image.....	234
Iframe	236
Video	240
Timer.....	242
Telemetry	247
Label	247
Chart.....	252
Scatter	259
Gauge	265
Bar	274
Roll Tape.....	284
Label Script.....	291
Commands	293
Slider.....	293
Action Button	295
Input Data	298
Stick.....	300
Dial Button	305
Stick Buttons.....	307
Knob.....	310
Vehicle.....	317
Lights	317
Engine Command.....	319
Battery Report.....	322
Tanks Status.....	323
Vehicle Auxiliary.....	327
Flight instruments	329
Attitude	329
Heading.....	334
ADS-B.....	337

GPS Report.....	341
Wind.....	342
Payload.....	343
Gimbal Buttons	343
Gimbal Setup	346
Integration examples.....	348
Gimbal.....	348
Veronte Gimbal	350
Stick widget.....	354
USB joystick	355
Remote ID	357
Troubleshooting	360
Error when changing phase.....	360
Installed Veronte Ops app does not load.....	361
Navigation does not start.....	362
Sounds Notification Language.....	362
Appendix	363
Script Widget.....	363
Getting Started	363
Importing custom libraries.....	364
Stopping a Script	365
Available Scripting Functions	365
Example Use Cases.....	368
Error list	380
Notes and Tips	381
Safety Notes	381
📎 Summary Table	381
Software Changelog	383

Scope of Changes

- Version 1.0
 - Added:
 - First version issued
- Version 1.1
 - Added:
 - Explanation of the **Local (Default)** option for the "Network Interface" parameter in the [CUCS - Setup menu](#)
 - Warning message in [Platform actions](#)
 - [Script widget](#) explanation in **Appendix** section

Quick Start

Veronte Ops is an application for the operation and monitoring of the vehicle during the mission.

Veronte Ops includes:

- **Telecommand:** Support for all synchronous operator control commands that can be sent to the flight segment, e.g. operational mode switch, mission management, payload control.
- **Mission design:** Configuration of user-defined, pre-defined mapping and launch missions, as well as in-flight mission editing.
- **Operation parameters:** Configuration of operation parameters, such as their values, positions and directions, which may vary depending on the mission and during the mission.
- **Workspace:** User can get feedback on autopilot variables and status through widgets.
- **Multiple users:** One or more operators can work simultaneously.

System requirements

Before executing this software, users should check the following sections with the minimum and recommended PC hardware requirements.

Minimum

- **CPU:** Intel Core i5-8365UE
- **RAM:** 8 GB DDR4
- **STO:** 256 GB SSD

Recommended

- **CPU:** Intel Core i5-1235U (10C/DecaCore 1.3 / 4.4GHz, 10MB)
- **RAM:** 8 GB DDR4
- **STO:** 512 GB SSD M.2 NVMe PCIe

Software Requirements

Compatible browsers

The following are the functional, optional and unsupported browsers for use with **Veronte Ops** software:

- **Functional:** Chrome
- **Optional:** Firefox, Edge

Window Size

In order for the application and all its features to display correctly, check the following minimum and maximum sizes for the application window:

- **Minimum:** 1024x768
- **Maximum:** No limit

Operating System

- **Recommended:** Windows 11
- **Supported:** Windows 10

Important

Some of the latest features of this application may not be compatible with Windows 10.

Download and Installation

There are 2 ways to work with this application: as a **website app** or installing it through an **executable**.

 Hint

The executable version might be useful for some users because:

- No internet connection is required, i.e. for users who need to work offline.
- No automatic updates are carried out.
- Users do not need to have a browser installed.
- The application does not depend on the browser.

Executable

If users wish to work with the executable app, **Veronte Ops** software is available on the **Veronte Toolbox** platform for download and installation. For more information, please refer to the [Veronte Toolbox](#) user manual.

A personal account is required to access **Veronte Toolbox**; create a [Ticket](#) in the user's **Joint Collaboration Framework** and the support team will create it for you.

Firewall Configuration

Users must enable **UDP ports 51017 and 51018** (default ports) in the firewall to ensure the correct operation of the connection between **Veronte Ops** and **Veronte Link**.

 Note

This configuration might need to be performed by the cybersecurity manager of your company.

Additional apps

Veronte Terrain Provider



Veronte Terrain Provider

Veronte Terrain Provider is an additional application that provides SRTM terrain data to **Veronte Ops**.

Thanks to this, **Veronte Ops** allows the user to visualize terrain heights on the created route. This makes it possible to foresee possible collisions of the aircraft with the terrain along the route.

Download and Installation

Veronte Terrain Provider software is available in the **Veronte Toolbox** platform. From there, users can download and install the application. For more information, please refer to the [Veronte Toolbox](#) user manual.


A personal account is required to access **Veronte Toolbox**; create a [Ticket](#) in the user's **Joint Collaboration Framework** and the support team will create it for you.

Configuration

It is possible to import external hgt files, which contain terrain information, and use them for mission preparations. These files follow the SRTM ([Shuttle Radar Topography Mission](#)) standard, with 3 arc-seconds (approximately 90 meters) of resolution. To import one of them, simply copy it into the directory:

```
C:\Users\user\AppData\Roaming\VeronteTerrainProvider\terrainprovider
```

Each hgt contains terrain information about one area of the world. The following image shows how these areas are distributed, so each cell corresponds to one hgt:

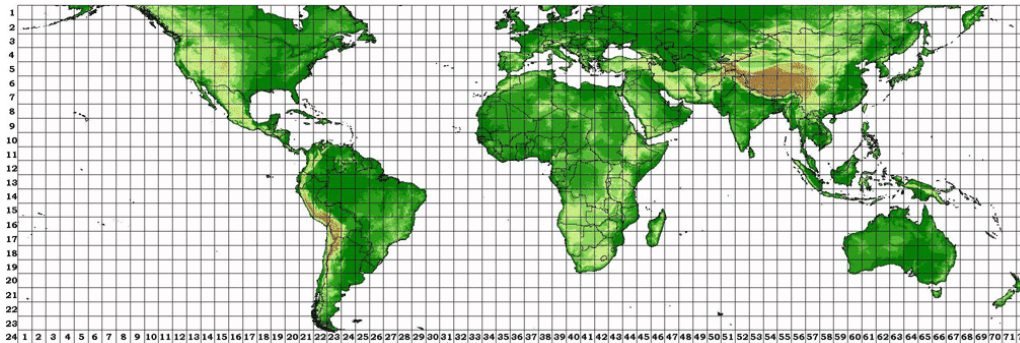

Terrain information distribution

Operation

Once installed, users just need to run it. When it runs, it will always remain open in the background, which users can check in the PC's Windows taskbar.



Veronte Terrain Provider in task bar

It is **only necessary to run it the first time it is used**, then it should **always remain open** so that when the computer is switched on, it starts up as well.

Note

If users close it, i.e. remove it from the taskbar, just run it again to start it.

Web Converter



Web Converter

Web Converter is a tool able to receive video in RTSP and serve it in webRTC and/or receive udp messages and send them via websocket.

Veronte Ops needs this application to **visualize video** and to work with **udp content** after it has been converted to websocket.

Therefore, it must be used when working with **gimbals** to visualize their video and click on them to send the **tracking command** to an object.

Download

Once a **Veronte Autopilot** has been purchased, a GitHub release should be created for the customer with the application.

To access to the release and download the software, read the [Releases](#) section of the **Joint Collaboration Framework** user manual.

Installation

To install **Web Converter** on Windows just execute "WebConverter.msi" and follow the indications of the setup wizard.

Configuration

Once the **Web Converter** software is downloaded and installed, configure it.

The configuration of this application is simply a `config.json` file with parameters for video display and command that need to be modified:

```
{
  "server": {
    "http_port": ":8083",
    "ice_servers": ["stun:stun.l.google.com:19302"]
  },
  "streams": {
    "veronte_Gimbal_Camera": {
      "on_demand": false,
      "url": "rtsp://192.168.8.94/net0"
    }
  },
  "udp_config": {
    "ip": "192.168.8.94",
    "port": 14003,
    "websocket_url": "localhost",
    "websocket_port": "1997"
  }
}
```

- **server** Users can modified the localhost port (http_port).
The generated URL will look like this: `http://localhost"http_port"`
- **streams** Parameters to modify to **view the video recording** of the desired camera in **Veronte Ops**
 - **"camera name"**: Is to identify the gimbal camera. By default veronte_Gimbal_Camera is set.
As the user can enter as many cameras to display the video as desired, each gimbal camera is configured here:
 - **url**: URL of the gimbal video. This is just an example, the URL (rtsp) depends on the user's gimbal.
- **udp_config** To **command** from **Veronte Ops** to the gimbal. Set the following parameters:
 - **ip: IP address** configured as the udp connection of the camera.
 - **port: Port** configured as the udp connection of the camera.
 - **websocket_url**: Websocket URL to which users want to send the converted udp messages.

- **websocket_port**: Websocket port to which users want to send the converted udp messages.

Note

Even if users only want to view the video recording in **Veronte Ops**, they can leave the default configuration parameters of **upd_config**, as they do not affect the video configuration.

However, they can also remove these lines from the configuration if they wish.


Operation

Once the **Web Converter** application has been configured according to the user's needs, follow the steps below to work with:

1. Just run the application and **always keep it open**.
2. Copy the link generated by the tool into the corresponding **Veronte Ops** configuration:
 - For **video recording**, copy the URL generated into the [Iframe widget](#).
For example, with the default **http_port**, the URL generated will be:
`http://localhost:8083`.
 - For **command**, the user must copy the **websocket_url** and **websocket_port** previously configured into the **URL** and **Port** fields, respectively, of the **WebSocket** connection configuration of the [Gimbal panel](#).

Panels

Panels on **Veronte Ops** are distributed as shown in the following figure:

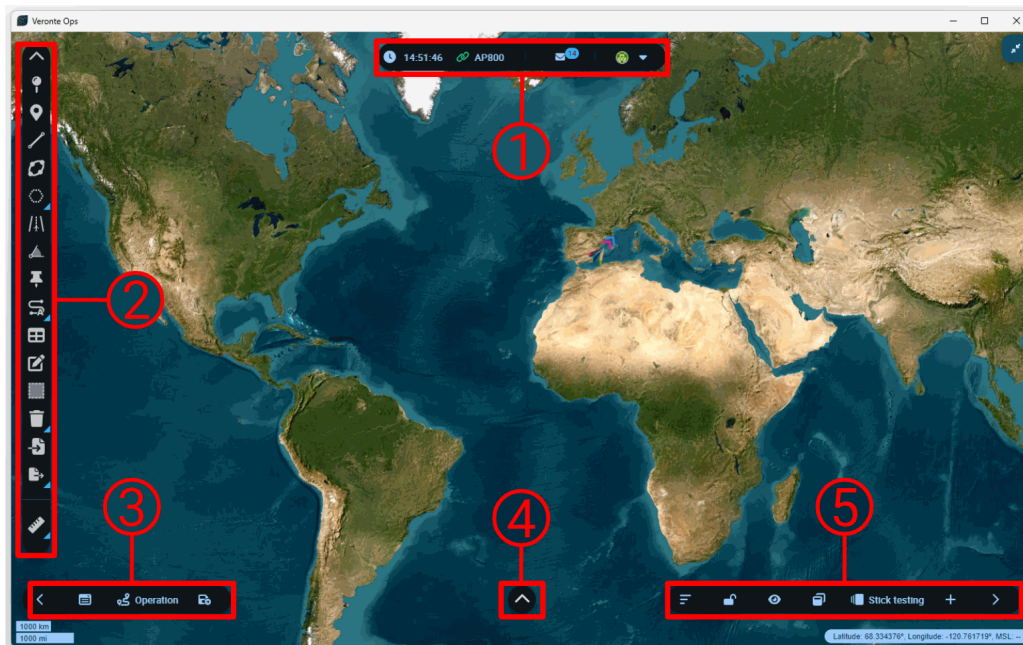

Veronte Ops panels

1. [Veronte Ops configuration](#): Edit **Veronte Ops** settings.
2. [Mission](#): Create and edit **missions**.
3. [Operation](#): Edit **operations** defined in **1x PDI Builder** and perform **calibrations**.
4. [Platform](#): Veronte Autopilot information.
5. [Workspace](#): Customize everything related to the **Veronte Ops** workspace, such as telemetry (widgets), map and workspace settings.

These panels are described in detail in the following sections.

In case of having any question about this **Joint Collaboration Framework**, please read its [user manual](#).

1. Veronte Ops configuration

This section describes all the menus, options and actions that allow the user to **modify the configuration and appearance** of this application. These are:

- [Status bar](#)

- [Feedback menu](#)
- [Platform icon](#)

Status bar

In the status bar, the user can view mission and operation relevant information, as well as modify general **Veronte Ops** settings.



Status bar

 
This bar is divided into 3 'parts':

- Status bar items: **Clock** and **Platform selected** information items are grouped here.

The user can choose to show/hide each of these elements from the [Status bar settings](#). By default, they are displayed as shown in the image above.


The figures below show all **Autopilot 1x** states:

- **Not connected:**




Platform selected - Autopilot not connected

 - **Not selected:**




Platform selected - Autopilot not selected

 - **Connected:**




Platform selected - Autopilot connected

 ◦ **Maintenance mode:**



Platform selected - Autopilot in maintenance mode

 ◦ **Disconnected:**




Platform selected - Autopilot disconnected

- **Notifications:** **Veronte Ops** notifications for users. This is always displayed in the status bar.
- **More options:** By clicking on this drop-down menu, users will find options for configuring this application and its appearance.


Notification

Veronte Ops will notify the user of any changes made with notifications (visual and audible, the latter is optional), as shown in the figure below:

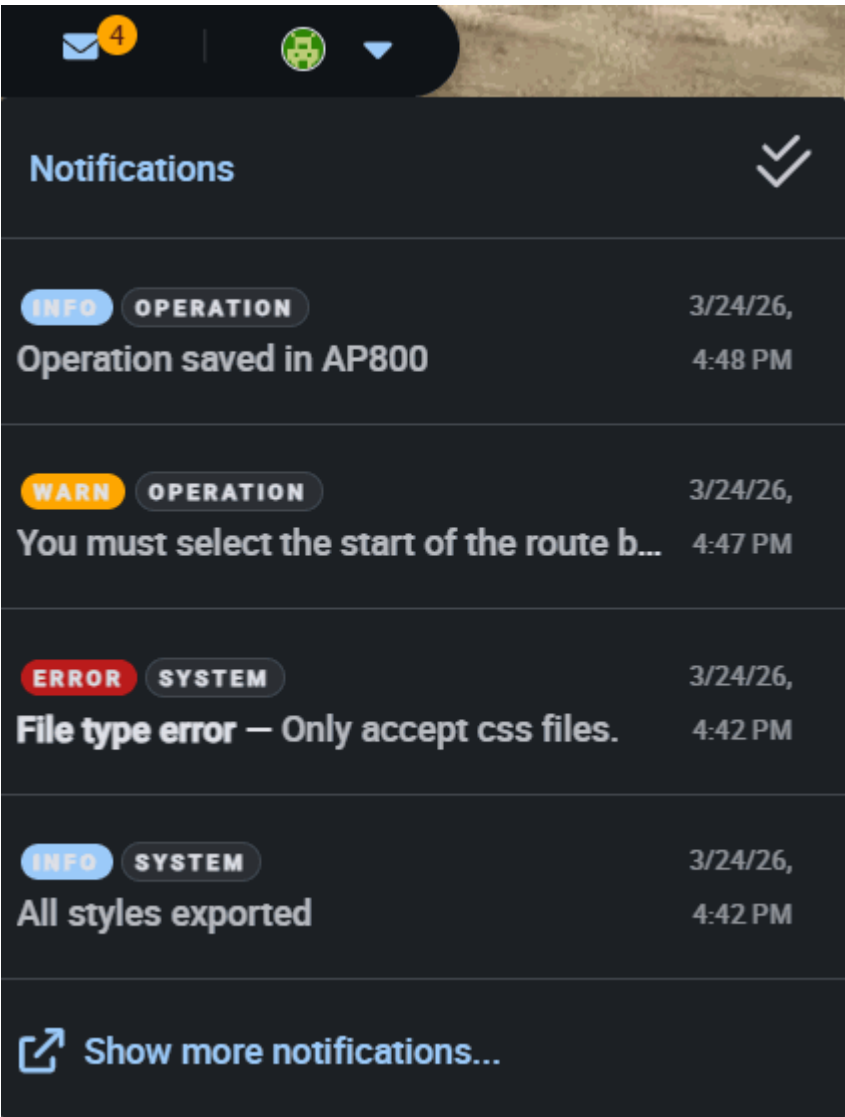


Notifications menu

In addition, notifications are classified into 3 groups (**Information**, **Warning** and **Error**) with a color code (**blue**, **orange** and **red** respectively):

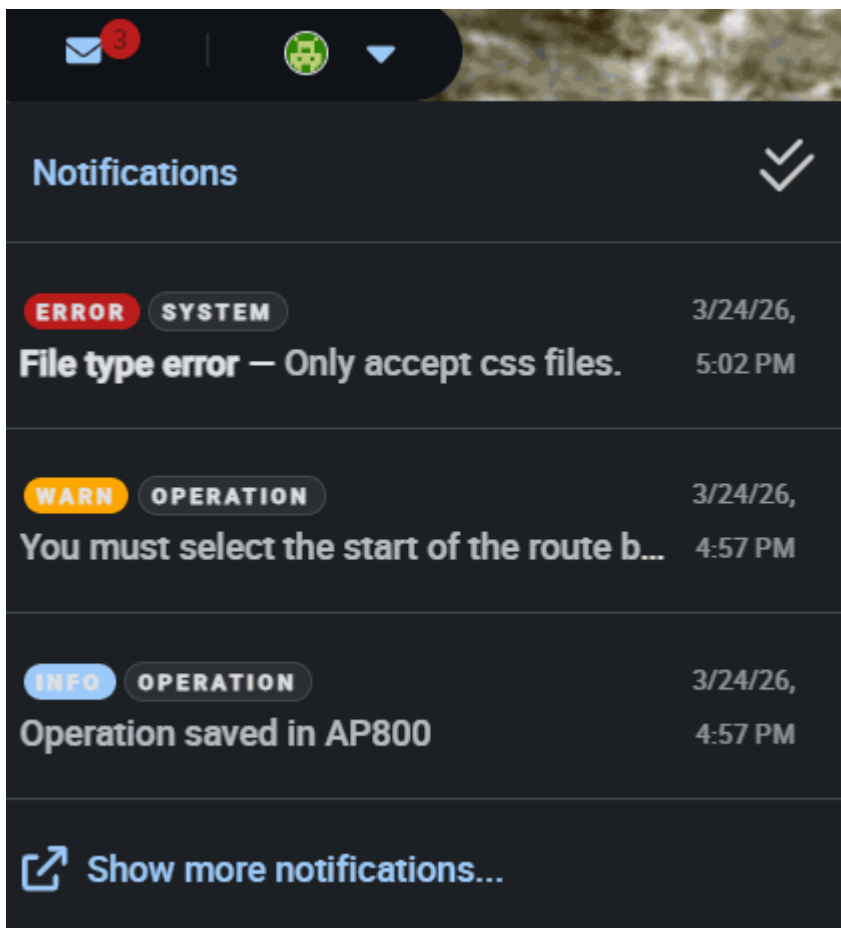

Notifications menu - Classification

These notifications can be **marked as read** by clicking on the  icon at the top of this menu. So, they will no longer be displayed in this menu.

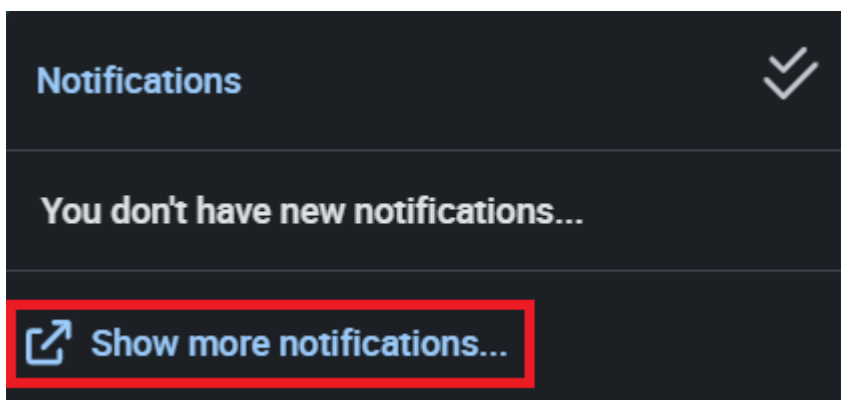

Notifications readed

However, if the user wishes to consult them, simply click on '**Show more notification...**' and a new window will appear with the entire history of notifications. Here the user can search for notifications or delete them:

Level	Message	Origin	Time	
INFO	Operation saved in AP800	OPERATION	3/24/26, 4:34 PM	
WARN	You must select the start of the route before uploading operation	OPERATION	3/24/26, 4:28 PM	
INFO	Nothing to save in AP800	OPERATION	3/24/26, 4:26 PM	
INFO	Yaw Command sent	PLATFORM: AP800	3/24/26, 4:26 PM	
INFO	Operation saved in AP800	OPERATION	3/24/26, 4:26 PM	

Items per page: 5 1 - 5 of 26 |< < > >|

Close


History of notifications

Besides, in the notification configuration users can choose, to some degree, which groups of notifications are shown or not. This is to a certain degree because, as the classification described above has been defined according to importance, **error notifications will always be shown** (as they are the most important ones) but warning and information notifications can be chosen to be seen/heard or not.

More options

Moreover, by clicking on the drop-down menu on the right, users will find more options, such as:

- [Changelog](#)
- [Light/Dark mode](#)
- [Status bar settings](#)
- [Setup](#)
- [Terms and Conditions](#)
- [Log in](#)

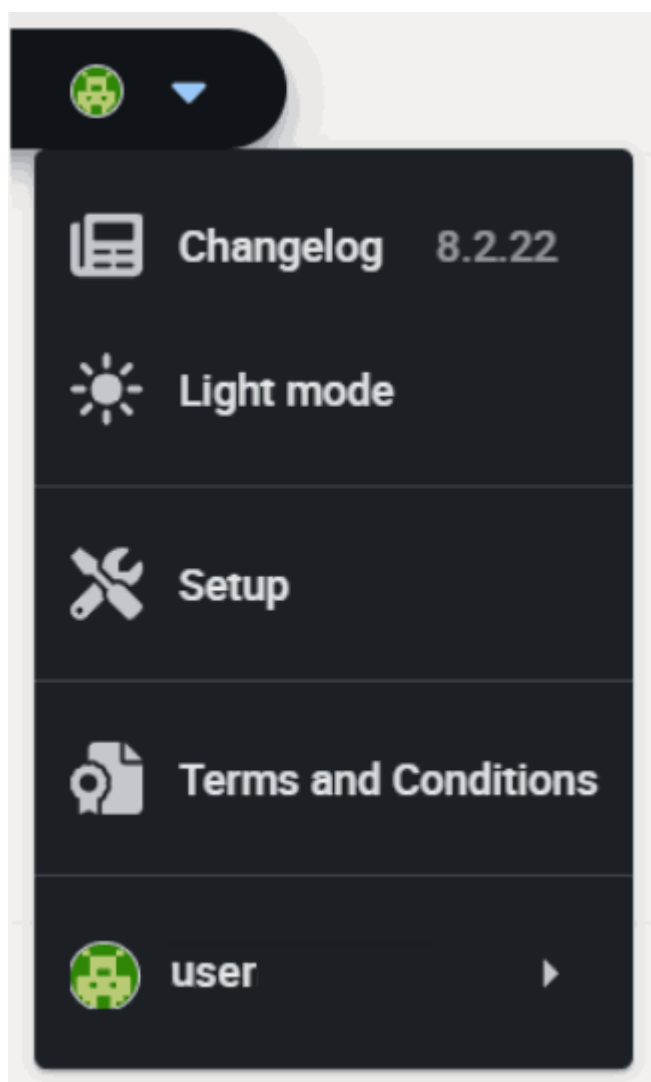

Drop-down menu

Changelog

Users can consult the changelog, which shows all updates made to the application.

Changelog

v8.2.22 (2026/04/10)

Added:

- Direct RTSP video stream playback support within the video widget.
- Veronte LM PAT as an available camera and gimbal option.
- Capability to select a specific camera or gimbal directly from the video widget to execute track commands.
- The checklist widget has been integrated into the veronte panel widget itself.
- Network interface selector within the Setup Cucs panel to allow configuration of the adapter used for multicast traffic.
- Option to toggle the visibility of the UAV icon on the map within the settings menu.
- A chip has been added to indicate the licence status if necessary.

Fixed:

- Widget Slider max, min and step settings.
- Widget Dial color selector position.
- Checklist in the Veronte Panel widget.
- Platform selection in widgets.
- Refresh drx license.
- Show guidance in map.
- Reload Redundancy platform config.
- Restored the correct application of user preferences regarding platform icons

[Open in tab](#)[Close](#)

Changelog

Light/Dark mode

Change the interface display mode: Light/Dark mode.

Light/Dark mode

Status bar settings


This menu allows the user to **enable/disable** the information items in the status bar.

Note

To save any changes, click the "Save" button in the bottom right corner of the menu.

Setup

This menu allows to edit the general settings of **Veronte Ops**:

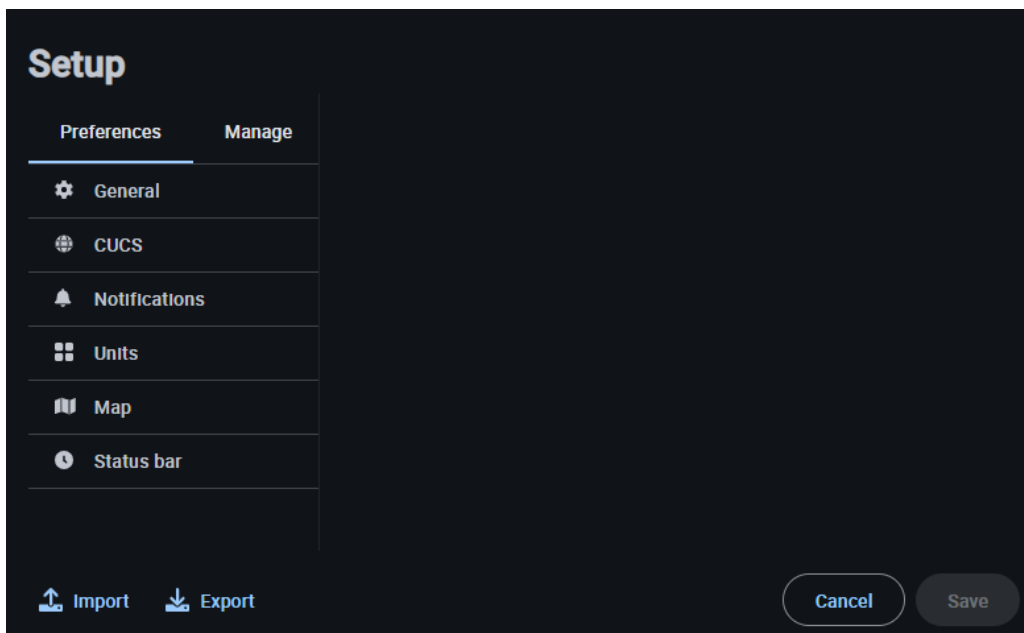

Status bar - Setup


Note

Clicking the '**Close**' button, in the bottom right corner of the menu, will **close** this window **and save** any changes made.

Preferences

- **General:**


This section allows users to enable or disable application animations to optimize visual fluidity.

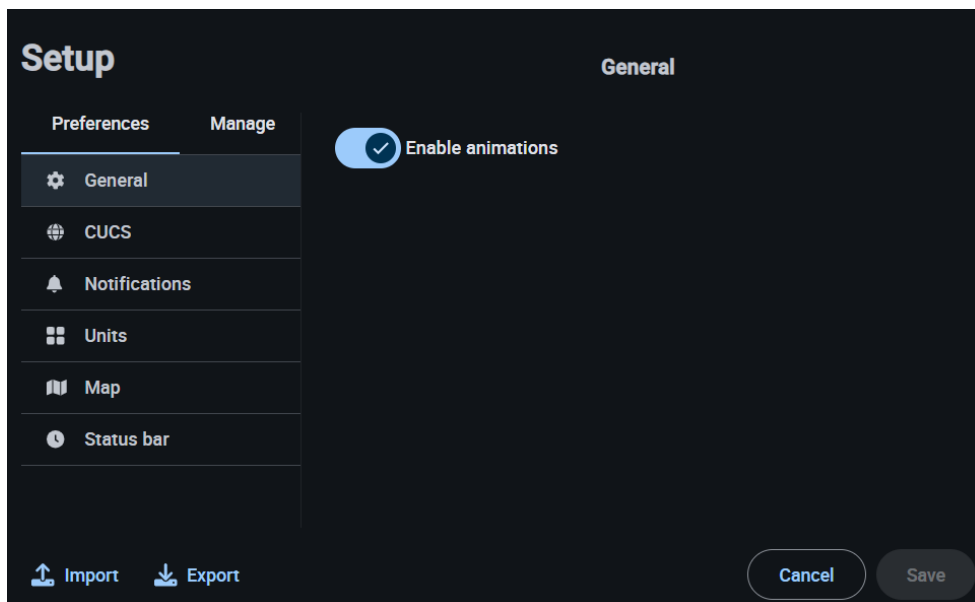

Status bar - General

- **CUCS:**

The CUCS allows the integration of the STANAG 4586 protocol, that enables different control stations to interact with the same UAV.

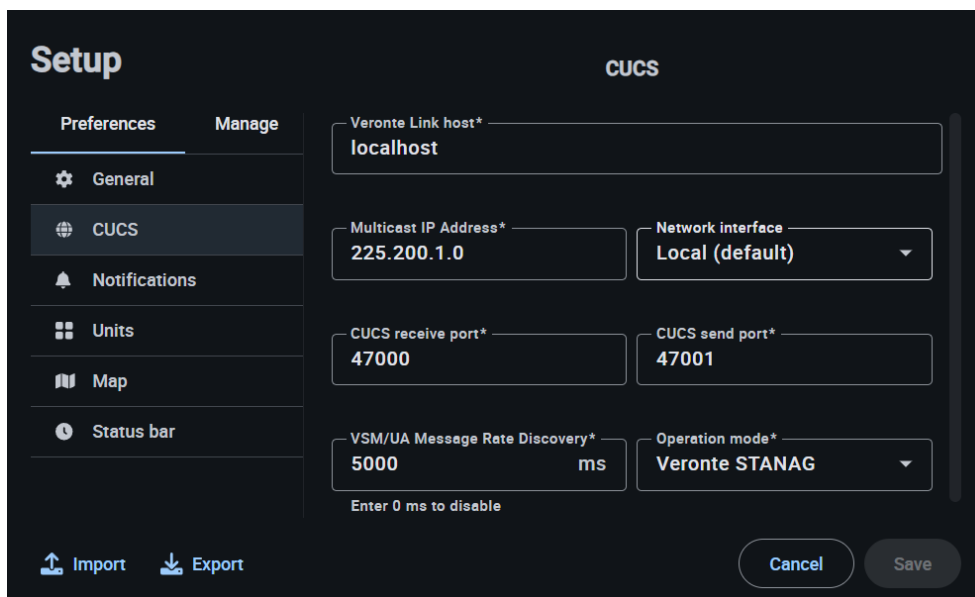

Status bar - CUCS

- **Veronte Link Host:**

As Veronte Link is the Embention application that stores, reads and manages all the configurables of the products, the user can choose which Veronte Link to use to access the data, to access certain products.


By default, the IP address 'localhost' is set, which is the Veronte Link on the same PC as **Veronte Ops**.

However, it is also possible to connect **Veronte Ops** to a Veronte Link running on a different computer, simply by entering the IP address of that computer, so **Veronte Ops** will be able to access the devices connected to it.

- **Multicast IP Address:** Specifies the IP address used for multicast data distribution within the network.
- **Network Interface:** Allows the selection of the physical or virtual interface (Ethernet, Wi-Fi, or Loopback).
Selecting **Local (Default)** as Network Interface standardizes internal communication between VeronteLink and VeronteOps under a unified name, replacing the legacy loopback. This configuration is active by default to enable automatic interconnection between applications on the same computer without manual adjustments.
- **CUCS Receive/Send Port:** UDP ports dedicated respectively to the reception and sending of data.
- **VSM/UA Message Rate Discovery:** Frequency with which the system scans the network in search of new VSM modules.
- **Operation Mode:** Determines the communication standard, allowing a choice between the Veronte STANAG protocol or compliance with the international STANAG 4586 standard.


- **Notification**

The Notifications section allows for the management and filtering of system feedback through the following parameters:

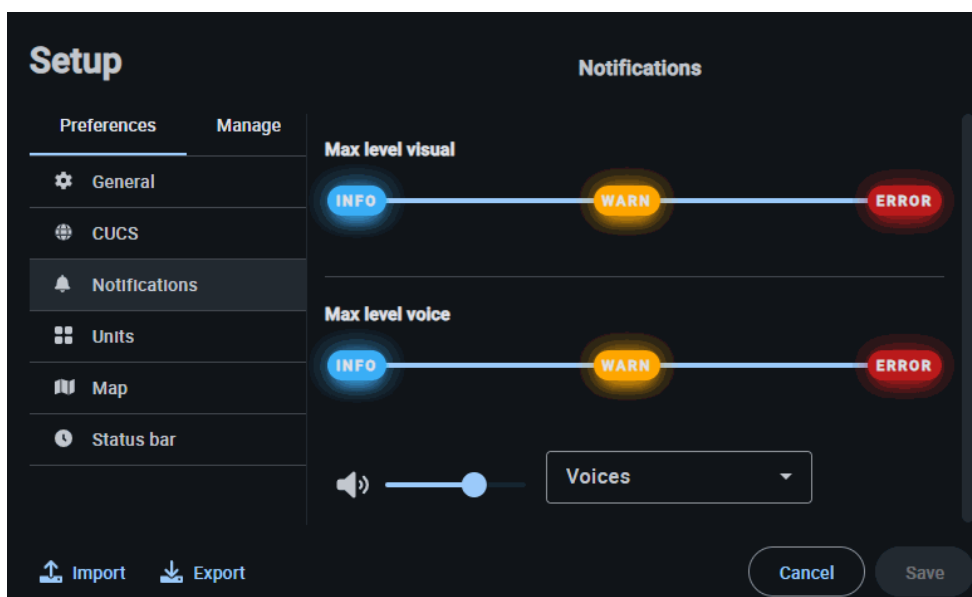


Notifications menu - Configuration

- **Max level visual:** Sets the threshold for on-screen message display. The user can select the maximum level of importance (INFO, WARN, or ERROR) to be shown visually.
- **Max level voice:** Defines the criticality level above which alerts are played via voice. This allows the operator to receive audible warnings only for the most relevant events.

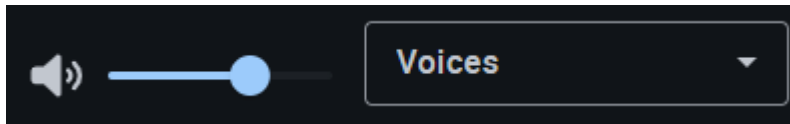

Sound notifications language


- **Volume and Voices:** Includes a slider to adjust the audio volume and a dropdown menu to select the preferred voice pack for system alerts. Below is an example of how to customize the notification settings:

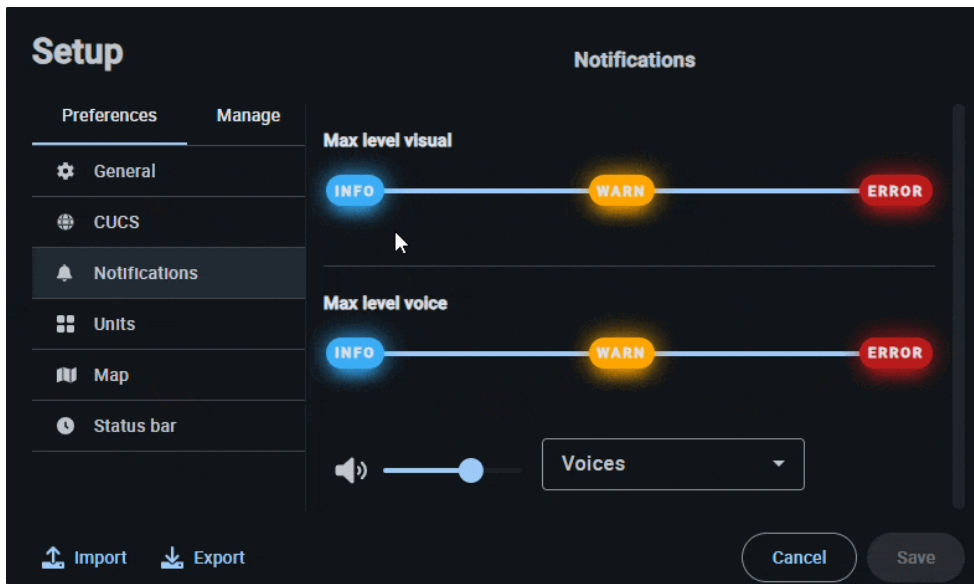

Modified notifications

- **Units**

This panel shows all the system units available for the system variables. They are sorted by variable type in alphabetical order: acceleration, temperature, velocity, etc.

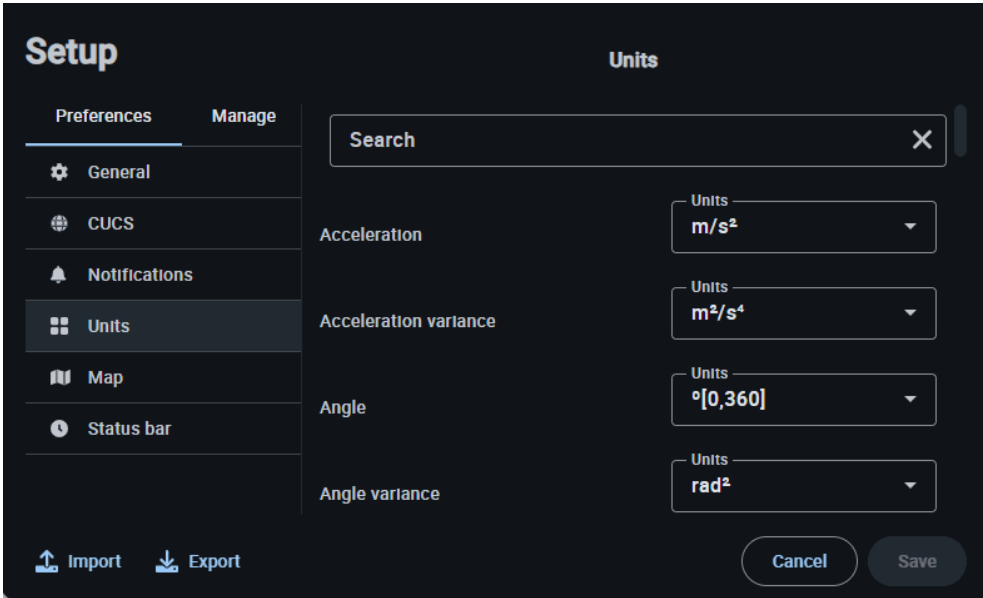

Units settings panel

The following table shows all the units available in **Veronte Ops**:

Variable Type	Units
Acceleration	[m/s²] [ft/s²] [in/s²] [g]
Acceleration variance	[m²/s⁴]
Angle	[rad] rad[-π;π] rad[0;2π] [°] °[-180;180] °[0;360] [° ' "] °'''(N/S) °'''(E/W)
Angle Variance	[rad²]
Angular Acceleration	[rad/s²] [rad/m²] [rad/h²] [°/s²] [°/m²] [°/h²]
Angular Velocity	[rad/s] [°/s] [rad/m] [rad/h] [rps] [rpm] [rph] [°/s]
Angular Velocity Variance	[rad²/s²]
Area	[m²] [cm²] [mm²] [km²] [mile²] [ft²] [yd²]
Baudrate	[Bd] [kBd] [MBd]

Variable Type	Units
Centimeters/Pixels	[cm/pixel]
Current	[A] [mA]
Data	[bit] [byte] [KB] [GB] [bytes/s]
Decibel	[db]
Density	[kg/m³]
Flow Rate	[m³/s] [gal/s] [gal/h] [l/s] [l/h]
Force	[N] [kN] [lbf] [pdl]
Frequency	[Hz] [MHz] [kHz]
Jerk	[m/s³]
Length	[m] [km] [mm] [cm] [mi] [NM] [yd] [ft] [in]
Magfield Variance	[T²]
Magnetic Flux Density	[T] [nT] [gauss] [mG]
Mass	[kg] [g] [tonnes] [lbs] [oz]
Numeral System	[bin] [octal] [dec] [hex]
Percentage	[x1] [%]
Power	[W] [kW] [Kgm/s] [erg/s] [CV]
Pressure	[Pa] [kPa] [bar] [mbar] [psi] [mmHg] [inHg] [ft] [at] [atm]
	[Pa²/s]


Variable Type	Units
Pressure Square Error Rate	
Pressure Variance	[Pa ²]
Resistance	[Ω]
Temperature	[K] [°C] [°F]
Time	[s] [Time] [min] [h] [μs] [ms]
Transfer	[pkts/s]
Velocity	[m/s] [kt] [km/h] [mph] [ft/s] [ft/m] [mm/s]
Velocity Variance	[(m/s) ²] [(cm/s) ²] [(mm/s) ²]
Voltage	[V] [mV]
Volume	[m ³] [dm ³] [mm ³] [L] [mL]

• Map

In this menu, it is possible to edit the terrain data settings, such as:

- **Veronte Ops SRTM data provider:**


- **Host:** The default SRTM data provider configured is the [Veronte Terrain Provider](#) application (i.e., localhost), but users can enter another SRTM data provider that is located on the PC.

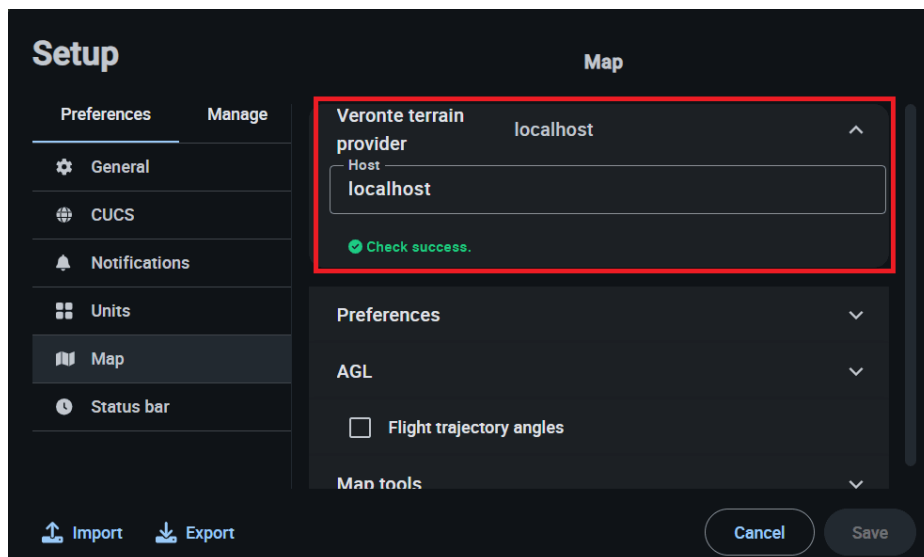

Map settings panel - Veronte Terrain Provider


- **Preferences**

Users can customize the coordinates and height units of the map.

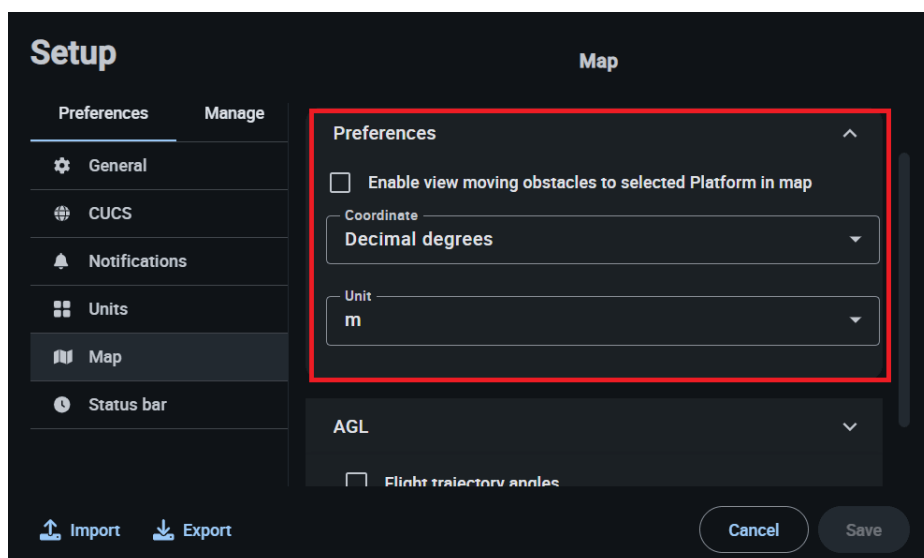


Map settings panel - Preferences

- **Enable view moving obstacles to selected Platform in map:**
When enabled, this function displays moving obstacles (such as other aircraft or tracked targets) on the map relative to the selected platform's position.
 - **Coordinate:** Select the units of the coordinates. The available options are **Decimal degree**, **Degrees**, **UTM** and **MGRS**.
 - **Unit:** It is possible to select the units of the height from the drop-down menu.
- **AGL**

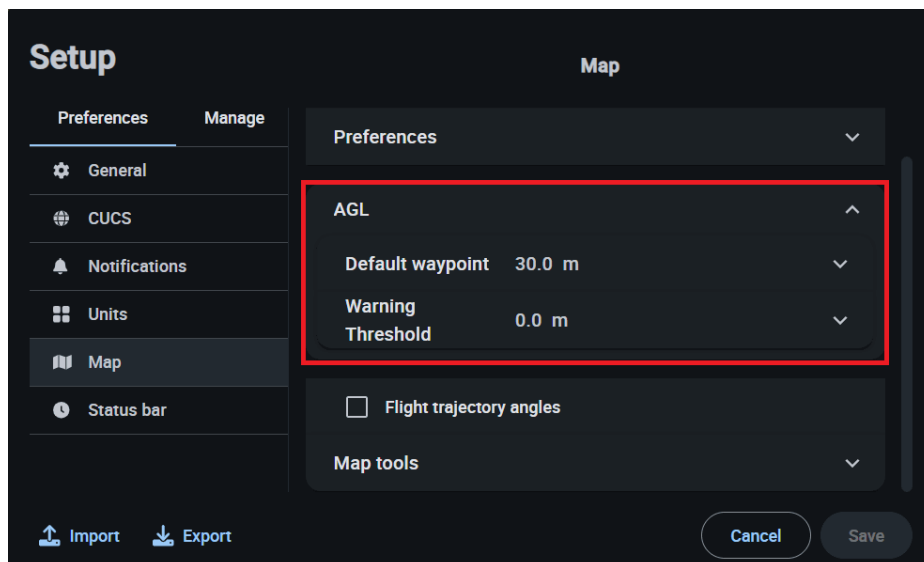

Map settings panel - AGL


- **Default waypoints:** Enter the default altitude, in AGL, of the waypoints created.
- **Warning Threshold:** It is possible to add a warning threshold to **avoid collision with terrain**. This will appear as a line when users open the '**elevations**' option in the created route. For example, if the warning threshold is set to 0 metres, a **red warning line** will be drawn in the 'elevations' menu **0 metres above each terrain point**. Also, if the **mission path intersects this line**, Veronte Ops will interpret this as the route **colliding with the terrain**:

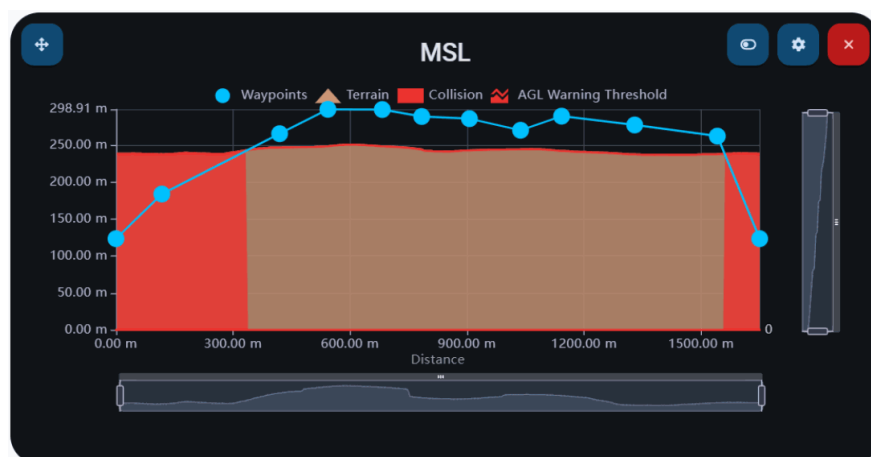

Map settings panel - Warning

- **Flight trajectory angles:** Defines the angle between the aircraft's velocity vector and the horizontal plane. A positive angle indicates a climb, while a negative angle indicates a descent.


Enabling this option allows the user to set the operational limits for these angles, which Veronte Ops uses to visually validate the mission trajectory against the aircraft's capabilities.

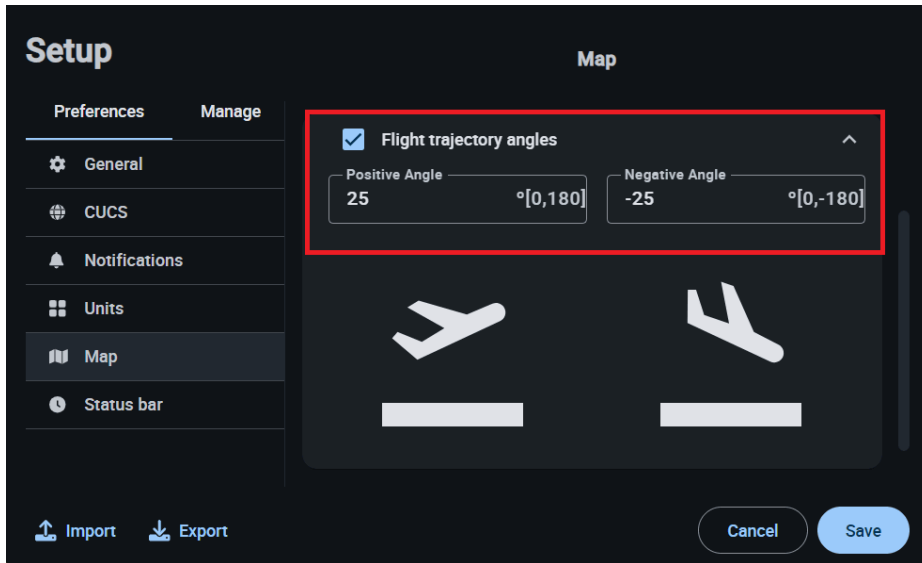

Map panel - Flight trajectory angles

- **Positive Angle:** Sets the maximum angle for climbing in degrees.
- **Negative Angle:** Sets the maximum angle for descending in degrees.


If the configured Positive/Negative Angles result in a climb or descent capability that is insufficient to meet the target altitude, a Warning will be triggered.

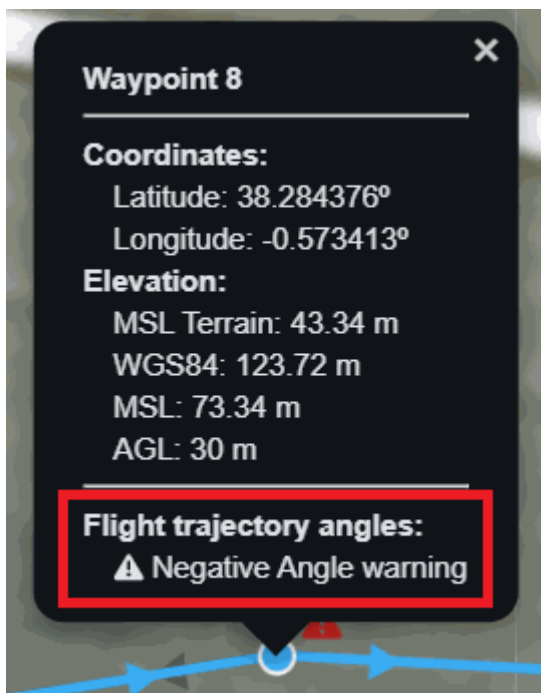

Map panel - Flight trajectory angles warning

- **Map tools**

Here, the user can choose, by enabling or disabling them, the group of functionalities to be displayed in the mission toolbar.

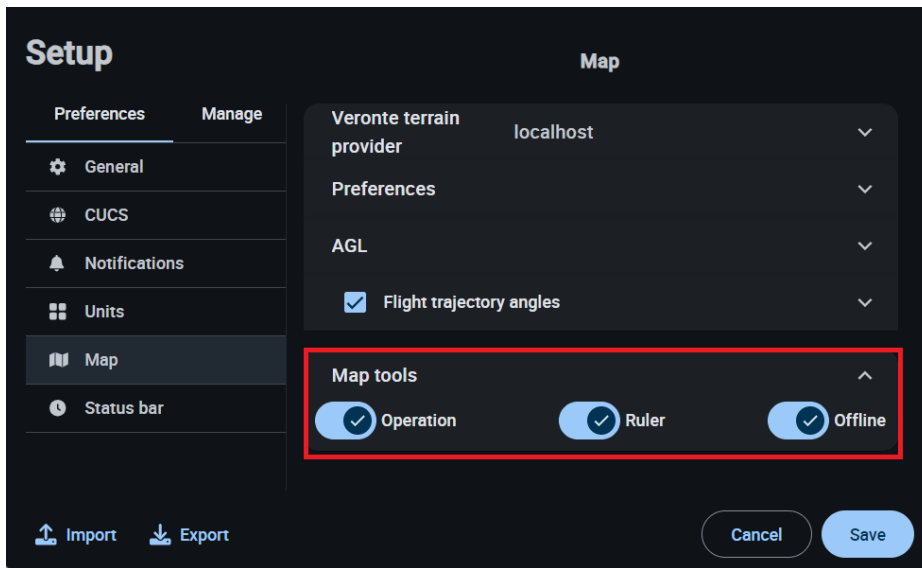

Map panel - Map tools

To save the changes made, click on the '**Save**' button.


Each group of functionalities has been described in the previous sections.

- [Operation](#)
- [Ruler](#)
- [Offline](#)

- **Status bar**

- **Show Clock**


It is possible to customize the timezone where users are working.

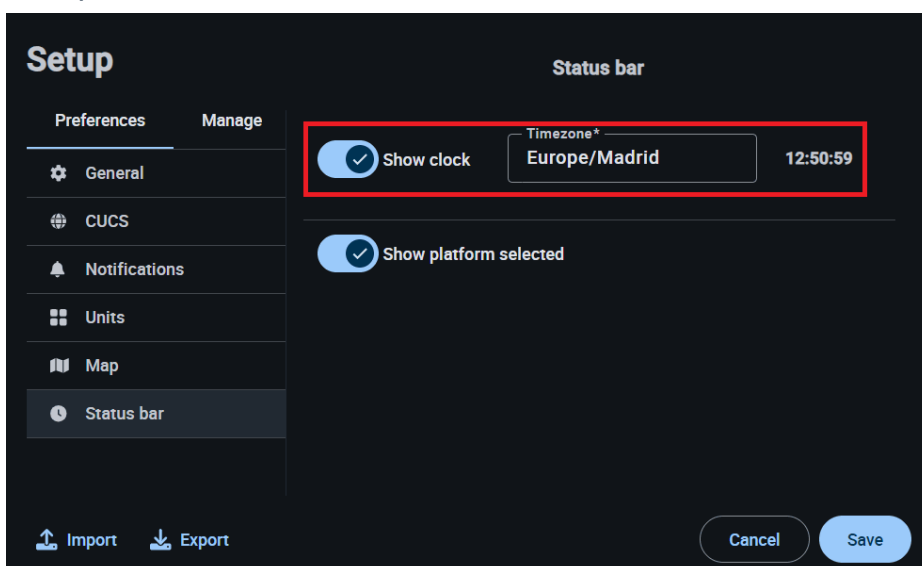

Clock panel

- **Show platform selected**

This element informs the user whether a **Veronte Autopilot 1x** is **not connected, not selected, connected, disconnected** or in **maintenance mode**, and the name of this device.

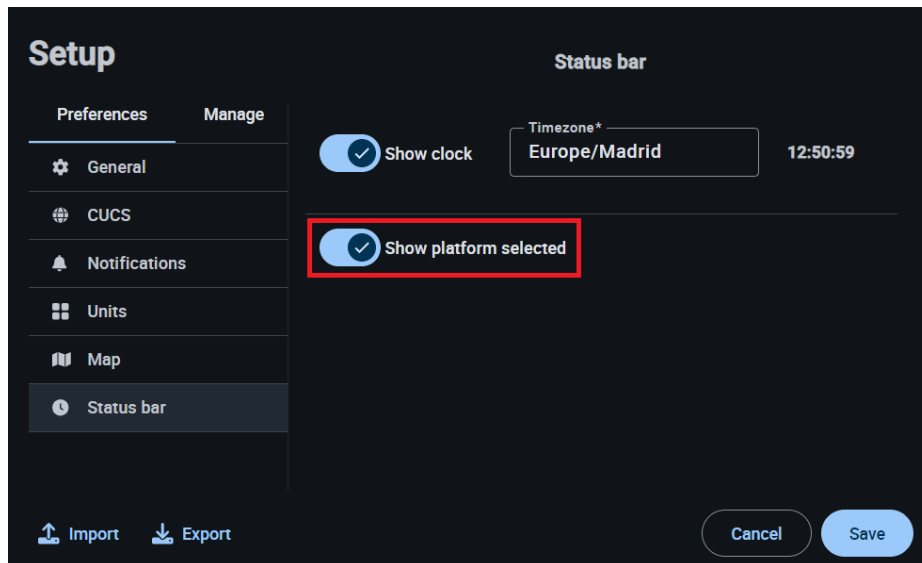

Platform selected panel

Manage


- **Sounds**

This section lists the available sounds that can be selected through the editing/configuration of the mission.

In addition, users can also add their own audio files from local storage. For this, click **Add** and select the desired audio file.

Supported formats


are .opus, .flac, .webm, .weba, .wav, .ogg, .m4a, .oga, .mid, .mp3, .aiff, .wma, .au.

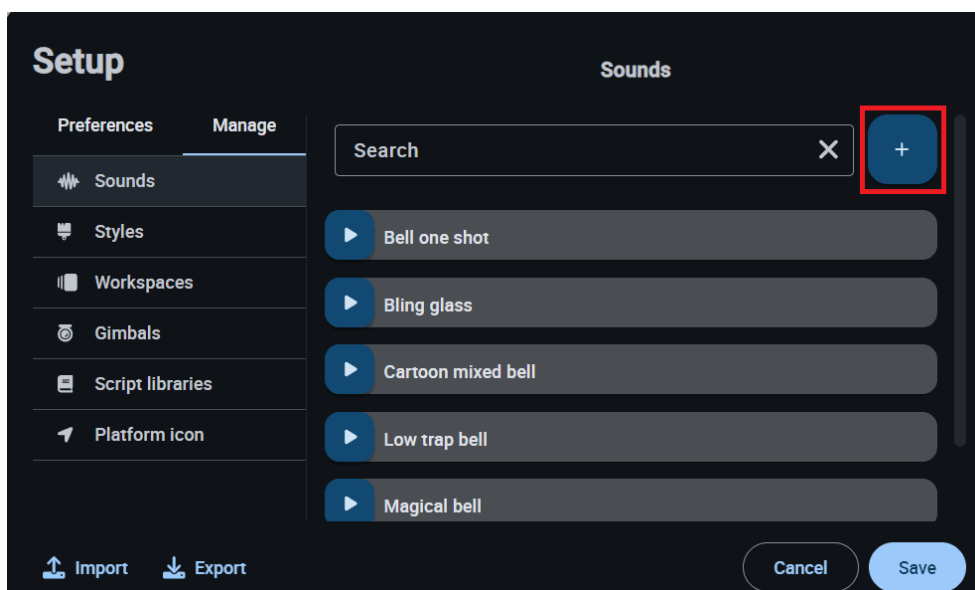

Sound panel

• Styles

This section allows the user to import and export **custom widget styles**.

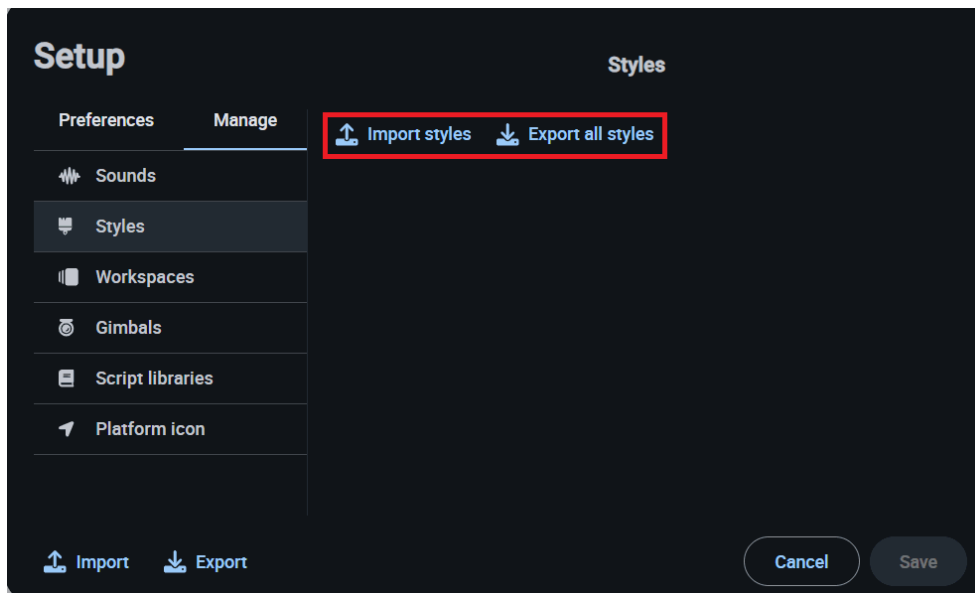

Style manager panel

- **Import styles:** By clicking here, users can import custom styles as a **zip folder** or by directly selecting all desired custom styles **.css** files. When the styles are imported, a notification will appear:



Style manager panel - Import notification

- **Export all styles:** By clicking here, all **custom** styles will be exported as a zip folder:




Style manager panel - Export

Note

Default widget styles will **not** be **exported**.

The zip folder will contain all the **.css** files with custom styles for the different widgets, a **metadata.json** file and a **README** file:

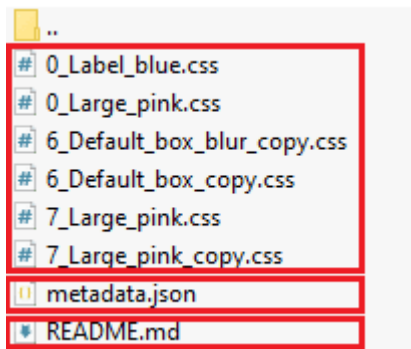

Style manager panel - Exported files

- **metadata.json** file: This file contains the IDs of the styles that are assigned to the workspaces.


Danger

It is advisable **not to modify** this file.

- **README** file: Pay special attention to this file to find out how to create or modify a style.

• Workspaces


From this panel users can **delete** one, several or all **workspaces** created. To do this, simply **select** the **workspaces** to be deleted and then click on the '**Delete**' button.

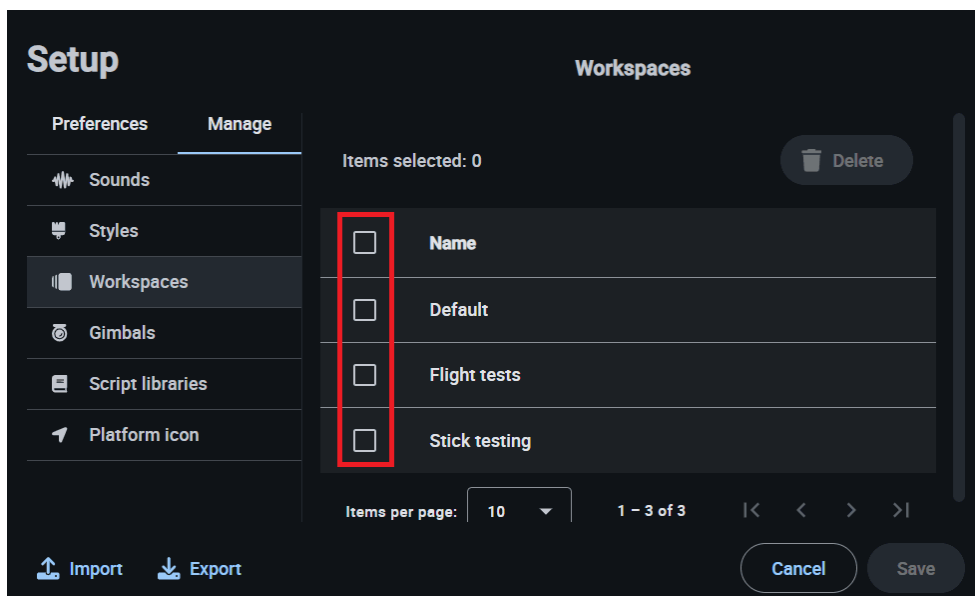

Workspace manager panel


• Gimbals

Users can add a predefined gimbal from this panel:

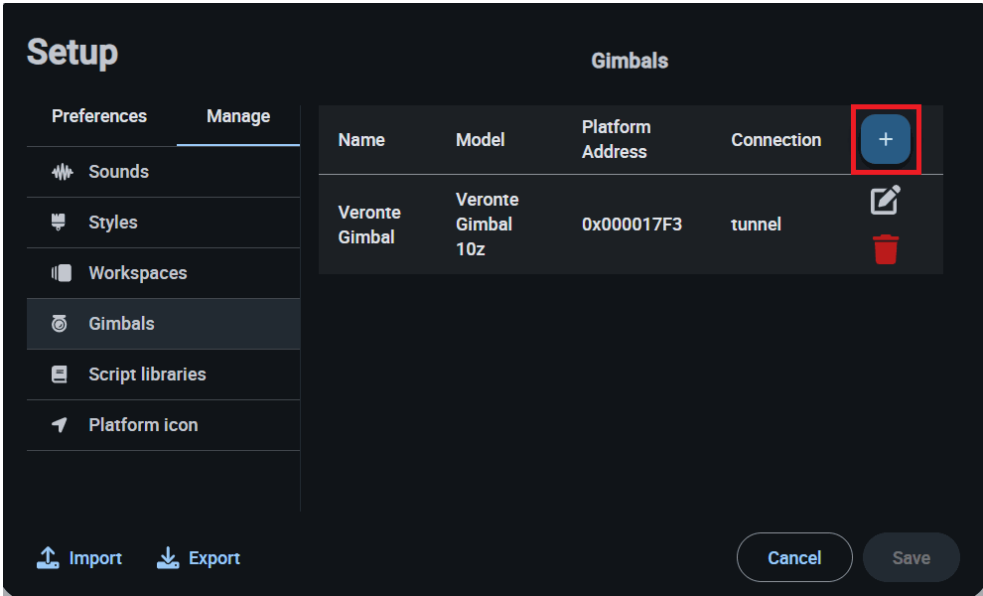

Gimbal panel

Clicking the  icon displays the following configuration panel to add a new gimbal:

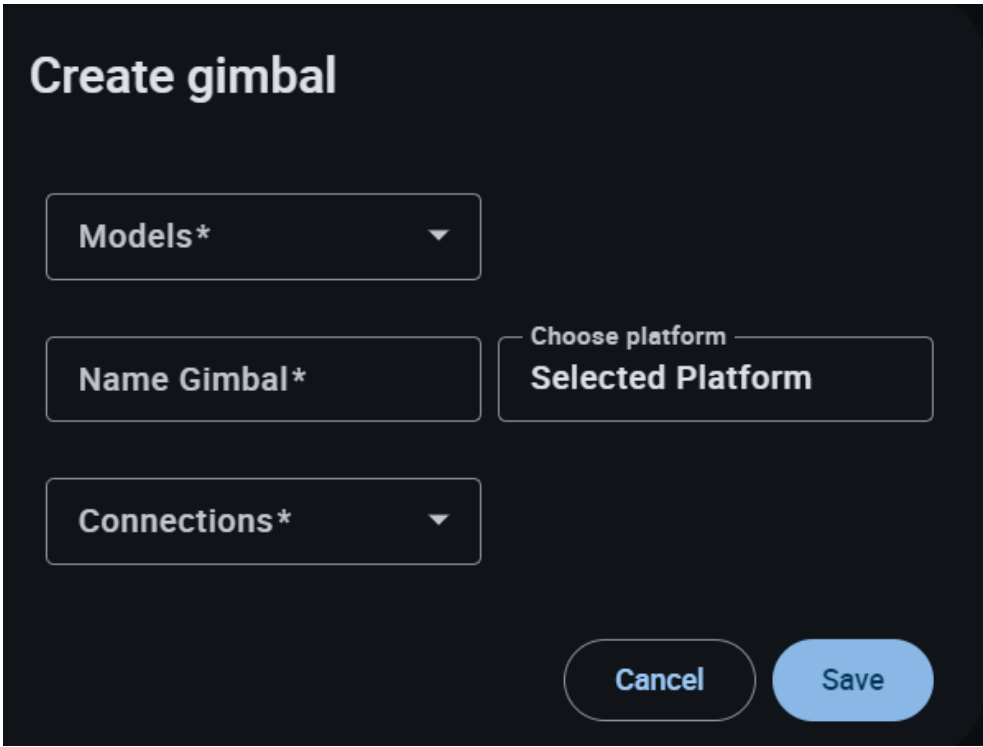

Gimbal panel - Create gimbal

- **Models:** Select a gimbal model from the list. The available options are **NextVision Trip2/Trip5**, **Veronte Gimbal 10z** and **Veronte Gimbal 30z**.
- **Name Gimbal:** Enter the desired name for the gimbal to be added.

- **Choose Platform:** Users must select the platform for which the gimbal is configured.
The available options will always be the IDs of the connected Autopilots 1x and '**Selected platform**', i.e. the platform that is selected.
- **Connections:** The type of connection through which **Veronte Ops** sends commands to the gimbal must be selected:
 - **Veronte Tunnel:** When choosing this connection type, **Veronte Autopilot 1x** tunnel is used to send commands to the gimbal. Users must also specify the **Veronte tunnel port** used: 1, 2 or 3.

 Warning

Be careful! This port must match the [Tunnel](#) port configured in the **1x PDI Builder** software.

- **UDP:** When choosing this connection type, a standard network protocol is used to communicate with the gimbal. Users must provide the following network details:
 - **Host IP:** Enter the IP address of the gimbal or the device acting as the communication interface.
 - **Port:** Specify the UDP port configured for the gimbal's control commands.
- **WebSocket:** In order to send commands via the [Web Converter application](#), it is required to enter the **websocket_url** configured in that tool in the **URL** field and copy the **websocket_port** configured as the camera's udp connection in the **port** field.
- **Advanced:** Depending on the gimbal model chosen, some additional options can be configured which are characteristic of each gimbal.


 Note

This option will only appear after the selection of the gimbal model.

- NextVision Trip2/Trip5 model: It is possible to enable/disable the sending of some specific messages.
- Veronte Gimbal 10z/30z models: The **Id** of the **gimbal block** that has been configured in the **Veronte Autopilot 1x** setup can be

entered. For more information on this, please refer to the [Gimbal - Devices blocks](#) of the **Block Programs** section in the **1x PDI Builder** user manual.

Then, the created gimbal will appear on the panel:

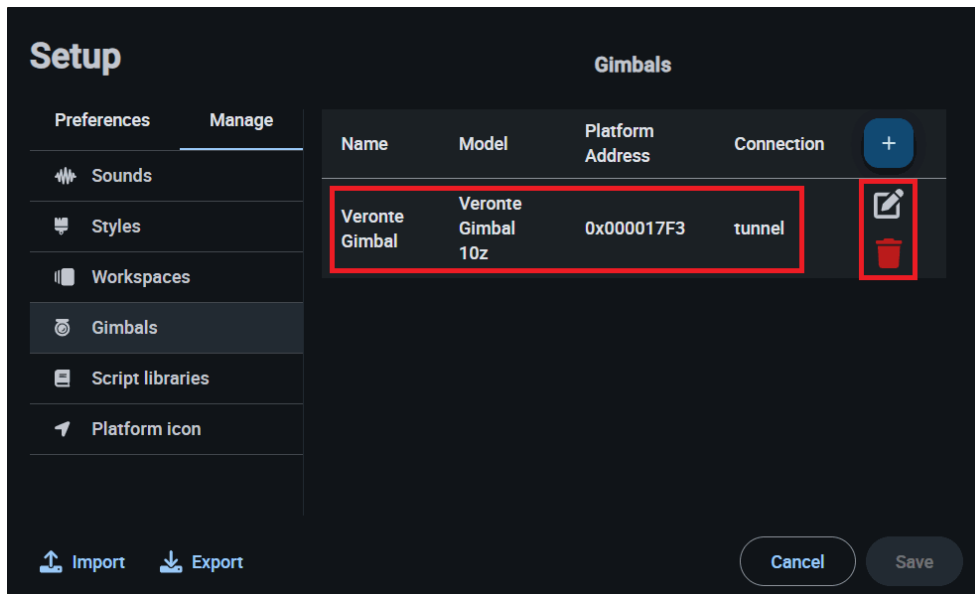


Gimbal panel - Gimbal added


-  **Edit gimbal:** Allows the user to access again to the configuration menu described above.
-  **Remove Gimbal:** Removes this gimbal.

• Script Libraries

The Script Libraries section allows to create and manage custom libraries in native JavaScript directly within Veronte Ops. It is used to define reusable custom functions or constants to automate processes or perform complex calculations not provided by default.

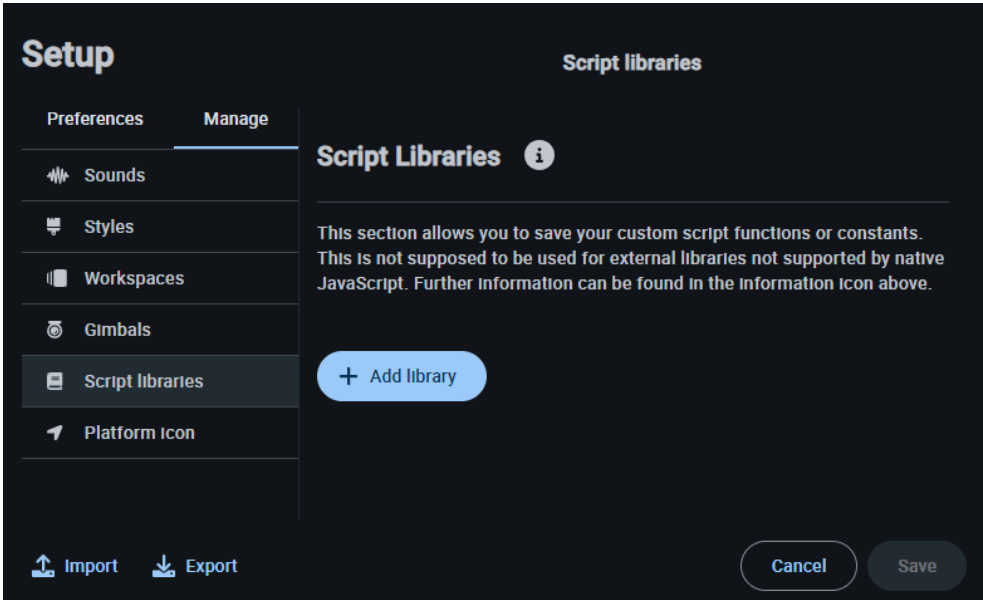

Script Libraries

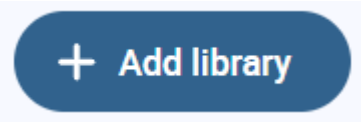Click on  to insert custom code.


 **Warning**

It does not support loading external libraries that are incompatible with native JavaScript.

Further technical details are available by clicking the  information icon.


• Platform icon

This icon allows the user to locate and follow the position of the platform at any time during the operation.

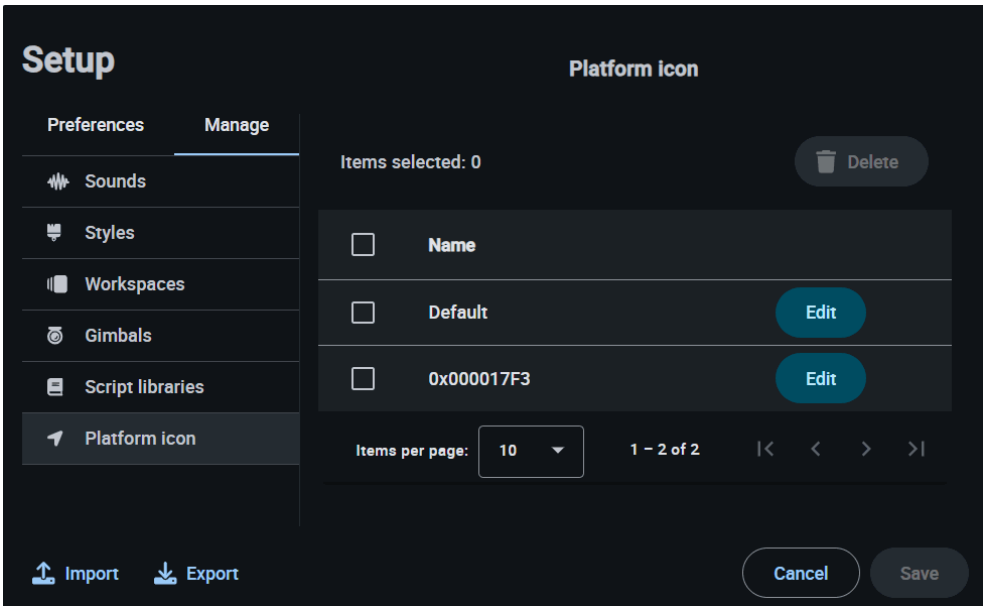


Platform icon

- **Follow:** Keeps the platform always centered on the map during operation.
- **Edit icon:** Users will access to the settings menu:

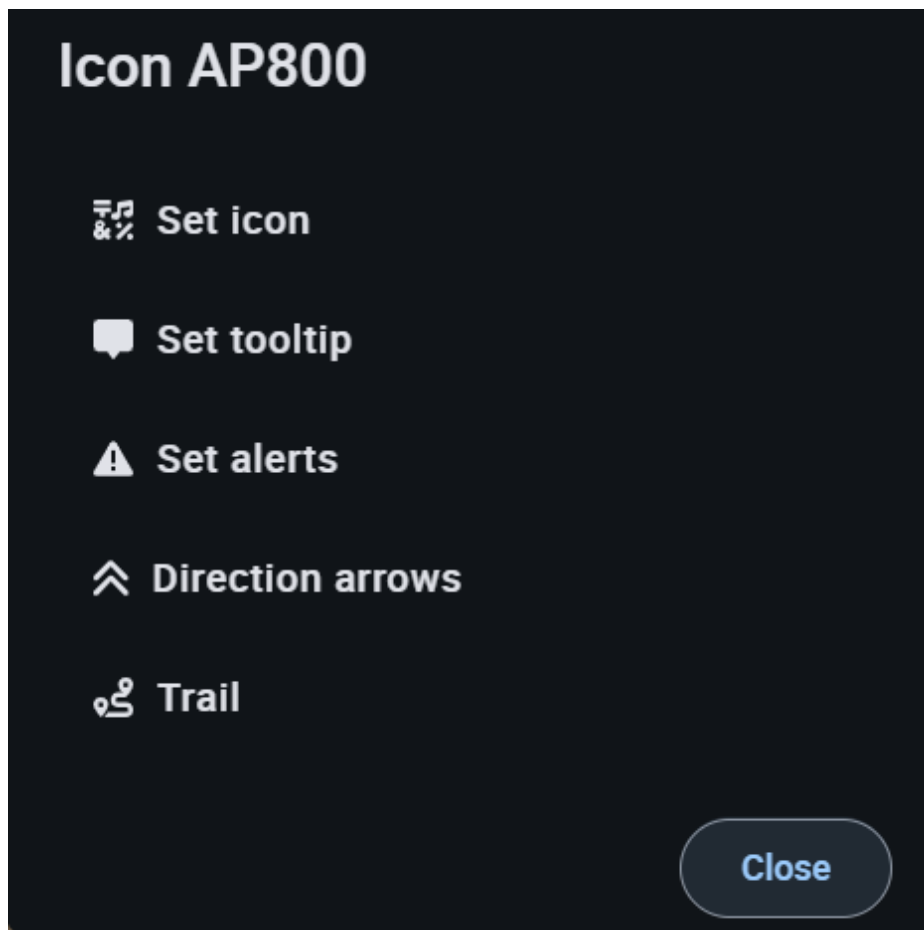


Platform icon settings

These settings can be accessed by right-clicking on the icon.

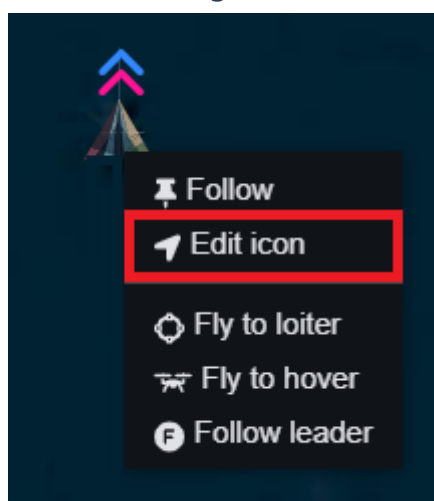


Platform icon options

- **Set icon:** Users can customize the icon that will be used to represent the position of this unit on the map. They can choose one of the default icons or upload one from the laptop, as well as set the icon size.

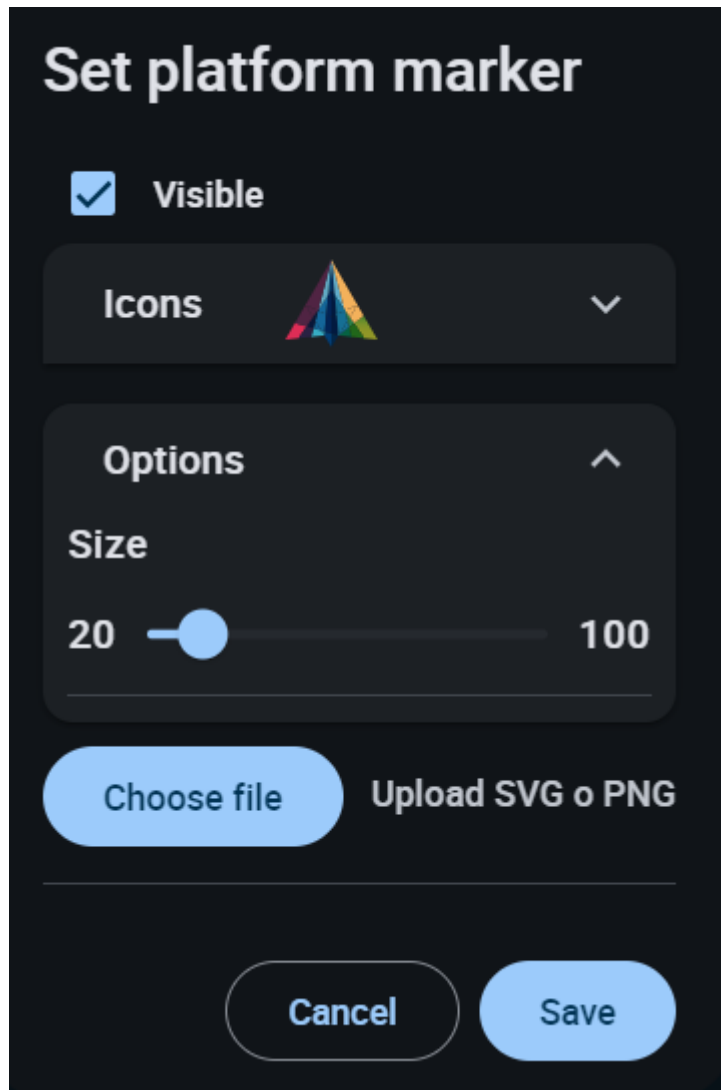The screenshot shows a dark-themed dialog box titled "Set platform marker". At the top, there is a checked checkbox labeled "Visible". Below this is a section labeled "Icons" with a dropdown menu showing a colorful triangle icon. Underneath is an "Options" section with a "Size" slider ranging from 20 to 100. At the bottom of the dialog are two buttons: "Choose file" and "Upload SVG o PNG". At the very bottom are "Cancel" and "Save" buttons.


Platform icon settings - Set icon

- **Set tooltip:** Allows the user to display a variable next to the platform icon.

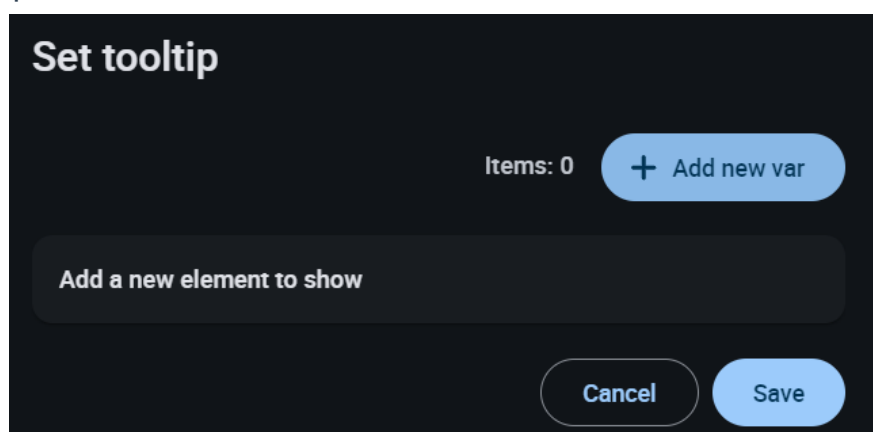The screenshot shows a dark-themed dialog box titled "Set tooltip". At the top right, it says "Items: 0" next to a button labeled "+ Add new var". Below this is a large text input field with the placeholder text "Add a new element to show". At the bottom are "Cancel" and "Save" buttons.

Platform icon settings - Set tooltip

The following parameters must be configured by clicking on '**Add new var**':

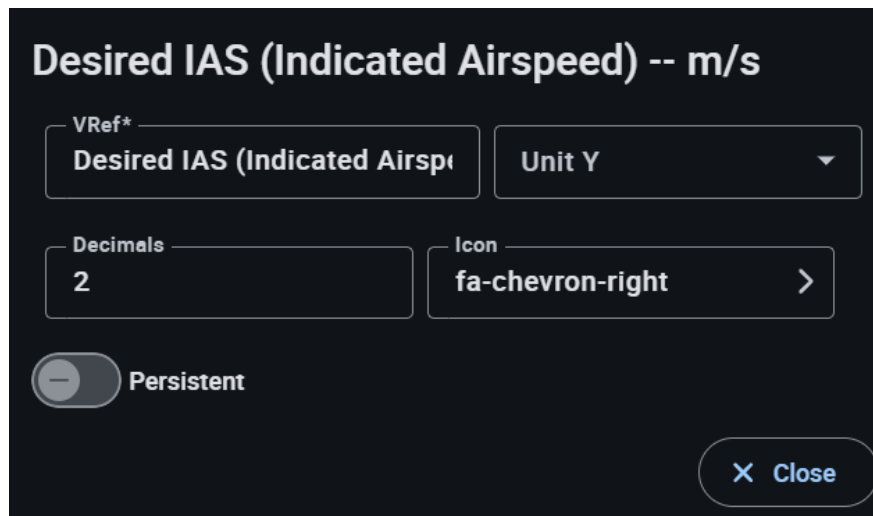


The screenshot shows a configuration dialog for a tooltip. The title is "Desired IAS (Indicated Airspeed) -- m/s". It contains four input fields: "VRef*" with the value "Desired IAS (Indicated Airsp...", "Unit Y" with a dropdown arrow, "Decimals" with the value "2", and "Icon" with the value "fa-chevron-right" and a right arrow. There is a "Persistent" toggle switch which is currently turned off. A "Close" button with a red 'X' icon is at the bottom right.

Platform icon settings - Set tooltip configuration</figcaption>

- **VRef**: Select the desired variable to be displayed.
- **Unit** and **Decimals**: The units and decimals can also be modified. These parameters will appear depending on the variable chosen.
- **Icon**: Choose the icon to be shown next to the variable.
- **Persistent**: When **enabled**, this tooltip will **remain displayed during the operation. Otherwise**, it will **only** appear **when clicking** on the icon.

An example is shown here:

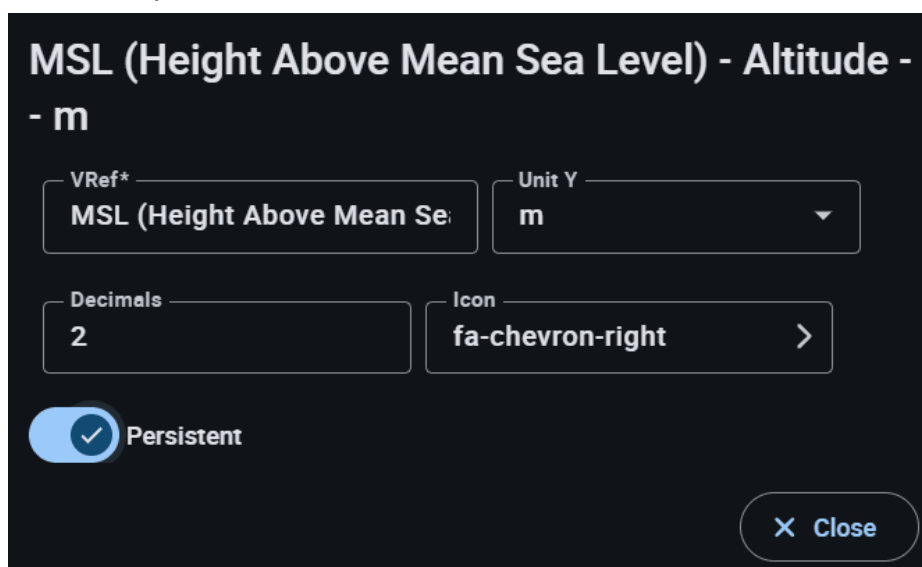

The screenshot shows a configuration dialog for a tooltip. The title is "MSL (Height Above Mean Sea Level) - Altitude - m". It contains four input fields: "VRef*" with the value "MSL (Height Above Mean Se...", "Unit Y" with the value "m" and a dropdown arrow, "Decimals" with the value "2", and "Icon" with the value "fa-chevron-right" and a right arrow. There is a "Persistent" toggle switch which is currently turned on (checked). A "Close" button with a red 'X' icon is at the bottom right.


Platform icon settings - Set tooltip example



Platform icon settings - Set tooltip example


- **Set alerts:** These alerts are **bit** variables that appear next to the platform icon when in 'error mode'.

By default, some bits that are sent in the autopilot '[Extended Status Message](#)' are configured as alerts. The user can add as many alerts as desired.

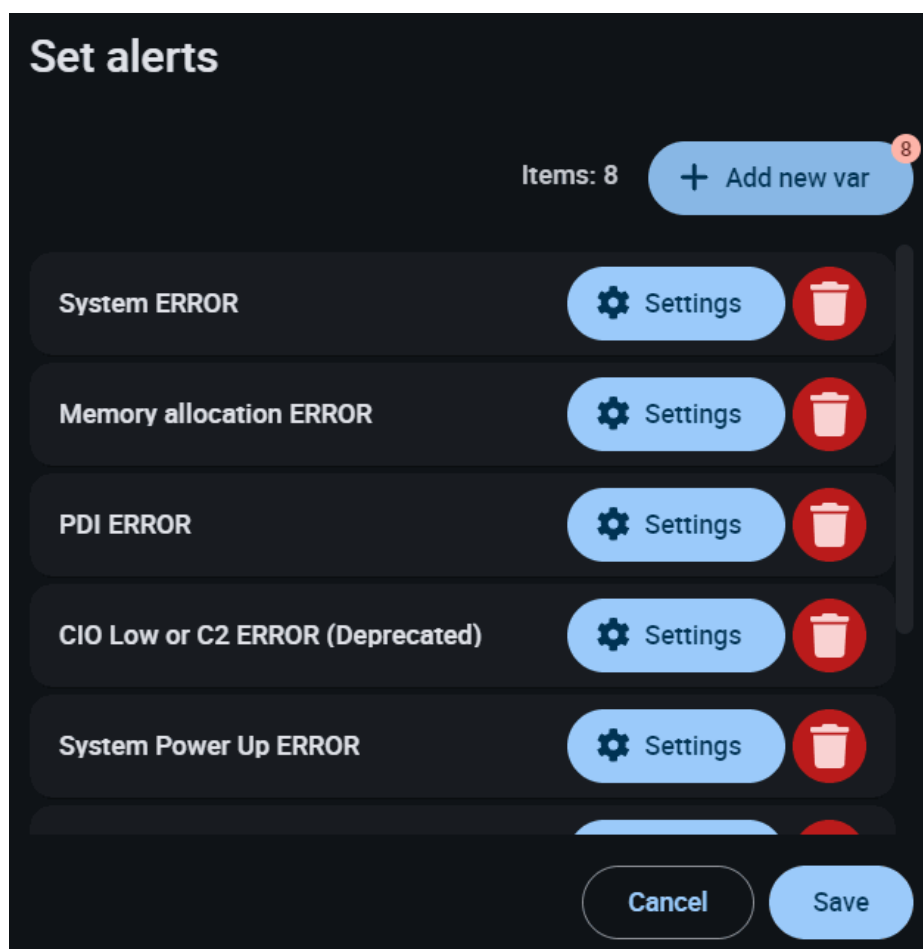

Platform icon settings - Set alerts


They are displayed with the **icon**, which has been configured with them, **flashing red** when in 'error mode'. When the platform icon is clicked on, the name of the variable that has triggered this alert will be displayed. An example is shown below:

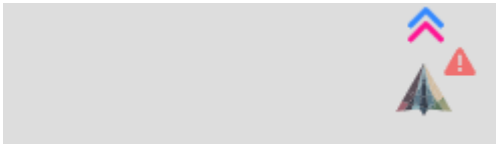

Platform icon settings - Set alerts

- **Direction arrows:** Users can choose variables from the **real angular variables** of the system to be displayed as the **yaw** and **heading arrows**.

By default, the variables displayed are Yaw and Heading respectively. In addition, users can change the color of each arrow as desired.

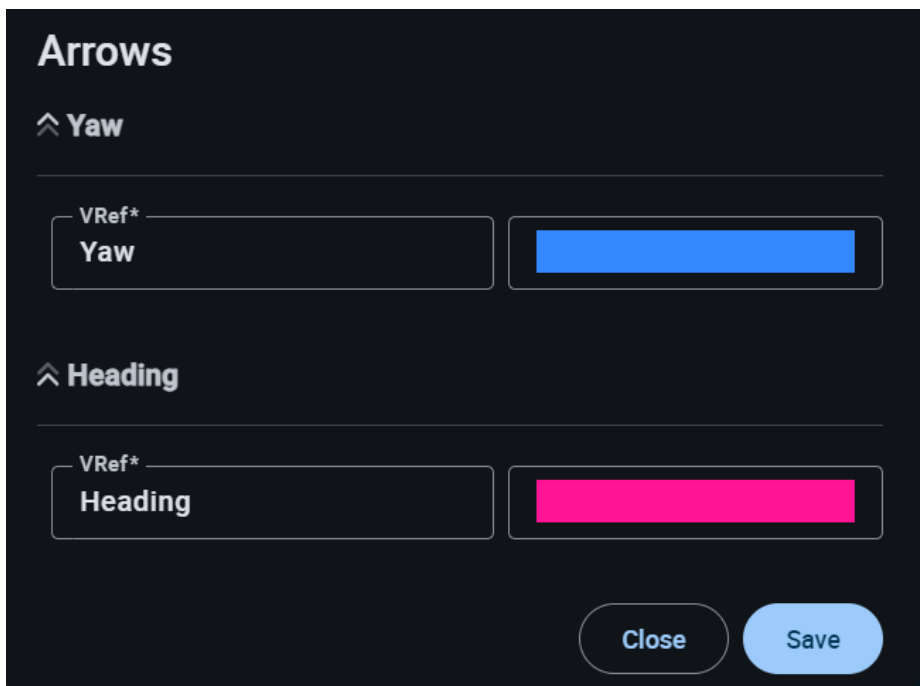

Arrows

⤴ **Yaw**

VRef*
Yaw

[Blue color bar]

⤴ **Heading**

VRef*
Heading

[Red color bar]

Close Save

Platform icon settings - Direction arrows

- **Trail:** The trail path of the platform can be customized.

Trail Settings

color

Dash Line Length*

Dash Line Space*

Pick Up Time* s
Duration in seconds


Max Distance* m
Distance in meters

Platform icon settings - Trail

- **Color:** Set the color trail.
- **Dash line length:** Sets the length of the dash line. This change is **visualized** when a **number other than of 0 is set**.
- **Dash line space:** Sets the space between dash lines. This change is **visualized** when a **number other than of 0 and greater than dash line length** is set.
- **Pick Up Time:** Sets the time for the first point of the trial to be removed. This change is **visualized** when the time is **other than 0 s**.
- **Max distance:** Sets the maximum length of the path to be drawn.
- **Fly to loiter:** Create a volatile loiter and change the current route.

Note

The platform will remain the altitude it had before this command.

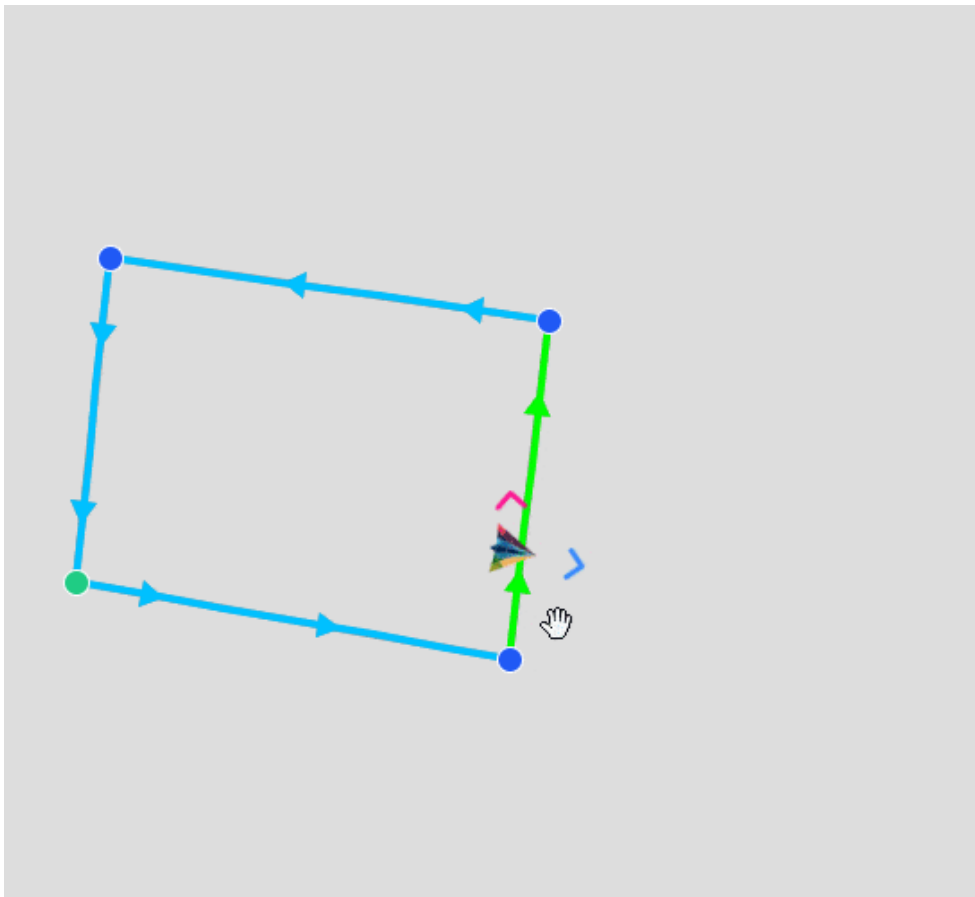


Platform icon - Fly to loiter

- **Fly to hover:** Create a volatile waypoint and change the current route.

Note

The platform will remain the altitude it had before this command.

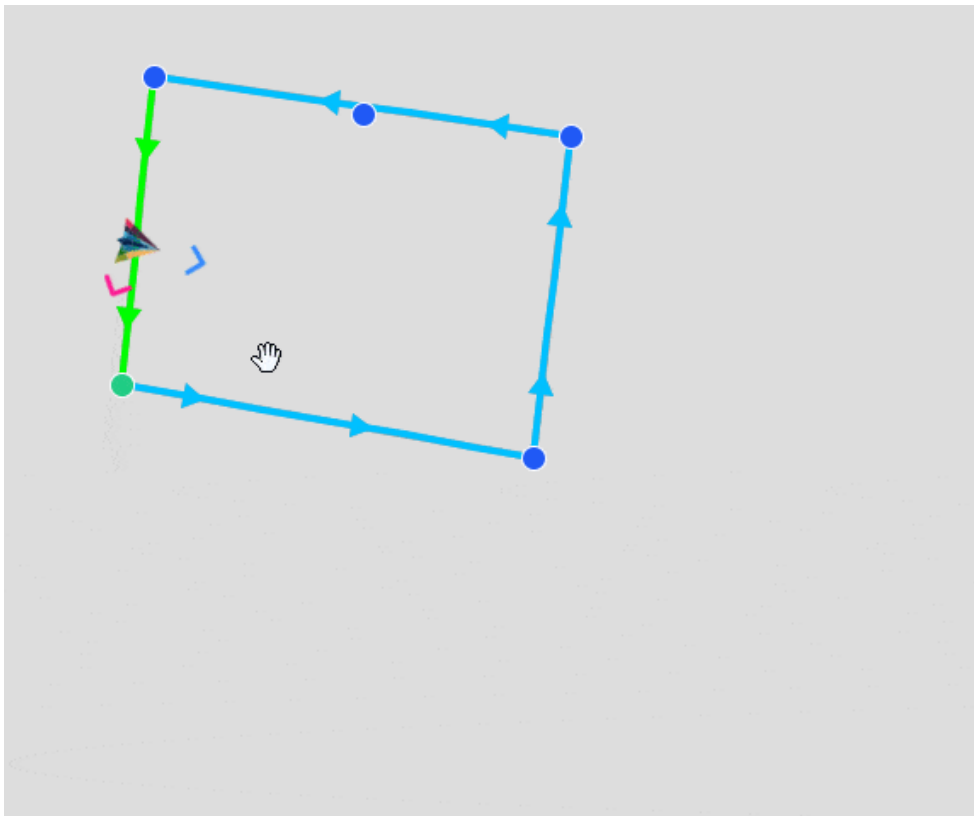

Platform icon - Fly to hover

- **Follow leader:** With this action the platform will follow a moving object (it can be another platform). For more information on this, see [Follow Leader automation](#) of the **1x PDI Builder** manual.

The platform icon changes its appearance depending on the situation:

- **Platform disconnected:**
 - When **Autopilot 1x** is not connected, the platform icon is '**translucent grey**'
 - By default, it is placed in the world coordinates (0,0).



Platform icon - Translucent grey


- **Platform connected:**
 - **During operation/configuration creation:**
 - The platform icon is '**translucent colored**', indicating that GPS data is not being received, i.e. **Position not fixed** status.

- It is placed in the **Initial position UAV** defined in the **Operation Panel**.



Platform icon - Translucent colored

- **During operation/simulation:**
 - The platform icon is '**colored**', indicating that GPS data is being received/simulated.
 - It is placed in the actual position/simulation position.

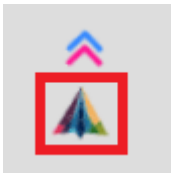


Platform icon - Colored

- **Import/Export**

Furthermore, all these settings can be **exported and imported** from one **Veronte Ops** to another, for example to move them from one PC to another.

When the user tries to import a new **Veronte Ops** configuration, the following confirmation message will appear:

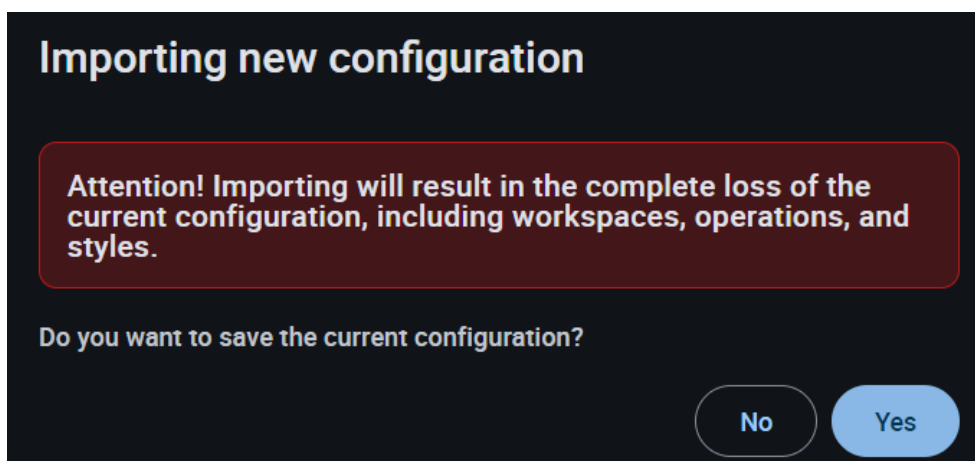



Import Veronte Ops configuration

Terms and Conditions

Users can consult the 'End User License Agreement (**EULA**)' by simply clicking on this button.

Log in

Authentication is required before any operation.

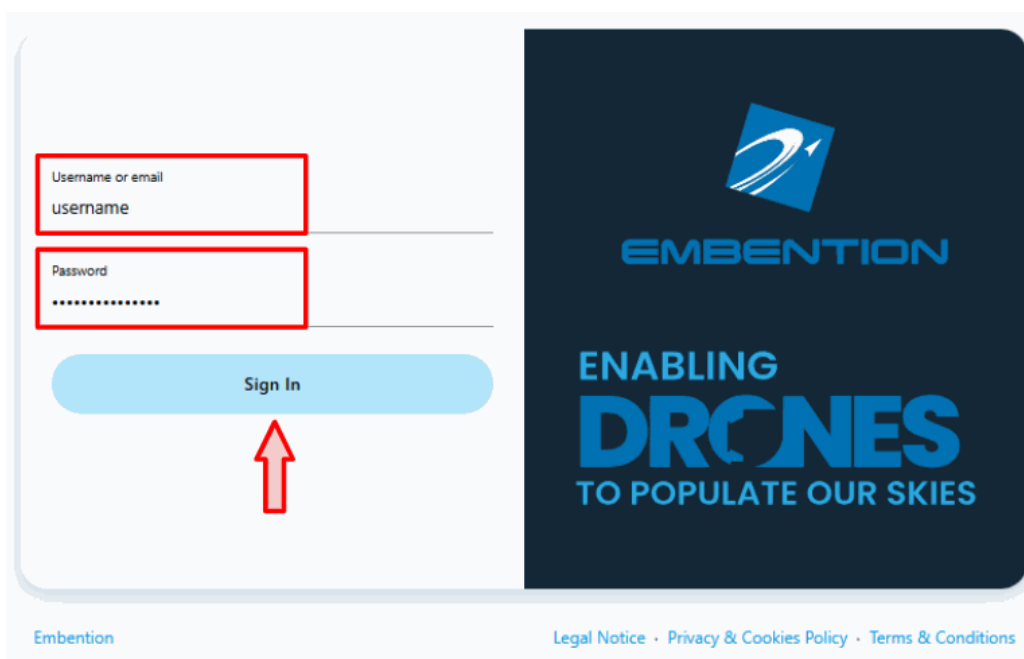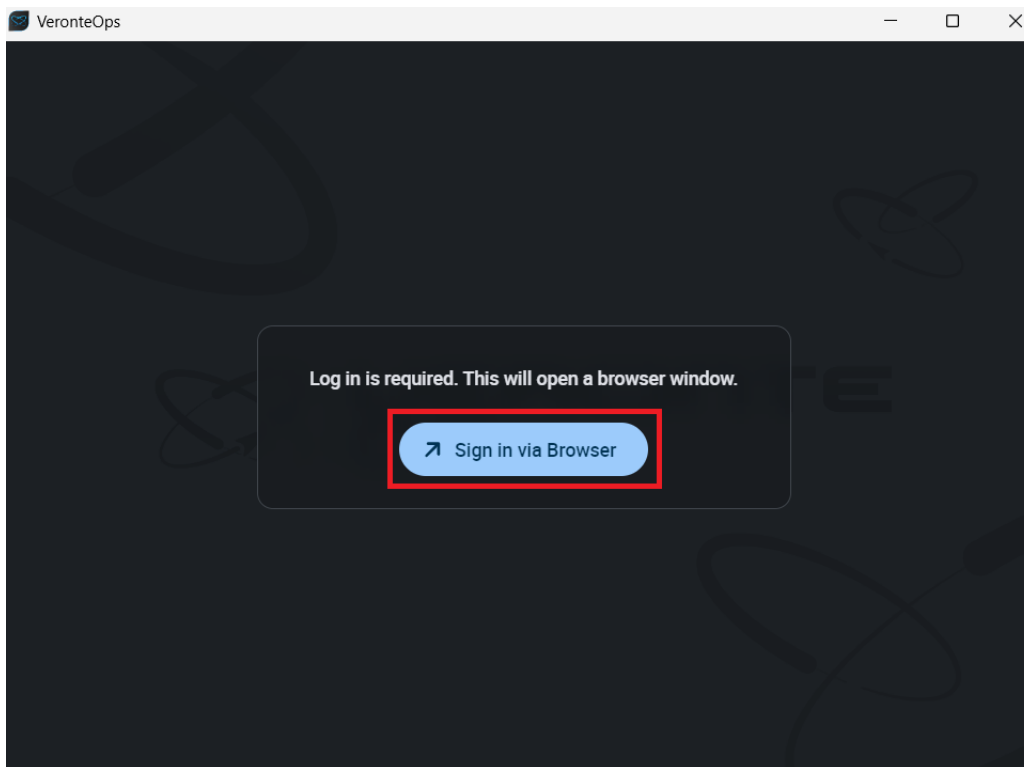

Login

After clicking **Sign in**, a new window will open for users to enter their credentials. If users do not have credentials, do not know what they are or have any problems logging in with them, please contact the support team via the

Joint Collaboration Framework opening a [Ticket](#) or contact sales@embention.com.


If the login is successful, the screen will change as shown below:



Login successful

Warning


If incorrect credentials are entered, the system will display the error message Incorrect username or password.

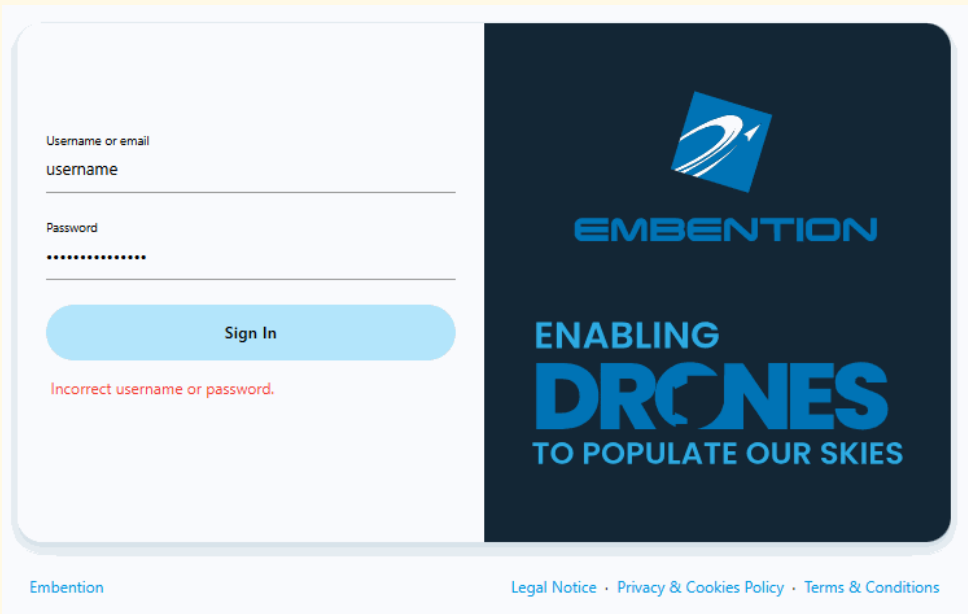

2. Mission

The common way to work with **Veronte Autopilot** is to create missions.

Missions can be created and managed through the 'mission toolbar' (left side of the menu (2)).

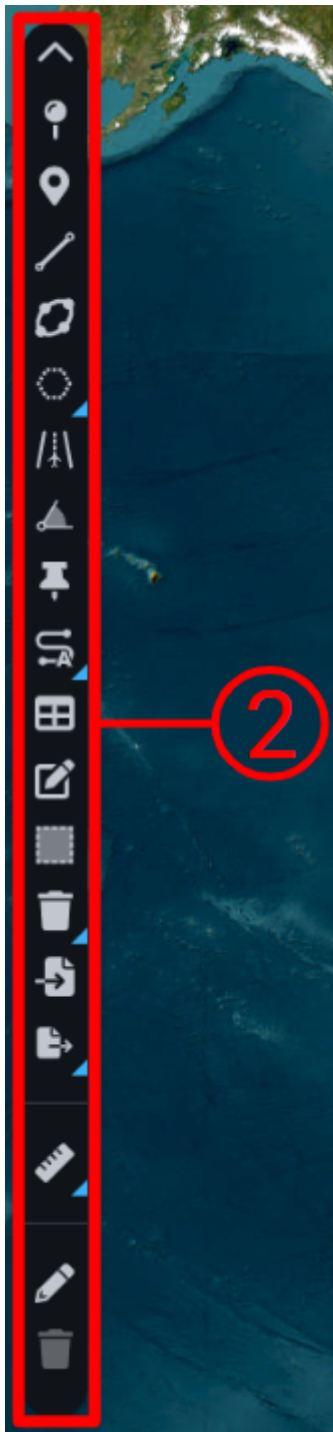

Mission toolbar


The mission toolbar provides graphical tools to create the path that the aircraft follows while it is in cruise phase.

Multiple missions can be created for different purposes. The missions generated are stored in the **Operation folder of the PDI configuration files** when the user saves the changes. For more information on the folders containing the PDI files, see the [initial menu of the Configuration](#) section of the **1x PDI Builder** user manual.

 Note

First, make sure the **Autopilot 1x** unit where the mission has to be uploaded is selected ([Platform connection status - Platform](#) section of this manual).

Next, a detailed description of the toolbar is given. It is divided into different functionalities:

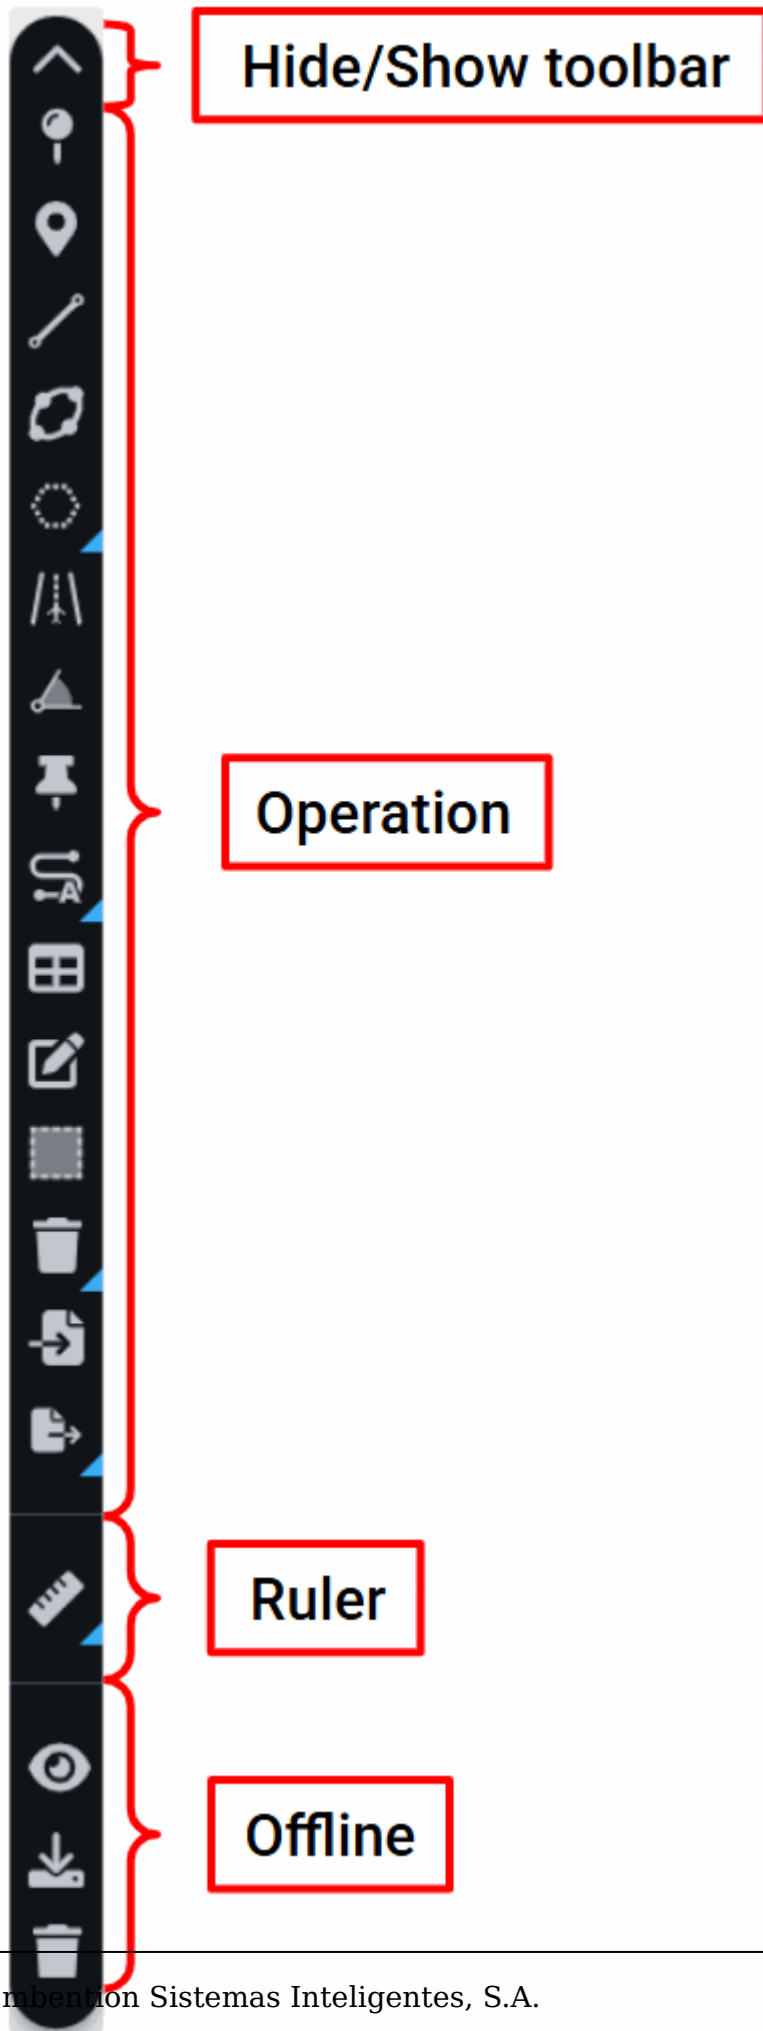

Mission toolbar functionalities

Operation

All the tools in this 'section' allow the user to design the mission, such as waypoints, segments, marks, runways, etc.

Important

Whenever any of these elements are created/modified, it is necessary to **Save**  and **Upload**  them into the Autopilot 1x configuration.

For more information about these actions, refer to the [Operation actions - Operation](#) section of this manual.

Mission Point

Mission Points are points with absolute position to which a relative route can be associated.

Use the Mission Point tool and click (left-click) on the map to create new Mission Points. Then, when users have created all the desired Mission Points, **right-click on the map** to close/finish the 'creation event'.

To move Mission Points, it is first necessary to activate mission editing by clicking on the  icon. Then, simply drag it to the desired position.


In relation to Mission Points, the following actions can be performed with the mouse:

- **Clicking once** on the Mission Point will display a summary of the **Mission Point information**: Mission Point ID, coordinates and elevation:



Mission Point information

- **Right-clicking** on the Mission Point, users will access its **options**:

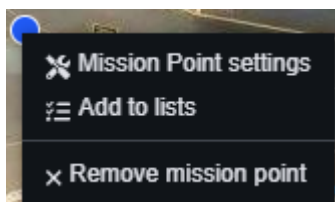

Mission Point options

- **Mission Point Settings:** The user can change the configuration of the Mission Point (coordinates and elevation) in the menu displayed here:

The screenshot shows the 'Mission Point 0' configuration interface. At the top right, there are two icons: a map icon (1) and a platform icon (2). Below these, the 'Set coordinate' section includes a 'Type' dropdown set to 'Decimal degrees', and input fields for 'Latitude (DD)*' (38,284412) and 'Longitude (DD)*' (-0,573554). A red bracket groups the 'Set coordinate' and 'Set elevation' sections, with a callout '3' pointing to the 'Set elevation' section. The 'Set elevation' section includes a 'MSL terrain: 43.23' button, and input fields for 'WGS84' (123,61 m), 'MSL' (73,23 m), and 'AGL' (30 m). At the bottom right are 'Cancel' and 'Confirm' buttons.

Mission Point configuration

There are 3 ways of defining the position of an Mission Point manually:

1. **Matching it to the platform position.** By selecting the  icon, the Mission Point coordinates and elevation will be automatically updated with those of the actual platform's actual position.
2. **Selecting a position in the map.** Simply click on this icon , then click on the desired point on the map and the Mission Point coordinates and elevation will be updated automatically.

3. Entering the exact coordinates and elevation here:

- **Set coordinate:** The coordinates can be set in:
 - Decimal Degrees → Latitude (DD) and Longitude (DD)
 - Degrees → Latitude (DMS) and Longitude (DMS)
 - UTM → x (Easting), y (Northing), Zone and Hemisphere
 - MGRS (Military Grid Reference System)
- **Set elevation:** Whichever way the user defines the **altitude** (WGS84, MSL and AGL), **Veronte Ops** will calculate the other 2 ways.

That is, if the user defines a waypoint at X m in AGL, **Veronte Ops** will automatically calculate what that value is in WGS84 and MSL.

- **Remove Mission Point:** Deletes the Mission Point.

Waypoint

Use the Waypoint tool and click (left-click) on the map to create new waypoints. Then, when users have created all the desired waypoint, **right-click on the map** to close/finish the 'creation event'.

To move waypoints, it is first necessary to activate mission editing by clicking on the  icon. Then, simply drag it to the desired position.


In relation to waypoints, the following actions can be performed with the mouse:

- **Clicking once** on the waypoint will display a summary of the **waypoint information**: Waypoint ID, coordinates and elevation:



Waypoint information

- **Right-clicking** on the waypoint, users will access to its **options**:

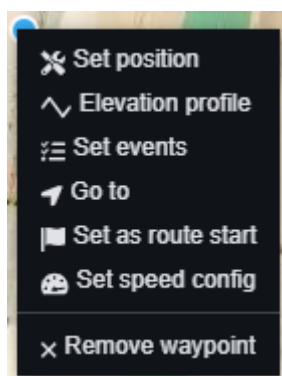

Waypoint options

- **Set position:** The user can change the configuration of the waypoint (coordinates and elevation) in the menu displayed here:

Waypoint 0

✓ Absolute Relative 1

Set coordinate

Type
Decimal degrees

Latitude (DD)* 38,284191 Longitude (DD)* -0,572486

Set elevation

▲ MSL terrain: 36.08

WGS84
116,46 m

MSL
66,08 m

AGL
30 m

Cancel Confirm

Waypoint configuration

There are 3 ways of defining the position of a waypoint manually:

1. Entering the exact coordinates and elevation here:

- **Absolute:**

Waypoint 0

☒ Absolute ☐ Relative

Set coordinate

Type
Decimal degrees ▼

Latitude (DD)*
38,284191

Longitude (DD)*
-0,572486

Set elevation

MSL terrain: 36.08

WGS84
116,46 m

MSL
66,08 m

AGL
30 m

Cancel Confirm

Absolute waypoint position

- **Set coordinate:** The coordinates can be set in:
 - Decimal Degrees → Latitude (DD) and Longitude (DD)
 - Degrees → Latitude (DMS) and Longitude (DMS)
 - UTM → x (Easting), y (Northing), Zone and Hemisphere
 - MGRS (Military Grid Reference System)
- **Set elevation:** Whichever way the user defines the **altitude** (WGS84, MSL and AGL), **Veronte Ops** will calculate the other 2 ways.
That is, if the user defines a waypoint at X m in AGL, **Veronte Ops** will automatically calculate what that value is in WGS84 and MSL.

- **Relative:** In this case, the position of the waypoint is relative to another point.

That point could be the **UAV position**, a **Desired position**, a **Track position** or an **Mission Point**. They are indicated through North, East and Down.

Relative waypoint position

2. **Selecting a position in the map.** Simply click on this icon



, then click on the desired point on the map and the waypoint coordinates and elevation will be updated automatically.


2. **Matching it to the platform position.** By selecting the



icon, the waypoint coordinates and elevation will be automatically updated with those of the actual platform's actual position.

⚠ Warning

If the elevation of a waypoint is set below the terrain altitude, the user will be able to detect it quickly as a warning symbol will appear next to the waypoint. In addition, it will also be indicated in the waypoint information as "Threshold AGL alert":

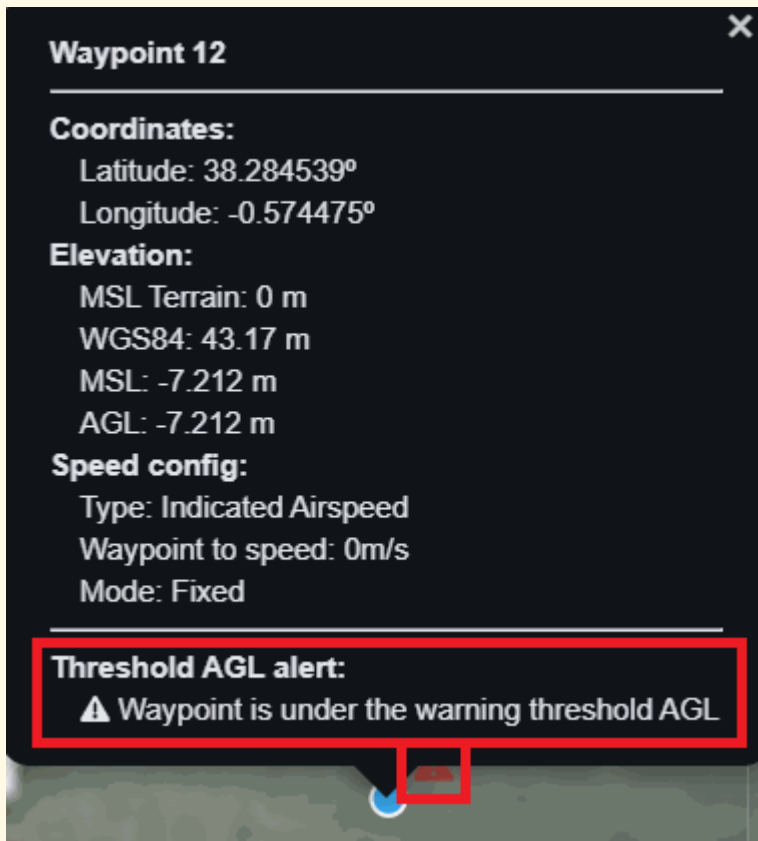


Waypoint - Warning below terrain

- **Elevation profile:** To be able to consult the elevation of the route, it is required to have installed the **Veronte Terrain Provider** application (for more information about this, see [Additional apps](#) section of this manual).

Here users can see an estimate of the height of the terrain and the height of the route to be taken as well as the collisions that could occur.


In addition, users can set up a **Warning Threshold**, which will be represented as a red warning line over the terrain. For more information, see [Map settings - Veronte Ops configuration](#) section of this manual.

By clicking on it, the following menu will appear:

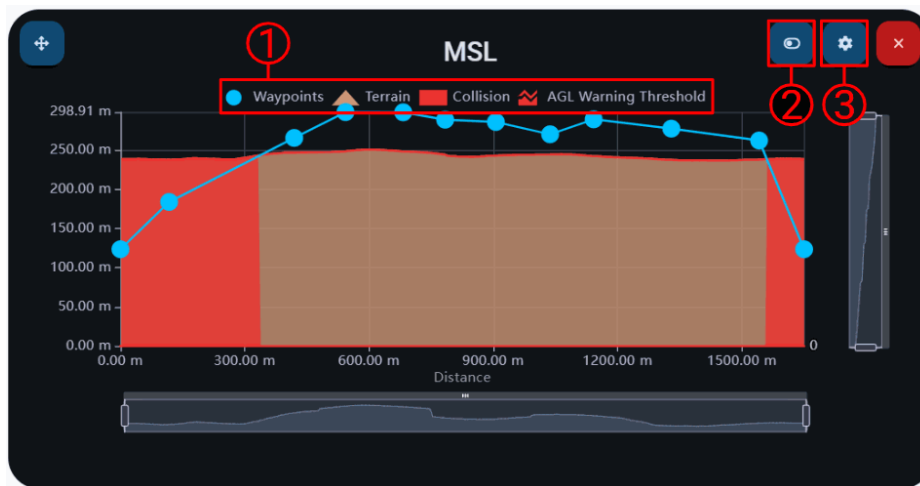


Elevation (MSL) menu

1. This legend showing waypoints, terrain, collision and warning threshold is an 'interactive' legend, i.e. users can choose which of these elements are displayed or not by simply clicking on them:

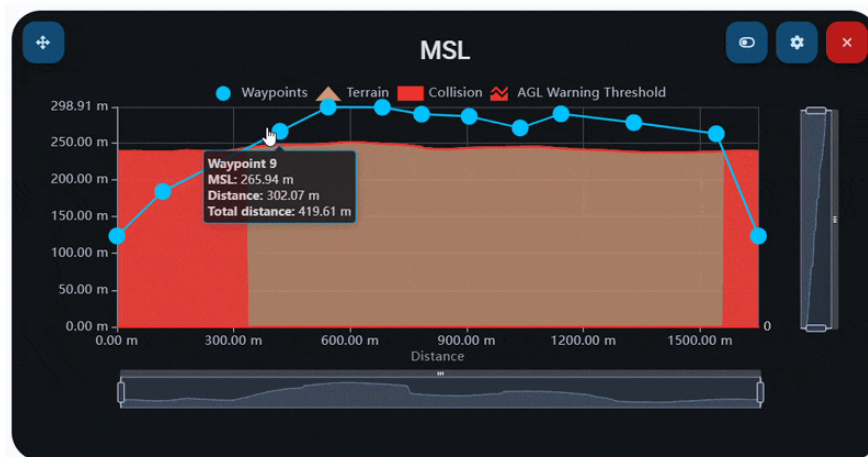


Elevation (MSL) menu - Legend

2. **Drag** button: When enabled (), users can modify the altitude of the waypoints by simply clicking and dragging them. If it is disabled (), it is not possible to move them:

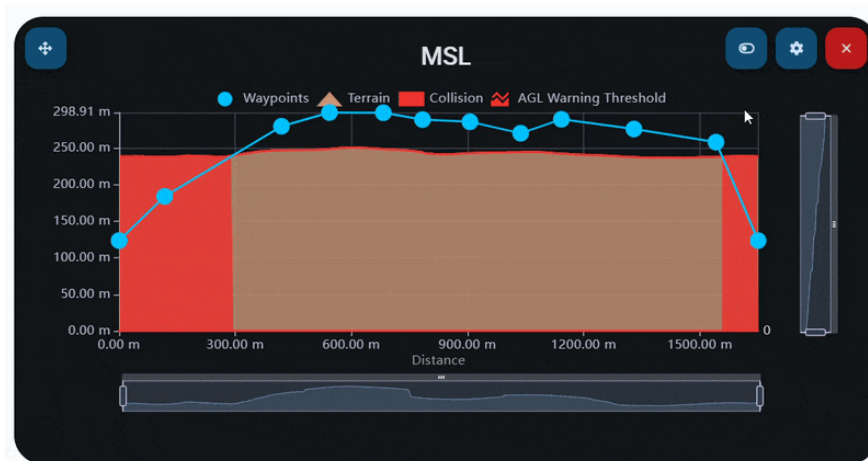


Elevation (MSL) menu - Dragging waypoints

3. **Settings** button: Displays a new window with some parameters that can be customized:

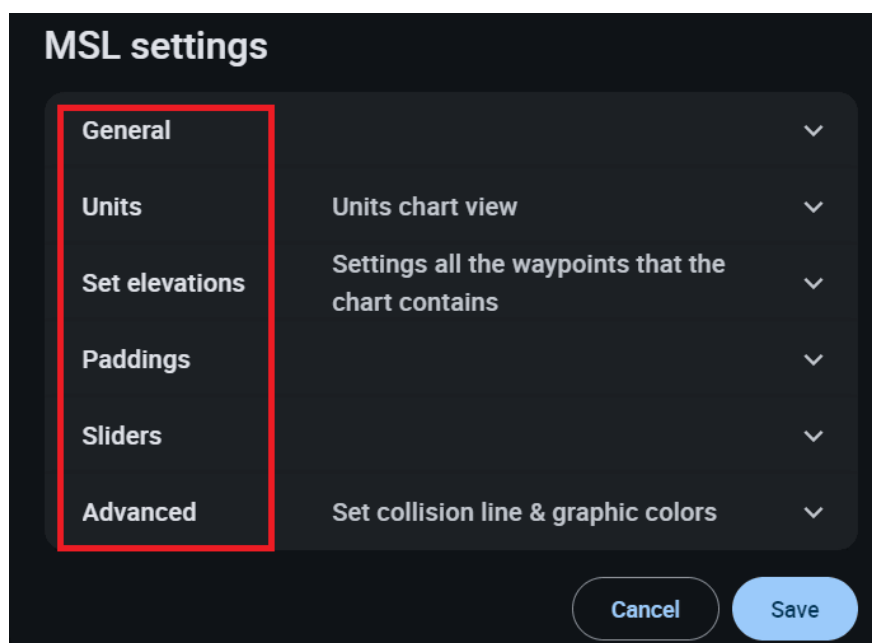

Open elevation menu - Settings

- **General:** An offset can be set for Y axis.
- **Units:** Units of the elevation and distance of the chart view can be set.
- **Set elevations:** The altitude of all waypoints on the route can be modified.
- **Paddings:** The size of the grid can be adjusted as desired.
- **Sliders:** X and Y axes sliders can be hidden by disabling them.
- **Advanced:** The collision line and chart colors can be modified:

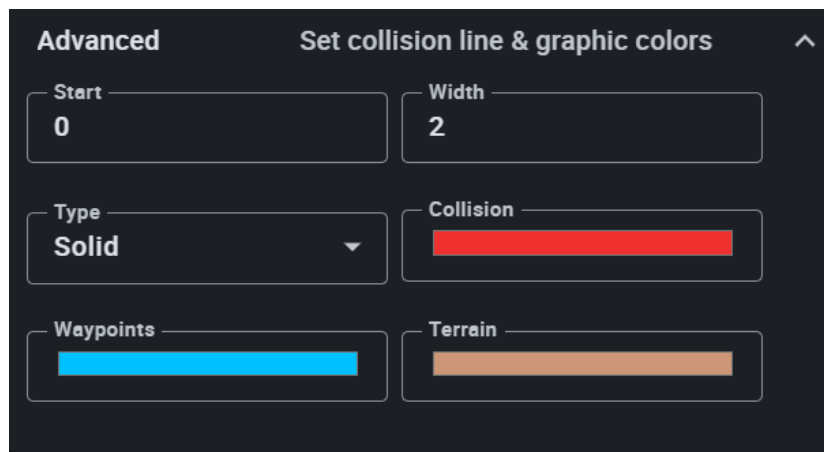

Elevation (MSL) menu - Advanced settings


- **Set Events:** This option allows to associate this waypoint to a specific event.

This works as follows, in this panel the user links this waypoint to an "Event Waypoint". This Event Waypoint is the one that has to be linked to the desired event in the [Automations menu](#) of the **1x PDI Builder software**.

 Important

To do this, it is first necessary to have defined (renamed) an Event Waypoint in the **UI menu of the 1x PDI Builder software**, as described and explained in the corresponding section of the **1x PDI Builder manual**, click [here](#) to access it.

Simply check the desired Event Waypoint to be associated:

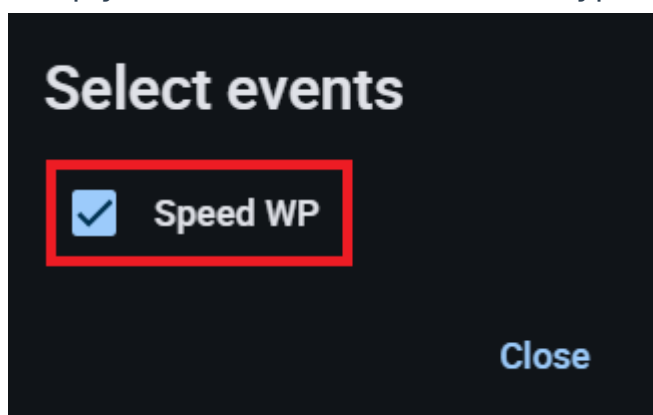


Waypoint options - Set Events

Note

- Users can associate a waypoint to as many Event Waypoints as there are created (a maximum of 16 Event Waypoints can be defined in the system).
- Different waypoints can be linked to the same Event Waypoint.

Moreover, if the Event Waypoint that is linked to the waypoint has an associated icon, the icon will appear at this waypoint. In addition, when clicking on it, the name of the Event Waypoint defined by the user will appear in its description. An example is shown below:

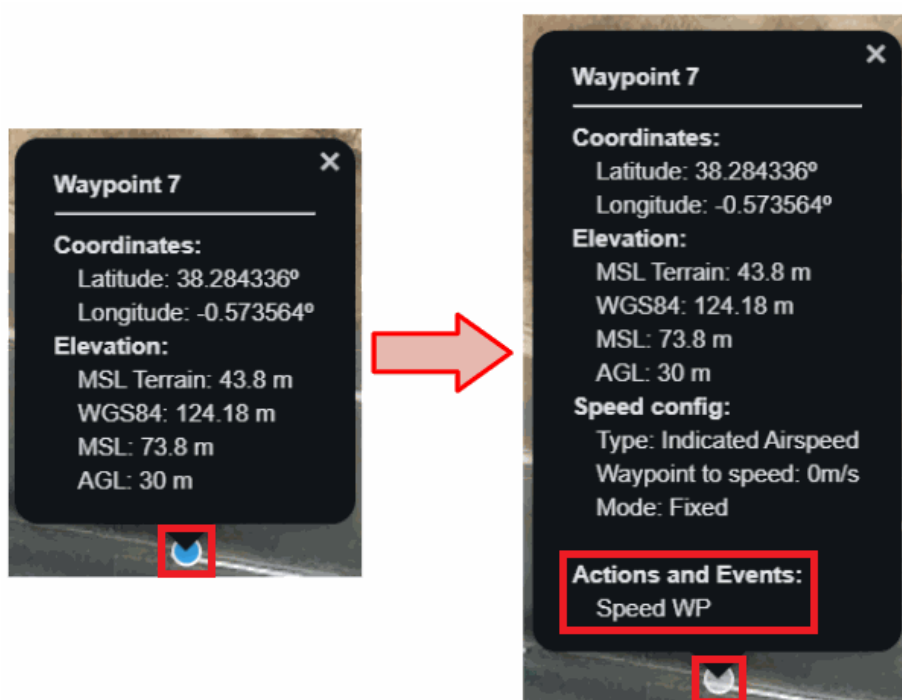**Waypoint information - Set Events**

- **Go to:** By clicking here, the platform will fly to this waypoint. If the waypoint belongs to a mission, the platform will continue that mission after reaching it.

Note

This option only appears when a Veronte Autopilot 1x is connected and the operation, which the user is working on, is stored in the autopilot.

- **Set as Start Route:** Users must define where they want the cruise route to start by defining the waypoint as such with this option. The waypoint will turn of green color.

 Warning

If users do not define any waypoint as the 'Start Route', the operation will not be uploaded to the autopilot configuration and the following warning notification will be displayed:

 You must select the start of the route before uploading operation

Set start route - Warning notification

- **Set speed configuration:** Set Speed function defines the velocity parameters that the UAV must adopt when reaching or passing a specific waypoint.



The image shows a dark-themed user interface for configuring a waypoint. At the top, it says 'Waypoint 2'. Below this are three settings, each with a label and a dropdown or input field: 'Speed type' is set to 'Indicated Airspeed', 'Waypoint to speed' is set to '0' with 'm/s' as the unit, and 'Mode' is set to 'Fixed'. At the bottom, there are two buttons: 'Cancel' and 'Save'.

Waypoint information - Set speed configuration

- **Speed Type:** Defines the physical reference for the velocity.
- **Waypoint to speed:** Numerical value of the target speed.
- **Mode:** Determines how the command is applied to the flight profile.

- **Remove Waypoint:** Deletes the waypoint.


Segment

To create a new segment, click on the segment icon and then select on the map the point where the segment will start. To end the track, users have to **double click** directly with the **left mouse button** to create the last waypoint of the segment. Then, after creating the last waypoint, **right-click on the map** to close/finish the 'creation event'.



Segment

In addition, users can **concatenate two or more segments** by clicking on various points on the map with the **left button**, as shown in the figure below:

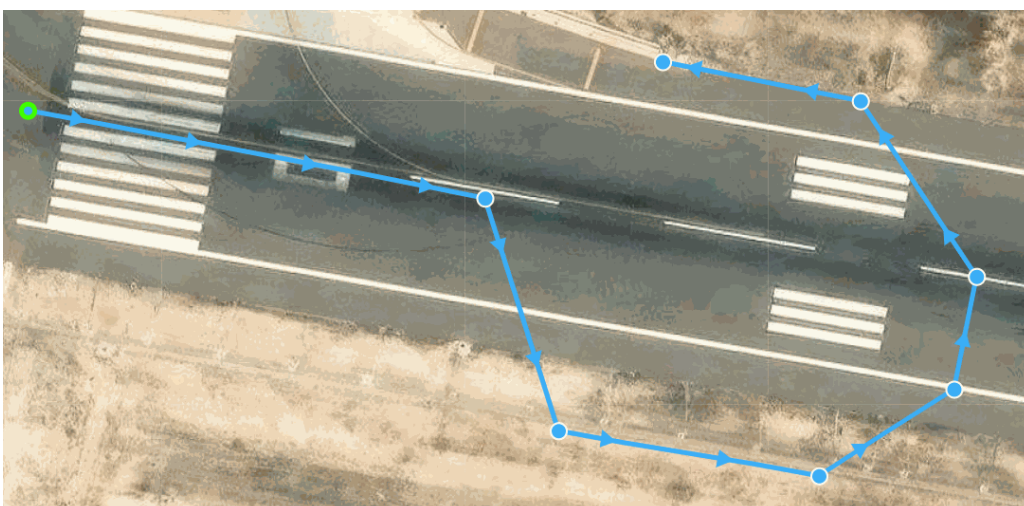

Route

Besides, to create a closed route, users must match the last waypoint of the segment with the first one:




Closed route

It is also possible to curve a segment. To do so, users must create the segment, edit the mission by clicking on the  icon, and then move the **translucent orange waypoint** (●) in the center of the segment. The distance moved will correspond to the radius of the curve:



Curved segment

There is an extra option in the options for a waypoint that corresponds to the start of a curved segment:

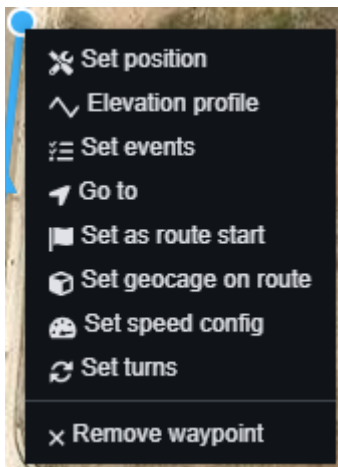

Curved segment options

- **Set Turns:** This option allows the user to set a desired number of turns. After these turns the platform will continue with the defined mission. An example is shown below:



Curved segment - Turns


⚠ Warning

When a segment is created, be careful with the height of the waypoints.

Users can **check for collisions** between route waypoints and terrain **directly on the map** or **using the 'Open elevations' functionality** described above.

To check directly on the map, if some of the waypoints are below the terrain altitude indicated by the meshes, a warning symbol will appear next to them and the affected segment will change its color to red. In addition, it will also be indicated in the waypoint information as "Threshold AGL alert".

To solve this, change the altitude of the waypoints. An example is shown below:

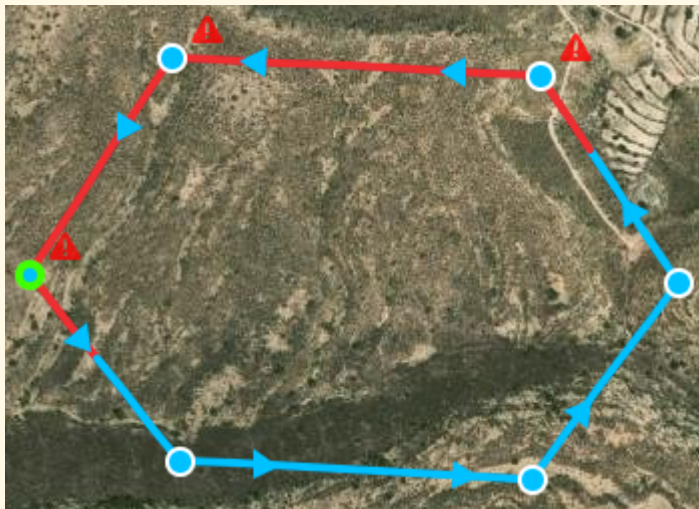

Segment under the ground altitude


- **Set geocage on route**

Allows configuring a geocaging zone around the segment. For more information, consult [Geocaging area](#).

Orbit

This tool allows the user to create a new orbit on the map.

First, select a point on the map which will be the center of the new orbit. Then, when users have created all the desired orbits, **right-click on the map** to close/finish the 'creation event'.

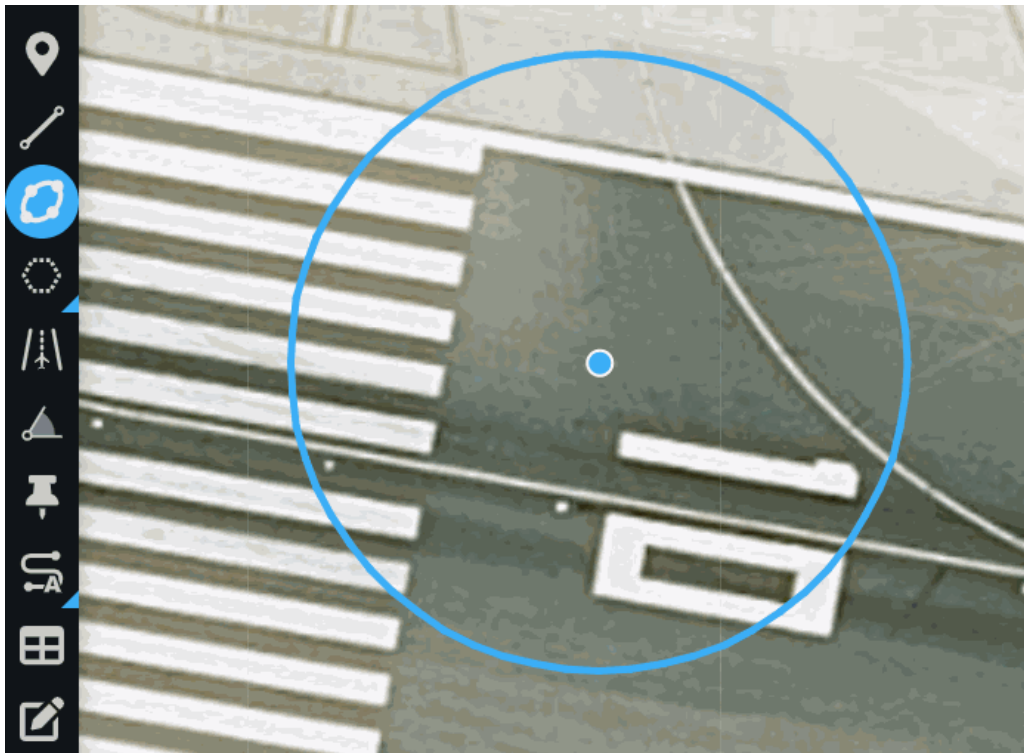


Orbit

In addition, the initial circular orbit can be converted into an ellipse by modifying the length of the axes and can also be rotated. To do this, edit the mission by clicking on the  icon, then move the **4 translucent orange waypoints** (●) as desired to turn them into an ellipse and to rotate it, click and rotate the small blue circle (●):



Ellipse orbit

Besides, there is an extra option in orbits regarding waypoints and segments:

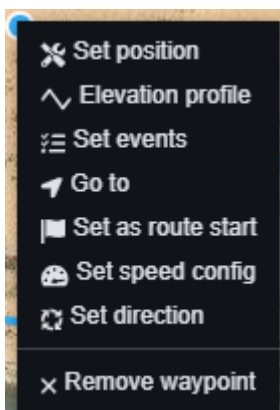

Orbit options

- **Set Direction:** It is possible to select the direction of the loiter: **Auto**, **Clockwise** and **Anticlockwise**.

⚠ Warning

When creating an orbit, be careful with its altitude and the ground level (all the points of the orbit will be at the same altitude).

Users can **check for collisions** between orbit and terrain **directly on the map** or **using the 'Open elevations' functionality** described above.

To check this directly on the map, if any part of the orbit is below the terrain altitude indicated by the meshes, a warning symbol will appear next to the waypoint and the affected segment will change its color to red. In addition, it will also be indicated in the waypoint information as "Threshold AGL alert".

To solve this, change the altitude of the waypoint. An example is shown below:




Orbit partially below ground level

Shape

Within this option areas/volumes with different shapes can be created: [prisms](#), [spheres](#), [cylinders](#) and [geocaging areas](#).

The vertices (waypoints) that compose these volumes are all configured in the same way. **Right-click** on them to access their options:

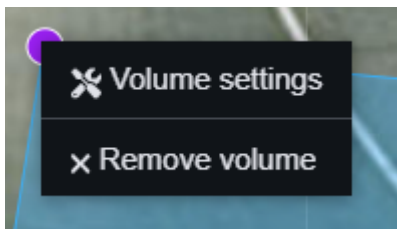

Volume vertex options


- **Volume Settings:** The user can change the configuration of the volume vertex (coordinates and elevation) in the menu shown here. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).

Note

The **geocaging area** does not have this option.

- **Remove Volume:** Deletes this volume.

Furthermore, these volumes have a shared configuration option, "Set Events". This option allows to associate this volume to a specific event.

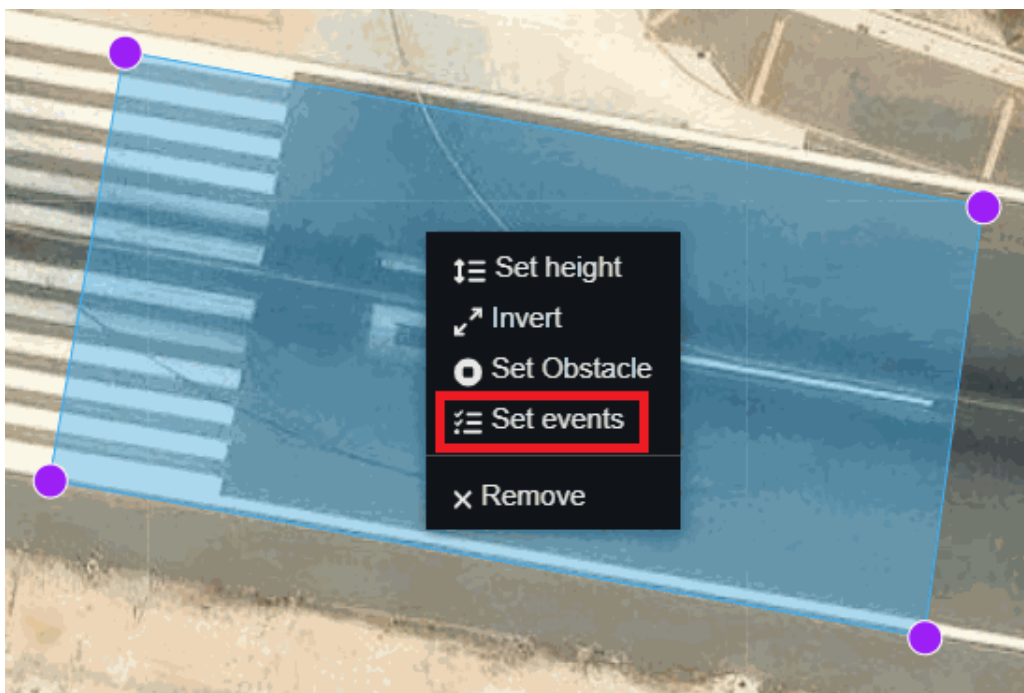


Volume options

This works as follows, in this panel the user links this volume to an "Event Volume". This Event Volume is the one that has to be linked to the desired event in the [Automations menu](#) of the **1x PDI Builder software**.

⚠ Important

To do this, it is first necessary to have defined (renamed) an Event Volume in the **UI menu of the 1x PDI Builder software**, as described and explained in the corresponding section of the **1x PDI Builder** manual, click [here](#) to access it.

Simply check the desired Event Volume to be associated:

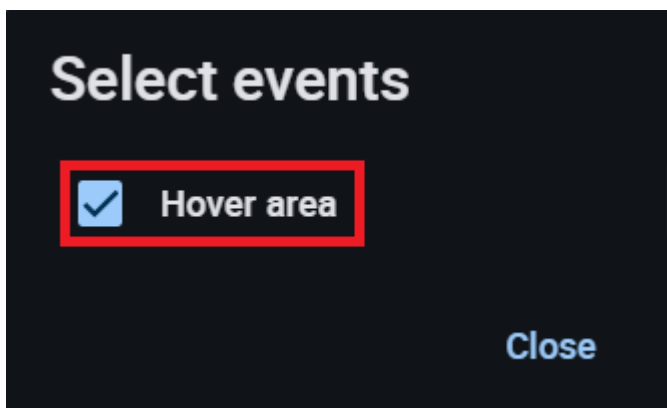


Volume options - Set Events

ℹ Note

- Users can associate a volume to as many Event Volumes as there are created (a maximum of 60 Event Volumes can be defined in the system).
- Different volumes can be linked to the same Event Volume.

Moreover, if the Event Volume that is linked to the volume has a custom color, the volume will turn that color. In addition, when clicking on it, the name of the Event Volume defined by the user will appear in its description. An example is shown below:

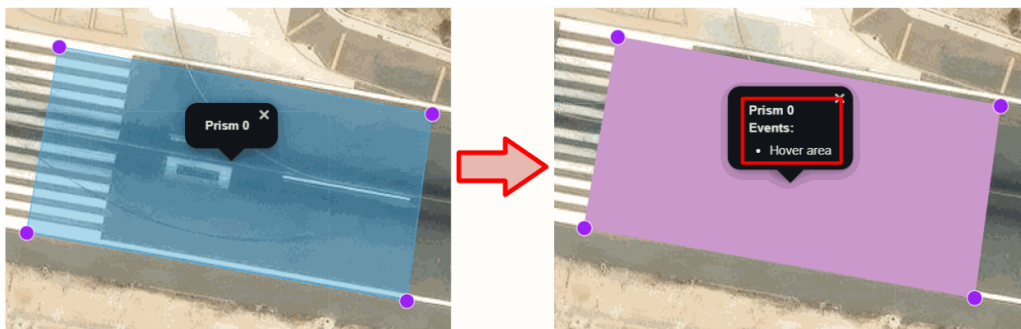


Volume information - Set Events

Prism


This tool is used to determinate an area in which an action is wanted to be performed. When the aircraft enters or leaves the prism an event may be triggered and it can be used to start an automation.

To add a prism, click on its icon, click on the desired points on the map and match the last waypoint of the prism with the first one. Then, when users have created all the desired prisms, **right-click on the map** to close/finish the 'creation event'.

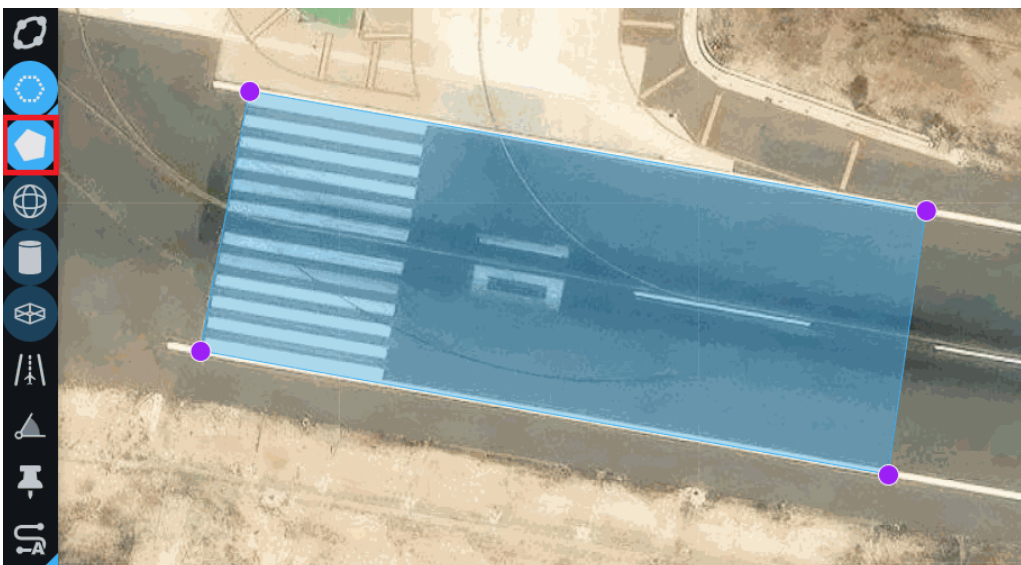


Prism

Like the other elements, it can be edited to change its shape by moving its vertices. Click on the  icon:

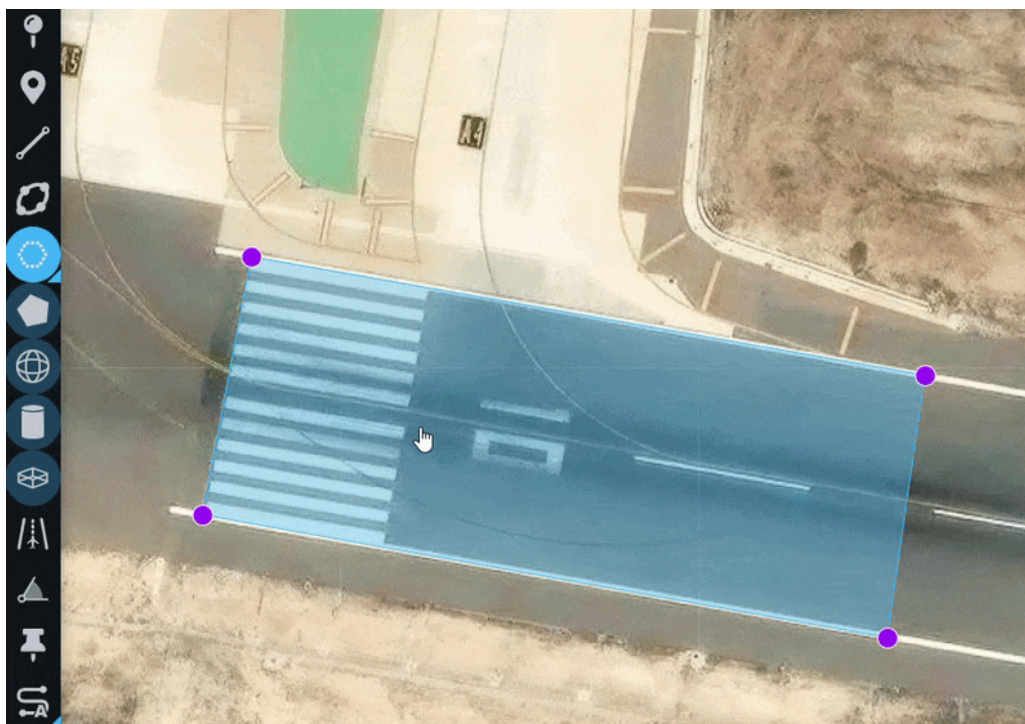

Prism shape

Right-clicking on the prism, users will access to its **options**:

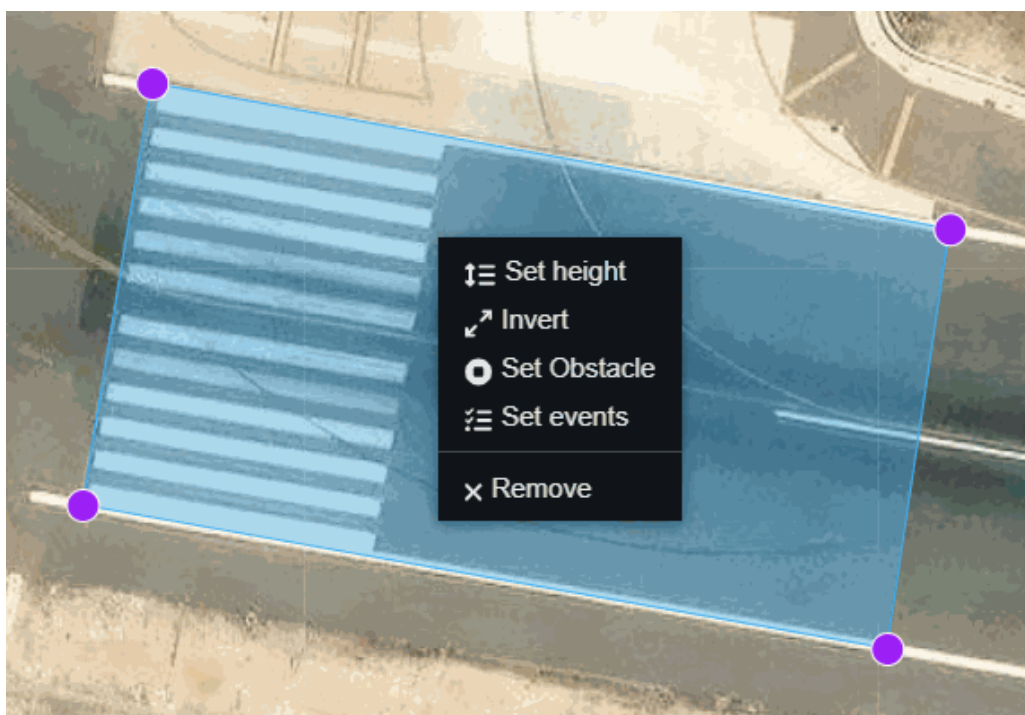

Prism options

- **Set Height:** Users can set the upper and lower heights of the prism. By default, prisms have infinite lower and upper boundaries.

Lower

☒ Value 

Fld

Upper

☒ Value 100000 m

100000.000 meters


 Fld

Cancel Save


Prism options - Set Height

As can be seen in the figure above, the lower and upper limits can be set as absolute or relative:

- **Relative**  icon: The altitude is relative to an **Operation Variable**, previously defined in **1x PDI Builder**. But, it is required to set the value of the variable in the [Operation Variables](#) of the **Operation Panel**. In addition, it is necessary to establish whether it is relative to AGL, MSL, WGS84 or to a Fld (feature) that has to be selected.

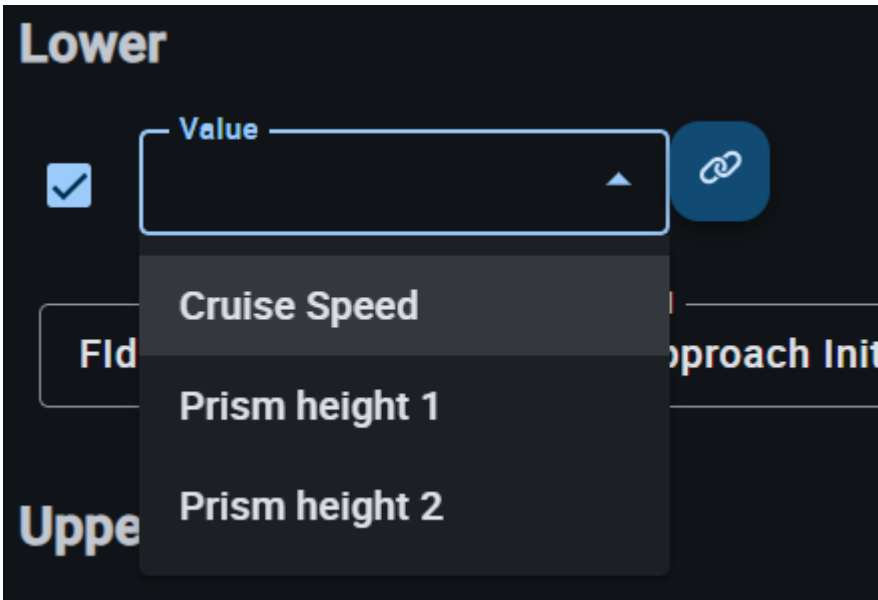


Prism options - Height relative

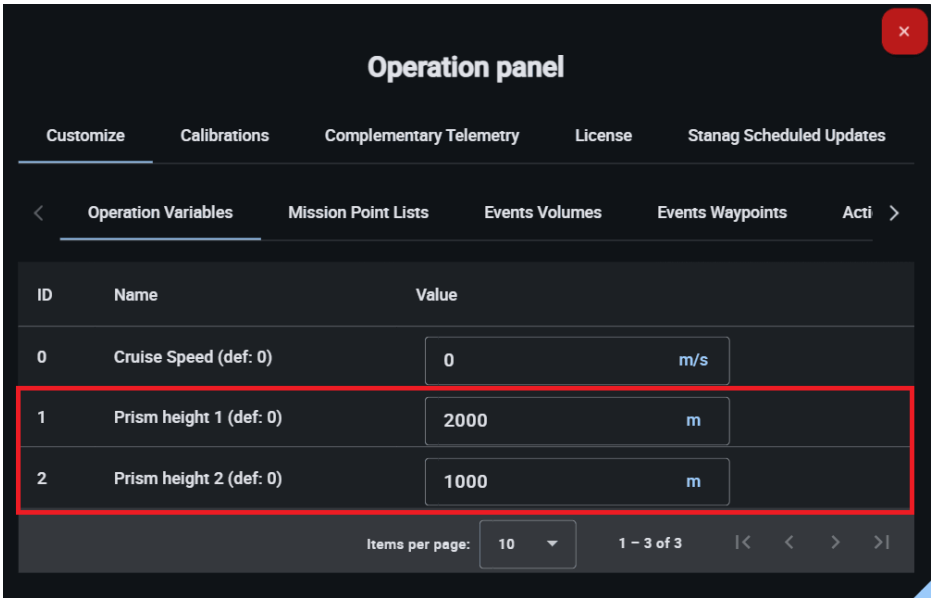

Prism options - Operation Panel

- **Absolute**  icon: The value must be entered manually and it is also necessary to establish whether it is relative to AGL, MSL, WGS84 or to a Fld (feature) that has to be selected.

- **Invert:** This inverts the defined area.

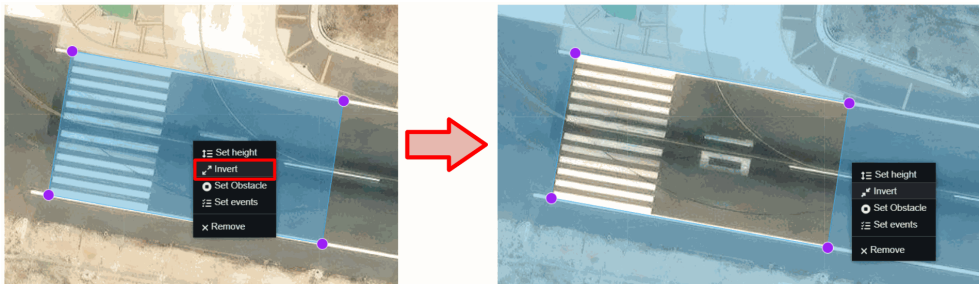


Prism options - Invert

- **Set Obstacle:** A prism can become an obstacle, an area that is desired to avoid. This option has been implemented to be used as the **geofencing** functionality.

Note

When setting the obstacle, the option "**Set Obstacle**" changes to "**Set Prism**". This option turns the obstacle back into a prism.

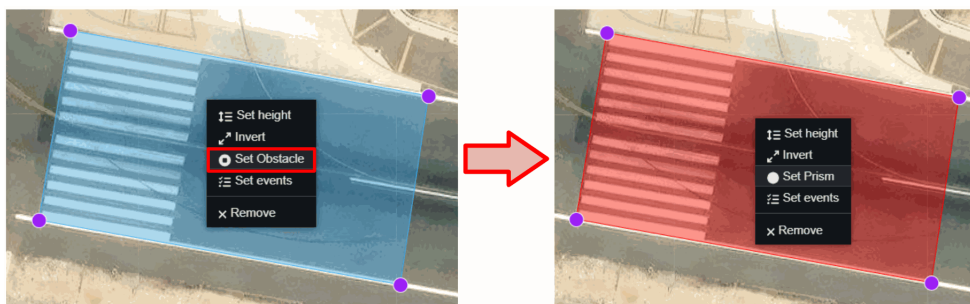

Prism options - Set Obstacle

This tool allows to set an exclusion area on the map that can not be crossed by the RPAS. Main functions of the tool:

- Avoid collisions with obstacles as for example buildings, trees or antenna towers.
- Avoid flying restricted access areas.

What can happen with high speed aircrafts (Airplanes)?

It is possible that due to its speed, the RPAS will enter the obstacle area, but will immediately apply the corrections to exit the obstacle area and return to the path. The solution to this problem is to configure a bigger obstacle area in order to avoid the physical obstacle.

What can happen with low speed aircrafts (Multirotor)?

It can happen that a multirotor enter an obstacle area (staying very close to its center), at that moment the Ground Speed Vector and the Field Repulsion Vector have the same direction but opposite sign. This phenomenon causes a conflict and until the directions are different enough to allow the multirotor to move, it will remain in an indecision situation.


To solve this problem the user can configure the obstacle area by leaving the center of the obstacle away from the path line.

- **Set Events:** Explained previously in the [Shape](#) section.
- **Remove:** Deletes the prism.

Sphere

This tool is used to determinate a spherical volume (3D) in which an action is wanted to be performed. When the aircraft enters or leaves the sphere an event may be triggered and it can be used to start an automation.

To add a sphere, click on its icon, click on the desired point on the map and drag it to set the radius. Then, when users have created all the desired spheres, **right-click on the map** to close/finish the 'creation event'.

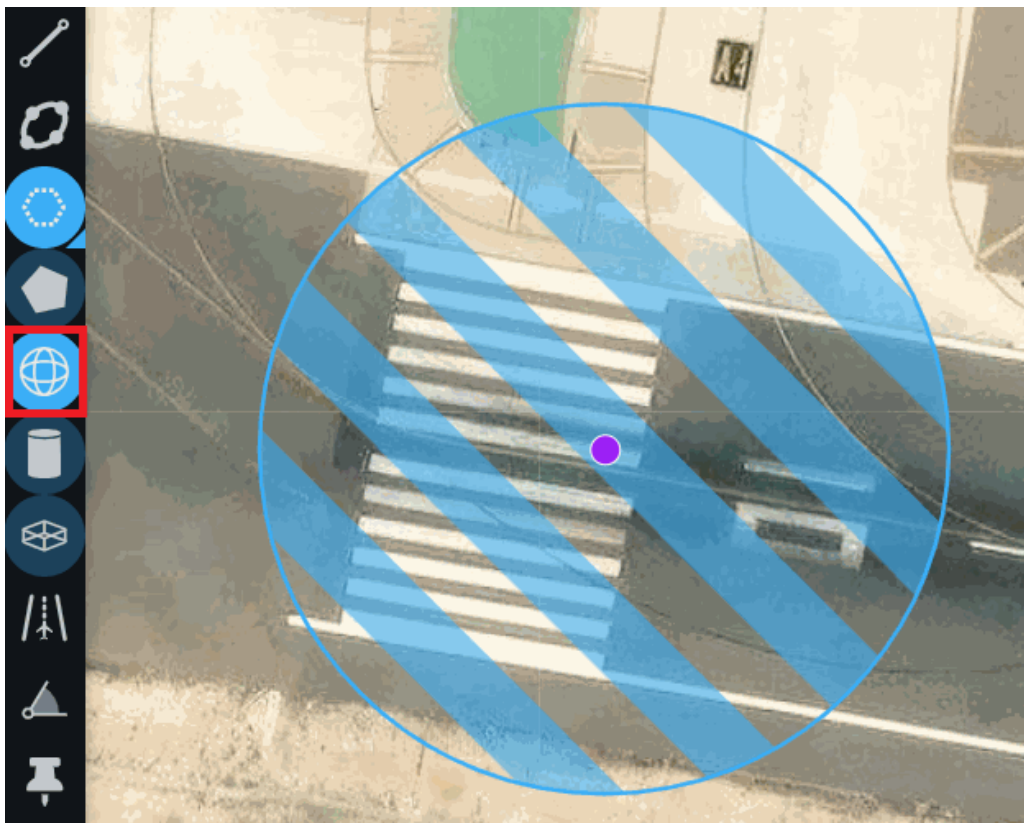

Sphere

Like all other elements, it can be edited to move it or change its radius by clicking on the  icon:



Sphere radius

Right-clicking on the sphere, users will access to its **options**:




Sphere options

- **Set Radius:** To accurately set the radius of the sphere, users can enter the value manually.
- **Set Obstacle:** A sphere can become an obstacle, an space that is desired to avoid. As it is a 3D space, it allows the platform to avoid it by passing over it, taking into account the height of the obstacle. This option has been implemented to be used as the **geofencing** functionality.

Note

When setting the obstacle, the option "**Set Obstacle**" changes to "**Set Sphere**". This option turns the obstacle back into a sphere.

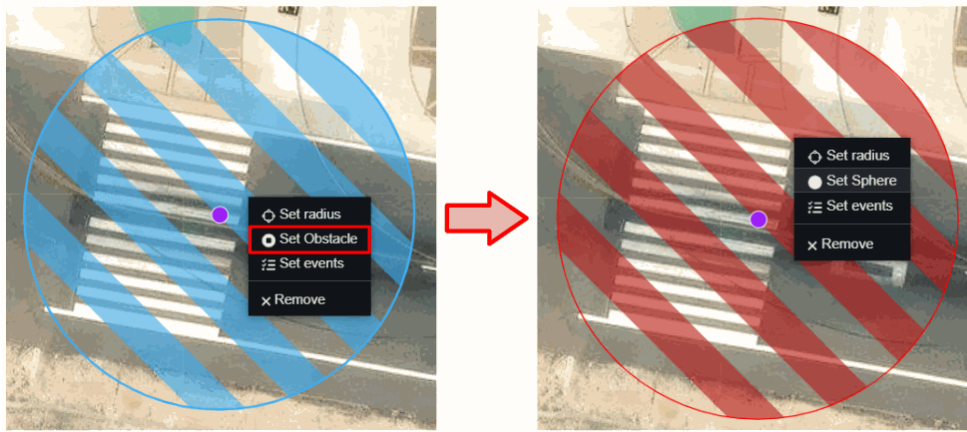

Sphere options - Set Obstacle

This functionality acts in the same way as when defining a [prism](#) as an obstacle, but taking into account **3 dimensions**. Therefore, the platform will be able to prevent the obstacle from passing over it.


- **Set Events:** Explained previously in the [Shape](#) section.
- **Remove:** Deletes the sphere.

Cylinder

The way it works is very similar to **Prism**, described above.


This tool is used to determinate a cylindrical area in which an action is wanted to be performed. When the aircraft enters or leaves the cylinder an event may be triggered and it can be used to start an automation.

To add a cylinder, click on its icon, click on the desired point on the map and drag it to set the radius. Then, when users have created all the desired cylinders, **right-click on the map** to close/finish the 'creation event'.

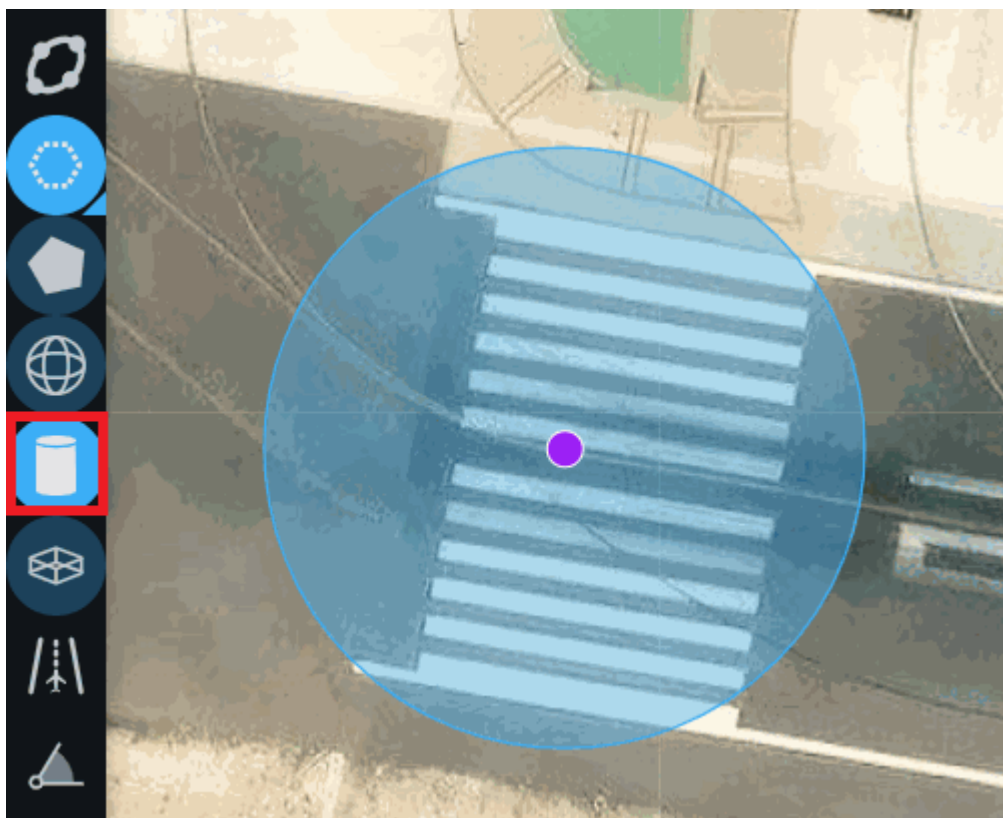

Cylinder

Like all other elements, it can be edited to move it or change its radius by clicking on the  icon:

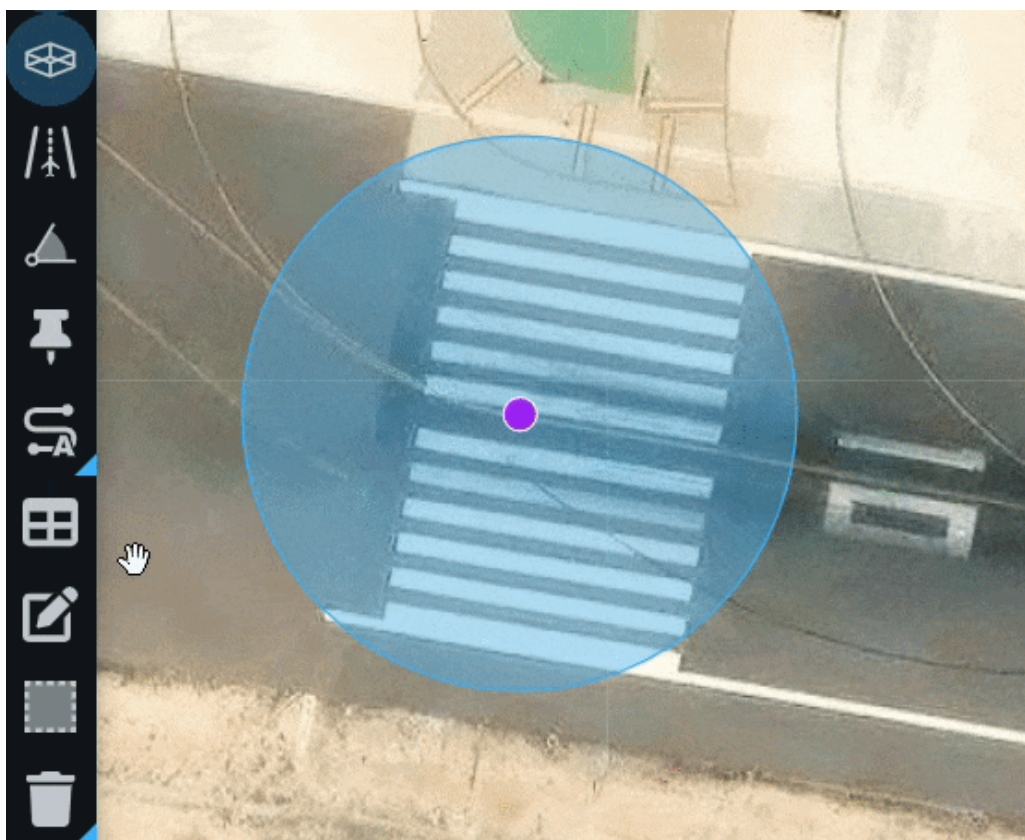

Cylinder radius

Right-clicking on the cylinder, users will access to its **options**:




Cylinder options

- **Set Height:** Users can set the upper and lower heights of the cylindrical area. By default, cylindrical areas have infinite lower and upper boundaries. It works in the same way as in the [prism](#) areas, described above.
- **Set Radius:** To accurately set the radius of the cylinder, users can enter the value manually.
- **Set Obstacle:** A cylinder can become an obstacle, an area that is desired to avoid. This option has been implemented to be used as the **geofencing** functionality.

Note

When setting the obstacle, the option "**Set Obstacle**" changes to "**Set Cylinder**". This option turns the obstacle back into a cylindrical area.

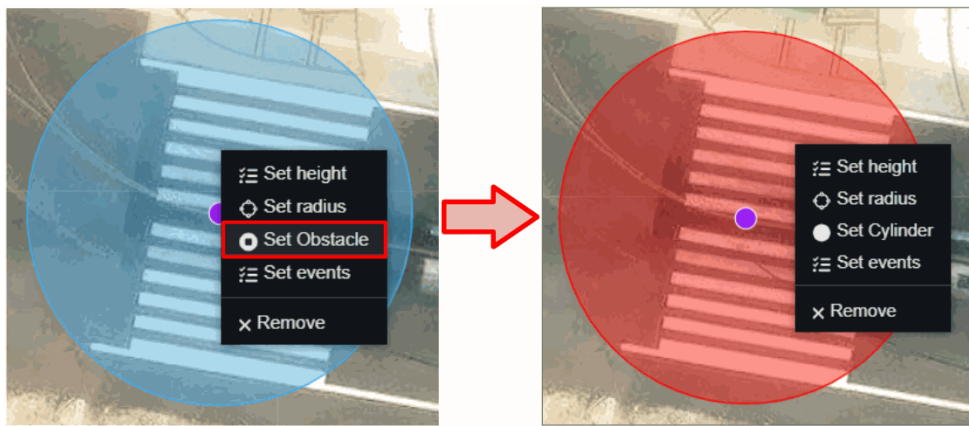


Cylinder options - Set Obstacle

This functionality acts in the same way as when defining a [prism](#) as an obstacle.

- **Set Events:** Explained previously in the [Shape](#) section.
- **Remove:** Deletes the cylinder.

Geocaging area

The geocaging function is an UAS function that helps the remote pilot to prevent the platform from exiting out of a volume defined (geocaging area) on purpose for this operation. This function operates in both horizontal plane and vertical axis.

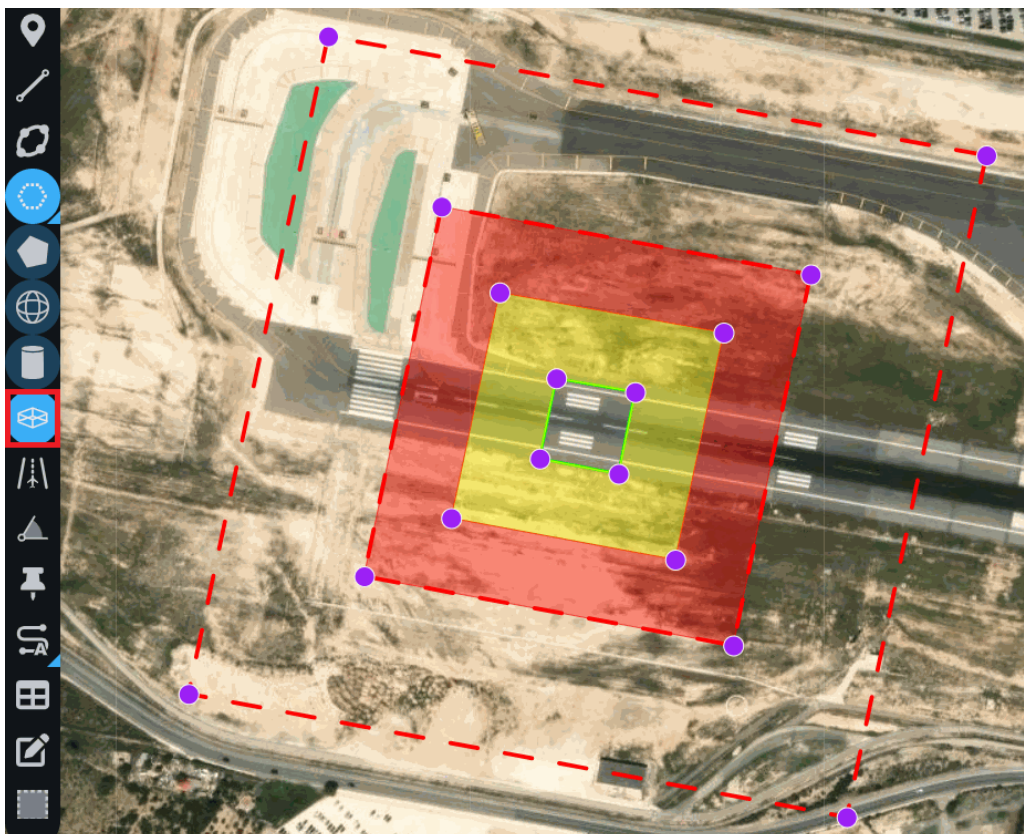

Geocaging area

There are three grades defined to accommodate different levels of risk in case of exit. This function will provide, depending on the grade, one or several barriers to the exit. These barriers can be alerts to the remote pilot that will perform the adequate actions or, optionally, can be automatic actions.

In addition to the 3 areas to comply with the different risk levels, an additional zone has been defined:


- **Flight Geography Area:** This area corresponds to the volume intended normally for the flight. It is delimited by green lines.
- **Contingency Area:** This area is the volume needed to accommodate **contingency alerts or actions**. It is yellow colored area delimited by red lines.
- **Emergency Area:** Volumen beyond the Contingency Area which is computed to accommodate **emergency warning alerts or actions**. This area is delimited by dashed red lines.
- **Additional safety zone:** Volume added after the computed Contingency and Emergency Areas, and before the "not to enter" volume. It is delimited by dashed red lines.

These contingency and emergency actions, as well as actions that can be added related to the Additional safety zone, are customizable. They have to be configured as any action associated to a volume from the [Automations menu](#) of the **1x PDI Builder** software.

An example of geocaging corrective actions that can be configured following the standard can be found in the [Geocaging - Integration examples](#) section of the **1x PDI Builder** user manual.

⚠ Important

Only 1 geocaging area can be created. However, if a second geocaging area is created that intersects with the current one, a "merge" of both geocaging areas will be performed generating a single area. For example:

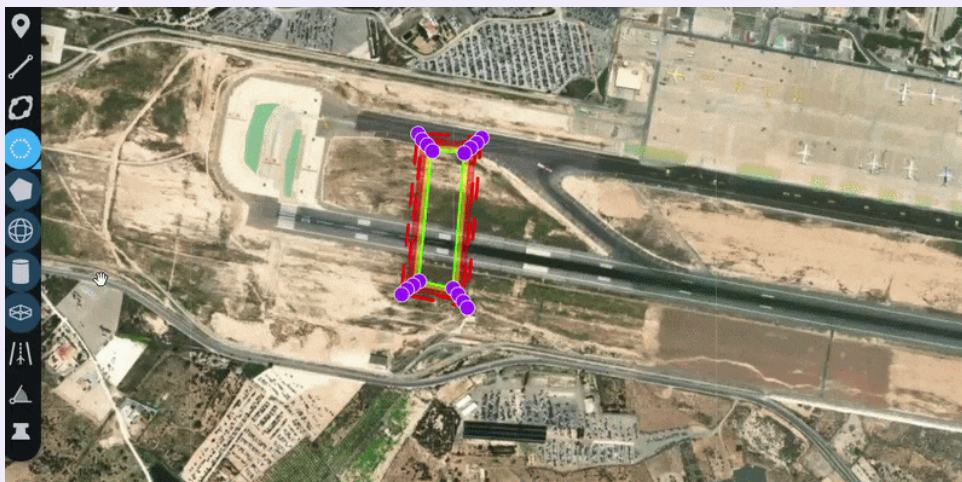


Geocaging area - Intersection of geocaging areas

If users try to create a second geocaging area that does not "touch" the first one, i.e. there is no intersection between them, the first one will be deleted if the following warning confirmation message is accepted:

Geocaging area - Warning confirmation message

Error

If users try to generate a geocaging area that "crosses" the edges, Veronte Ops will not allow it, neither when creating it from scratch nor when modifying an existing area:

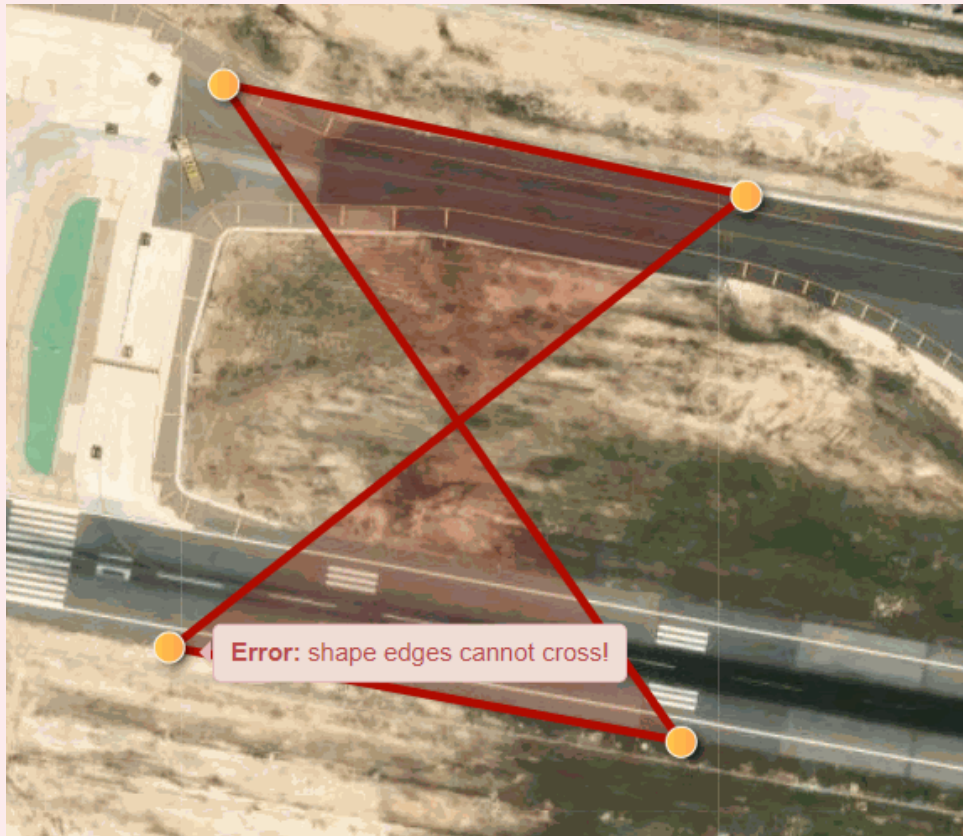


Geocaging area - Shape error

 Warning**Geocaging warnings**


- The generated area must be between 200 m² and 100 000 km². The following messages will appear if the area does not respect these limits, neither when creating it from scratch nor when modifying an existing area:

Geocaging area - Surface error

- The created area cannot have angles greater than 30°. The following message will appear when the area has angles that exceed this limit, either when it is created from scratch or when an existing area is modified:

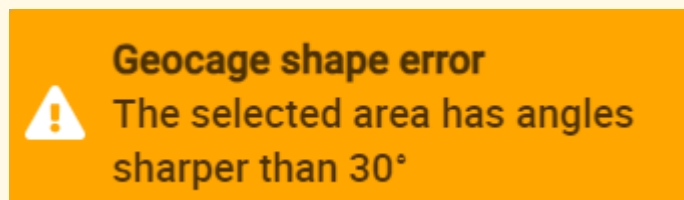**Geocaging area - Edges sharper than 30° error**

- **Geocaging Settings:**

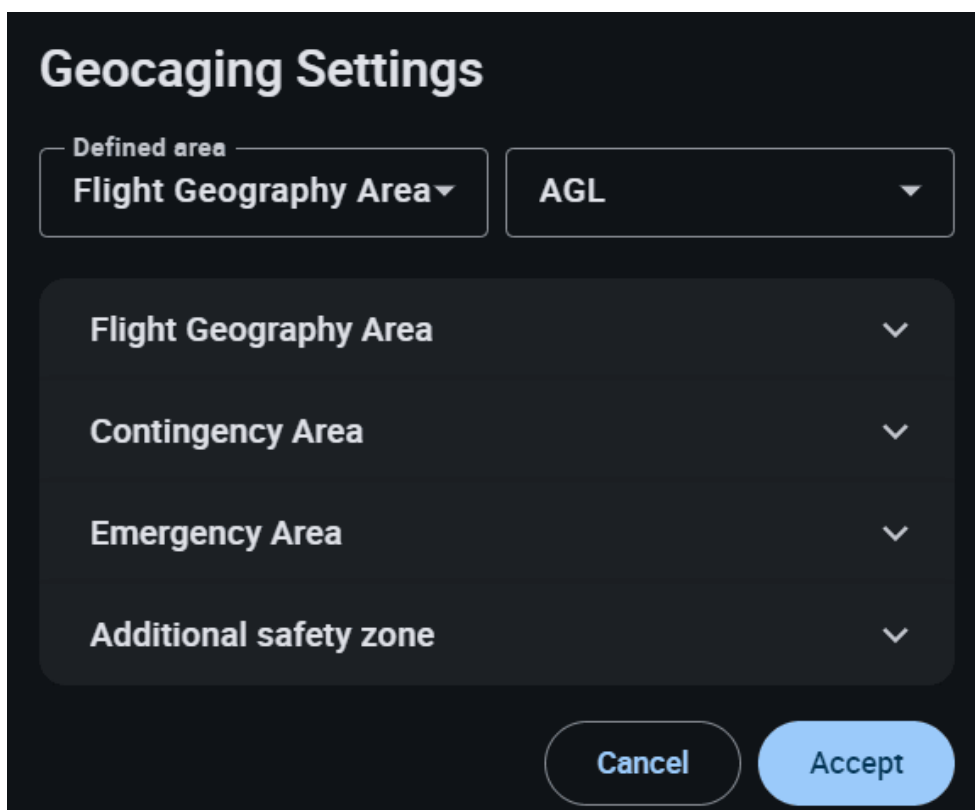A dark-themed dialog box titled "Geocaging Settings". At the top, there are two dropdown menus: "Defined area" with "Flight Geography Area" selected, and "AGL" with a downward arrow. Below these is a list of four items, each with a downward arrow: "Flight Geography Area", "Contingency Area", "Emergency Area", and "Additional safety zone". At the bottom right, there are two buttons: "Cancel" and "Accept".

Geocaging options - Settings

- **Defined area:** Users have to choose to which zone they want the drawn area to correspond, whether Flight Geography Area or Emergency Area, and the rest of the zones will be assigned automatically based on the configured margins.
- **Elevation:** Select between AGL, MSL or WGS84 reference system to define the altitude of the different zones within the geocaging area.
- **Flight Geography Area:**
 - Set height limits: Users must set the desired **upper limit** for this area. In addition, the lower limit can also be defined (optional).
 - Set Events: Users must associate this area to the specific event that must be previously defined in the **1x PDI Builder** software to trigger an alert or a corrective action. This option is explained in detail in the [Shape](#) section above.
- **Contingency Area / Emergency Area / Additional safety zone:**
 - Set Events: Users must associate this area to the specific event that must be previously defined in the **1x PDI Builder** software to trigger an alert or a corrective action. This option is explained in detail in the [Shape](#) section above.
 - Contingency / Emergency / Additional safety zone width: Depending on the Defined area selected when creating the geocaging area, this margin width will act differently in the calculation of the area size.
 - Flight Geography Area selected: The size of these zones is calculated by adding the margin entered here to the width and altitude of the previous area (3D zones).
 - Emergency Area selected: The calculation for the size will be:
 - For the Additional safety zone, adding the margin entered here to the width and altitude of the previous area (3D zone).
 - For the Contingency and Flight Geography Areas, subtracting the margin entered here to the width and altitude of the previous area (3D zones).

If the defined geocaging area complies with the standard, the "Geocaging not OK" bit (ID 504) will be **TRUE**, otherwise it will be FALSE.

Note

This bit checks the following:

- Regarding **area**, the geocaging area created must be between 200 m² and 100 000 km².
- In terms of elevation:
 - Must be defined **absolute**, not relative.
 - All of the heights of the vertical limits shall be in the **same reference system** (MSL, AGL, WGS84).
 - **Upper limit** must **always** be set.
 - **Lower limit** must not be set in any area, except in the Flight Geography area where it is optional.

Example

The following actions are an example of user-configurable corrective actions that comply with the standard:

- An alarm bit is activated when entering the Contingency Area.
- A command is sent to switch to the "**Return to home**" phase when entering the Emergency Area.
- The **FTS** is activated when entering the Additional safety zone.

In the case where the corrective actions are as described above, the principle of operation will be as follows:

If the Flight Geography Area limit is trespassed, the platform enters in the Contingency Area and the defined "Contingency area" bit will turn **FALSE**, causing an alert to appear next to the platform icon (this alert must be configured in the settings of the platform icon, the user can find an explanation of this in the [Platform icon - Veronte Ops configuration](#) section of the present manual). Next, if the platform exits this area and enters the Emergency Area, the current flight phase will switch to **Return to home**. Finally, if the platform

also exits this area and enters the Additional safety zone, the **FTS** will be activated.

Geocaging Vs Geofencing

Geocaging defines an extensive 3D operational flight area by operating in both the horizontal and vertical axes and restricts movement outside of it. In this system, the behavior is that alerts and responses configured in the **1x PDI Builder** software are triggered, depending on the zone in which the platform is located.

Geofencing restricts or prevents entry into specific areas by creating virtual boundaries around physical locations. In this system, a repulsion is implemented around the user-defined obstacle to achieve geofencing behavior.

Runway

This option allows the user to configure a **Runway** which is used during flight phases.

Note

The linking of a runway to an automation is done in the **Operation Panel**, for more information about this, see [Operation Panel - Operation](#) section of this manual.

To add a runway, click on its icon, click on a point on the map to define the start and click on a second point to define the end of the runway.



Runway

Note

The loiter position is automatically defined and it is identified by this icon: , as can be seen in the image above.

By accessing the mission edition ( icon) it is possible to modify the position of the start and end points of the runway, as well as the position of the loiter point:



Runway position

Right-clicking on the start, end or loiter point of the runway, users will access to its **options**:



Runway options

- **Runway Start/End/Loiter Settings:** The coordinates of this runway point can be edited manually. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).
- **Runway Settings:** The following parameters can be configured:

A screenshot of the 'Runway 0' settings screen. The screen is dark with white text. At the top, it says 'Runway 0'. Below this is a button with a right-pointing arrow, labeled with a red circle '1'. Below the arrow button are two input fields for coordinates, labeled with a red circle '2'. The first field shows 'Lat: 38.2846 Lon: -0.5750 Alt: 94.9200' and the second shows 'Lat: 38.2843 Lon: -0.5735 Alt: 94.4100'. Below these are two input fields for 'Margin' and 'Margin Reverse', both set to '0' and labeled with a red circle '3'. Below the margin fields is a 'Loiter Position' section with a coordinate input field showing 'Lat: 38.2850 Lon: -0.5750 Alt: 128.9700', labeled with a red circle '4'. At the bottom right are 'Cancel' and 'Save' buttons.

Runway options - Settings


1. **Runway direction:** The direction of the runway is defined here with an arrow.

By default it is → , but user can define it as desired clicking on it. The available options are → , ← and **AUTO**.


Note

When the **AUTO** option is selected, the runway direction will be defined by the **wind direction**.

2. **Runway coordinates:** The user can manually introduce the coordinates of the start and end point of the runway. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).
 3. **Margin/Margin Reverse:** Percentage of the runway distance at which the airplane will try to touch the ground.
 4. **Loiter Position:** To accurately define the loiter point of reference (**Runway Loiter**), its coordinates and the altitude that the aircraft will reach during climb, can be defined in this option. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).
- **Configure Alarms:** When an alarm is selected, the aircraft shall perform the actions associated to that alarm on the selected runway.

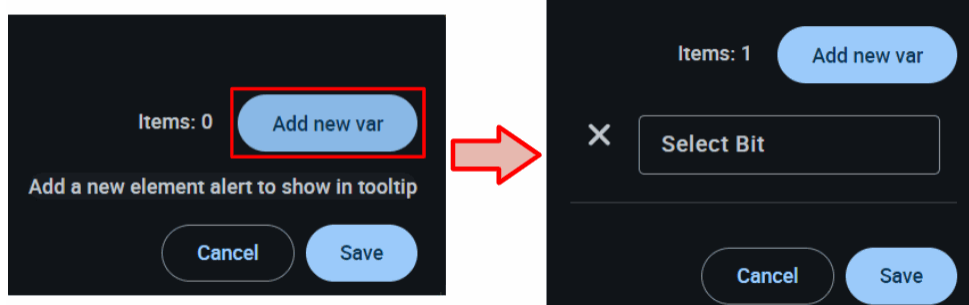**Runway options - Configure Alarms**

Alarms are configured with bit variables, users can select any bit they want.

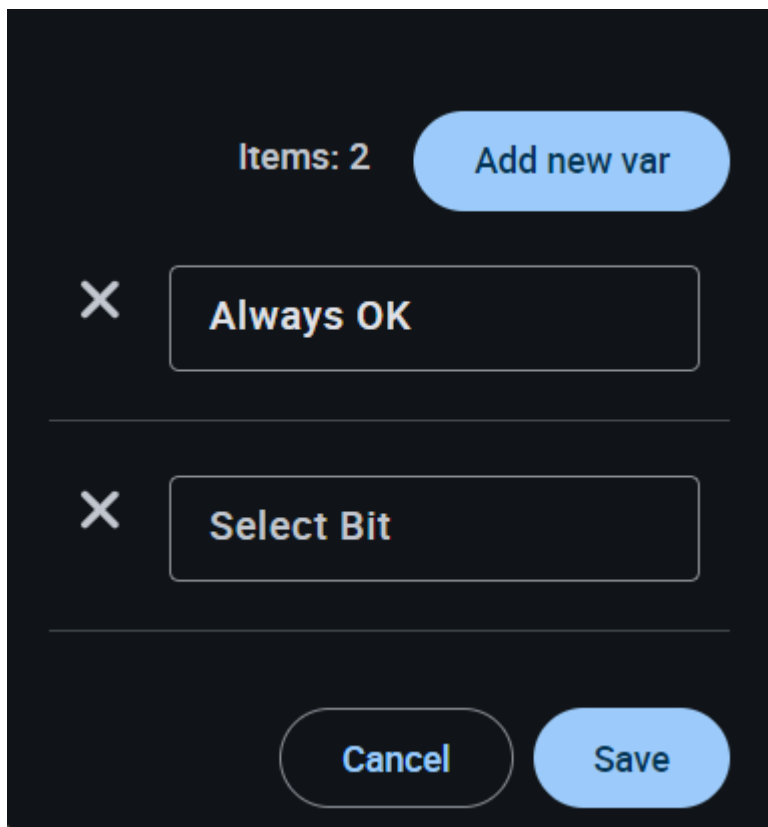

Runway options - Alarms

- **Remove Runway:** Deletes the runway.

Spot

This option allows the user to configure a **Spot** which is used during flight phases. A spot refers to a kind of runway where a initial point and its azimuth is defined. Besides, it is necessary to define a delta angle.

Note

The linking of a spot to an automation is done in the **Operation Panel**, for more information about this, see [Operation Panel - Operation](#) section of this manual.



Spot

Note


The loiter position is automatically defined and it is identified by this icon: , as can be seen in the image above.

By accessing the mission edition ( icon) it is possible to modify the **position** of the 'spot' and also the position of the loiter point:



Spot position

Right-clicking on the 'spot' or loiter point, users will access to its **options**:

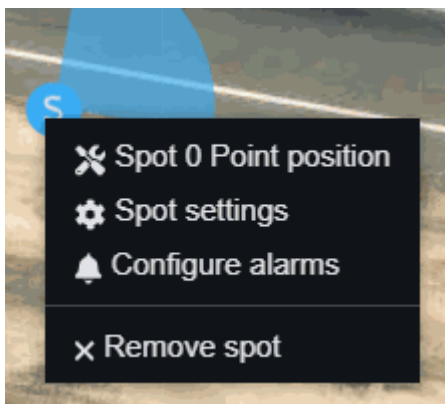

Spot options

- **Spot Point/Loiter Settings:** The coordinates of this point can be edited manually. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).
- **Spot Settings:** The aircraft will land or take-off using the best orientation computed within the area bounded by the parameters entered here:

Spot 0 Point

Position: Lat: 38.2841 Lon: -0.5743 Alt: 97.0200

Azimuth: 9,9999997090929 °[0,360]  Delta: 89,9543738355392 °[0,360]

Loiter Position: Lat: 38.2845 Lon: -0.5744 Alt: 119.6800


Cancel Save

Spot options - Settings

- **Position:** The user can manually introduce the coordinates of the 'spot' point. Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).
- **Azimuth and Delta:** Users must configure the desired **azimuth** and **delta** for the spot. The units available for these angular values are
 - $[0, 360]$, $^{\circ}$ ' " , rad , $rad[0, 2\pi]$, $^{\circ}$, $rad[-\pi, \pi]$ and $^{\circ}[-180, 180]$.

Note

Azimuth parameter can also be defined as relative to another point instead of absolute. To do this, click on the  icon.

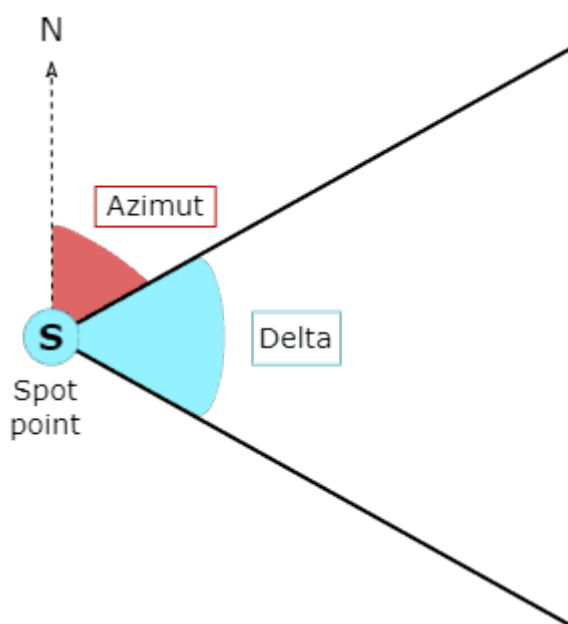

Spot parameters

- **Loiter Position:** To accurately define the loiter point of reference (**Spot Loiter**), its coordinates and the altitude can be defined in this option.

Its configuration is the same as for a waypoint (a detailed explanation of this has been described in the [Waypoint](#) section above).

- **Configure Alarms:** When an alarm is selected, the aircraft shall perform the actions associated to that alarm on the selected spot. It is configured in the same way as [runways](#), described above.
- **Remove Spot:** Deletes the spot.

Marks


This tool allows to set an event mark on a patch. Marks are useful to initiating automations. When the aircraft flies over it, an event is triggered and can be used as a condition to start a set of actions: add a lap to a counter, payload launch, take a photo, start video recording, etc.

Note

The linking of a mark to an automation is done in the **Operation Panel**, for more information about this, see [Operation Panel - Operation](#) section of this manual.

To place a mark, it is **first required to create a patch**. The elements described above that are patches are **waypoints**, **segments** and **orbits**. To add it, select the tool and click on the desired patch. Then, when users have created all the desired marks, **right-click on the map** to close/finish the 'creation event'.

Initially, new marks appear as a pin (). If the user links an event to one of them, the icon selected for this event will be displayed.

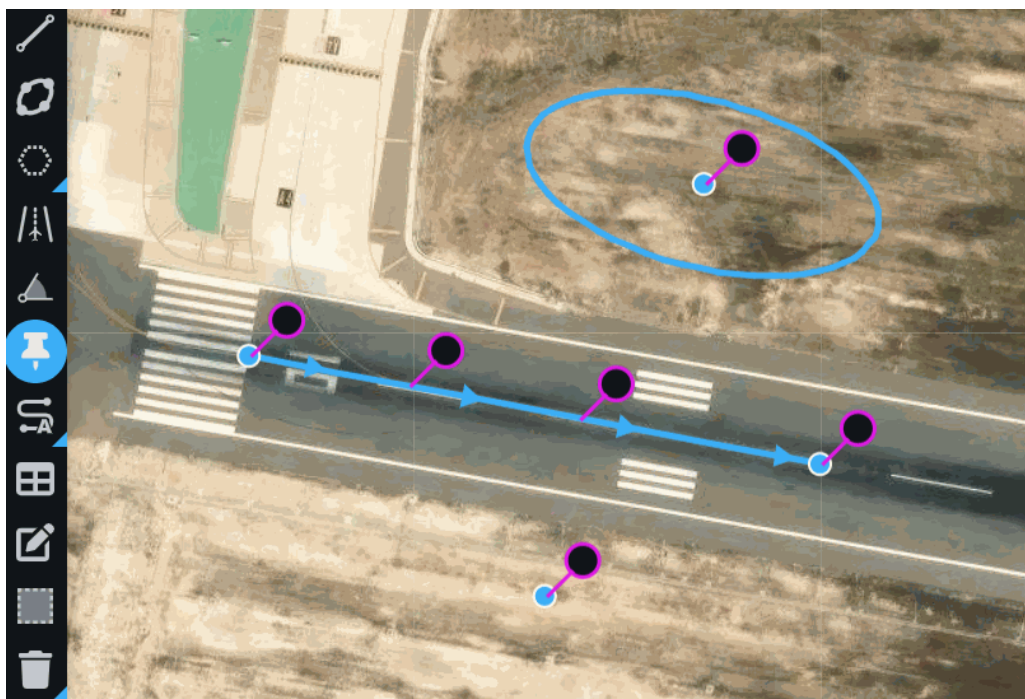


Mark

Marks can be moved along the patch by clicking on the  icon:


Note

A mark can only be displaced if it is in a segment.

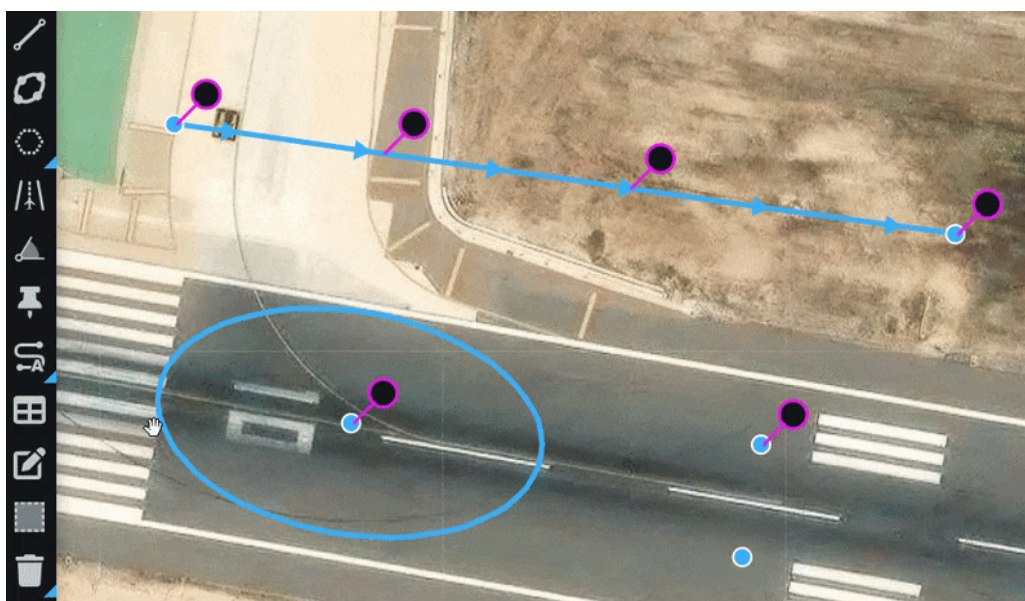

Marks moved

Right-clicking on the mark, users will access to its **options**:

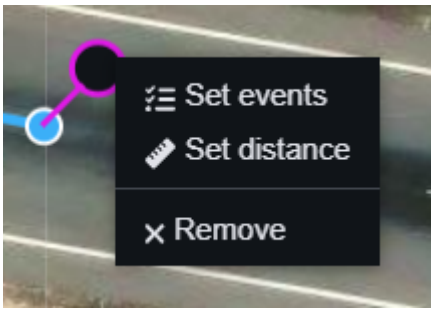


Mark options

- **Set Events:** This option allows to associate this Mark to a specific event. This works as follows, in this panel the user links this Mark to an "Event Marks".

⚠ Important

To do this, it is first necessary to have defined (renamed) an Event Marks in the **UI menu of the 1x PDI Builder software**, as described and explained in the corresponding section of the **1x PDI Builder** manual, click [here](#) to access it.

Simply check the desired Event Mark to be associated:

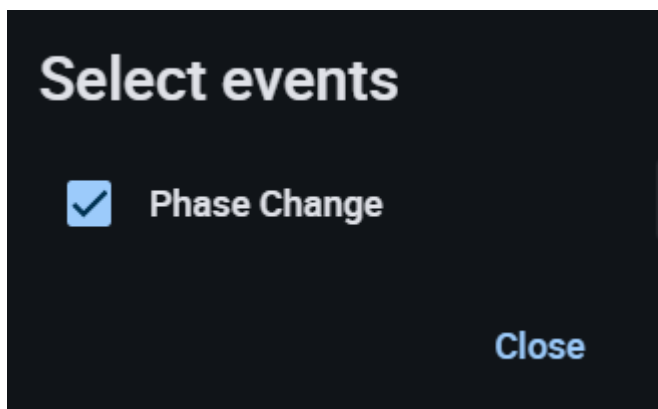


Mark options - Set Events

📘 Note

- Users can associate a waypoint to as many Event Mark as there are created (a maximum of 16 Event Mark can be defined in the system).
- Different Marks can be linked to the same Event Mark.

Moreover, if the Event Mark that is linked to the Mark has an associated icon, the icon will appear at this MARK.

In addition, when clicking on it, the name of the Event Mark defined by the user will appear in its description. An example is shown below:

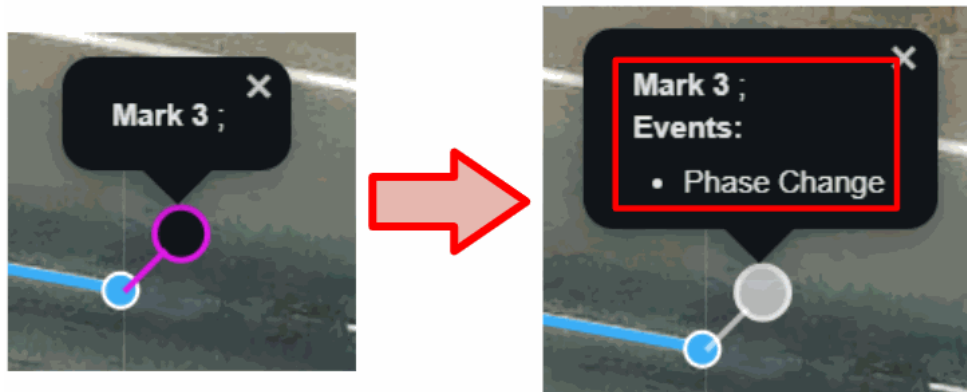

Mark information - Set Events

- **Set distance:** This distance is the horizontal distance along the patch to the starting waypoint. If the mark is attached to a waypoint, distance will be zero.

The image shows a dark-themed configuration window titled 'Mark - Set distance'. It contains four input fields, each with a label and a dropdown arrow. The first field is 'Patch type*' with the value 'Route'. The second field is 'Patch Selected*' with the value 'Waypoint 1'. The third field is 'Type*' with the value 'Referred to start'. The fourth field is 'Distance' with the value '0' and a unit 'm' to its right. At the bottom of the window are two buttons: 'Cancel' and 'Save'.

Mark - Set distance


- **Patch type:** Selects the specific flight phase or mode (e.g., Approach, Route, Taxi, etc.) to which the Mark will be applied.

- **Patch Selected:** Indicates the waypoint used as the anchor point for the calculation.
- **Type:** Defines the spatial reference criterion within the selected segment for the positioning of the Mark.
- **Distance:** Numerical value in meters that determines the precise spatial offset along the trajectory.
- **Remove Mark:** Deletes the mark.

Generate route

To be able to create these elements, it is first necessary to have the application **Veronte Terrain Provider** running.

If this tool is not initialized, the following warning message will appear when trying to use any 'Generate Route' element:

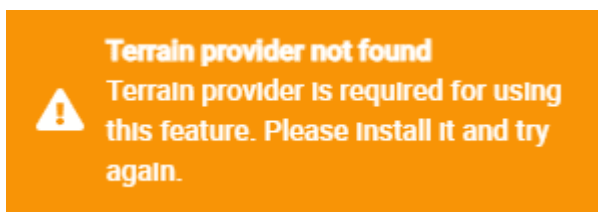


Generate route warning message

Spiral




Spiral tool draws a spiral that can cover a target area.

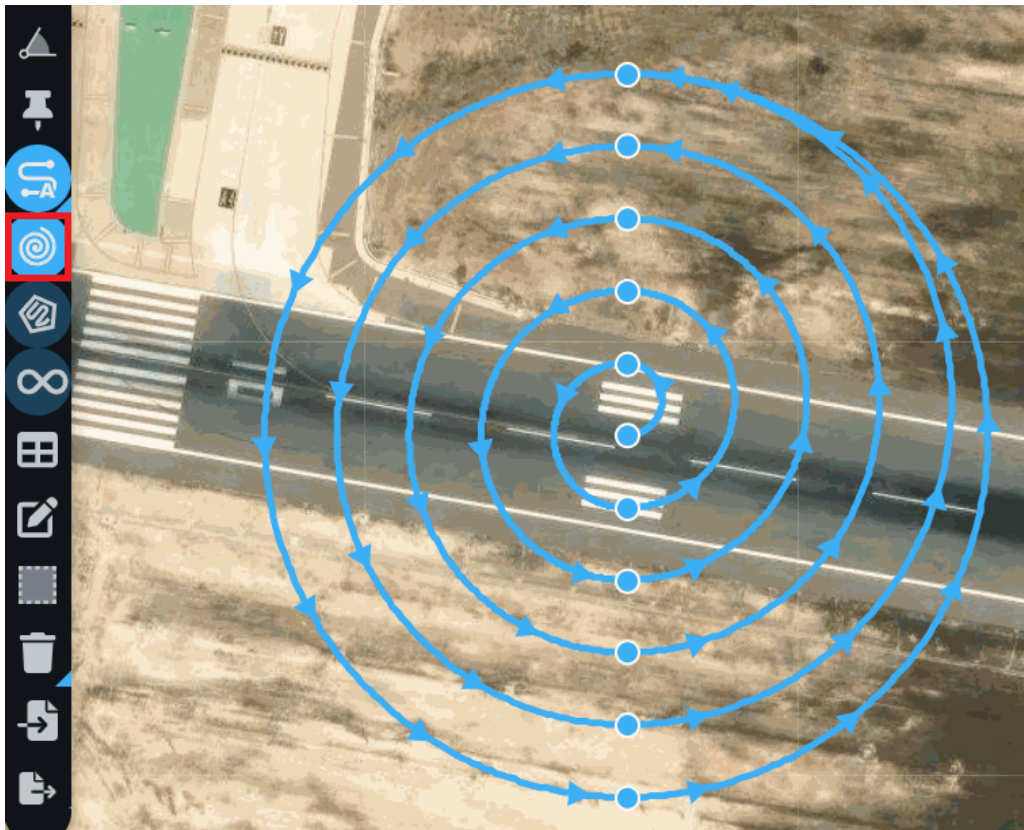


Generate route - Spiral

The spiral options are accessed in the same way as for the other elements described above, and are the same as the **Waypoint** options but with the addition of 3 more:

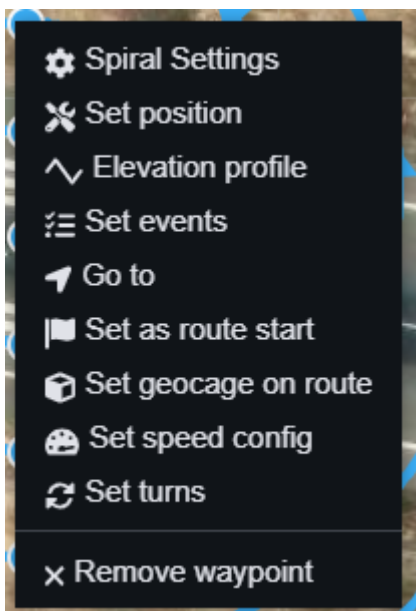

Generate route - Spiral options


- **Spiral Settings:** The following parameters can be configured:
 - **Invert:** When enabled, the direction of the route will be the opposite to the direction configured below.
 - **AGL:** If enabled, the waypoint altitude is set in AGL, otherwise it is expressed in MSL.
 - **Radius:** Spiral maximum radius.
 - **Rounds:** The number of spiral rounds.
 - **Altitude (MSL/AGL):** Altitude of the waypoints expressed in MSL/AGL (depending on whether the AGL parameter is enabled or disabled).
 - **Direction:** Direction of the spiral axes on the map.

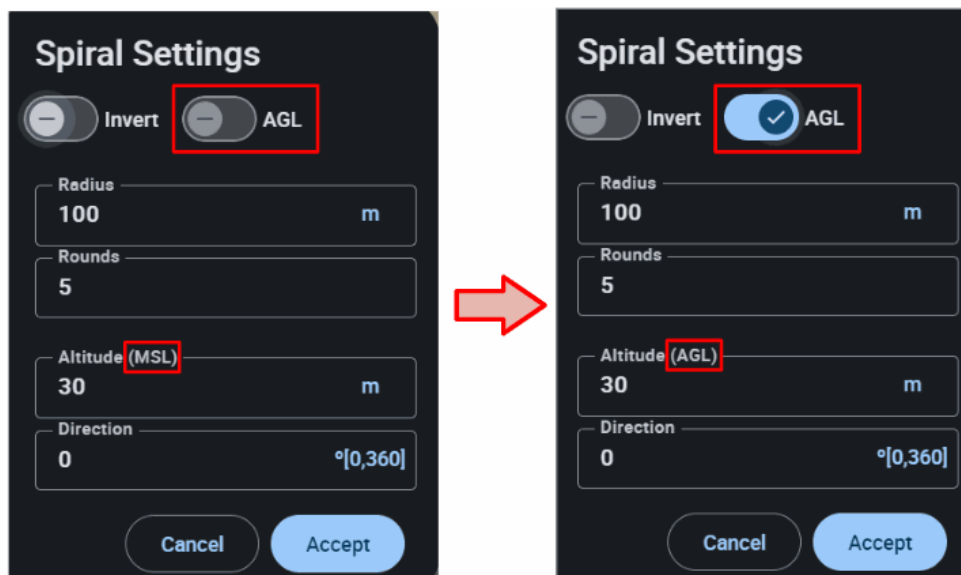

Generate route - Spiral Settings

⚠ Warning

If the user 'refreshes' Veronte Ops, it will no longer be possible to access this configuration menu.

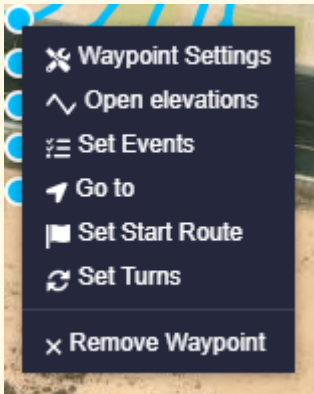


Generate route - Spiral options after refresh

- **Set geocage on route:** Allows configuring a geocaging zone around the segment. For more information, consult [Geocaging area](#).
- **Set Turns:** The spiral also acts as a [curved segment](#) so it has the same option as this; a detailed explanation has been described in the [curved segment](#) section above.

Photogrammetry Mission




Photogrammetry Mission tool allows users to draw a prism on the map to automatically generate a mapping mission.

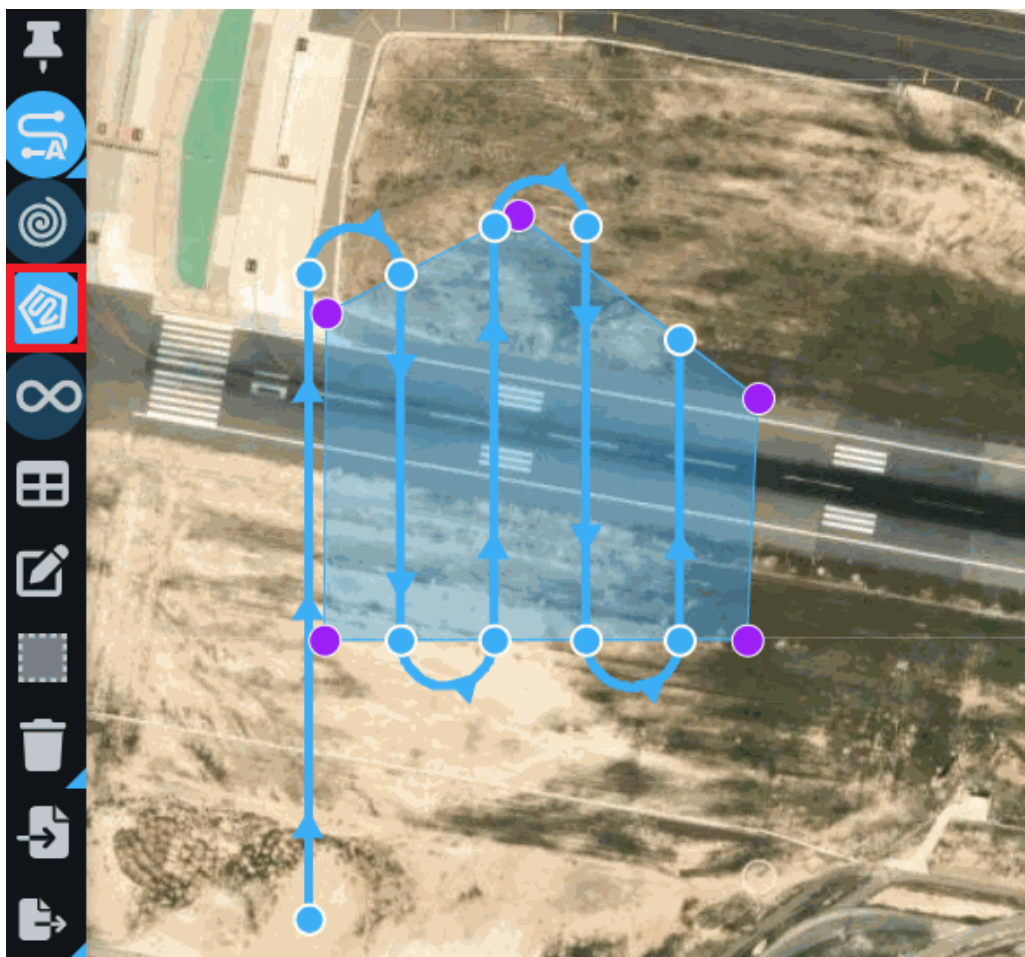


Generate route - Photogrammetry Mission

The photogrammetry mission options are accessed in the same way as for a prism.

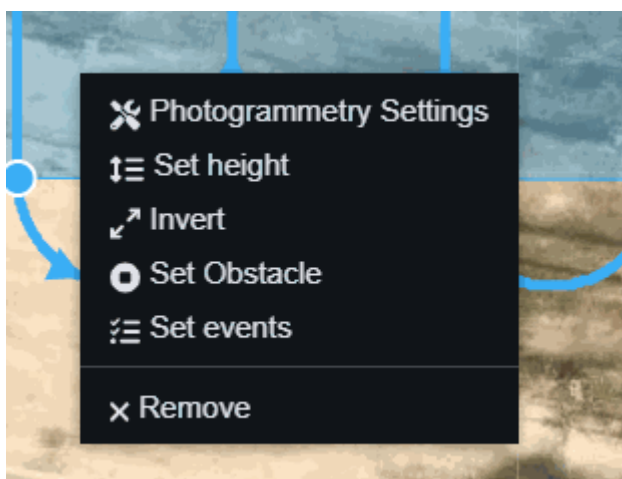

Generate route - Photogrammetry Mission options

- **Photogrammetry Settings:** The following parameters can be configured:
 - **Invert:** When enabled, the direction of the route will be the opposite to the direction configured below.
 - **AGL:** If enabled, the waypoint altitude is set in AGL, otherwise it is expressed in MSL.
 - **Events Volumes:** As with all volumes, users can link a predefined Event Volume to this photogrammetry mission. This configuration option is the same as the Set Events option.

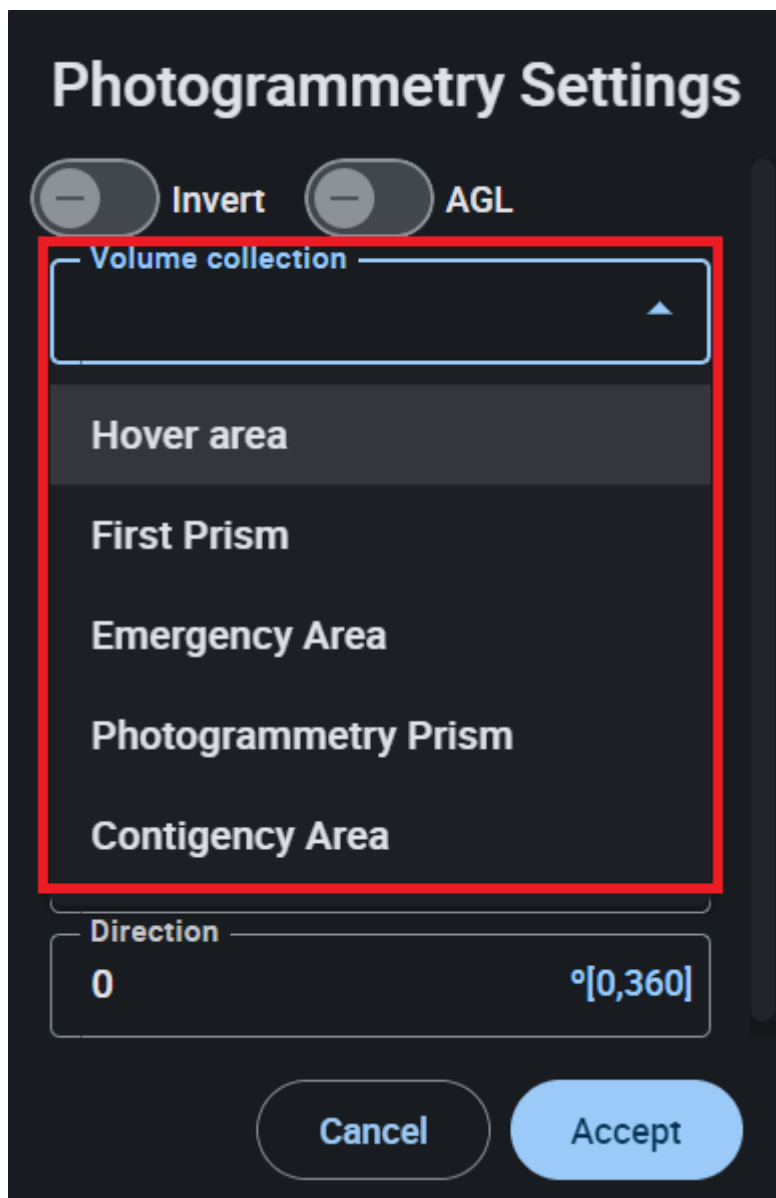

Generate route - Photogrammetry Settings Events Volumes


- **Margin:** This option allows the user to add boundary margins for the route to each side of the photogrammetry mission.

- **Curve radius: Radius of the route turns.**
- **Distance between segments: Distance between segments can be modified.**

Note

Depending on the curve radius value and the distance between segments, there are three cases for this part of the route (the radius must be set according to the minimum achievable by the platform):

- **Radius 0 $\Rightarrow$ There are no curves between passes, but straight lines. This option is used with multicopters, which are able to perform this kind of paths.**
 - **Radius is smaller than half the distance between segments ($R < \frac{d}{2}$) $\Rightarrow$ Veronte Ops generates a semicircle with the diameter equal to the distance between parallel segments.**
 - **Radius bigger than half the distance between segments ($R > \frac{d}{2}$) $\Rightarrow$ The path between straight lines is formed by two curves and a straight line.**
- **Altitude (MSL/AGL): Altitude of the waypoints expressed in MSL/AGL (depending on whether the AGL parameter is enabled or disabled).**
 - **Direction: Direction of the route generated on the map.**

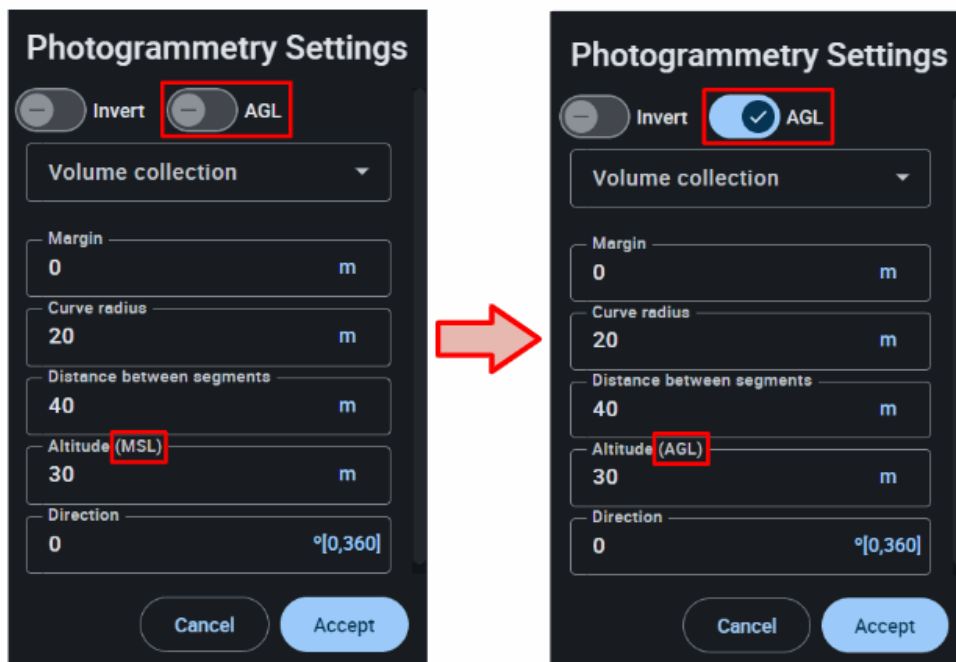

Generate route - Photogrammetry Settings


- **Set Height:** This option is configured in the same way as for a prism, refer to [Prism](#) section for a detailed explanation.
- **Invert:** This option is configured in the same way as for a prism, refer to [Prism](#) section for a detailed explanation.
- **Set Obstacle:** This option is configured in the same way as for a prism, refer to [Prism](#) section for a detailed explanation.
- **Set Events:** Explained previously in the [Shape](#) section.

Warning

If the user 'refreshes' Veronte Ops, the photogrammetry mission will become a mapping route with a "normal" [prism](#), therefore its options will be the same as those of a prism. Consequently, the "Photogrammetry Settings" option will disappear, and it will no longer be possible to access the "Photogrammetry Settings" configuration menu.

Note

The options for the waypoints forming the route generated for this photogrammetry mission are the same as for a "normal" waypoint. For more information on waypoint configuration, see [Waypoint](#) section described above.

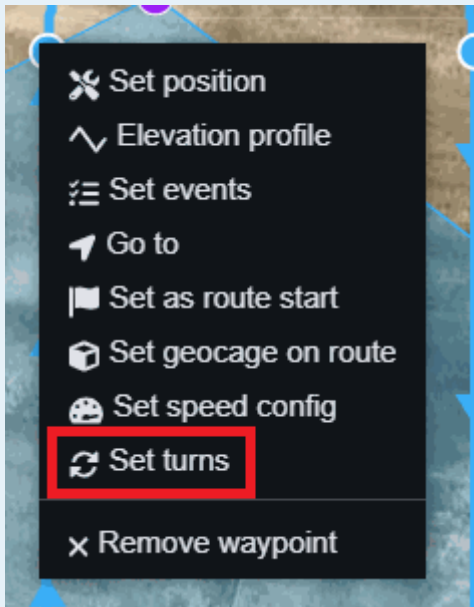


Generate route - Waypoint route options

Figure




Figure. This tool allows users to create their own mission from a pre-designed route. To create it, click and drag to make the figure as big as desired.

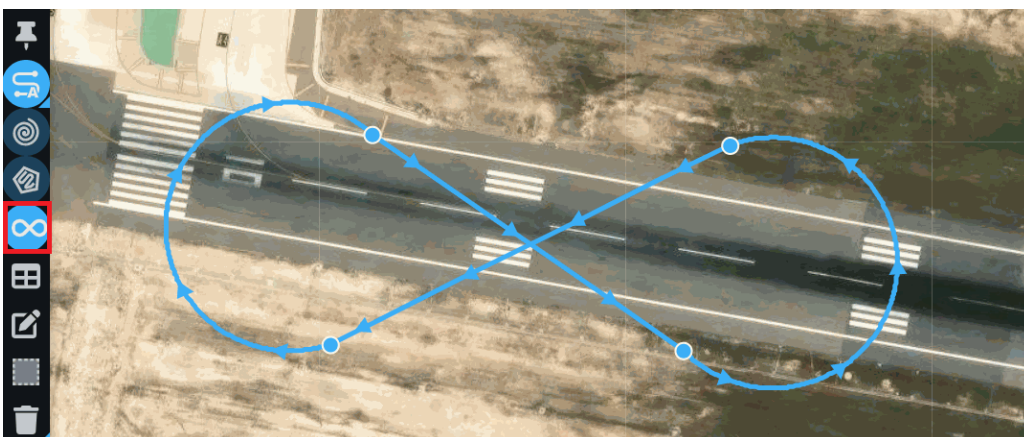

Generate route - Figure

The figure options are accessed in the same way as for the other elements described above, and are the same as the **Waypoint** or **curved segment** options, depending on the waypoint in the route. This is because it is basically made up of straight and curved segments.

However, an extra option appears to access the 'Figure Settings':

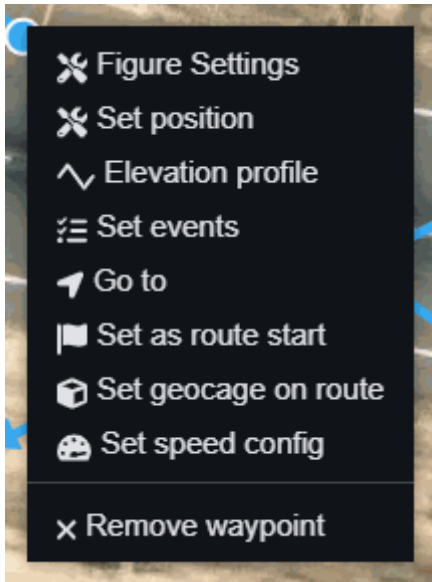

Generate route - Figure options


The following parameters can be configured:

- **Invert:** When enabled, the direction of the route will be the opposite to the direction configured below.
- **AGL:** If enabled, the waypoint altitude is set in AGL, otherwise it is expressed in MSL.
- **Type:** The available options are:
 - **Figure of 8:** This is a path in the shape of 8/infinity.
 - **Racetrack:** This route is like a racetrack.



Generate route - Figure racetrack

- **Altitude (MSL/AGL):** Altitude of the waypoints expressed in MSL/AGL (depending on whether the AGL parameter is enabled or disabled).

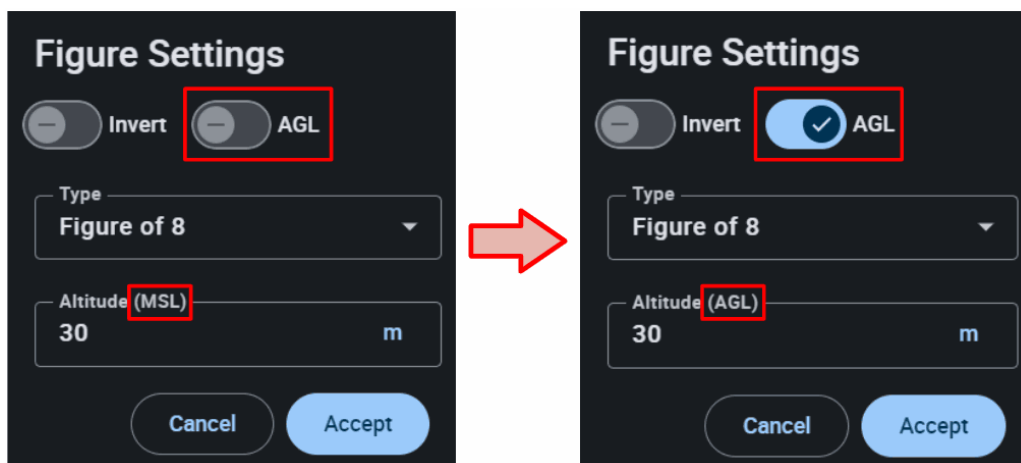

Generate route - Figure Settings

Warning


If the user 'refreshes' Veronte Ops, it will no longer be possible to access this configuration menu. Therefore, the figure will act as a "normal segment".

Mission panel

This mission panel allows the user to monitor and manipulate the waypoints, prisms, cylinders and spheres created.

- **Waypoints**

The following fields can be found in this menu:

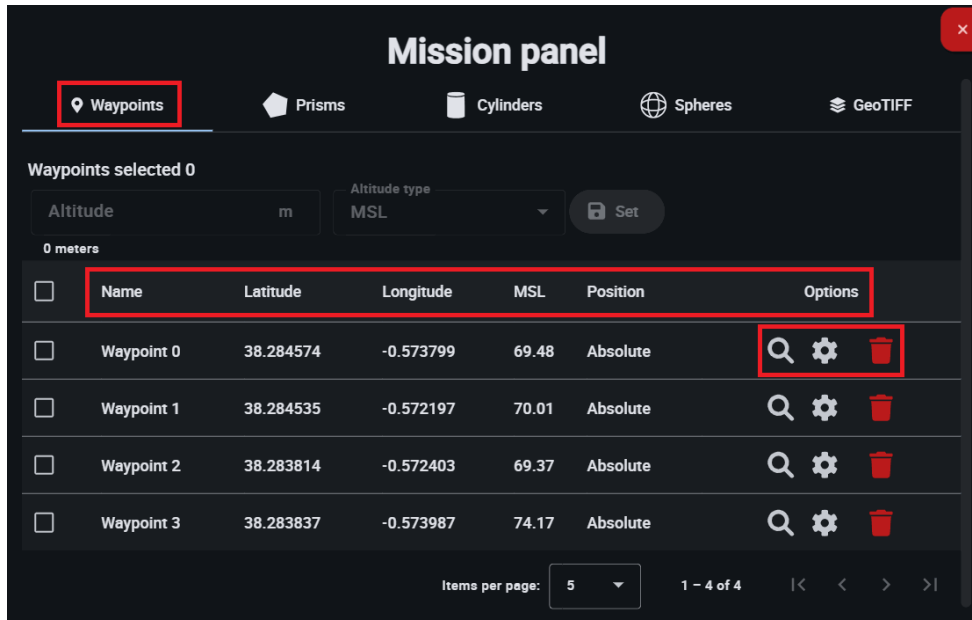

Mission panel - Waypoints


- **Name:** Name of this waypoint.
- **Latitude/Longitude/MSL:** Coordinates of the waypoint.
- **Position:** Absolute or Relative.
 - **Absolute** means that the position of the element is fixed.
 - **Relative** indicates that its position is relative to the position of another element and may change during the operation.
- **Options:**
 -  **Search:** Clicking here will center and zoom the waypoint on the map.
 -  **Edit:** Opens the Waypoint Settings menu. For more information on this configuration menu, click [here](#).
 -  **Delete:** Deletes this waypoint.

It is also possible to modify the altitude of one, several or all the selected waypoints by using the Altitude edit function on the top of the list.

Note

Selecting all will select the waypoints on all pages of the panel.


Users must enter the desired altitude value, select the altitude type (WGS84, MSL or AGL) and finally click 'Set'.

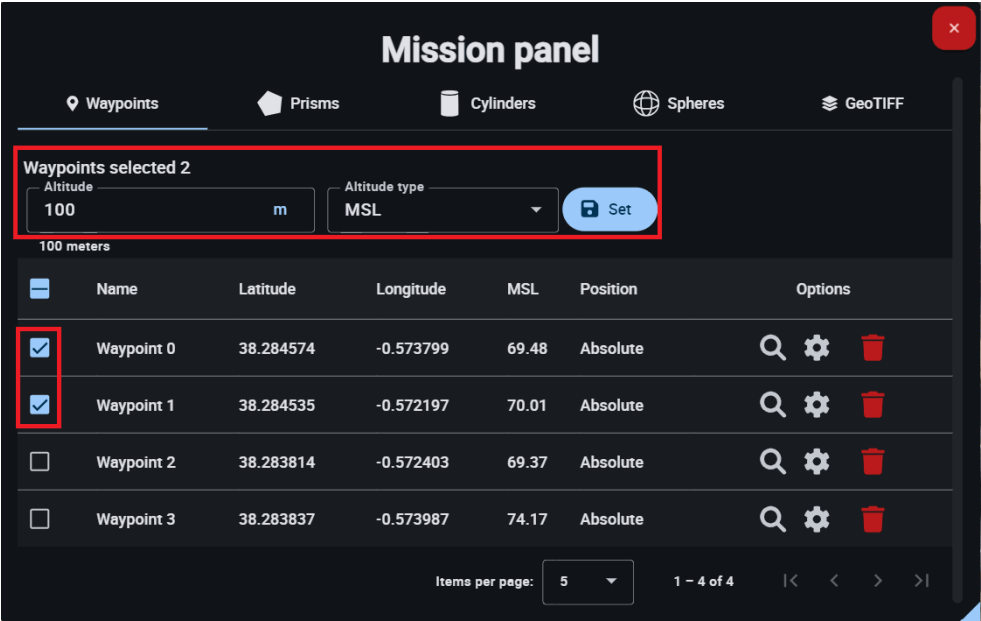

Middion panel - Waypoints altitude

- **Prisms**

The following fields can be found in this menu:

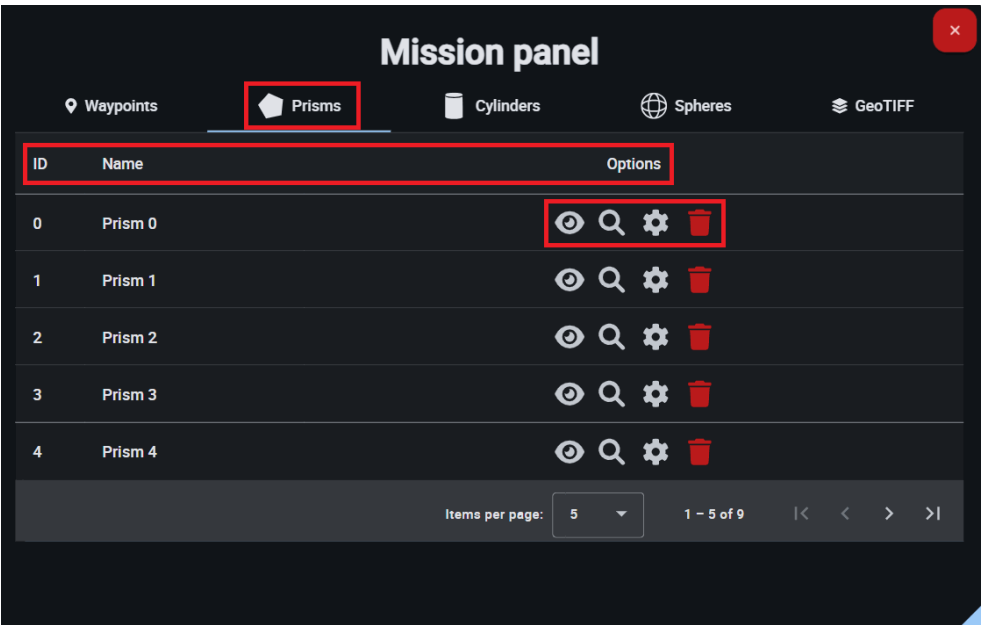

Mission panel - Prisms


- **ID:** Feature Id of this prism.
- **Name:** Name of this prism.
- **Options:**
 -  **Show/hide:** It is possible to show/hide the prism on the map by clicking here.
 -  **Search:** Clicking here will center and zoom the prism on the map.
 -  **Edit:** Opens the prism height editing menu. For more information on these settings, click [here](#).
 -  **Delete:** Deletes this prism.

 Important

When the prism is part of a geocaging area, the Edit option will not appear in this panel. This is why, in the [image above](#) Prisms 0 to 3 do not have this option available.

- **Cylinders**

The following fields can be found in this menu:

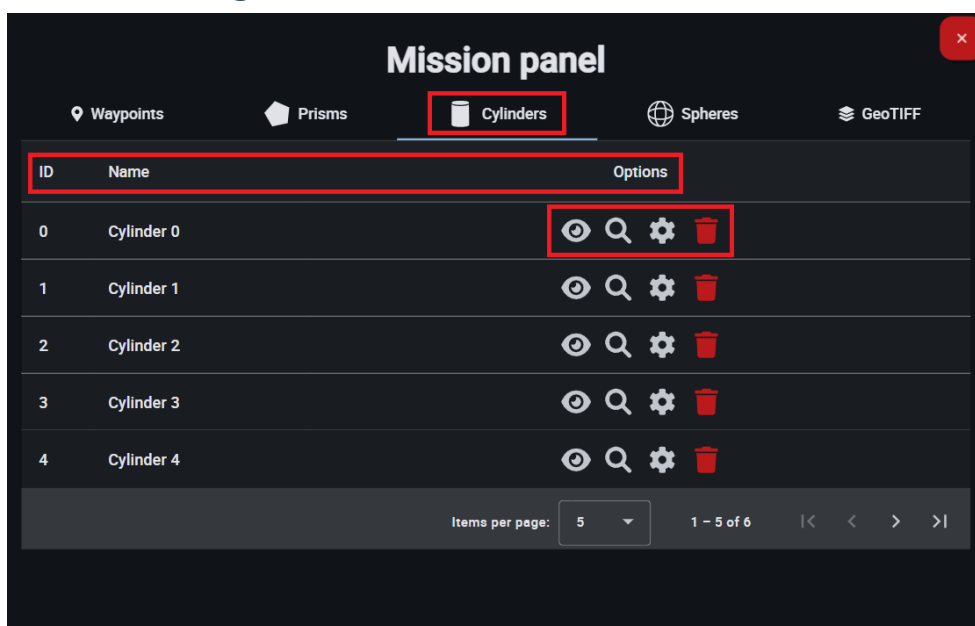


Mission panel - Cylinders

- **ID:** Feature Id of this cylinder.
- **Name:** Name of this cylinder.
- **Options:**
 -  **Show/hide:** It is possible to show/hide the cylinder on the map by clicking here.
 -  **Search:** Clicking here will center and zoom the cylinder on the map.
 -  **Edit:** Open the cylinder height editing menu. For more information on these settings, click [here](#).
 -  **Delete:** Deletes this cylinder.

• Spheres

The following fields can be found in this menu:

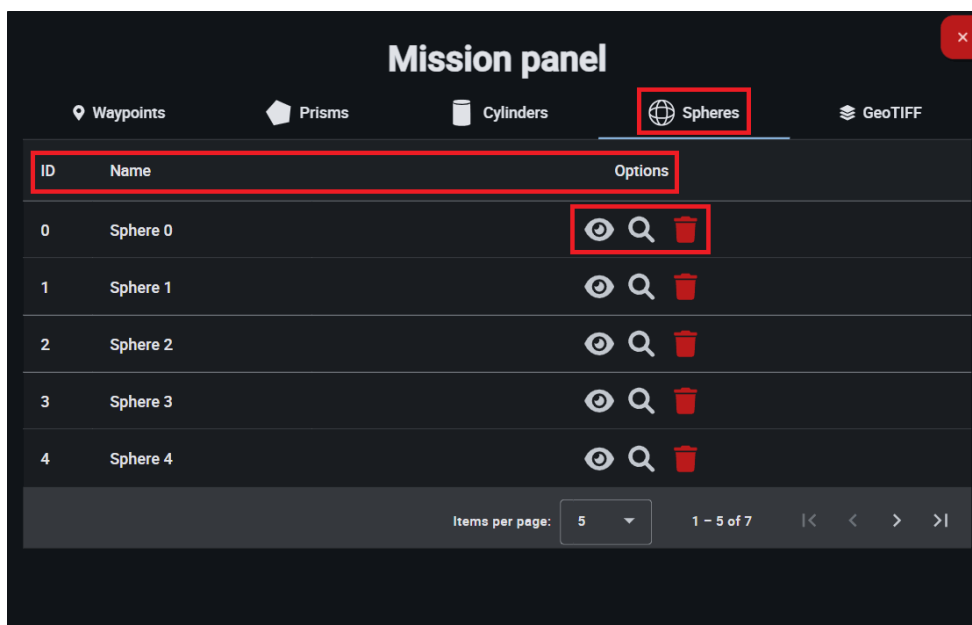

Mission panel - Spheres

- **ID:** Feature Id of this sphere.
- **Name:** Name of this sphere.
- **Options:**
 -  **Show/hide:** It is possible to show/hide the sphere on the map by clicking here.

-  **Search:** Clicking here will center and zoom the sphere on the map.
-  **Delete:** Deletes this sphere.

- **GeoTIFF**

From this panel users can insert GeoTIFF images into the map.

A GeoTIFF image is a standard TIFF image file that contains geographic information embedded directly in the file itself. This "georeferencing" allows the software to place the image in its correct position on the Earth's surface. This type of image differs from a normal image because, in addition to storing pixel data (colors), it also includes additional metadata that describes its spatial context.


In summary, these images are characterized by integrated georeferencing, detailed metadata, and a raster format.

To insert a GeoTIFF image, click the Upload GeoTIFF button and select the desired raster image from the user's local storage.

The allowed extensions for these images are `.tif`, `.tiff`, and `.geotiff`.

 Caution


If the GeoTIFF image contains extensive information (high file size), this can cause the Veronte Ops application to crash.

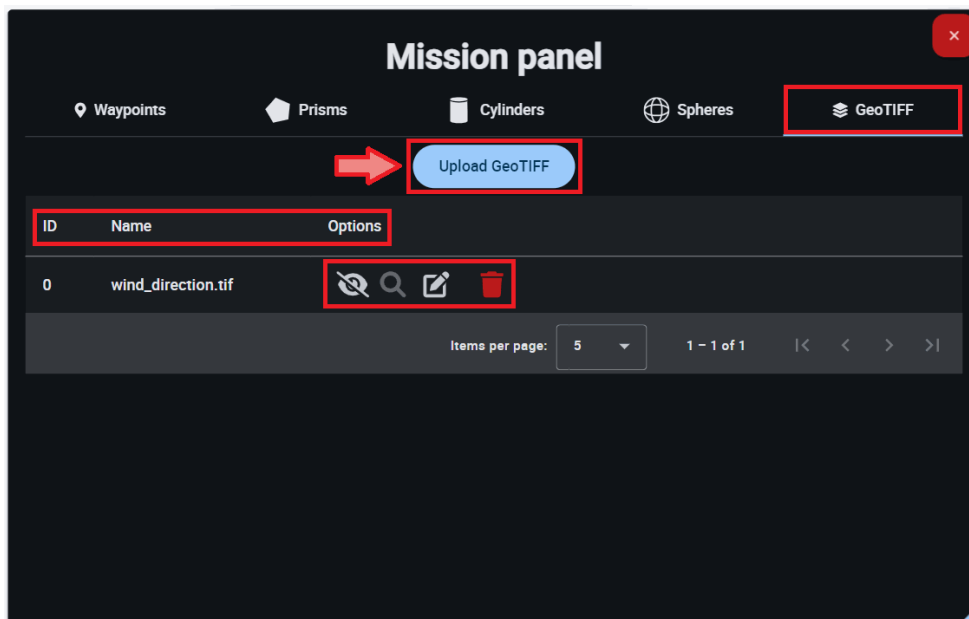

Mission panel - GeoTIFF

The following fields can be found in this menu:

- **ID:** Feature Id of this geoTIFF.
- **Name:** Name of this geoTIFF.
- **Options:**
 -  **Show/hide:** It is possible to show/hide the geoTIFF on the map by clicking here.
 -  **Search:** Clicking here will center and zoom the geoTIFF on the map.
 -  **Edit:** Open the geoTIFF editing menu. The following parameters can be configured to control how the data contained in the image is displayed:

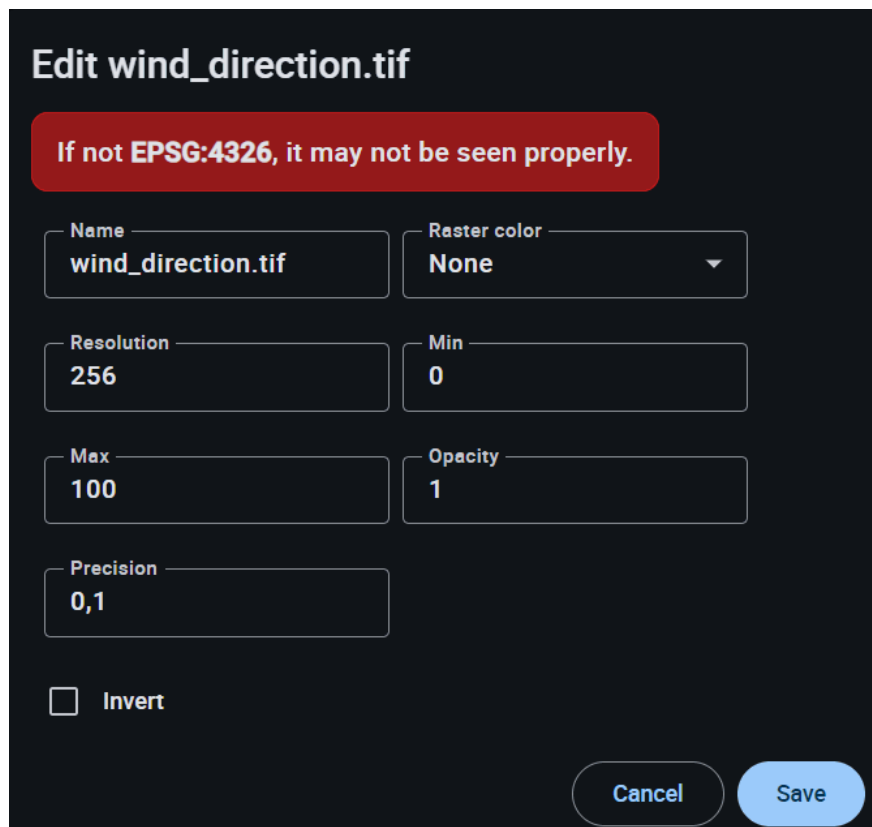

Edit wind_direction.tif

If not EPSG:4326, it may not be seen properly.

Name: wind_direction.tif

Raster color: None

Resolution: 256

Min: 0

Max: 100

Opacity: 1

Precision: 0,1

☐ Invert

Cancel Save

Mission panel - GeoTIFF edit menu

- **Name:** Users can rename the image as desired. By default, the file name is set.
- **Raster color:** Color palette used to represent pixel values. Users can choose between None, Rainbow, Viridis or Grayscale.
- **Resolution:** Number of colors or discrete steps in the color palette. By default 256.
- **Min / Max:** Range of data represented by the color palette. By default 0/100.
- **Opacity:** This controls the transparency of the image layer. The range of values is from 0 to 1, where 1 is completely opaque and 0 is completely transparent. Default 1.
- **Precision:** Specifies the amount of decimal numbers to be used to display or interpret data values.


In addition, the colors of the raster image can be inverted by enabling the Invert checkbox.

Warning

If the image is not in the map projection standard, EPSG:4326, it may not be seen properly.

-  **Delete:** Deletes this geoTIFF.

For example:

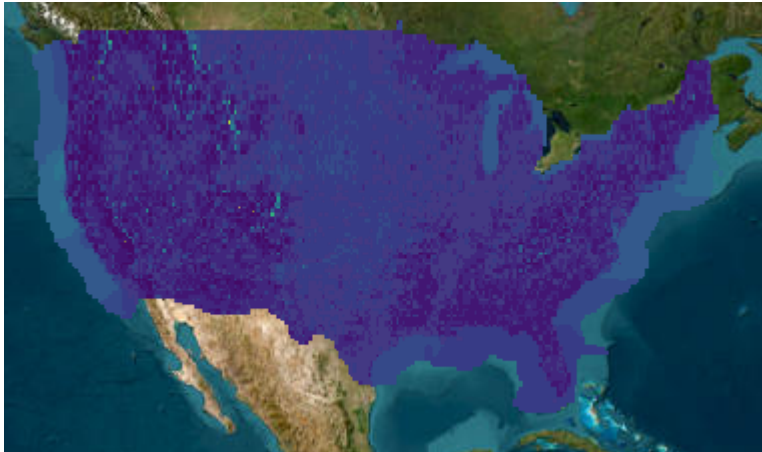


Mission panel - GeoTIFF example

Edit mission

This tool allows the user to move waypoints, marks, areas, etc., as well as to change their shape.

A detailed explanation on how to use this tool can be found in each of the elements described above.

In addition, when modifying a mission with a Veronte Autopilot 1x connected, the "original operation" loaded in the autopilot will be greyed out and the modified one will be colored. This will be the case until the new changes are saved and uploaded to the autopilot, so the previous operation will be completely removed from the map. An example is shown below:

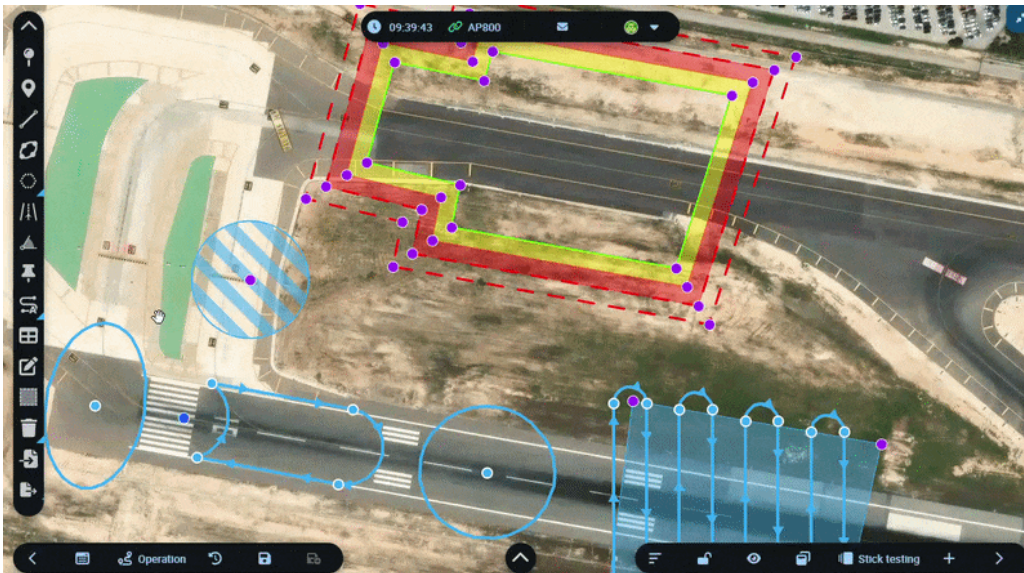

Edit mission


Turn on multiselection

Multiselection allows to move and rotate mission's path from one place on the map to another.

- Select the tool and create a rectangle by clicking and dragging until the elements you want to move fall into it.
- With the elements selected, click and drag the rectangle to move it to the desired location. And to rotate it, click on the 'black pin' (📌) and drag it to the desired rotation angle.
- After that, click again in the tool's icon to deselect.

Note


Runways and spots cannot be moved with this tool.

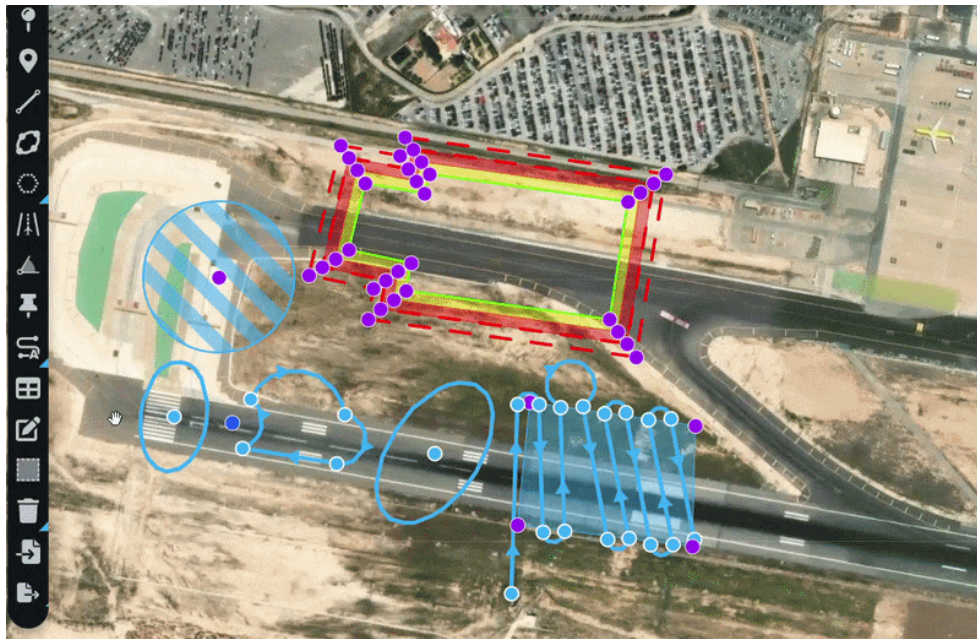

Multiselection tool

In addition, this tool also allows to delete all items selected in two different ways, right-clicking on the selected area or pressing the 'delete' key on the user's keyboard.


Before deleting the selected items, the following confirmation message appears:

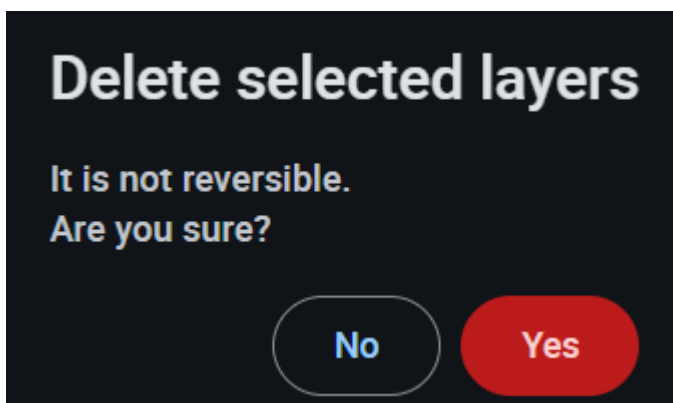

Multiselection tool - Remove message

Note


Runways and spots cannot be deleted in this way.

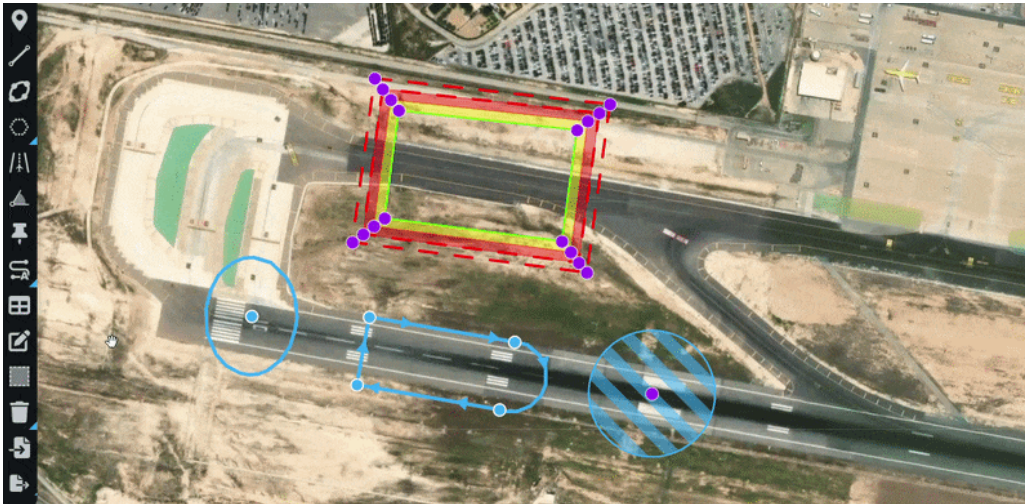

Multiselection tool - Remove

Remove mission

By clicking on this icon , the user can remove all the elements created by simply clicking on each of them. However, if the user wishes to remove all the missions created, simply click on the second icon that appears: . A confirmation pop-up window will then appear to make sure that all missions wish to be deleted.

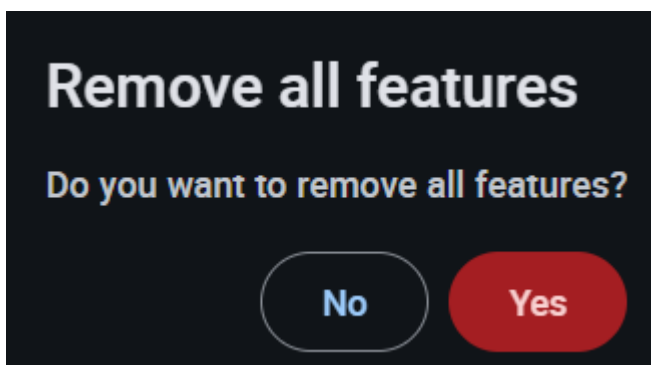

Remove all missions

Import features



Select this option to load mission elements from a **.KML** or **.GeoJSON** file located in the user local storage. The system will interpret the file configuration to match Veronte Ops elements (e.g., mapping KML shapes to Waypoints, Segments, or Obstacles).

 Note

When importing polygonal shapes (such as Prisms or Cylinders):

- **The Upper Limit of the volume is automatically set to the maximum height of the vertices found in the file.**
- **The Lower Limit is restored from the file's extra properties if available.**

 Warning

During Import, Veronte Ops analyzes the data to reconstruct the original geometries. If specific parameters are missing, the element will be imported as a standard geometry or ignored if incompatible.

Export features

Select this option to save the current mission elements to a `.KML` or `.GeoJSON` file.

- **Supported Elements: Waypoints, Segments, Orbits, Prisms, Cylinders, Spheres, Spirals, Photogrammetry Mission, and Figure.**
- **Excluded Elements: Mission Points, Marks, Runways, Spots, and Geocages cannot be exported.**

Note

When exporting polygonal shapes, the system applies specific logic to handle altitude:

- **The height of the exported vertices corresponds to the configured Upper Limit of the volume.**
- **If no Upper Limit is defined, the vertices are exported at ground level.**
- **The Lower Limit is saved within the file's extra properties to ensure data integrity upon re-importing.**

**Export features****Warning**


All application elements can be exported in `.KML` format, with the exception of:

- **Mission Points**
- **Marks**
- **Runways**
- **Spots**
- **Geocages**

Ruler

Turn on ruler

Using the ruler, the user can measure distances and azimuths.

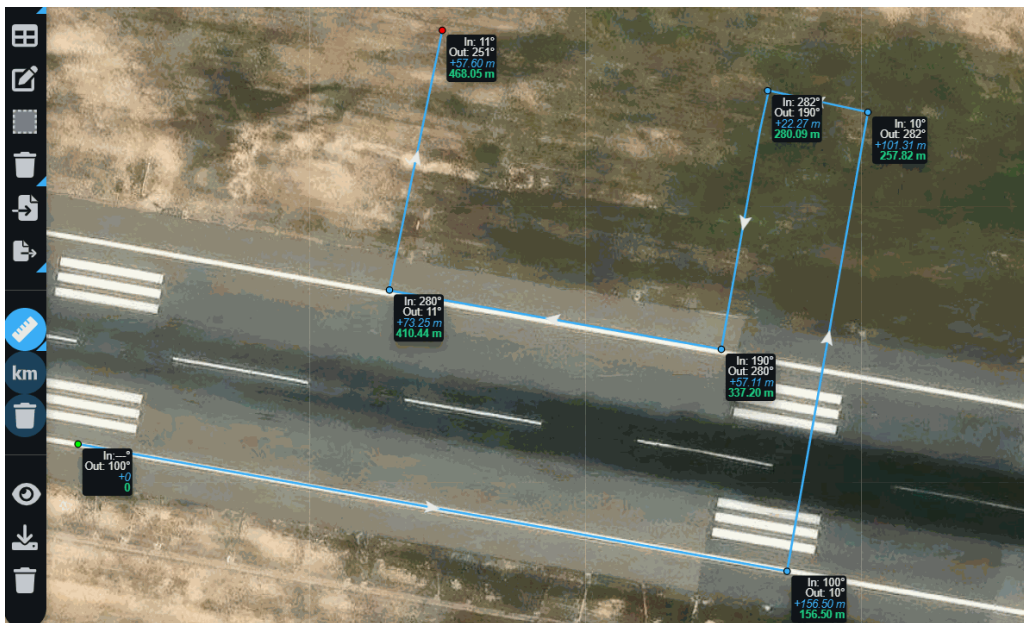

Ruler

The following information can be found in the each point of the figure above:

- **In (°):** Azimuth in degrees of the 'incoming' measure. The azimuth is the angle of the segment with respect to North.
- **Out (°):** Azimuth in degrees of the 'outcoming' measure. The azimuth is the angle of the segment with respect to North.
- **Blue measurement:** Distance from the previous point.
- **Green measurement:** Distance from the first point.

Note

There 3 different types of points on the ruler segments:

- **Green point:** Indicates the start of the route.
- **Blue point:** Midway point of the route.
- **Red point:** End of the route.


In addition, by clicking on the ruler icon, two more options will appear:

-  **Change units:** The user can change the units of the measurements by clicking on this icon. The available units are: *km* (kilometeres), *mi* (miles) and *nm* (nautical miles).

 Note

The ruler indicates the measures with 2 decimals in order to have more precision, as can be seen in the figure above.

-  **Clear measurements:** By clicking on it, it is possible to delete all the measurements in the mission. A confirmation pop-up window will then appear to make sure that all measurements wish to be deleted.

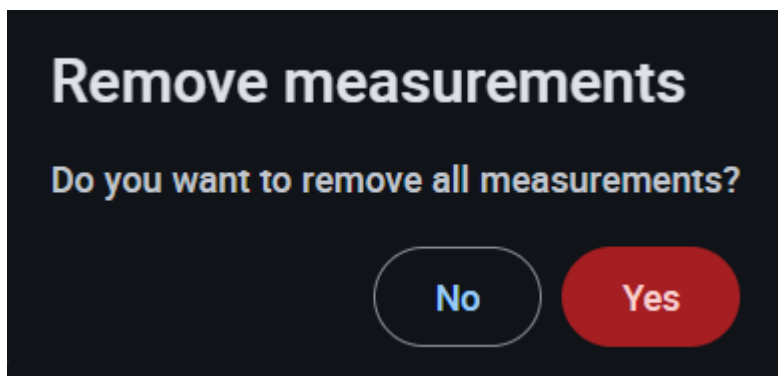

Remove all measurements

Offline


This option is designed for when users operate offline, i.e. they do not have internet access to download map information. For this reason, the map tiles of the area to work on can be pre-downloaded.

The following options are available in this section:

Show downloaded tiles


This option works differently when working online and offline:

- **Online:** If the user has already downloaded tiles, when clicking on this icon, the area with the downloaded tiles will be marked with a blue rectangle:

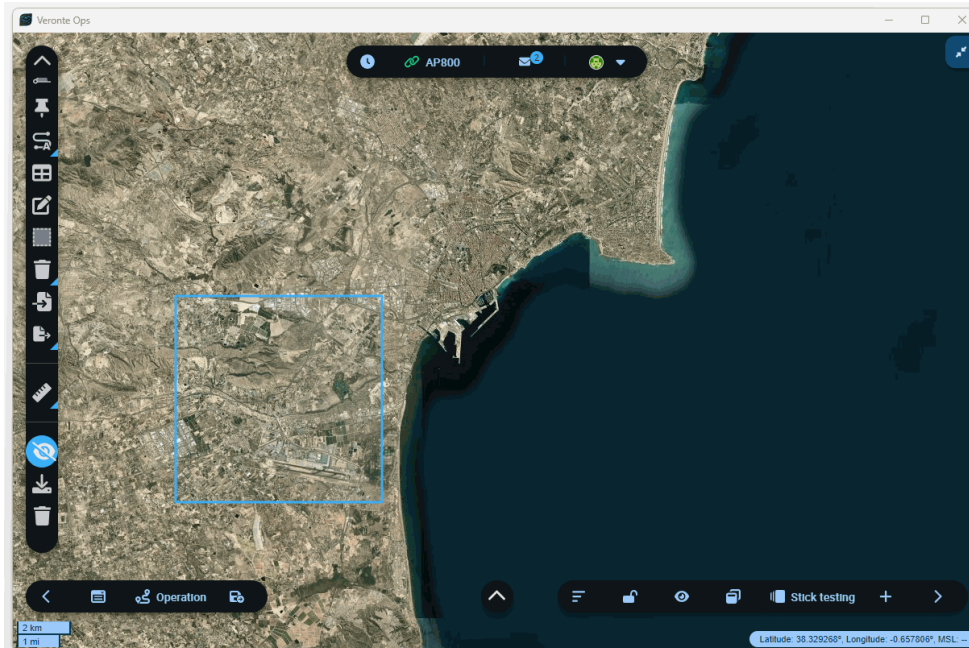


Show tiles

If the user has not downloaded any tiles, the following message will appear when clicking here:

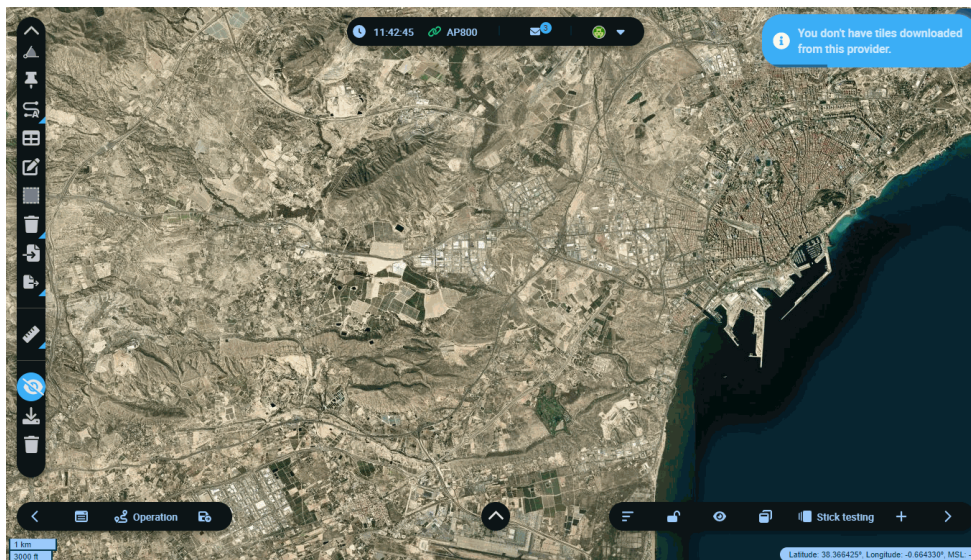

Show tiles - don't have downloaded

- **Offline:** If the user has already downloaded tiles, when clicking on this icon, these tiles will always appear:

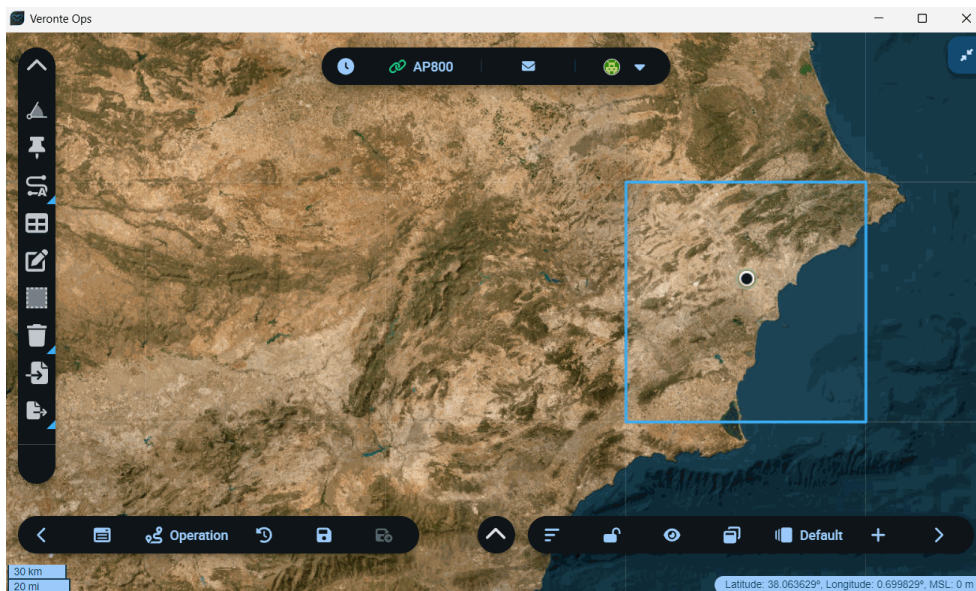

Show tiles

If the user has not downloaded any tiles, they may appear because they are stored in the Veronte Ops cache, however, it is not certain that this will always happen. Therefore, it is recommended to have the map tiles downloaded when working offline.

Save tiles




Save tiles

The tiles that the user is viewing will be downloaded. An example is shown below:

1. Click on this icon when the user is zooming in on the tiles in the desired area to download:


Warning

As each zoom level in Veronte Ops counts as an independent map tile. When downloading map information, make sure that all relevant zoom levels are downloaded.

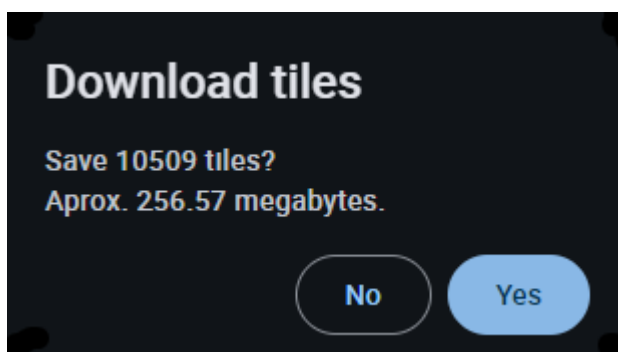

Download tiles


2. The tile download process will then begin:

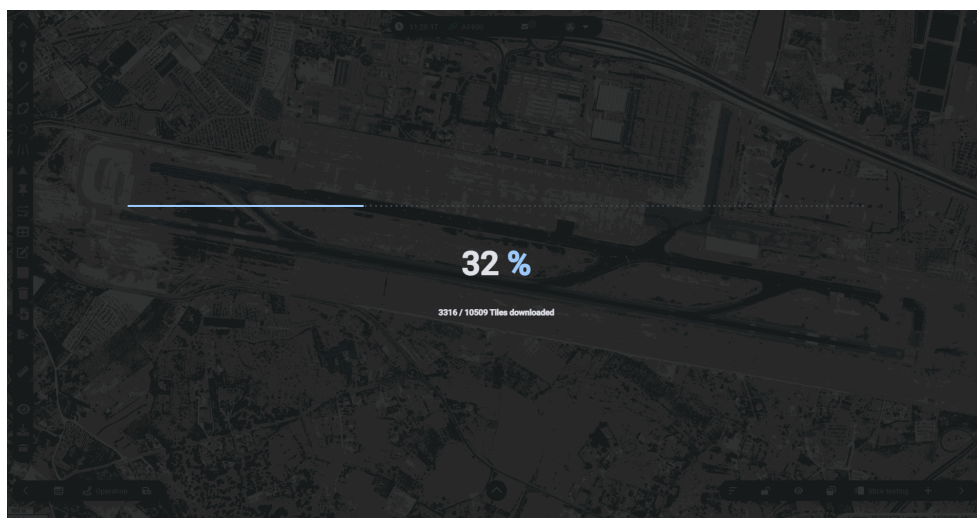

Downloading tiles

3. Finally, by clicking on the above option, users can view the downloaded map tiles of the desired area.


However, if there is no significant zoom, Veronte Ops will not download these files because there are too many of them. The following message will appear:

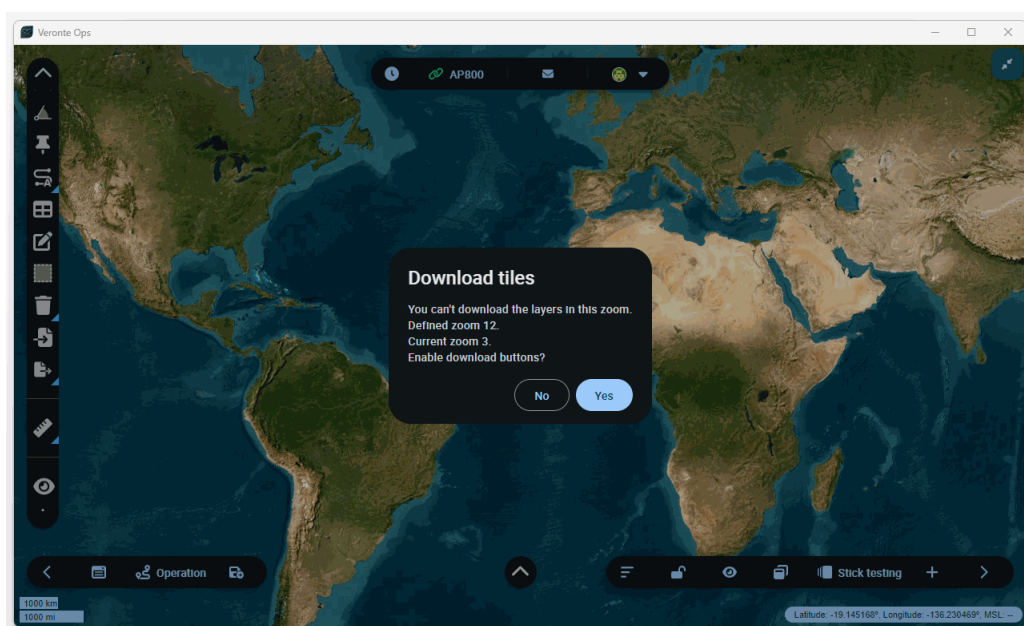


Not possible to download tiles

Remove tiles

Clicking on this icon will delete all tiles downloaded tiles. The following messages will appear:

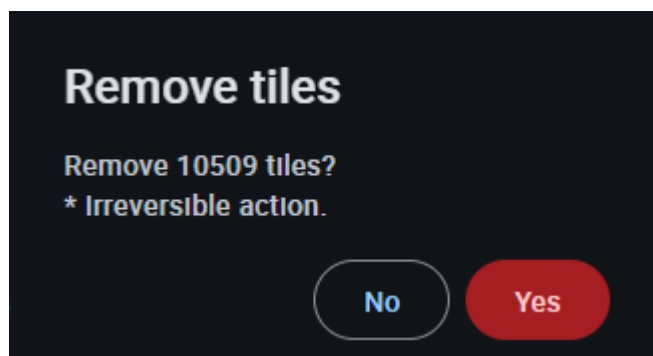


Remove tiles

 

Remove tiles successfully


3. Operation

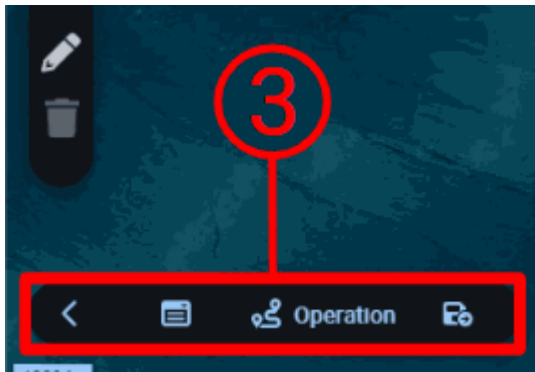

Operation toolbar

The Operation toolbar is composed by 3 'parts': Operation Panel, Operations and Operation actions. However, in the figure above there is no Operation actions part because there was no Veronte Autopilot 1x connected.

In the figure below, users can see these 3 'parts' when an Autopilot 1x is connected:

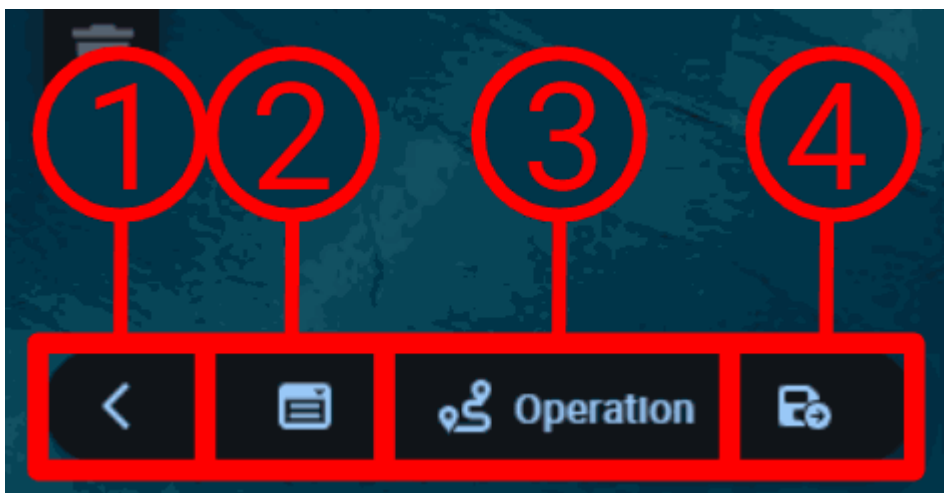


Operation toolbar - Autopilot connected

1. Allows closing Operation bar.
2. **Operation Panel**: Here the user can customize operation elements related to the operation, carry out some simple calibrations such as calibration of atmosphere, wind, DEM, etc., and manage complementary telemetry.
3. **Operations**: Users shall be able to export the operation loaded into the autopilot or import a different one and load it into the autopilot.

- 4. Operation actions:** These are actions related to when changes are applied to the operation/mission, such as Revert, Save, Reload and Upload changes. This 'part' is only available when a Veronte Autopilot 1x is connected. In addition, when a change is made, the other actions (Revert, Save and Reload) appear.

Operation Panel

This menu is divided into 5 different functionalities: manage operation elements in the Customize tab, simple calibrations in the Calibrations tab, manage complementary parameters in the Complementary Telemetry tab, manage software licensing in the License tab, and handle interoperability updates in the Stanag Scheduled Updates tab.

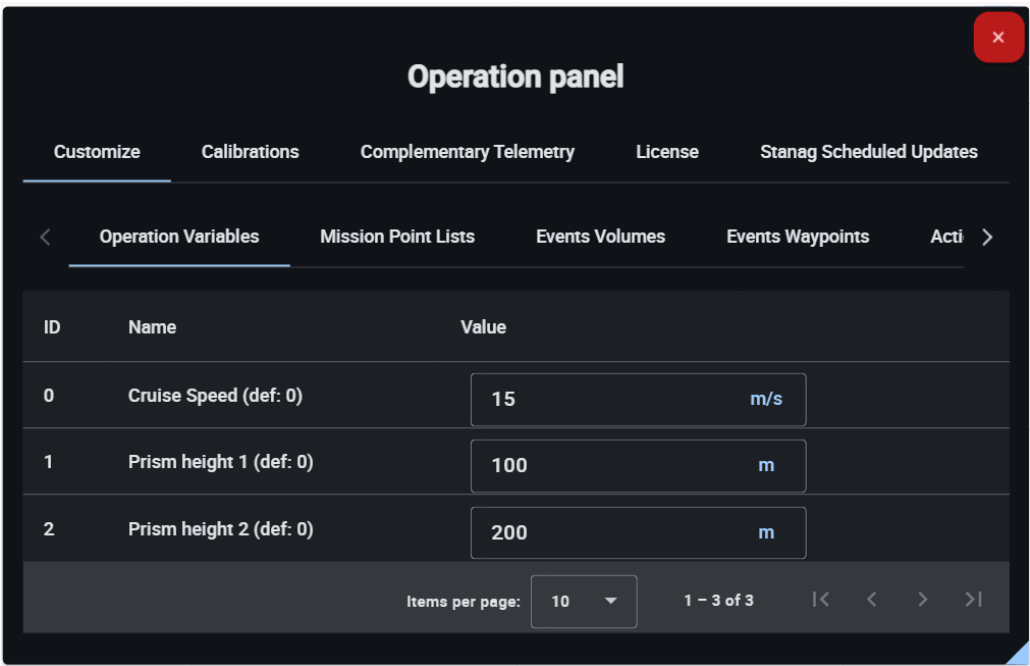


Operation Panel

All parameters included in this panel are explained in detail in the following sections.

Customize

In this part of the menu users can find all the operation elements used during the operation and mission: Operation Variables, Mission Points, Events Volumes, Events Waypoint, Action Waypoints, Events Marks, Runways, Spots, Initial position UAV and Operator position.

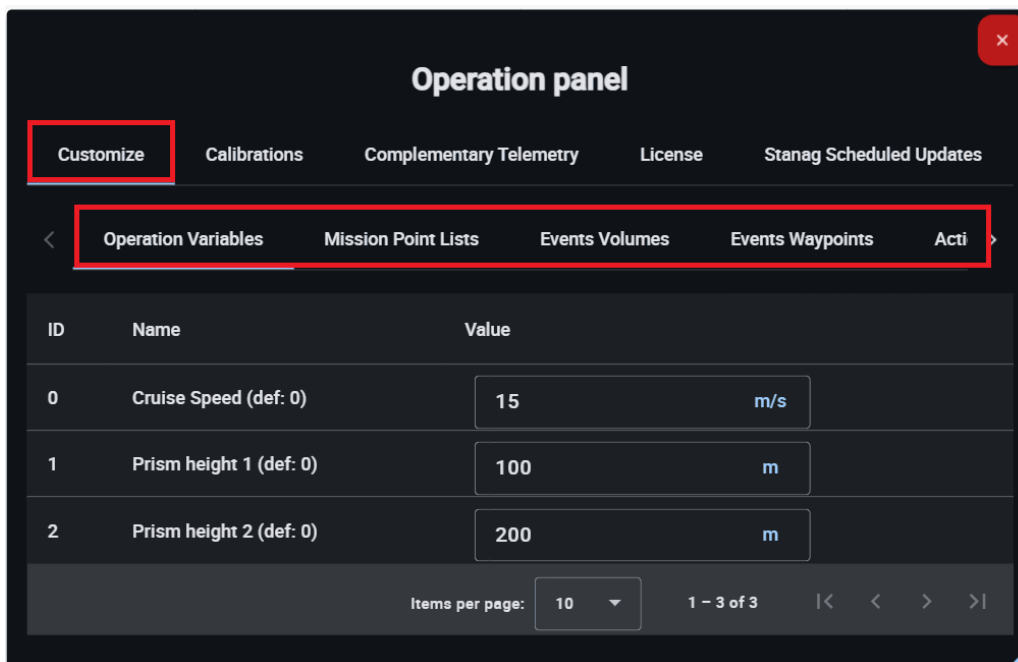

Operation Panel - Customize tab

If users wish to link a mark, Mission Point, prism, etc., to one of these variables, it is first necessary to define (rename) them in the UI menu of the 1x PDI Builder software, as described and explained in the corresponding section of the 1x PDI Builder manual, click [here](#) to access it.

Operation Variables

Operation Variables are configurable values, positions and directions that can vary depending on the mission.

Important


Not setting the value of an operation variable may raise errors during the operation.

Examples of Operation Variables can be:

- **Mission duration**
- **Cruise speed**
- **Flight level**
- **Takeoff and landing direction**


- Home point
- Start of route

Their main advantage is that it is not necessary to access Veronte Autopilot configuration to modify them. In this way, the operator can modify certain parameters without the need of having access to the entire configuration.

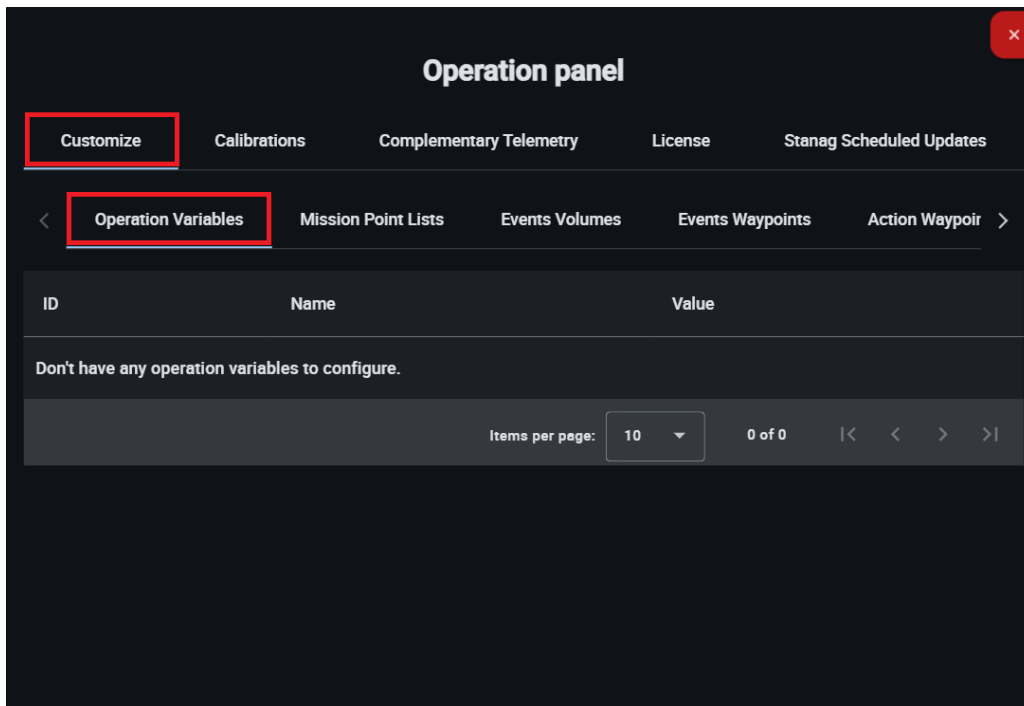

Operation Variables


As explained above, operation elements must be created while building a Veronte Autopilot configuration. So, when a new Operation Variable is created, a new field will appear in the operation variables tab:

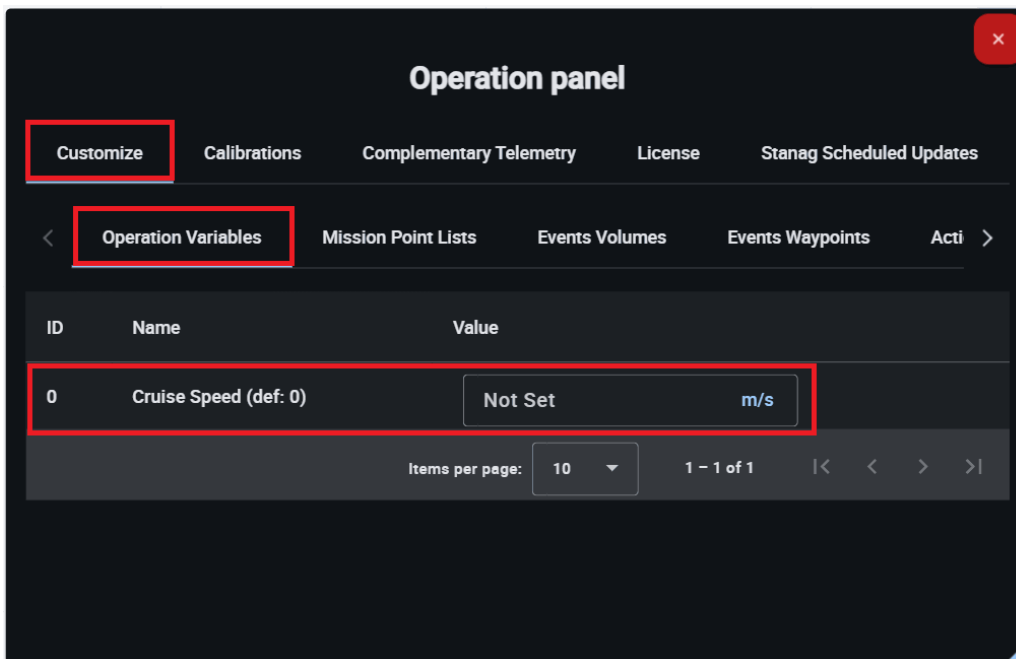

New Operation Variable

After this, the value of this variable can be defined using this menu. The user simply clicks on the value cell, enters the desired new value and saves the change ( button, this is explained in the [Save operation](#) section below).

Below is an example of how to save changes locally and then upload them to the device:

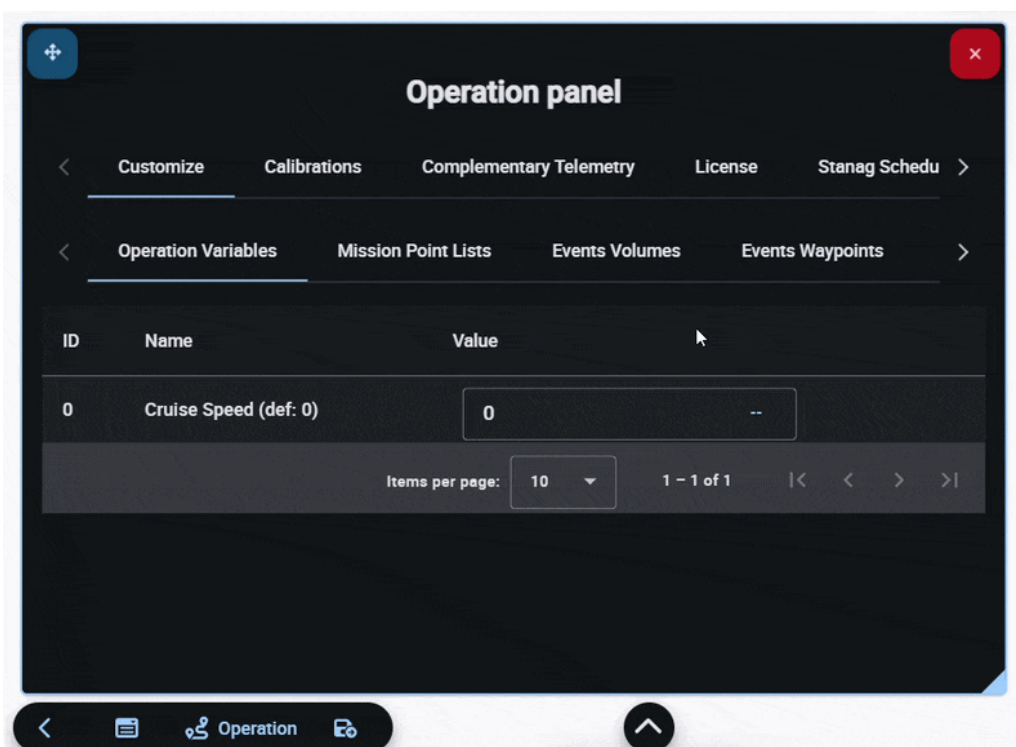

Operations Variables configuration

Users should note that these Operation Variables can have minimum and maximum ranges defined in their configuration in the 1x PDI Builder software.

- **When the Operation Variable has a range already configured:**
 - **It is mandatory to set a value in the Operation Panel, i.e. the value cell cannot be empty. If no value is provided, the system will automatically default to the configured minimum value.**
 - **The value that users enter here must be within the defined range, otherwise, they will not be able to save it and the software will automatically convert it to the closest value of the defined range (minimum or maximum value of the range). In addition, an error message will be displayed in the cell indicating the range.**

Operation Variable error: Value Not Set

- **When the Operation Variable does not have a range configured in 1x PDI Builder software, setting a value is an option, not a requirement. If any value is entered, the value cell will display "Not Set".**

Furthermore, units can be changed in Veronte Ops, if they have been defined 1x PDI Builder software.

Warning


Although it is possible to modify operation elements during the flight, this practice is not recommended.

Whenever changing values during an operation, make sure that no potential risk to flight safety is involved.

Mission Points

A Mission Point is an operation element that can be linked to a waypoint of the configured mission.


As explained above, an operation element only appears in this panel when it has been previously defined in the 1x PDI Builder software.

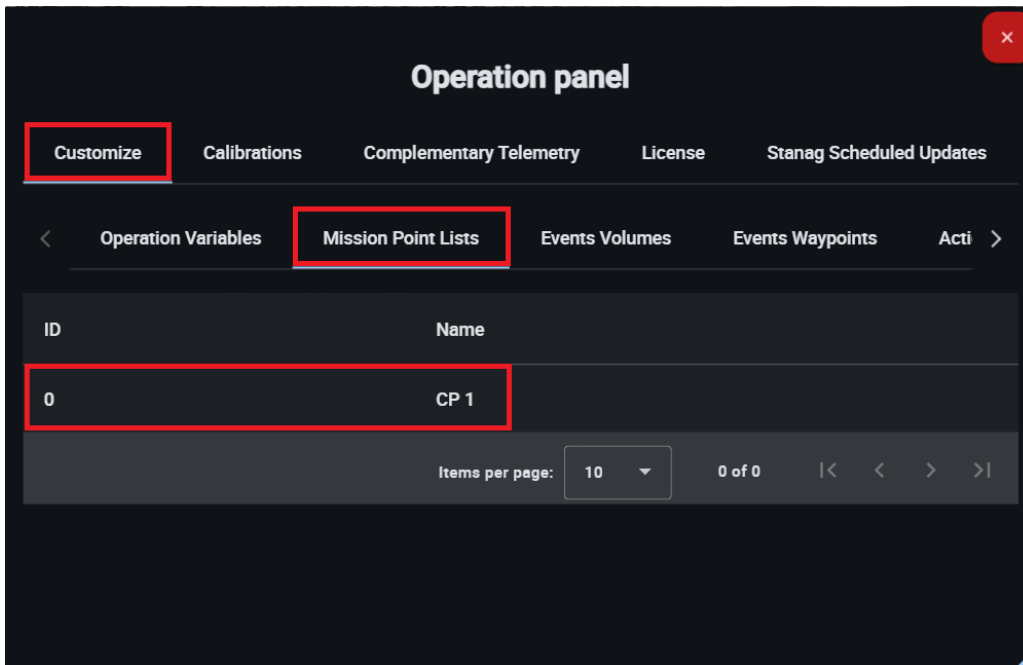

Mission Point


- **ID:** Mission Point identification number.
- **Name:** Name of this Mission Point defined in the 1x PDI Builder software.

Click on Add to lists To add a waypoint to a list.

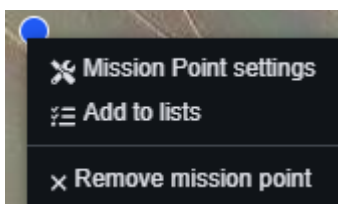


Mission Point configuration - Select point

Select the desired list and click Close.

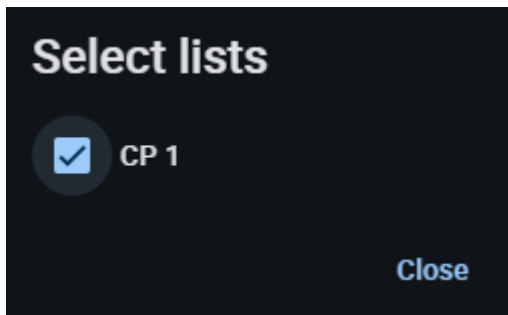

Mission Point configuration - Select list

Moreover, by clicking on the linked waypoint, it will appear with the name of the lists:

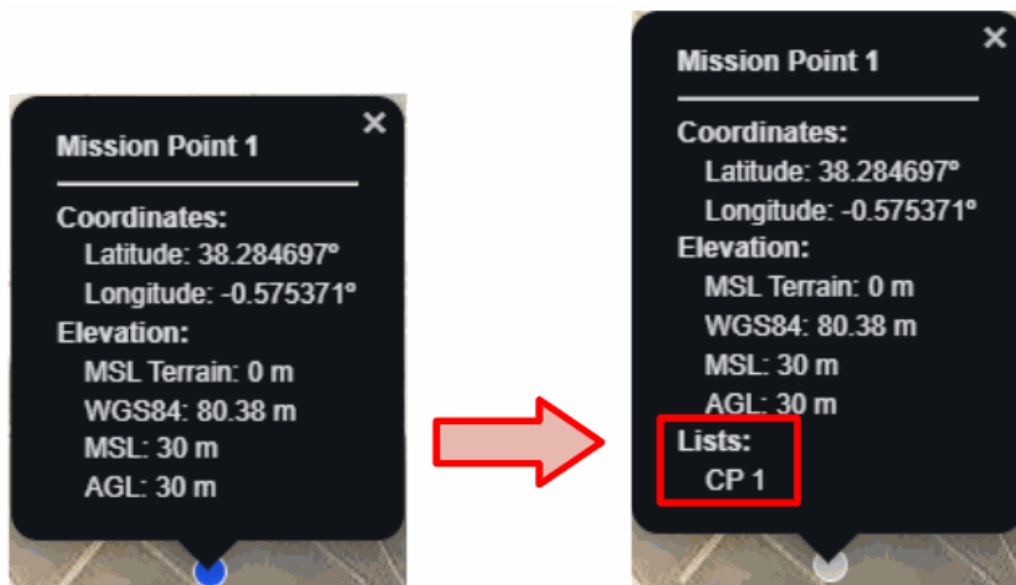


Mission Point description

Events Volumes

Set of volumes that assign events to Prisms, Cylinders, and Spheres.

These operation elements, Prisms, Cylinders and Spheres are detection volumes that can be linked to prisms, cylinders or spheres of the configured mission.

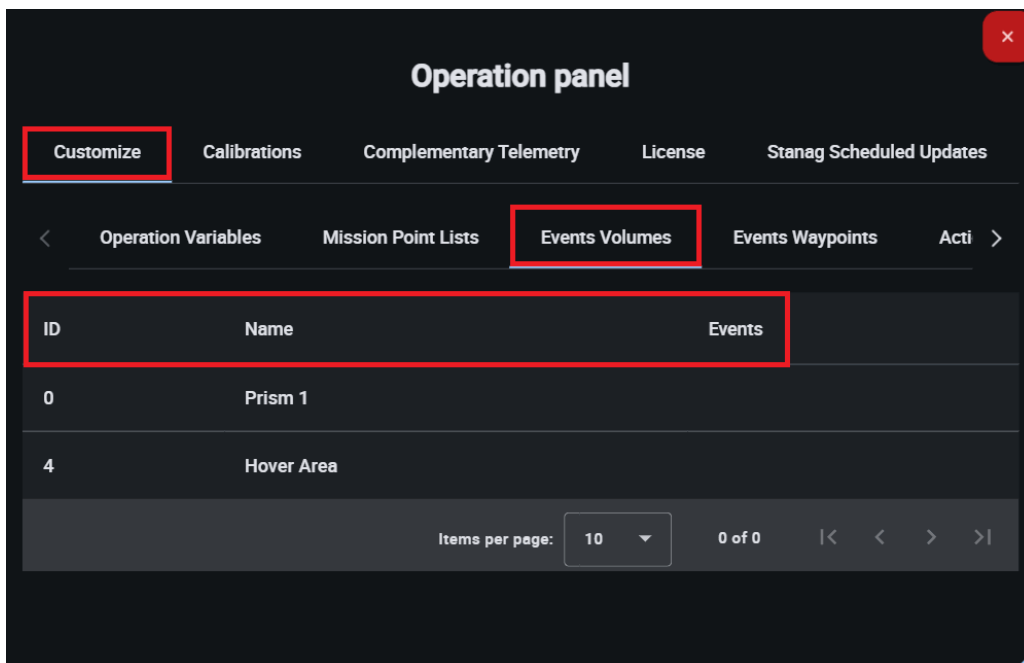

Volumes


In the image above, the user can identify that there is a prism already defined and associated with an event, a sphere defined but without an associated event, and that there is no cylinder defined or associated to an event.

If the user wants to define cylindrical or spherical volumes, this must be done in the 1x PDI Builder software, as described at the beginning of the [Customize](#) section. Then, to associated an event with a volume, the process to follow is explained in the [Shape - Mission](#) section.

The following information is displayed in the operation panel:

- **ID:** Event volume identification number.
- **Name:** Element identifier, this has been defined in the 1x PDI Builder software.
- **Events:** Here is displayed the list of any events that are linked to this element, such as triggers for automatic actions.

In addition, when clicking on the linked volume, its description will appear with the name defined by the user and the events linked to it will also appear:

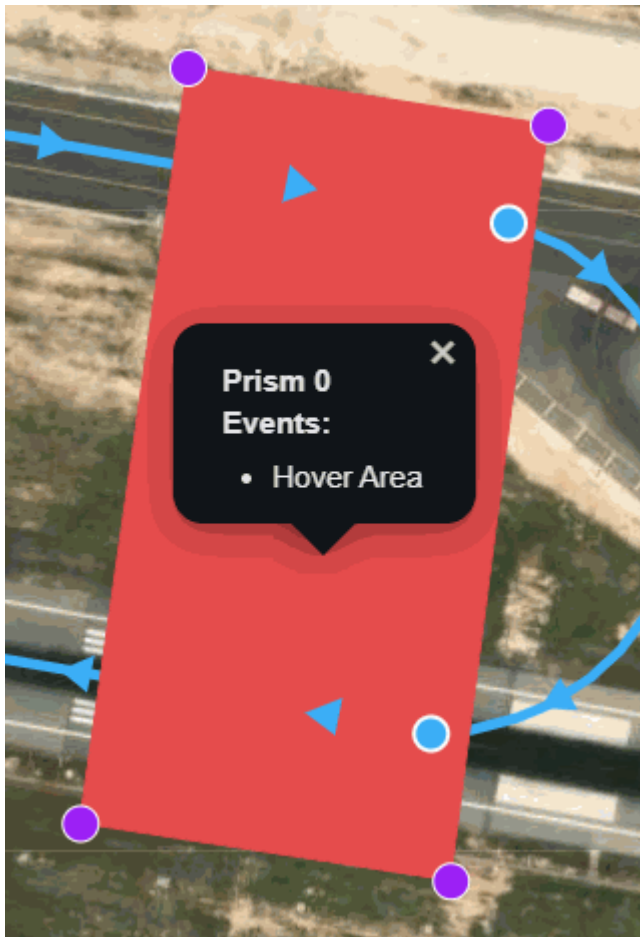


Volume description

Events Waypoints

Events Waypoints allows for assigning properties and events to all waypoints belonging to this group.

This tab has the same options and works exactly the same way as the previous section (**Events Volumes** section).

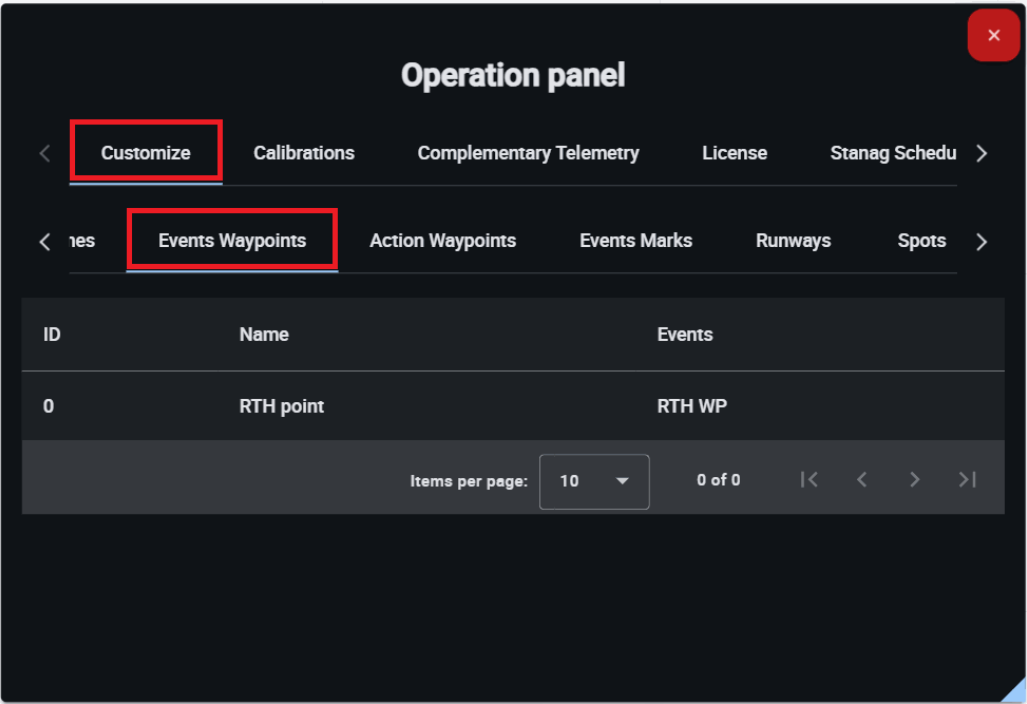

Events Waypoints


In addition, when clicking on it, the Waypoint name defined by the user will appear in its description, as well as the events linked to it. An example is shown below:



Events Waypoints - description

Action Waypoints

An Action Waypoints is a navigation points that are not just passing points, but are intrinsically linked to the execution of a complex action by the system (e.g., initiating a search pattern, releasing a payload).

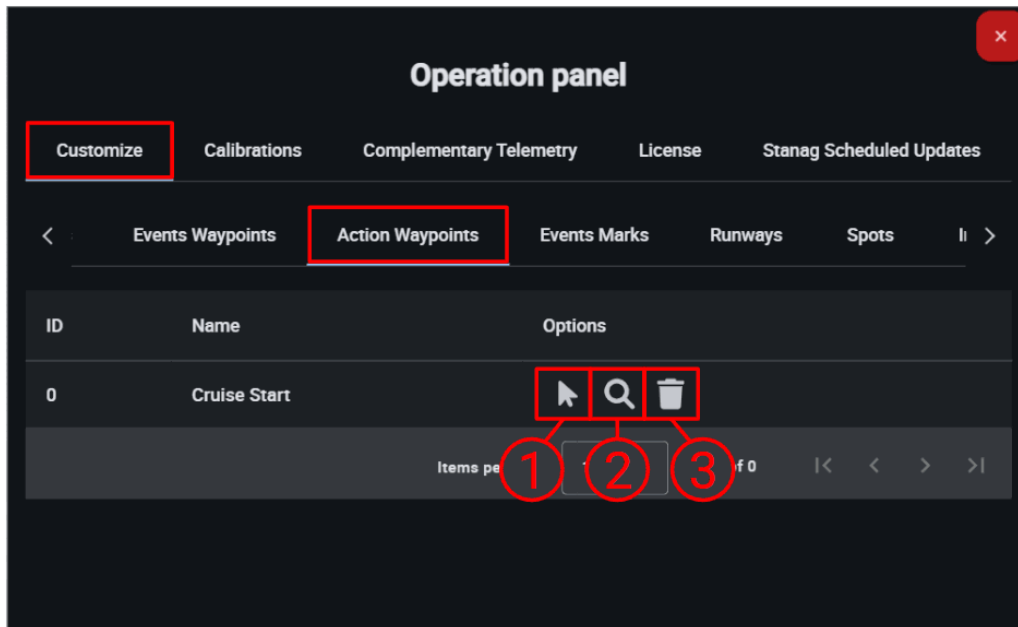

Action Waypoints - Settings


- 1. Click Waypoint to set action:** To link the Action Waypoint point to a different waypoint, click here and select it on the map.
- 2. Serach:** By clicking here, Veronte Ops will center and zoom in on the area of the map where this Waypoint is defined.
- 3. Remove reference:** The user can remove the Waypoint configuration by clicking here.

Events Marks

A Mark is an operation element that can be linked to a Mark (reference placed in a patch) of the configured mission.


The procedure for defining and configuring a Mark is the same as described above in the [Events Waypoints](#) section.

Once a Mark is configured, the following options will appear in the operation panel:

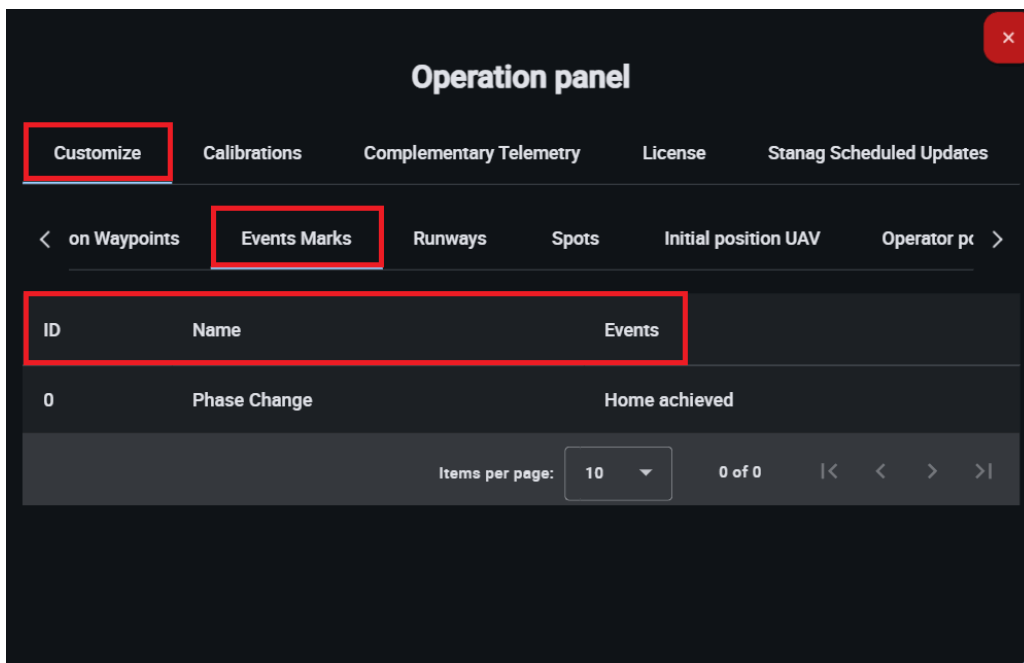

Marks

- **ID:** Mark identification number.
- **Name:** Element identifier, this has been defined in the 1x PDI Builder software.
- **Events:** Here is displayed the list of any events that are linked to this Mark, such as triggers for automatic actions.
- **Options:** These are configuration options of the Mark:
 - **Set distance:**

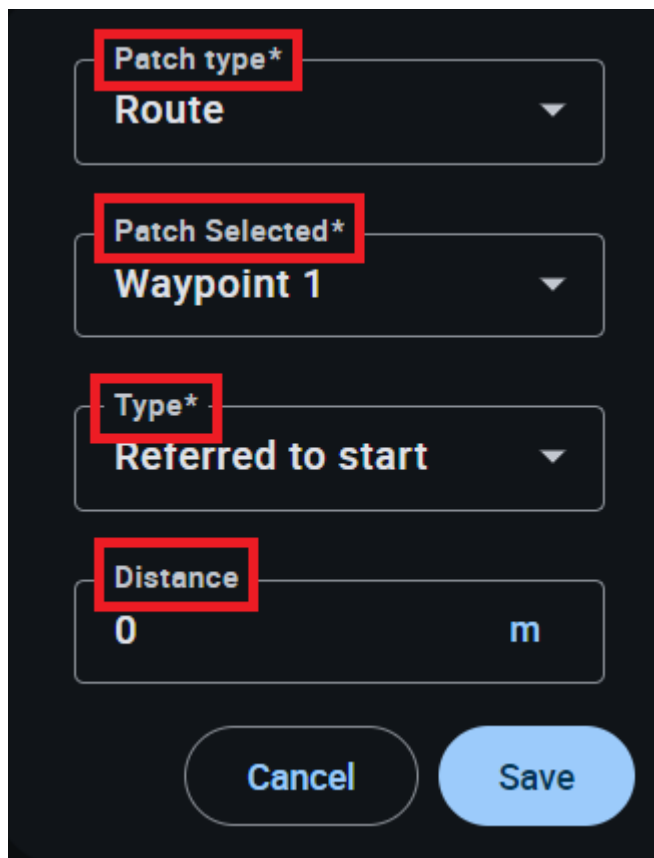

Patch type*
Route

Patch Selected*
Waypoint 1


Type*
Referred to start

Distance
0 m


Cancel Save

Marks - Edit

- **Patch type:** The user can select different flight guidance phases where the Marks will be placed: Approach, Climbing, Route, Taxi, VTol and Rendezvous. Except for Route patches, for the rest of the guidance phase, patches are generated when the user, or an automation, activates them. As the user cannot select these patches, as they cannot be generated initially, this option will automatically create the Marking on the selected patch.
 - **Patch Selected:** Most flight guidance phases have predefined patches with specific names. The user can select where the Mark will be placed on those patches. A table summarizing the available options is shown below.
 - **Type:** Right now the only possible option is "Referred to start" of the selected patch.
 - **Distance:** Distance from the Mark to the start of the patch.
- Climbing and Approach guidances are defined as follows:**

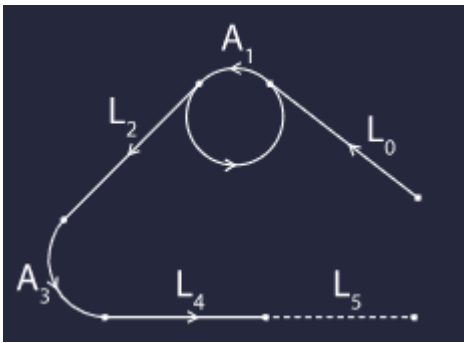

Marks - Approach patches

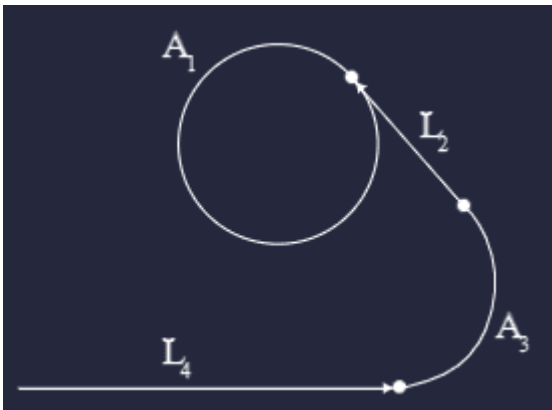

Marks - Climbing patches

Approach	L0/A1/L2/A3/L4/L5
Climbing	A1/L2/A3/L4
Route	512 patches
Taxi	Taxi 0/Taxi 1
VTol	VTol 0/VTol 1/VTol 3
Rendezvous	Rendezvous 0/ Rendezvous 1/ Rendezvous 2

1. **Create Mark in map and select:** If the mark is not yet created in the mission, by clicking on this option, Veronte Ops will create it at the point on the map where the user clicks. In addition, Veronte Ops will automatically link this operation element to this newly created Marker.

Note

This option also appears although the Mark is not yet configured (linked to a created Mark).

2. **Select in map:** To link this operation element to a different Mark, click here and select it on the map.
3. **Remove reference:** The user can remove the Mark configuration by clicking here.

Moreover, if the event that is linked to the Mark has an associated icon, the icon will appear on that Mark. In addition, when clicking on it, its description will appear with the name defined by the user and the events linked to it will also appear. An example is shown below:




Marks - Icon and description

Runways


Runways are operation elements that can be linked to the runways of the configured mission.

Like all other operation elements, Runways have to be defined in 1x PDI Builder and then configured by selecting a runway from the map.

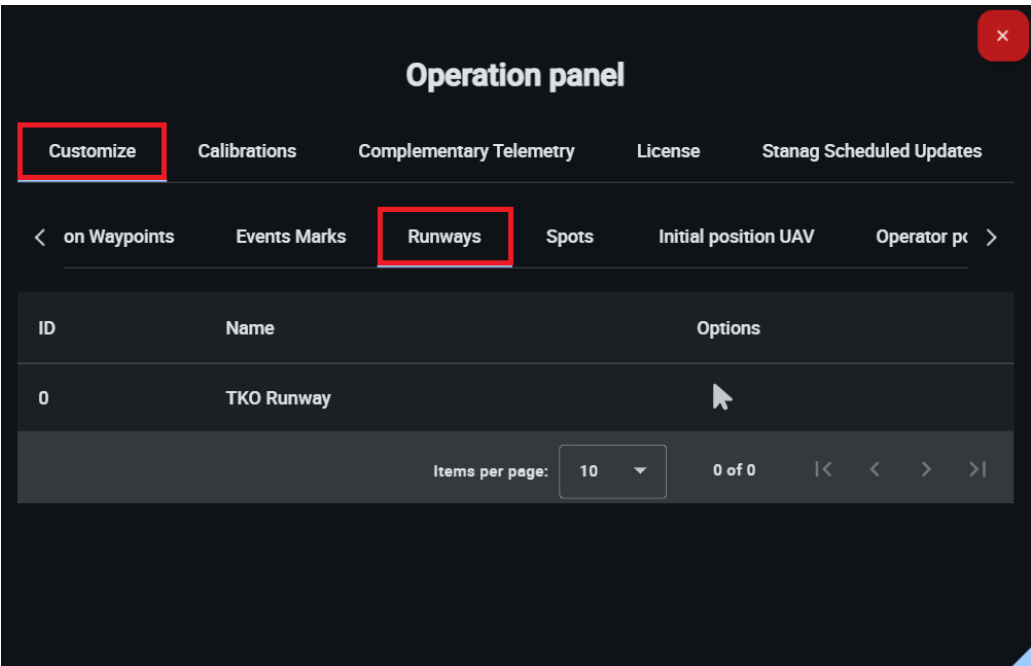

Runways

The following configurable options will then appear in the operation panel:

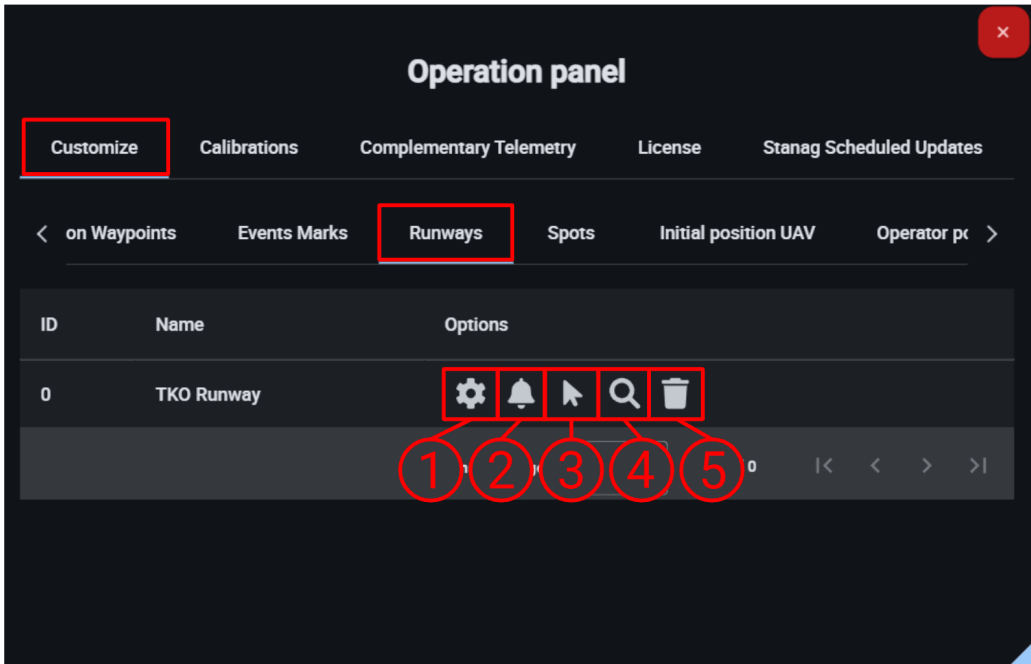

Runways configuration

- **ID:** Runway identification number.
- **Name:** Element identifier, this has been defined in the 1x PDI Builder software.


- **Options:** These are configuration options of the Runway:
 1. **Edit:** By clicking here the user will be able to modify the runway settings. A detailed explanation of how to configure it can be found in the [Runway - Mission](#) section of this manual.
 2. **Configure Alarms:** Alarms can be associated to Runways. A detailed explanation of how to configure them can be found in [Runway - Mission](#) section of this manual.
 3. **Click to map:** To link this operation element to a different runway, click here and select it on the map.
 4. **Search:** By clicking here, Veronte Ops will center and zoom in on the area of the map where this Runway is defined.
 5. **Remove reference:** The user can remove the Runway configuration by clicking here.

Moreover, by clicking on the linked runway, it will appear with the name of the configured Runway:



Runways description

If the user clicks on the Start, End or Loiter points of the Runway, they are also renamed:

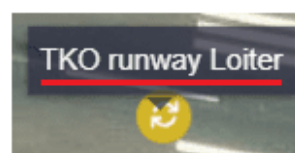


Runways - Start, End and Loiter points

Spots

Spots are operation elements that can be linked to the spots of the configured mission.

They function in the same way as the Runways operation elements:

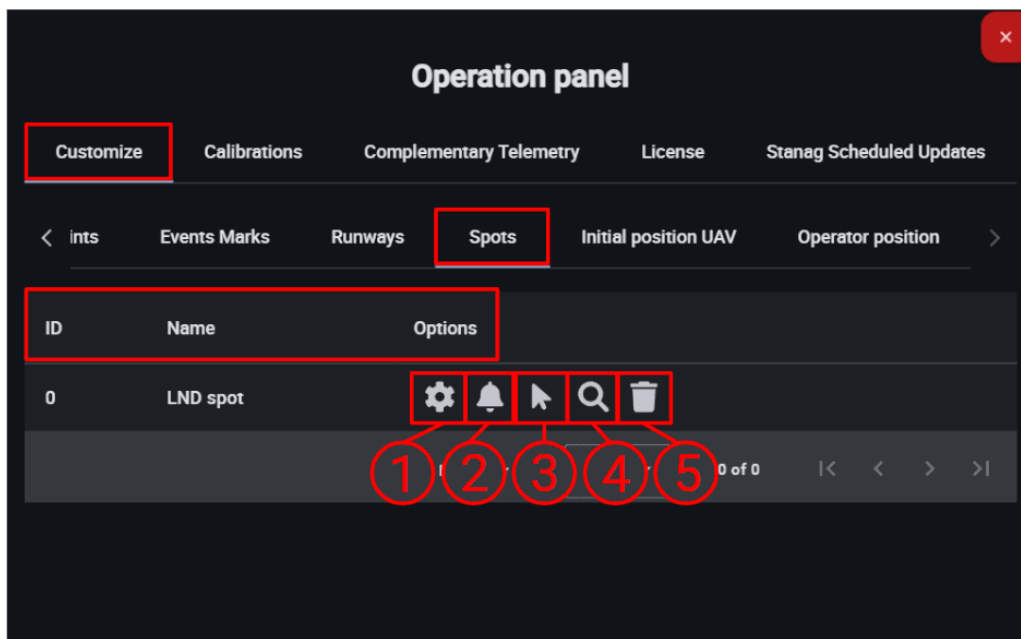

Spots configuration


- **ID:** Spot identification number.
- **Name:** Element identifier, this has been defined in the 1x PDI Builder software.
- **Options:** These are configuration options of the Spot:
 1. **Edit:** By clicking here the user will be able to modify the spot settings. A detailed explanation of how to configure it can be found in [Spot - Mission](#) section of this manual.
 2. **Configure Alarms:** Alarms can be associated to Spots. A detailed explanation of how to configure them can be found in [Spot - Mission](#) section of this manual.
 3. **Click to map:** To link this operation element to a different spot, click here and select it on the map.
 4. **Search:** By clicking here, Veronte Ops will center and zoom in on the area of the map where this Spot is defined.
 5. **Remove reference:** The user can remove the Spot configuration by clicking here.

Moreover, by clicking on the linked spot, it will appear with the name of the configured Spot:



Spots description

If the user clicks on the spot loiter point, it is also renamed:

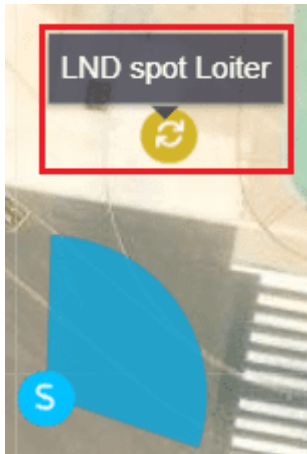

Spots - Loiter point

Initial position UAV

It is a marker indicating the initial position of the UAV.

In addition, users can find and center this marker on the map, as well as show/hide it.

Operation panel

< **Customize** Calibrations Complementary Telemetry License Stanag Scheduled >

< Ints Events Marks Runways Spots **Initial position UAV** Operator position >

Find marker **Show marker**

UAV start position

☒ Absolute ☐ Relative

Set coordinate

Type
Decimal degrees

Latitude (DD)*
0

Longitude (DD)*
-0,000005

Set elevation

MSL terrain: 0.00

WGS84
0 m

MSL
-17,16 m

AGL
-17,16 m


Accept

Initial position UAV

It is configured in the same way as waypoints. For a detailed explanatin of this, please refer to the [Waypoint - Mission](#) section of this manual.

After setting the position, it is necessary to click **Accept** and then **Save and Upload** the operation.

In the figure below, the marker is "shown" (as the hidden button appears):

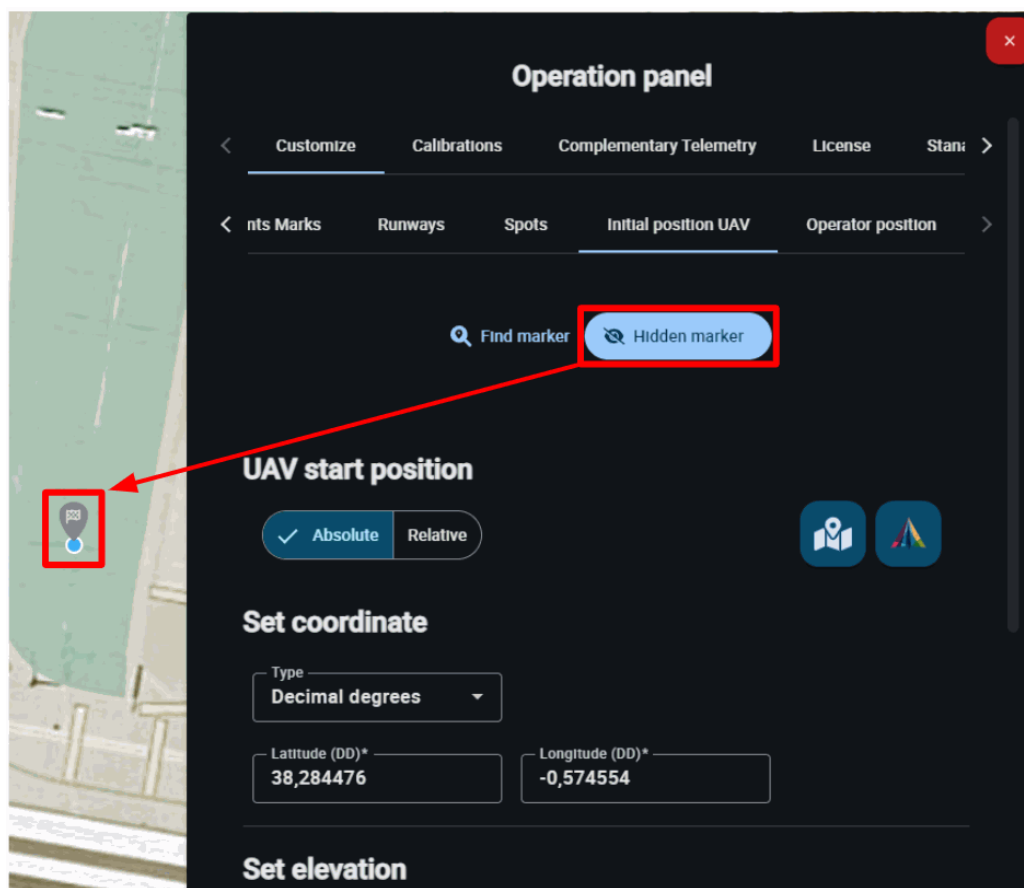

Initial position UAV - Marker in map

Operator position

This tab enables the configuration of the Operator position.

Operation panel

< **Customize** Calibrations Complementary Telemetry License Stanag Scheduled >

< ints Events Marks Runways Spots Initial position UAV **Operator position** >

Find marker **Show marker**

Operator position

☒ Absolute ☐ Relative

Set coordinate

Type
Decimal degrees

Latitude (DD)*
0

Longitude (DD)*
-0,000005

Set elevation

MSL terrain: 0.00

WGS84
0 m

MSL
-17,16 m

AGL
-17,16 m


Accept

Operator position

It is configured in the same way as waypoints. For a detailed explanatin of this, please refer to the [Waypoint - Mission](#) section of this manual.

After setting the position, it is necessary to click **Accept** and then **Save and Upload** the operation.

In the figure below, the marker is "shown" (as the hidden button appears):

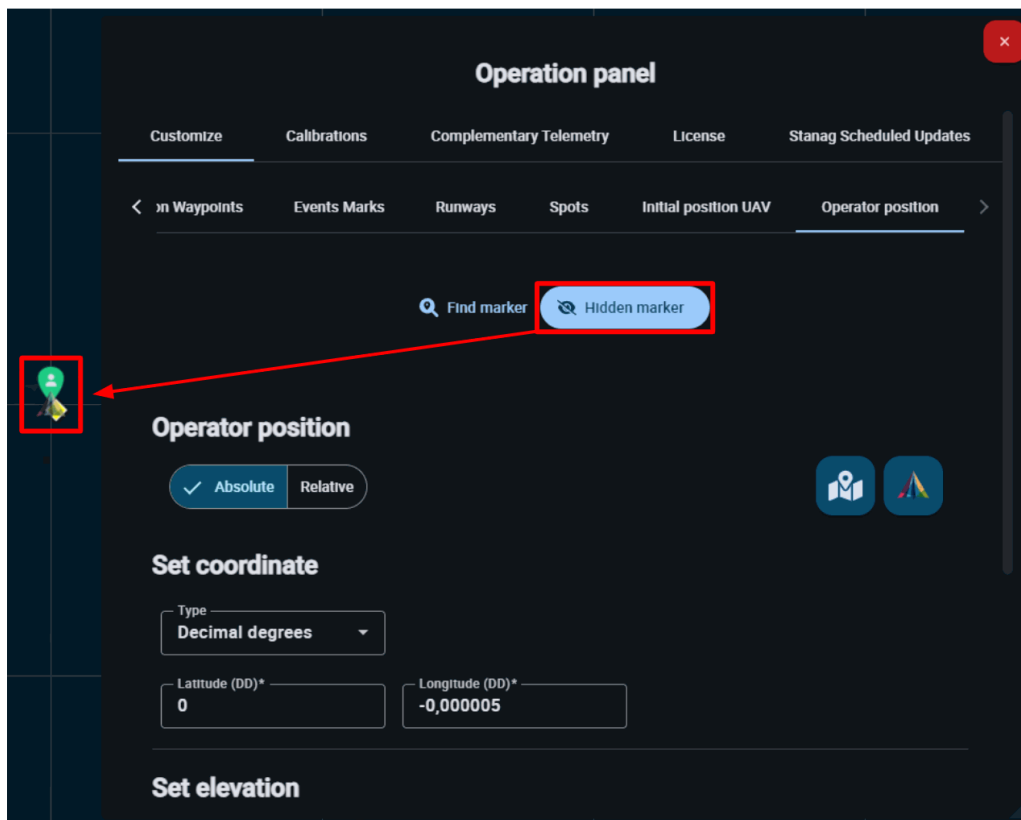

Operator position - Marker in map

Note


From the operator position defined in this panel, the distance allowed by the license to operate is calculated. Remember that Veronte Autopilot 1x has limited-operation depending on the license status. For more information on this limitation, please refer to the [1x Hardware Manual](#).

Calibrations

In this tab, the user can carry out simple calibrations during a standard operation. This way, there is no need of modifying the configuration or building a specific automation.

Note

Some of the following calibrations can also be triggered automatically using [Automations](#).

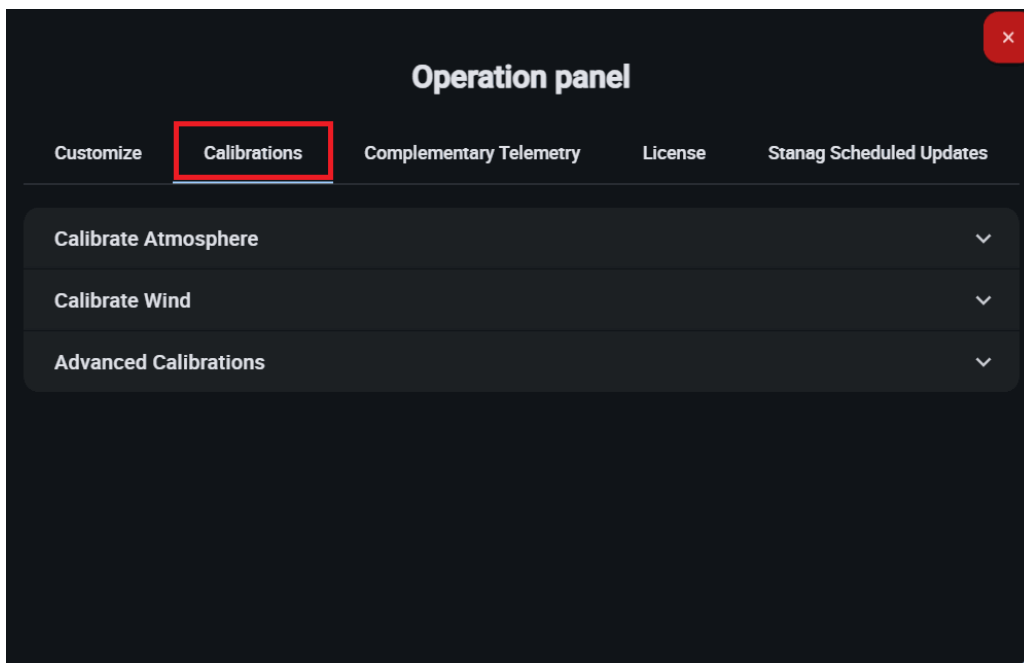

Operation Panel - Calibrations tab

Note

These calibrations will never modify the autopilot's current configuration: the changes are volatile, and will disappear once the system is rebooted.

Warning

To send any of these calibrations, it is necessary to click on the 'Send' button.

Calibrate Atmosphere

Calibration for MSL calculation with barometric pressure.


The screenshot shows the 'Operation panel' with a dark theme. The 'Calibrations' tab is selected and highlighted with a red box. Within this tab, the 'Calibrate Atmosphere' section is also highlighted with a red box. The settings include: a dropdown menu for 'Type' set to 'Autopilot (QFE)'; a 'Time to acquire mean' input set to '3' seconds; a 'Temperature' input set to '15' °C; an 'Altitude(MSL)' input set to '0' m; a checked checkbox for 'Take AP's pressure'; and a 'QFE' input set to '1013,25' mbar. A 'Send' button is located at the bottom right of the panel.

Calibrate Atmosphere

- **Type:** QFE and QNH options are available.
- **Time to acquire mean:** Specified time during which the static pressure is read from the static pressure sensor.
- **Temperature:** Outside air temperature.
- **Altitude (MSL):** Actual MSL altitude.
- **Take AP's pressure:** If enabled, static pressure will be selected from the autopilot measurement, otherwise users will have to enter it manually.

Calibrate Wind

This command allows to enter initial values for wind state and start wind estimation algorithm.

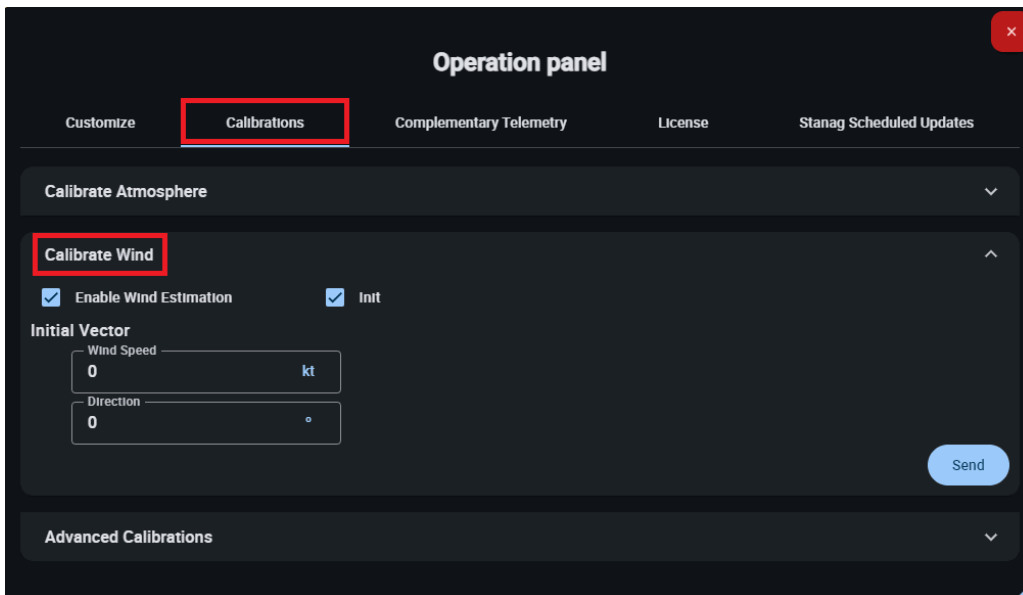


The screenshot shows the 'Operation panel' with a dark theme. At the top, there are tabs: 'Customize', 'Calibrations' (highlighted with a red box), 'Complementary Telemetry', 'License', and 'Stanag Scheduled Updates'. Below the tabs, there are three expandable sections: 'Calibrate Atmosphere', 'Calibrate Wind' (highlighted with a red box), and 'Advanced Calibrations'. The 'Calibrate Wind' section is expanded, showing two checkboxes: 'Enable Wind Estimation' and 'Init', both of which are checked. Below these, there is an 'Initial Vector' section with two input fields: 'Wind Speed' (set to 0) and 'Direction' (set to 0). A 'Send' button is located at the bottom right of the 'Calibrate Wind' section.

Calibrate Wind

- **Enable Wind Estimation.**
- **Init:** By enabling it, an initial wind vector can be set to a faster convergence of the estimation.
- **Wind Speed:** Module of the initial wind speed.
- **Direction:** Argument/Direction of the initial wind speed.

Advanced Calibrations

The following are the advanced calibrations that can be performed by the user during operation:

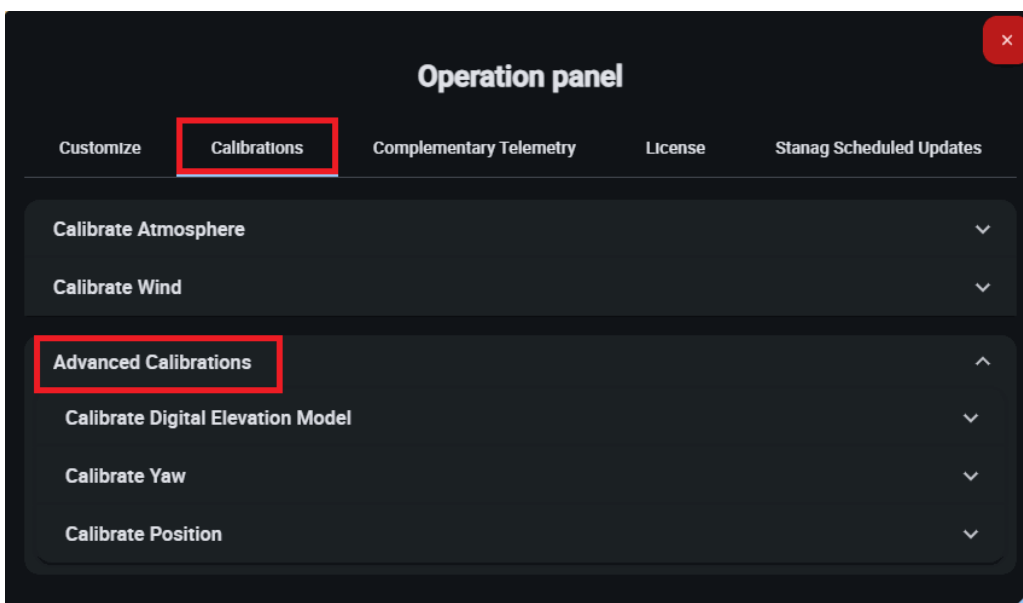

The screenshot shows the 'Operation panel' with a dark theme. At the top, there are tabs: 'Customize', 'Calibrations' (highlighted with a red box), 'Complementary Telemetry', 'License', and 'Stanag Scheduled Updates'. Below the tabs, there are three expandable sections: 'Calibrate Atmosphere', 'Calibrate Wind', and 'Advanced Calibrations' (highlighted with a red box). The 'Advanced Calibrations' section is expanded, showing four sub-sections: 'Calibrate Digital Elevation Model', 'Calibrate Yaw', and 'Calibrate Position'. Each sub-section has a dropdown arrow next to it.


Advanced Calibrations

- **Calibrate Digital Elevation Model (DEM)**

This calibration calculates the offset that the SRTM of the current point should have so that the estimated AGL results in the desired AGL (the one indicated in the calibration).

Warning

- This offset is only valid for the point where the DEM has been calibrated.
- Always perform this action on the ground, unless an accurate estimation of current AGL is available.

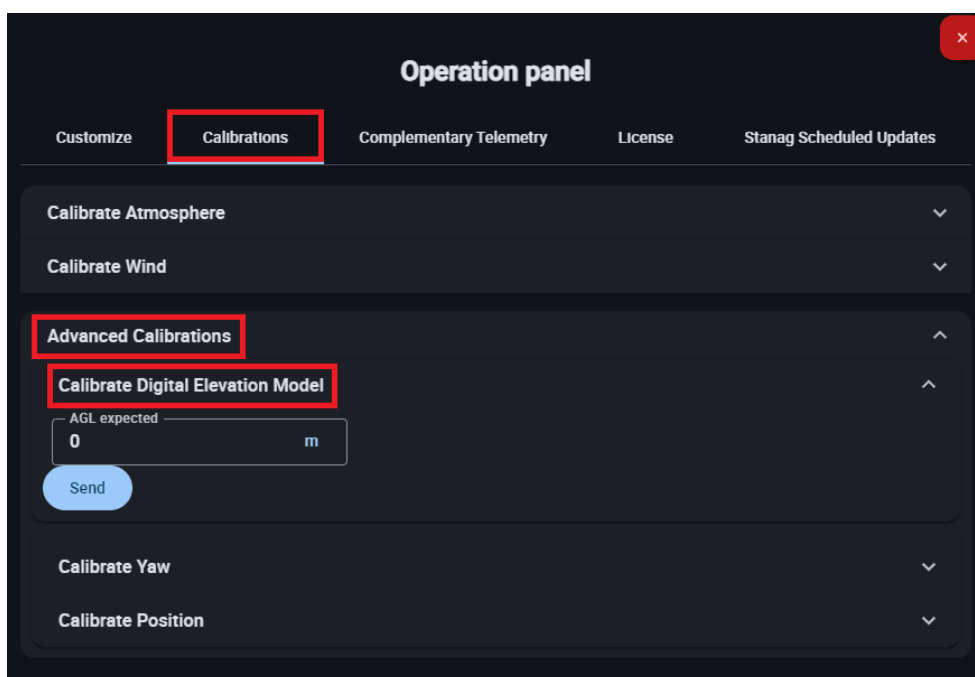


Advanced Calibrations - Calibrate DEM

- **Calibrate Yaw**

Allows to manually modify the Yaw Navigation state.

Warning

If there is any Yaw sensor active (i.e. Magnetometer), this command will not work since it will be automatically overridden.

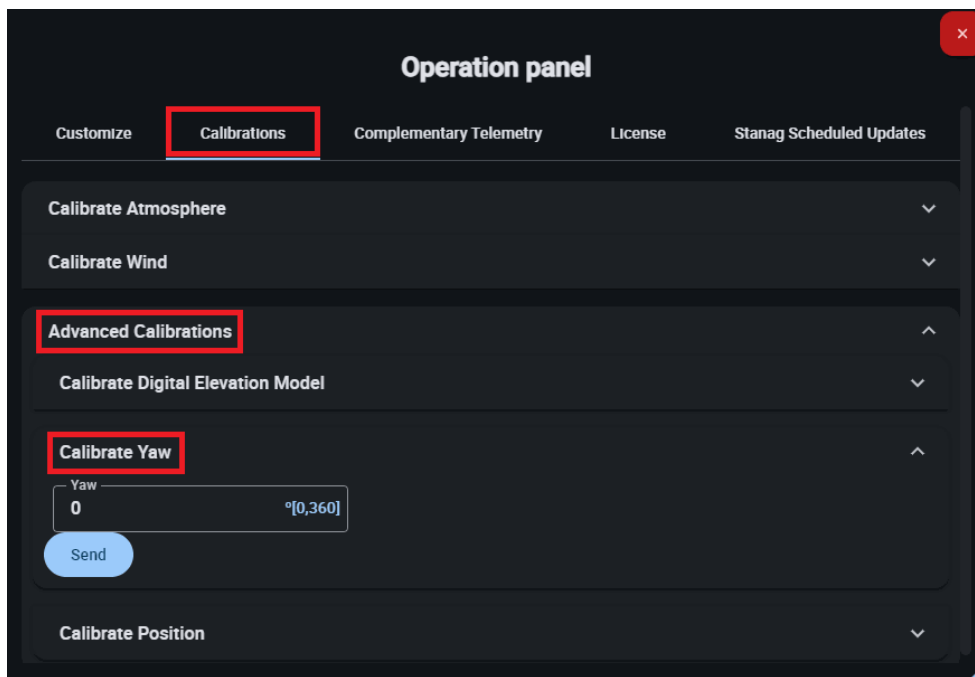

Advanced Calibrations - Calibrate Yaw


- **Calibrate Position**

Allows to manually modify the Position Navigation state.

The configurable parameters of the position calibration are the same as for configuring the position of a waypoint. So they have already been described in detail earlier in the [Waypoint - Mission](#) section of this manual.

⚠ Warning

If there is any absolute positioning sensor active (i.e. GNSS), this command will not work since it will be automatically overridden.

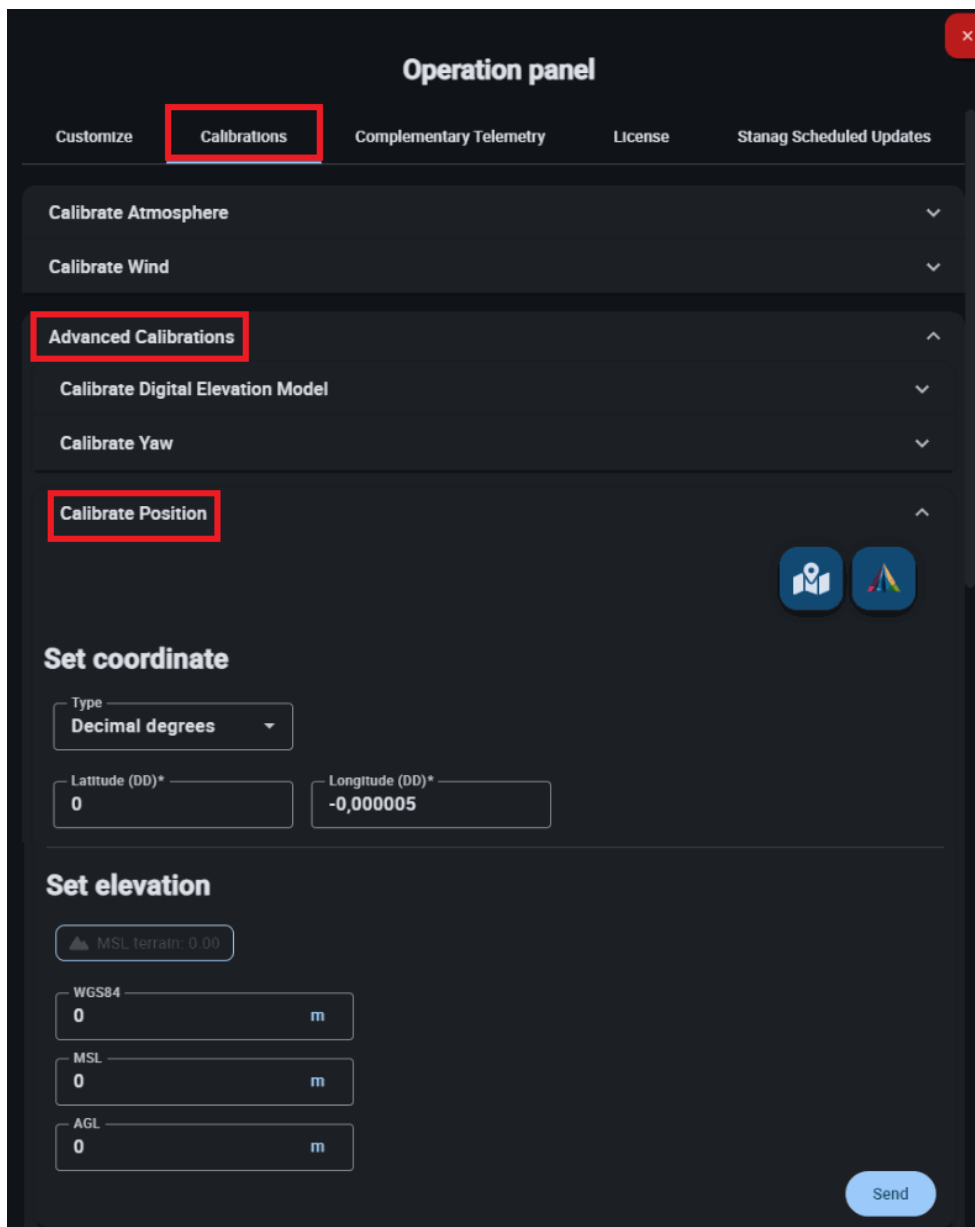


The screenshot displays the 'Operation panel' in Veronte Ops. The 'Calibrations' tab is selected and highlighted with a red box. Within this tab, the 'Calibrate Position' section is also highlighted with a red box. This section contains two main parts: 'Set coordinate' and 'Set elevation'. The 'Set coordinate' part has a 'Type' dropdown set to 'Decimal degrees', and input fields for 'Latitude (DD)*' (0) and 'Longitude (DD)*' (-0,000005). The 'Set elevation' part shows 'MSL terrain: 0.00' and three input fields for 'WGS84', 'MSL', and 'AGL', all set to 0 meters. A 'Send' button is located at the bottom right of the panel.

Advanced Calibrations - Calibrate Position

Complementary Telemetry

The Complementary Telemetry panel enables users to include extra flight data. While telemetry is primarily configured in [1x PDI Builder](#), further parameters can be added directly within Veronte Ops.

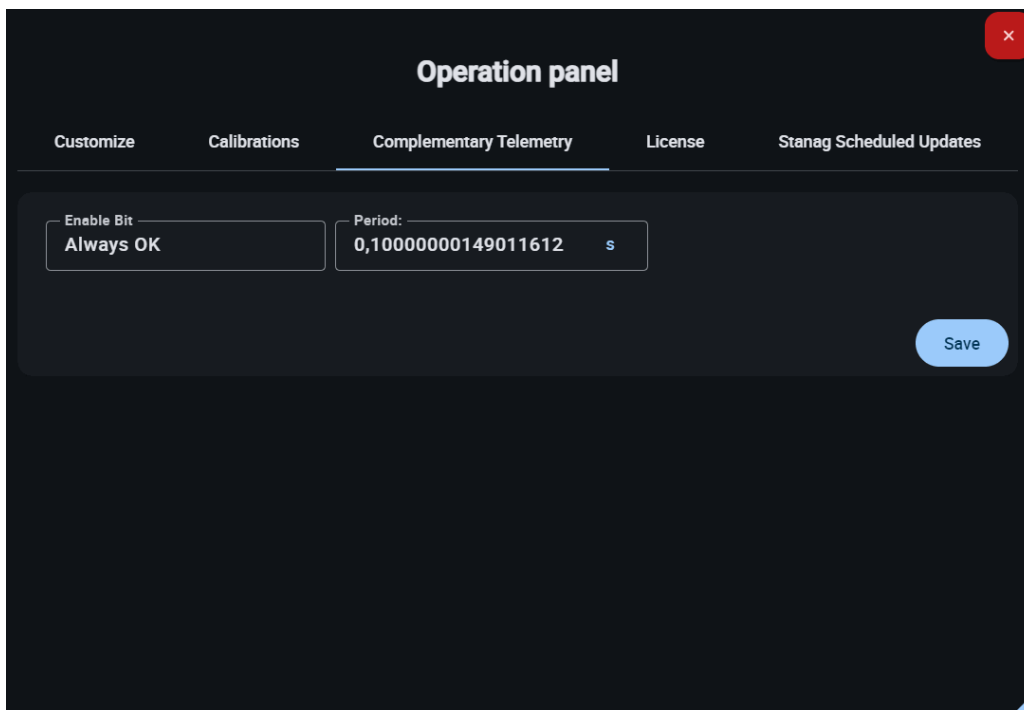

Complementary Telemetry - Panel


- **Enable Bit:**
 - **Always OK:** Enable Complementary Telemetry.
 - **Always Fail:** Disable Complementary Telemetry.
- **Period:** Determines the time interval between the transmission of one data packet and the next. It is possible to choose between s, min, h, μ s and ms.

Important

The complementary vector telemetry always runs at a fixed frequency of 10 Hz (not configurable), and variables are sent uncompressed. Therefore, it is recommended to add the variables to the 'Data to Vapp' telemetry vector to configure the desired frequency, variable compression/uncompression, etc.

License

The License section of the Operation panel determines that the platform has a limited operation license. This means that the aircraft is submitted to several restrictions, such as limits on the area of operation.

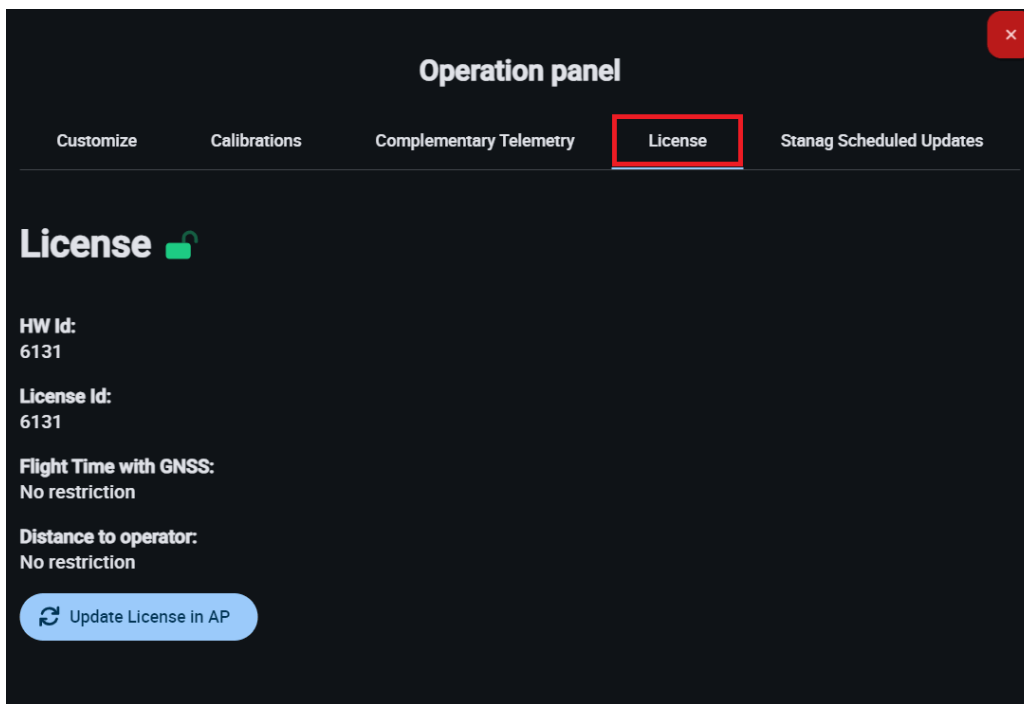

License

- **Status:** Displays license status (e.g., License, License limited).
- **HW Id:** The unique identification code of the connected hardware. This ID is essential for technical support and for generating unit-specific license files.
- **License Id:** The identification number of the license currently installed on the device.
- **Flight Time with GNSS:** Indicates the maximum allowed flight time using satellite positioning.
- **Distance to operator:** Specifies the maximum operational radius allowed between the UAV and the control station.
- **Update:** The Update License in AP button allows loading new permissions or renewing the license directly on the unit.

Note

The License Address must match the UAV Address.

However, if users do not have the license activated, they will continue to have limited operation, in which case they should contact sales@embention.com.


For more information on this operation license, see [Limited Operation](#) section of the 1x Hardware Manual.

Important

Users should take into account that if the platform is a **PCS**, it will not have an operation license. This is because PCS units do not need to fly.

STANAG 4586 Scheduled Updates

The **STANAG 4586 Scheduled Updates** section allows configuring the transmission frequency of messages compliant with the STANAG 4586 standard.

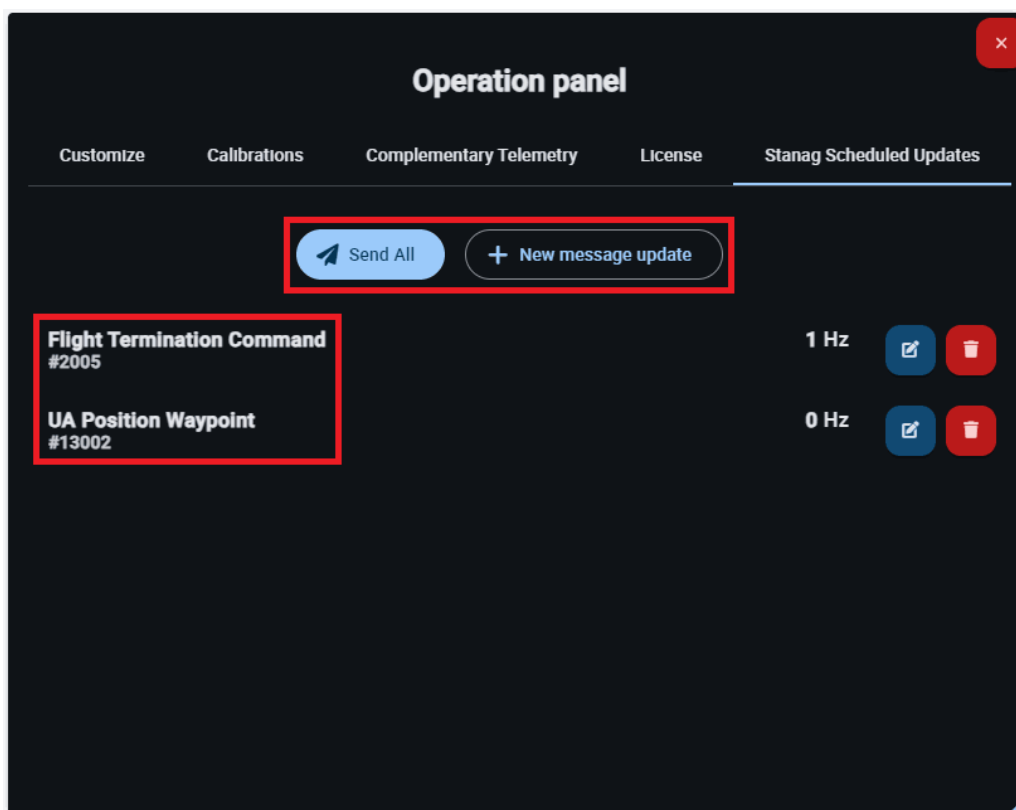

STANAG 4586 Scheduled Updates


- **Send All:** Manually triggers the immediate transmission of all messages in the list, regardless of their programmed frequency.
- **New message update:** Allows the user to add a new STANAG 4586 message to the monitoring list by selecting it from a library of standard identifiers.

- **Message Name and ID:** Indicates the type of data being transmitted.
- **Frequency (Hz):** Allows defining the number of updates per second for each individual data packet.
-  **Edit:** Allows the operator to change the message type or the update frequency.
-  **Delete:** Allows the operator to remove the message from the scheduled updates list.

Operations

By clicking here, it is possible to modify the operation.

The following options are available:

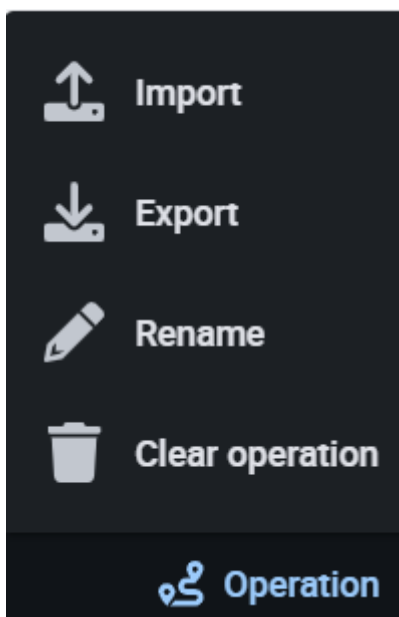


Options

- **Import:** The user can import an operation, the available formats are: **ZIP**, **KML** and **GEOJSON**.
- **Export:** The current operation can be exported, the available formats are: **ZIP**, **KML** and **GEOJSON**.
- **Rename:** The user can rename the operation as desired.
- **Clear operation:** Clicking here will delete the selected operation.

 Note

When a configuration is saved in the 1x PDI Builder software, the following message will appear to inform the user that there is a new operation loaded in the Autopilot 1x:

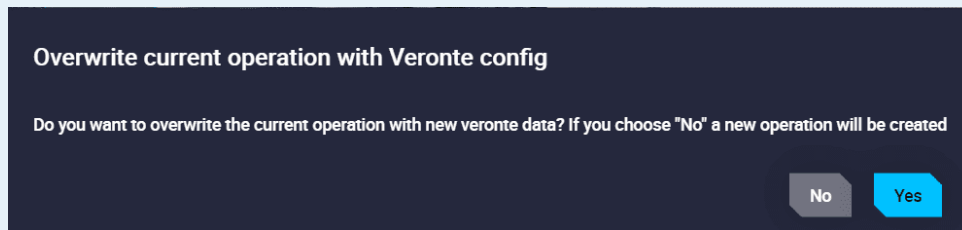**Operation overwrite/new**

- If the user does not select anything, after 10 seconds this message will disappear and a new operation will be created.
- If the user selects NO, a new operation will also be created, as described in the message.
- If the user selects YES, no new operation will be created and the changes saved in the 1x PDI Builder software will be applied to the current operation, i.e. the current operation will be overwritten.

Operation actions**Revert Operation changes**

- When a change is made, it is possible to revert it by pressing this button. This is only possible if the changes have not yet been saved.

**Save Operation**

- Local saving of the mission.



Reload

- The Reload command reverts the operation to the last saved version.

Warning

This operation is only available if the mission has not been uploaded to the device.

To apply any change to the device, it is necessary to save it by pressing this button.



Upload to '(Platform name)'

- To update the operation loaded on the autopilot with the new saved changes, click on this button.
- If there is no change to upload to the operation configuration, the following message will appear:



Nothing to save in AP800


Nothing to Save in '...'

4. Platform

This panel lists the linked Veronte Autopilots, either connected by radio link or directly to the laptop, summarizing important information about these platforms such as:

- **Platform name**
- **Platform connection status**
- **Platform license**

Moreover, this menu allows to interact with the platform in Veronte Ops workspace through **Platform actions**.

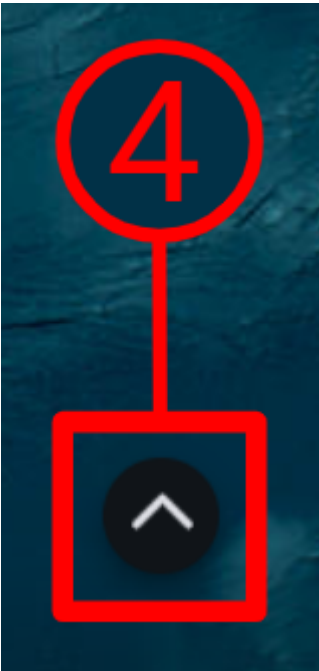

Platform list

Platform name

The name of the unit configured in 1x PDI Builder is displayed:


ID	Name	T/N	Type	Vehicle	Status
0x000017F3	AP800	4278190080	Not Identified	× ⋮	Connected

Platform name

For more information on customizing the platform name, please refer to [Unit name -Veronte](#) section of 1x PDI Builder manual.

Note

In the case of the DRX, the Primary 1x Autopilot will be displayed.

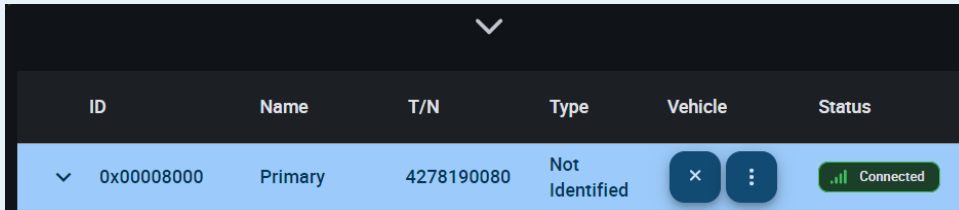


ID	Name	T/N	Type	Vehicle	Status
0x00008000	Primary	4278190080	Not Identified		Connected

Platform name - Veronte Autopilot 4x

Platform connection status

This menu allows the user to check the connection status of linked autopilots:


- **Not connected**

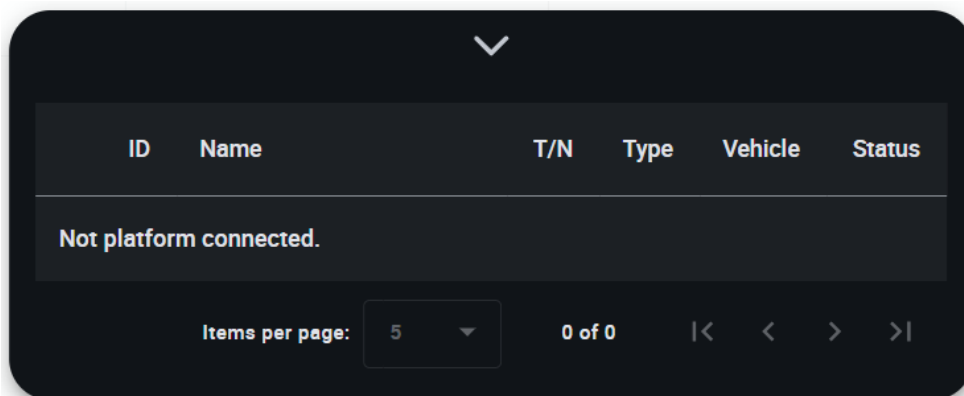

Connection status - Not connected

- **Not selected:**

 Even if an Autopilot 1x is connected, until it is selected by the user, Veronte Ops will operate as if no autopilot is connected:



Connection status - Not selected

- **Connected:**

Once Veronte Autopilot is connected and selected, Veronte Ops appears as shown in the figure below:

ID	Name	T/N	Type	Vehicle	Status
0x000017F3	AP800	4278190080	Not Identified		Connected

Items per page: 51 - 1 of 1<<<>>>

Connection status - Connected

• Disconnected:

ID	Name	T/N	Type	Vehicle	Status
0x000017F3	AP800	4278190080	Not Identified		Disconnected

Items per page: 51 - 1 of 1<<<>>>

Connection status - Disconnected

• Maintenance mode:

ID	Name	T/N	Type	Vehicle	Status
0x000017F3	AP800	4278190080	Not Identified		Maintenance mode

Items per page: 51 - 1 of 1<<<>>>

Connection status - Maintenance mode

• Maintenance mode (loaded with errors):


ID	Name	T/N	Type	Vehicle	Status
0x000017F3	AP800	4278190080	Not Identified		Loaded with errors

Items per page: 51 - 1 of 1<<<>>>

Connection status - Maintenance mode (loaded with errors)

Platform actions

Moreover, when in Veronte Ops the Autopilot 1x is displayed in any connection state other than 'not connected', the following actions appear in this menu:

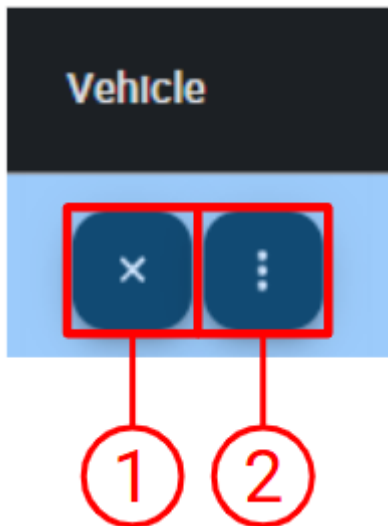

Platform list actions

1. Select type of LOI

The LOI menu defines the level of authority and control the operator holds over the UAV system during the mission.


- **LOI2:** Allows telemetry monitoring and sensor data reception.
- **LOI3:** Enables control of the payload and onboard sensors.
- **LOI4:** Provides control over aircraft navigation and routing.
- **LOI5:** Guarantees full control, including takeoff and landing phases.

Warning

LOI 5 must be selected to enable Fly to loiter or Fly to hover.

- **Release:** Releases any level of control previously acquired over the system.

2. Options

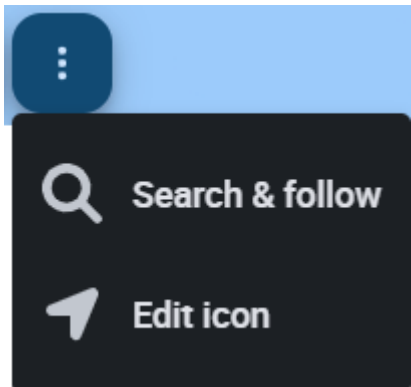

Platform Options

- **Search & follow:** Centers the view on the aircraft and follows it during movement.
- **Edit Icon:** Allows modifying the icon representing the aircraft on the map.

Consult the [Platform Icon](#) section for additional information.

DRx features

When an DRx is linked to Veronte Ops, the following extra features are available:

- **Show Platforms button:** By expanding the DRx tab, each Autopilot 1x within the DRx group is displayed.

A screenshot of a web application interface showing a table of aircraft data. The table has a dark theme with white text. The columns are: ID, Name, T/N, Type, Vehicle, and Status. There are four rows of data. The first row is highlighted in blue. To the right of the table, there are controls for 'Items per page' (set to 5) and '1 - 1 of 1' items, along with navigation arrows.

ID	Name	T/N	Type	Vehicle	Status
0x00008000	Primary	4278190080	Not Identified	 	 Connected
0x00008003	Monitor	4278190080	Not Identified	 	 Connected
0x00008001	Primary	4278190080	Not Identified	 	 Connected
0x00008002	Recovery	4278190080	Not Identified	 	 Connected

DRx features - Show Platforms

- **Autopilot 1x in command:** The Autopilot 1x selected by the monitor is marked with the  icon.

ID	Name	T/N	Type	Vehicle	Status
0x00008000	Primary	4278190080	Not Identified		Connected
0x00008003	Monitor	4278190080	Not Identified		Connected
0x00008001	Primary	4278190080	Not Identified		Connected
0x00008002	Recovery	4278190080	Not Identified		Connected

Items per page: 5 1 - 1 of 1

DRx features - 1x in command

Important

'1x Selected by the monitor' is not equivalent of '1x Selected in Veronte Ops'.

Example:

In the image below:


- Autopilot 1x Primary : Autopilot selected by the arbiter, i.e. in command.
- Autopilot 1x Recovery : Autopilot selected in Veronte Ops.

ID	Name	T/N	Type	Vehicle	Status
0x00008000	Primary	4278190080	Not Identified		Connected
0x00008003	Monitor	4278190080	Not Identified		Connected
0x00008001	Primary	4278190080	Not Identified		Connected
0x00008002	Recovery	4278190080	Not Identified		Connected

Items per page: 5 1 - 1 of 1

DRx features - 1x Selected vs 1x in command

In the following image, the recovery autopilot is selected instead.

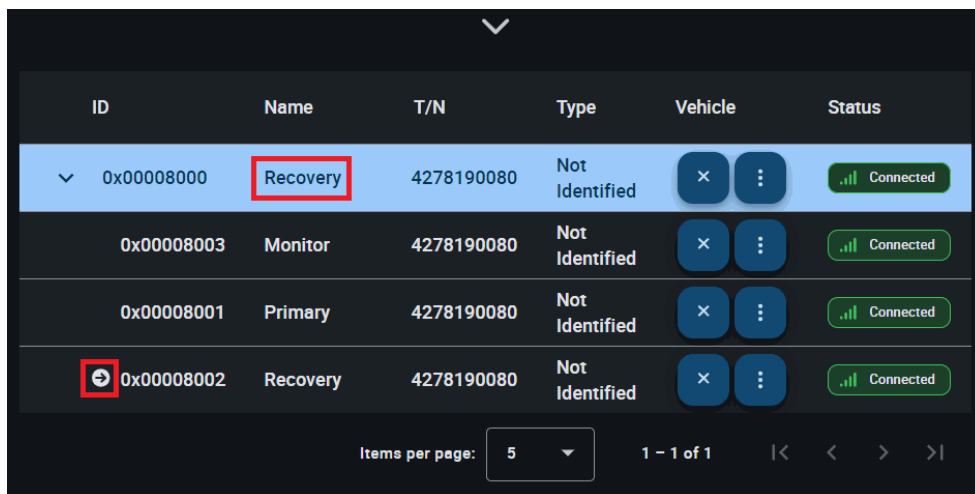


ID	Name	T/N	Type	Vehicle	Status
0x00008000	Recovery	4278190080	Not Identified	×	Connected
0x00008003	Monitor	4278190080	Not Identified	×	Connected
0x00008001	Primary	4278190080	Not Identified	×	Connected
0x00008002	Recovery	4278190080	Not Identified	×	Connected

Items per page: 5 1 - 1 of 1

DRx features - 1x Selected vs 1x in command

5. Workspace

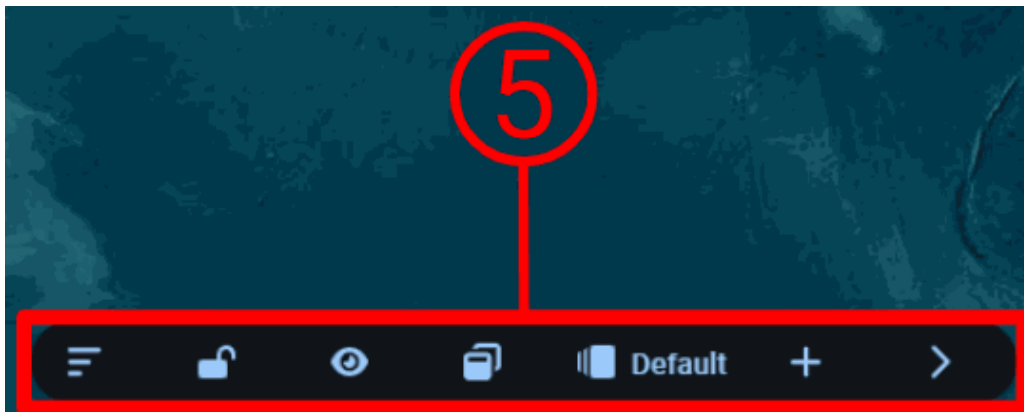

Workspace toolbar

Workspace settings allow the user to customize any information to be displayed on the screen for monitoring the operation.


Attention

Although Veronte Ops cannot be extended to multiple screens, it is possible to open more than one Veronte Ops in order to display all the widgets necessary for the operation.

Map options


The map widget configures the background map that appears in Veronte Ops screen.

By right clicking on the map the following map options are available:

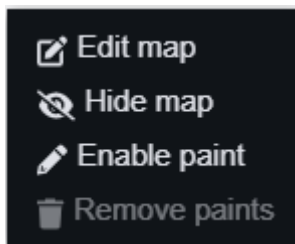


Map options

- **Edit map:** In this menu the following options can be configured:

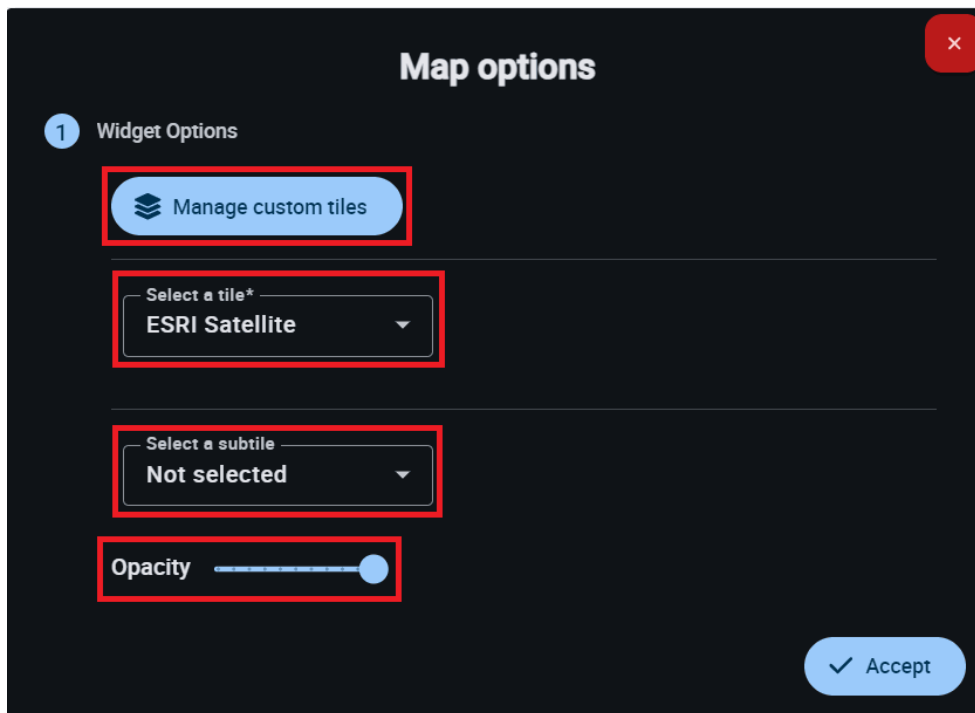

Edit map options

- **Manage custom tiles:** This menu allows the user to add and manage their own map tiles.
When a custom tile is added, it will appear as a new option under the "Custom tiles" category to select it either as a "tile" or as a "subtile".

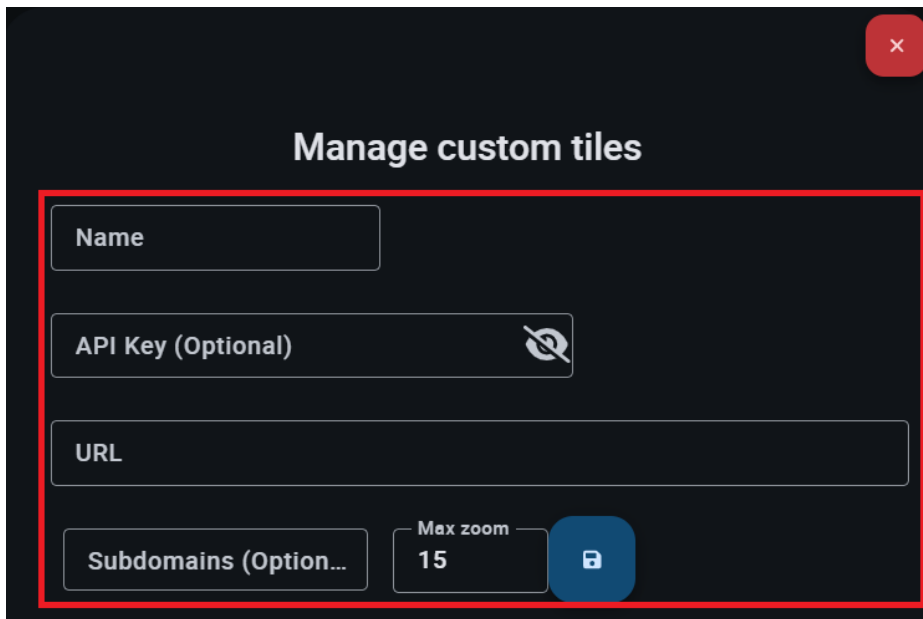

Manage custom tiles

- **Name:** Users can customize the name of this tile.
- **API Key (Optional):** Enter the API Key if needed (this depends on the map server).
- **URL:** Enter the URL of the map to be added. This URL must be of type "Slippy map tilename".

The necessary "parts" of the URL are listed below with an example: `https://tile.waymarkedtrails.org/hiking/{z}/{x}/{y}.png`

- The first part of the URL specifies the tile server ⇒ `tile.waymarkedtrails.org`
- Tile coordinates are usually specified using the `/zoom/x/y.png` or `/z/x/y.png` tail ⇒ `/{z}/{x}/{y}.png`
- Some tileservers will use a directory to specify a particular stylesheet ⇒ `/hiking/`


⚠ Caution

If the added map requires an API Key, users must add as part of the URL the following: `{apiKey}` (it is important to respect the lowercase and uppercase of this). This is so that Veronte Ops correctly recognizes that the API Key entered above must be substituted in the URL.

An example is shown below:

```
https://{s}.api.tiles.openaip.net/api/data/openaip/{z}/{x}/{y}.png?apiKey={apiKey}
```

- **Subdomains (Optional):** This is not needed, but can be entered. Multiple subdomains can be entered (as many as the server provides), they are added as pills as shown below.

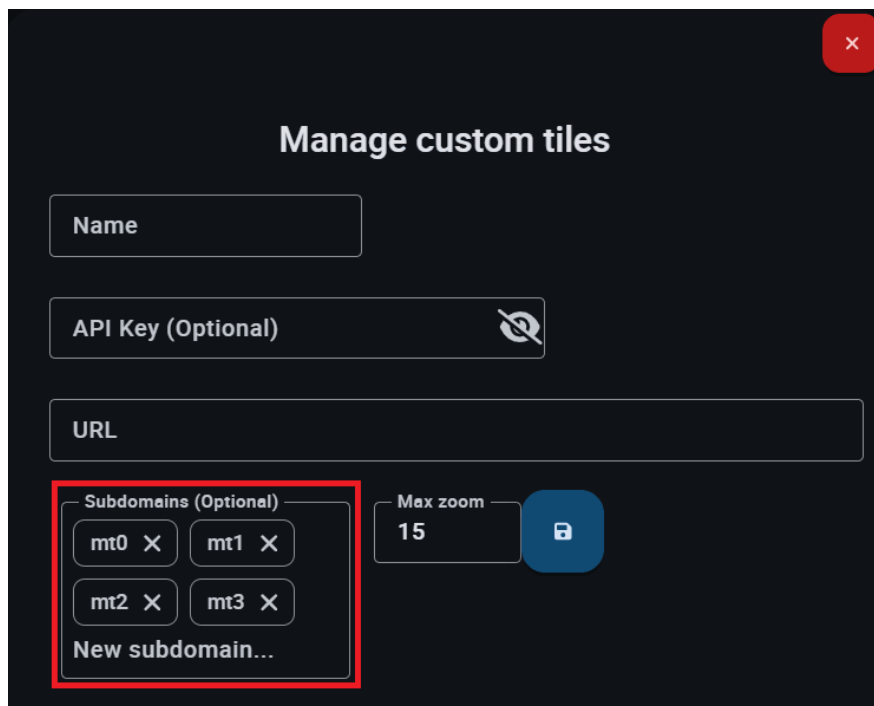**Manage custom tiles - Subdomains**


- **Select a tile:** It is possible to select the map provider from several options, including "Custom Tiles" if they have been created in the Manage custom tiles option.

-
- **Select a subtile: Users can add a second map. The available options are:**
 - **Not selected: This is the default selected option.**
 - **OpenAIP.**
 - **GaoDe Annotation.**
 - **Custom tiles: Only appears when a custom tile has been created in the Manage custom tiles option.**
 - **Opacity: The user can set the opacity of this subtile. It is expressed as a percentage of 1 (i.e. the minimum is 0 and the maximum is 1).**


 Tip

This allows the user to have one map overlayed on top of another.

For example, it can be used to have as tile the main map and as a subtile a map with airspace information (OpenAIP map):

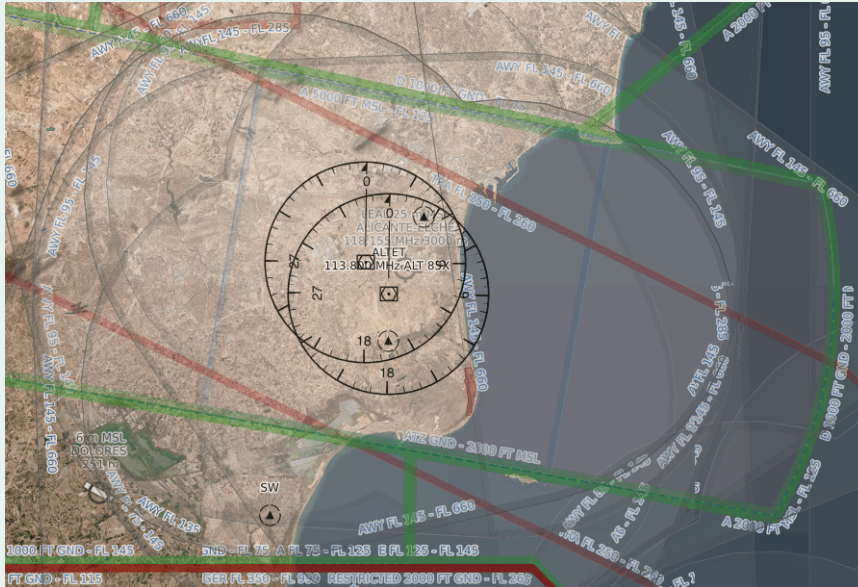

Example of map with subtile

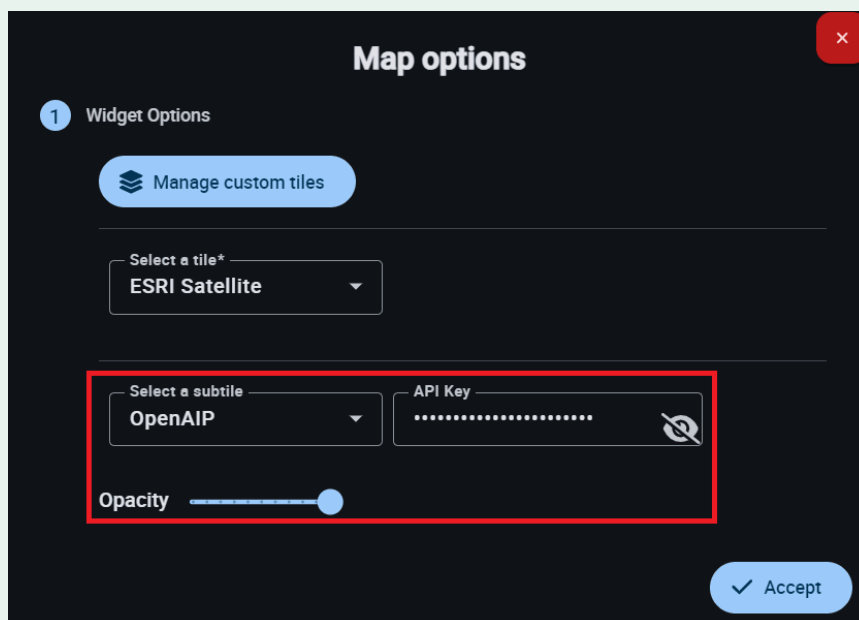


Example of map with subtile configuration

- **Hide map:** The map will be hidden. To show it again, go to 'Main Widgets' menu and select 'Map'.

In addition, double-clicking on the map will zoom in on the area the user is clicking on.

Furthermore, the map can be minimized/maximized by clicking on the  icon in the top right corner of the application. An example is shown below:

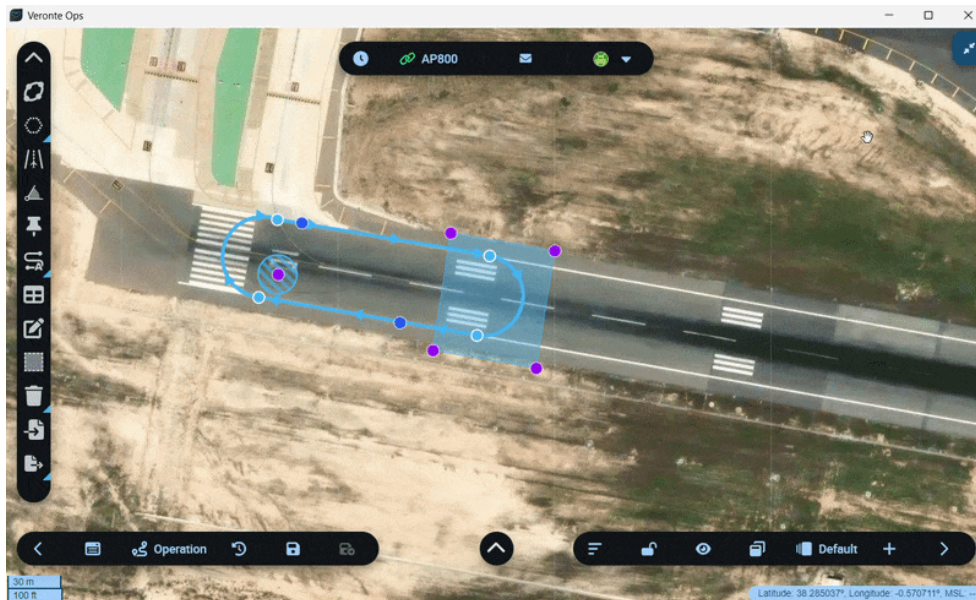


Minimize/Maximize map

- **Enable paint:**


This tool allows the user to make quick notes during the operation.

To access the paint option, right-click and select .

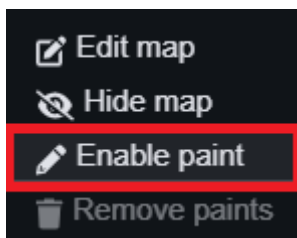

Enable paint

A 'Paint toolbar' will then appear:

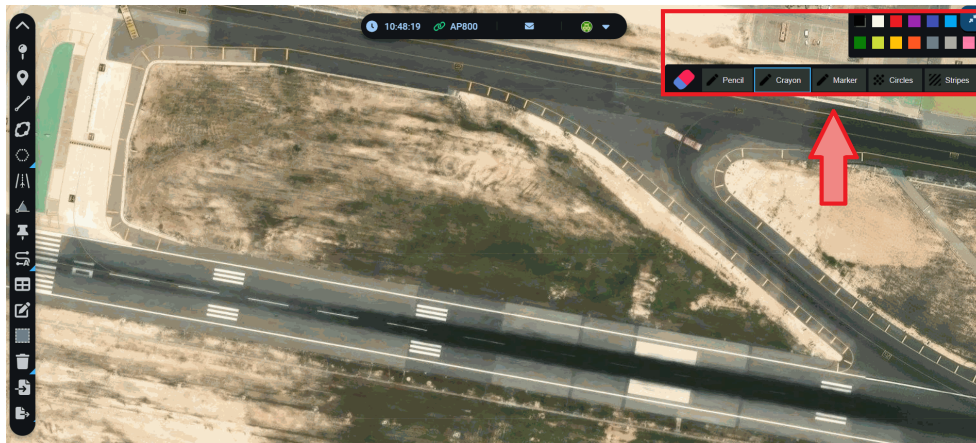


Paint toolbar

Users can choose from a variety of 'writing elements' and colors to paint:

- Pencil
- Crayon
- Marker
- Circles
- Stripes

An example of each is shown in the figure below:

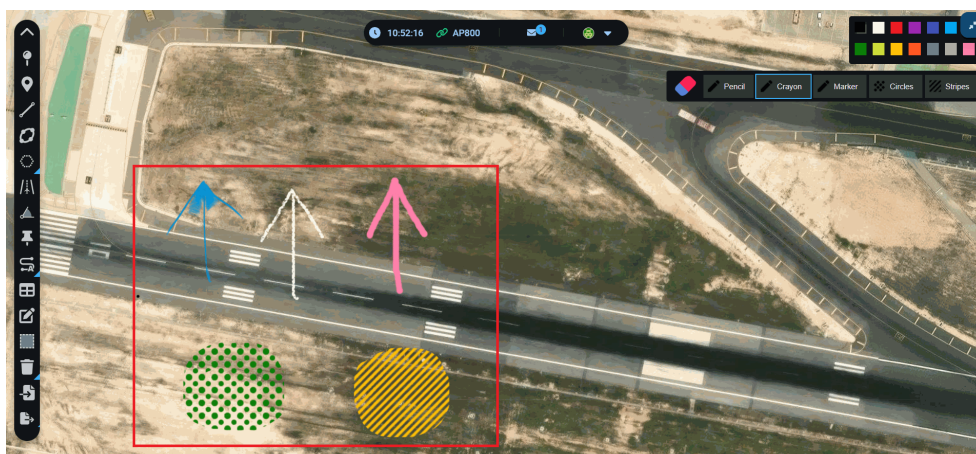

Paint examples

In addition, all notes made can be erased with an eraser, if they are not already saved, by clicking on the 'eraser option' in the toolbar.



Paint erased

Note


Changes will be saved automatically upon exiting the '*Paint' option. When exiting, the following message appear:

Paint successfully added.

Message paint added

- **Remove paint:**

By clicking it , all paints will be removed. The following confirmation pop-up window will appear:

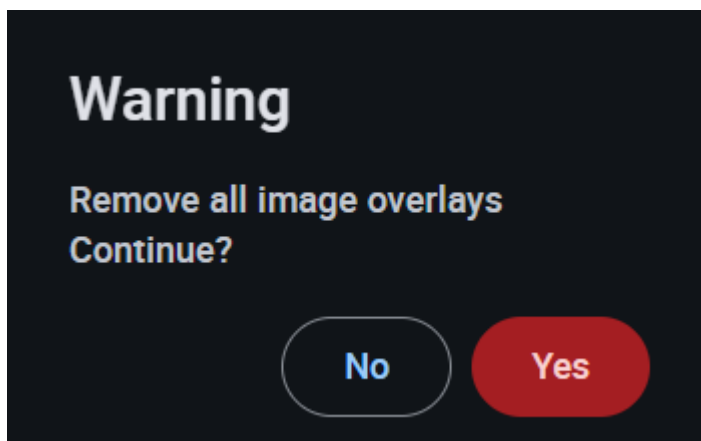

Remove paint


After clicking 'Yes', the following confirmation message will be displayed.

Paint successfully deleted.

Message paint deleted


Workspace options

It is possible to edit the background behind the map. To access this editing menu it is necessary to first minimize the map (or hide it) and then right click on the background:

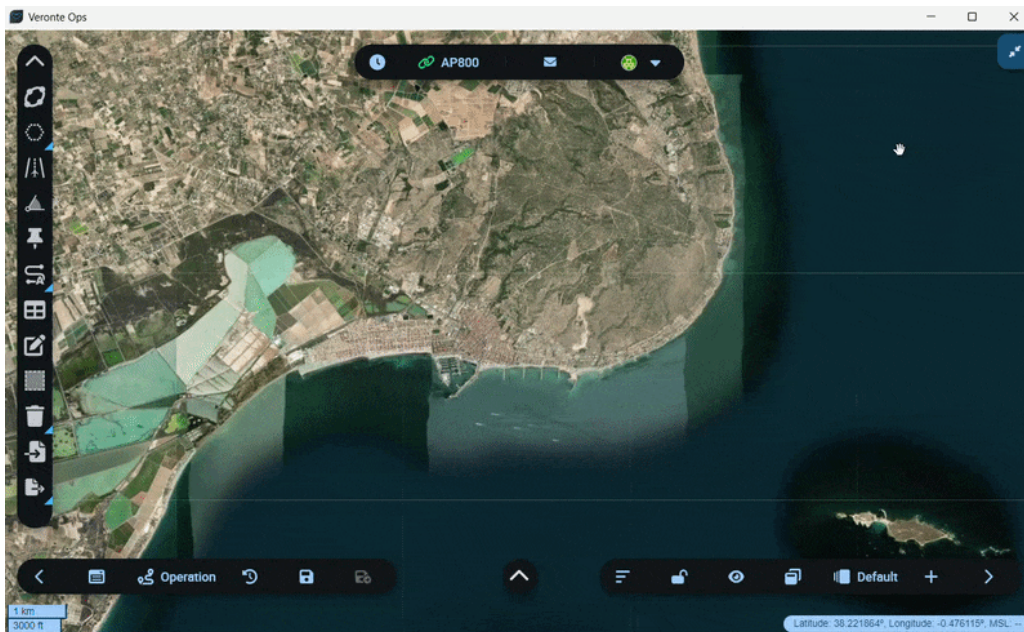

Access background edition

In this menu, users will find:

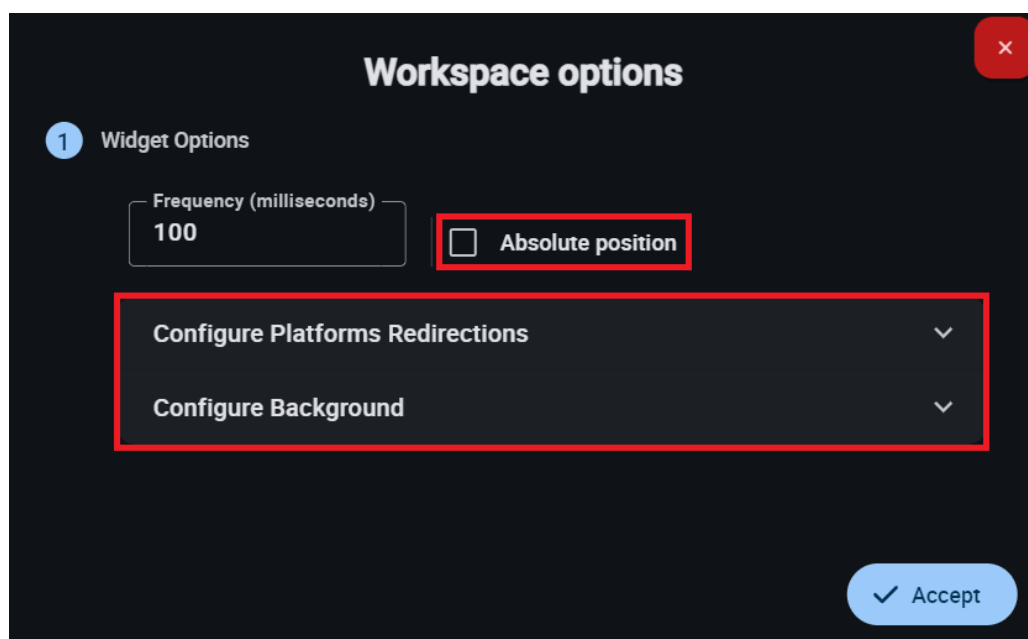

Background edition

 Tip

By right-clicking on the  **Workspace** button, it is possible to open the Workspace options.

- **Absolute position:** When enabled, this checkbox locks the widget to a specific fixed position on the screen, preventing it from moving when the workspace is scrolled or resized.
- **Widget options:** The user can change the refresh frequency of the workspace, of the widgets. By default this frequency is 100 milliseconds.
- **Configure Platforms Redirections:** Users can create a redirection to link a platform to a custom "role".

 Hint

A common approach is to create two roles: "Air" and "Ground", and assign the desired widgets to the corresponding role instead of linking them directly to a specific platform. This allows users to easily switch the platform assigned to the Air/Ground role from this menu if a different Autopilot 1x unit is used, without needing to update each widget individually.

Workspace options

1 Widget Options

Frequency (milliseconds)
100

☐ Absolute position

Configure Platforms Redirections

Name*
Name is required

Choose platform
Selected Platform

+


Configure Background

✓ Accept

Background - Platforms Redirections

Click on "+" to add a new redirection:

- **Name:** Enter the desired name for the rule.
- **Choose platform:** Users must select the platform for which the redirection is configured. The available options will always be the IDs of the connected Autopilots 1x and 'Selected platform', i.e. the platform that is selected.
- **Delete button**
- **Configure Background:** Choose the type of background style between a color or an image:
 - **Color:** Users can select the desired color for the background.

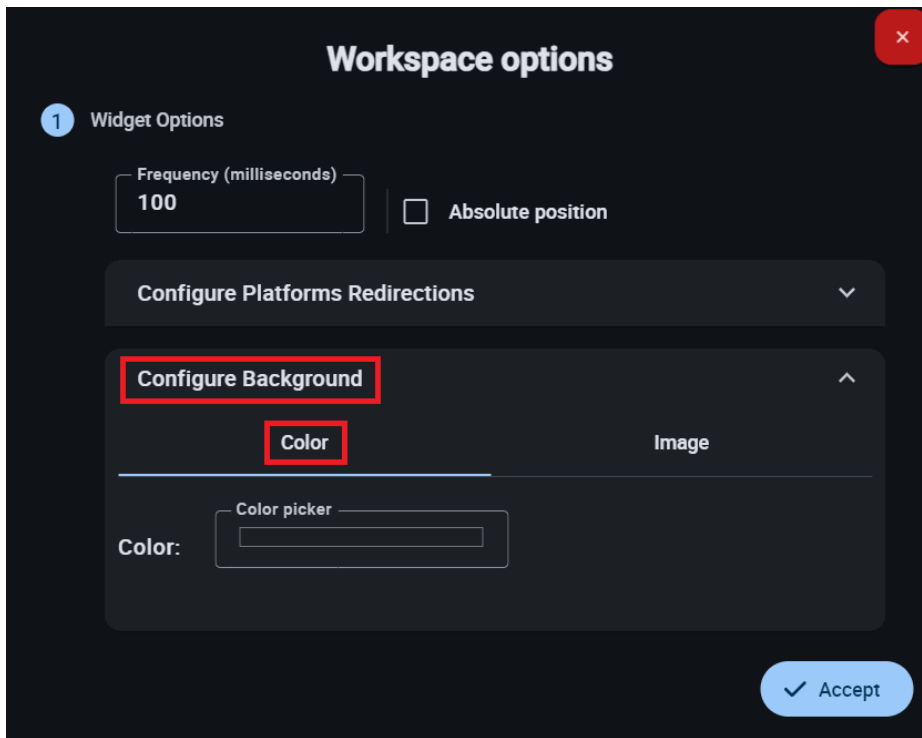

Workspace options

1 Widget Options

Frequency (milliseconds)
100

☐ Absolute position

Configure Platforms Redirections

Configure Background


Color Image

Color:

✓ Accept

Background - Configure color

- **Image:** When choosing 'Image', users must configure some parameters:

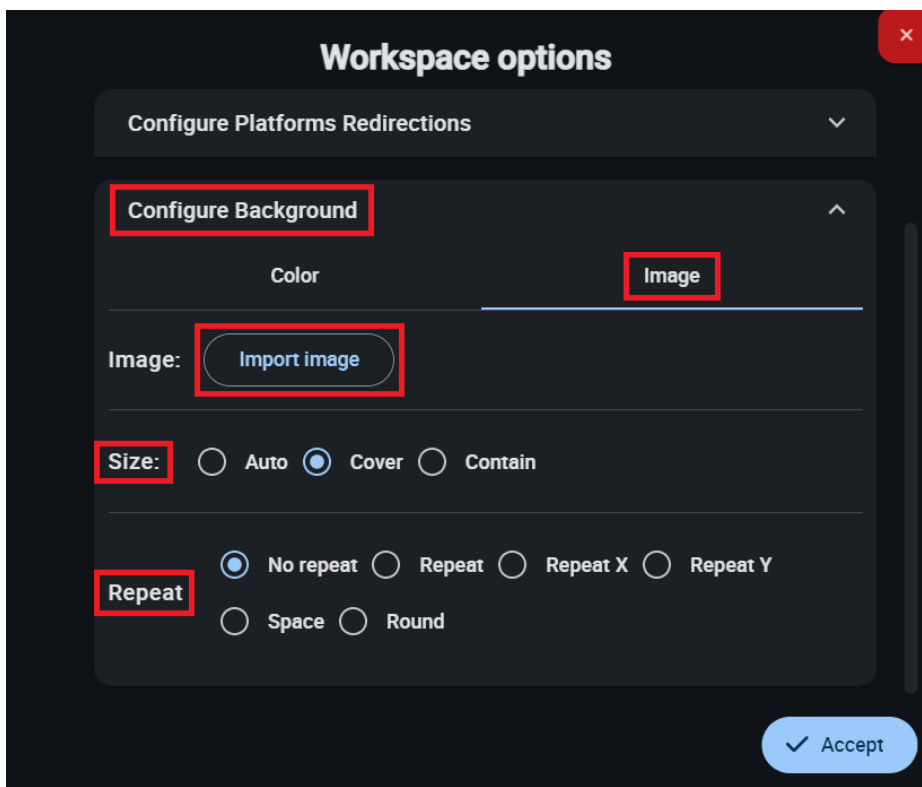

Workspace options

Configure Platforms Redirections

Configure Background

Color **Image**

Image:

Size: ☐ Auto ☒ Cover ☐ Contain

Repeat ☒ No repeat ☐ Repeat ☐ Repeat X ☐ Repeat Y
☐ Space ☐ Round

✓ Accept


Background - Configure image

- **Image:** A Veronte Ops image is set by default, but it is possible to import another image from the local PC.

- **Size:** The size of the background can be modified, the available options are: Auto, Cover and Contain.
- **Repeat:** The repetition of the image can also be customized, choose from: No repeat, Repeat, Repeat X, Repeat Y, Space and Round.

Workspace toolbar


The workspace toolbar is divided into 5 different 'parts':

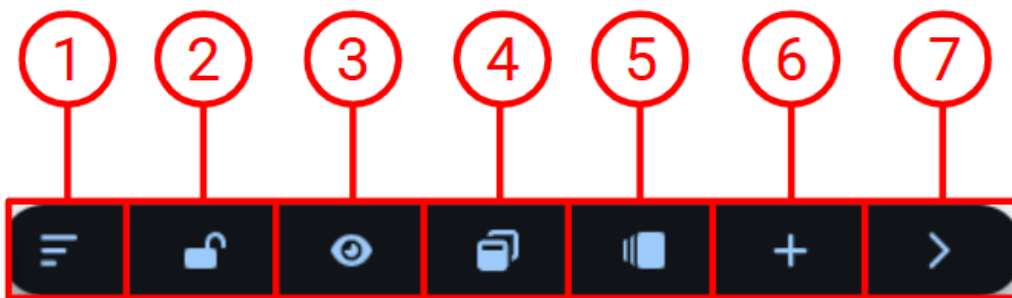

Workspace toolbar parts

1. **Sort widgets:** With this button it is possible to sort the widgets, i.e. the user can place one widget on top of another.

To do this, click on this button and a 'sorting panel' will appear for the user to sort widgets, so that the first in the list will be on top of the second, the second on top of the third and so on. For ease of use, the widget selected for sorting will be outlined in blue, as shown in the example below:

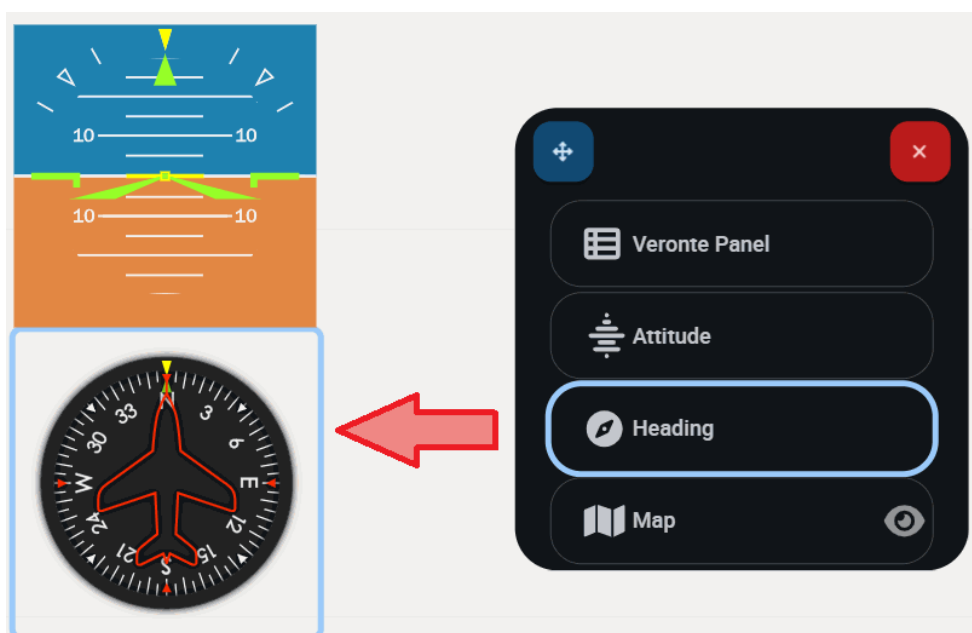


Sort widgets

In this example, 'Heading widget' is selected and is ordered above the 'Attitude widget'.

Warning

The map will always be at the back (the last widget in the list), except when minimized, which can be sorted as desired.

In addition, by right-clicking on each widget from this sorting panel it is possible to access its options (note that groups in the sorting panel also behave like widgets):

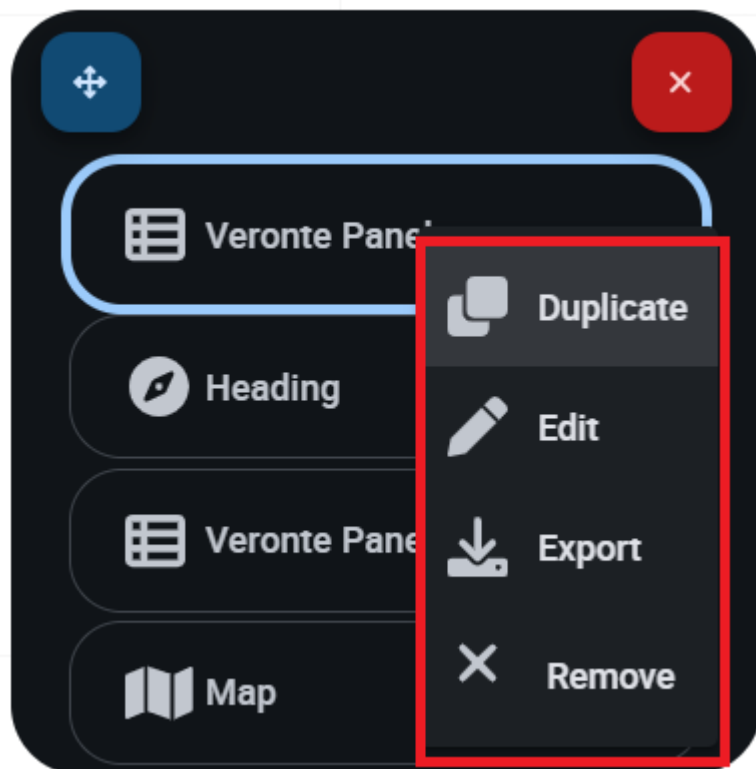


Sort widgets options

- **Duplicate:** Duplicates this widget.
 - **Edit:** Accesses the edit configuration menu of each widget. For more information on the configuration of each widget, please refer to the corresponding widget section of this manual.
 - **Export:** Saves the element.
 - **Remove:** Removes this widget.
- 2. Lock/Unlock widgets:** When widgets are locked, users will not be able to move them.
 - 3. Show/Hide widgets:** Users can choose to show/hide all widgets by pressing this button.

4. **New window:** User can create another window to view the operation.
5. **Workspaces:** Veronte Ops allows users to create different workspaces.
This is useful to change the displayed information/widgets depending on the purpose of the operation, i.e., the widgets desired to be displayed during a simulation or flight test may not be the same as the widgets desired to be displayed for the final mission.
6. **Widgets:** Veronte Ops offers several applications to display parameters and variables in real time of the flight mission.
7. **Close Worspace bar**

Workspaces

By clicking here, a list of all workspaces loaded in Veronte Ops will appear. The current workspace is the one that is selected, the one shown in blue.

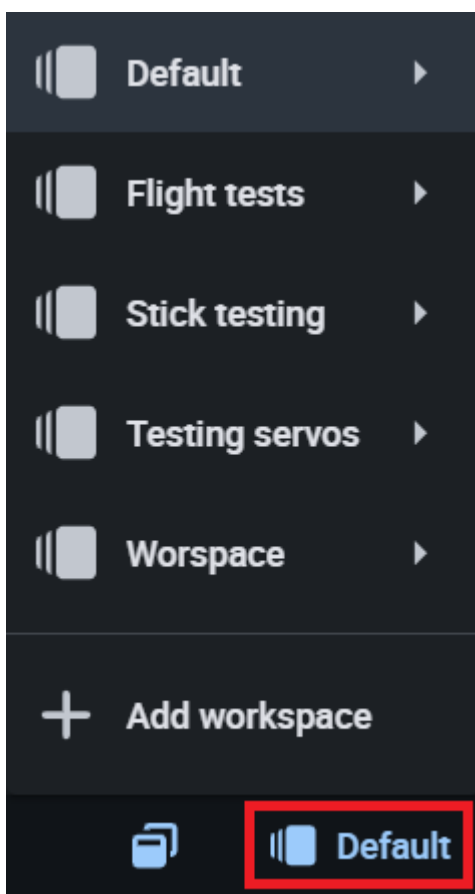

Workspaces

The following options are available for each workspace:

Workspaces options

- **Rename:** The user can rename the workspace as desire.
- **Duplicate:** Duplicates this workspace.
- **Export:** The current workspace can be exported. This file is exported in `.json` format.
- **Export:** Workspace export.
- **Open in new window:** User can open the desired workspace in a different window.
- **Remove:** Clicking here will delete the selected workspace.


Note

It is possible to delete several or all workspaces at once from the Workspace manager menu of the Status bar, click [here](#) for more information.

Adding a workspace

It is posible to create a new workspace by simply clicking on 'Add workspace'.

The user can choose between adding an empty workspace or importing one from the laptop, which has been previously exported. To import a workspace, the format file must be a `.json`.

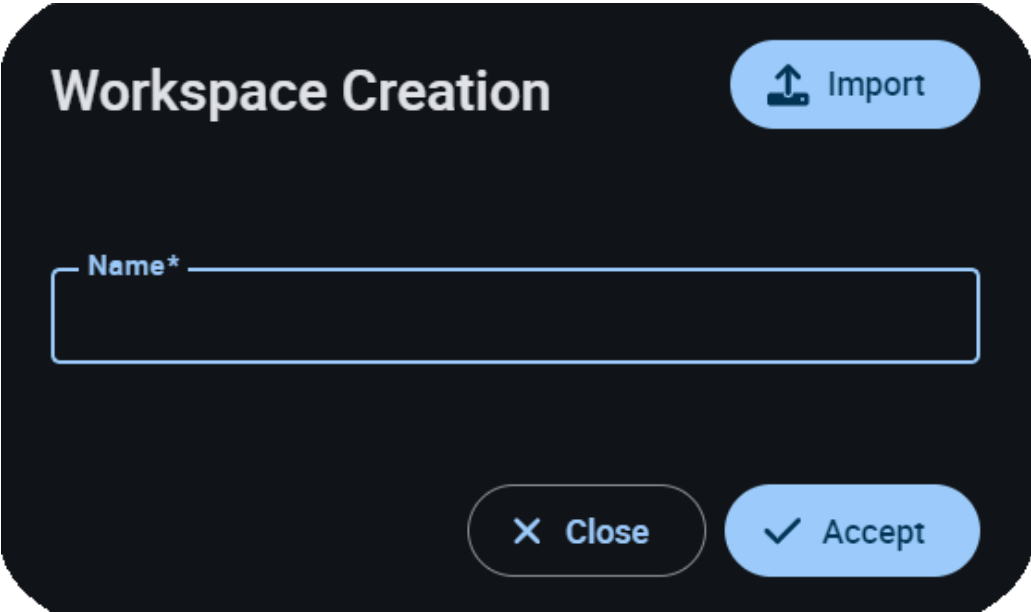


The image shows a 'Workspace Creation' dialog box with a dark background. At the top left is the title 'Workspace Creation'. At the top right is a blue button with an upward arrow icon and the text 'Import'. Below the title is a text input field with the label 'Name*' to its left. At the bottom of the dialog are two buttons: a 'Close' button with a red 'X' icon and an 'Accept' button with a green checkmark icon.

Add workspace

Widgets

By clicking here, the user will see different widget menus sorted by categories.

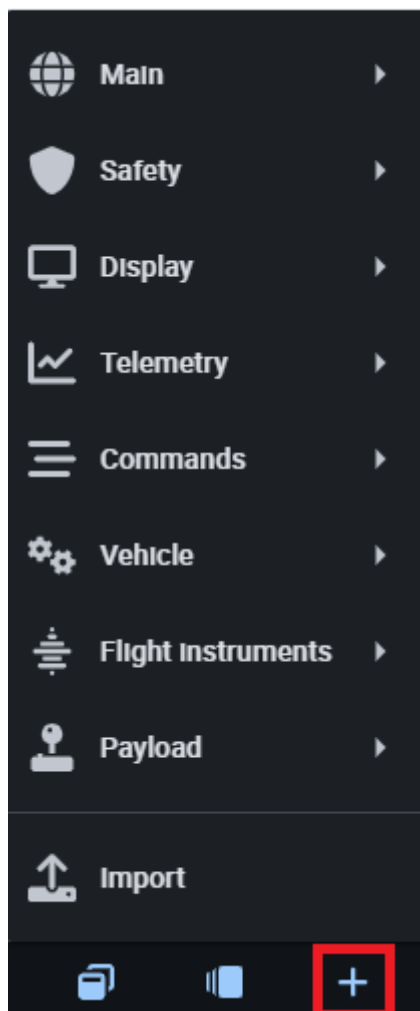


Widgets

To display any widget on the map, just search for the desired widget and configure it.

 Warning

If the variable configured for a widget is not present in the telemetry configuration of the PDI, the widget will appear with a red triangle (warning icon), indicating that the selected variable is not being received in Veronte Ops.

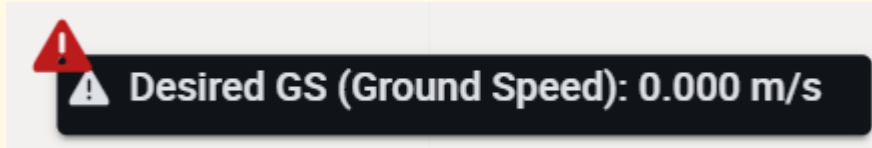

Not receiving telemetry in this widget

Therefore, the variable must be added to the [Complementary Telemetry](#).

Widgets common configuration

 Warning

This does not apply to widgets in the 'Statics' category.

All widget editing menus except those in the 'Statics' category have at least the following configurable parameters:

Label options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

+ Add new variable

Add a new element to show

Settings

→ Next


Widget Styling

✓ Accept

Edit menu - Widget Options

- **Widget Position X / Y:** Allows entering exact numerical coordinates to determine where the label appears on the screen.
- **Add new variable:** Button to link telemetric data or specific system variables for monitoring.
- **Add a new element to show:** Area dedicated to adding new graphic or textual components within the same widget.

Settings: Drop-down menu to access advanced widget settings.

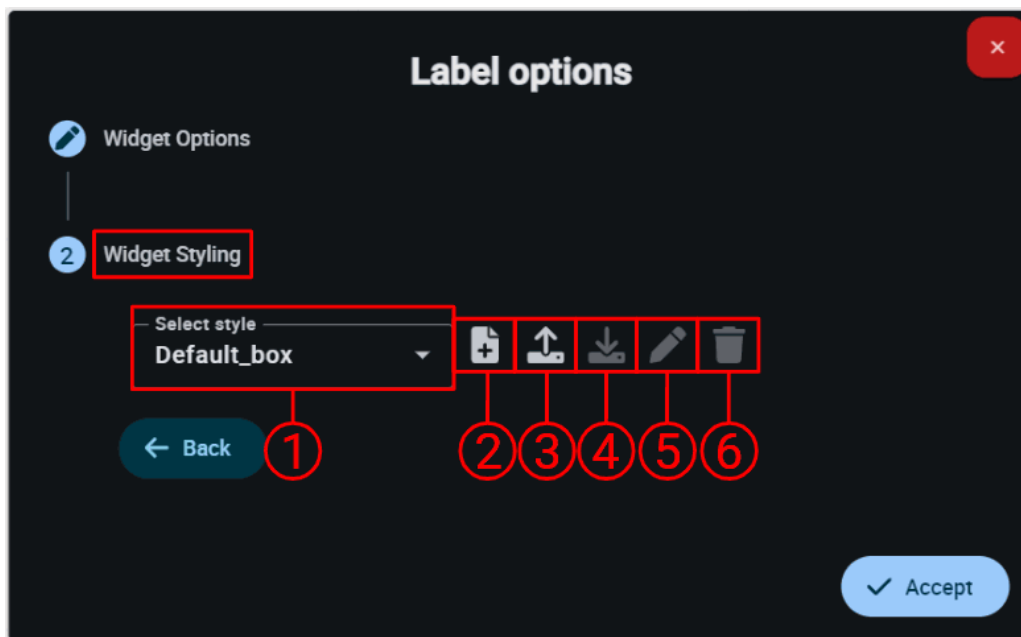

Edit menu - Widget Styling

Here the user can choose the style of the widget:

1. **Select style:** Default and custom styles can be selected. The available default styles are Default_box, Default_box_transparent, Default_box_blur, Default_box_black, Default_pill and Default_pill_blur.

Note

Not all these default styles are available in all widgets.

2. **Add new style:** A new style can be created from the currently selected style by clicking here.
3. **Import style:** Users can import a custom style from local storage. It must be a `.css` file.
4. **Export style:** By clicking here, the selected custom style will be exported in a zip folder. More information about the contents of this folder is described in the [Style manager - Veronte Ops configuration](#) section of this manual.

Important

This option is only available when a custom style is selected.

5. Edit style: Users can directly edit the configuration (code in `.css` format) of the selected style by clicking here.

 Important

This option is only available when a custom style is selected.

6. Remove style: The selected style will be deleted.


 Important

This option is only available when a custom style is selected.

All widgets are explained in detail in the following sections:

- **Main**
- **Safety**
- **Display**
- **Telemetry**
- **Commands**
- **Vehicle**
- **Flight instruments**
- **Payload**

The Import feature enables the user to import a single widget or a widget group.

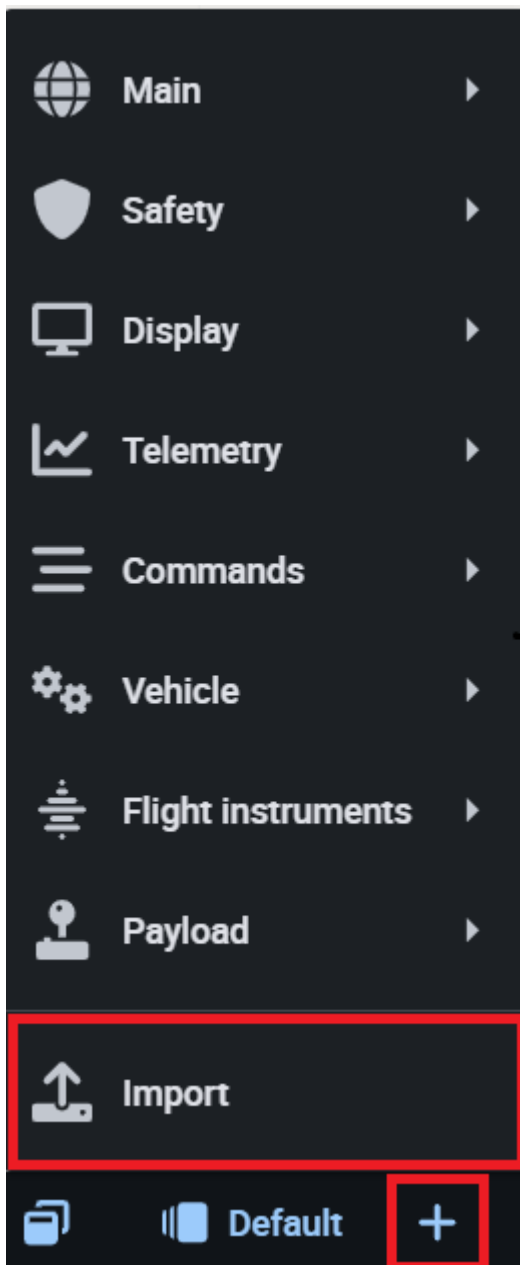

Widget - Import

Main


Map

This widget corresponds to the map and only appears in this menu when the map has been hidden by the user.

Veronte Panel

This pannel is the basic operator tool. It includes all basic commands (phase and action buttons) and information needed during a standard

mission. These commands can be triggered with a single click, by sliding and/or automatically.

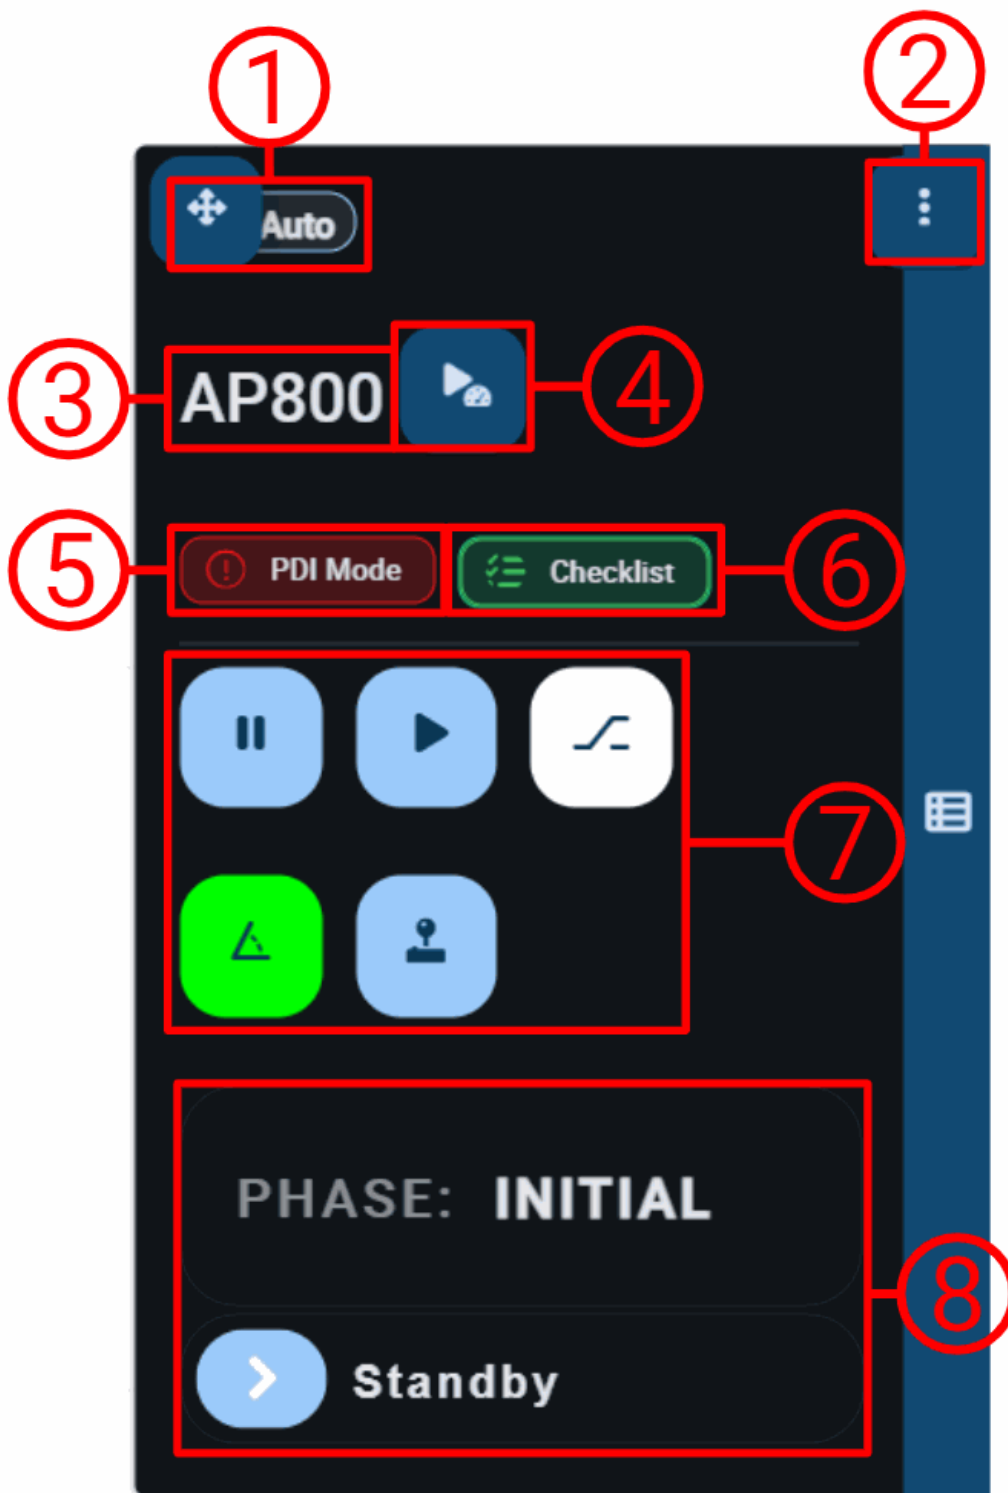


Veronte Panel

1. **Flight mode:** Displays the currently selected flight mode in which the user is operating.

By clicking on it, it is possible to manually change the selected mode. The flight modes available here must be previously defined in the **Modes - Control** section of the 1x PDI Builder software.

Veronte Panel - Flight modes


When in manual mode, the lettering of the icon will be red, to warn the operator to be careful in this mode.

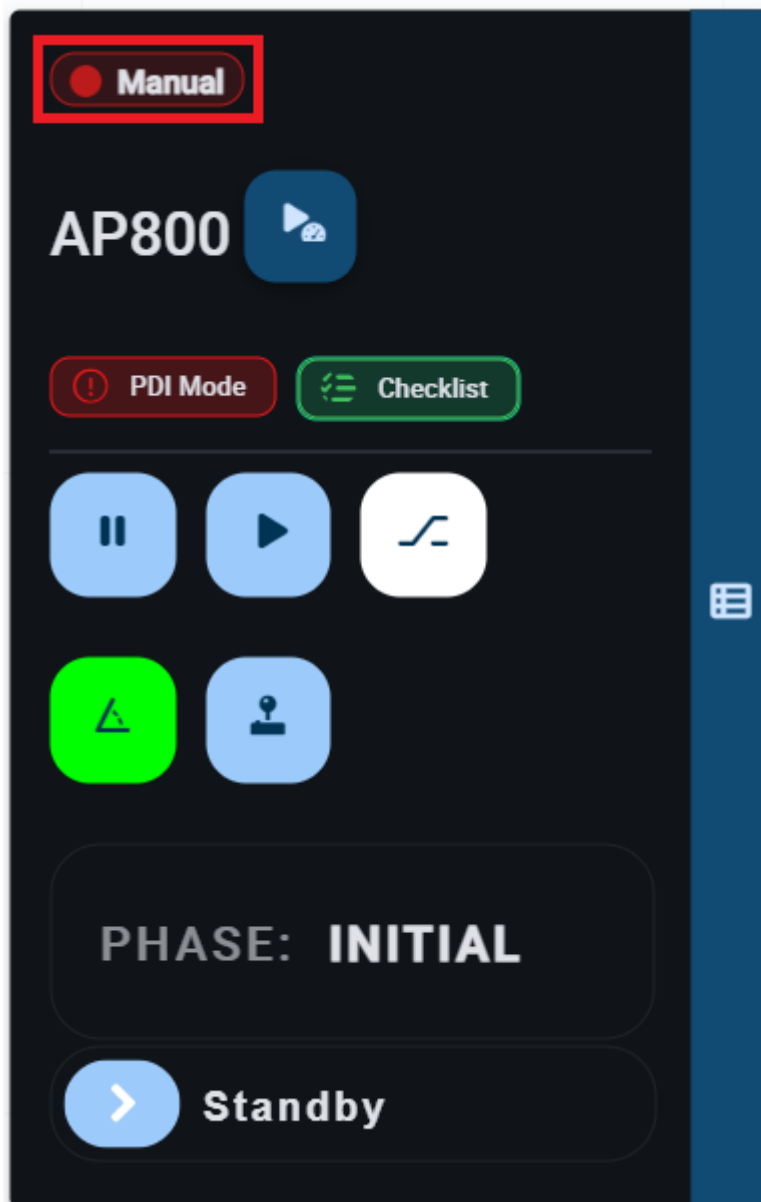

Veronte Panel - Manual flight mode

Besides, the mode can also be changed automatically with an automation or manually with a configured stick.

2. Options: By clicking here, the following options are available:

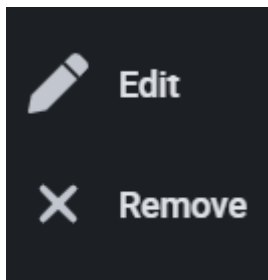

Veronte Panel options

- **Edit:** This allows the user to access the Veronte panel configuration menu.

This widget has two extra edit parameter compared to the ones described in [Widgets common configuration](#):

A screenshot of the 'Veronte Panel options' configuration window. It has a dark background and a red close button in the top right. The window is divided into two sections: '1 Widget Options' and '2 Widget Styling'. In the 'Widget Options' section, there are input fields for 'Widget Position X' (106) and 'Widget Position Y' (150). Below these is a 'Choose platform' dropdown set to 'Selected Platform'. To the right of the dropdown is a checked checkbox labeled 'Show Action Buttons'. Below that is a slider for 'Scale (50% minimal)' and an unchecked checkbox for 'Toggle slider/buttons'. At the bottom of this section is a 'Checklist position' selector with 'Left' and 'Right' options, where 'Right' is selected. A 'Next' button is at the bottom left of the 'Widget Options' section. The '2 Widget Styling' section is currently empty. An 'Accept' button is at the bottom right of the window.


Veronte Panel configuration

- **Widget Options**
 - **Show Action Buttons:** When enabled, all the [Action buttons](#) are displayed in the Veronte panel.
 - **Scale (50% minimal):** Veronte panel widget can be scaled from 50% to 100% of its size. By default it is set to 100%.
 - **Toggle slider/buttons:** Allows to choose whether to display the widget controls via a sliding bar or through pressable buttons.

- **Checklist position:** Set the checklist alignment to the left or right side of the Veronte Panel interface.
- **Remove:** Deletes this widget.

3. **Platform name:** The name of the selected platform is shown here.

4. **FastLog:** By pressing this button, the Veronte Autopilot 1x will start recording the fastlog and this option will be as shown in the figure below:

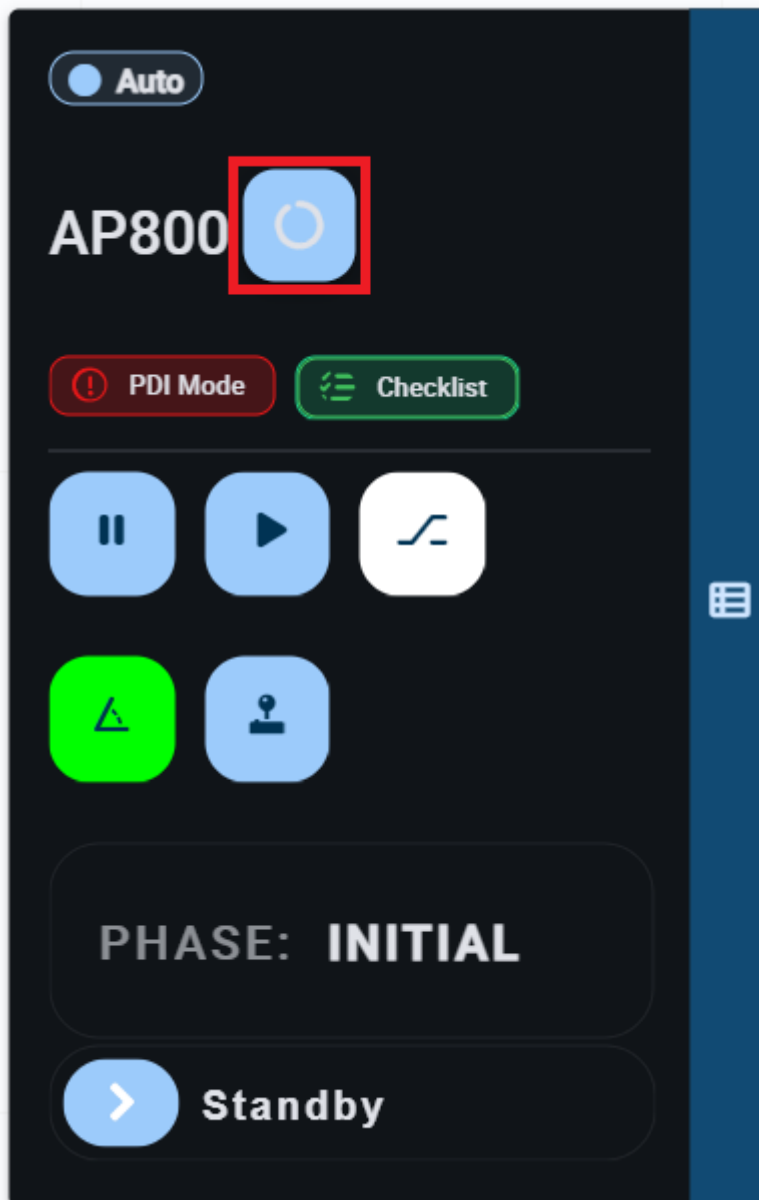

Veronte Panel - FastLog recording

To stop fastlog recording, simply click this button again.

For more information on Fast Log, see the [Fast Log - Telemetry](#) section of the 1x PDI Builder user manual.

 Important

This button only appears when Fast Log has been configured in the 1x PDI Builder software.

- 5. PDI Mode:** This only appears if PDI Mode is configured in the 1x PDI Builder software.

For more information on PDI Mode, check the [PDI Mode](#) description of the 1x PDI Builder user manual.

- 6. Checklist:** This panel is used to make sure that some requirements have been accomplished, for example, prior to a phase change or to avoid a possible malfunction.

It must be previously defined in the [Checklist - Safety](#) section of the 1x PDI Builder software.

As this widget behaves like a drop-down menu, clicking on the  icon will display all checklists:

IMU Check	☐
Magnetometer Calibration	☐
GPS Accuracy	☐
Center of Gravity Check	☐
Propellers Check	☐
Stick Ok	☐
Stick Transition - VTOL flight	☒
Battery Level	☐
Trim Stick Check	☐
Automatic Atmosphere Calibr...	☐

Checklist deployed

If there are mandatory checks, they are marked with an asterisk (*) on the right. Mandatory checks must be checked to proceed.

If all conditions are met to start the operation, the Checklist

button  Checklist turns green, even if there are no checkmarks in the list.

IMU Check	☐
Magnetometer Calibration	☐
GPS Accuracy	☐
Center of Gravity Check	☐
Propellers Check	☐
Stick Ok *	☒
Stick Transition - VTOL flight *	☒
Battery Level	☐
Trim Stick Check	☐
Automatic Atmosphere Calibr...	☐

Checklist - Complete

7. **Action buttons:** Action buttons can be used to manually trigger certain actions. They must have been previously defined in the [Automations menu](#) of the 1x PDI Builder software.

 Note


For further details about Action buttons, refer to [Action Button - Inputs](#) section of the present manual.

8. **Phase buttons:** The currently selected phase is always displayed at the top in the current phase identifier.

 Important

Not all existing flight phases are initially displayed. Only flight phases that can be entered from the currently selected phase are displayed.

To change phase, simply slide the  icon to the right. Then, if everything is correct, the phase will be displayed in the current phase identifier and will be colored green while switching to that phase. An example is shown below:

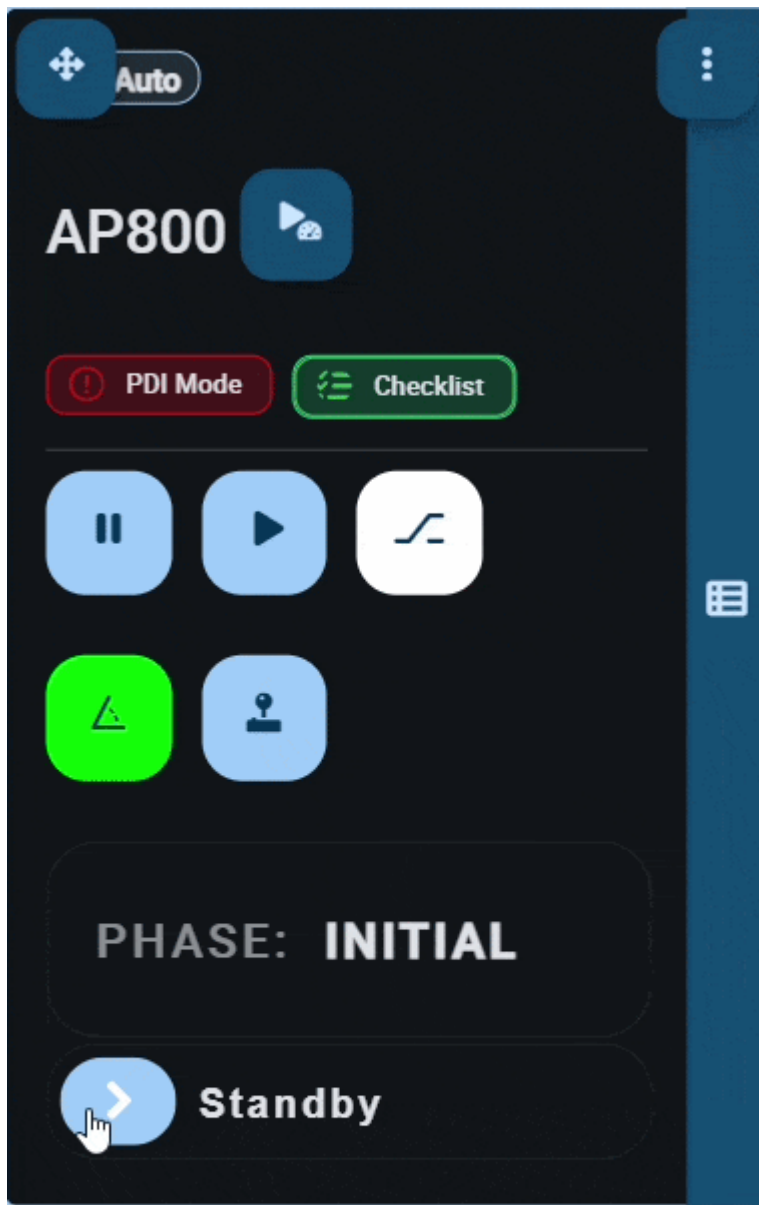

Veronte Panel - Changing phase


Warning

An error may occur when changing phase, so that the phase change does not take place. To solve this problem, please check the [Error when changing phase - Troubleshooting](#) section of this manual.

Group Conditional

Veronte Ops allows users to create groups of widgets, where they can group as many widgets as they wish. This is useful for linking widgets and moving them together. In addition, it is possible to create a condition to choose when the group is shown.

Moreover, it is also common to create groups containing a single widget when using a condition for the group.

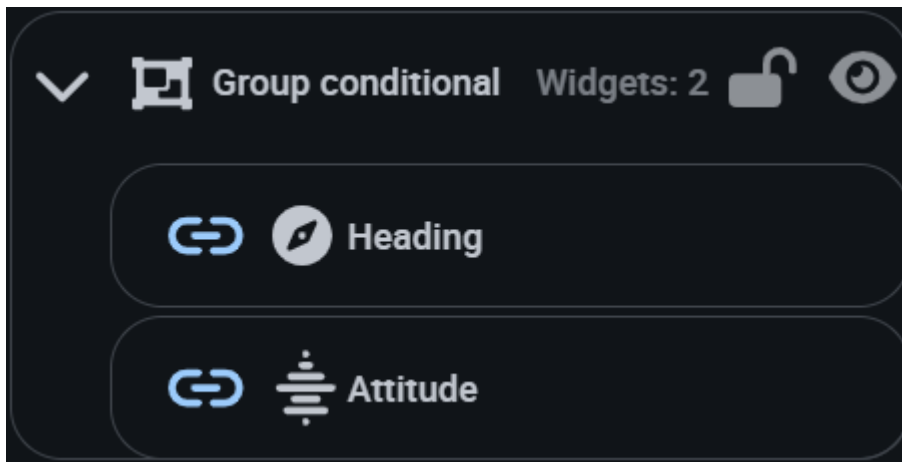

Group

⚠ Important

This widget is managed from the [sorting panel](#).

Once the group is created, go to the sorting panel and right click on the group to access its options:

- **Remove:** Removes the group and also the widgets in the group.
- **Edit:** This allows the user to access the Group configuration menu.

Group conditional options

1 Widget Options

Choose platform
Selected Platform

Name
Group conditional

Check +

✓ Accept

Group configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in [Widgets common configuration](#).

- **Name:** For easy identification of each group, users can enter a custom name for each one.
- **Check:** Here users can set the conditions they want for a group to be displayed or not.

These conditions must be set according to the values of the system variables.

Note


It is not mandatory to have a condition for a group.

Warning

For these conditions to apply correctly, widgets must be locked from the [Workspace toolbar](#). Otherwise, these conditions will have no effect.

Follow the next steps to correctly define a condition:

1. Click on the **+** icon and select the desired variable from the list to established the condition:

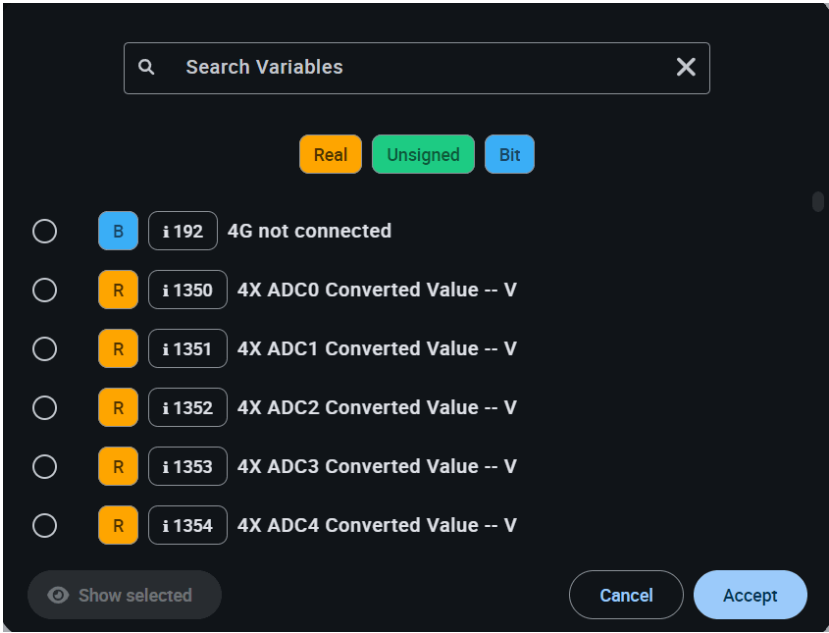

Group configuration - Variables to create a condition

2. Build the condition with logical operators. The following is a list of logical operators that can be used by the user:

Condition	Operator	Description
Equality	==	For more information click here
Inequality	!=	For more information click here
Greater than	>	For more information click here
Greater than or equal	>=	For more information click here
Less than	<	

Condition	Operator	Description
		For more information click here
Less than or equal	<=	For more information click here
Logical AND	&&	For more information click here
Logical NOT	!	For more information click here
Logical OR		For more information click here
Grouping operator	()	For more information click here

3. Press the Accept button to create the group with this condition.

After configuring it, return to the [sorting panel](#) where users can add widgets to the created group, link/unlink, show/hide, lock/unlock, move and remove the added widgets, as well as access the Group widget configuration menu (as described above).

The following are the actions to be performed in the sorting panel in order to manage the widgets within the group:

- To add a widget to a group, simply select it and drag it into the Group widget:
Adding widgets to a group
- To remove a widget from a group, select it and drag it out of the Group widget.
- Linking widgets. By default, widgets are linked and appear with a  icon next to them in the group. Therefore, if users move one of the widgets in the group, the rest of the linked ones will move together. To unlink them, click on the  icon on the widgets to be unlinked, then they will appear as unlinked (). Thus, if one is not marked, it may move with respect to the other elements in the group.
- Show/Hide groups. By default, all groups are shown in the workspace (they appear as ). Nonetheless, by clicking on  they can be hidden.
To show them again, simply click on .

Hint


If users want to show different groups at different "moments" of the flight, it may be useful to hide them during creation. In this way, groups can be placed in the same place and thus "save" space in the workspace.

- Lock/Unlock groups. When groups are locked, users will not be able to move them in the workspace. By default, all groups are unlocked ().
To lock them, simply click on  and they will appear as . In addition, when a group is locked, users cannot add, remove, link or unlink the widgets that belong to it.

Example of a Group widget with condition

If users only want to have a pre-flight Gauge widget before starting the flight (i.e. only in the initial phase):


- For only displaying this group in the initial phase, build the following condition in the Group widget configuration:

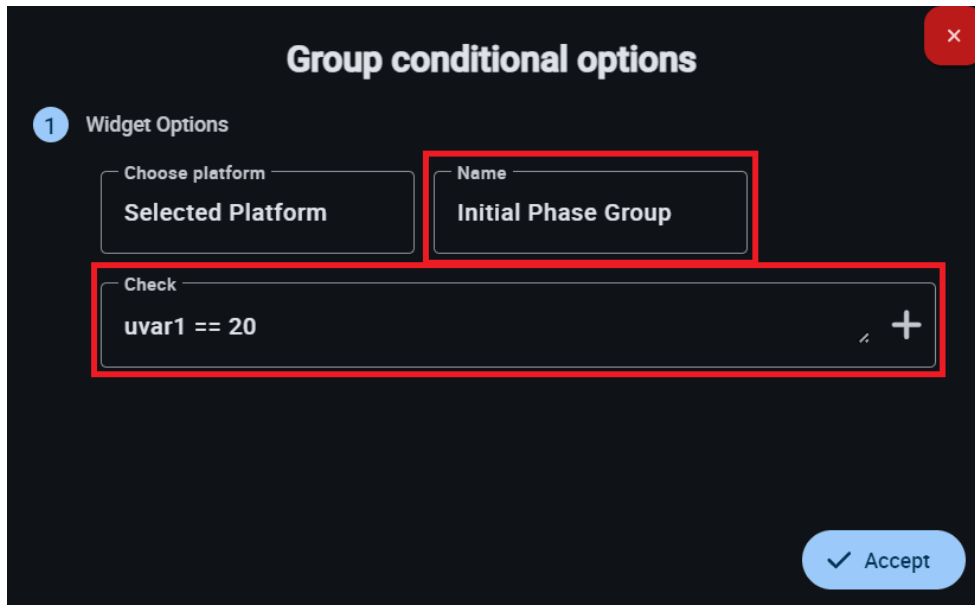

Configuration of group with condition

Where:

- **uvar1** is the Phase identifier variable
 - **= =** is the equality operator
 - **20** is the ID of the initial phase
- Add the desired Gauge widget to the group just created

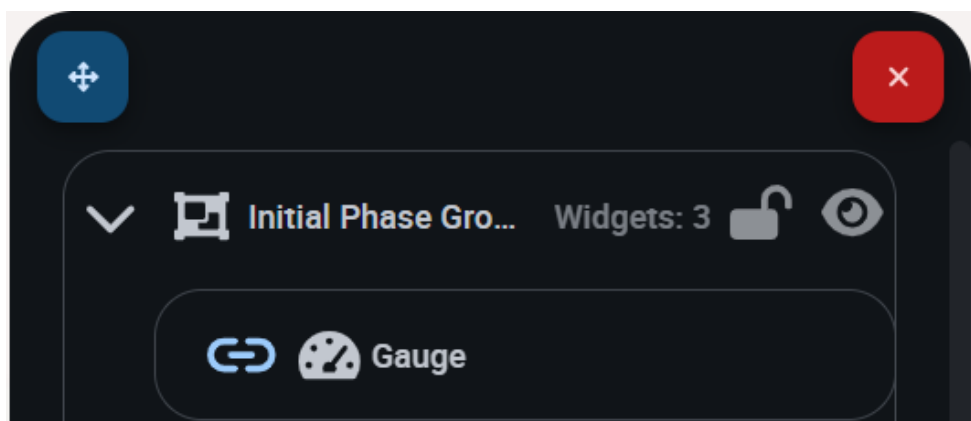


Group with condition

Therefore, this implies that: Only when the flight phase is the one with ID 20 (initial phase), widgets added to this group, in this case the Gauge widget, will be displayed.

Group button

This panel is used to group more than one variable in a single graphical element, optimizing space on the control dashboard and allowing multiple commands to be activated from a single interface.

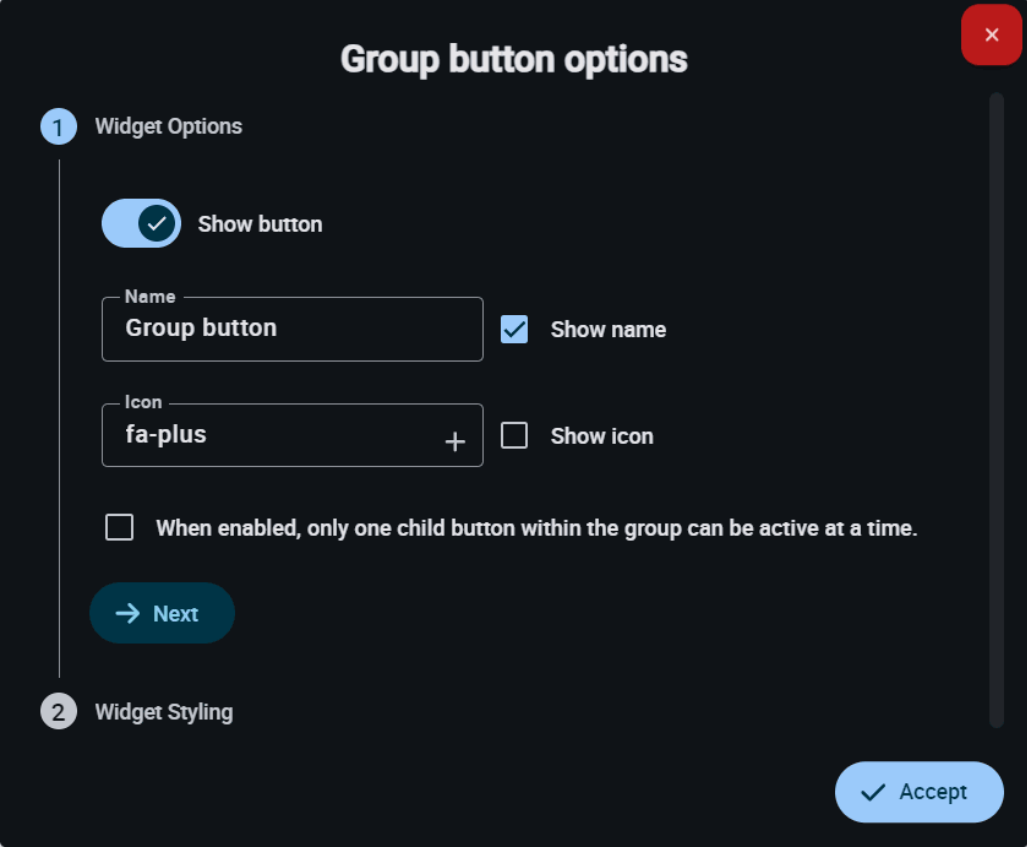
The image shows a configuration window titled "Group button options" with a red close button in the top right corner. The window is divided into two sections: "1 Widget Options" and "2 Widget Styling". In the "Widget Options" section, there is a "Show button" toggle switch which is turned on. Below it, there is a "Name" text input field containing "Group button" and a checked "Show name" checkbox. Underneath, there is an "Icon" text input field containing "fa-plus" and an unchecked "Show icon" checkbox. A note states: "When enabled, only one child button within the group can be active at a time." A "Next" button with a right arrow is located at the bottom of the first section. The "2 Widget Styling" section is currently empty. An "Accept" button with a checkmark is located at the bottom right of the window.

Group Button Options

- **Name:** Defines the name of the button group. By checking the **Show name** box, the user decides whether to display the text on the widget.
- **Icon:** Allows choosing an identification icon for the group. By checking the **Show icon** box, the user can decide whether to show the icon on the widget.
- **Show name:** If this checkbox is selected, the text entered in the **Name** field will be displayed directly on the widget within the dashboard.
- **Show icon:** If this checkbox is selected, the icon chosen in the **Icon** field will be visible on the widget. This allows for visual identification of the button group's function without needing to read the text.

- **When enabled, only one child button within the group can be active at a time: If this option is enabled, the buttons contained within the group will function as a single-choice selector: activating one button will automatically deactivate any other previously active button in the same group.**

As this widget behaves like a pop-up menu, clicking on the main button will display all the buttons configured within it, ready to be activated by the operator during the mission.

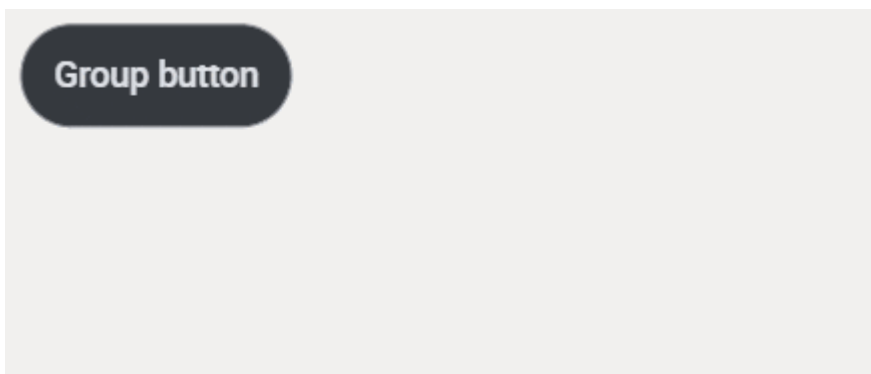

Group Button

Script

The Script options panel allows integrating and configuring custom scripts, defining their behavior and display settings.

Script options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose Platform*: Selected Platform

Name

Code

1

Import script

Color mode

Text Background

Accept


Script

- **Name:** Field for assigning an identifying name to the script.
- **Code:** Area dedicated to entering or viewing the numerical or logical code of the script.
- **Import script:** Button to upload script files from outside the system.
- **Color mode:** Allows customizing the visual appearance by choosing between Text or Background color modification.

For more information about this widget, check the [Script Widget - Appendix](#) section of this manual.

Safety

The Safety menu groups features dedicated to system health monitoring and the execution of emergency procedures according to proprietary and international standards.

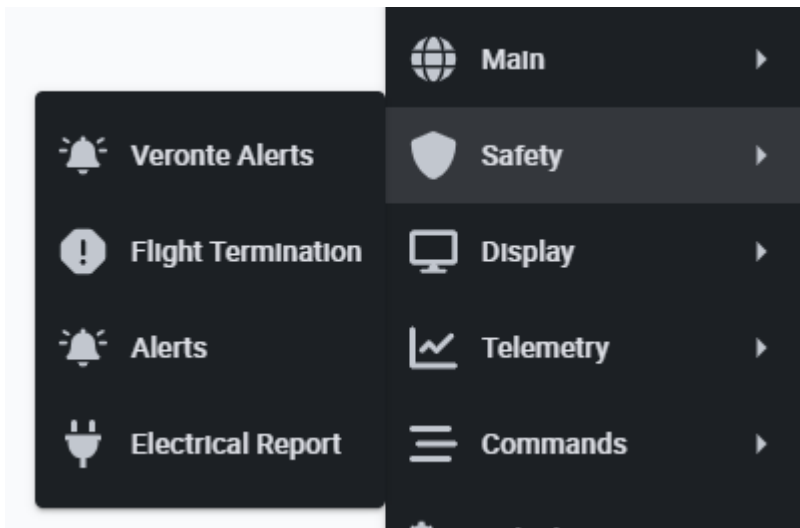

Safety

Veronte alerts


These alerts are bits variables that appear depending on the state of the bit, failure or success. The user can define in the widget configuration which of them will be the triggering state.

By default, alerts are "collapsed" into the widget, as the widget acts as a drop-down menu. However, users can quickly find out how many alerts there are and what type they are without having to drop it down thanks to the colored indicators in the form of pills:

- **Red: Alerts on failure state**
- **Orange: Alerts in failure state and configured as warnings**
- **Green: Alerts in success state**
- **Grey: Alerts for which the necessary telemetry is not being received.**


Note

- **This color code is also extended to the displayed alerts.**
- **The alert type can be configured by accessing its edit menu.**

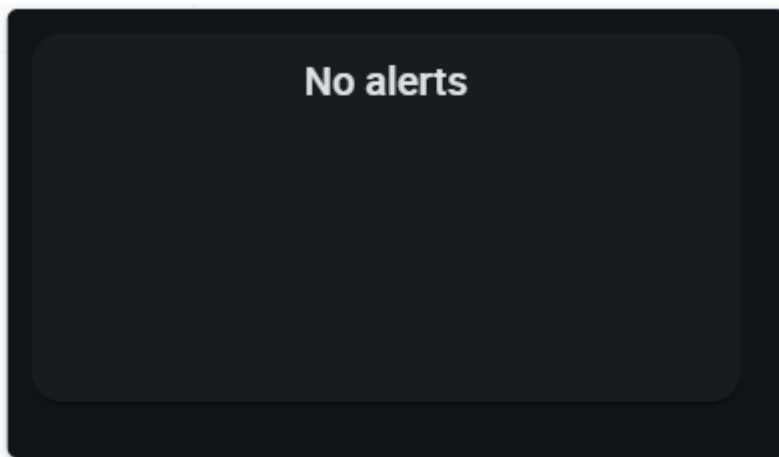

Alerts

- 1. Enable/Disable Loop:** Users can enable/disable the sound of the alerts to be in loop, i.e. sounding continuously.
- 2. Mute/Unmute all alerts:** The sound of all alerts can be mute/unmute.
- 3. Options:**
 - **Duplicate:** Duplicates this widget.
 - **Edit:** This allows the user to access the Alerts configuration menu.

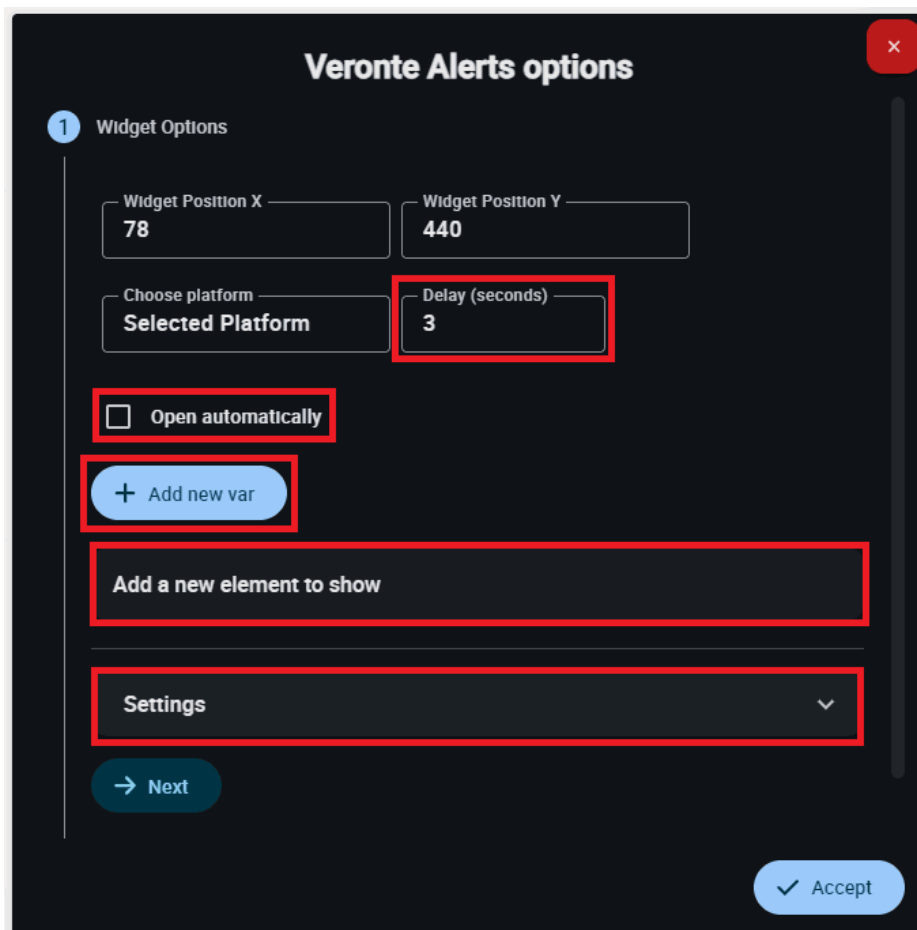

Alerts configuration

- **Widget Options**

 
This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Delay:** This is the time (in seconds) between the sounding of alerts when the loop option is enabled.
- **Open automatically:** If enabled, Alerts widget will automatically "expand" when a configured alert is triggered.

Note

This check only takes effect when the widget is not deployed.


- **Add new var:** Press this button to add a new alert variable. They are configured below.
- **Add a new element alert to show in widget:** When adding a variable (by clicking on the 'Add new var' button), the following field is added to the configuration menu:



Alerts configuration - Variables

Next, 2 buttons appear to configure the new variable added:

- **Settings var:** Pressing this button takes the user to the configuration menu of the added variable:

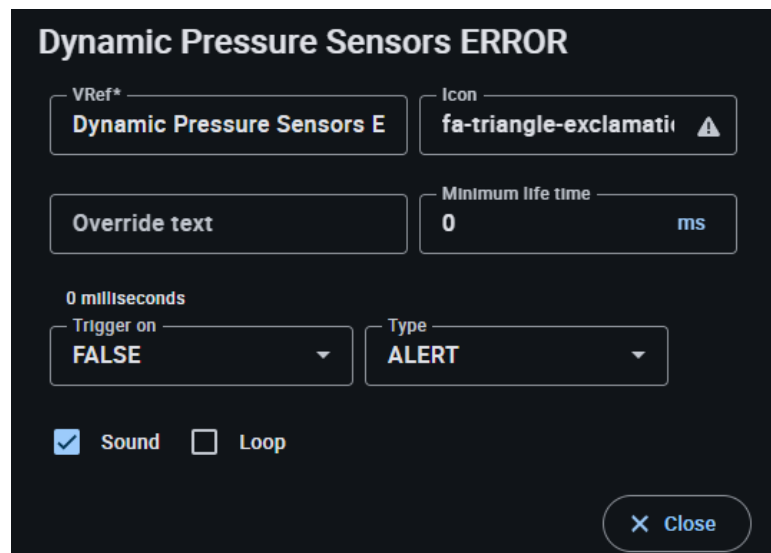

Alerts configuration - Variables settings

- **VRef:** Users can select the desired bit variable to be displayed as an alert.
- **Icon:** Choose the icon to be displayed next to the variable. By default, it is an exclamation icon, as can be seen in the figure above.
- **Override text:** The alert name can be changed by typing a new one different from the variable name.

Warning

This does not rename the selected variable in the configuration, it is only the name shown in the alert.

- **Minimum life time:** Minimum delay before the alert activates.
- **Trigger on:** Users can choose when they want the alert to be displayed, when FALSE or TRUE. By default, FALSE is set.
- **Type:** Specifies the category of the notification. It is possible to choose between ALERT, WARNING, INFO, OK.

- **Sound:** Here users can choose whether each alert sounds or not by simply enabling/disabling it. By default, it is activated.
- **Loop:** If enabled, the sound of the selected alert will be looped with the delay time specified above.


Otherwise, the alert sound will only play when the alert is triggered.

For example, if the delay is set to 3 seconds, the loop option is enabled and the selected variable is in fail mode, the alert sound will sound every 3 seconds.

 Important

This is only available when Sound is activated.


- **Close:** Save and close button.
- **Delete var.**
- **Settings:** Here the user can modify the settings common to all alerts:

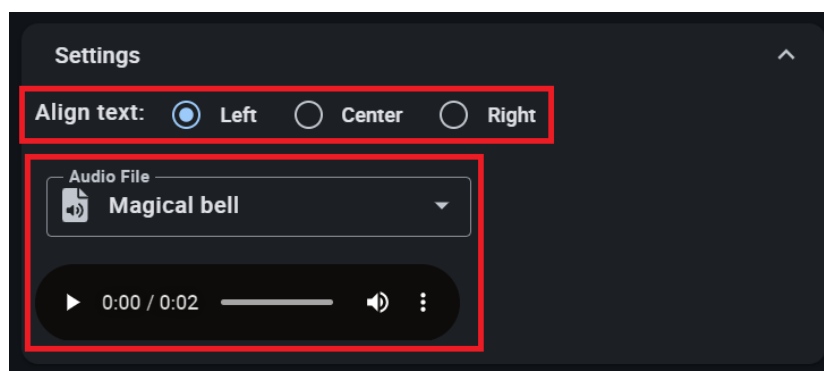

Alerts configuration - Settings


- **Align text:** The variable text can be left, center or right aligned.
- **Audio File:** Users can select the audio of the alert from the audio list.
- **Remove:** Deletes this widget.

After configuring at least one alert, the following actions appear:

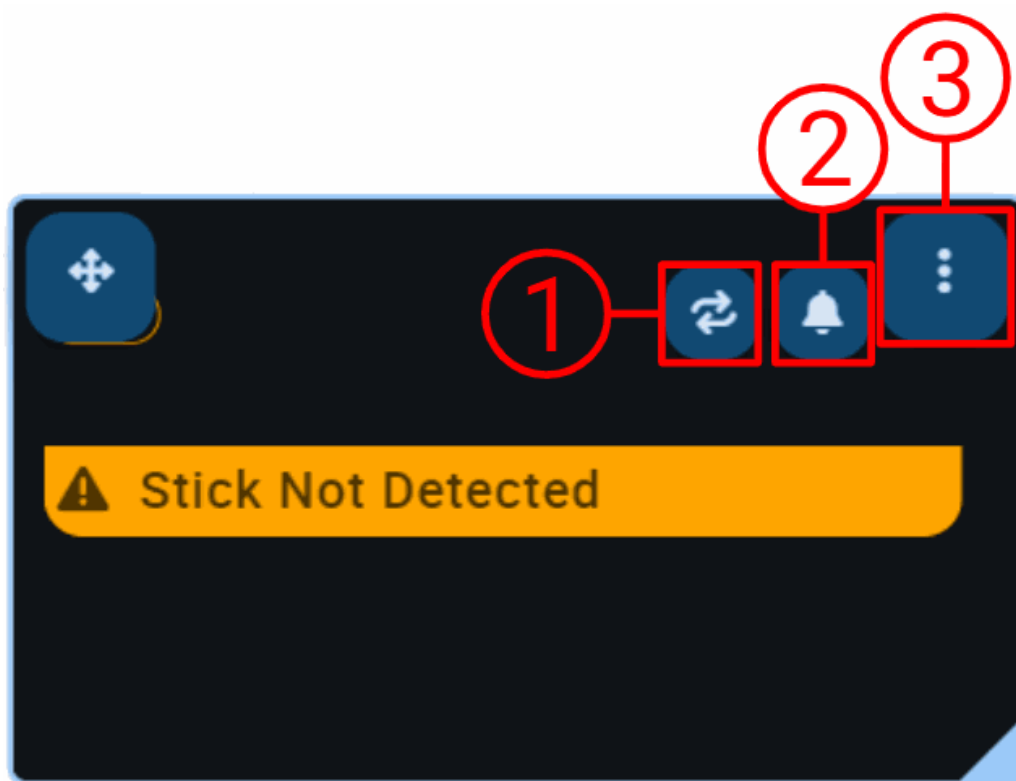


Alerts

Some examples of alerts are shown below:

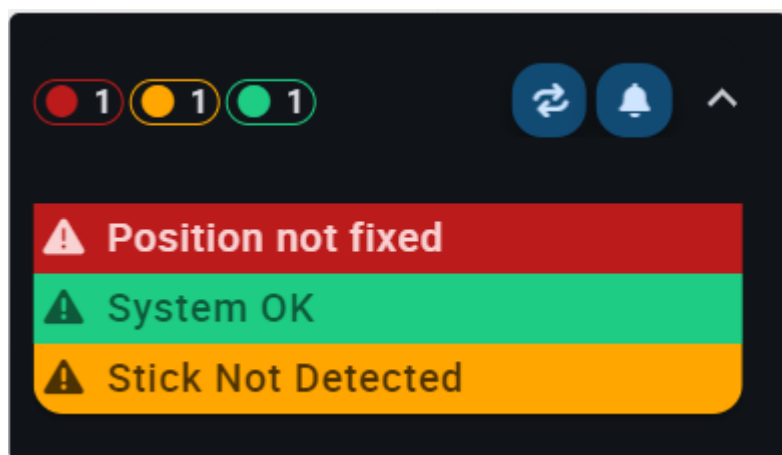


Alerts example

The following figures show how these alerts have been configured:

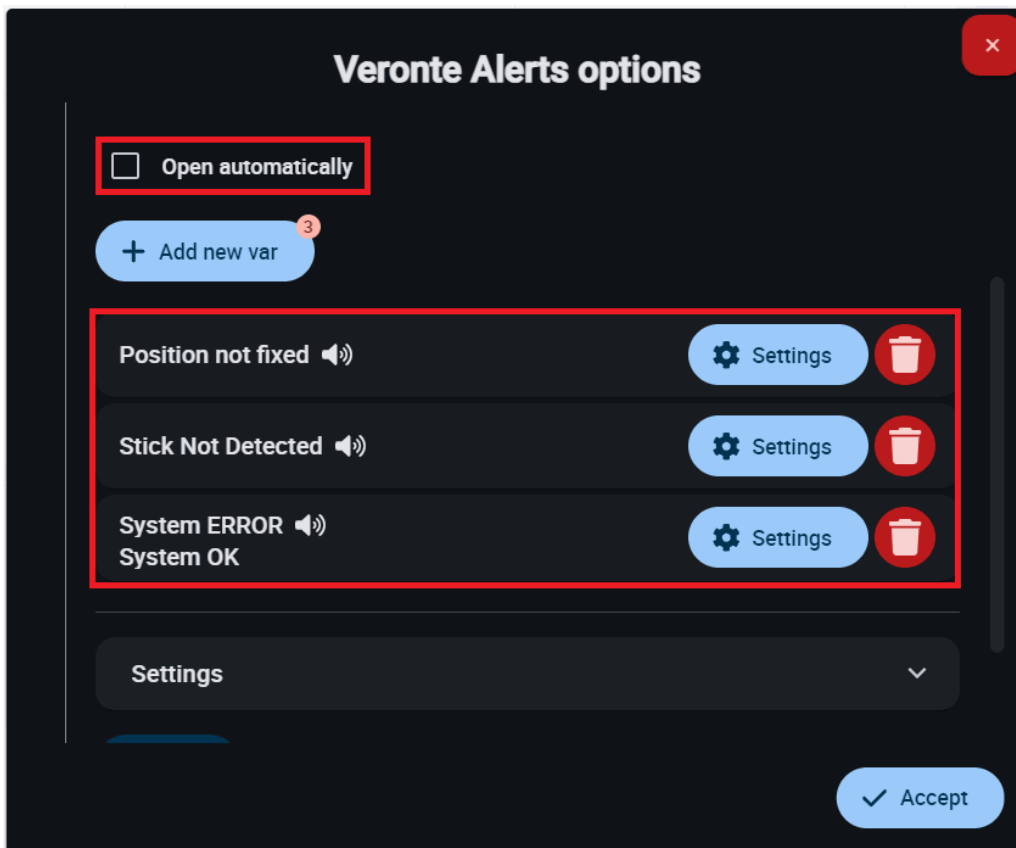

Alerts configuration example

- **Stick Not Detected:** This alert has been defined as a warning, its icon has been replaced by another icon more related to the variable (a joystick icon) and has been configured without sound.

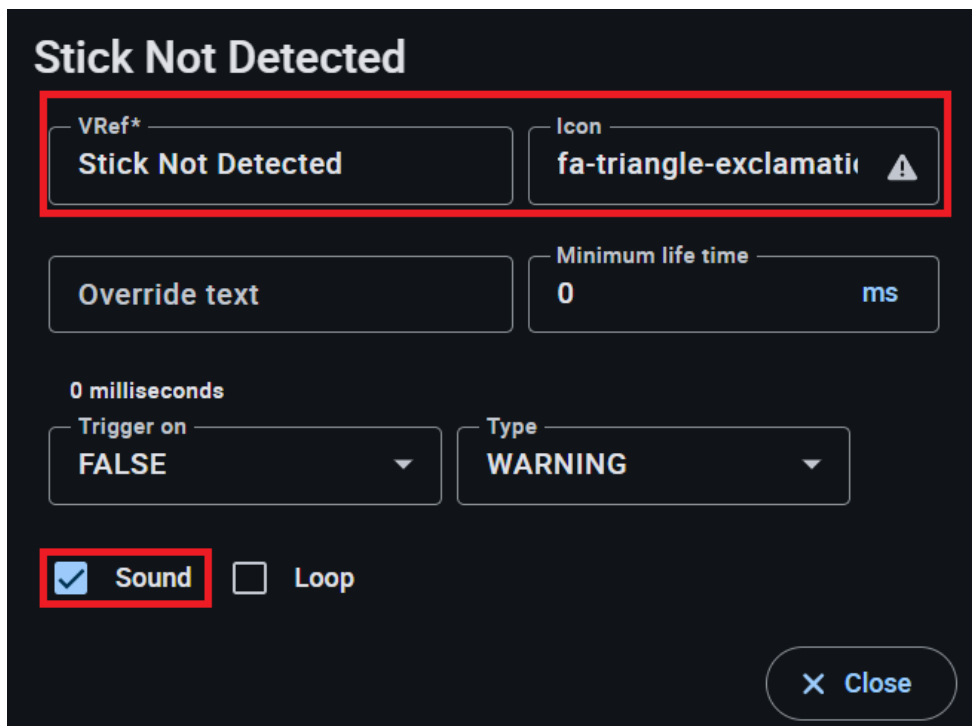

Alerts configuration example - Stick Not Detected

- **System Error:** This variable has been configured as an alert but it is triggered in successful state, so it is colored green.

In addition, it has been customized with a different text from the variable name, with a 'check' icon and no sound.

System ERROR

VRef* System ERROR Icon fa-triangle-exclamation ⚠

Override text System OK Minimum life time 0 ms

0 milliseconds

Trigger on FALSE Type OK

☒ Sound ☐ Loop

Close

Alerts configuration example - System Error

- **Position not fixed:** This alert has not been customized, it appears with the default configuration.

Position not fixed

VRef* Position not fixed Icon fa-triangle-exclamation ⚠

Override text Minimum life time 0 ms

0 milliseconds

Trigger on FALSE Type ALERT


☒ Sound ☐ Loop

Close

Alerts configuration example - Position not fixed

Flight Termination

Interface dedicated to executing the Flight Termination System command via the specific message defined by the STANAG standard.

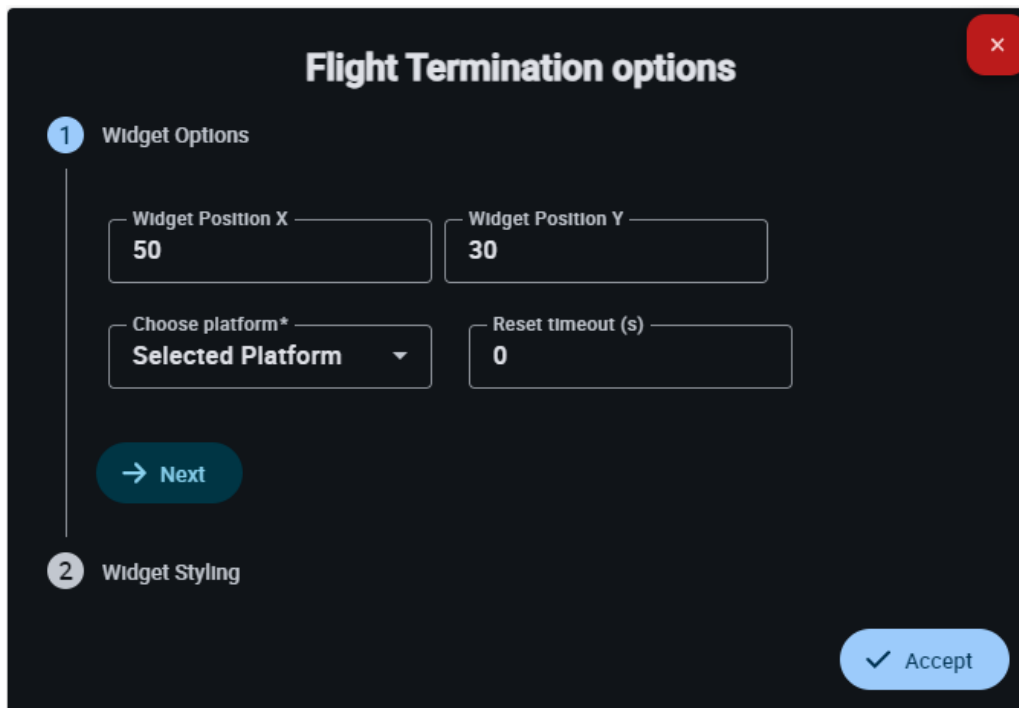

The screenshot shows a dark-themed configuration window titled "Flight Termination options" with a red close button in the top right corner. The window is divided into two sections: "1 Widget Options" and "2 Widget Styling". In the "Widget Options" section, there are four input fields: "Widget Position X" with the value "50", "Widget Position Y" with the value "30", "Choose platform*" with a dropdown menu showing "Selected Platform", and "Reset timeout (s)" with the value "0". A blue "Next" button with a right arrow is located below these fields. The "Widget Styling" section is currently empty. At the bottom right of the window is a blue "Accept" button with a checkmark icon.


Flight Termination options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Reset timeout (s):** Specifies the time after which the command or widget status is reset.

Alerts

Alert panel compliant with the STANAG 4586 standard; it displays exclusively the messages defined by the international protocol.

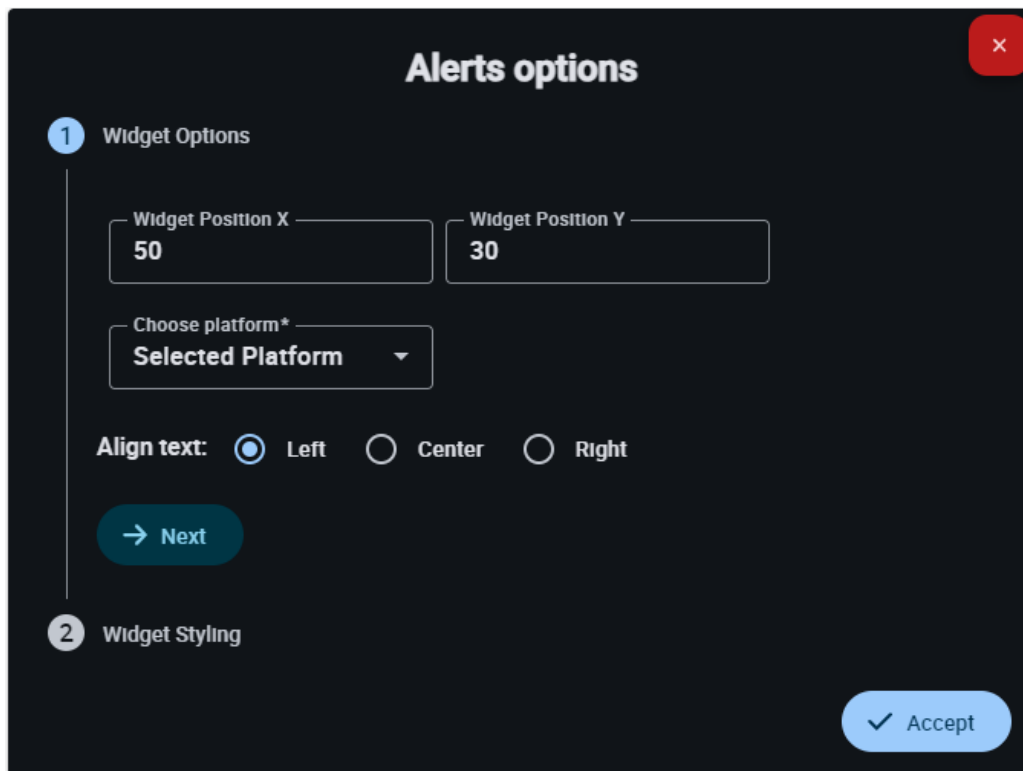The image shows a configuration window titled "Alerts options" with a dark background. It features a sidebar on the left with two steps: "1 Widget Options" (highlighted) and "2 Widget Styling". The main area contains input fields for "Widget Position X" (value 50) and "Widget Position Y" (value 30), a dropdown menu for "Choose platform*" (value "Selected Platform"), and radio buttons for "Align text:" (Left, Center, Right). A "Next" button is below the alignment options, and an "Accept" button is at the bottom right. A red close button is in the top right corner.

Alerts options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform*: Selected Platform

Align text: ☒ Left ☐ Center ☐ Right

→ Next

2 Widget Styling

✓ Accept

Alerts options

This widget has extra edit parameter compared to the ones described in the [Widgets common configuration](#).

- **Align text:** This setting determines the horizontal justification of alert messages within the widget.

Electrical Report

Tool based on STANAG messaging for real-time monitoring of the aircraft's electrical system parameters.

Electrical Report options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Voltage Bus Unit:** Allows selecting the unit of measurement for the bus voltage between V and mV.
- **Current Bus Unit:** Allows selecting the unit of measurement for the bus current between A and mA.

Display

Statics widgets do not depend on the selected platform, therefore the 'Choose platform' parameter will not appear in any of the widgets described below.

Text


Text widget allows the user to insert text labels in the workspace.



Text

Right click on the text to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit**: This allows the user to access the Text configuration menu.
 - **Widget Options**:

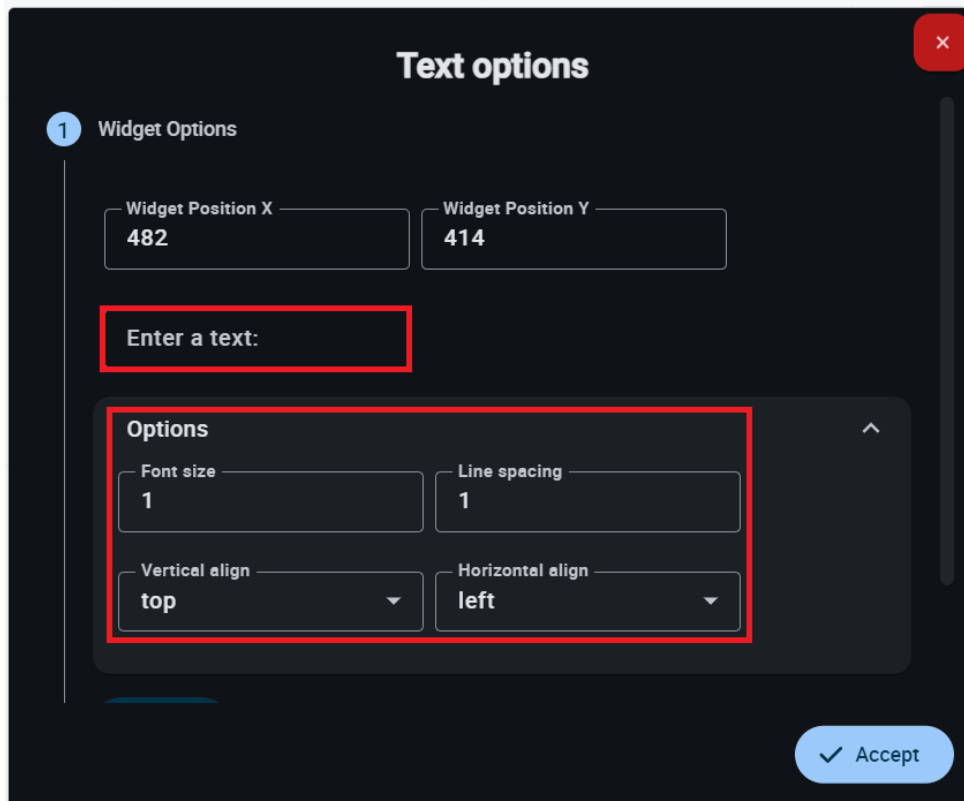

Text configuration

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Enter a text**: Enter the desired text to be displayed as a label.
- **Options**: The following options allow the user to customize the Text widget as desired:
 - **Font size**: The text size can be adjusted by the user. The value must be ≥ 1 .
 - **Line spacing**: When the text in the widget becomes a paragraph, this is the space between each line of that paragraph. The value must be ≥ 1 .
 - **Vertical align**: Text can be vertically aligned. The available options are center, bottom and top.

- **Horizontal align:** Text can be aligned horizontally. The available options are center, justify, left and right. The justify option only makes sense when the text is a paragraph.
- **Widget Styling:** This widget has the 'basic' Widget Styling configuration described in the [Widgets common configuration](#).

Image

Image widget allows the user to insert an image in the workspace.

Note

A gif can also be added with this widget.



Image

Right click on the image to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Image configuration menu.
 - **Widget Options:**

Image configuration

- **Enter an https:// URL:** Users can enter the URL of the image to be displayed.
- **Attach Image:** It is possible to import an image from PC.
- **Widget Styling:** This widget has the 'basic' Widget Styling configuration described in the [Widgets common configuration](#).

An example is given below:


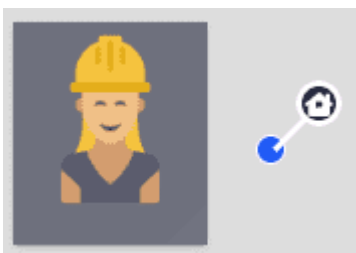



Image example

As can be seen in the figure below, this image has been imported from the browse.

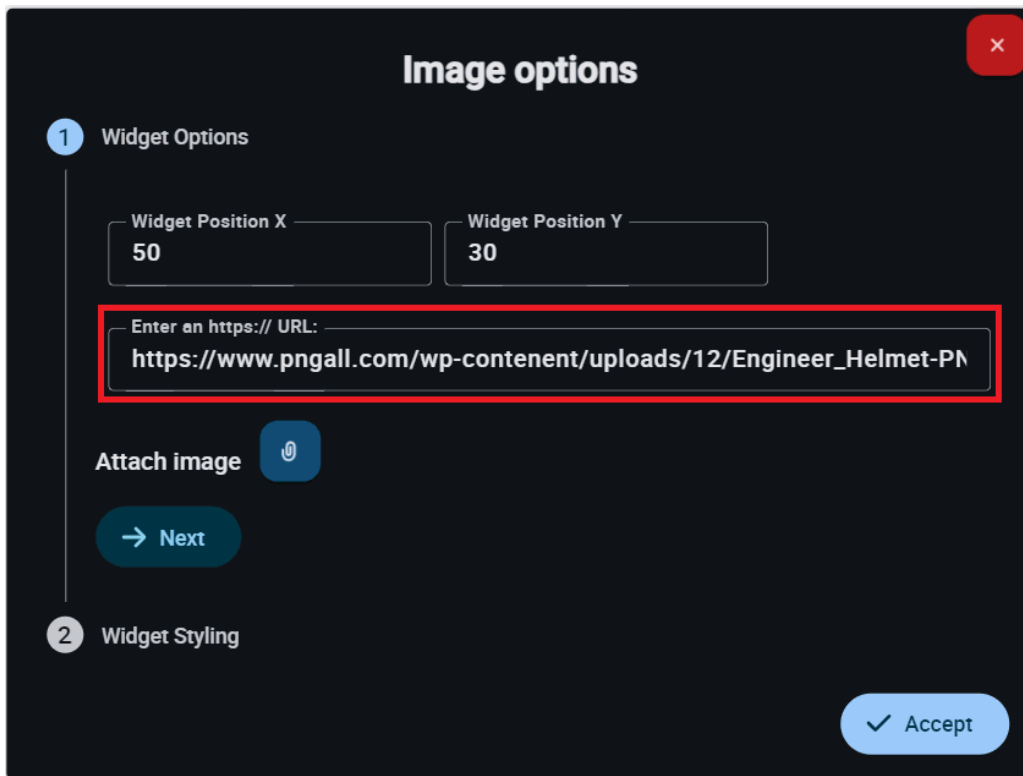

The image shows a dark-themed dialog box titled "Image options" with a red close button in the top right corner. On the left, a vertical sidebar contains two steps: "1 Widget Options" (highlighted with a blue circle) and "2 Widget Styling". The main area of the dialog is for the "Widget Options" step. It contains two input fields: "Widget Position X" with the value "50" and "Widget Position Y" with the value "30". Below these is a text input field labeled "Enter an https:// URL:" containing the text "https://www.pngall.com/wp-content/uploads/12/Engineer_Helmet-PN". This URL field is highlighted with a red rectangular border. Below the URL field is an "Attach image" button with a paperclip icon. At the bottom left of the main area is a "Next" button with a right-pointing arrow. At the bottom right is an "Accept" button with a checkmark icon.

Image configuration - Widget Options example

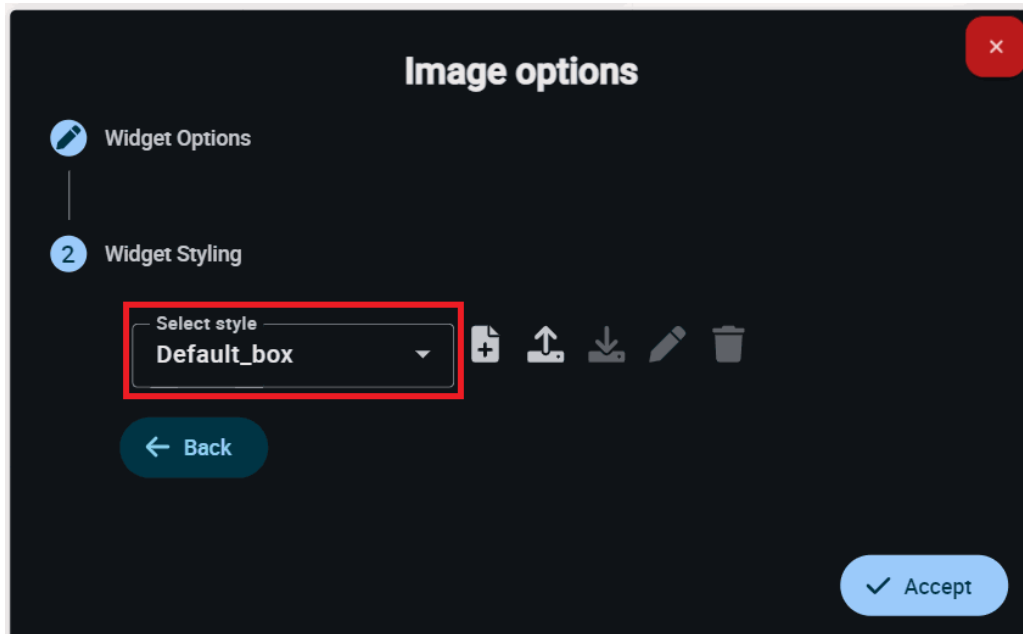


The image shows the same "Image options" dialog box, but now the "2 Widget Styling" step is selected in the sidebar (highlighted with a blue circle). The main area displays a "Select style" dropdown menu with "Default_box" selected. This dropdown is highlighted with a red rectangular border. To the right of the dropdown are five icons: a plus sign, an upload arrow, a download arrow, a pencil, and a trash can. At the bottom left is a "Back" button with a left-pointing arrow. At the bottom right is an "Accept" button with a checkmark icon.

Image configuration - Widget Styling example

Iframe

Iframe widget allows the user to embed a web page as a widget in the workspace, as well as to visualize video from a gimbal camera.

For example, useful websites could be: the windy website, the veronte operations manuals, the web application of the external radio if it is being used for operation, etc.

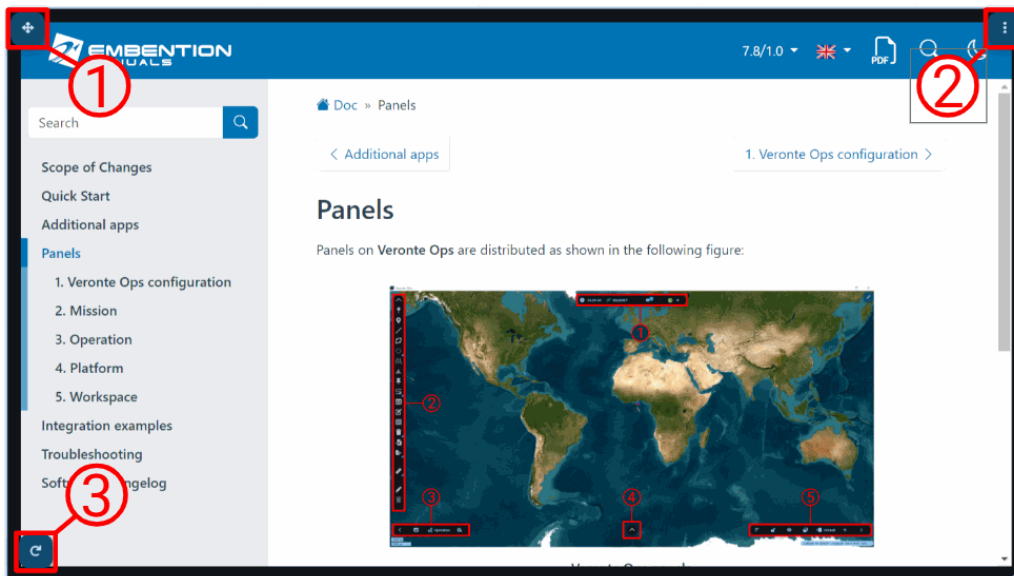

Iframe

1. Move: Allows the user to move the widget to the desired position in the workspace.

2. Options:

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Iframe configuration menu.

■ **Widget Options:**

Iframe options

1
Widget Options
×

Widget Position X

Widget Position Y

?

(*) If you use http you must enable non-secure content.

(*) Problems with mixed-content.

→ Next

2
Widget Styling

✓ Accept

Iframe configuration

- **https://** : Users can enter the URL of the web page to be displayed.

In order to be able to view the video recording from a gimbal and also tracking directly with the image, users must copy here the URL generated by the [Web Converter](#), which converts from RTSP to WebRTC.

Warning

Please take into account the notes in the widget.


- **Widget Styling:** This widget has the 'basic' Widget Styling configuration described in the [Widgets common configuration](#).

3. Reload page: Refreshes the web page embedded as a widget.

- **Remove:** Deletes this widget.

Some examples example are given below:

- **Example 1:**

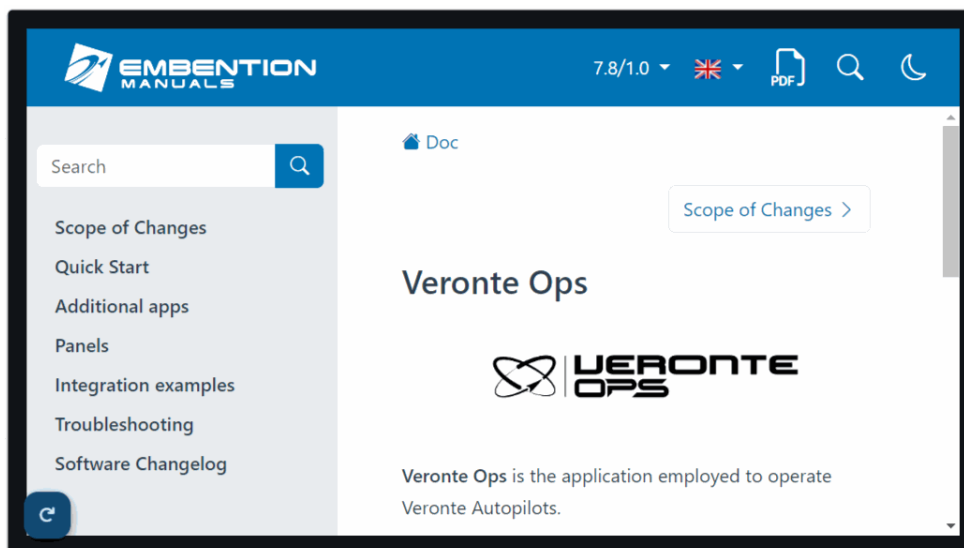

Iframe example 1

×

Iframe options

1

Widget Options

Widget Position X

50

Widget Position Y

30

https://*

https://manuals.embention.com/veronte-ops/en/latest/

?

(*) If you use http you must enable non-secure content.

(*) Problems with mixed-content.

→ Next


2

Widget Styling

✓ Accept

Iframe configuration example 1

• Example 2:

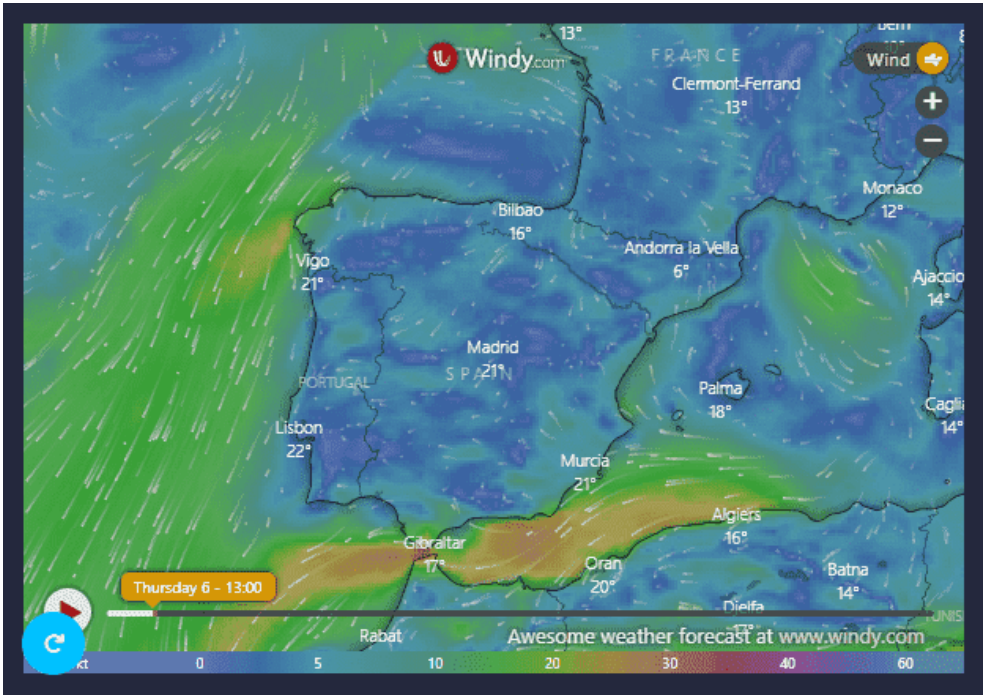

Iframe example 2

Iframe options

1 Widget Options

Widget Position X
50

Widget Position Y
30

https://*
https://embed.windy.com/config/map

?

(*) If you use http you must enable non-secure content.
(*) Problems with mixed-content.

→ Next


2 Widget Styling

✓ Accept

Iframe configuration example 2

Video


Video widget allows the user to insert a video in the workspace.

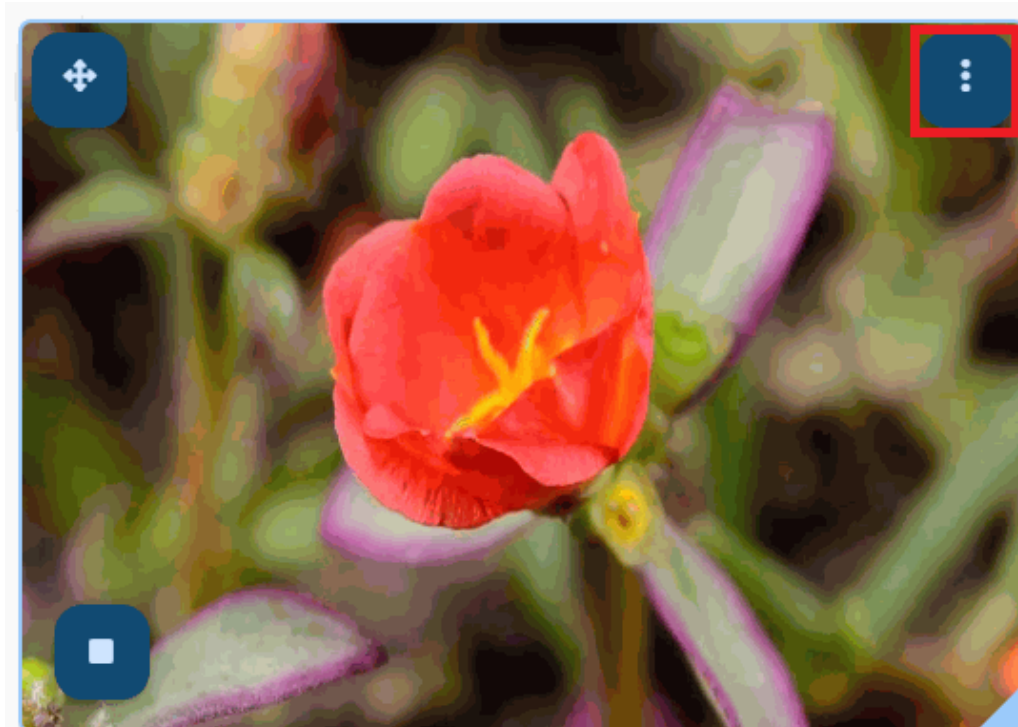

Video

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Video configuration menu.
 - **Widget Options:**

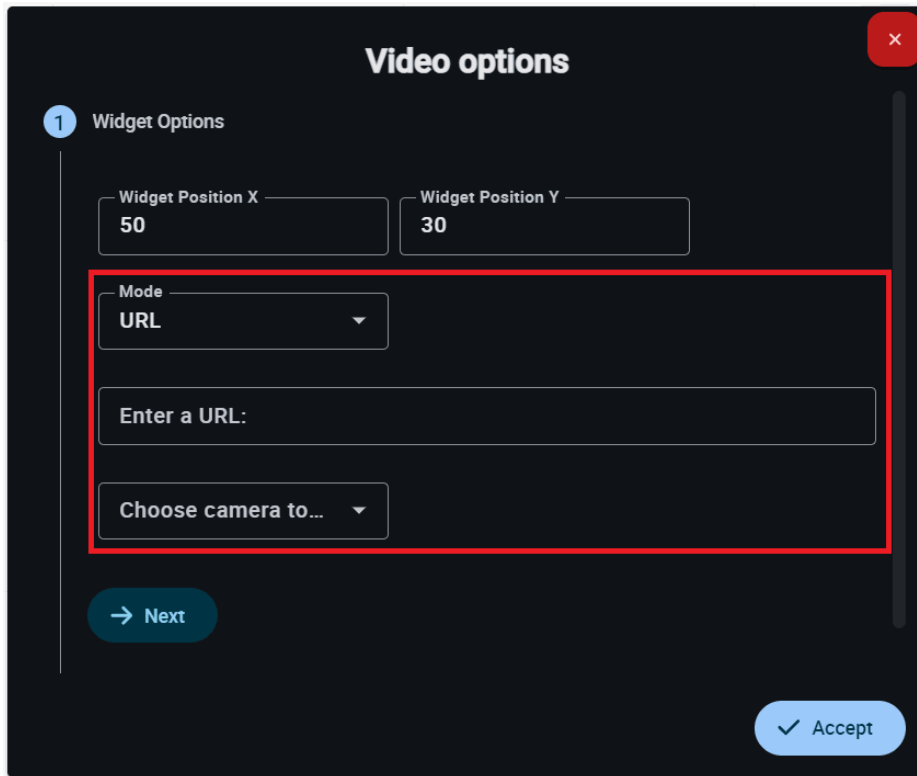A dark-themed configuration dialog titled "Video options" with a red close button in the top right. It features a sidebar with a "1 Widget Options" section. The main area contains two input fields for "Widget Position X" (value 50) and "Widget Position Y" (value 30). Below these is a red-bordered box containing a "Mode" dropdown menu set to "URL", a text input field labeled "Enter a URL:", and a "Choose camera to..." dropdown. At the bottom left is a teal "Next" button with a right arrow, and at the bottom right is a blue "Accept" button with a checkmark.

Video configuration


- **Mode:** Choos between URL, SCREEN, WEBCAM.
- **Enter a URL:** Users can enter the URL of the video to be displayed.

Caution

If URL mode has been selected, the video must be in `.mp4` , `.ogg` , `.webm` or `.avi` format.

- **Widget Styling:** This widget has the 'basic' Widget Styling configuration described in the [Widgets common configuration](#).

An example is given below:

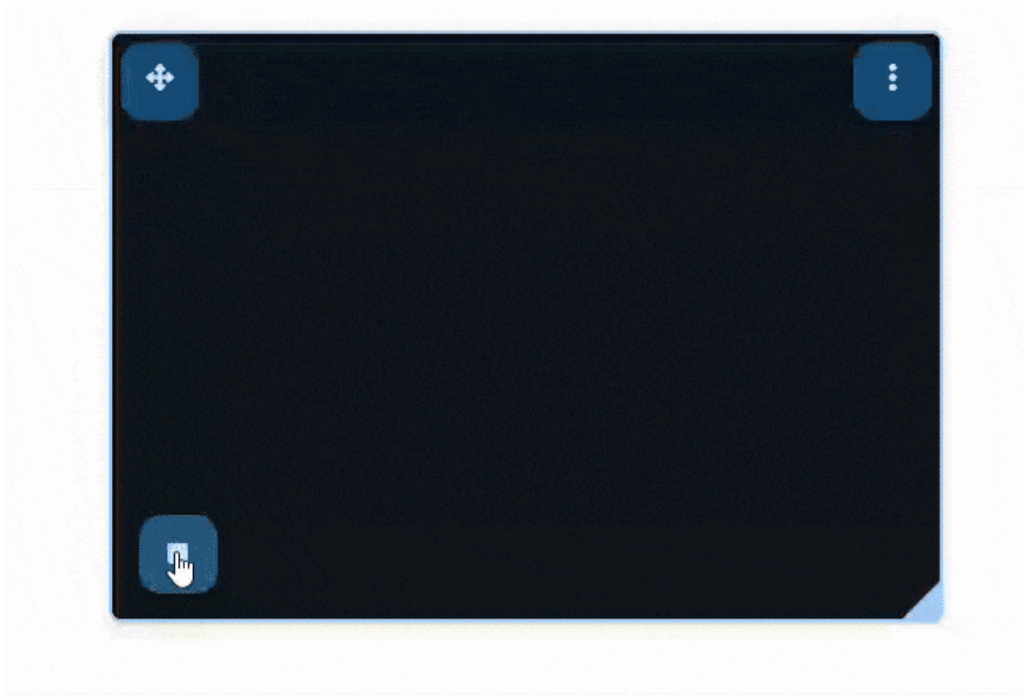

Video example

Video options

1

Widget Options

Widget Position X

50

Widget Position Y

30

Mode

URL

Enter a URL:

interactive-examples.mdn.mozilla.net/media/cc0-videos/flower.webm

Choose camera to...


→ Next

✓ Accept

Video configuration example

Timer

This widget is a counter, which can also function as a countdown counter if configured as such.

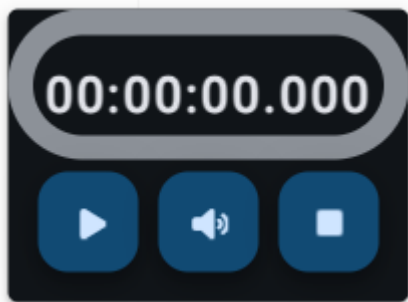

Timer

Right click on the widget to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Timer configuration menu.


Timer configuration

- **Widget Options**

This widget has different edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Time:** Users must enter the desired counter time. Note that if the Is countdown checkbox is enabled, this becomes the countdown time.

- **Is countdown:** Enabling this option turns the widget into a countdown timer. Default is disabled.
- **Have milliseconds:** If enabled, the time will be displayed with milliseconds. By default it is enabled.
- **Options:** Users can set a warning time, color and sound for when the timer reaches the end of the set counter/countdown time.

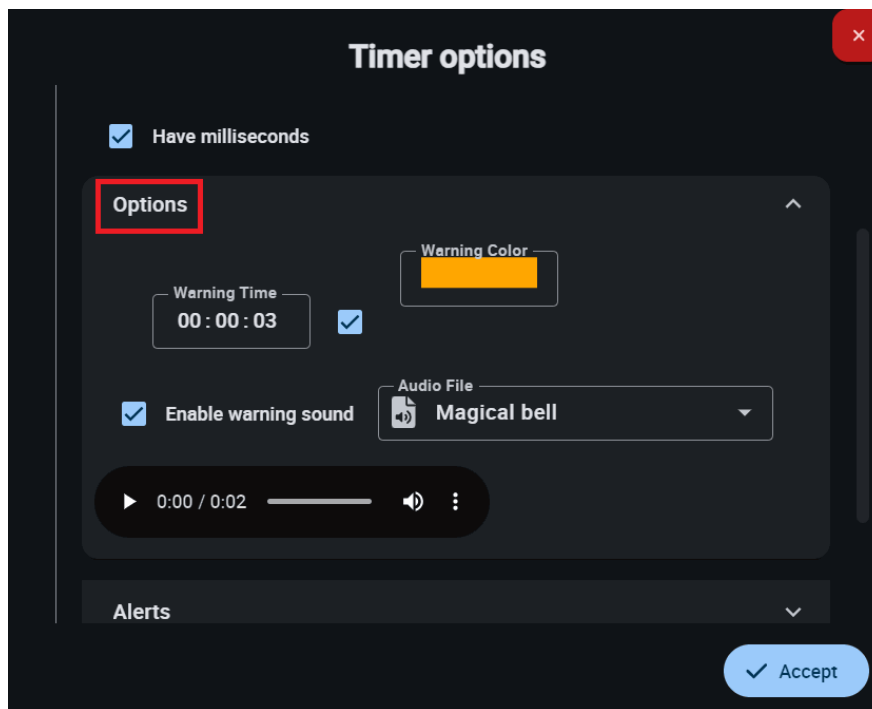

Timer configuration - Options

- **Warning Time:** Time for the color and/or sound to be displayed until the end of the counter/countdown time.
- **Warning Color:** If enabled, this color shall be displayed flashing continuously from the time the warning time is reached until the end of the counter/countdown.
- **Audio File:** If enabled, the audio that users have selected from the audio list will play when the warning time is reached, sounding continuously until the end of the counter/countdown.

For example, if the audio file has a duration of 2 seconds and the warning time is set to 3 seconds, the audio will start playing for the first time from 3 seconds


left until 1 second left and then play for the second time from 1 second left until the end.

In other words, the audio will sound 1.5 times.

⚠ **Important**


If Warning Color and Audio File parameters are disabled, the warnings will be disabled.

For example, if the timer is configured as a countdown with a time of 5 seconds and the warning time is set to 2 seconds, the widget will be displayed with the color and/or sound defined here each of those final 2 seconds, i.e. from 2 to 0 seconds:

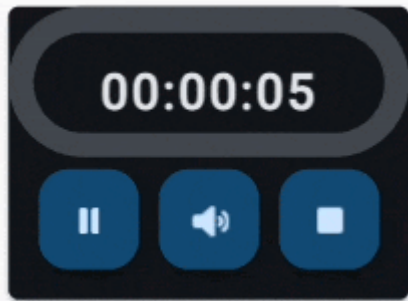

Timer - Countdown example

- **Alerts:** Light and/or sound alerts can be activated every certain specified time.

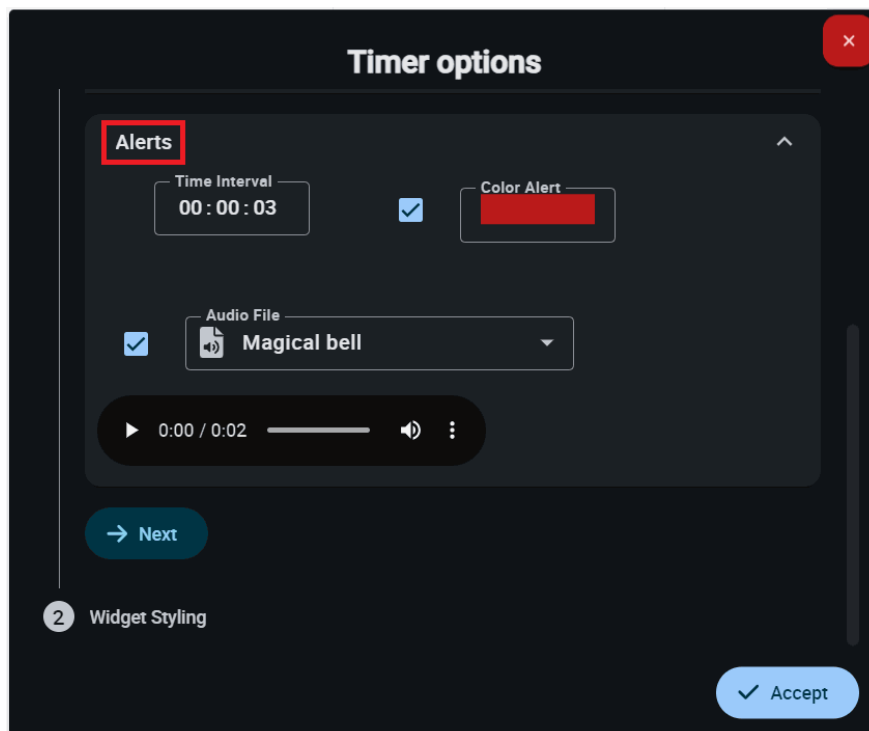

Timer configuration - Alerts


- **Time Interval:** The time interval for the light and sound alerts is set here.
- **Color Alert:** If enabled, the timer will have a light alert with the color specified here when the time interval elapses.
- **Audio file:** If enabled, the timer will have an audible alert with the audio specified here when the time interval elapses.

Users can select the audio of the alert from the audio list.

Important


If Color Alert and Audio File parameters are disabled, the alerts will be disabled.

An example is given below:

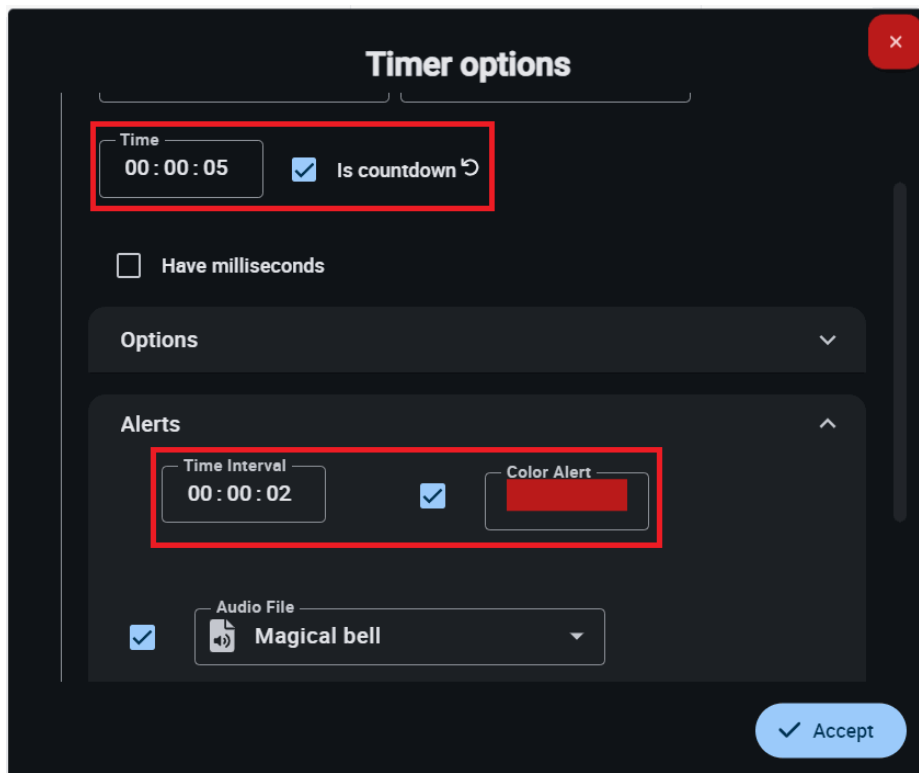

The screenshot shows a 'Timer options' dialog box with a dark theme. At the top, there's a title bar with a close button (X). Below the title bar, there are two main sections: 'Time' and 'Alerts'. In the 'Time' section, there's a time input field set to '00 : 00 : 05' and a checkbox labeled 'Is countdown' which is checked. Below this is a checkbox labeled 'Have milliseconds' which is unchecked. In the 'Alerts' section, there's a 'Time Interval' input field set to '00 : 00 : 02' with a checked checkbox next to it. To the right of this is a 'Color Alert' input field with a red color picker. Below these is an 'Audio File' section with a checked checkbox and a dropdown menu showing 'Magical bell'. At the bottom right of the dialog is an 'Accept' button with a checkmark icon.

Timer - Alert example

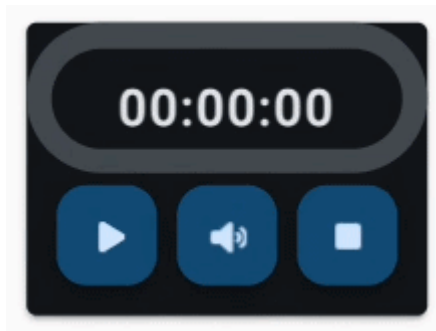


Timer - Alert example

Telemetry

Label

Depending on the type of variable selected, the appearance of the label (by default) is different.

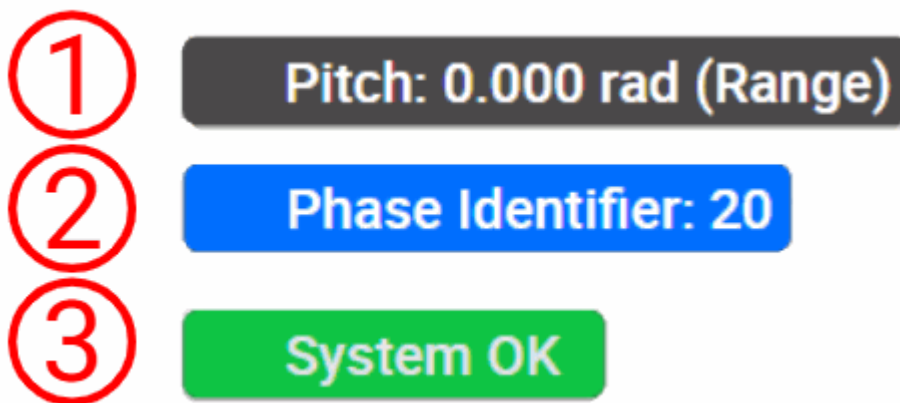

Label

- 1. Real variables:** The units of the variable are displayed.
- 2. Integer variables:** Only the variable with its value is displayed.
- 3. Bit variables:** These labels have failure/success color.

Right click on the labels to access their options (Duplicate, Edit and Remove):

- **Options** → **Edit:** This allows the user to access the Label configuration menu.

Label options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

+ Add new variable

Phase Identifier

Settings

Settings

→ Next

✓ Accept

Label - Option

Click 'Settings' to change the configuration.

Phase Identifier

Choose platform: Selected Platform

VRef*: Phase Identifier

Override text variable

Alerts Ranges: 0

× Close

Label - Settings

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).


- **VRef:** Users can choose any real, integer or bit variable to be displayed on the label.

- **Override text variable:** The label name can be changed by typing a new one different from the variable name.

Warning

This does not rename the selected variable in the configuration, it is only the name shown in the label.


- **Available with Bit variables.**

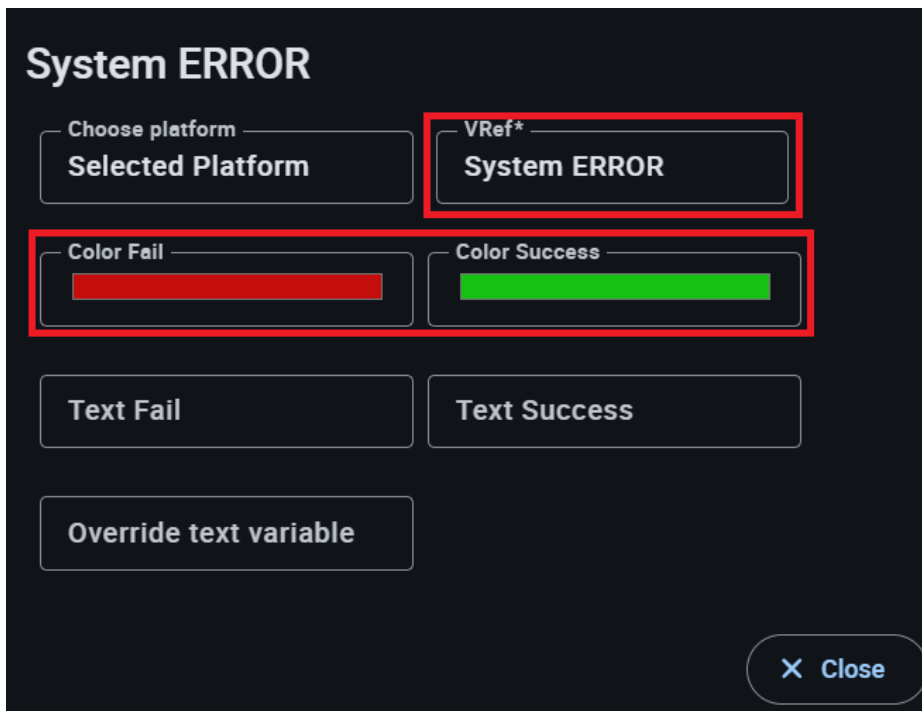

The screenshot shows a configuration window titled "System ERROR" with a dark background. It contains several input fields and buttons. A red box highlights the "VRef*" field, which contains the text "System ERROR". Another red box highlights the "Color Fail" and "Color Success" fields, which contain red and green color swatches respectively. Below these are "Text Fail" and "Text Success" buttons. At the bottom left is an "Override text variable" button, and at the bottom right is a "Close" button with a red 'X' icon.

Bit variables - Settings

- **Color Fail/Success:** By default, when the bit variable is in 'fail mode', the label is red and when it is in 'success mode', it is green.
- **Text Fail:** The specific message to display during a failure state.
- **Text Success:** The message to display when everything is working.
- **Available with Real variables.**

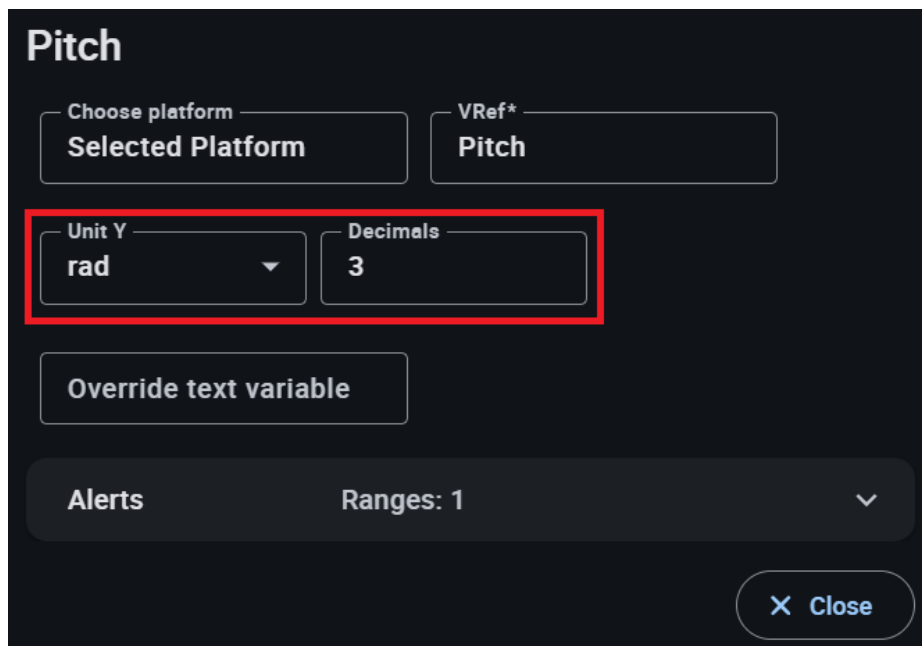

Real variables - Settings

- **Unit:** Unit of measurement of the displayed variable.


Note

This parameter is only available with Real variables.
- **Decimals:** Number of decimals displayed for the selected variable.
- **Alerts:** Allows the user to set different ranges. For this range several customizations can be made:

The screenshot displays the 'Alerts' configuration window. At the top, the 'Alerts' tab is selected and highlighted with a red rectangle. To its right, it says 'Ranges: 1'. Below the tab is a blue button with a plus sign and the text '+ Add range'. The main configuration area contains three input fields: 'Name' with the value 'Range', 'Bac' (Background color) with a grey color swatch, and 'Text' with a white color swatch. Below these is an 'Opacity' slider set to the middle. Under the slider are two input fields: 'Min' with the value '0' and 'Max' with the value '1'. At the bottom of the configuration area are two checkboxes: 'Enable audio' and 'Enable blink', both of which are currently unchecked. A blue button with a minus sign and the text 'Delete' is located at the bottom right of the configuration area.

Label configuration - Alerts

- **Name:** An identifier name of the range can be set.
- **Background color:** Changes the color of the label when the variable is in this range.
- **Text color:** Changes the color of the label text when the variable is in this range.
- **Opacity:** The opacity of the label can be customized in this interval.
- **Min/Max:** Defines the minimum and maximum values of the range.
- **Enable Audio:** Activates acoustic alerts and voice notifications to monitor the aircraft's status.
- **Enable Blink:** Enables the visual flashing of the label on the map to identify the aircraft during specific events or alarms.
- **Settings:** The 'shape' of the displayed text can be edited:

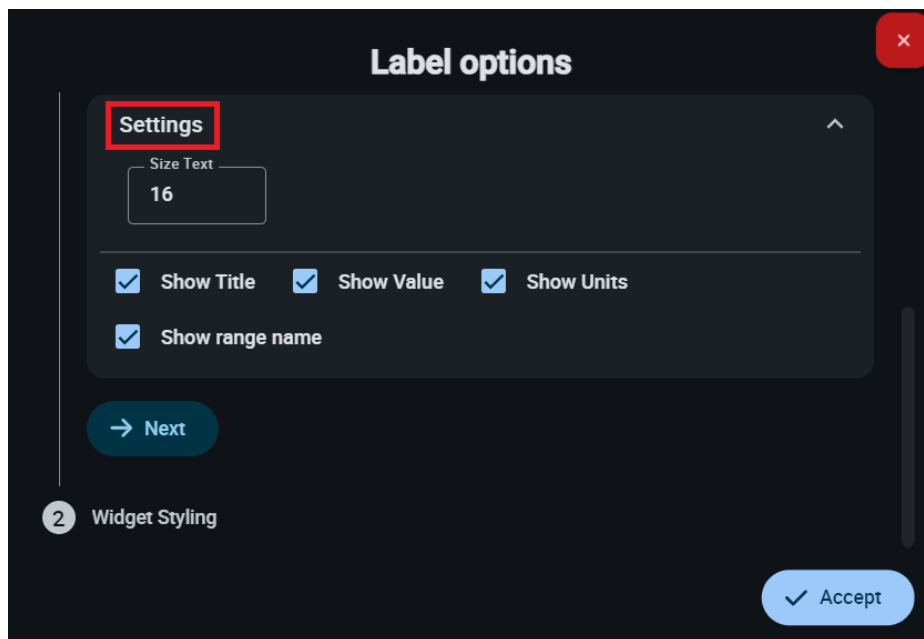


Label configuration - Settings

- **Size text.**
- **Show Title/Value/Units:** The title, value and units of the variable can be shown/hidden.
- **Show range name:** If enabled, the name assigned to the range will appear next to the variable.

Chart

Charts widgets allow the user to represent any variable of the system with respect to time. Thus, the user can visualize the evolution of that variable over time.

It is very useful during flight tests (gain tuning) and operations to monitor the behavior of the platform.

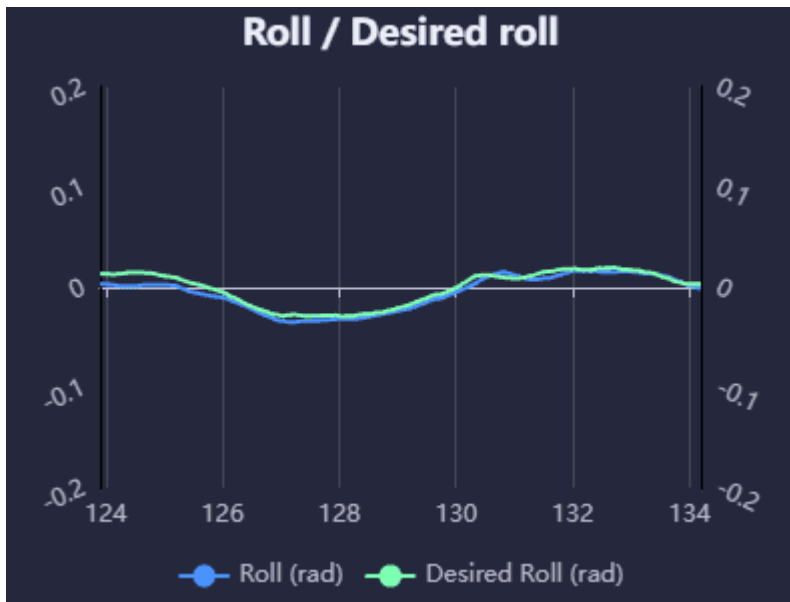

Chart

Right click on the chart to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit**: This allows the user to access the Chart configuration menu.

The 'Chart options' menu is displayed with a red border around the 'Title', 'Title size', and 'Time (sec)*' fields. The 'Widget Options' section includes 'Widget Position X' (50) and 'Widget Position Y' (30). The 'Add new variable' button is highlighted in blue. The 'Accept' button is at the bottom right.

Field	Value
Widget Position X	50
Widget Position Y	30
Title	
Title size	
Time (sec)*	60

Chart configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Title:** Title of the chart.
- **Title size:** Adjust the font size of the chart title for better visibility.
- **Time (sec):** Sets the refresh interval or the time window for the data displayed on the chart, measured in seconds.
- **Add new variable:** Click this button to link additional variables to the chart. The appearance of this series in the chart can be configured below:

Pitch -- rad

Choose platform
Selected Platform

VRef*
Pitch -- rad

Unit Y
rad

Decimals
5

☒ Auto Min Y ☒ Auto Max Y

Colc
[Black square]

Min Y

Max Y

Close

Chart configuration - Series

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the chart.
- **Unit Y:** Unit of measurement of the displayed variable.

Note

This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.

Note

This parameter is only available with Real variables.

- **Auto Min/Max Y:** If enabled, minimum and maximum of the Y axis of the chart are automatically adjusted.
- **Color:** This is the color in which the line with the values of the series is drawn.

By default, the first series is drawn in blue, the second in green, the third in yellow, the fourth in red, etc.

- **Min/Max Y:** Minimum and maximum Y axis of the chart can be adjusted manually.
- **Interface settings:**

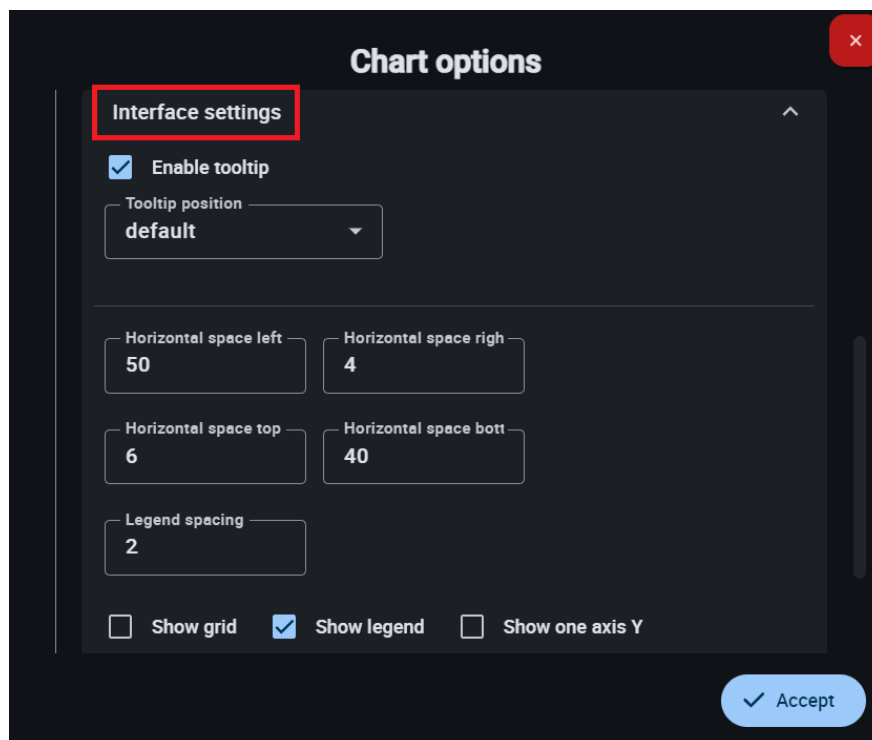


Chart configuration - Interface settings

- **Tooltip position:** When users hover the mouse over the series, a tooltip appears with the exact value of the selected variable at that instant of time. It is then

possible to define where this tooltip is displayed in the chart, the available positions are:

- **default:** The tooltip position is set by default by the chart.
- **top:** The tooltip is displayed on the top center of the chart.
- **left:** The tooltip is displayed in the center left of the chart.
- **right:** The tooltip is displayed in the center right part of the chart.
- **bottom:** The tooltip is displayed in the bottom center of the chart.

Below is an example when the right position is selected:

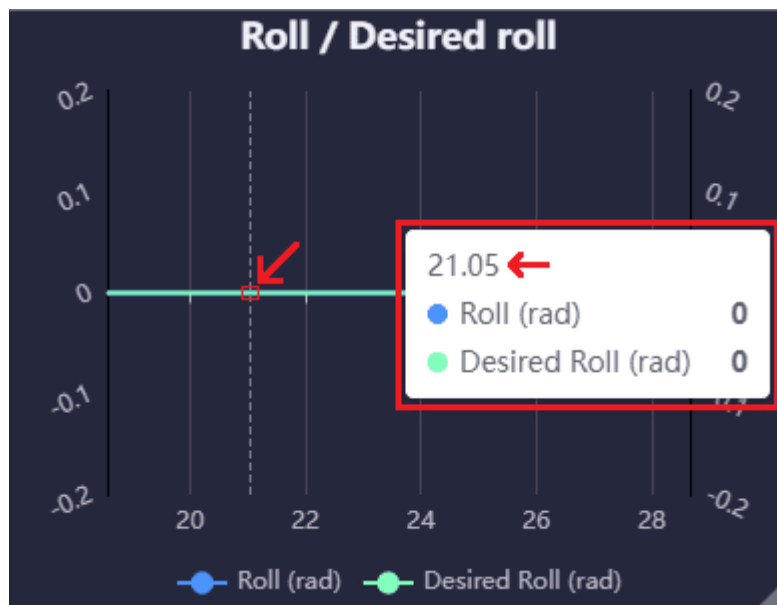


Chart configuration - Tooltip position

- **Horizontal space left/right:** The horizontal space left/right of the chart background can be customized. By default they are set to 50.
- **Show grid:** The grid of the chart can be shown/hidden.
- **Show legend:** The legend of the series can be shown/hidden on the chart.
- **Show one axis Y:** When more than one series is added, it is possible to show only one Y axis by enabling this option.

The following is an example of a typical chart used during operation:

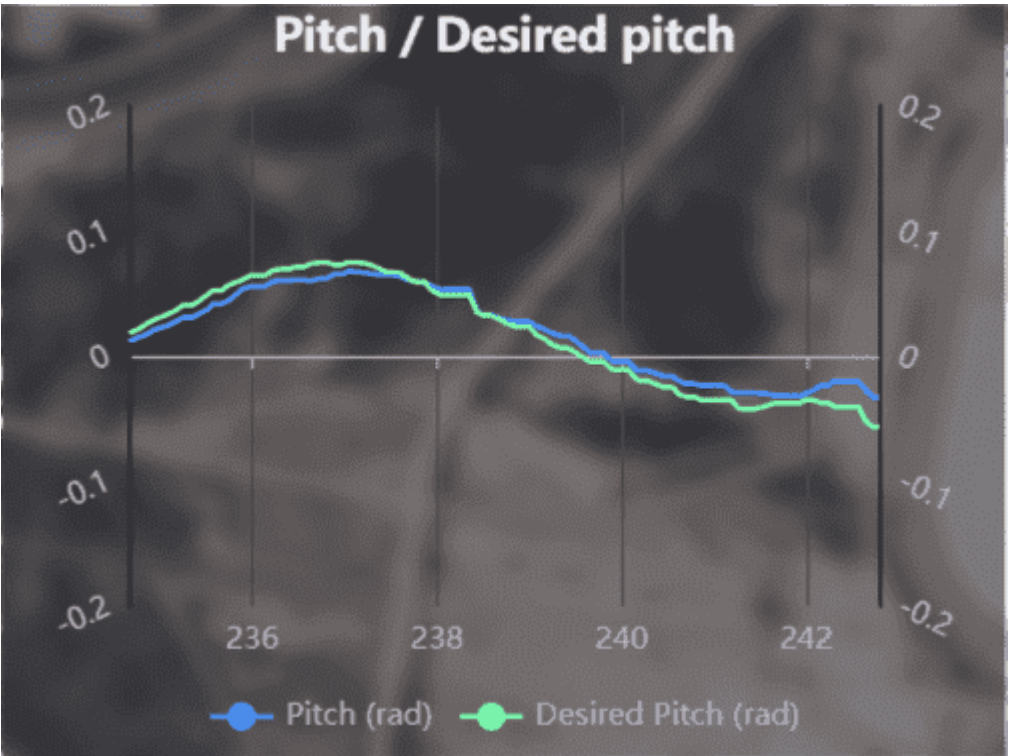


Chart example

The custom configuration made for this chart is as follows:

Chart options

Widget Position X: 50 Widget Position Y: 30

Title: Title size:

Time (sec)*: 60

+ Add new variable ²

Pitch -- rad Settings [trash]

Desired Pitch -- rad Settings [trash]

✓ Accept

Interface settings

☒ Enable tooltip

Tooltip position

bottom

Horizontal space left

50

Horizontal space right

50

Horizontal space top

40

Horizontal space bottom

40

Legend spacing

2

☐ Show grid

☒ Show legend

☐ Show one axis Y

✓ Accept

Chart configuration - Widget Options example

Pitch -- rad

Choose platform

Selected Platform

VRef*

Pitch -- rad

Unit Y

rad

Decimals

5

Colc

☐

☐ Auto Min Y

Min Y

-0,02

☐ Auto Max Y

Max Y

0,02

✕ Close

Desired Pitch -- rad

Choose platform

Selected Platform

VRef*

Desired Pitch -- rad

Unit Y

rad

Decimals

5

Colc

☐ Auto Min Y

☐ Auto Max Y

Min Y

-0,02

Max Y

0,02

Close

Chart configuration - Series example

Chart options

Widget Options

2 Widget Styling

Select style

Default_box


Back

Accept

Chart configuration - Widget Styling example

Scatter

Scatter widget allows the user to represent any variable in the system with respect to another variable.

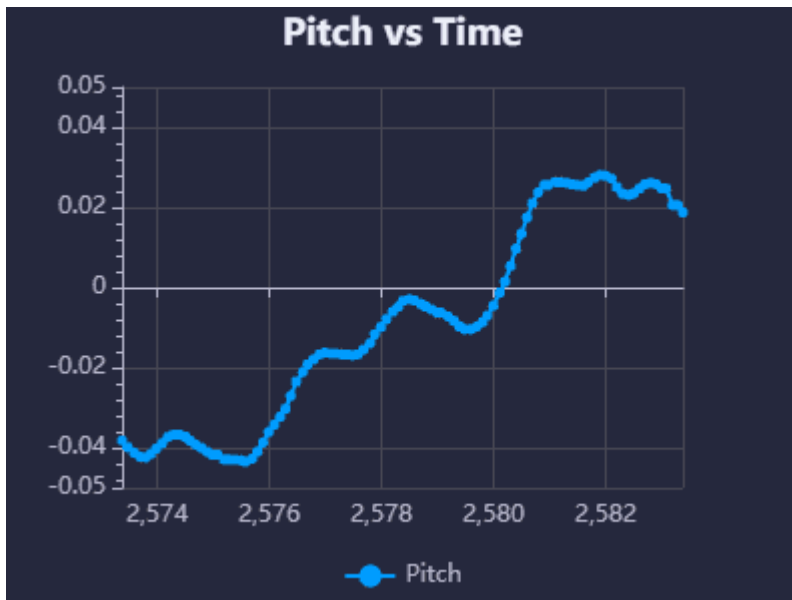

Scatter

Right click on the scatter to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Scatter configuration menu.

Scatter options

1 Widget Options

Widget Position X 50

Widget Position Y 30

Title

Title size

Maximum Sample Size* 100

Colc

Axis X

Axis Y

Interface settings


✓ Accept

Scatter configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Title:** Title of the scatter.
- **Title size:** Set the font size for the widget's title.
- **Maximum Sample Size:** Maximum number of samples of the selected variables that are drawn in the scatter. By default it is set to 100.
- **Color:** This is the color in which the values are drawn.
- **Axis X/Y:** The user must select the variables to be plotted on both axes.

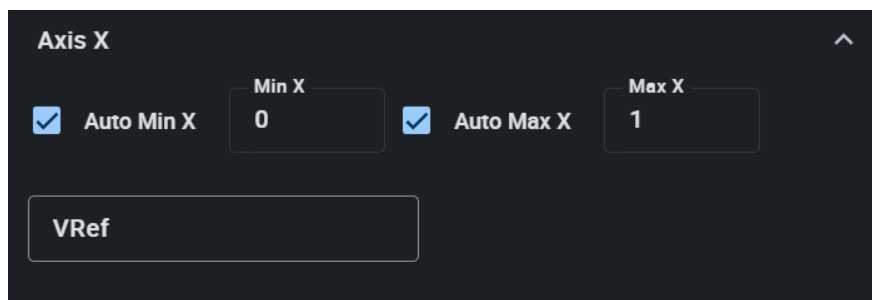The image shows a configuration panel for the 'Axis X' of a scatter plot. It has a dark background. At the top left is the label 'Axis X' and at the top right is an upward-pointing arrow. Below the label, there are two sections. The first section has a checked checkbox labeled 'Auto Min X' followed by a text input field labeled 'Min X' containing the value '0'. The second section has a checked checkbox labeled 'Auto Max X' followed by a text input field labeled 'Max X' containing the value '1'. Below these two sections is a single text input field labeled 'VRef'.

Scatter configuration - Axis X/Y

The appearance of the variables in the scatter can then be modified:

- **Auto Min/Max X/Y:** If enabled, the minimum and maximum of the X/Y axes of the scatter are automatically adjusted.
- **Min/Max X/Y:** The minimum and maximum X/Y axes of the scatter can be adjusted manually.
- **VRef:** Users can choose any real, integer or bit variables to be displayed in the scatter.
- **Unit:** Unit of measurement of the displayed variable.

Note


This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.

Note


This parameter is only available with Real variables.

- **Interface settings:**

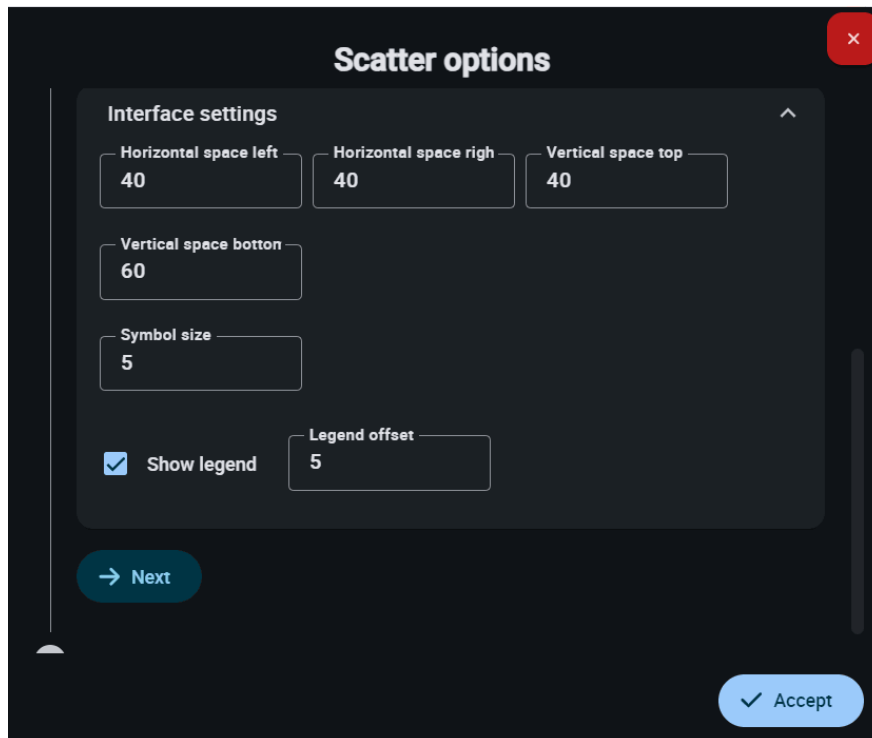A screenshot of a 'Scatter options' dialog box. The dialog has a dark background and a red close button in the top right corner. It contains a section titled 'Interface settings' with several input fields: 'Horizontal space left' (40), 'Horizontal space right' (40), 'Vertical space top' (40), 'Vertical space bottom' (60), 'Symbol size' (5), and 'Legend offset' (5). There is a checkbox labeled 'Show legend' which is checked. At the bottom left is a 'Next' button with a right arrow, and at the bottom right is an 'Accept' button with a checkmark.**Scatter configuration - Interface settings**

- **Horizontal space left/right:** The left/right horizontal spacing of the scatter background can be customized. By default they are set to 40.
- **Vertical space top/bottom:** The top/bottom vertical spacing of the scatter background can be customized. By default they are set to 40.
- **Symbol size:** The size of the symbol in the scatter (points) can be modified by the user. Default is set to 5.
- **Show legend:** The legend of the variable on the Y axis can be shown/hidden in the scatter.
- **Legend offset:** Vertical position of the legend relative to the bottom edge of the scatter, where 0 matches the bottom edge of the scatter. By default it is set to 5.

An example is given below:

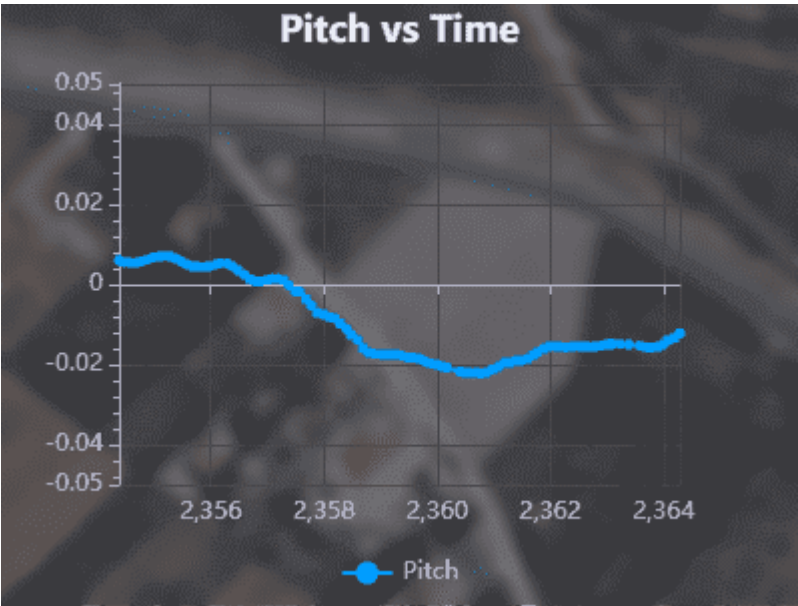

Scatter example

The custom configuration made for this scatter is as follows:

Scatter options

1

Widget Options

Widget Position X

50

Widget Position Y

30

Title

Pitche vs. Time

Title size

Maximum Sample Size*

100

Colc

Axis X

Axis Y

Interface settings

✓ Accept

×

Scatter options

Axis X

☒ Auto Min X

Min X

0

☒ Auto Max X

Max X

1

VRef

Relative Timestamp -- s

Unit

s

Decimals

2

Axis Y

▼

Interface settings

▼

→ Next

✓ Accept

×

Scatter options

Axis Y

☐ Auto Min Y

Min Y

-0.05

☐ Auto Max Y

Max Y

0.05

VRef

Pitch -- rad

Unit Y

rad

Decimals

2

Interface settings

▼

→ Next

✓ Accept

Scatter options

Interface settings

Horizontal space left

60

Horizontal space right

60

Vertical space top

40

Vertical space bottom

60

Symbol size

5

☒ Show legend

Legend offset

5

→ Next

✓ Accept

Scatter configuration - Widget Options example

Scatter options

Widget Options

2 Widget Styling

Select style

Default_box

← Back

✓ Accept

Scatter configuration - Widget Styling example

Gauge

Gauge widget is a data visualisation tool that can be used to show the progress of data or display data in ranges in a precise and compact area.

This allows to display the progress of measurements in a circular arc or to see these numerical values in a range of colors that can have a certain meaning for the user.



Gauge

Right click on the gauge to access its options (Duplicate, Edit and Remove).

- **Options → Edit:** This allows the user to access the Gauge configuration menu.

Gauge configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the gauge.
- **Unit:** Unit of measurement of the displayed variable.

Note

This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.

Note

This parameter is only available with Real variables.

- **Values:**

A dark-themed configuration panel titled 'Values' with a red border. It contains four input fields: 'Min*' with value '0', 'Max*' with value '1', 'Start angle*' with value '225', and 'End angle*' with value '-45'. An upward arrow icon is in the top right corner.


Gauge configuration - Values

- **Min/Max:** Minimum and maximum values displayed on the gauge.
- **Start/End angle:** Start and end angle of the position of the minimum and maximum values respectively.
- **Ranges:** Allows the user to set different ranges.

Warning

The panel warns the user that for correct behavior, ranges must not intersect.

Several customizations can be made in the different ranges:

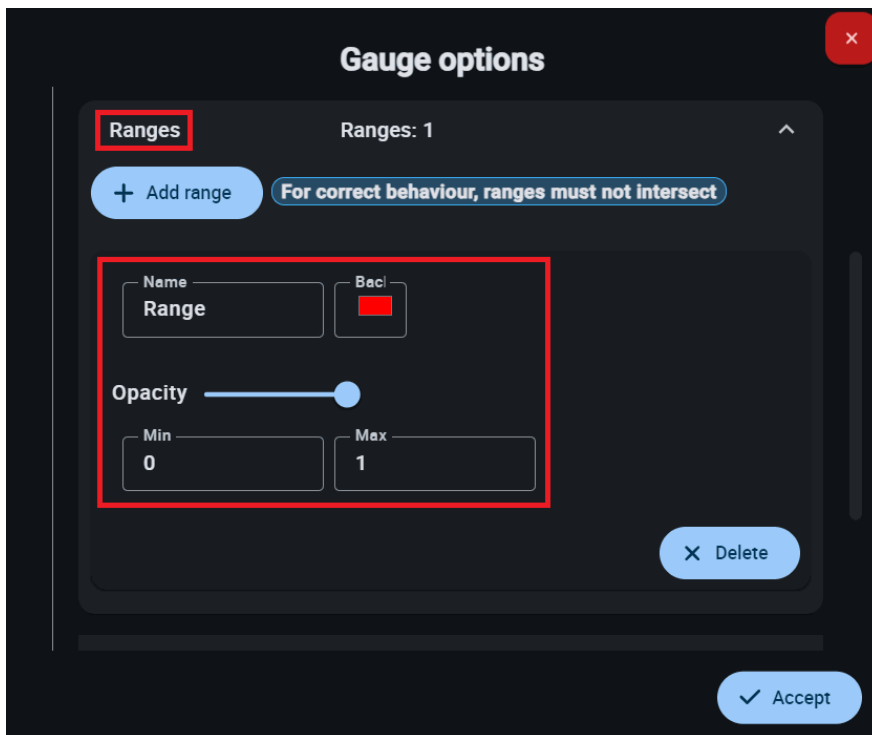A dark-themed configuration panel titled 'Gauge options' with a red close button in the top right. The 'Ranges' tab is selected and highlighted with a red border. It shows 'Ranges: 1'. There is a '+ Add range' button and a warning message: 'For correct behaviour, ranges must not intersect'. A range configuration box is highlighted with a red border, containing: 'Name' (Range), 'Back' (red color swatch), 'Opacity' (slider), 'Min' (0), and 'Max' (1). At the bottom right are 'Delete' and 'Accept' buttons.

Gauge configuration - Ranges

- **Name:** An identifying name for the range can be set.
- **Background color:** Sets the color of the gauge arc in this range.

- **Opacity:** The opacity of the circular arc can be customized in this range.
- **Min/Max:** Defines the minimum and maximum values of the range.
- **Remove:** Click to delete this range.
- **Reference settings:**

Gauge options

Reference settings

☒ Show progress ☐ Show progress + ranges ☐ Show ranges
☐ Not show

☒ Show value ☒ Show units ☒ Show range name

☐ References outside ☒ Show ticks

☒ Show variable name

Override variable name

Reference Size: 15 Reference position: 0

Label Size: 15 Label Position: 84


☐ Colc Opacity: [Slider]

✓ Accept

Gauge configuration - Reference settings

The gauge can be configured to show different cases:

- **Show progress:** Shows the progress arc of the selected variable in the gauge.
- **Show progress + ranges:** Displays the progress arc of the selected variable in the gauge together with the previously defined ranges.
- **Show ranges:** Displays the gauge only with the previously defined ranges.
- **Not show:** The needle indicates the value but neither the progress nor the ranges are shown in the gauge.

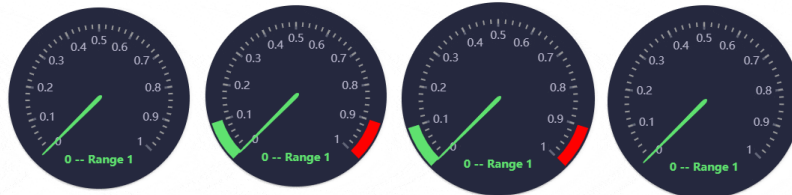

Reference settings - 'Show progress', 'Show progress + ranges', 'Show ranges' and 'Not show' respectively

Important

- Only one of the four options described below can be selected.
- If the progress bar falls within a defined range, it will always be colored in the color of that range even when users choose not to display them.

In addition, this widget is highly customizable so that users can configure it to their wishes:

- **Show value:** If enabled, displays on the gauge the value of the selected variable that the needle is pointing to.
- **Show units:** If enabled, displays the units of the value of the selected variable that the needle is pointing to.
- **Show range name:** If enabled, it displays, next to the value, the name of the range (previously defined) in which the value is in.

In addition, the color of this text will be the same as that of its corresponding range.

- **References outside:** References refers to the displayed axis and its numbering.

By default, the arc axis numbering is "inside" the arc, by enabling it, it will be in the "outside" part.

- **Show ticks:** Axis ticks can be shown/hidden. By default it is enabled, i.e. they are shown.
- **Override variable name:** Allows for the replacement of the default variable name with a custom label.

- **Reference Size:** The size of the axis numbering can be modified.
- **Reference position:** The position of the axis numbering can be adjusted by the user. The default position is 0.
- **Label Size:** The size of the text value can be modified.
- **Label Position:** The position of the value can be adjusted. The default position is at 70, at the bottom of the gauge.

If set to 0, the label will be in the center of the gauge.

- **Color:** This is the color in which the value is drawn.

Note

If ranges are defined and the value falls within a range, the color of the value will not be this selected color, but will be colored according to the color of the range the value is in.

- **Opacity:** The opacity of the progress arc can be customized in this range.

Tip

This is useful when the option Show progress + ranges * has been selected. Since if a range is overpainted by the progress bar, users can still see where the range is.

- **Pointer settings:** Here the user can configure the pointer of the gauge.

Gauge configuration - Pointer settings

- **Choose pointer:** Users can choose a desired pointer from the list. If none is selected, no pointer will be drawn.
- **Pointer Offset Center:** Position of the "start" of the needle with respect to the center of the gauge. Default is set to 5.
- **Pointer width:** Width of the pointer. The default width is 6.
- **Pointer length:** Pointer length is set as a percentage of the distance between the center and the edge of the gauge.

An example is given below:




Gauge example

The custom configuration made for this gauge is as follows:

Gauge configuration - Values example


Gauge configuration - Ranges example

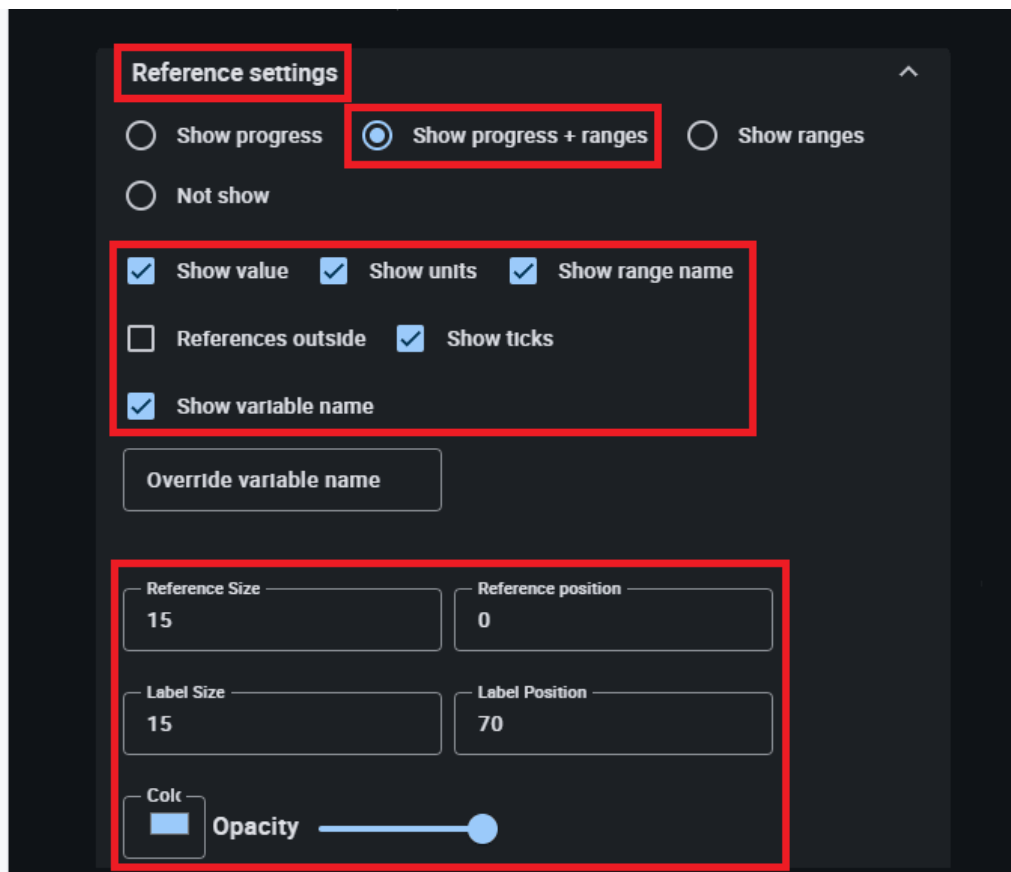

The image shows a configuration panel titled "Reference settings" with a red border. It contains several options and input fields:

- Radio buttons for "Show progress", "Show progress + ranges" (selected), "Show ranges", and "Not show".
- Checkboxes for "Show value", "Show units", "Show range name", "References outside", "Show ticks", and "Show variable name".
- A text input field labeled "Override variable name".
- Input fields for "Reference Size" (15) and "Reference position" (0).
- Input fields for "Label Size" (15) and "Label Position" (70).
- A color selection box labeled "Colc" and an "Opacity" slider.

Gauge configuration - Reference settings example

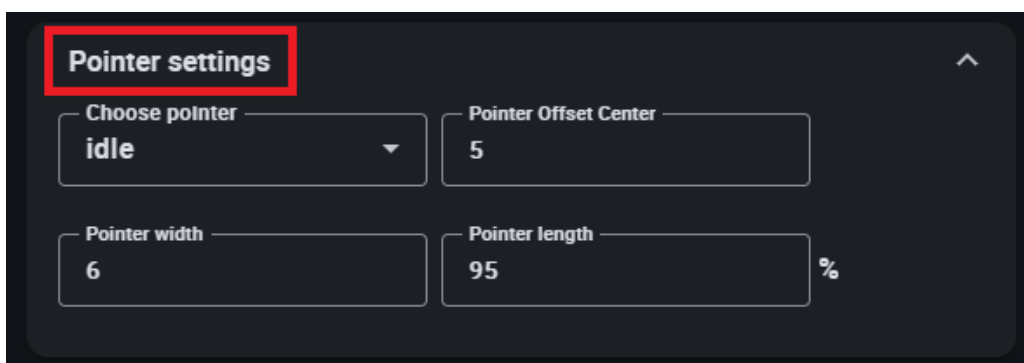

The image shows a configuration panel titled "Pointer settings" with a red border. It contains several input fields:


- A dropdown menu for "Choose pointer" set to "idle".
- An input field for "Pointer Offset Center" set to 5.
- An input field for "Pointer width" set to 6.
- An input field for "Pointer length" set to 95, followed by a percentage symbol (%).

Gauge configuration - Pointer settings example

Bar

Bar widget graphically displays the value of a selected variable by means of a bar. In addition, color ranges can be specified according to specific values.

The appearance of this widget is highly customizable, allowing the user to adapt it to the desired use.

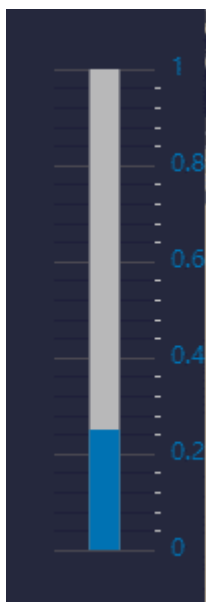

Bar

Right click on the bar to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit**: This allows the user to access the Bar configuration menu.

Bar options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform: Selected Platform, VRef*

Bar options

Alerts Ranges: 0

Interface settings

Next

Accept

Bar configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the bar.
- **Unit:** Unit of measurement of the displayed variable.

Note


This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.

Note

This parameter is only available with Real variables.

- **Bar options:**

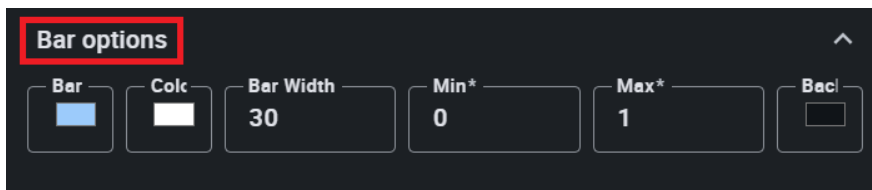

Bar configuration - Bar options

- **Bar color:** The color of the bar with the value can be changed here.
- **Color text:** The color of the selected variable value can be modified.
- **Bar Width:** The user can modify the width of the bar as desired. By default it is set to 30.
- **Min/Max:** Minimum and maximum values displayed in the bar.
- **Background color:** The color of the background bar can be set here.
- **Alerts:** Allows the user to set different ranges. For these ranges several customizations can be made:

Bar configuration - Alerts

- **Name:** An identifier name of the range can be set.
- **Background color:** Sets the color of the bar for this range.
- **Text color:** Changes the color of the selected variable value in this range.
- **Opacity:** The opacity of the bar can be customized in this range.
- **Min/Max:** Defines the minimum and maximum values of the range.
- **Remove:** Click to delete this range.
- **Interface settings:**

Bar configuration - Interface settings


The appearance of the bar widget can be highly customized using the following parameters:

- **Axis on the top:** If enabled, permits placing the axis above the bar instead of below it.
- **Axis on the right:** If enabled, the axis is placed to the right of the bar, otherwise to the left. By default it is enabled.
- **Show Axis:** If enabled, the axis of the bar is shown, otherwise it is hidden. By default it is enabled.
- **Horizontal bar:** If enabled, the bar and the axis are displayed in horizontal format, otherwise it is in vertical position.
By default disabled (in vertical position).
- **Show grid:** If enabled, a grid with the subdivisions of the axes is shown, otherwise it is hidden. By default it is enabled.
- **Show background:** If enabled, the rest of the bar that is not colored by the value is shown with the color previously defined in Bar options.
By default it is enabled.
- **Show Value:** If enabled, shows the value of the selected variable in the bar. By default it is enabled.
- **Show Name:** If enabled, the name of the selected variable is displayed at the bottom of the bar. By default it is enabled.
- **Horizontal space left/right:** The left/right horizontal spacing of the bar widget background can be customized. By default they are set to 25.
- **Vertical space top/bottom:** The top/bottom vertical spacing of the bar widget background can be customized. By default they are set to 25.
- **Size Text Value:** The size of the text value can be modified. Default is 14.

- **Size Name Variable:** The size of the selected variable name can be changed. Default is 12.
- **Size Text Axis:** The size of the axis text can be modified. Default is 12.

Some examples are given below:

- **Example 1:**

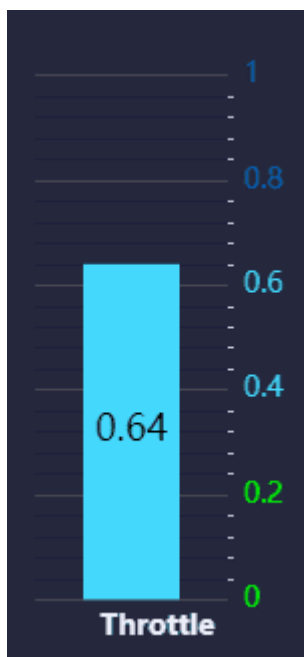

Bar example 1

The custom configuration made for this bar is as follows:

Bar options

1 Widget Options

Widget Position X50

Widget Position Y30

Choose platformSelected Platform

VRef*Stick - Throttle -- --

Unit*

Decimals10

Bar options

Bar

Colc

Bar Width30

Min*0

Max*1

Bacl

✓ Accept

Bar configuration - Bar options example 1

As shown in the figure above, when the background bar is hidden ('Show background' option is disabled), the 'Background color' parameter does not appear.

Embention Sistemas Inteligentes, S.A.

280

Bar options

Alerts

Ranges: 3

+ Add range

Name

Start

Back

Text

Opacity

Min

0

Max

0,2

X Delete

Name

Cruise 1

Back

Text

Opacity

Min

0,21

Max

0,7

X Delete

Name

Cruise 2

Back

Text

Opacity

Min

0,71

Max

1

X Delete

✓ Accept

Bar configuration - Alerts example 1

Interface settings

☐ Axis on the top

☒ Axis on the right

☒ Show Axis

☐ Horizontal bar

☒ Show grid

☐ Show background

☒ Show Value

☒ Show Name

Horizontal space left

25

Horizontal space right

25

Vertical space top

25

Vertical space bottom

25

Size Text Value

14

Size Name Variable


12

Size Text Axis

12

Bar configuration - Reference settings example 1

• Example 2:

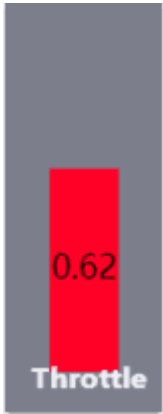

Bar example 2

The custom configuration made for this bar is as follows:

Bar options

Widget Position X

50

Widget Position Y

30

Choose platform

Selected Platform

VRef*

Stick - Throttle -- --

Unit*

Decimals

10

Bar options

Bar

Colc

Bar Width

30

Min*

0

Max*

1

Alerts

Ranges: 0

Accept

Bar configuration - Bar options example 2

As shown in the figure above, when the background bar is hidden ('Show background' option is disabled), the 'Background color' parameter does not appear.

In addition, as there is no range specified, the color of the bar will always be the one specified in the 'Bar color' parameter.

Interface settings

☐ Axis on the top

☒ Axis on the right

☐ Show Axis

☐ Horizontal bar

☐ Show grid

☐ Show background

☒ Show Value

☒ Show Name

Horizontal space left

5

Horizontal space right

5

Vertical space top

25

Vertical space bottom

5

Size Text Value

14


Size Name Variable

12

Size Text Axis

12


Bar configuration - Reference settings example 2

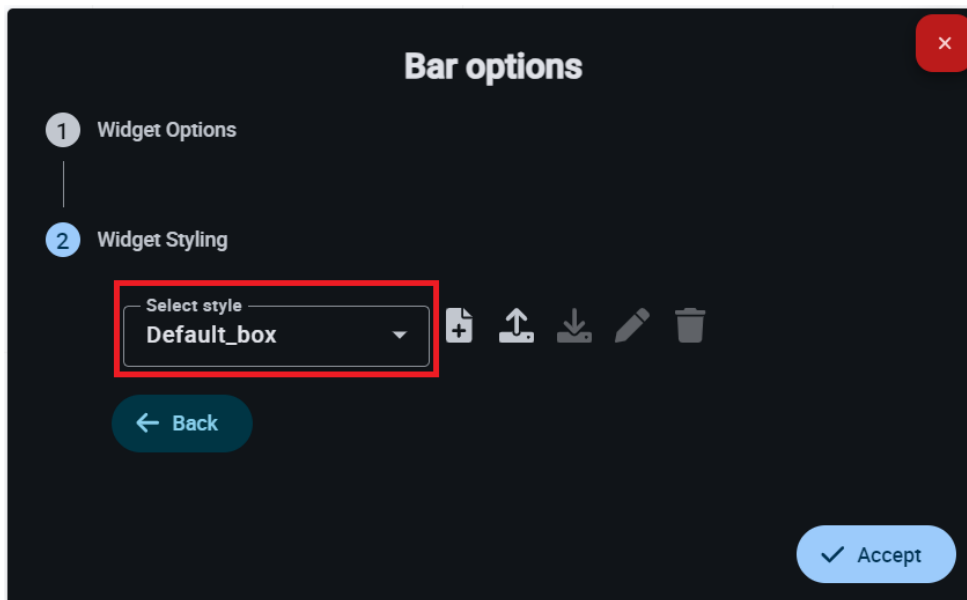

Bar configuration - Widget Styling example 2

Roll Tape

Roll tape widget shows the value of the selected variable with a marker always in the center position of the widget. It is also possible to add color ranges according to the values of the variable. In addition, a second variable can be used as a reference marker.

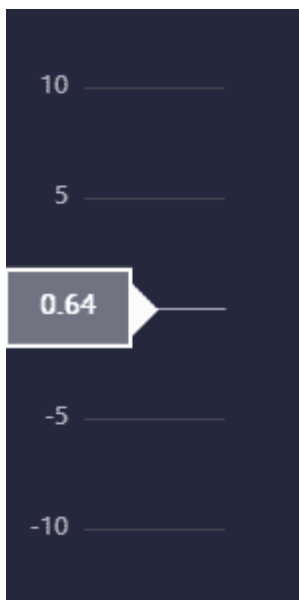

Roll Tape

Right click on the roll tape to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Roll Tape configuration menu.

Roll Tape options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform: Selected Platform

VRef

Alerts Ranges: 0

Secondary variable

Options

→ Next

✓ Accept

Roll Tape configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the roll tape.
- **Unit:** Unit of measurement of the displayed variable.

Note


This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.


Note

This parameter is only available with Real variables.

- **Alerts:** Allows the user to set different ranges. For these ranges several customizations can be made:

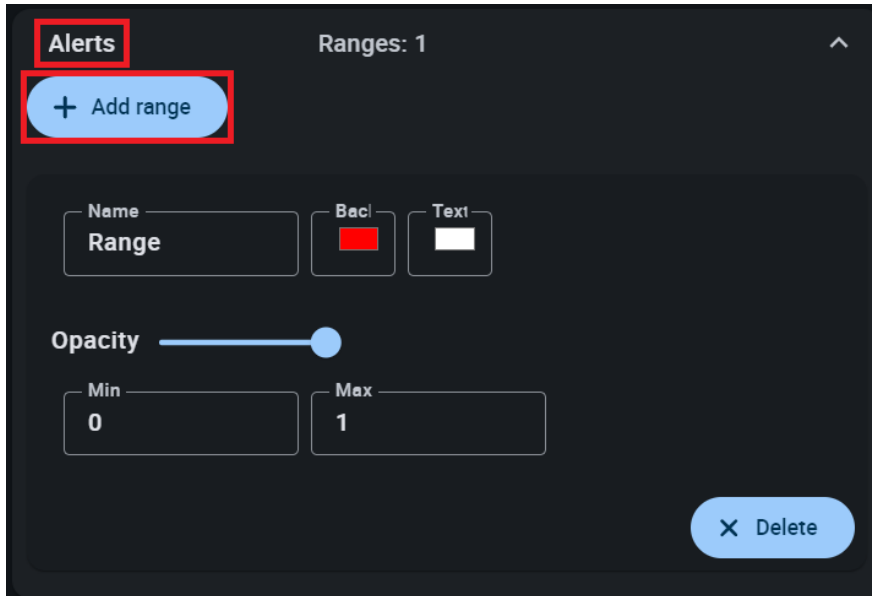**Roll Tape configuration - Alerts**

- **Name:** An identifying name can be set for the range.
- **Background color:** Sets the color of the roll tape for this range.
- **Text color:** Sets the color of the range name for this range.
- **Opacity:** The opacity of the roll tape can be customized in this range.
- **Min/Max:** Defines the minimum and maximum values of the range.
- **Remove:** Click to delete this range.
- **Secondary variable:** A second variable can be added to be used, for example, as a reference.

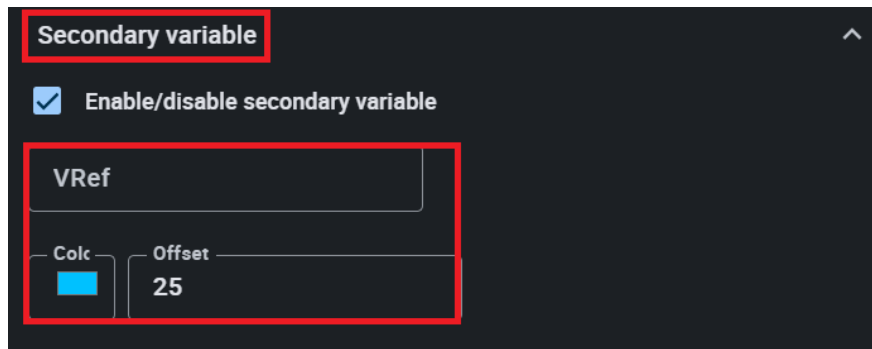

Roll Tape configuration - Secondary variable

- **Enable/disable secondary variable:** If enabled, it is displayed as a marker.
- **VRef:** Users can choose any real, integer or bit variable to be displayed on the roll tape as a secondary variable.
- **Unit:** Unit of measurement of the displayed variable.

Note


This parameter is only available with Real variables.

- **Decimals:** Number of decimals displayed for the selected variable.

Note

This parameter is only available with Real variables.

- **Color:** Sets the color of the secondary variable marker.
- **Offset:** Horizontal position of the marker. By default it is set to 25.
- **Options:**

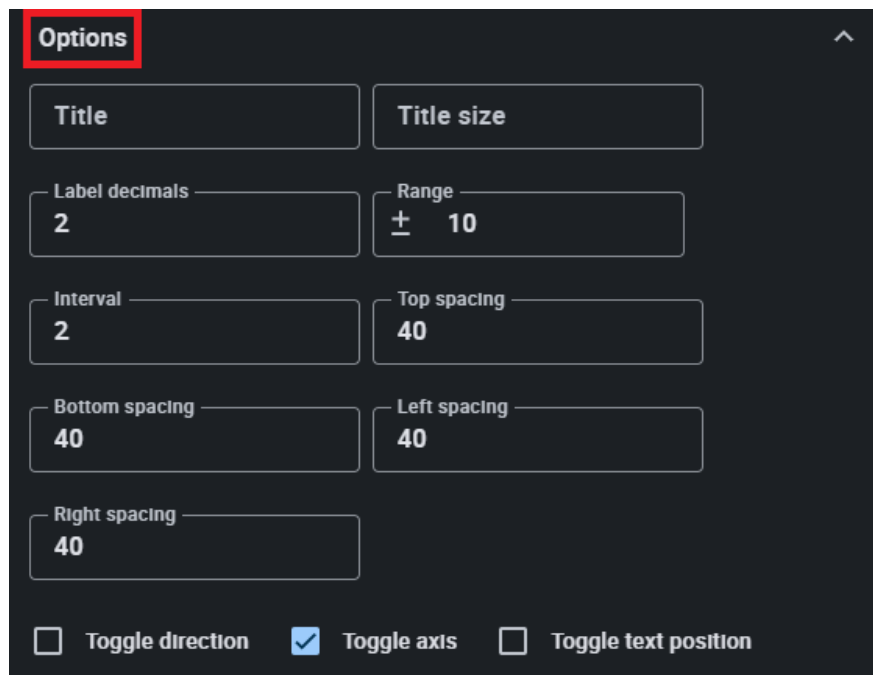The image shows a dark-themed configuration panel titled "Options" in a red-bordered box at the top left. The panel contains several input fields and checkboxes. The fields are arranged in a grid: "Title" and "Title size" at the top; "Label decimals" (set to 2) and "Range" (set to ± 10) below; "Interval" (set to 2) and "Top spacing" (set to 40) below; "Bottom spacing" (set to 40) and "Left spacing" (set to 40) below; and "Right spacing" (set to 40) at the bottom. At the very bottom, there are three checkboxes: "Toggle direction" (unchecked), "Toggle axis" (checked), and "Toggle text position" (unchecked).

Parameter	Value
Title	
Title size	
Label decimals	2
Range	± 10
Interval	2
Top spacing	40
Bottom spacing	40
Left spacing	40
Right spacing	40
Toggle direction	☐
Toggle axis	☒
Toggle text position	☐

Roll Tape configuration - Options


The appearance of the roll tape widget can be customized using the following parameters:

- **Title:** Title of the roll tape widget
- **Title size:** Adjust the font size of the chart title for better visibility.
- **Label decimals:** Decimals of the value to be displayed on the roll tape. By default it is set to 2.
- **Range (+/-):** Space between the center and the top and bottom boundaries. The default value is 10.
- **Interval:** Axis interval. Default is 5.
- **Top/Bottom spacing:** The top/bottom spacing of the roll tape widget background can be customized. The default value is 40.
- **Left/Right spacing:** The left/right horizontal spacing of the roll tape widget background can be customized. The default value is 40.
- **Toggle direction:** If enabled, the roll tape and the axis are displayed in horizontal format, otherwise it is in vertical position.

By default disabled (in vertical position).

- **Toggle axis:** If enabled, the axis is positioned to the left of the roll tape, otherwise to the right. By default it is enabled.
- **Toggle text position:** If enabled, the previously defined title is positioned at the top of the widget, otherwise it is positioned at the bottom. By default disabled.

An example is given below:

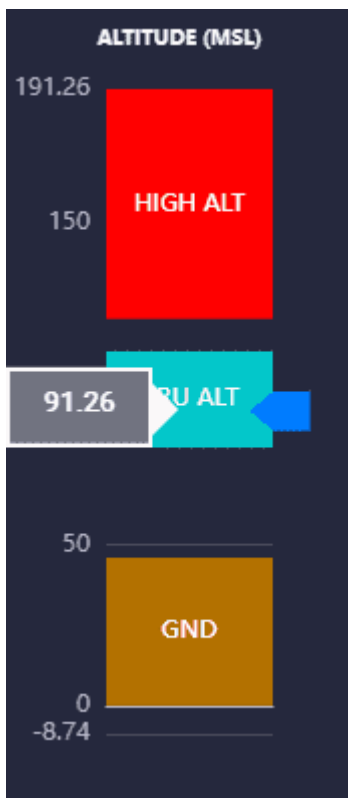

Roll Tape example

The custom configuration made for this roll tape is as follows:

Roll Tape options

1

Widget Options

Widget Position X

130

Widget Position Y

78

Choose platform

Selected Platform

VRef

MSL (Height Above Mean Se

Unit

Decimals

2

Alerts

Ranges: 3

+ Add range

Name

GND

Back

Text

Opacity

Min

0

Max

46

X Delete

Name

CRU ALT

Back

Text

Opacity

Min

80

Max

110

X Delete

Name

HIGHT ALT

Back

Text

Opacity

Min

120

Max

1000

X Delete

Accept

Embention Sistemas Inteligentes, S.A.

290

Roll Tape configuration - Alerts example

Secondary variable

☒ Enable/disable secondary variable

VRef

Desired MSL (Height Above I

Unit

Decimals

2

Colc

Offset

25

Roll Tape configuration - Secondary variable example

Options

Title

ALTITUDE (MSL)

Title size

Label decimals

2

Range

±

20

Interval

20

Top spacing

40

Bottom spacing

30

Left spacing

50

Right spacing

40

☐ Toggle direction

☒ Toggle axis

☒ Toggle text position

Roll Tape configuration - Options example

Label Script

The Label Script options panel allows creating highly customized widgets within the Veronte Ops interface using JavaScript code.

Right click on the Label Script to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Roll Tape configuration menu.

Label Script options

Widget Position X: 50 Widget Position Y: 30

Choose Platform*: Selected Platform

Code

```
1 v /**
2   * The script should return an object/array of objects as follow
3   * {
4   *   label: string;
5   *   color: string;           // Hex, rgb or name
6   *   backgroundColor: string; // Hex, rgb or name
7   *   value?: number;         // Optional, could be displayed with
8   * }
9   */
10
11 // Example:
12 const rTime = await getVar(0, 300);
13 const rTimeString = Number(rTime).toFixed(4);
14
15 v return [
```

Import script

✓ Accept

Label Script options

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).


- **Code:** The area where the logic is written. The script must return an object or an array of objects containing parameters such as label, color, backgroundColor, and value.
- **Import script:** Allows uploading pre-configured external script files.

Commands

Veronte Ops allows the user to modify some variables during a flight to test some parameters or to simulate a stick control.

Slider

Slider widgets allow the user to choose a certain variable and change its value by simply moving the slider to the desired value from the workspace during a flight.

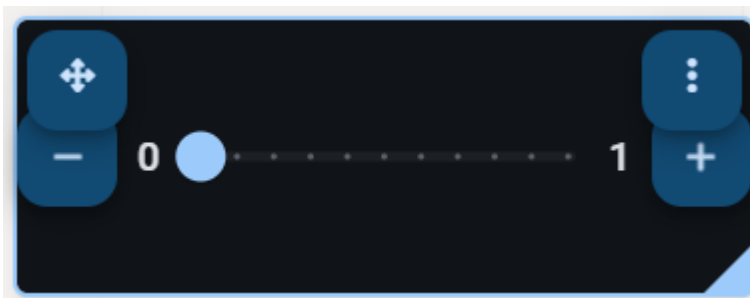

Slider

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Slider configuration menu.

Slider options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform

Selected Platform: VRef*

Values

Min value*: 0

Max value*: 1

Step*: 0,1

☐ Vertical ☐ Invert ☒ Show steps

→ Next

✓ Accept

Slider configuration

◦ Widget Options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the slider.
- **Unit:** Unit of measurement of the displayed variable.


i Note

This parameter is only available with Real variables.


- **Values:**
 - **Min/Max value:** Minimum and maximum values displayed in the slider. Defaults are 0 and 1 respectively.
 - **Step:** Here users must enter the step they want the slider to have. By default it is set to 0.1.
 - **Vertical:** If enabled, the slider widget is displayed in vertically, otherwise it is displayed horizontally. By default disabled (in horizontal position).

- **Invert:** If enabled, the minimum and maximum values are swapped, otherwise the minimum value is to the left of the widget and the maximum value to the right. By default disabled.
- **Show steps:** If enabled, the step divisions of the slider are shown when interacting with the widget, otherwise they are hidden.
By default it is enabled.

An example is given below:

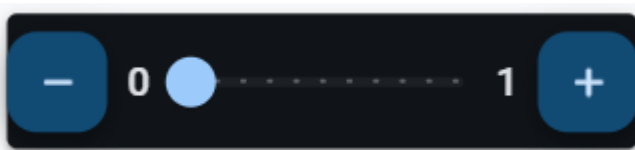

Slider example

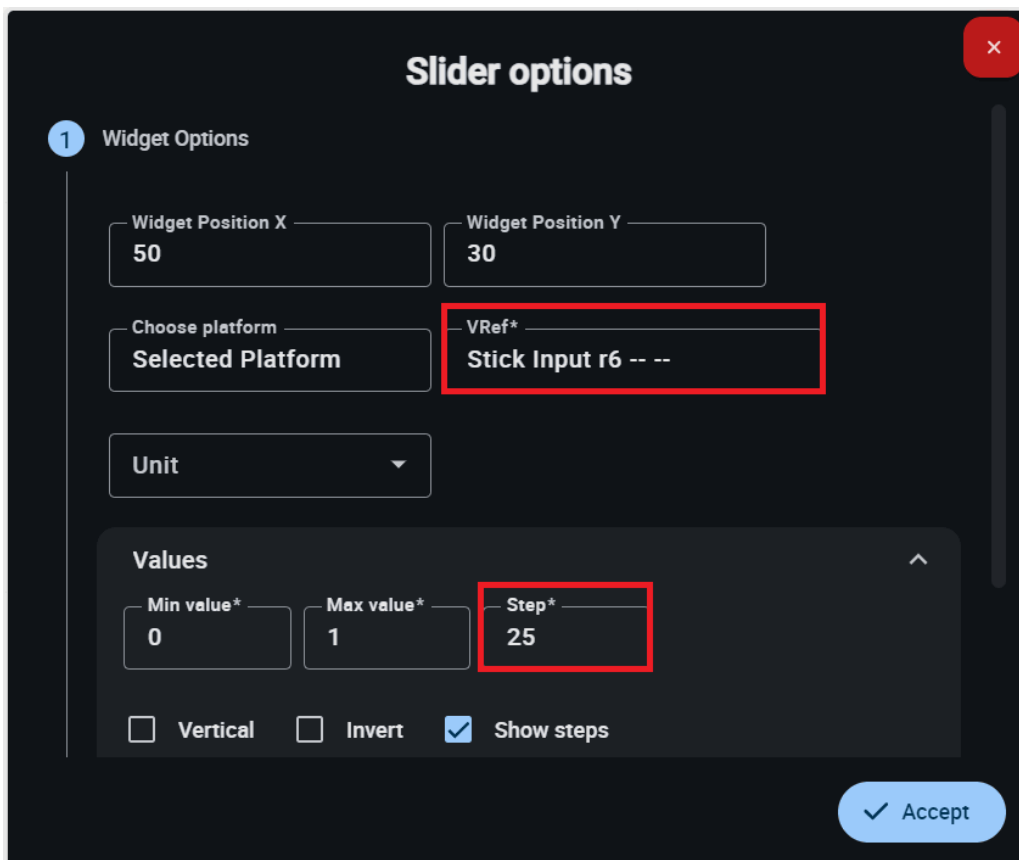

Slider options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform: Selected Platform

VRef*: Stick Input r6 -- --

Unit: [dropdown]

Values

Min value*: 0

Max value*: 1

Step*: 25

☐ Vertical ☐ Invert ☒ Show steps

✓ Accept

Slider configuration example

Action Button


Action Button widgets can be added to the workspace independently and also be displayed all together embedded in the **Veronte Panel**.



Action Button

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Action Button configuration menu.

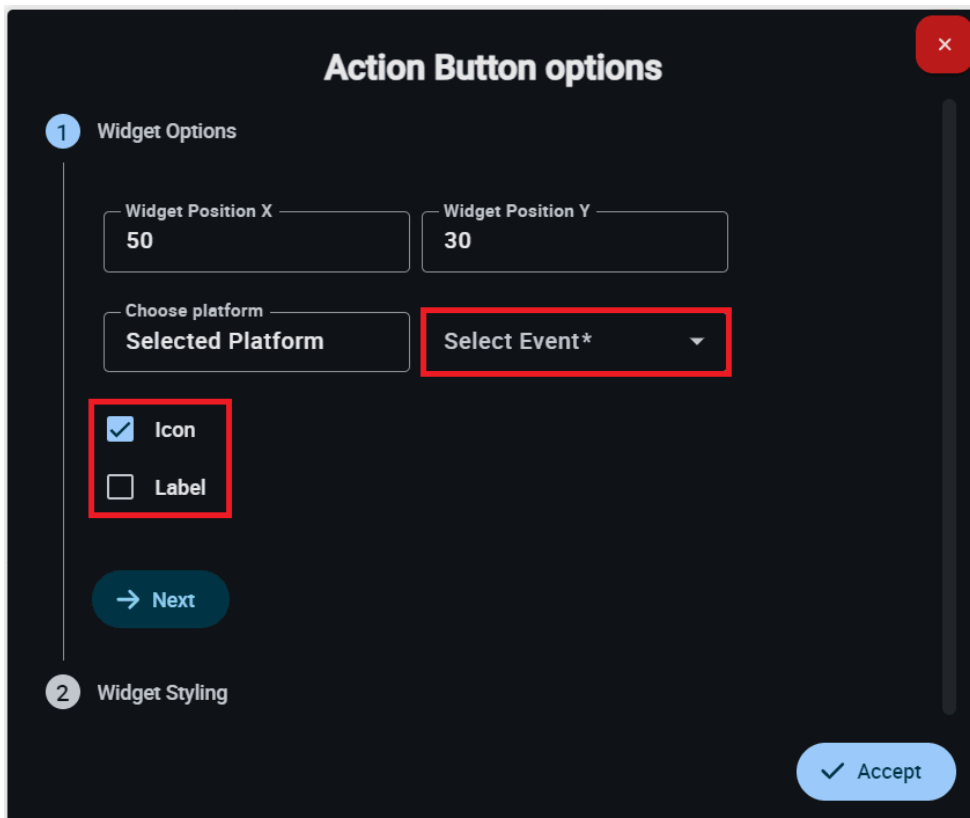

Action Button configuration

◦ Widget Options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Select Event:** Select the desired button event to be displayed as an action button.

This event must be previously configured as a [button automation](#) in the 1x PDI Builder software.

- **Icon:** If enabled, the icon already configured for this event in the corresponding **automation button** is drawn. By default it is enabled.
- **Label:** If enabled, users can add a desired text to be displayed on the action button next to the icon. By default, it is disabled.
 - **Override label:** Enter the desired text to be displayed in the widget. If no text is entered, the name of the selected event will be shown.
 - **Label size:** Size of the text displayed on the action button. Default is 16.

The triggering of linked actions is subjected to the button configuration carried out in 1x PDI Builder:

- **No time control:** The action is triggered when the button is pressed.




Action button - No time control

- **Time control:** The action is triggered when the button is pressed during the configured time.



Action button - Time control of 3s

An example of the configuration of an Action button widget is given below:

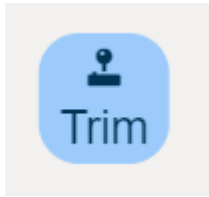

Action Button example

A dark-themed configuration dialog titled "Action Button options" with a red close button in the top right. It contains several input fields and checkboxes. The "Select Event*" dropdown is highlighted with a red box and shows "Trim stick". The "Label" checkbox is checked, and its sub-fields "Override label" (containing "Trim") and "Label size" (containing "15") are also highlighted with a red box. An "Accept" button is at the bottom right.

Action Button options

1 Widget Options

Widget Position X: 231

Widget Position Y: 332

Choose platform: Selected Platform

Select Event*: Trim stick

☒ Icon

☒ Label

Override label: Trim


Label size: 15

✓ Accept

Action Button configuration example

Input Data


Input Data widgets allow the user to choose a certain variable and change its value by manually entering the value and sending it to the platform from the workspace during a flight.

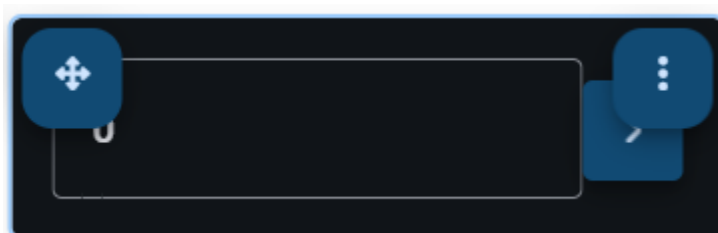

Input Data

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Input Data configuration menu.

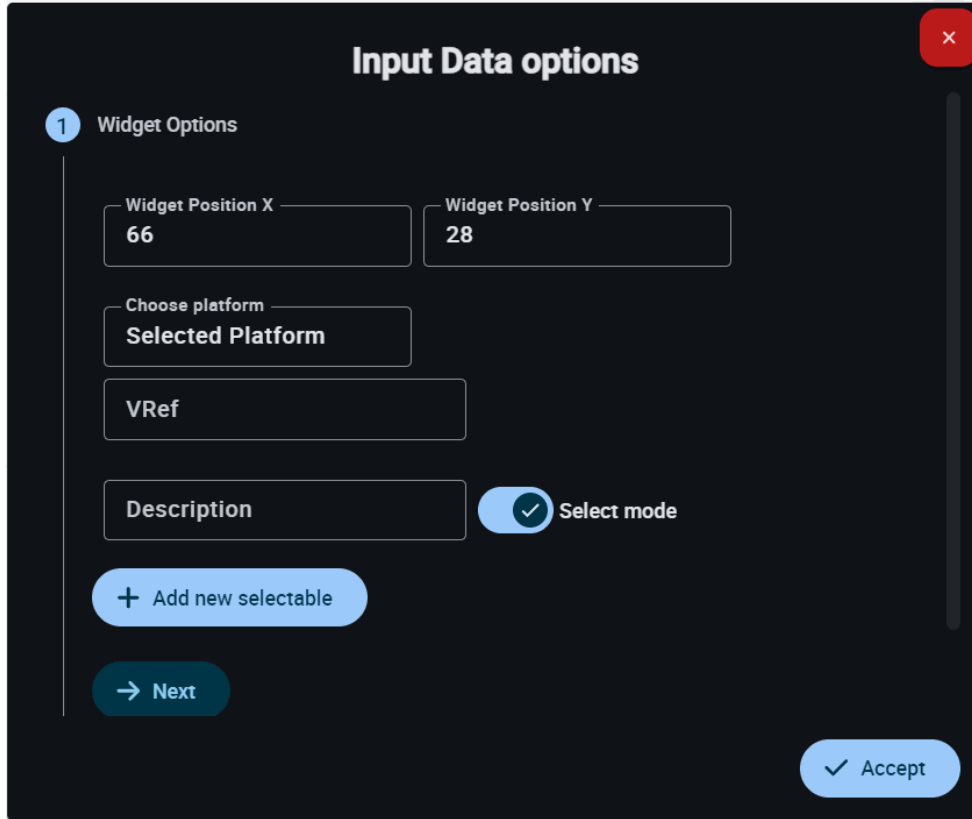

Input Data configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Description:** A description can be added to the widget by substituting the selected variable name.
- **VRef:** Users can choose any real, integer or bit variable to be displayed on the widget.
- **Unit:** Unit of measurement of the displayed variable.

 Note


This parameter is only available with Real variables.

- **Add new selectable:** Allows creating custom widget options by defining a technical Key and a user-facing label Value for each.

An example is given below:

A dark-themed widget for input data. It features a red-bordered box at the top left containing the text 'IAS'. Below this, a large input field contains the number '5'. To the right of the input field is the unit 'm/s'. A blue button with a white right-pointing arrow is located to the right of the unit.


Input Data example

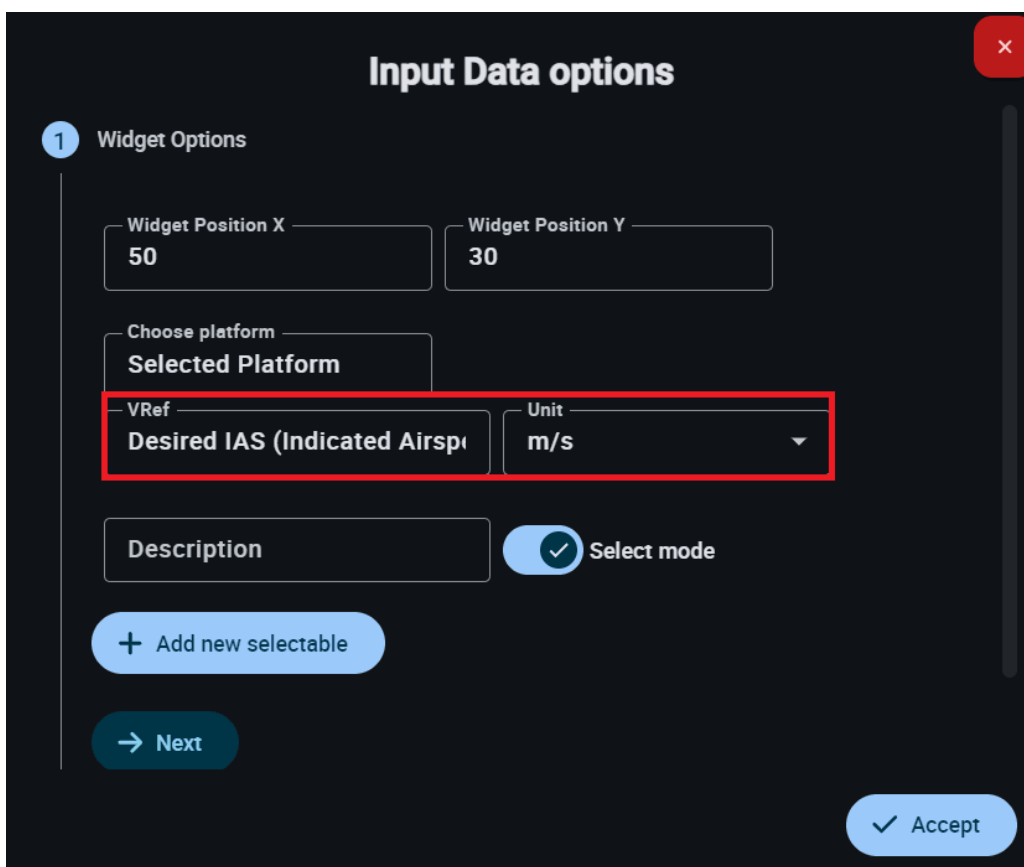A dark-themed configuration screen titled 'Input Data options' with a red close button in the top right. The screen is divided into sections. The first section, '1 Widget Options', contains two input fields: 'Widget Position X' with the value '50' and 'Widget Position Y' with the value '30'. Below these is a 'Choose platform' section with a dropdown menu showing 'Selected Platform'. A red-bordered box highlights the 'VRef' section, which has a text input field containing 'Desired IAS (Indicated Airsp' and a dropdown menu for 'Unit' set to 'm/s'. Below the red box is a 'Description' input field and a 'Select mode' toggle switch that is currently turned on. At the bottom left are two buttons: '+ Add new selectable' and '→ Next'. At the bottom right is a blue button with a checkmark and the text 'Accept'.

Input Data configuration example

Stick

Stick (Virtual stick) widgets are created to simulate a radio controller that controls the platform channels directly from the computer.

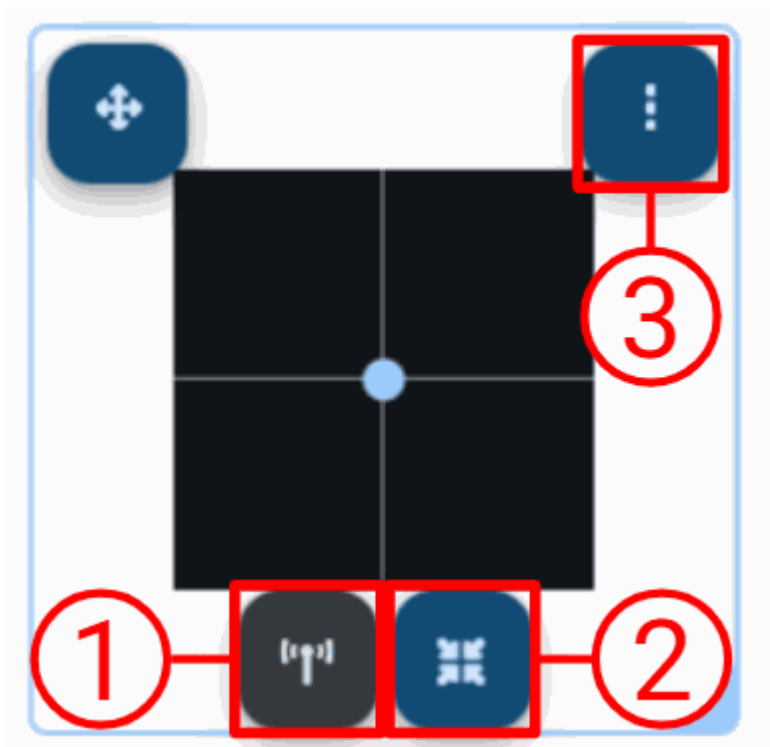

Stick

On the stick display, there are 3 icons/buttons and their functions are as follows:

1. **Send command enable/disable:** Enables/Disables the virtual stick commands.

Warning

If the Stick is not activated, it will have no effect on the system.

2. **Go to center:** Returns the stick to the center.

3. Options

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Stick configuration menu.

Stick options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Type*: PLATFORM

Choose platform: Selected Platform

Port: 0

Stick controller: No gamepad

Direction*: All directions

Label

Axis X	Channel X: 0 Gamepad Axis X: 0	▼
Axis Y	Channel Y: 1 Gamepad Axis Y: 1	▼
Test stick	Automatic: Disable Multiplier: x1	▼

→ Next

✓ Accept

Stick configuration

- **Widget Options**


This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Type:** Users can configure the widget stick to be used in "normal" mode, i.e. to control the platform, or to control a gimbal instead.
- **Choose platform/gimbal:** Depending on the type selected, the user will have to choose the platform or the gimbal for which the widget is configured.
- **Port:** Specifies the communication port assigned.
- **Stick controller:** Users must select a desired gamepad from the list for which the widget is configured.


⚠ **Important**

If no physical gamepad (via USB) is connected to the PC, No gamepad option will be selected.

- **Direction:** The user has to configure the directions in which the stick can be moved, the available options are **All directions**, **Only vertical** and **Only horizontal**. By default, 'All directions' option is selected.
- **Label:** If there is more than one stick widget, users can easily differentiate between them by configuring an identifying label for each one.
- **Axis X/Y:** X and Y axes must be configured.

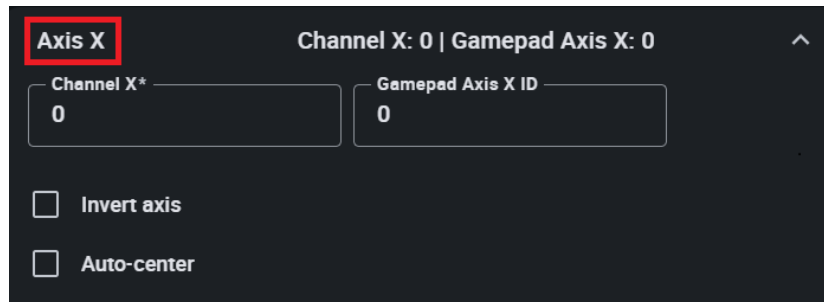

Stick configuration - Axis X

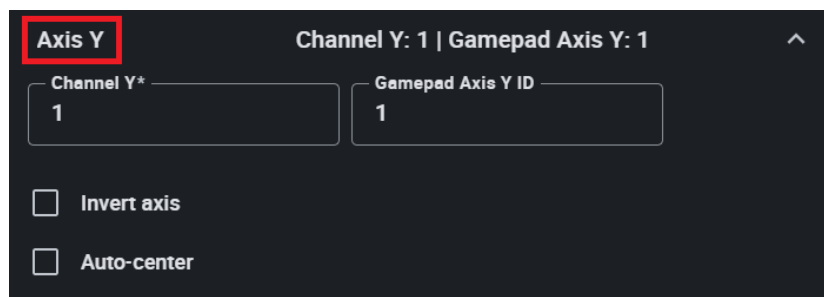


Stick configuration - Axis Y

- **Channel X/Y*:** Specifies the internal software channel assigned to the axis. This parameter links the physical movement of the stick to a specific control variable within the platform's logic.
- **Gamepad Axis X/Y ID:** Correlation of the physical gamepad axis IDs with those of the virtual stick.

 Important

If no physical gamepad (via USB) is connected, this parameter has no effect on the widget. It can be left at the default value.


- **Invert axis:** If enabled, the minimum and maximum of the axis in the variable associated with this channel will be inverted.
For example, if in the Y axis, the bottom of the axis corresponds to a value of 0 in the stick input r2 variable.
If the Inverted axis is enabled, now the bottom of the axis will correspond to a value of 1 in the variable.
- **Auto-center:** When activated, the stick automatically returns to the center position when released.
- **Test stick:** This option is used to generate stick inputs that are introduced in the system. This is a way to check how the system behaves when a stick command enters the autopilot.

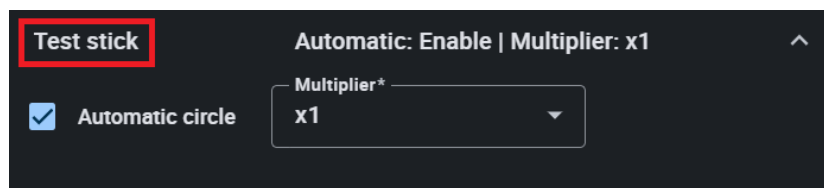

Stick configuration - Test stick


- **Automatic circle:** An automatic circle test is activated.
- **Multiplier:** The speed of the test can be adjusted. Available options are: x1, x2, x4, x8 and x16.

An additional button appears in the widget to start/stop the test.

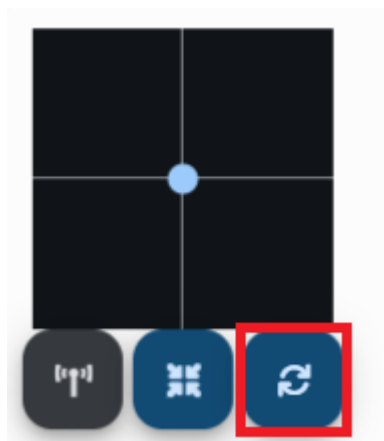

Stick configuration - Test stick button

An example is presented below:

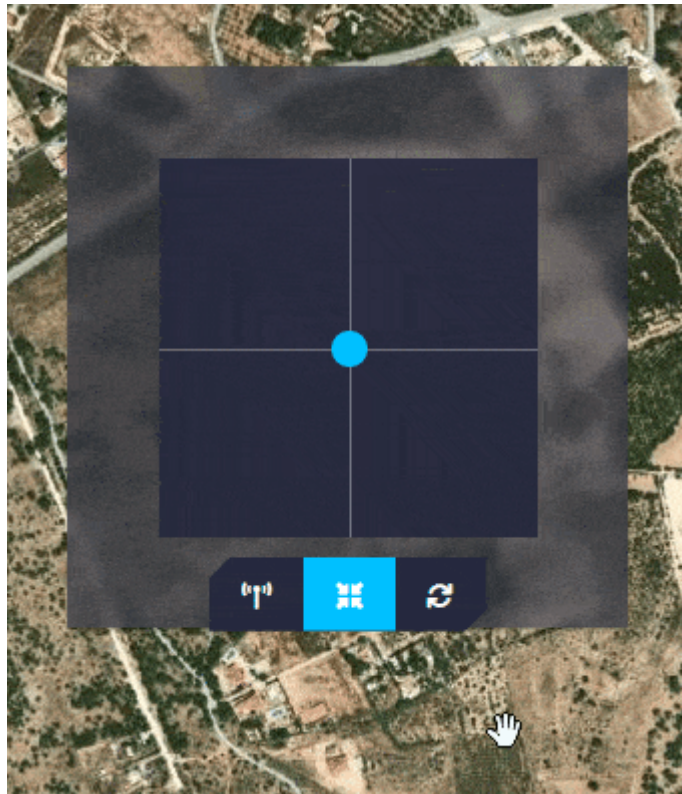

Stick configuration - Test stick example

- **Remove:** Deletes this widget.

Dial Button

Dial Button widget groups different **action buttons** into a single 'drop-down' button.



Dial Button

When clicked, the action buttons will appear/disappear.



Dial Button - Action buttons

Right click on the widget to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the **Dial Button** configuration menu.

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

Dial Button configuration

- **Widget Options** → **Select Events:** Select the desired button events that will be displayed as action buttons on the Dial Button. These events must be previously configured as [automations](#) in the 1x PDI Builder software.

An example is given below:



Dial Button example

These action buttons can be ordered in the configuration:

Dial Button options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform: 0x000017F3 - AP800

Select Events


- ☒ || Pause Button
- ☒ ▶ Play Button
- ☒ ↘ MSL Mode Button

✓ Accept

Dial Button configuration example

Stick Buttons

Stick Buttons widgets are created to map and manage the physical buttons of a connected controller to trigger specific actions or variables within the system.

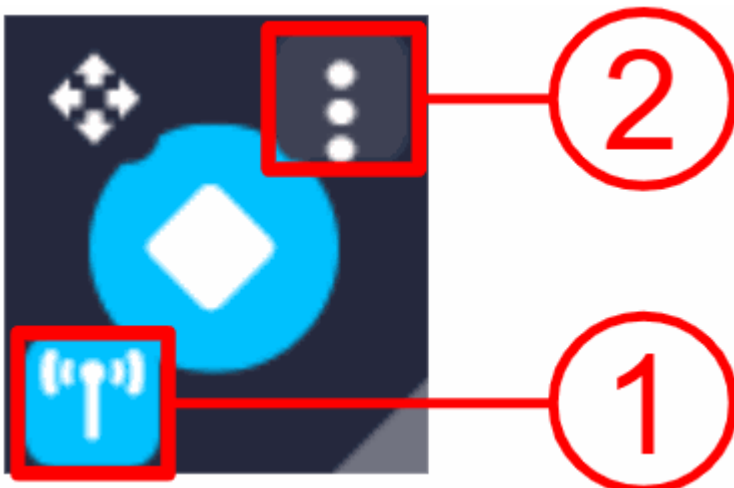

Stick Buttons

On the stick buttons display, the icons allow for the following functions:

- 1. Send command enable/disable:** Enables or disables the transmission of button commands to the platform.
- 2. Options:**
 - **Duplicate:** Duplicates this widget.
 - **Edit:** Permits access to the Stick Buttons configuration menu.

The screenshot shows a configuration window titled "Stick Buttons options". It features a sidebar with a "1 Widget Options" section. The main area contains several configuration fields: "Widget Position X" (50), "Widget Position Y" (30), "Choose platform" (Selected Platform), "Command type*" (STICK), "Stick controller" (No gamepad), and "Port*" (0). A red box highlights the "Command type*", "Stick controller", and "Port*" fields. At the bottom, there are buttons for "+ Add new button", "→ Next", and "✓ Accept".

Stick Buttons - Options

- **Widget Options:** This widget has extra edit parameters compared to the ones described in the Widgets common configuration.
 - **Choose platform:** Permits the selection of the specific platform for which the widget is configured.
 - **Command type:** Allows for the selection of the command category.
 - **Stick controller:** Permits the selection of the desired physical gamepad from the list of connected devices.

- **Port:** As it is possible to have more than one stick configured, each transmitter must be configured on a different port.

This port must match the port configured in the 1x PDI Builder software. For more information, see the [Output - Stick](#) section of the 1x PDI Builder user manual.

- **Number of buttons:** Defines the total number of physical buttons to be configured for this widget.

Stick Buttons options

+ Add new button ¹

Button 0 | Channel: 0

Override name

Type: PRESS

Channel: 0

Icon: fa-diamond

Colors

Active

Icon

Background

Default

Icon

Background

✓ Accept

Stick Buttons

- **Override Name:** Assigns a custom label to identify the button.
- **Type:** Determines the activation logic of the command, defining whether the action should be momentary (Press) or toggled (Switch).
- **Channel:** Defines the controller channel associated with the command.
- **Icon:** Allows selecting a graphic symbol to visually represent the function.

- **Colors:** Defines the button's visual appearance to provide immediate feedback on its current operational status.
- **Remove:** Deletes this widget.

Knob

Knob widget is similar to the **slider widget** but in circular format. It also allows the user to choose a certain variable and change its value by simply moving the circular bar to the desired value from the workspace during a flight.



Knob

Right click on the widget to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Knob configuration menu.

Knob options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform: Selected Platform

VRef*

Options

Min/Max

Min: 0

Max: 100

Angles

Bar

Track

Accept

Knob configuration

- **Widget Options**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **VRef:** Users can choose any real, integer or bit variable to be displayed on the knob.
- **Unit:** Unit of measurement of the displayed variable.

Note


This parameter is only available with Real variables.

- **Options:** This widget is highly customizable by simply modifying the following parameters:
 - **Min/Max:** Minimum and maximum values displayed in the knob. Defaults are 0 and 100 respectively.

- **Angles:** Start and end angle of the position of the minimum and maximum values respectively. Defaults are -140 and 140 respectively.

⚠ **Important**


If the defined Start angle is a negative angle, the widget will not allow to pass from the right to the left side, at the most southern point. That is:

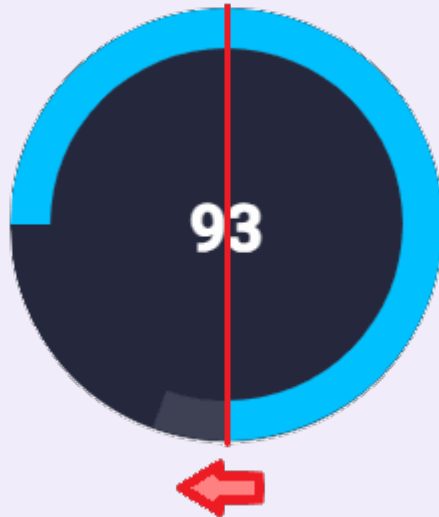

Knob - Negative start angle

- **Bar:**
 - **Cap:** This parameter allows users to choose whether they want the ends of the bar to be right angles or rounded.
⇒ 100% rounded = 50% of the width parameter.
 - **Width:** The user can modify the width of the bar as desired. By default it is set to 20.
 - **Step:** Here users must enter the step by which they want the bar to move. By default it is set to 1.
 - **Color:** This is the color in which the bar is drawn.
 - **Display previous bar:** If enabled, the bar stays colored at the position of the previously set value while the bar is moving to set the new value. Default is enabled.
 - **Color:** Color of the previous bar.

An example is given below:

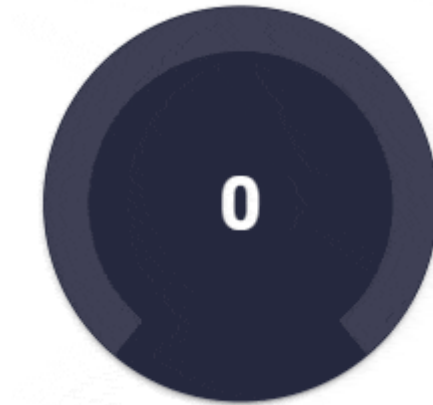

Knob configuration - Display previous bar option enabled

- **Track:** This parameter refers to the bar between the minimum and maximum values defined above, which is always below the bar that indicates the desired value.
 - **Track cap:** This parameter allows users to choose whether they want the ends of the track bar to be right angles or rounded.
⇒ 100% rounded = 50% of the track width parameter.
 - **Track width:** The user can modify the width of the track bar as desired. By default it is set to 20.
 - **Color:** This is the color in which the track bar is drawn.
 - **Background:**
 - **Color:** Color of the knob widget background.
 - **Full:** If enabled, the entire knob widget is colored with the previously defined color. Otherwise, the knob will only be colored between the previously defined start and end angles. By default it is enabled.
- In the following example, the start and end angles are set to -90 and 90 respectively.**



Knob configuration - Full option enabled/disabled respectively

- **Text:** This text refers to the value of the selected variable displayed in the knob.
 - **Display:** If enabled, displays on the knob the value of the selected variable. By default it is enabled.
 - **Size:** The size of the text value can be modified. Default is 32.
 - **Weight:** The weight of the text value can be modified. The available options go from 100 to 900, default is 700.
 - **Color:** Color in which the value is displayed.
- **Subtext:** This subtext refers to the name of the selected variable displayed in the knob.
 - **Display:** If enabled, displays on the knob the name of the selected variable. By default it is enabled.
 - **Offset:** Vertical position of the selected variable name can be adjusted as desired. Default is 7.
 - **Size:** The size of the selected variable name can be changed. By default it is set to 14.
 - **Weight:** The weight of the selected variable name can be changed. The available options go from 100 to 900, default is 700.
 - **Color:** Color in which the selected variable name is displayed.

An example is given below:



Knob example

The configuration for this example is as follows:

Knob options

1 Widget Options

Widget Position X

50

Widget Position Y

30

Choose platform

Selected Platform

VRef*

Desired GS (Ground Speed) -

Unit*

m/s

Options

→ Next

✓ Accept

Knob configuration example - Variable

Min/Max

Min

0

Max

50

Knob configuration example - Min/Max

Angles

Start

-90

End

90

Knob configuration example - Angles options

Bar

Cap

010

Width

20

Step

1

☒ Display previous bar

Knob configuration example - Bar options

Track

Track cap

0

Track width


20

Knob configuration example - Track options

Background


☒ Full

Knob configuration example - Background options

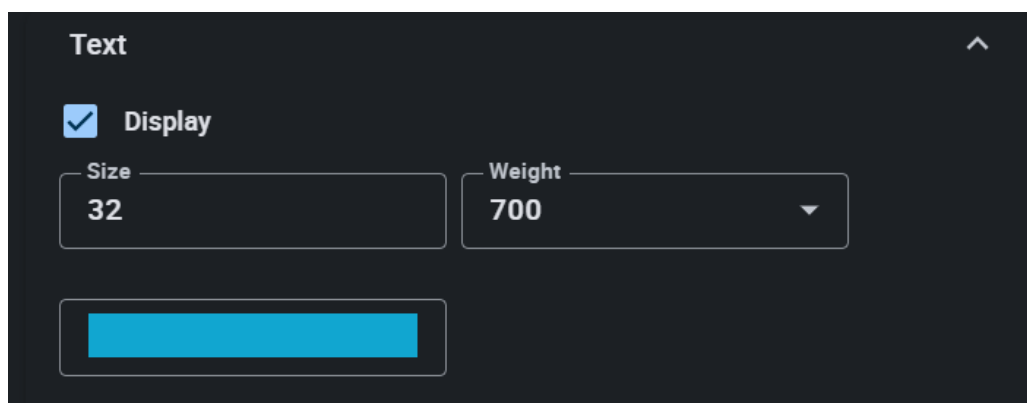

The image shows a configuration panel titled "Text" with a close button (upward arrow) in the top right corner. Inside the panel, there is a checked checkbox labeled "Display". Below this, there are two input fields: "Size" with the value "32" and "Weight" with the value "700" and a downward arrow indicating a dropdown menu. At the bottom, there is a preview box containing a solid blue horizontal bar.

Knob configuration example - Text options

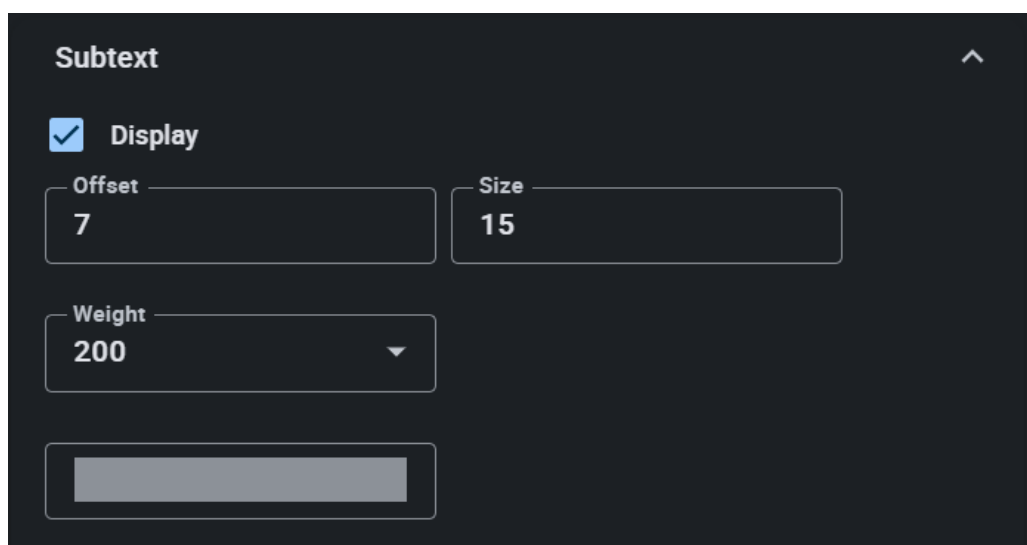

The image shows a configuration panel titled "Subtext" with a close button (upward arrow) in the top right corner. Inside the panel, there is a checked checkbox labeled "Display". Below this, there are three input fields: "Offset" with the value "7", "Size" with the value "15", and "Weight" with the value "200" and a downward arrow indicating a dropdown menu. At the bottom, there is a preview box containing a solid gray horizontal bar.

Knob configuration example - Subtext options

Vehicle


Lights

The Lights Options widgets allows the user to configure the position and data source for the lighting system widget.

Lights options

The parameters are described in the [Widgets common configuration](#).

In the Lights widget, it is possible to select specific lights and click 'Send' to update the configuration.

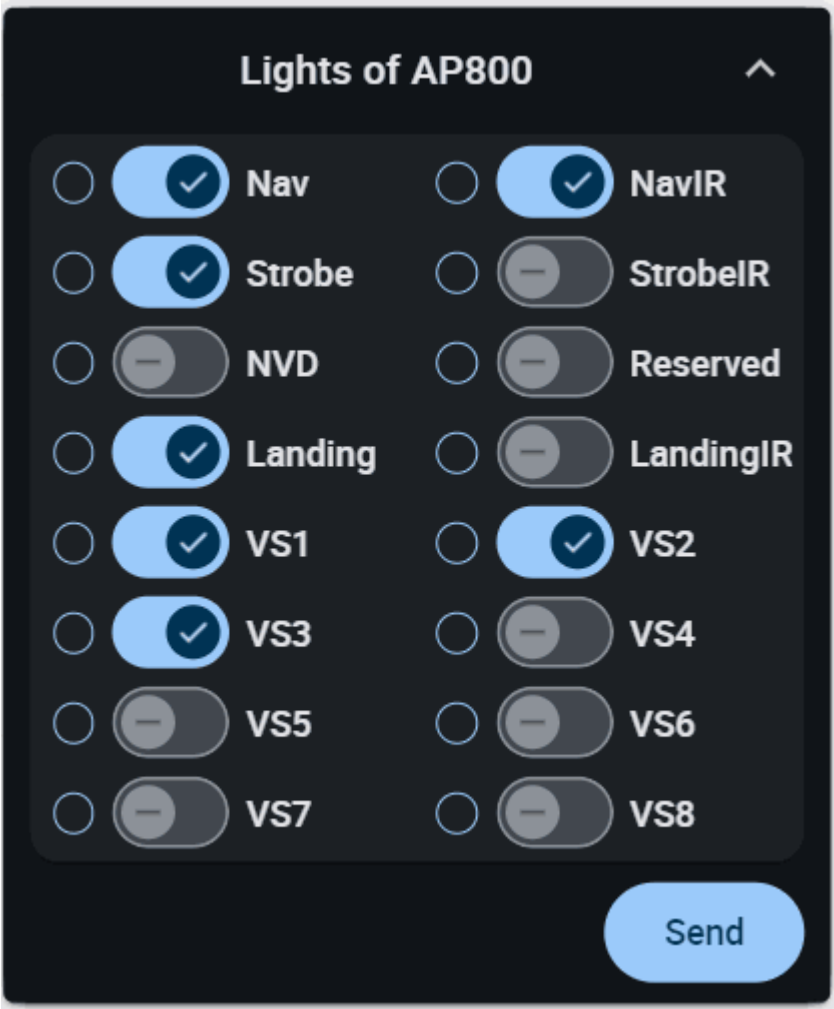

Lights - Widget

Engine Command

Engine Command allows the operator to configure the location and data source for the engine control widget on the display.

Engine Command options

1 Widget Options

Widget Position X 225

Widget Position Y 163

Choose platform*
Selected Platform ▼

→ Next

2 Widget Styling

✓ Accept

Engine Command options

The parameters are described in the [Widgets common configuration](#).

This widget is divided into two main functional areas: the Command Panel for active control and the Engine Operating States for detailed telemetry monitoring.

AP800 Engine Command

Send

^

Engine Number*

2

Engine Command*

Start

▼

Reverse Thrust Power*

On

▼

Reverse Thrust*

AutoAllEngines

▼

Ignition Switch Power*

On

▼

Ignition Switch Activati

On

▼

Engine Operating States

Engine Number:

Engine Status:

Reported Engine Command:

Reverse Thrust Power Status:

Reported Reverse Thrust:

Ignition Switch Power Status:

Ignition Switch Activation:

Engine Power Setting:

Engine Speed 1 Type:

Engine Speed 1:

Engine Speed 2 Type:

Engine Speed 2:

Engine Speed 3 Type:

Engine Speed 3:

Propeller Pitch Angle:

Output Power (Shaft Torque) Status:

Engine Temperature 1 Type:

Engine Temperature 1:

Engine Temperature 2 Type:

Engine Temperature 2:

Engine Temperature 3 Type:

Engine Temperature 3:

Engine Temperature 4 Type:

Engine Temperature 4:

Engine Pressure 1 Type:

Engine Pressure 1:

Engine Pressure 1 Status:

Engine Pressure 2 Type:

Engine Pressure 2 Status:

Engine Pressure 2:

Engine Energy Flow:

Fire Detection Sensor Status:

Exhaust Gas Temperature Status:

Engine Body Temperature Status:

Lubricant Temperature Status:

Coolant Temperature Status:

Engine Command - Widget


- **Engine Number:** The numerical ID of the engine to which the command is directed.
- **Engine Command:** The primary operational instruction (e.g., Start, Stop, EnableOrRun).

- **Reverse Thrust Power:** Enables (On) or disables (Off) the electrical or hydraulic power to the thrust reversal system.
- **Reverse Thrust:** Sets the mode for thrust reversal (e.g., OffAllEngines, OnAllEngine, AutoAllEngines), used to decelerate the aircraft after touchdown.
- **Ignition Switch Power:** Controls the power supply to the engine's ignition circuit.
- **Ignition Switch Activation:** The actual trigger to engage the ignition system

Click Send to update the configuration.

Battery Report

The Battery Report Options enables the user to configure the monitoring of the system's power parameters on the display.

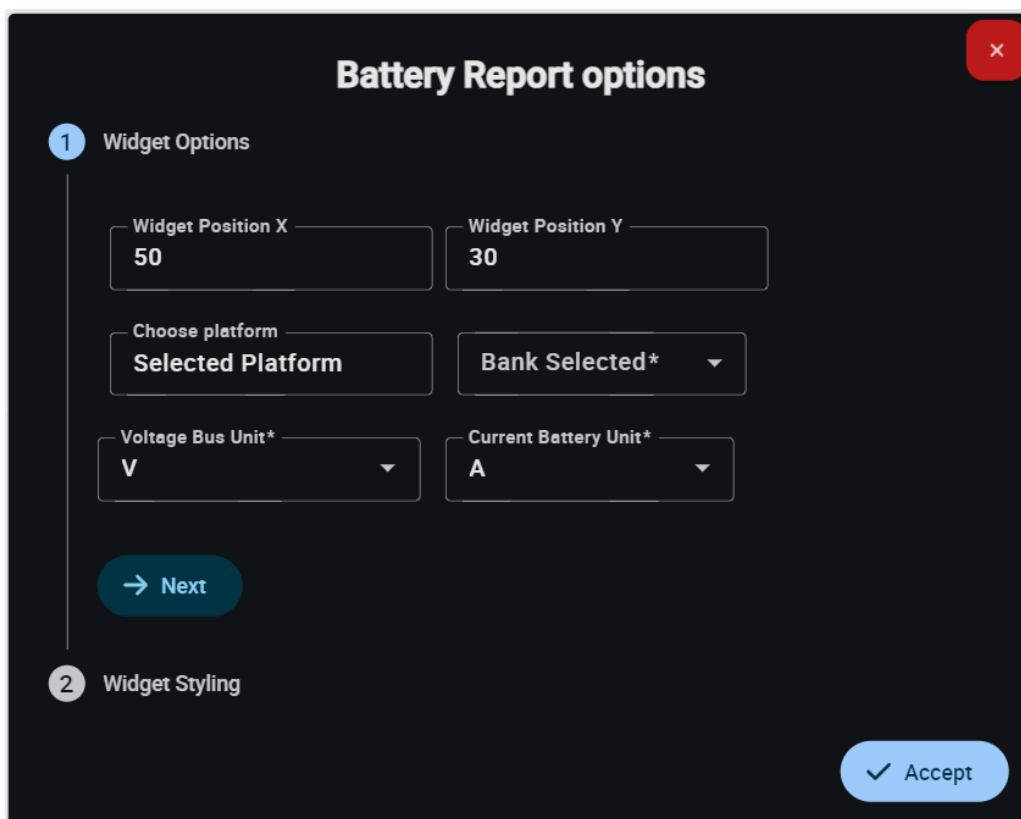


The screenshot shows a configuration window titled "Battery Report options" with a red close button in the top right corner. The window is divided into two sections: "1 Widget Options" and "2 Widget Styling". In the "Widget Options" section, there are four input fields: "Widget Position X" with the value "50", "Widget Position Y" with the value "30", "Choose platform" with the value "Selected Platform", and "Bank Selected*" with a dropdown arrow. Below these are two more dropdowns: "Voltage Bus Unit*" with the value "V" and "Current Battery Unit*" with the value "A". A "Next" button with a right arrow is located below the "Choose platform" field. In the "Widget Styling" section, there is an "Accept" button with a checkmark icon. A vertical line separates the two sections.

Battery Report options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Bank Selected:** Allows the user to select which bank or battery pack to monitor, in case the system features multiple independent units.
- **Voltage Bus Unit:** Defines the measurement unit for the system's bus voltage in V or mV.
- **Current Battery Unit:** Defines the measurement unit for the current delivered by the battery in A or mA.


The Battery Report widget enables the user to monitor the system's power parameters in real-time.

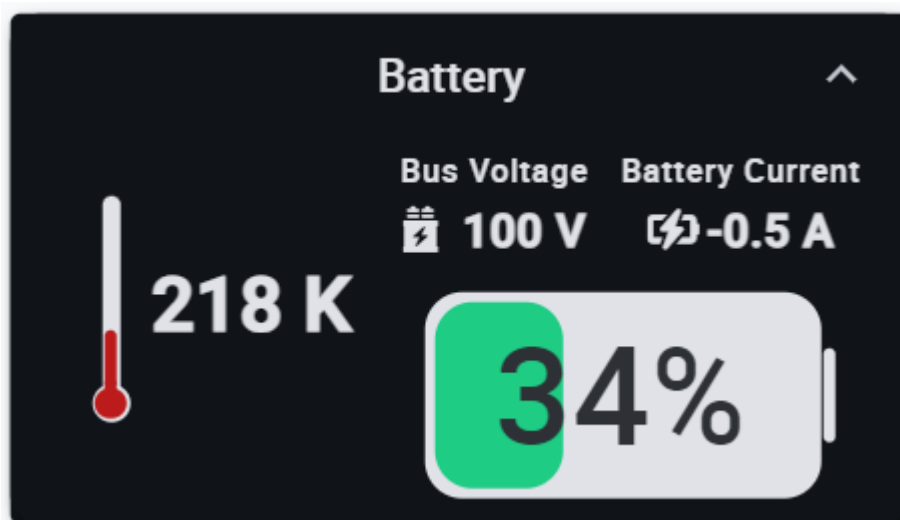

Battery Report - Widget

Tanks Status

Tanks Status options allows the user to configure the monitoring of onboard tanks on the Display.

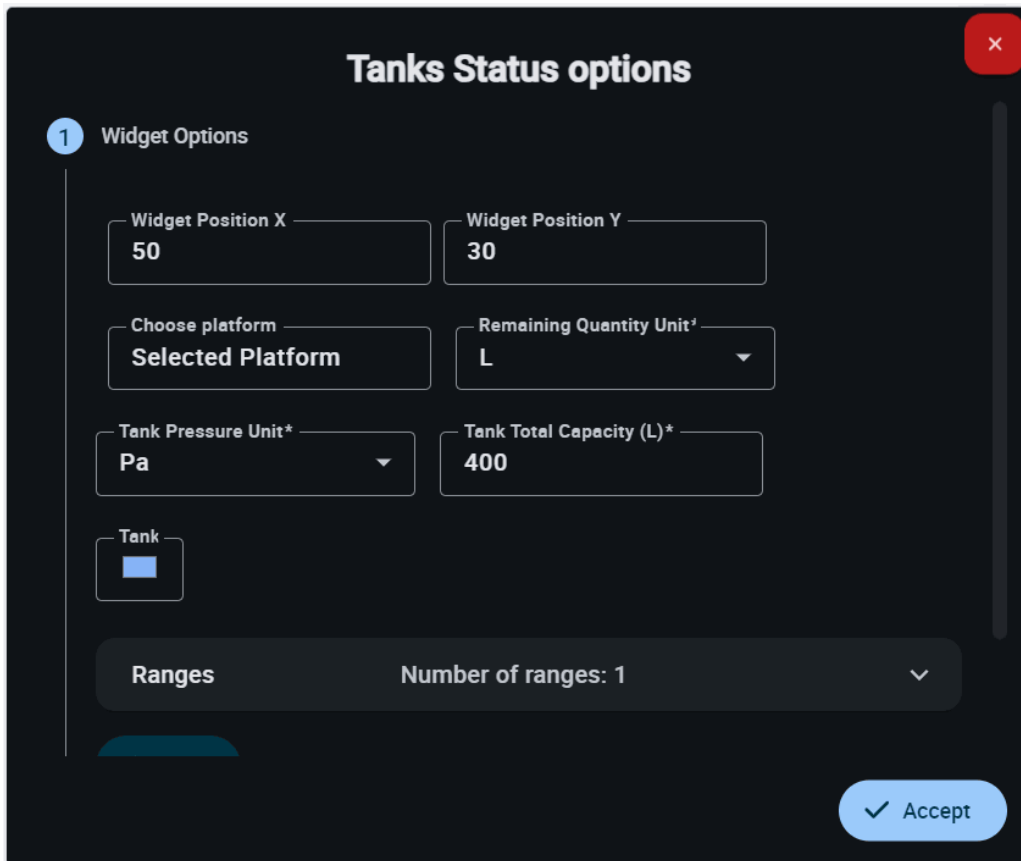

Tanks Status options

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Remaining Quantity Unit:** Defines the measurement unit for the remaining liquid quantity. It is possible to select one of the following units of measurement: m^3 , dm^3 , mm^3 , L, mL.
- **Tank Pressure Unit:** Specifies the measurement unit for the tank's internal pressure. It is possible to select the units of measurement
- **Tank Total Capacity (L):** Indicates the total maximum capacity of the tank expressed in liters.
- **Tank:** Allows the user to select the representative color for the tank in the graphic interface.
- **Ranges:** Allows the user to set different ranges.


Warning

The panel warns the user that for correct behavior, ranges must not intersect.

Several customizations can be made in the different ranges:**Tanks Status - Ranges**


- **Name:** An identifying name for the range can be set.
- **Background color:** Sets the background color of the widget when the tank level or pressure falls within this range.
- **Text color:** Changes the color of the label text when the variable is in this range.
- **Opacity:** The opacity of the circular arc can be customized in this range.
- **Min/Max:** Defines the minimum and maximum values of the range.
- **Delete:** Click to delete this range.

The Tanks Status widget provides the user with a real-time overview of the tank status and allows for direct interaction with the onboard fluid management system.

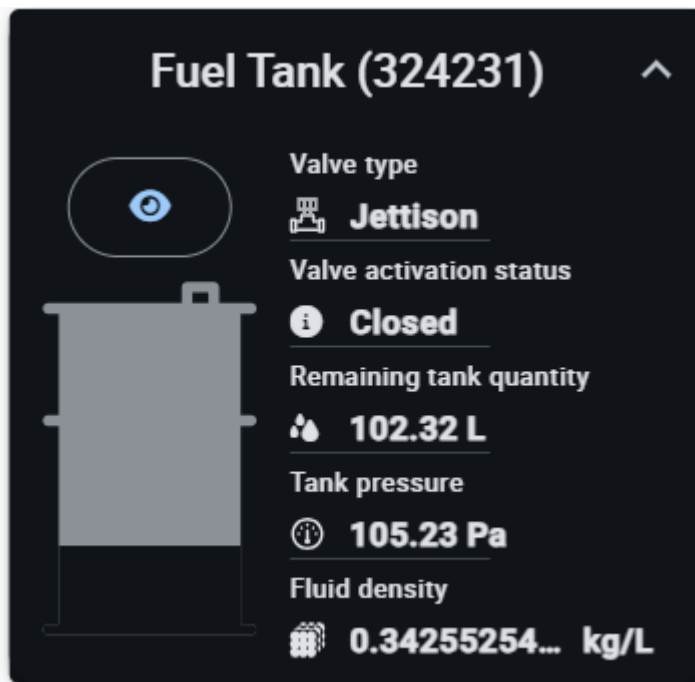

Tanks Status - Widget

- **Valve Type:** Indicates the hardware configuration of the valve.
- **Valve Activation:** A control field to select the desired state of the valve (e.g., Closed or Open, Moving to Close or Moving to Open).
- **Remaining tank quantity:** Displays the exact volume of liquid remaining in the unit.
- **Tank pressure:** Shows the internal pressure of the tank.
- **Fluid density:** Current density of the fluid, which is critical for calculating weight and balance.
- **Status icon:** Acts as a toggle to manage the visibility and configuration of the following parameters:

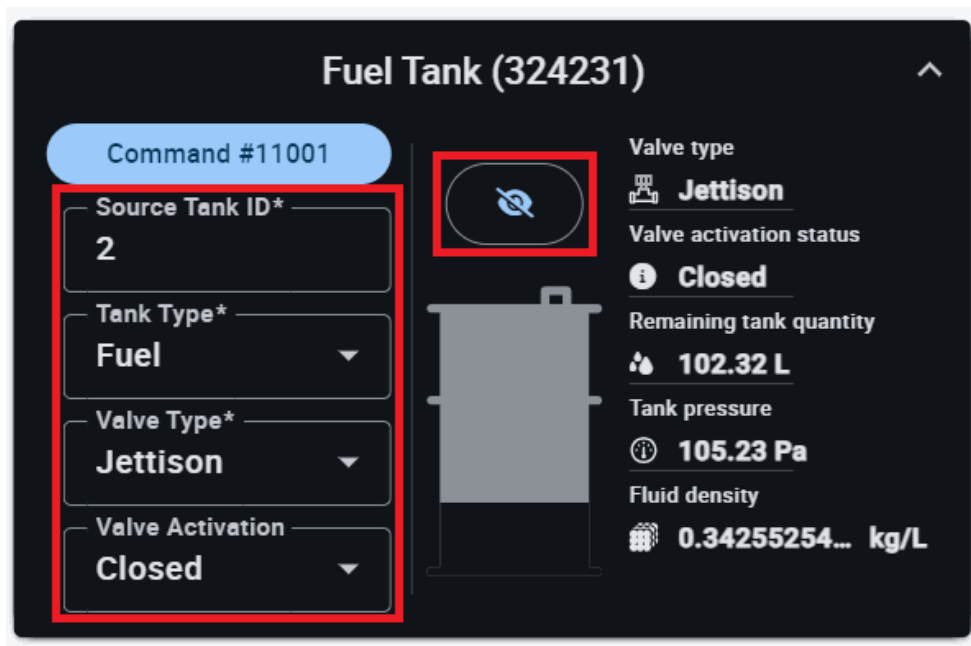


Widget icon

- **Source Tank ID*:** Used to define the unique identifier for the telemetry source.
- **Tank Type*:** Allows the selection of the fluid type.
- **Valve Type*:** Used to specify the hardware type of the valve.
- **Valve Activation:** Enables the manual override or command of the valve stat (e.g., Closed or Open, Moving to Close or Moving to Open).

Vehicle Auxiliary

Vehicle Auxiliary options menu enables the user to configure the display of the vehicle's auxiliary data.

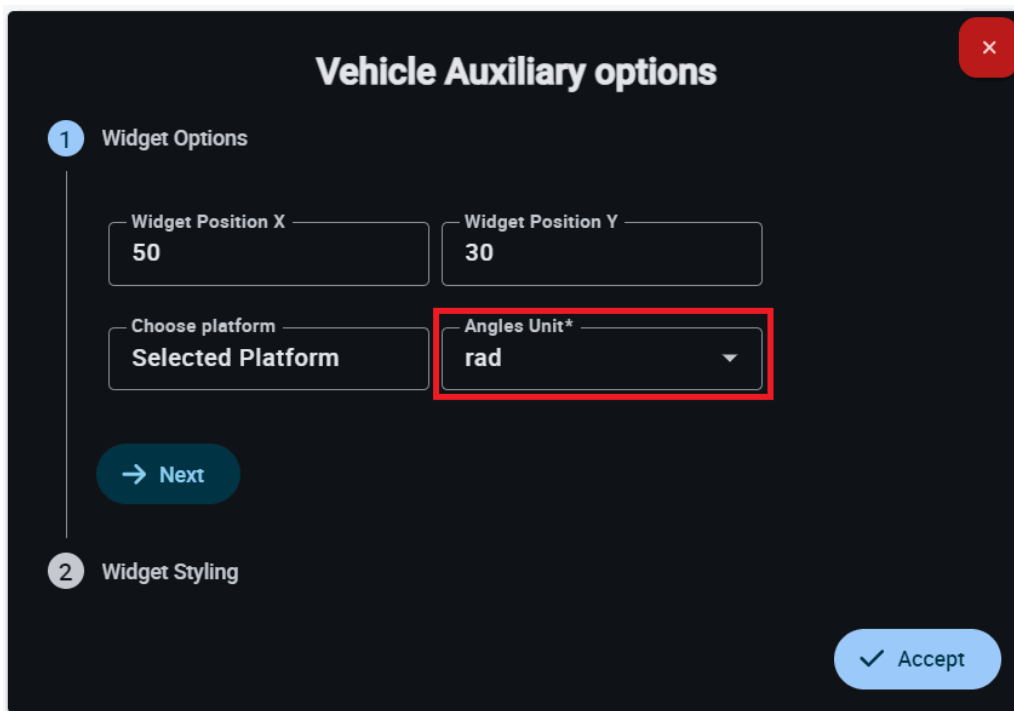


The image shows a configuration window titled "Vehicle Auxiliary options" with a red close button in the top right. It has two steps: "1 Widget Options" and "2 Widget Styling". In the "Widget Options" step, there are four input fields: "Widget Position X" with value 50, "Widget Position Y" with value 30, "Choose platform" with value "Selected Platform", and "Angles Unit*" with value "rad" (highlighted with a red box). A "Next" button with a right arrow is below the inputs. At the bottom right is an "Accept" button with a checkmark.

Vehicle Auxiliary - Options

This widget has extra edit parameter compared to the ones described in the [Widgets common configuration](#).

- **Angles Unit:** Defines the measurement unit for auxiliary angles on the display.

The Vehicle Auxiliary widget provides real-time monitoring of secondary mechanical systems.

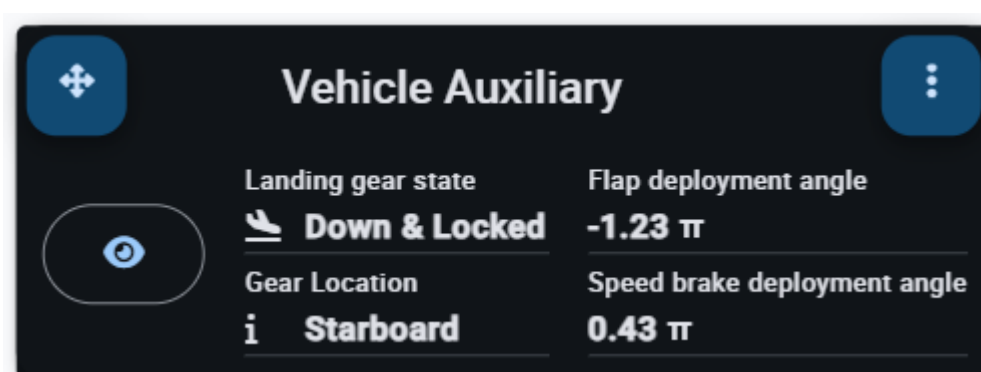


The image shows the "Vehicle Auxiliary" widget in a dark theme. It has a plus icon in the top left and a menu icon in the top right. On the left is a toggle switch with an eye icon. The main content is divided into two columns. The left column shows "Landing gear state" with a landing gear icon and the text "Down & Locked", and "Gear Location" with an information icon and the text "Starboard". The right column shows "Flap deployment angle" with the value "-1.23 π " and "Speed brake deployment angle" with the value "0.43 π ".

Vehicle Auxiliary options - Widget

- **Landing gear state:** Displays the current mechanical status (e.g., Up or Down).
- **Flap deployment angle:** Shows the current extension angle of the flaps.

- **Gear Location:** Identifies which specific gear is being monitored.
- **Speed brake deployment angle:** Shows the current position of the speed brakes.
- **Status icon:** Acts as a toggle to manage the visibility and configuration of the following parameters:

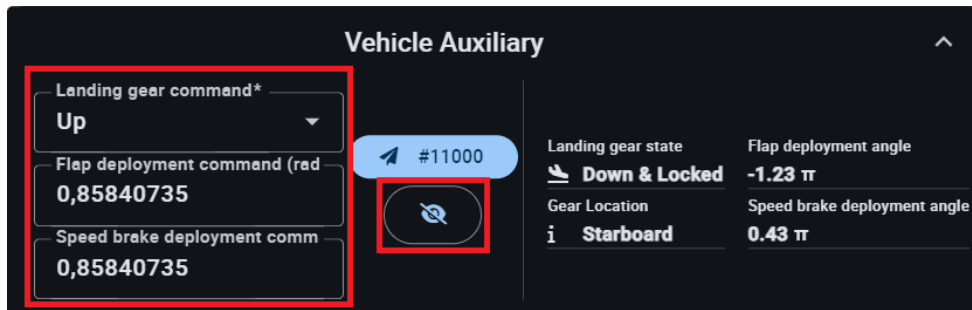


Widget icon

Flight instruments

Attitude

The attitude widget, commonly known as **Primary Flight Display (PFD)** or 'artificial horizon', represents graphically the attitude of the aircraft (roll and pitch).

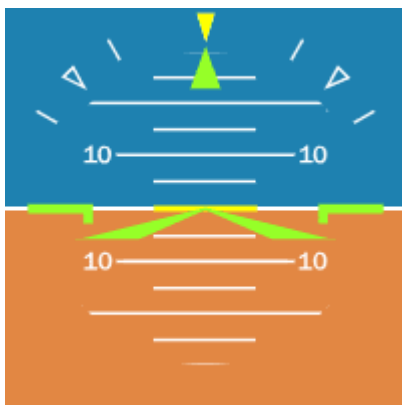

Attitude

Right click on the widget to access its options (**Duplicate**, **Edit** and **Remove**).

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Attitude configuration menu.

Attitude options

1 Widget Options

Widget Position X: 85

Widget Position Y: 35

Choose platform: Selected Platform

Roll*: Roll

Pitch*: Pitch

Yaw*: Yaw

☒ Flight Path Vector

☒ Desired Roll

☒ Desired Pitch

☒ Desired Flight Path Vector

✓ Accept

Attitude configuration


- **Widget Options:**

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

- **Roll:** Users can choose a variable from the real angular variables of the system to be displayed as the roll of the widget.
By default, the variable Roll is displayed.
- **Pitch:** Users can choose a variable from the real angular variables of the system to be displayed as the pitch of the widget.
By default, the variable Pitch is displayed.
- **Yaw:** Users can choose a variable from the real angular variables of the system to be displayed as the yaw of the widget.
By default, the variable Yaw is displayed.


- **Flight Path Vector:** By activating/deactivating this parameter, it is possible to show/hide the flight path vector in the attitude widget.

By default it is activated.

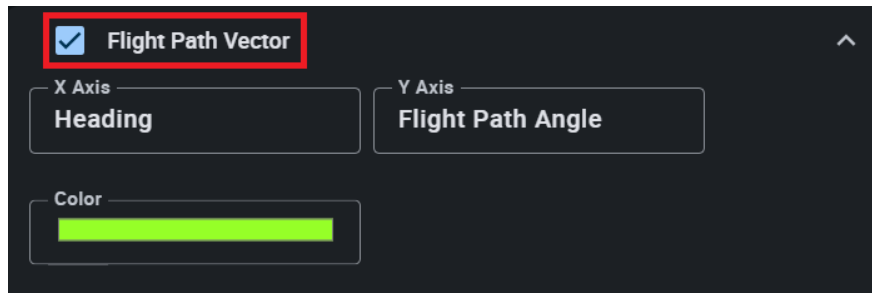


Attitude configuration - Flight Path Vector

- **Flight Path Vector:** A variable from the real angular variables of the system can be selected to be displayed as the flight path vector of the widget. By default, the variable Flight Path Vector is displayed.
- **Color:** The color in which the Flight Path Vector is displayed can be customized. By default, green is selected.

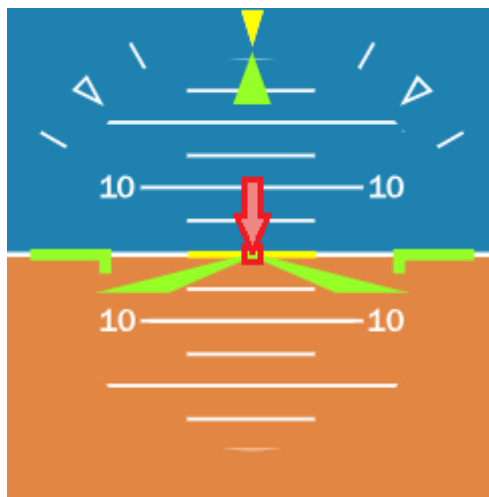


Attitude configuration - Flight Path Vector example

- **Desired Roll:** By activating/deactivating this parameter, it is possible to show/hide the desired roll together with the roll in the attitude widget. By default it is activated.

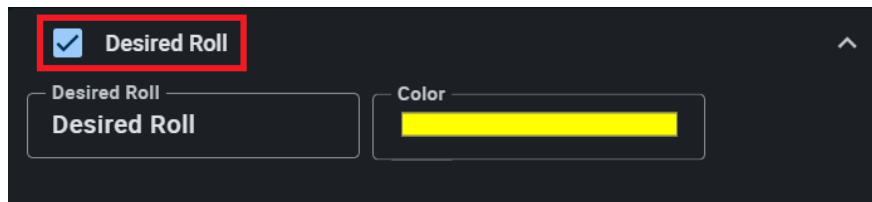


Attitude configuration - Desired Roll

- **Desired Roll:** Users can choose a variable from the real angular variables of the system to be displayed as the desired roll of the widget.
By default, the variable **Desired Roll** is displayed.
- **Color:** The color in which the desired roll is colored can be customized by the user. By default, yellow is selected.

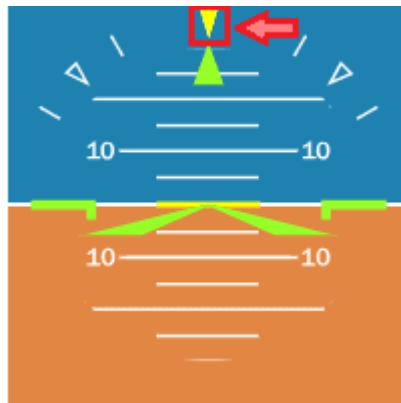

Attitude configuration - Desired Roll example


- **Desired Pitch:** By activating/deactivating this parameter, it is possible to show/hide the desired pitch together with the pitch in the attitude widget.
By default it is activated.

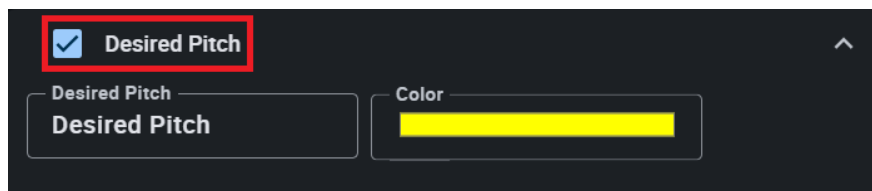

Attitude configuration - Desired Pitch

- **Desired Pitch:** Users can choose a variable from the real angular variables of the system to be displayed as the desired pitch of the widget.
By default, the variable **Desired Pitch** is displayed.


- **Color:** The color in which the desired pitch is colored can be customized by the user. By default, yellow is selected.

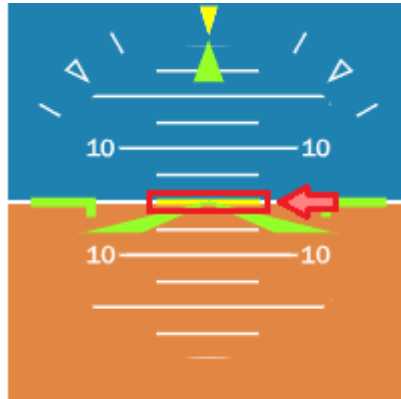

Attitude configuration - Desired Pitch example


- **Desired Flight Path Vector:** By activating/deactivating this parameter, it is possible to show/hide the desired flight path vector together with the flight path vector in the attitude widget.

By default it is activated.

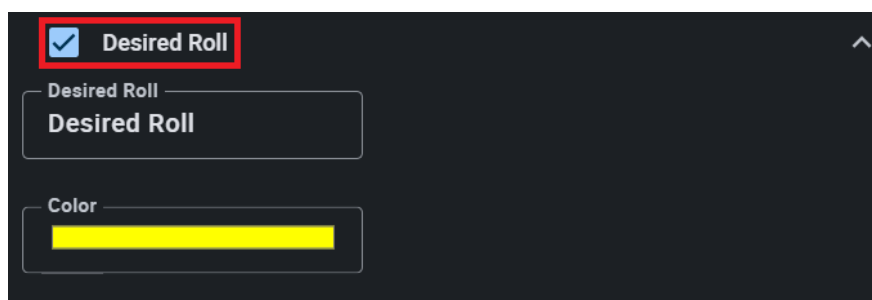

Attitude configuration - Desired Flight Path Vector

- **Desired Flight Path Vector:** Users can choose a variable from the real angular variables of the system to be displayed as the desired flight path vector of the widget.
By default, the variable Desired Flight Path Vector is displayed.
- **Color:** The color in which the Desired Flight Path Vector is colored can be customized by the user. By default, yellow is selected.

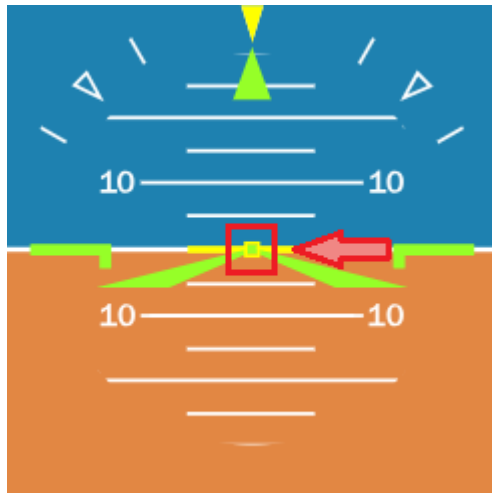

Attitude configuration - Desired Flight Path Vector example

- **Remove:** Deletes this widget.

Heading

The heading widget, commonly known as compass, usually shows the platform's yaw relative to the magnetic north.




Heading

Right click on the widget to access its options:

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Heading configuration menu.

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

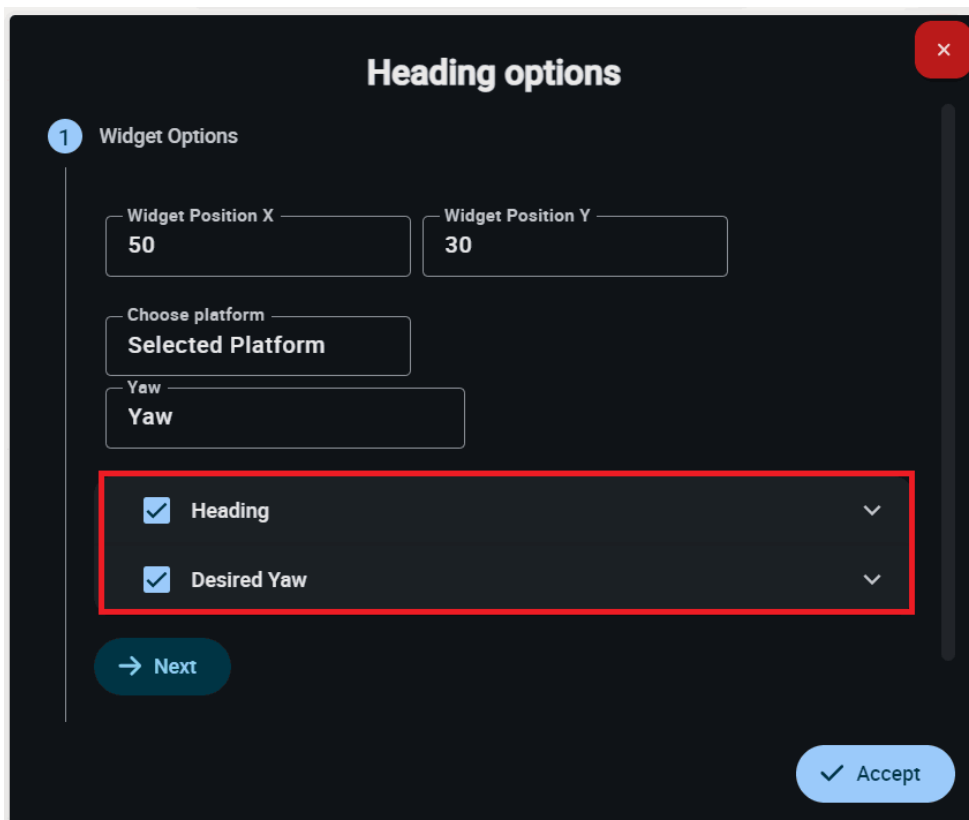


The image shows a 'Heading options' configuration window. It has a title bar with a close button (X). The main content area is titled '1 Widget Options'. It contains several input fields: 'Widget Position X' with the value '50', 'Widget Position Y' with the value '30', 'Choose platform' with the value 'Selected Platform', and 'Yaw' with the value 'Yaw'. Below these is a list of two items: 'Heading' and 'Desired Yaw', both with checked checkboxes and dropdown arrows. A red rectangle highlights this list. At the bottom left is a 'Next' button with a right arrow, and at the bottom right is an 'Accept' button with a checkmark.

Heading configuration

- **Heading:** By activating/deactivating this parameter, it is possible to show/hide the desired heading together with the heading in the attitude widget.

By default it is activated.

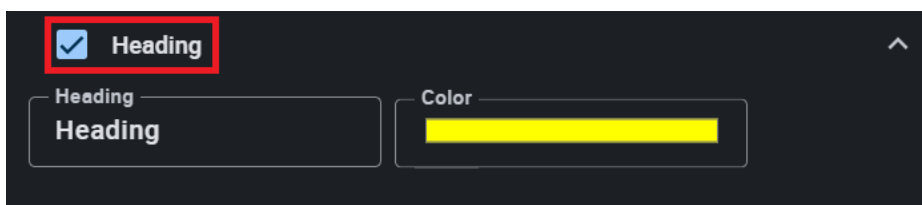

The image shows a 'Heading configuration' window. It has a title bar with a close button (X). The main content area is titled 'Heading'. It contains two input fields: 'Heading' with the value 'Heading' and 'Color' with a yellow color bar. A red rectangle highlights the 'Heading' checkbox, which is checked.

Heading configuration - Heading


- **Color:** The color in which the heading is colored can be customized by the user. By default, yellow is selected.



Heading configuration - Heading example

- **Desired Yaw:** By activating/deactivating this parameter, it is possible to show/hide the desired yaw together with the yaw in the attitude widget.

By default it is activated.

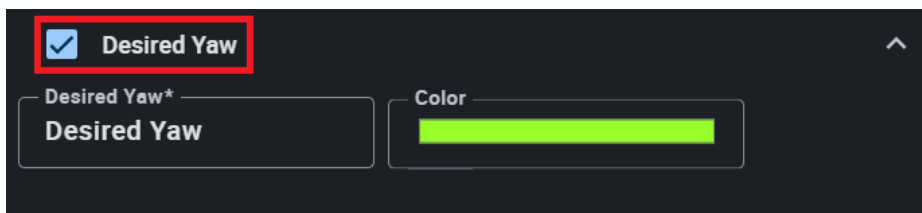

Heading configuration - Desired Yaw

- **Color:** The color in which the desired yaw is colored can be customized by the user. By default, green is selected.




Heading configuration - Desired Yaw example

- **Widget Options** → **VRef:** Users can choose a variable from the the real angular variables in the system to be displayed. By default, the variable Yaw is displayed.
- **Remove:** Deletes this widget.


ADS-B

ADS-B widget inputs the required information into the ADS-B system.

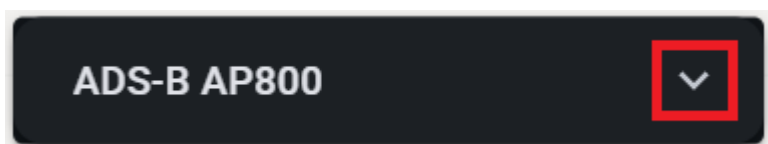

ADS-B

Note that, as this widget behaves like a drop-down menu, clicking on the ▼ icon will display all ADS-B parameters:

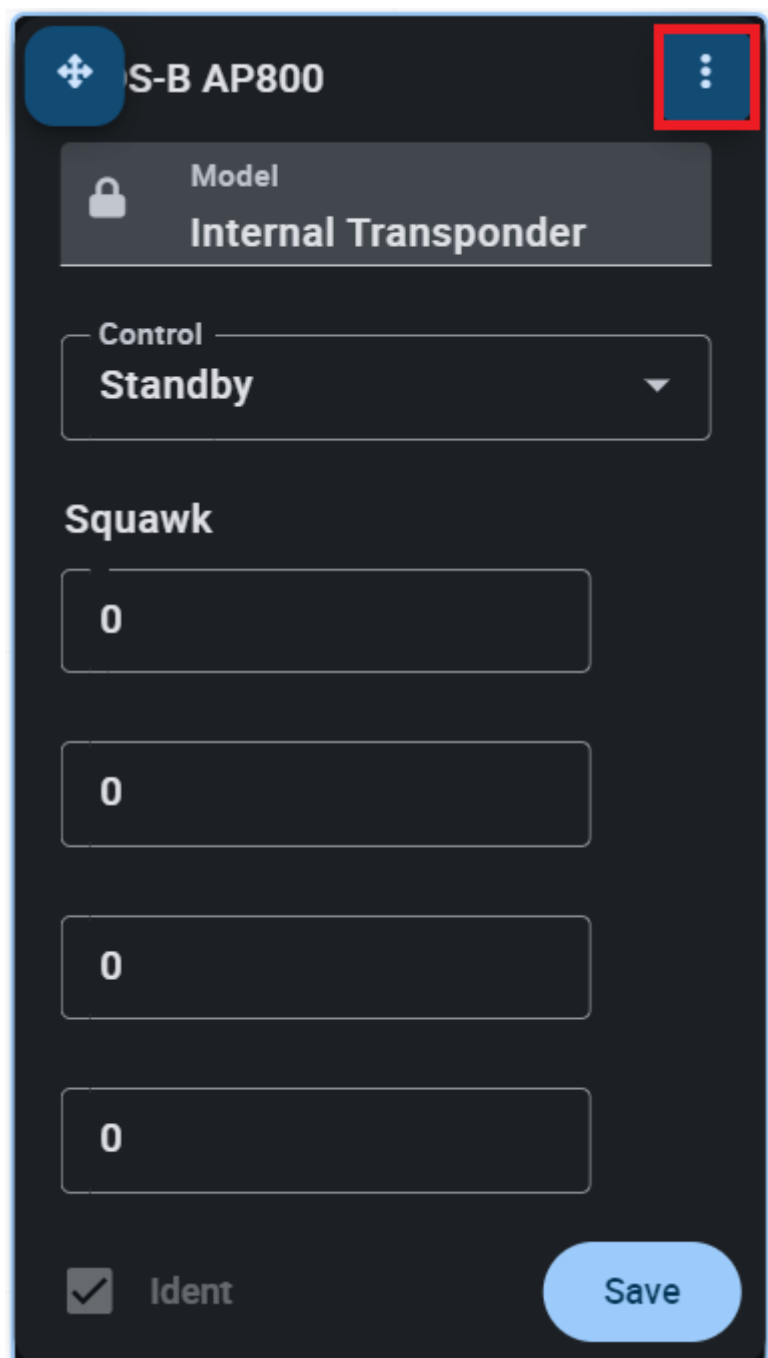

ADS-B deployed

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options:**


- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the ADS-B configuration menu.

This widget has only the 'basic' configuration described in the [Widgets common configuration](#).

- **Remove:** Deletes this widget.

Important

If the ADS-B has not been configured in the 1x PDI Builder software, this widget will appear as unavailable as shown in the figure below.

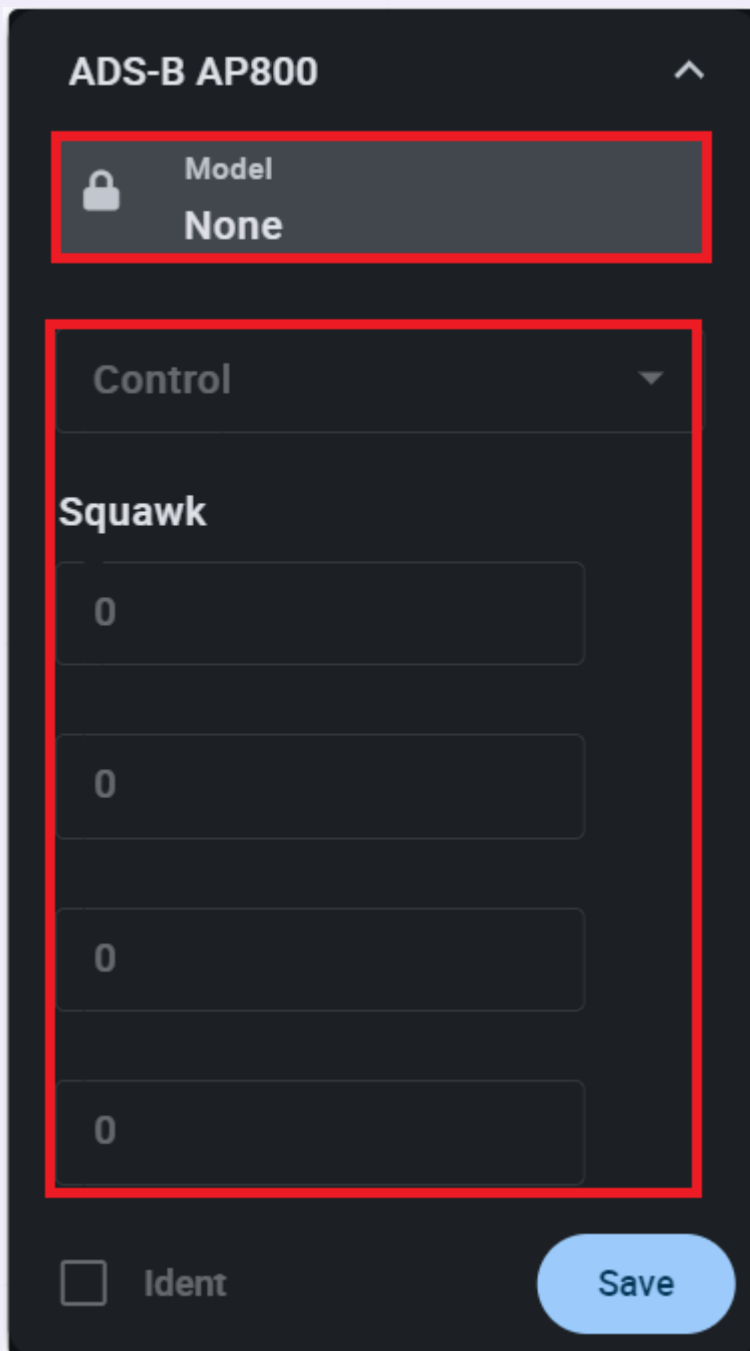The image shows a mobile application interface for configuring an ADS-B AP800. The title bar at the top says "ADS-B AP800" with an upward arrow on the right. Below the title bar, there is a section with a lock icon and the text "Model None", which is highlighted with a red rectangle. Below this, there is a "Control" dropdown menu, also highlighted with a red rectangle. Under the "Control" menu, there is a "Squawk" section with four input fields, each containing the number "0". At the bottom of the screen, there is a checkbox labeled "Ident" and a blue "Save" button.

ADS-B - No ADS-B configured

This widget has different parameters to modify the ADS-B configuration. For more information on the ADS-B configuration,

please refer to the [Transponder/ADS-B - Devices](#) section of the 1x PDI Builder user manual.

ADS-B AP800

Model
Internal Transponder

Control
ADS-B In/Out

Squawk

0

0

0

0

☒ Ident

Save

ADS-B configuration

- **Model:** This only indicates the ADS-B model that has been configured in the 1x PDI Builder software.

⚠ Important

It cannot be modified from this widget, only in the 1x PDI Builder configuration.

- **Control:** Users can change the transponder control type. It can be Standby, ADS-B In, ADS-B Out and ADS-B In/Out.

 Important

The control modes displayed for setting this parameter depend on the selected ADS-B Model. Therefore, not all options described will always appear.

- **Squawk:** Users must introduce the Squawk Code provided. This is the transponder code to identify the flight.

For certain type of flights and/or situations, specific transponder codes are used. These codes are four/digital octal numbers.

 Important

This parameter may be configured depending on the ADS-B Model.

- **Ident:** This is an identification of the UAV at the request of ATC, in order to help them to locate the aircraft.

 Important

The configuration of this option depends on the Model type selected.

- **Save:** After modifying any parameter, press here to save the changes into the configuration. The following message will appear:



ADS-B configuration saved in
AP800


ADS-B configuration - Save message

GPS Report

The GPS Report Options menu enables the user to configure the location, data source, and styling of the global positioning widget on the Display

Right click on the widget to access its options:

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Heading configuration menu.

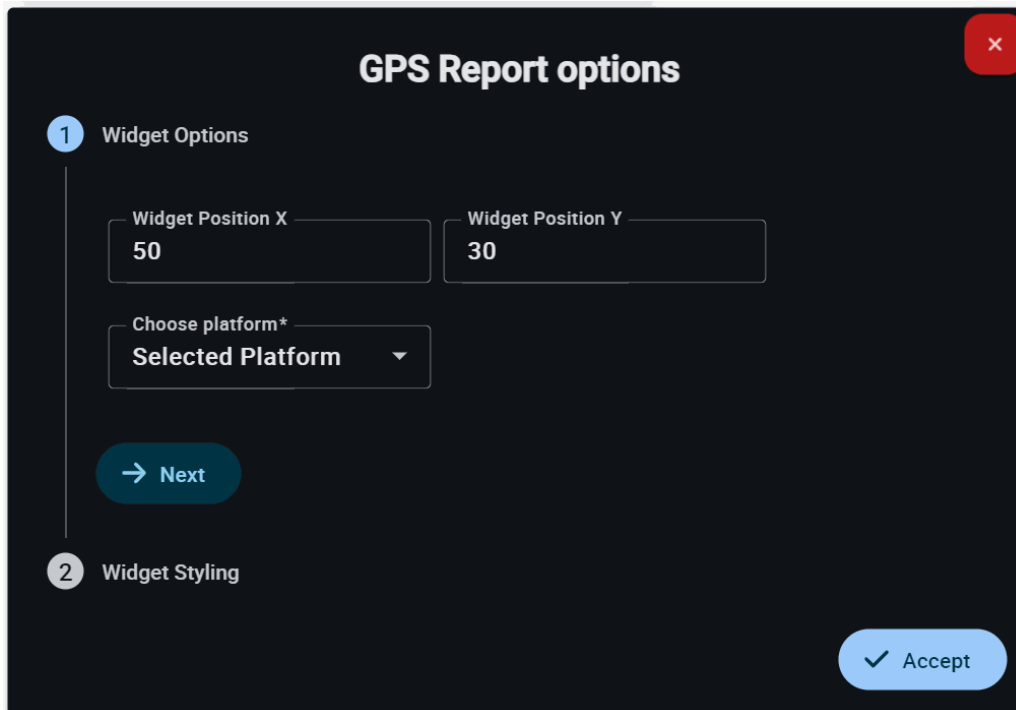

The image shows a dark-themed configuration window titled "GPS Report options". It features a red close button in the top right corner. On the left, there is a vertical sidebar with two steps: "1 Widget Options" (highlighted with a blue circle) and "2 Widget Styling". The main area contains two input fields: "Widget Position X" with the value "50" and "Widget Position Y" with the value "30". Below these is a dropdown menu labeled "Choose platform*" with "Selected Platform" and a downward arrow. At the bottom left of the main area is a blue button with a right arrow and the text "Next". At the bottom right is a light blue button with a checkmark and the text "Accept".

GPS Report configuration

Wind

The Wind Options menu enables the operator to configure the location, data source, and graphic style of the wind telemetry widget on the display.



Wind Widgets

Right click on the widget to access its options:

- **Duplicate:** Duplicates this widget.
- **Edit:** This allows the user to access the Heading configuration menu.

This widget has extra edit parameters compared to the ones described in the [Widgets common configuration](#).

Wind options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose platform*: Selected Platform

Wind*: Wind Azimuth Angle (Deprec

Color: [Blue color bar]

Arrow type*: Arrow 1

→ Next

✓ Accept

Wind configuration

- **Wind:** Defines which telemetry variable is used to calculate wind direction.
- **Color:** Allows the user to select the color of the graphic indicator to ensure optimal visibility against the map or background.
- **Arrow type:** Defines the graphic style of the wind arrow.

Payload

Gimbal Buttons

Gimbal Buttons widget groups different control buttons of the selected gimbal into a single 'drop-down' button.



Gimbal Buttons

When clicked, the control buttons will appear/disappear.

Right click on the widget to access its options (Duplicate, Edit and Remove).

This widget has extra edit parameters compared to the ones described in [Widgets common configuration](#).

- **Options** → **Edit:** This allows the user to access the Gimbal Buttons configuration menu.


Gimbal Buttons configuration

- **Widget Options:**
 - **Choose Gimbal:** The user has to choose from the gimbal predefined list the gimbal for which the widget is configured.
 - **Activate controls:** Select the desired controls of the selected gimbal that will be displayed on the Gimbal Buttons.

Important

The controls shown here depend on the selected gimbal, each gimbal has its own control buttons.

Below is an example with the NextVision gimbal:

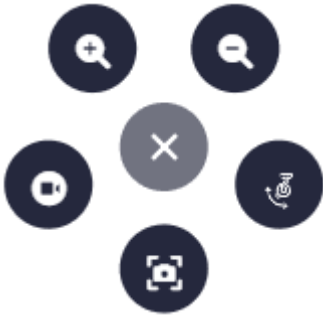


Gimbal Buttons example

These control buttons can be enabled/disabled in the configuration:

Gimbal Buttons configuration example


Gimbal Setup

Gimbal Setup widget is a gimbal configuration panel, where the user can choose which gimbal controls can be managed from Veronte Ops.

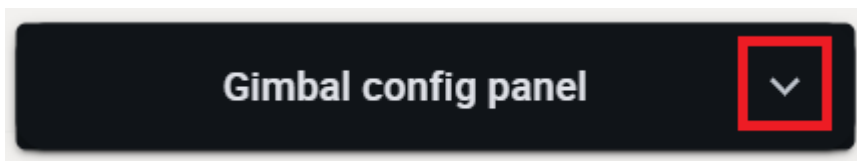

Gimbal Setup

Note that, as this widget behaves like a drop-down menu, clicking on the  icon will display all gimbal controls:

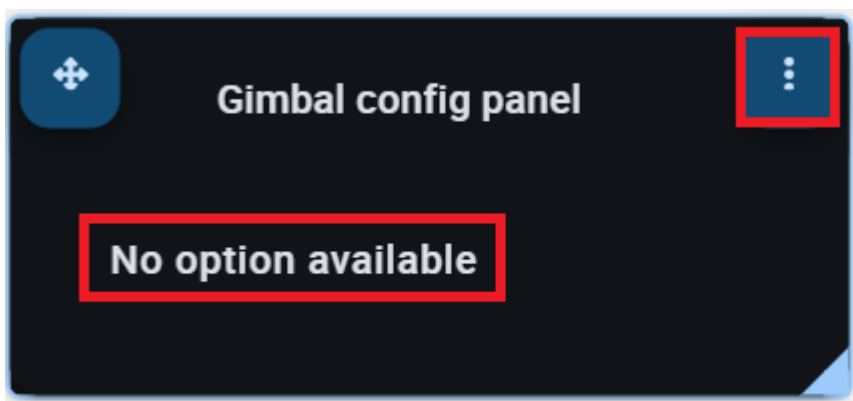

Gimbal Setup deployed

Note

As no controls have been configured yet, No option available is displayed when deployed.

Click the  button to access its options (Duplicate, Edit and Remove).

- **Options** → **Edit:** This allows the user to access the Gimbal Setup configuration menu.

Gimbal Setup options

1 Widget Options

Widget Position X: 58

Widget Position Y: 338

Choose Gimbal*

Activate controls

→ Next

2 Widget Styling

✓ Accept

Gimbal Setup

This widget has extra edit parameters compared to the ones described in [Widgets common configuration](#).

- **Widget Options:**

- **Choose Gimbal:** The user has to choose from the gimbal predefined list the gimbal for which the widget is configured.
- **Activate controls:** Select the desired controls of the selected gimbal that will be displayed on the gimbal configuration panel.


⚠ **Important**

The controls shown here depend on the selected gimbal, each gimbal has its own controls.

Integration examples

Gimbal

The following diagram summarizes the "connection" and "elements" required to view video recording and/or command a generic gimbal in Veronte Ops:

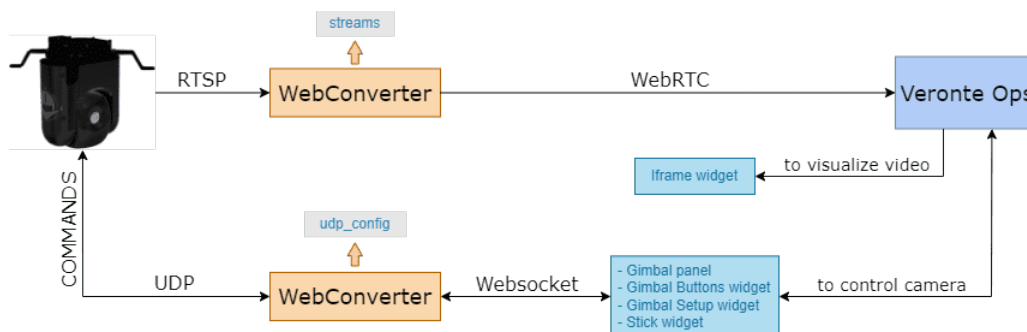

Gimbal connection diagram

i Note

The configuration described in this section covers how to set up and control a generic gimbal with Veronte Ops.


To configure and control a gimbal from Veronte Ops, the following must be considered:

- The gimbal must be configured in the **Gimbal panel**.
- Use the **Gimbal Buttons widget** to command actions to the gimbal camera.
- Use the **Gimbal Setup widget** to configure some options of the gimbal camera video.
- To view the video recording and/or track directly with the displayed image, the **Iframe widget** is needed.
- Finally, if the user wants to manage the gimbal with a Veronte Ops virtual stick or a USB joystick, the **Stick widget** must also be configured.

Furthermore, it is necessary to configure the following variables in the telemetry vector of the Autopilot 1x in order to establish a correct communication for commanding between Veronte Autopilot 1x ⇒ Veronte Ops ⇒ Gimbal:

- **GNSS2 Number of Satellites Used in Solution**
- **GNSS1 Number of Satellites Used in Solution**
- **Longitude**
- **Latitude**
- **MSL (Height Above Mean Sea Level) - Altitude**
- **AGL (Above Ground Level) - Height**
- **North Ground Velocity**
- **East Ground Velocity**
- **Down Ground Velocity**
- **Heading**
- **GS (Ground Speed)**
- **p (Angular Velocity - X Body Axis)**
- **q (Angular Velocity - Y Body Axis)**
- **r (Angular Velocity - Z Body Axis)**
- **Yaw**
- **Pitch**
- **Roll**


The Data to Vapp telemetry vector in the Autopilot 1x configuration (using 1x PDI Builder software) should look like this:

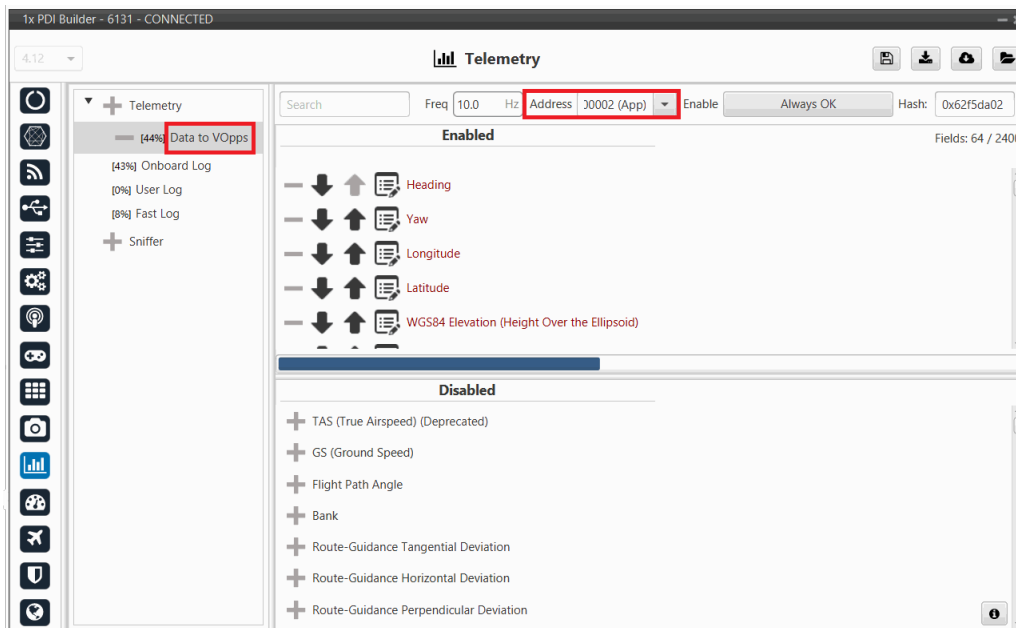

Gimbal - Telemetry configuration

Veronte Gimbal

The following diagram summarizes the "connection" and "elements" required to view video recording and/or command a Veronte Gimbal in Veronte Ops:

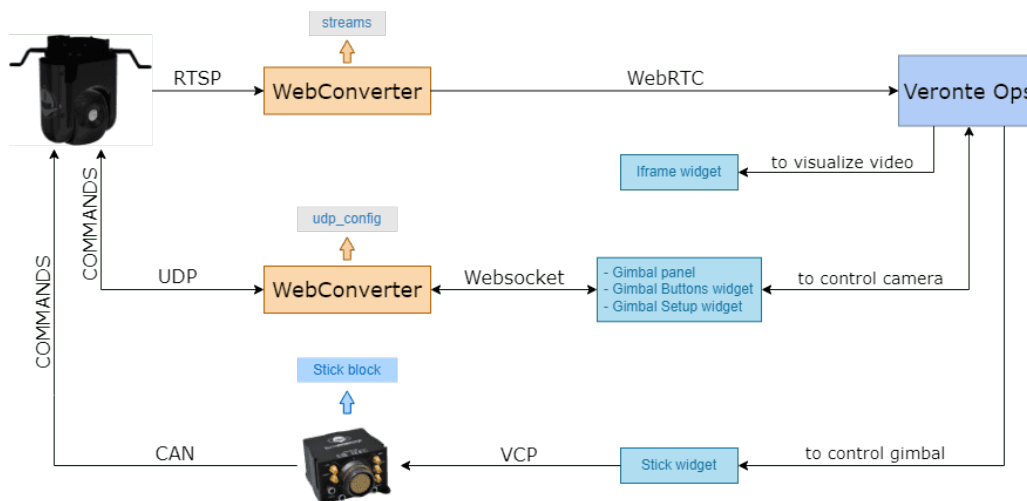


Veronte Gimbal connection diagram

Note

The configuration described in this section covers how to set up and control a Veronte Gimbal with Veronte Ops.


To configure and control a Veronte Gimbal from Veronte Ops, the following must be considered:

- The gimbal must be configured in the **Gimbal panel**. If the user has a Veronte Gimbal 10z, the configuration should look like this:

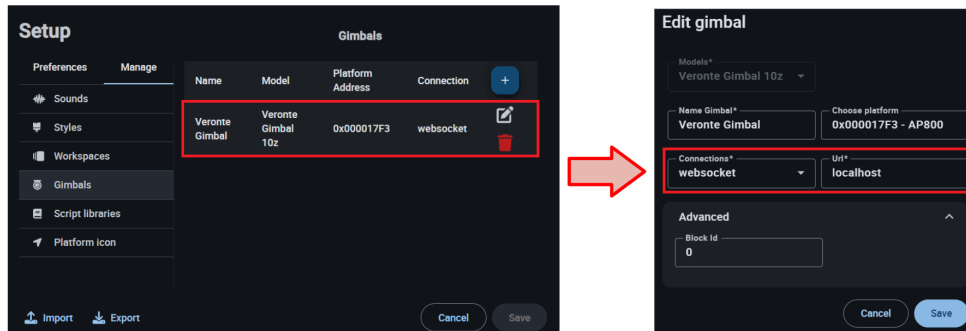

Veronte Gimbal configuration - Gimbal panel

- **Model:** Veronte Gimbal 10z
- **Connections:** Websocket
- **Url:** `websocket_url` configured in the **Web Converter app**.
- **Port:** `websocket_port` configured in the **Web Converter app**.
- Use the **Gimbal Buttons widget** to command actions to the gimbal camera. For the Veronte Gimbal 10z, the following actions are available:

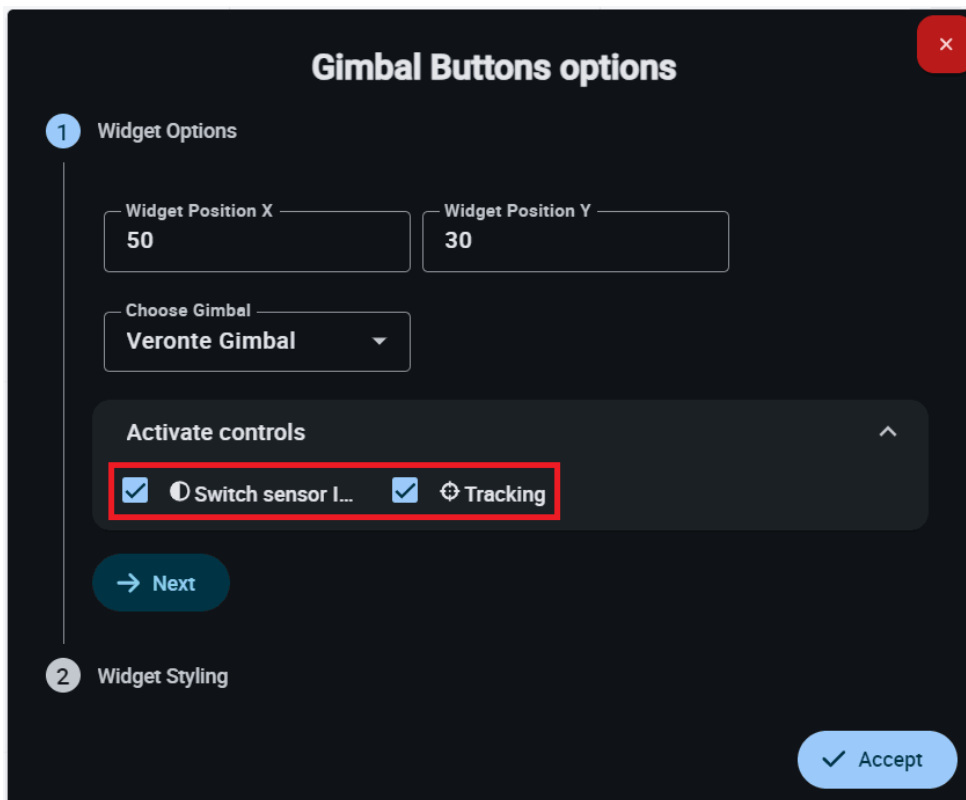

Veronte Gimbal configuration - Gimbal Buttons widget

- **Switch sensor IR/Day:** Button to switch between IR and EO camera.
- **Tracking:** Button to stop tracking.
- Use the **Gimbal Setup widget** to configure some options of the gimbal camera video. For the Veronte Gimbal 10z, the following controls are available:

Gimbal Setup options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Choose Gimbal*: Veronte Gimbal

Activate controls

☒ Zoom ☐ Flip mode

→ Next

2 Widget Styling

✓ Accept

Veronte Gimbal configuration - Gimbal Setup widget

- **Zoom:** Users can zoom from 0% to 100% with a slider.
- **Flip mode:** Users can flip the camera as desired. The available options are Normal, Mirror, Flip and Mirror and flip.
- To visualize the video recording and/or track directly with the displayed image, the **Iframe widget** is needed.

Iframe options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

URL: **https://localhost:8083**

(*) If you use http you must enable non-secure content.
(*) Problems with mixed-content.

→ Next

2 Widget Styling

✓ Accept

Veronte Gimbal configuration - Iframe widget

- **https://**: Enter the URL generated by the [Web Converter app](#).
- Finally, to control the gimbal with a Veronte Ops virtual stick or a USB joystick, the [Stick widget](#) must also be configured as shown in the figure below:

Stick options

1 Widget Options

Widget Position X: 50

Widget Position Y: 30

Type*: **PLATFORM**

Choose platform: Selected Platform

Port: **0**

Stick controller: No gamepad

Direction*: All directions

Label

Axis X: **Channel X: 0** Gamepad Axis X: 0

Axis Y: **Channel Y: 1** Gamepad Axis Y: 1

✓ Accept

Veronte Gimbal configuration - Stick widget

Note

In this case, it is controlled directly with the virtual stick (no USB joystick is being used).

- **Type: PLATFORM** must be selected.
- **Port:** Select the port configured in the Stick block in the 1x PDI Builder software.
- **Axis X/Y:** Configure both channels X and Y.


Stick widget

Once the steps described in the [Stick widget - Integration examples](#) section of the 1x PDI Builder manual have been performed, configure Veronte Ops to enable the commands of the Stick widget. To do so:

1. Add a Stick widget.

Note

The connection should work with the default settings. For more information on the configuration of the Stick widget, please refer to [Stick - Workspace](#) section of this manual.

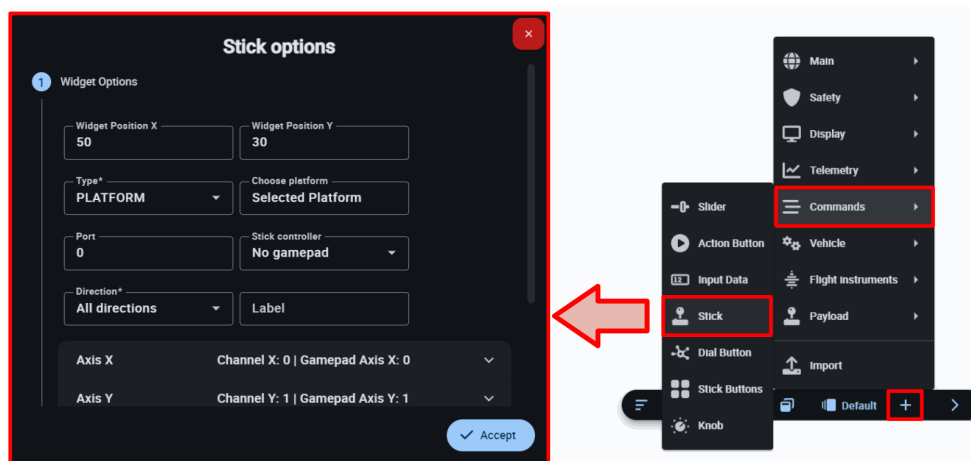

Stick widget - Stick configuration

2. Enable the send of commands to Veronte Autopilot by clicking on the Send command button of the widget.



Stick widget - Enable send commands

USB joystick

Veronte Ops is able to detect USB devices such as joysticks. The buttons and axes of these devices can be read and configured to send stick information to Veronte Autopilot 1x.

Once the steps described in the [USB joystick - Integration examples](#) section of 1x PDI Builder manual have been performed, configure a Stick widget to be connected to a USB joystick. To do so, follow the steps below:

- 1. Select the Gamepad that corresponds with the USB joystick connected to the PC.**
- 2. And configure the Gamepad Axis X/Y ID so that the axes IDs of the stick widget gamepad correspond to those of the physical joystick.**

Stick options

1

Widget Options

Widget Position X

50

Widget Position Y

30

Type*

PLATFORM

Choose platform

Selected Platform

Port

0

Stick controller

WISENET SPC-2000 (Ve

Direction*

All directions

Label

USB Joystick

Axis X

Channel X: 1 Gamepad Axis X: 0 | Auto-center

Channel X*

1

Gamepad Axis X ID

0

☐ Invert axis

☒ Auto-center

Axis Y

Channel Y: 2 Gamepad Axis Y: 1 | Auto-center

Channel Y*

2

Gamepad Axis Y ID

1


☐ Invert axis

☒ Auto-center

✓ Accept


Stick widget - USB joystick

- 3. Enable the send of commands to Veronte Autopilot by clicking on the Send command button of the widget.

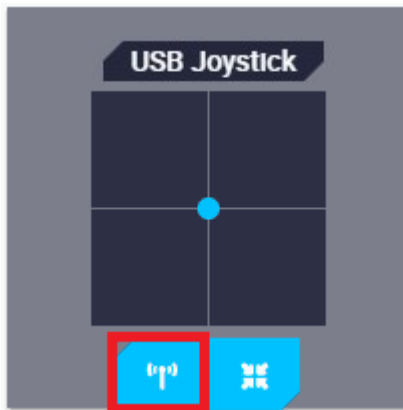

Stick widget - Enable send commands

Below is an example of how the stick widget works with the previous configuration:

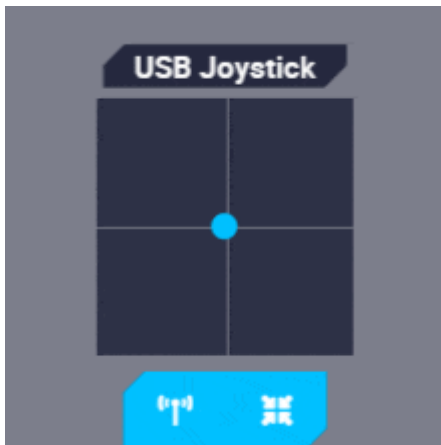


Stick widget - USB joystick movement

Remote ID

To configure the Remote ID, it is necessary to verify that it has been configured in [1x PDI Builder](#).

The control mode can be changed within Veronte Ops, so it is not necessary to reconfigure the PDI files.

To do this, open Veronte Ops → in the Workspace toolbar, click  → Flight instruments → ADS-B. An ADS-B widget will be added to the workspace:

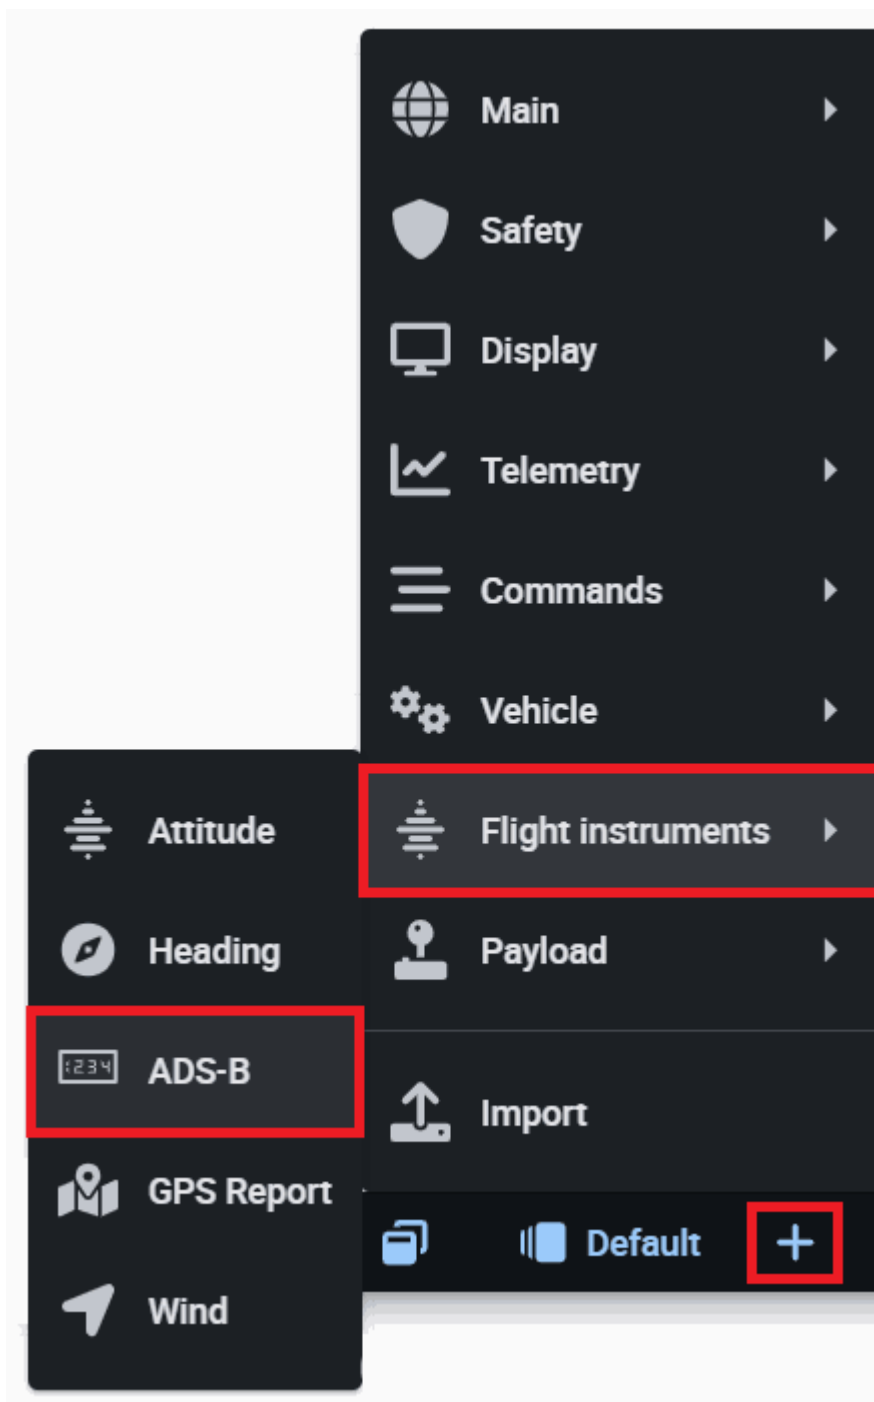

Remote ID - Configuration

This widget displays the Internal Remote ID as the Model (the model previously selected in 1x PDI Builder).

The Control mode can be modified; press Save to upload the changes.

ADS-B AP800

Model

Internal Remote ID

Control

Standby

Squawk

0

0

0

0

Ident


Save

Remote ID - Widgets

Troubleshooting

Error when changing phase

When changing phase, an error may occur so that the phase change does not take place and also the current phase identifier is colored red (the phase that appears is the one the platform was in before the phase change was attempted):

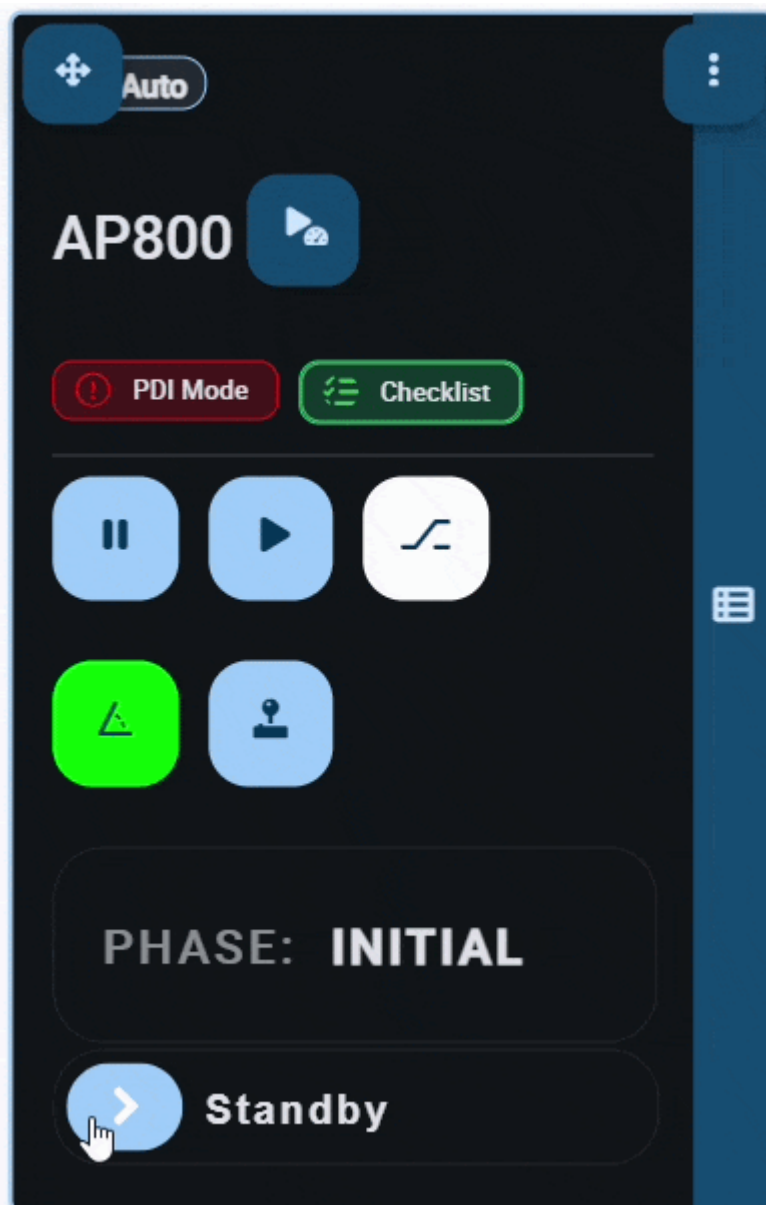

Veronte Panel - Changing phase error

The reason for this error depends on the user's goal:

- **During simulation or simple test**
 - **If this error occurs while the user is running simulations or simple tests without all sensors connected, it is most often because Veronte Autopilot 1x has not been configured in PDI Mode. If it has been configured in PDI Mode, a pill indicating this appears directly on the Veronte Panel.**
For more information on PDI Mode, visit the [PDI Mode](#) description of the 1x PDI Builder user manual.
 - **It may also be due to navigation not initialized. For more information, see [Navigation does not start](#) section of this page.**
- **During flight test or operation**


If this happens when the user is not in PDI mode (e.g. because the user is operating with the configuration finished and all sensors connected), it may be due to one of the following reasons:

 - **System bit is in error mode (not OK).**
A list of all errors that can cause this bit to be set can be found in the [Activation System Error bits - Lists of interest](#) section of the 1x Software manual.
 - **Navigation attitude could not be initialized. For more information, see [Navigation does not start](#) section of this page.**

Installed Veronte Ops app does not load

When users open the installed Veronte Ops application and it does not load or takes a long time to load, follow the steps below to fix it in:

- 1. Press the [F12](#) key on the keyboard to open the DevTools window.**
- 2. Go to Application tab ⇒ Storage.**
- 3. To avoid losing workspaces and operations that are already loaded in the application, the IndexedDB checkbox must be unchecked.**
- 4. Finally click on [Clear site data](#)**

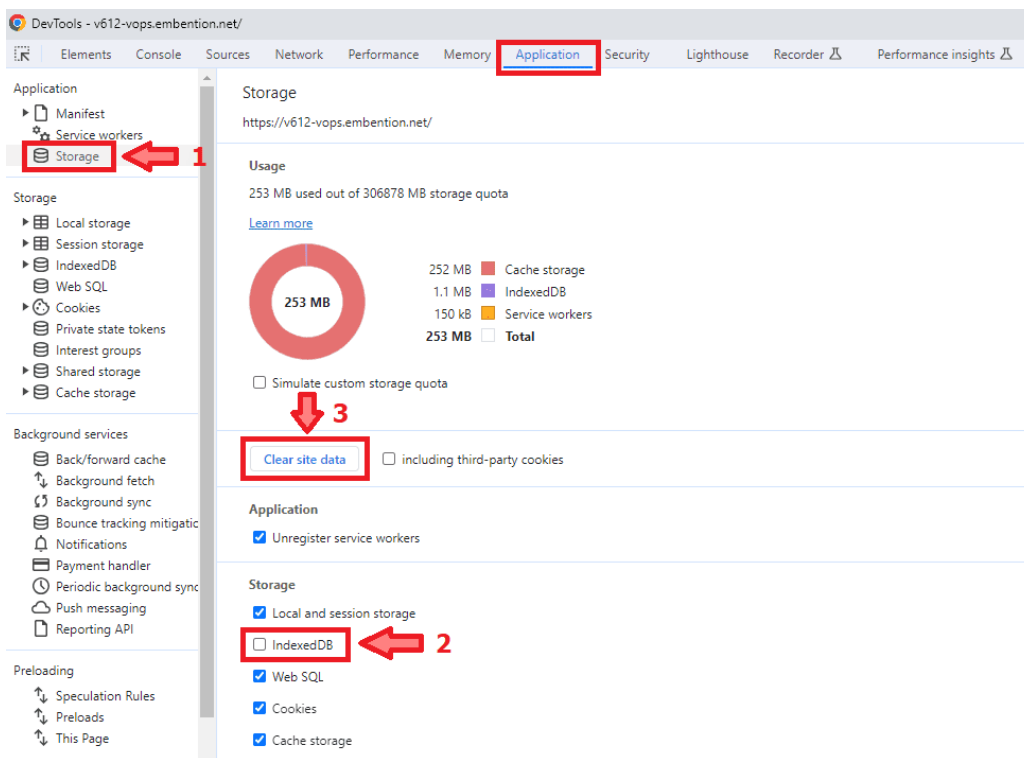

DevTools window

Navigation does not start

To start the navigation, the following requirements must be met:

- **Correct IMU measurements.**
- **The yaw must be initialized with magnetometer measurements or with an yaw initialization command.**

To do the latter, see [Calibrate Yaw - Operation](#) section of this manual.

Sounds Notification Language

The app will only support the languages found in the user's system settings.

Appendix

Script Widget

This widget enables the definition and execution of Flight Operational Procedures (FOPs) through customizable JavaScript-based scripts. It provides a visual terminal, parameter inputs, confirmation dialogs, and interaction with onboard telemetry and telecommands.

The script widget allows:

- **Upload and execute scripts.**
- **Send telecommands (TC) to the platform.**
- **Read telemetry from the platform.**
- **Show interactive dialogs for operator input or confirmation.**
- **Add logic (IF, WHILE, FOR) to control the script flow.**
- **Wait between actions.**
- **Check ACKs after sending commands.**
- **Evaluate telemetry conditions to continue or abort.**
- **Show real-time progress via the terminal.**
- **Apply transformations (scaling, offset, polynomial) to command data.**
- **Abort execution.**
- **Read a `.json` file and transform it in an object available in the script.**
- **Upload custom files, called Script Libraries, with functions or constants to be available globally in the scripts.**
- **Syntax errors will be shown when the editing area is unfocused, or in the terminal when executing an incorrect script.**

Scripts are written in JavaScript, using an asynchronous context, and executed in the widget sandbox. Therefore, for instance, write comments with `//`, and all the well-known syntax of this language.

Getting Started

- 1. Open the widget script configuration panel.**

- 2. Use the file picker to upload a file or directly write in the code text area.**
- 3. Edit or review the script in the editor.**
- 4. Click Save button.**
- 5. Click Run to start execution.**
- 6. The script will execute from top to bottom asynchronously.**
- 7. A spinner indicates that the script is running.**
- 8. There is the option to stop the script execution.**


Importing custom libraries

It is possible to import custom libraries. To achieve this, navigate to Setup → Script Libraries. The export / import must not be used. Just declare the functions with a regular declaration (keyword function) and the variables with const/let. They will be available in all the scripts. This is not supposed to be used for external libraries not supported by native JavaScript.

The data from the libraries would be available in the scripts at the start of the execution. This means that, if there is currently a script running, the libraries will not be available until the next execution.

Libraries are evaluated in chronological order, meaning that is required to use a function or variable from another library, it must be imported before the one that uses it.

This is an example of the dialog of configuration (it is possible to rename the modules):

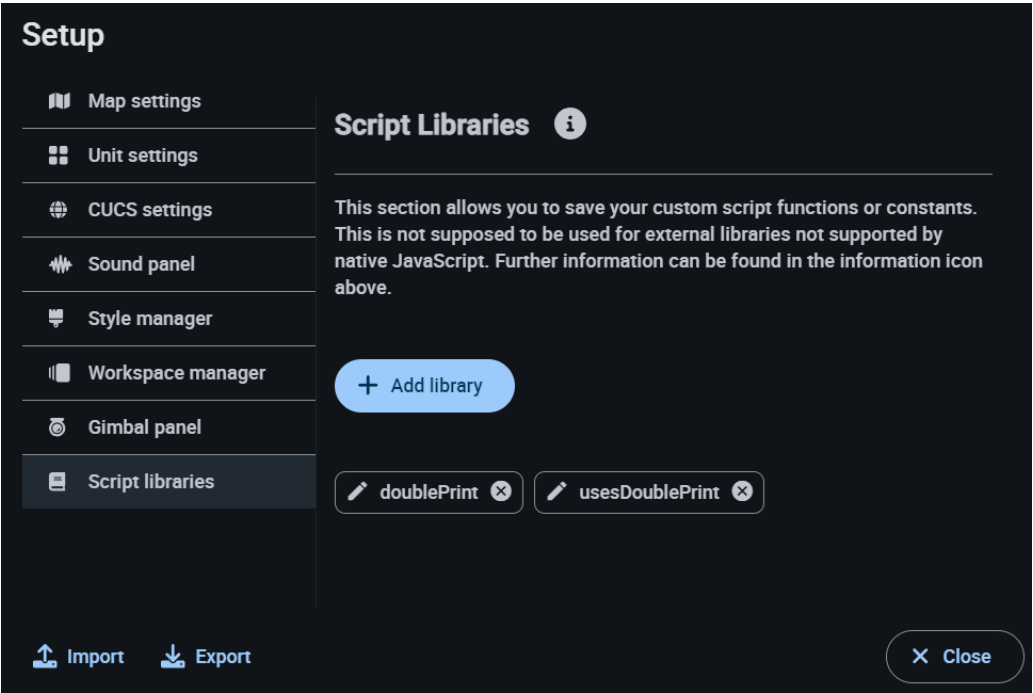

Script - Configuration

Stopping a Script

The execution can be stopped:

- Automatically from within the script (adding a `return;` clause). This is a graceful end.
- Force the script to abort at any point using `throwAbort()`.
- With the stop button. This is also a forced termination.

Available Scripting Functions

The script runs in a safe sandbox environment and offers the following helper functions available:

Function	Description
<code>getVar(typeId: number, id: number): Promise<number></code>	Reads a telemetry variable (with Type ID* , and ID** indicated) from the UAV. Returns the value, or -1 if not available.
	Sends telecommands (TCs) with the given values. If the promise is

Function	Description
<code>commandVars(varList: SystemVarData[], values: number[]): Promise<void></code>	successfully resolved, it means that the command has been properly received. If an error occurs, an Error will be thrown or the promise will be rejected.
<code>openPopUpInput(title: string, subtitle: string[], inputData: Array<InputData>): Promise<Array<number \ null>></code>	Opens a dialog to request user input (numbers or select) with validations.
<code>confirmationDialog(title: string, messages: string[]): Promise<boolean></code>	Opens a confirmation dialog for user confirmation.
<code>openJsonInput(title: string): Promise<object></code>	Opens a dialog to select a <code>.json</code> file, and returns the object contained in that file. If the format is invalid, the returned object would be null and the error would be shown.
<code>println(message: string, type?: TerminalMsgType): void</code>	Logs the message in the terminal panel.
<code>log(message: string, type?: LogType): void</code>	Logs the message in the log system file.
<code>sleep(milliseconds: number): Promise<void></code>	Pauses the script for the given time.
<code>clear(): void</code>	Clears the terminal output.
<code>throwAbort(): void</code>	Forces the finish of the script.

SystemVarData interface:

```
interface SystemVarData {
  id: number;
  typeId: number;
}
```

InputData interface:

```
interface SelectOption {
  label: string;
  value: number;
}

type InputType = 'number' | 'select';

interface InputData {
  title: string;
  type?: InputType; // defaults to 'number'
  defaultValue?: number;
  min: number | null; // only needed if type === 'number'
  max: number | null;
  options?: SelectOption[]; // compulsory if type === 'select'
}
```

TerminalMsgType enum:

Type	Value expected (strings)
Default	No value needed
Error	error
Warning	warning
Success	success


LogType enum:

Type	Value expected (strings)
Default	No value needed.
Error	error
Warning	warning

Variable types (typeid):

Type	ID
Real	0
Integer	2
Bit	3

The **ID** of the variable can be found in the dialog of variable selection in the application. Example:

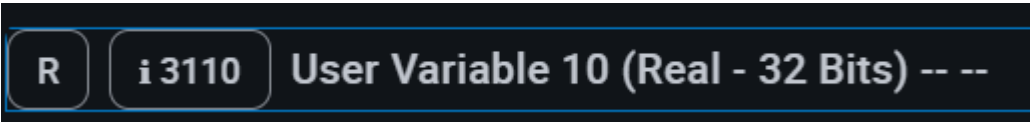

Variable ID

The **ID** in this case would be 3110 (and type **Real** , then **typeid** is 0).

Example Use Cases

- 1. 🛠️ **Get the Current Phase**

To read the current phase:

```
const phase = await getVar(2, 1); // Type ID 2 = Integer, ID 1 = Phase
println("Current phase: " + phase);
```

1. Get Input from Operator (Popup Form)

To request user-entered values (two first are input number type, and the third one is a select list):


```
const result = await openPopUpInput("Enter Mission Parameters", [
  "Mode options:",
  "Passive > 0",
  "Position > 1"
], [
  {
    title: "Speed (m/s)",
    defaultValue: 10,
    min: 0,
    max: 100
  },
  {
    title: "Altitude (m)",
    defaultValue: 30,
    min: 10,
    max: 300
  },
  {
    title: 'Mode',
    type: 'select',
    defaultValue: 1,
    options: [
      { label: "Passive", value: 0 },
      { label: "Position", value: 1 }
    ]
  }
]);

if (result) {
  println("Speed: " + result[0] + ", Altitude: " + result[1] + ", Mode: " +
result[2]);
} else {
  println("No input provided.");
}
```

 Note

All fields are validated. The user cannot continue if values are out of range. If the limits are not provided, then no validation would take effect. If the default value is not changed, then that value would be sent.

1. Print to the Terminal

To show status/progress updates:

```
println("Step 1: Initialization println("Waiting for confirmation...");
```

1. Clear the Terminal

```
clear();
```

Removes all previous logs.

1. Add a Pause

To wait two seconds before continuing:

```
await sleep(2_000);
```

The number is in milliseconds.

1. Confirmation Dialog

To confirm with the operator before continuing:

```
const confirmed = await confirmationDialog("Continue?", ["This will start the mission."]);
if (!confirmed) {
    println("Aborted by operator ✖");
    return;
}
```

1. Send Telecommands (TC)

To command variables to the UAV:

```
await commandVars([
    { typeId: 0, id: 3110 },
    { typeId: 0, id: 3111 }
], [15, 50]); // Values to send
```

Multiple variables can be sent in one call.

1. Verify ACK

To confirm a telecommand was acknowledged correctly:

```
try {
    await commandVars([ { typeId: 0, id: 3110 } ], [15]);
    println("ACK OK ✔");
} catch (e) {
    await println(e);
}
```

Retries may also be performed inside a loop.

```
for (let i = 0; i < 3; i++) {  
  try {  
    await commandVars([ { typeId: 0, id: 3110 } ], [15]);  
    await println("Sent successfully!");  
    break;  
  } catch (err) {  
    await println("Retry " + i + ' ' + err);  
    await sleep(500);  
  }  
}
```

1. Check Specific Telemetry

Telemetry conditions can be verified:

```
const battery = await getVar(0, 2002);  
if (battery < 11) {  
  println("Battery too low (" + battery + "V) ✗");  
  return;  
}
```

Useful for safety conditions.

1. Conditional Execution (IF / WHILE / FOR)

Standard JavaScript control structures are supported:

```
if (await getVar(0, 1000) > 50) {  
    println("Condition met, sending TC");  
    await commandVars([...], [...]);  
}  
  
while (await getVar(0, 3110) !== 15) {  
    println("Waiting for ACK...");  
    await sleep(500);  
}
```

1. + Transform Values Before Sending (Transfer Functions)

Values can be modified before sending:

```
const rawSpeed = 10;  
const scaledSpeed = rawSpeed * 1.5 + 2;  
await commandVars([ { typeId: 0, id: 3110 } ], [scaledSpeed]);
```

Apply any function, including polynomials:

```
function polynomialTransform(x) {  
    return 0.01 * x ** 2 + 3 * x + 7;  
}  
await commandVars([ { typeId: 0, id: 3110 } ], [polynomialTransform(20)]);
```

1. Checklist and Step Progress

Use `println()` to simulate checklist status:

```
println("✅ Step 1: Pre-flight check passed");  
println("✅ Step 2: Command sent");  
println("❌ Step 3: ACK not received");
```

1. 🚩 Colored outputs

Use `println('This is an error message', 'error')` and the other types to see a different color in the output console:

```
This is an error message  
This is a success message  
This is a warning message
```

```
This is an error message  
This is a success message  
This is a warning message
```

Colored outputs

Note

The type of colored output depends on the widget configuration (color mode).

1. 🎨 Create custom functions

A comfortable way of working with this widget is to create custom functions. An example of this:

```
async function setAltitude(value) {  
  return await commandVars([ { typeId: 0, id: 3110 } ], [value]);  
}
```

The only thing that needs to be done is:

```
await setAltitude(55);
```

And this will set the user variable `10` to `55`. If it is necessary to go a bit further, this values can be stated as constants at the start of the script:

```
const set_altitude_cmd = {
  id: 3110,
  typeId: 0
}

async function setAltitude(value) {
  await commandVars([set_altitude_cmd], [value]);
}
```

1. 🛠 Upload a JSON and get an object

Use `openJsonInput('Select the JSON with the altitude variables')` to read a JSON file and get the corresponding object. This file:

```
{
  "msl": 50,
  "wgs84": 70
}
```

JSON Upload & Validation

Can be read with this code:

```
const json = await openJsonInput('Select the JSON with the altitude variables');
const msl = json?.msl;
if (typeof msl !== 'number') {
  println('Missing position.msl in JSON ✖', 'warning');
  return;
}
println('Altitude (MSL): ' + msl);
```

We strongly recommend validating the structure of the JSON object (optional chaining and/or typeof).

1. Using libraries

After having imported the needed custom libraries, all the functions should be available in the script. No import should be used (as it should not be used any export).

Assuming a library defines the following code:

```
function doublePrint(value) {  
  println(value);  
  println(value);  
}
```

The script could look like this:

```
const x = 2;  
const y = 5;  
const result = x * y;  
doublePrint('The result is ' + result);
```

The terminal should show the following output:

```
The result is 10  
The result is 10
```

1. Creating enumerations

The way of creating enumerations we strongly recommend is the following (a native feature of JavaScript):


```
const Position = Object.freeze({
  TOP: 0,
  RIGHT: 1,
  BOTTOM: 2,
  LEFT: 3
})
```

Using it is as easy as entering `Position.RIGHT`, which returns the value **3**. The same can be done with strings:

```
const State = Object.freeze({
  ON: 'on',
  OFF: 'off'
})
```

In this case, the return value would be a string. Although, the use of `Object.freeze` is optional, its use is encouraged as it guarantees that the value of the enumeration does not change and that no new values are added, which is the expected behavior of an Enumeration.

Real use example:

```
const Vars = Object.freeze({
  PHASE: 1
})

const phase = await getVar(2, Vars.PHASE);
println('Current phase is: ' + phase);
```

Send a telecommand with custom enumeration:

```
// This code could be in a library called Constants.js
const Position = Object.freeze({
  PASSIVE: Object.freeze({
    typeId: 0,
    id: 3110
  }),
  POSITION: Object.freeze({
    typeId: 0,
    id: 3111
  })
})

// This function could be in a library called RadFns.js
async function setRadPos(pos, value) {
  return await commandVars([pos], [value])
}

// Main script
await setRadPos(Position.PASSIVE, 100)
```

1. Using system logs

The `log` function enables direct writing into the system log, allowing for the specification of different severity levels.

One example of how it could be used is as follows:

```
log('Example of log')
log('This case is a waning', 'warning')
log('And an error!!!', 'error')
```

With a result in the file log like this:

```
[2025-09-01 09:55:55.931] [info] Example of log
[2025-09-01 09:55:55.932] [warn] This case is a waning
[2025-09-01 09:55:55.933] [error] And an error!!!
```

The format is clear: `[date time] [type] Text message`. Using this as a starting point, a good idea would be to create a custom sub-format. For instance, something like `[script] [operation] status/result/info`. The final result could be something like this:

```
[2025-09-01 10:01:01.101] [info] [script] [setRadPos] Position.ABSOLUTE 100
```

This makes it easier to filter by operation or script logs. This can be achieved with the following code:

```
const Position = Object.freeze({
  ABSOLUTE: 0,
  RELATIVE: 1
})

log(`[script] [setRadPos] Position.ABSOLUTE 100` )

// Or parameterizing it
function logOperation(op, variable, value) {
  return `[script] [{op}] ${variable} ${value}`
}

log(logOperation('setRadPos', 'Position.ABSOLUTE', 100))
```

Error list

The most common errors that could appear while executing the script are:

- `No platform found`. Currently it is not possible to play a script without a platform selected.
- The message `functionName` argument must be `string / number / array`. Defined types must be respected.
- An error while reading a JSON file because of the format of the uploaded file. Please, do respect the standard. It would say something like `Error reading JSON file: ...`.

- **commandVars** function will be rejected if it could not be completed. For instance, it could throw any of this errors:
 - A timeout because the connection with the platform is lost.
 - Too many fields sent.
 - Trying to write a read-only variable.
 - Any other reason of this kind.
- **Unknown operation** when executing a non supported operation.
- In the event of a syntax error, it will be displayed as **Error**: followed by the reason provided by the language.

Notes and Tips

- The use of **await** may be required for asynchronous functions: **getVar**, **sleep**, **commandVars**, **openPopUpInput**, **confirmationDialog**. Remember JavaScript is an asynchronous and single-threaded language.
- **println()** shows logs in the terminal. It is the primary tool for guiding the operator.
- To have the possibility of comfortably using the **stop** button, **sleep** functions and dialogs are recommended.

Safety Notes

- Scripts are sandboxed and run asynchronously.
- The functions provided are limited due to safety reasons.
- Be sure to validate user inputs and telemetry ranges.
- Bear in mind a forced stop could left the system on a non-desired state.

Summary Table

Feature	Supported
Load and edit script from file	✓
Run execution	✓

Feature	Supported
Send telecommands	✓
Wait between commands	✓
Operator input/select popup	✓
Confirmation dialogs	✓
ACK verification	✓
Telemetry check	✓ (via <code>getVar</code>)
Conditional execution	✓
Checklist progress (via logs)	✓
Stop execution	✓
Read a JSON and get object	✓
Import custom libraries	✓

For any further help writing scripts, refer to the examples above or contact support.

Software Changelog

This section presents the changes between the previous app version v. 7.8.24 and the current v.8.2.22.

Added:

- **Direct RTSTP video stream playback support within the video widget.**
- **Veronte LM PAT as an available camera and gimbal option.**
- **Capability to select a specific camera or gimbal directly from the video widget to execute track commands.**
- **The checklist widget has been integrated into the veronte panel widget itself.**
- **Network interface selector within the Setup Cucs panel to allow configuration of the adapter used for multicast traffic.**
- **Option to toggle the visibility of the UAV icon on the map within the settings menu.**
- **A chip has been added to indicate the license status if necessary.**

Fixed:

- **Widget Slider max, min and step settings.**
- **Widget Dial color selector position.**
- **Checklist in the Veronte Panel widget.**
- **Platform selection in widgets.**
- **Refresh drx license.**
- **Show guidance in map.**
- **Reload Redundancy platform config.**
- **Restored the correct application of user preferences regarding platform icons.**

Removed:

- **The requirement to use an external web converter for RTSP video playback.**
- **The checklist widget has been removed.**

