1x PDI Builder

Release 8.2/1.7

Embention Sistemas Inteligentes, S.A.

2026-10-23

Contents

Scope of Changes 14
Quick Start 16
System Requirements 16
Download and Installation 17
Configuration 18
Veronte 33
Vehicle name 33
Attitude 35
Frequencies 37
GPIO 38
Status 39
Connections 40
ADC 41
PWM 44
Sensors 49
Accelerometer 50
Sensor 50
Gyroscope 55
Sensor 50
Magnetometer 60
Sensor 50
Dynamic Pressure 68
Sensor 50
Static Pressure 70
Atmospheric calibration export 71
Sensor 50
RPM 75
Lidar 76
External Navigation Sensor 78
Input/Output 80
I/O Setup 81
Serial Custom Messages 89
Tunnel 93

Unescape port 95
CAN to serial/Serial to CAN 96
CAN wrapper/CAN unwrapper 97
NMEA 0183 GGA 99
CAN Setup 99
Configuration 100
Custom Messages 106
Mailboxes 110
Custom Messages types 113
Variable 113
Checksum (CRC) 116
Polynomial type 118
sum type 118
sumMod type 119
Mavlink type 119
8-bit sagetech checksum 120
Matcher 120
Skip 121
Parse ASCII 121
Parse Hexadecimal ASCII 122
Bitmap 122
BCD 123
Position 123
Incremental Counters 124
CAN-FD A SETUP 124
Mailboxes 124
Baudrate 126
Digital Input 128
Serial 133
RS232/RS485/UART 135
Incremental Counters 135
Control 136
Phases 136
Modes 141
Arcade axis 144

Sort Phases 145
Redundancy setup 146
Automations 147
New automation 150
Other options 155
Events 156
Alarm 162
Button 162
Custom Serial RX 164
Mode 165
Phase 165
Route 167
STANAG 4586 Message 168
Timer 169
Variable 170
Volume 171
Actions 172
Atmosphere calibration 176
Change active sensor 177
Command block 178
Custom CAN TX 181
Custom Serial TX 182
DEM calibration 183
Enable/Disable Wind Estimation 183
FTS-Activation 184
Feature 184
Format SD 186
Go to 186
Mode 187
Navigation 188
Obstacle avoidance 190
Output 191
Periodical 192
Phase 193
Ports 194

Run block program 194
STANAG 4586 message 195
Safety Bits 196
Select Arcade axis 197
Stick priority 197
Terrain obstacle 198
Track 199
User Log 202
Variable 202
Yaw 203
Communications 204
Ports 204
4G 206
Comstats 207
Iridium 209
Ethernet 210
Stick 211
Transmitter (0-3) 212
PPM 212
Exponential 214
Trim 215
Output 216
Virtual Stick 217
Block Programs 219
CORE 1 220
Internal 0-1 223
Internal 2 226
Internal 3 228
CORE 2 230
Servos blocks 244
Actuator 244
Arc Trim 252
PWM 253
Control blocks 254
PID 254

Quaternion Control 259
Scheduler 262
T-Sched PID 263
Total Energy Control 268
Data Source/Sink blocks 270
Devices blocks 272
Clock 272
Gimbal 273
Stick 277
Execution Flow blocks 281
On focus block 282
Switch blocks 283
External blocks 285
Guidance blocks 289
Guidance blocks common configuration 292
Climb 299
Cruise 314
Envelope 317
Guidance Computation 325
Landing 325
Rendezvous 340
Taxi 344
VTOL 352
Yawing current 359
Yawing heading 360
Yawing north 361
Navigation guidance blocks 362
Library blocks 364
Logic blocks 369
AND 369
NOT 369
OR 370
Math blocks 371
f(x) 371
f(x,y) 372

Polynomial 373
r64 f(x) 374
r64 f(x,y) 374
Unit16 376
Vectors 377
Message triggers 384
CAN message trigger 384
Serial producer trigger 386
Mode/AP Selection blocks 387
AP Selection 387
Arcade 389
Arcade Bounce 391
Arcade Extend 394
Manual 396
Mix 396
Navigation blocks 398
EKF Adapters 398
Altitude 398
Custom adapter 401
GNSS Compass 403
Misalignment 404
Position 407
Static Pressure 409
Terrain height 414
Velocity 415
Velocity down 417
EKF Split 419
Navigation 421
Wind 427
Positions blocks 429
Constant Position 431
LLH to position 432
Move 433
Position to LLH 433
Read Feature 434

Read Mission Point List 435
Relative Vector 435
Write Feature 436
Sensors blocks 437
Altimeter 437
Dynamic pressure 439
GNSS sensor 440
Magnetic Field 457
Magnetometer 458
Position reader 459
Relative position 460
SRTM height 462
Static Pressure 464
Signals blocks 465
3D Table Interpolation 465
Acceleration limiter 466
Bound 467
Derivative 468
EWMA Tau filter 470
FFT 471
Hysteresis 472
IIR Filter 474
Integrator 475
Interpolation Vector 476
Ramp 477
Rate limiter 478
Signal generator 480
Type Casting blocks 483
Devices 483
Transponder/ADS-B 484
Camera 488
Drop system 491
Board 492
Veronte Gimbal 494
Telemetry 497

Telemetry 497
Data vectors 498
Onboard Log 501
User Log 503
Fast Log 504
Sniffer 508
UI 509
Operation elements 509
Variables 511
HIL 520
Simulation variables 523
Safety 565
Checklist 565
Config Manager 568
Safety bits 569
STANAG 4586 569
STANAG 4586 UA lights variables map 570
STANAG 4586 UA Stick configuration 571
STANAG 4586 Vehicle Operating Mode Command 572
STANAG 4586 Subsystem Configuration 575
STANAG 4586 Inertial States configuration 577
STANAG 4586 Data link configuration 578
Custom STANAG 4586 message 580
Integration examples 581
AP communication with PC 581
ArcTrim Button 582
CAN communication 585
CAN messages transmission 585
CAN messages reception 586
CAN messages transmission via serial 588
CAN messages reception via serial 591
Communication between Veronte Autopilots 1x 593
Data transmission between Veronte Autopilots 1x 594
Dynamic addresses for telemetry vectors 596
Flare and Decrab phase configuration 598

Flare phase configuration 601
GNSS Compass Configuration 602
RTK Configuration 609
Serial communication 613
Serial messages transmission 613
Serial messages reception 614
Serial messages transmission via CAN bus 616
Serial messages reception via CAN bus 619
Actuators/Servos 622
CAN 623
Ultra Motion 623
1x PDI Builder configuration 623
Servo custom configuration 625
Interface Control 630
Encoding 630
Decoding 631
PWM 632
Serial 634
Volz DA26 - RS485 634
Air Data Sensors 636
OAT Sensor 636
Altimeters 638
Lidar 638
ADC lidar 638
I2C lidar 640
Lidar Garmin Lite v3 641
Lightware LW20 Lidar 642
Radar 643
Ainstein CAN Radar 643
Using altimeter readings 647
Datalinks 649
LOS 649
External radios 649
GNSS Receivers 650
NexNav GNSS 650

Septentrio Mosaic-X5 661
IMUs & Compass 664
IMUs 664
Vectornav VN-300 664
Vectornav VN-300 configuration 666
WitMotion HWT905-232 668
Magnetometers 677
External Magnetometer 677
RS-232 677
RS-485 680
MEX as External Magnetometer 681
CAN 682
Serial 685
PNI RM3100 688
RPM Sensors 689
Stick 692
Joystick 16CH 692
CAN Joystick configuration 693
I/O Connections 694
MEX address configuration 696
PPM Stick 698
General case 698
Ground unit 698
Air unit 701
Simulation case (HIL) 703
On-board PPM receiver case 703
Stick widget 707
USB joystick 708
Virtual Stick 710
Veronte products 712
CEX/MEX 712
1x PDI Builder side 713
CEX PDI Builder side 717
DRx 719
Unit Identification 719

I/O Configuration 721
Communication Messages 721
Arbitration Messages 724
Communication Configuration 729
Routing 729
Ethernet 730
Monitor Arbitration Logic 732
Units Synchronization 733
Automations 733
User Variables 735
Telemetry 735
Pilot Input 736
MC01 738
MC01 PDI Builder side 738
1x PDI Builder side 713
MC110 741
CAN commands from Autopilot 1x to MC110 742
1x PDI Builder side 713
MC110 PDI Builder side 744
CAN commands from MC110 to Autopilot 1x 746
MC110 PDI Builder side 744
1x PDI Builder side 713
Veronte Gimbal 750
Controlling Veronte Gimbal movement 753
Communication with Veronte Gimbal camera video board 756
CAN commands sent by Autopilot 1x 756
CAN commands received on Autopilot 1x 758
Gimbal block program 762
VSE (Veronte Stick Expander) 762
Troubleshooting 764
Debug serial messages transmission 764
1x PDI Builder side 764
1x PDI Calibration side 764
Maintenance mode 766
Maintenance mode (loaded with errors) 767

Migrate configuration 769
Radios paired but 1x air unit not showing 769
Reducing GNC Task frequency 770
Trajectory Overshoot 770
FAQ 772
How to calculate a mask 772
What does decimation mean? 772
Automations evaluation and execution 773
Software Changelog 776

Scope of Changes

- Version 1.0
  - Added:
    - First version issued
- Version 1.1
  - Changed:
    - DRx Integration Example updated and completed.
- Version 1.2
  - Added:
    - Septentrio Mosaic-X5 Integration example.
- Version 1.3
  - Added:
    - Important boxes in GNSS sensor - RTK Wizard explaining static base and moving base modes.
    - Warning about recommended frequency in PWM
  - Changed:
    - Aircraft axis image in Attitude
    - Custom Serial RX definition.
  - Removed:
    - Serial messages transmission and Serial messages reception Important box about the fixed serial parameters of the UART port.
    - Icon and color options in Configuration / Automations / Events / Route.
- Version 1.4
  - Added:
    - Warning about the fusion of several IMUs in Accelerometer
- Version 1.5
  - Fixed:
    - Custom adapter block inputs in **Navigation blocks** section
- Version 1.6
  - Changed:
    - Explanation of **decimation** parameter in What does decimation mean? - FAQ section

        - Unified vector/fieldset/message nomenclature into message, and clarified the global limit shared by all Custom Messages, in Serial Custom Messages and CAN Custom Messages sections
- Version 1.7
    - Added:
        - **Use dynamic port** option of the **Output filter** in CAN Setup - Configuration section

Quick Start

1x PDI Builder is the main configuration tool to adapt a Veronte Autopilot 1x to a specific vehicle, including user-defined communication protocols. **1x PDI Builder** includes:

- **Telemetry**: real-time onboard UAV metrics, such as sensors, actuators and control states.
- **Configuration**: edit vehicle settings, such as servo trim, interface/port management and modes.
- **Automations**: actions that are automatically executed when a set of configured conditions are accomplished.
- **Block Programs**: Veronte Autopilot 1x can be programmed (control laws) with a friendly-user programming language.

Once Autopilot 1x has been detected on Veronte Link, install **1x PDI Builder**.

System Requirements

Before executing this software, users should check the following sections with the minimum and recommended PC hardware requirements.

Minimum requirements

- CPU: Intel Core i5-8365UE
- RAM: 8 GB DDR4
- STO: 256 GB SSD

Recommended requirements

- CPU: 12th Gen Intel(R) Core(TM) i7-12700H 14 cores up to 4,70 GHz
- RAM: 32,0 GB
- STO: 1TB SSD M.2 NVMe PCIe

Download and Installation


1x Veronte PDI Builder software is available in the **Veronte Toolbox** platform. From there, users can download and install the application. For more information, please refer to the Veronte Toolbox user manual.

A **personal account** is required to access **Veronte Toolbox**; create a Ticket in the user's **Joint Collaboration Framework** and the support team will create it for you.

Configuration


This section explains each option and parameter available in **1x PDI Builder**.

Once the installation is finished, open **1x PDI Builder** and log in.

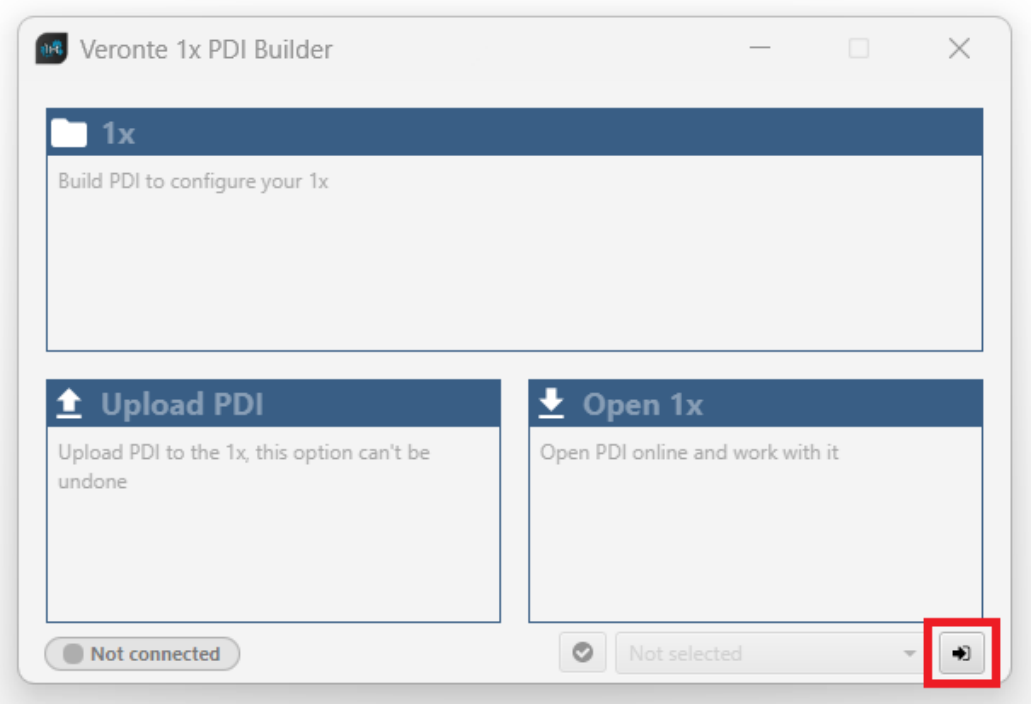

Autopilot 1x Log in

Authentication is required before any operation.

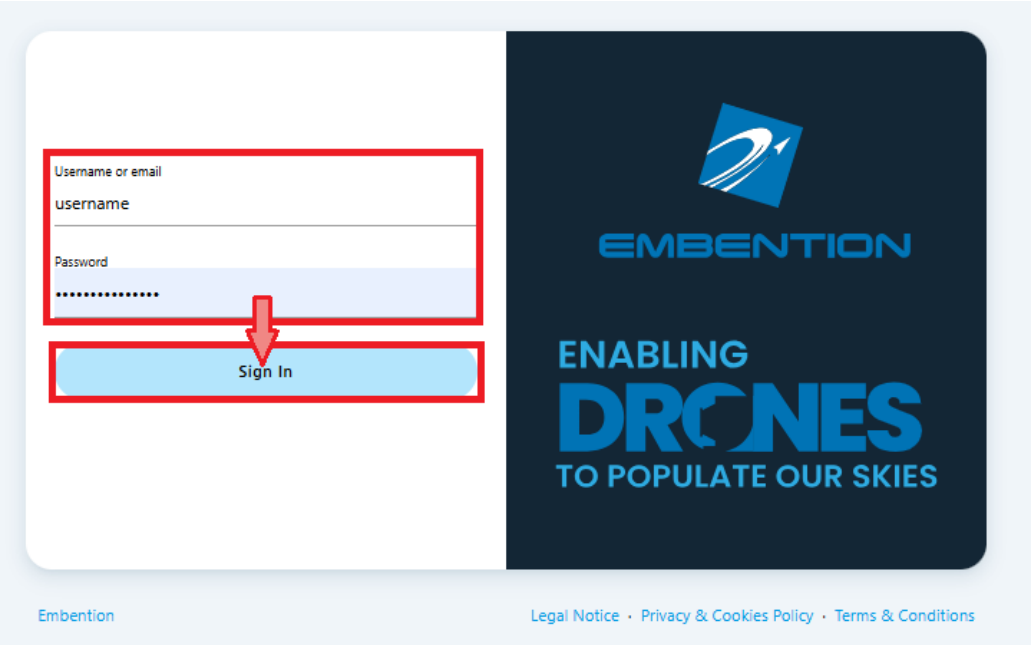

Autopilot 1x Log in


After clicking **Sign in**, a new window will open for users to enter their credentials. If users do not have credentials, do not know what they are or have any problems logging in with them, please contact the support team via the Joint Collaboration Framework opening a Ticket or contact sales@embention.com.

If the login is successful, the screen will change as shown below:




Login successful

> **⚠ Warning**
>
> If incorrect credentials are entered, the system will display the error message Incorrect username or password.

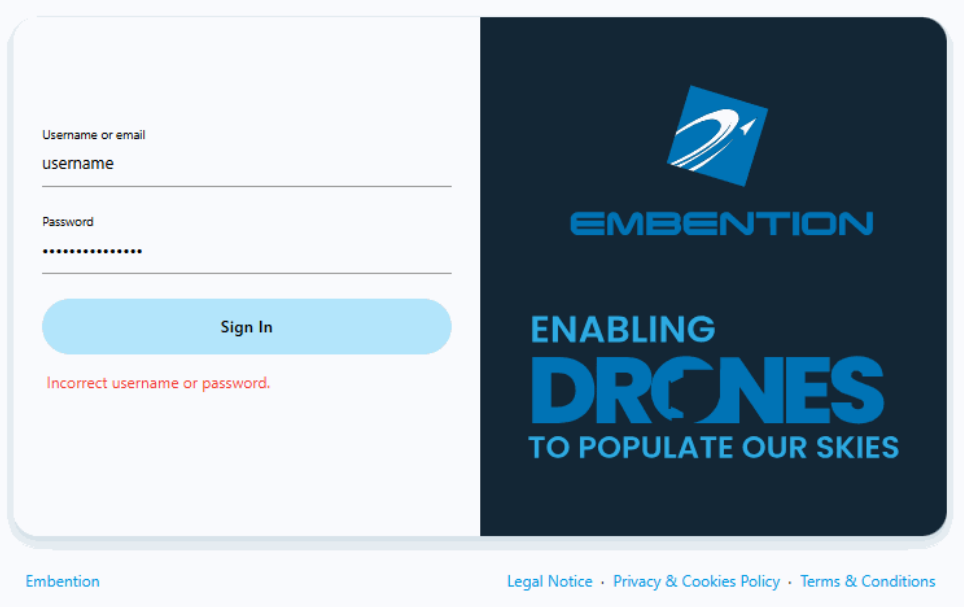


Once logged in, select the desired unit.

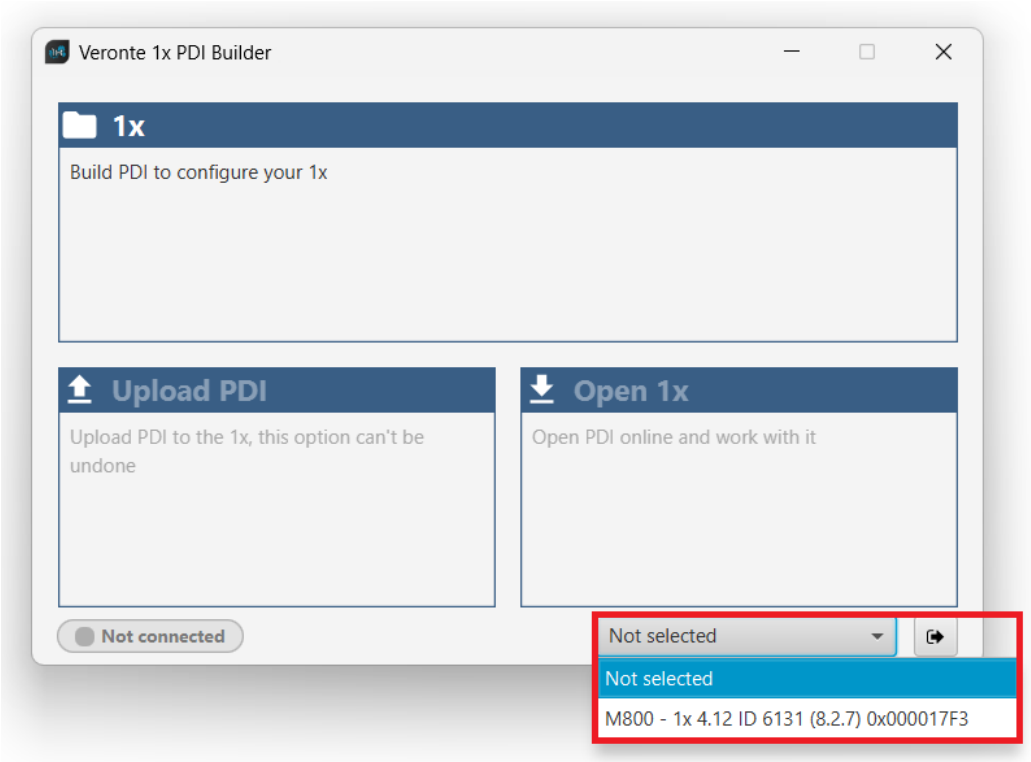

Autopilot 1x ID

If it is correctly connected, **1x PDI Builder** will display the **mode** in which the connected unit is. In addition, a **PDI error button** will appear:

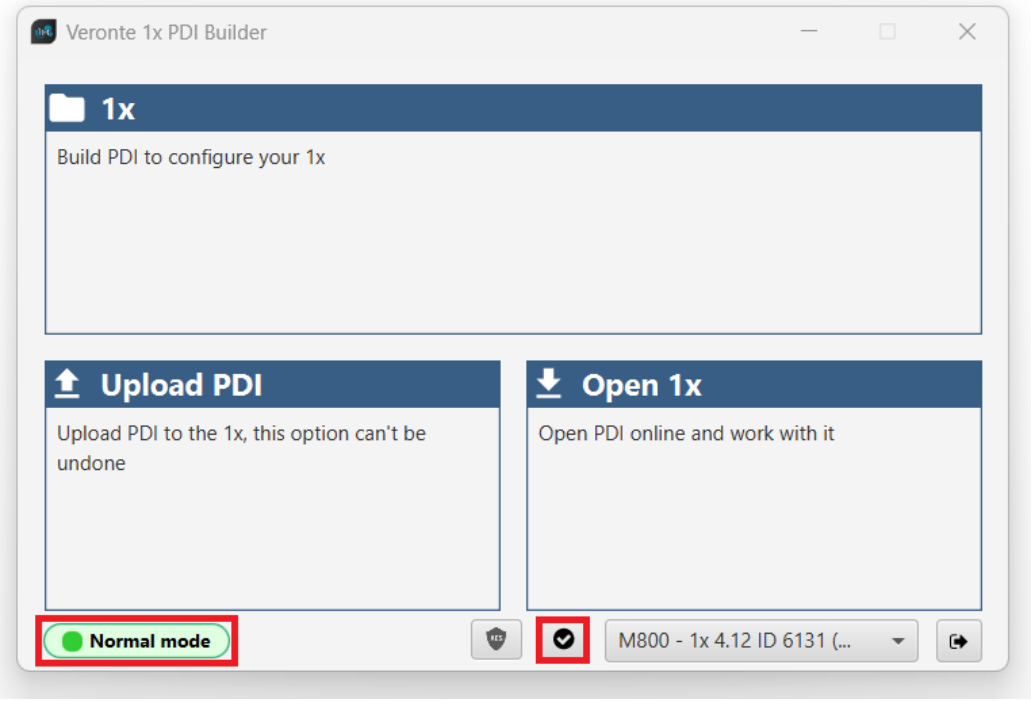


1x PDI Builder

- **1x mode**: 1x unit should appear in **Normal mode**, as shown in the figure above, or **Maintenance mode**. It can also appear as **Maintenance mode (loaded with errors)** or **Normal mode - Disconnected**.


  > ⓘ **Note**
  >
  > **Maintenance mode (loaded with errors)** appears when something is wrong in the configuration. For more information, see the Maintenance mode (loaded with errors) - Troubleshooting section of this manual.

- **PDI Errors** button:
  The user can check if the connected unit has PDI Errors by simply clicking on it. If there are no errors, the following message appears:

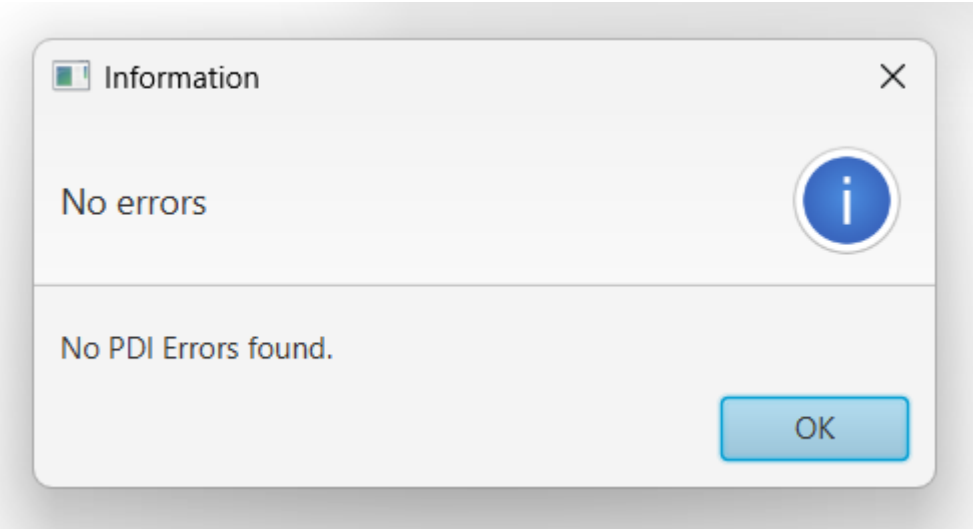

1x PDI Builder - PDI Errors message

- **Encrypt** button:
  The Encrypt configuration panel is used to secure data transmissions via encryption, ensuring that only devices with the correct key can access the information.

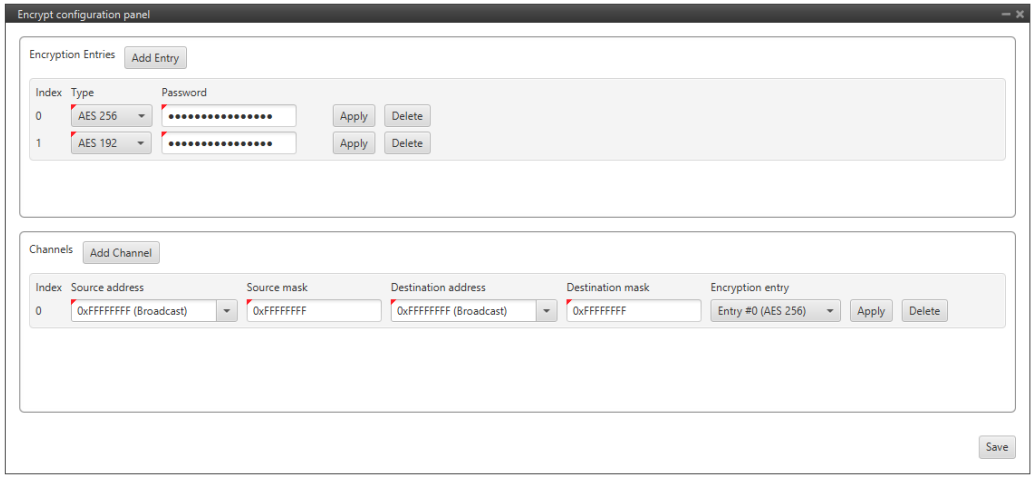

Encrypt - Panel


Encryption Entries: This section is where you define the security keys the system will use:

- **Index**: The unique identifier for the key, used for assignment to specific channels.
- **Type**: Selection of the encryption algorithm.
- **Password**: The alphanumeric string that must be identical on all communicating devices.

Channels: This section defines which data flows are encrypted based on STANAG 4586 addresses:

- **Source address/Mask**: Defines the origin of the data to be protected.
- **Destination address/Mask**: Defines the data destination.
- **Encryption entry**: Selection of which key created in the top section is applied to the specific channel.

The user can now access 3 configuration options:

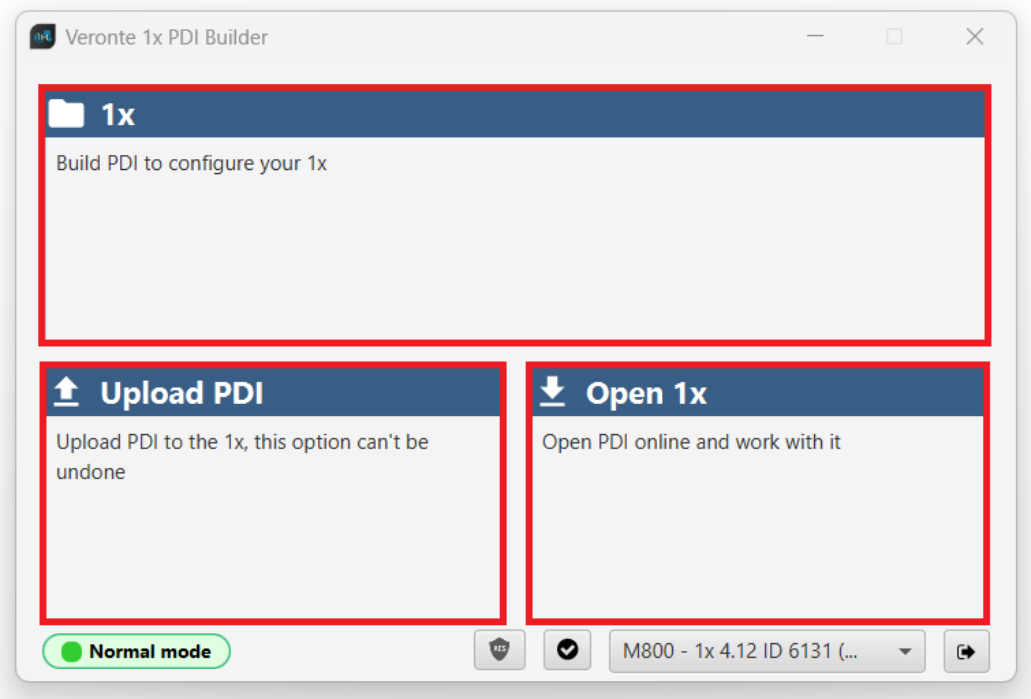

1x PDI Builder options


- **1xVeronte**: It allows the user to work with **offline** configurations. A previously exported 1x PDI configuration can be opened and modified, or a new one can be built from the default configuration.

> **Note**
>
> When an offline configuration is opened, it is possible to select the hardware version the user wants to work with:



Hardware versions

When switching between hardware versions, the following confirmation message appears:

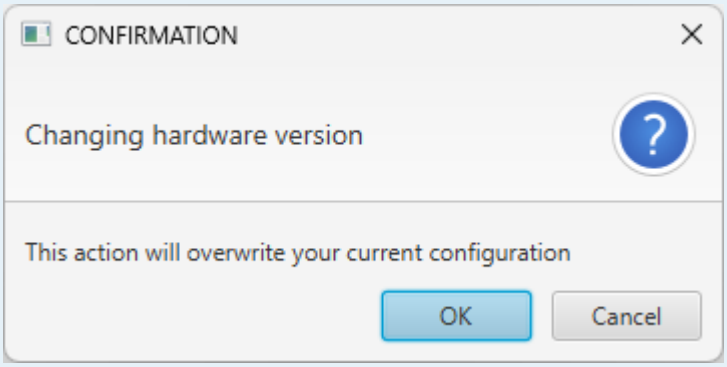


Hardware versions - Confirmation message

- **Upload PDI**: A previously exported 1x PDI configuration can be imported to the linked 1x.

  This option is also intended to **upload** to Autopilot 1x a **calibration** previously exported with the **1x PDI Calibration** software.

> ⚠ **Warning**
>
> When a configuration is loaded into Veronte Autopilot 1x with a version older than the software version being used, an **automatic migration** from the configuration version to the software version being used will be performed. For more information on this, see the Migrate configuration - Troubleshooting section of this manual.

- **Open 1xVeronte**: By clicking on this option, **1x PDI Builder** configuration menu opens with the configuration (the PDI files) loaded in the connected **1x**. Then, the user can modify it **online**.

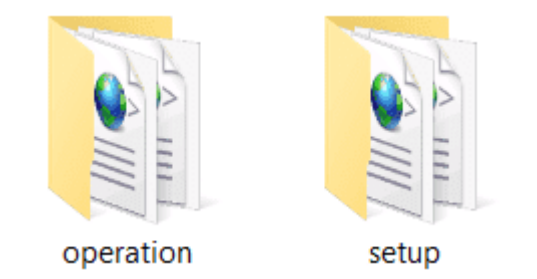  > ⓘ **Note**
  >
  > PDI files are 1x configuration files. These files allow for modular control with improved version management. These PDI files are split into 2 folders. Each folder holds several .xml files:
  >
  > - **operation**: This folder holds all the files related to the operations defined, such as waypoints, routes, operative parameters, runways, etc.
  > - **setup**: This contains the configuration of the vehicle. All the control loops and their parameters, the definition of the flight phases and guidance commands, and the automations defined are stored here.
  >
  > 
  >
  >
  > **PDI Files**


Finally, click on **1xVeronte** to edit a configuration offline or **Open 1xVeronte** to open the current configuration and start editing it online. The different 'buttons' that can be seen in the initial menu of the **1x PDI Builder** are explained below.



Initial Menu

1. **Save and close**: After changes are done, press on the save button to apply the changes.

   In order to save the configuration, Veronte Autopilot 1x must enter in **maintenance mode**. Then, after saving any changes, Autopilot 1x will **RESET** and **1x PDI Builder** software will consequently **close**. Therefore, users must accept the following confirmation panels for this to be possible:

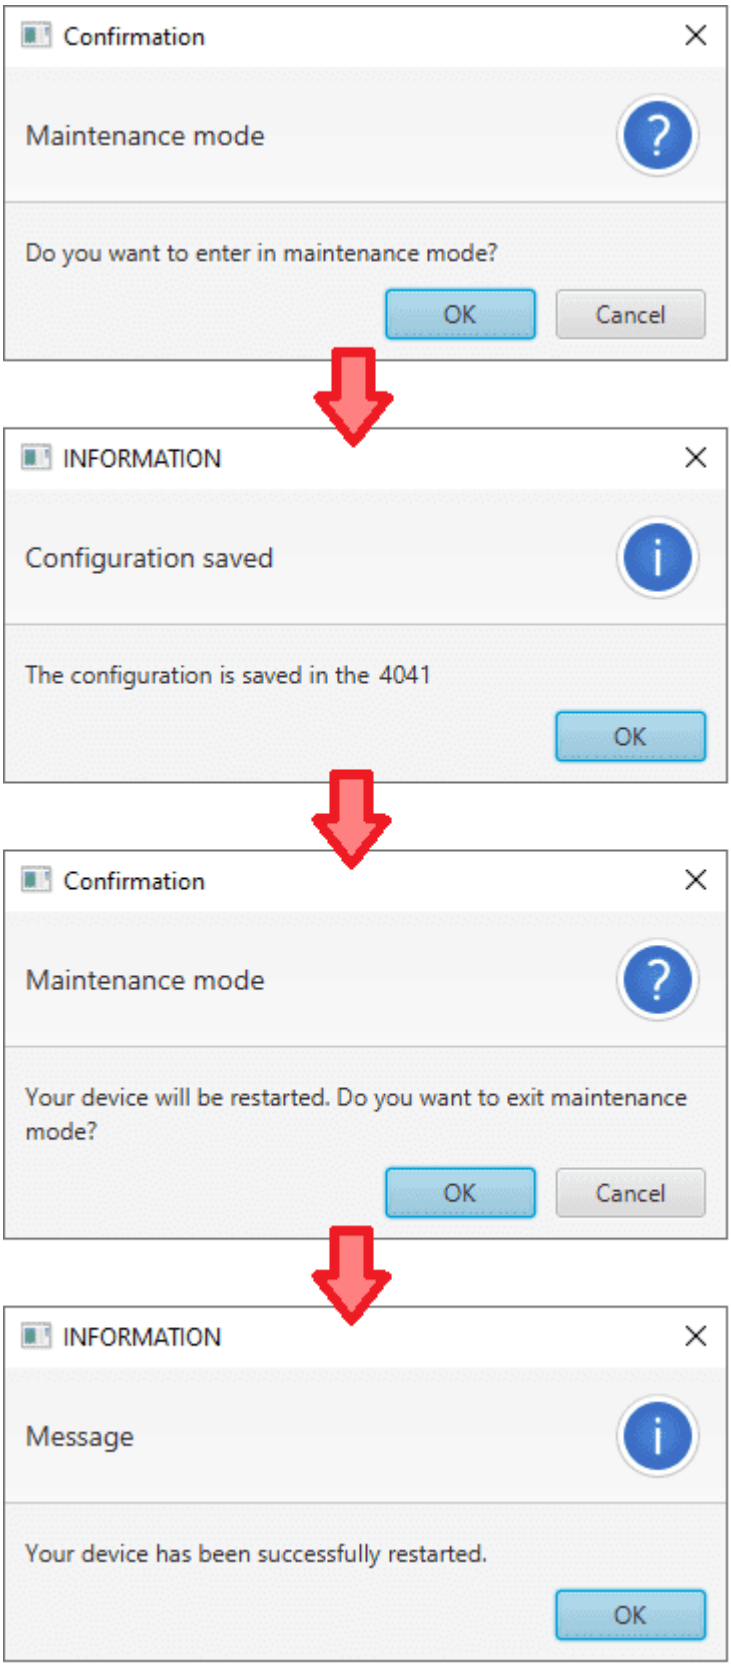

Save and close - Confirmation panels

> **Danger**
>
> As Veronte Autopilot 1x is **reset**, it is **not advisable to save changes during flight tests**.

> **Note**
>
> This button will only appear if an Autopilot 1x is connected, i.e. when working offline this button will not be available.

2. **Downloads**: After modifying a configuration, press the Downloads button to store the configuration in the local storage. Users can store this configuration in an empty folder or in the folder where the previously imported configuration is stored. With the latter option, the "original" configuration will be overwritten by the one with the new changes.

   The user can choose between:

   - **Download PDI**: With this option, the 2 folders with the PDI files are downloaded.
   - **Download backup file**: Download a **.backup file** with the configuration in **binary**.



Download option

> **ⓘ Note**
>
> Depending on the mode the user is in, this option works differently. In **online mode**, the option Download backup file is **always** available. While in **offline mode**, in order to be able to download `.backup`, it is needed to have **previously imported** a `.backup` file (since this file has more information).

> **⚠ Warning**
>
> The `.backup` files are **specific** and **unique** to each Autopilot 1x, therefore, they **cannot be interchanged**. If a `.backup` file is uploaded into a different Autopilot 1x, the existing calibration will be **overwritten**.

If the PDI or backup file has been downloaded successfully, the following message appears:



Downloads - Successfully exported message

3. **Import PDI from repo**: The user can import a configuration file from the GitHub repository and modify it. After that, if the **Save and close** button (1) is pressed, this configuration will be uploaded on the **1x**.
4. **Import PDI from local storage**: The user can import a configuration file from the local storage and modify it. After that, if the **Save and close** button (1) is pressed, this configuration will be loaded into the **1x**.

> ⚠ **Warning**
>
> - If users want to upload a configuration in this way (either from the repo or from local storage), note that only the configuration 'setup' folder is uploaded, the 'operation' folder is not. This means that the operation of the new configuration uploaded to the **Autopilot 1x** will not be saved, but the previous operation will remain.
> - When a configuration is loaded into Veronte Autopilot 1x with a version older than the software version being used, an **automatic migration** from the configuration version to the software version being used will be performed. For more information on this, see the Migrate configuration - Troubleshooting section of this manual.

1. These are the different functions of Autopilot 1x. Each option will be explained in detail in the next sections.


Icon	Item	Description
	**Veronte**	Introduce Autopilot 1x information
	**Connections**	Configure I/O connections on Autopilot 1x
	**Sensors**	Configure parameter sensors
	**Input/Output**	Configure external sensors/ devices and I/ O signals

Icon	Item	Description
	**Control**	Introduce Phases, Modes and Arcade axis configuration
	**Automations**	Configure automatic actions on event detection (go home, change phase...)
	**Communications**	Configure alternative communication channels, statistics, and routing
	**Stick**	Customize transmitter configuration
	**Block Programs**	Customize algorithms executed by Autopilot 1x
	**Devices**	Configure connected devices such as

Icon	Item	Description
		transponder/ ADS-B, camera...
	**Telemetry**	Customize traffic such as log, telemetry...
	**UI**	Customize variable names
	**HIL**	Configure parameters for hardware in the loop simulations
	**Safety**	Customize checklist, block user control in PDI configuration, and safety bits
	**STANAG 4586**	Enables the manual integration of standard and custom messages for autopilot communication

Each panel features the following icon .


By clicking it, the system displays technical details and the names of the **XML files** associated with specific configuration parameters. Upon clicking, the system shows the unique identifiers and file paths required for diagnostics and data consistency verification within the software, as shown in the following example:

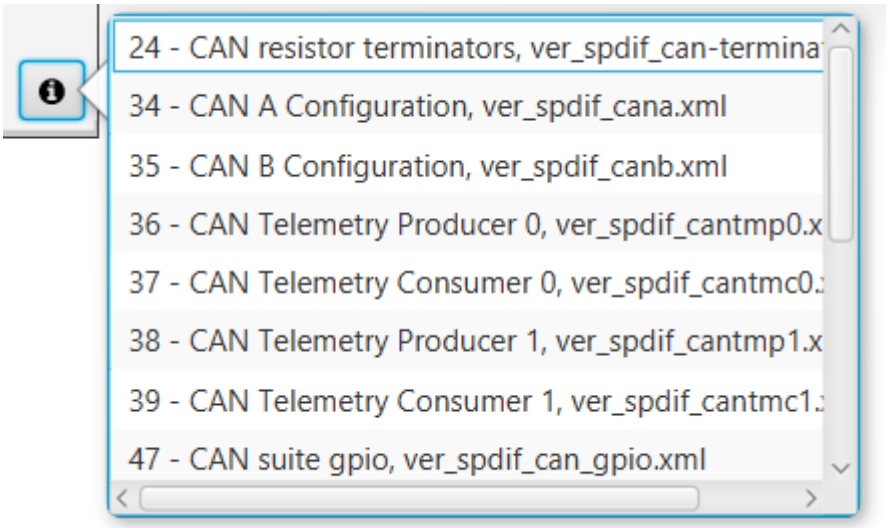

Information button - Example

Veronte

Vehicle name

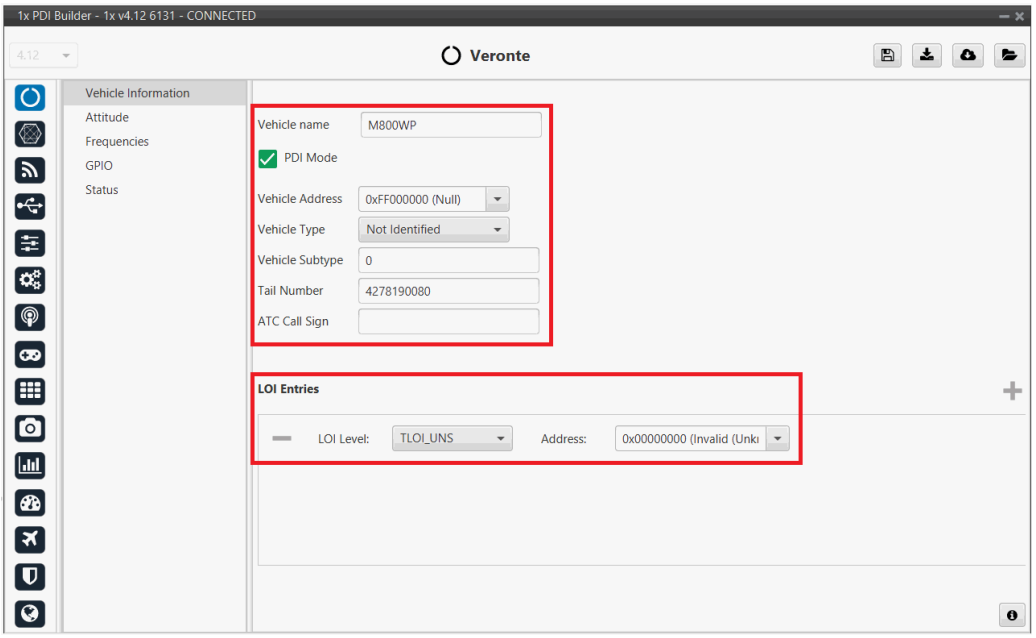

Vehicle name panel

- **Vehicle name**: The user can define the name of the configuration.

- **PDI Mode**: It can be enabled or disabled. PDI mode allows the user to change the setup if Autopilot 1x is not in INI phase.
- **Vehicle Address**: Displays the unique network address of the unit. Ensure this matches the hardware ID for correct communication.
- **Vehicle Type**: Selects the category of UAV. Choose between Not Identified, BAMS UA, Crecerelle.
- **Vehicle Subtype**: Specifies the sub-category or specific model variant.
- **Tail Number**: Vehicle registration number or unique serial identifier.
- **ATC Call Sign**: Defines the radiotelephony call sign used for Air Traffic Control communications and transponder identification.

LOI Entries:


- **LOI Level**: Select the Level of Interoperability to define the degree of control and data sharing between the GCS and the vehicle.
- **Address**: Specify the network address associated with the selected interoperability level.

> ⚠ **Warning**
>
> - **Not** being in **PDI mode**, users cannot perform the following actions if they are not in INI phase:
>   - Reboot Autopilot 1x
>   - Change 1x setup (i.e. save to SD card)
>   - Enter manually in maintenance mode
> - The variable '**System error**' prevents operation in normal mode (**not PDI mode**). A list of all errors that can cause this bit to be set can be found in the Activation System Error bits - Lists of interest section of the **1x Software Manual**.
> - If Autopilot 1x has '**sensors errors**' and is in normal mode (**not PDI mode**), the user will not be able to switch to another flight phase, it will remain in **INI phase**.

> **Danger**
>
> PDI mode is intended for development purposes since, as detailed above, it **allows flight phase changes with system, sensor and PDI errors**.
>
> It is highly recommended to limit its use to simulation and ground testing of peripherals during the development phase.
>
> Therefore, as **it is not advisable to operate in PDI mode**, please disable it once the configuration is finished and intended to be used in flight.

Attitude


This menu allows the user to define the orientation of the autopilot with respect to the platform once it is installed. Aircraft axis are defined according to international aviation convention. Autopilot 1x axis are drawn on the autopilot's external case as defined in the Orientation - Hardware Installation section of the **1x Hardware Manual**.

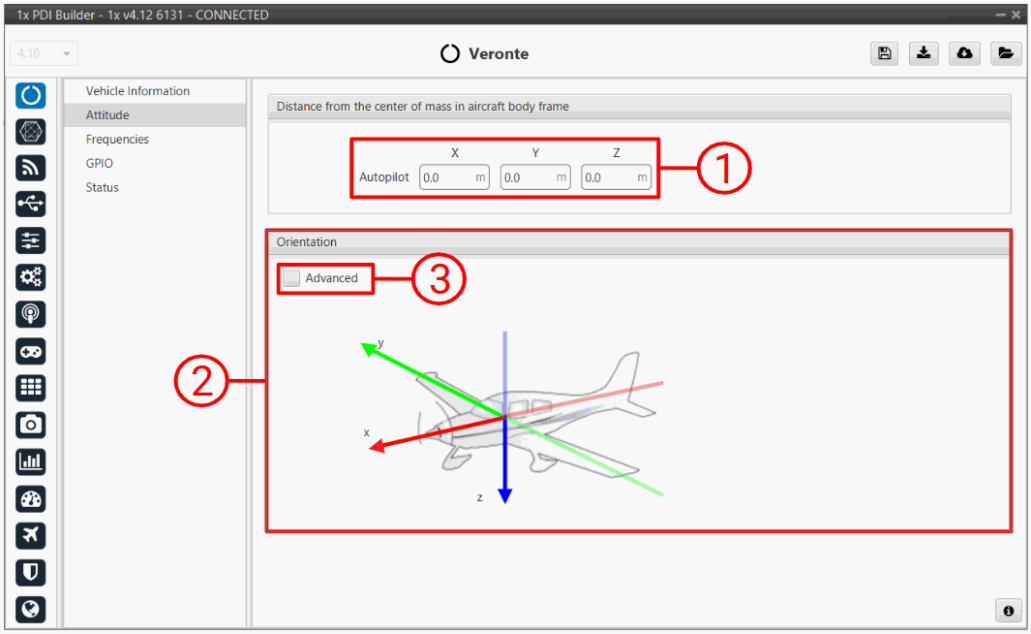


Attitude panel

1. **Distance from the center of mass in aircraft body frame**: The autopilot's distance from the center of mass must be defined. This distance is entered in meters and accordingly to aircraft axis. If the autopilot is not

located in the center of mass, it will measure a non-zero acceleration when turning. Distance from the center of mass in aircraft body frame is used to compensate this value. An example is presented below:

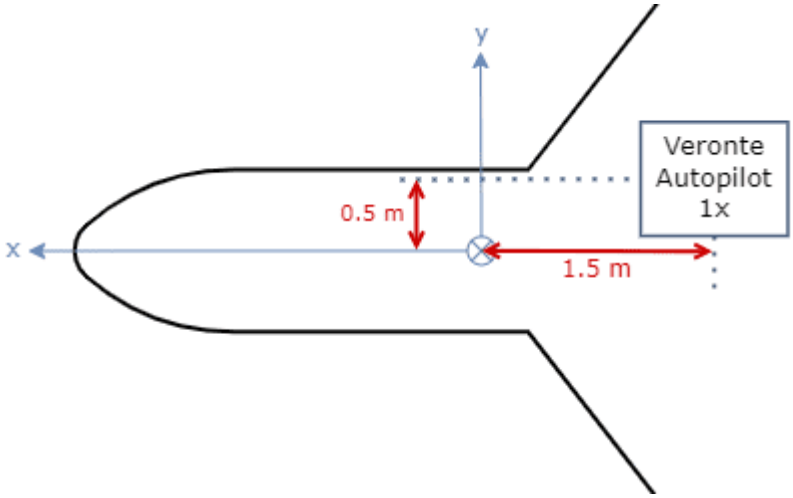


Distance from the center of mass in aircraft body frame - Example

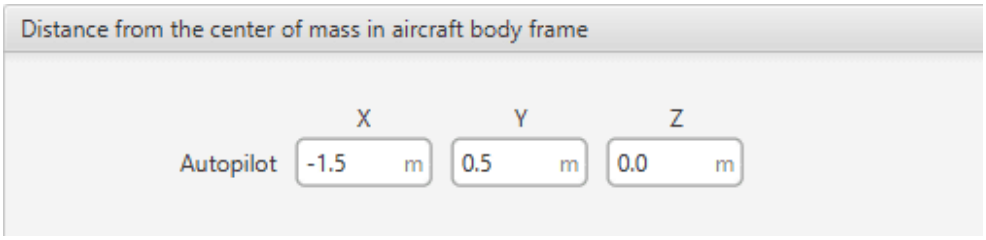


Distance from the center of mass in aircraft body frame - Example

2. **Orientation**: It is not compulsory to install the autopilot aligned with the aircraft axis. In order to indicate the autopilot's relative position inside the platform, select the advanced option (**3**). A matrix relating vehicle axis and autopilot axis is needed to be filled in. The case of a non-orthogonal installation can be covered.

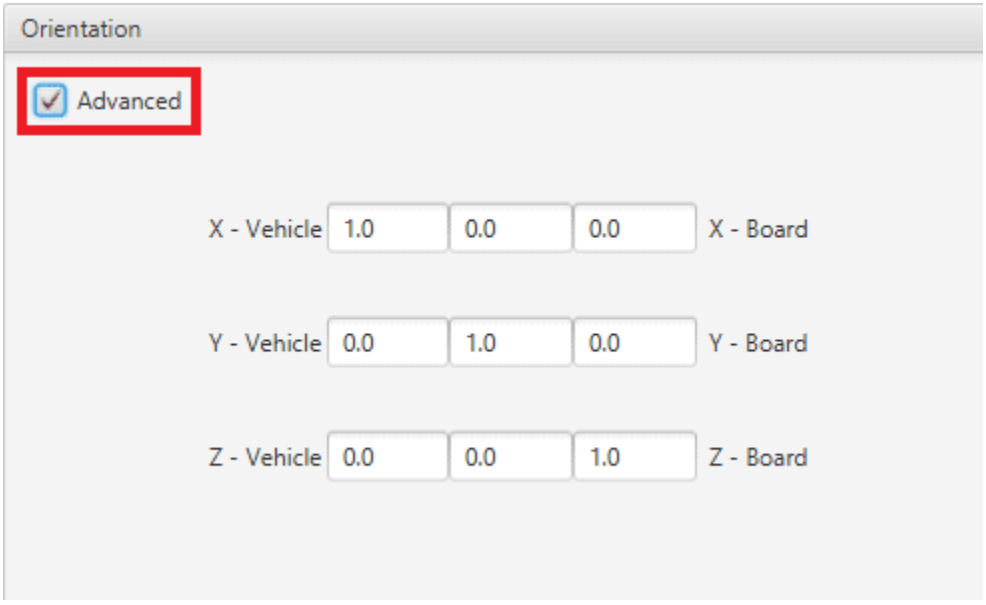

Advanced orientation


> **Note**
>
> If only a simple rotation is required, for example, a -90º rotation in the Z axis, it is simpler to select the correct axis directly in the 'plane':

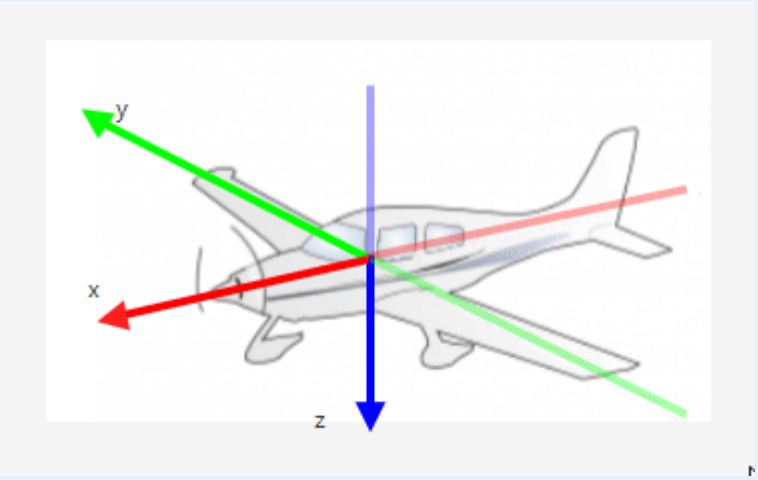

Change orientation

Frequencies

The frequency of the GNC task refers to the maximum working frequency of the core, with **400 Hz** being the **maximum possible**.

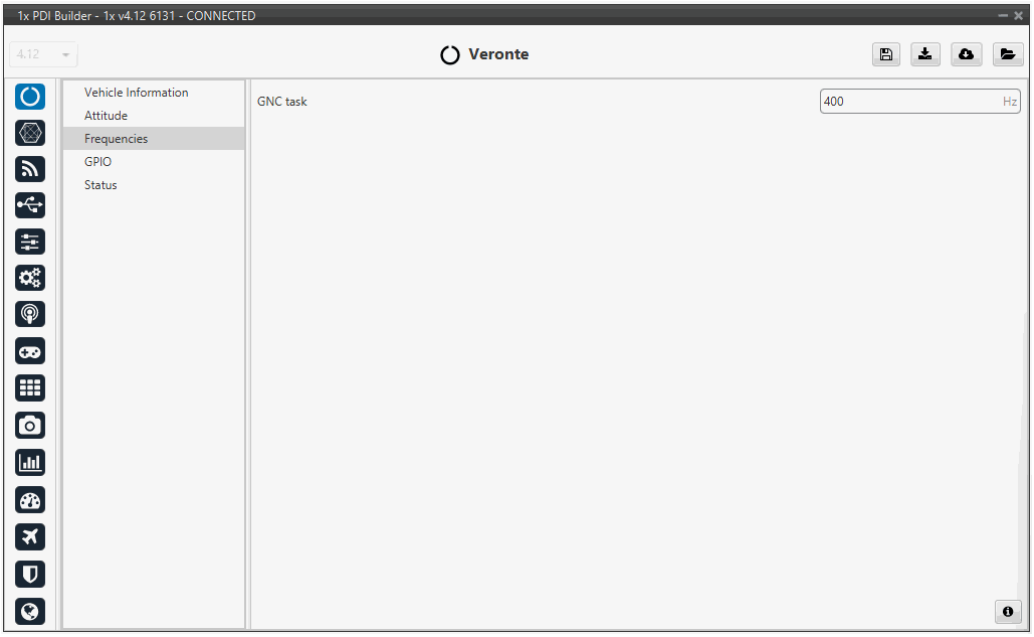


Frequencies panel

> **⚠ Warning**
>
> 400 Hz can be used only for simple configurations, so it is often necessary to reduce the frequency to 250-300 Hz. To find out why the user should reduce the GNC Task frequency, see Reducing GNC Task frequency - Troubleshooting section of this manual.

GPIO

In this tab each individual GPIO behavior can be configured:

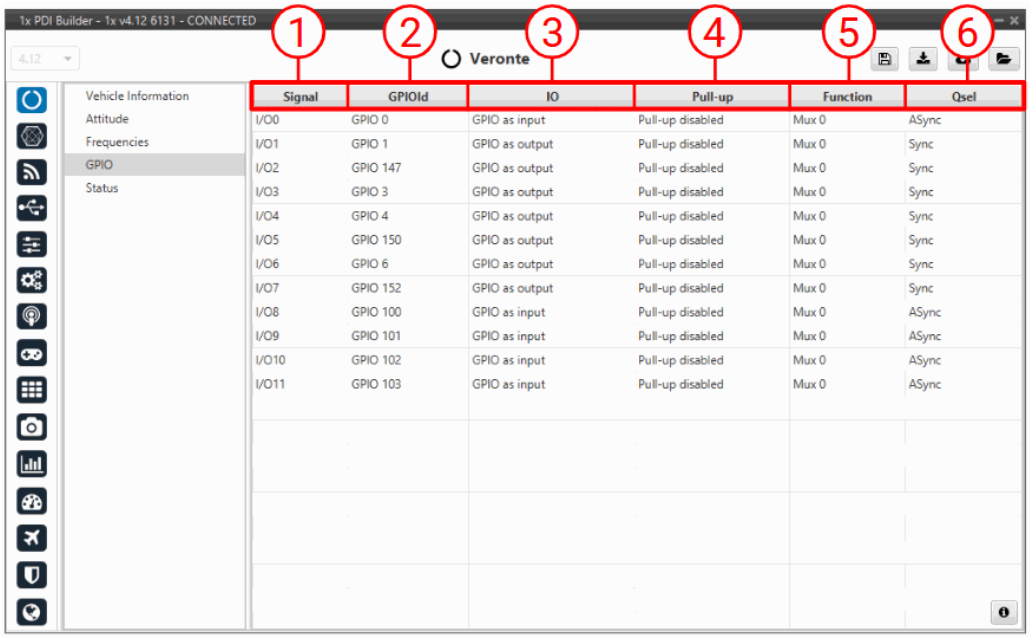

GPIO panel


1. **Signal**: Pin ID as described in Pinout - Hardware Installation section of the **1x Hardware Manual**.
2. **GPIOId**: GPIO ID of the microcontroller.
3. **IO**: Define GPIO as an input or output.
4. **Pull-up**: Enable or disable the pull-up resistance.
5. **Function**: Mux 0: GPIO, Mux 1: PWM, Mux 2, Mux 3, etc. These are the different functionalities that the GPIO can have, this depends on the multiplexer.

> **Note**
>
> When users set **Function** to "Mux 1", it indicates that the corresponding pin is disabled as GPIO and enabled as PWM. Consequently, when **saving this change**, the corresponding PWM pin of the PWM panel should automatically be added as PWM and "disappear" as GPIO. This behavior also happens the other way around, i.e. when switching from PWM (Mux 1) to GPIO (Mux 0).
>
> > **Warning**
> >
> > **Once the change has been saved**, check that the corresponding PWM pin has been added to the PWM panel or that the corresponding GPIO pin has been added to the GPIO panel, depending on the change that has been made.

6. **Qsel**: This is the "input qualification", it is used to control how the value of a GPIO is evaluated. The available options are:
   - **Sync**: The value is taken as whatever is present at the time it is checked (synchronously). This is the default mode of all GPIO pins.
   - **3 Samples**: The value is checked 3 times and the value is only changed when the 3 times are the same.
   - **6 Samples**: Same as before, but checking 6 times instead of 3.
   - **ASync**: No checks are performed. It is used when it is not used as GPIO.

Status

This option enables the periodic sending of the status message that **Veronte Link** uses to recognize the Autopilot 1x.

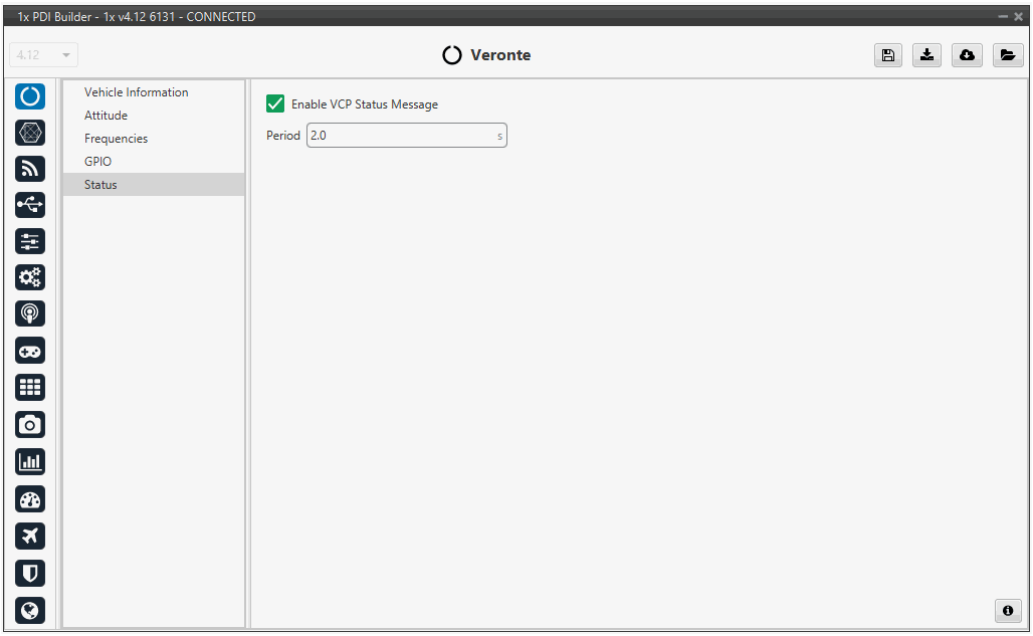

Status panel

- **Period**: Enter a desired period to send repeatedly the status message.

> ⚠ **Warning**
>
> If the enable **VPC Status Message** function is not enabled, communication via RS-232 will be lost and the connected 1x unit will no longer appear. To reestablish the connection, users must set the unit to maintenance mode (forcing it).

> ⓘ **Note**
>
> VCP is the Veronte Communication Protocol. To know more, read the VCP user manual.

Connections


Here, you can configure the Input/Output ports of the autopilot. Depending on the selected port, different parameters will need to be provided.

Each connection is associated with a specific pin number. For more details, see the Pinout - Hardware Installation section of the **1x Hardware Manual**.

ADC

ADC stands for Analog-to-Digital Converter. This connection is used by analog sensors. These sensors provide a voltage readout that needs to be converted into the actual measured variable, e.g., temperature, fuel volume, etc.

Autopilot 1x is equipped with 5 connections of this kind. Every ADC connection that is set requires an integer variable associated where the voltage readout will be stored. The **maximum voltage** of the ADC connection is **3.3 V**.

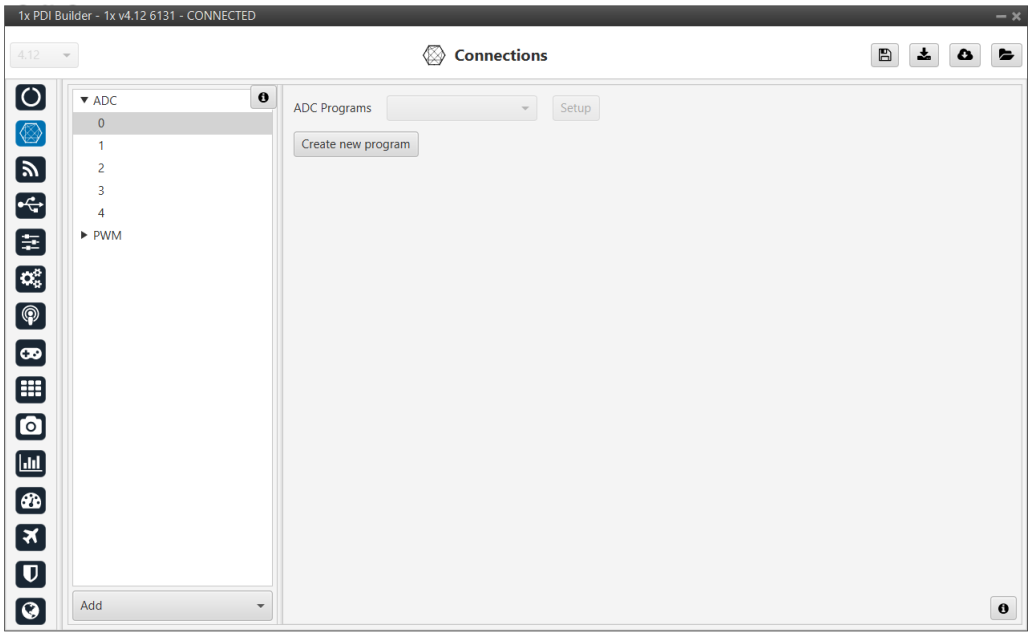


ADC panel

To convert the input ADC value to the physical variable it represents, the user needs to create a new program. See more information about programs in the Block Programs section of this manual.

Application example


Let us consider a Fuel Level Sensor whose datasheet provides a direct relation of the voltage readout and the fuel volume (in L) through the polynomial $y = -0.0498x^4 + 0.3002x^3 - 0.3083x^2 + 1.2123x + 0.15$, where y is the fuel volume and x is the sensor voltage.

Creating a new program, the above equation can be reproduced. An example of how to do it is presented below.

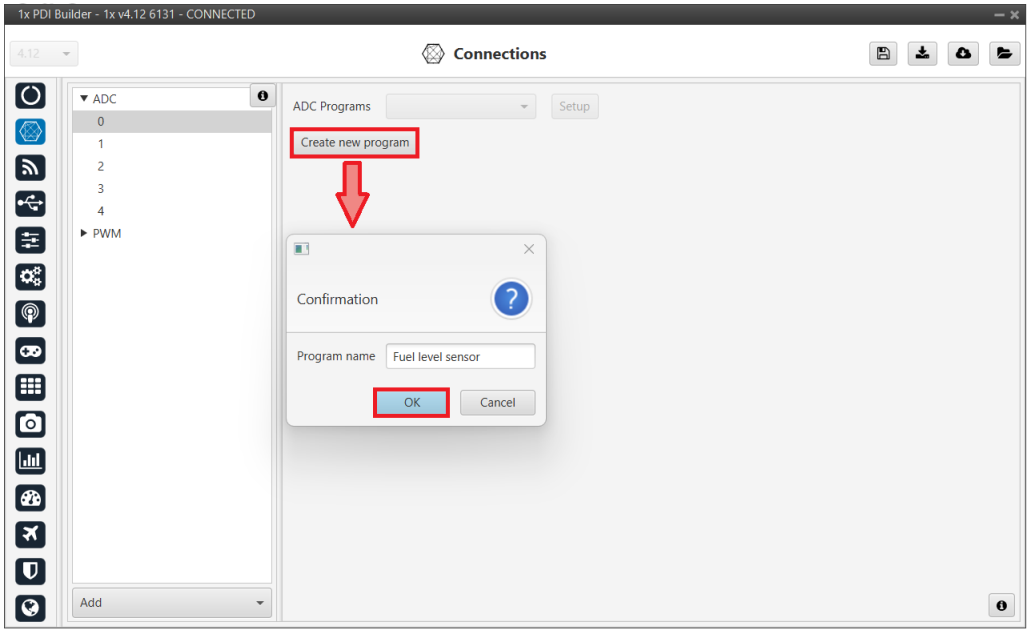


Create ADC program

When the ADC program is created, a default block program is also created.

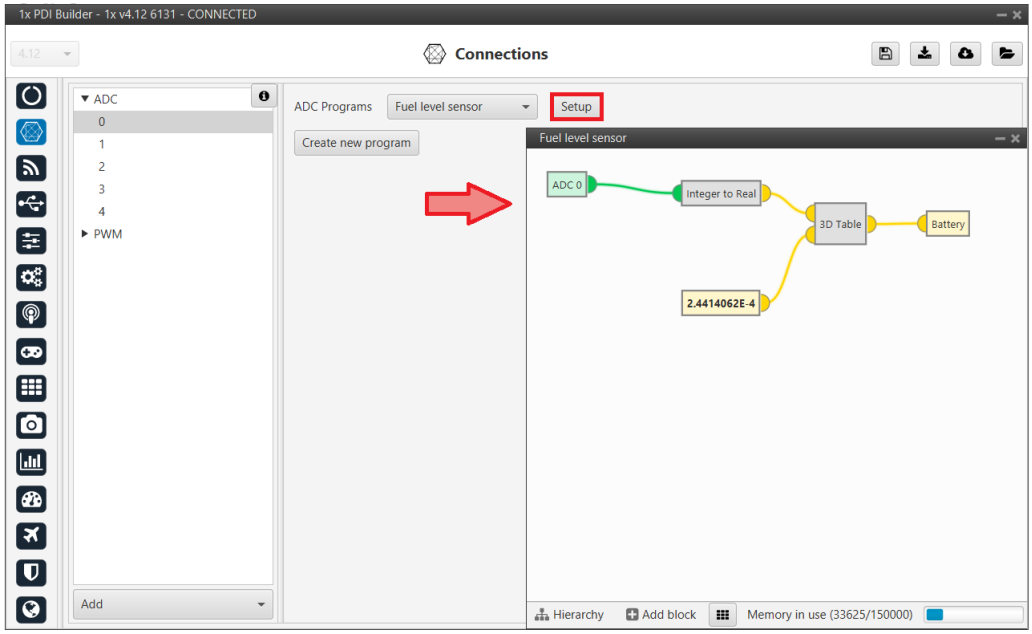

ADC default program

Now, the program has to be customized for this application. See more information about programs in the Block Programs section of this manual.

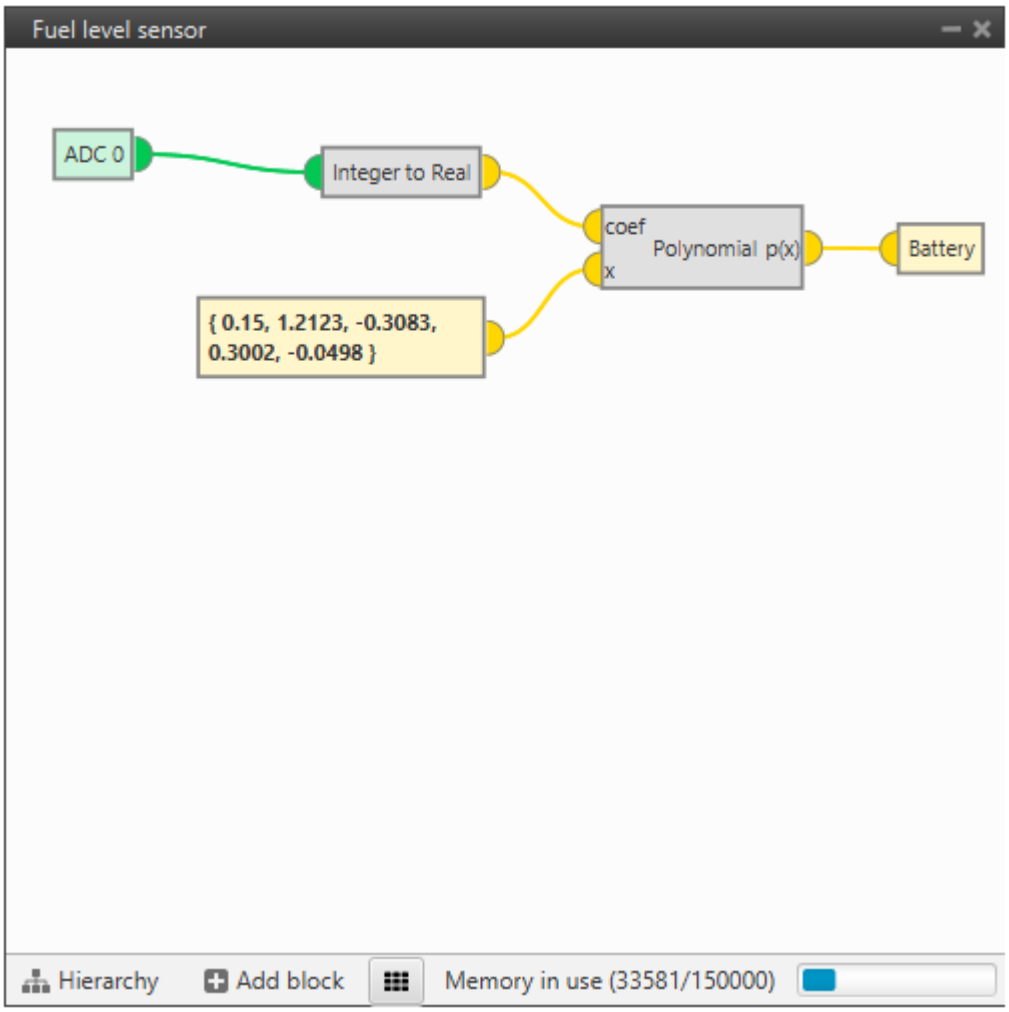


ADC conversion for a Fuel Level Sensor

The fuel remaining in the tank is saved in a user variable, which can be used for displaying or warning purposes.

Note

- The ADC variable is first converted from integer to real, and then the polynomial is applied.
- This program can now be modified by clicking in '**Setup**' in this menu or in the Block Programs menu.

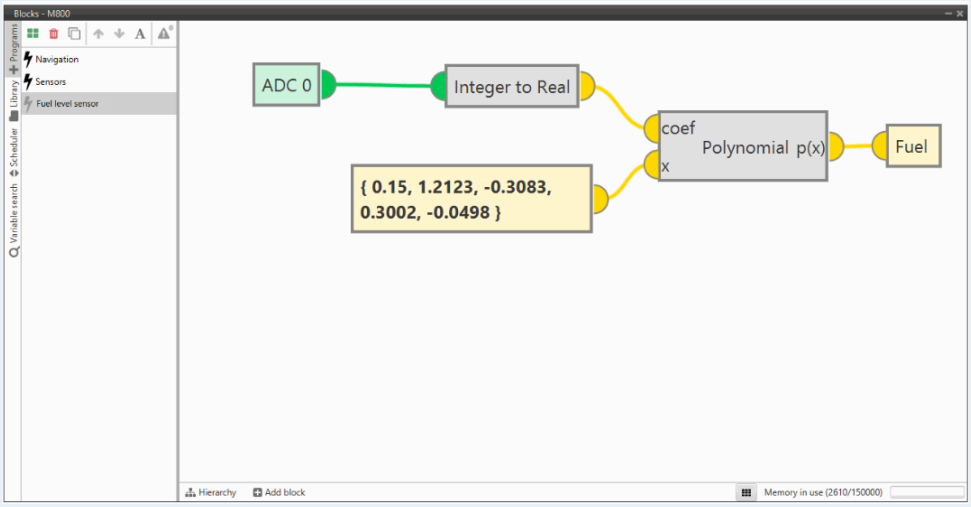


ADC program in Block Programs

PWM

Output pins produce PWM or I/O signals that are used to move the different servos and actuators of the platform.


The acronym PWM corresponds to Pulse Width Modulation. 1x sends a pulse with a certain width that is received by the servo/actuator, and according to the width of such pulse, it changes its behavior. A wide pulse will correspond to a big movement and a narrow one to a small movement.

By default, all PWM / I/O pins are configured as PWM output. So, to configure them as I/O, it is necessary to click Add:

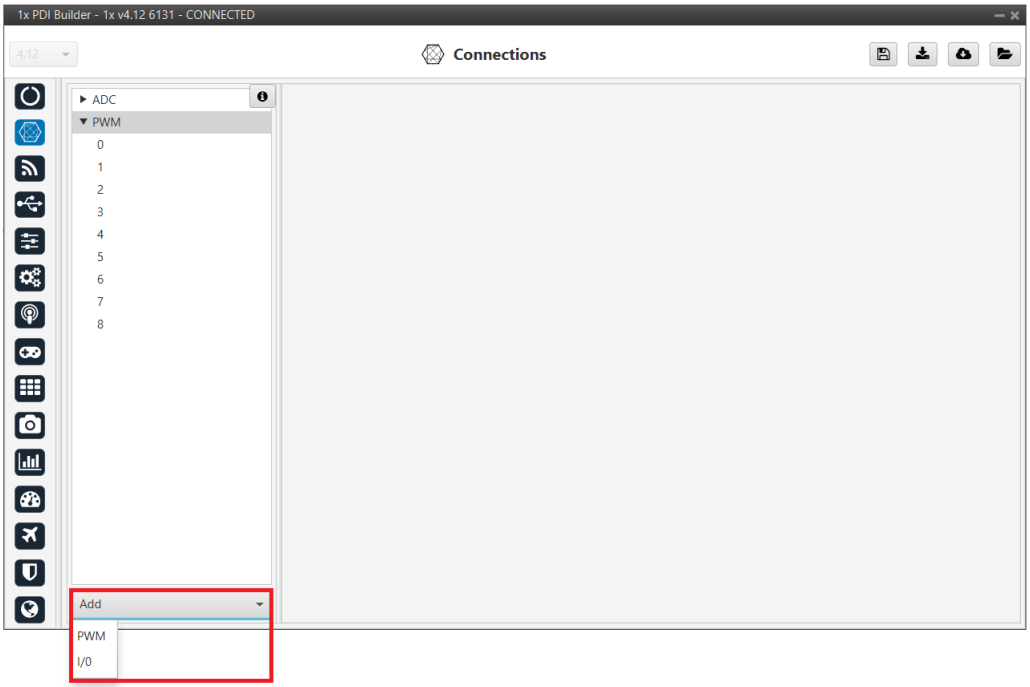

Add PWM


Then, select the I/O pin the user wants to change instead of PWM. As can be seen, pins are interchangeable.

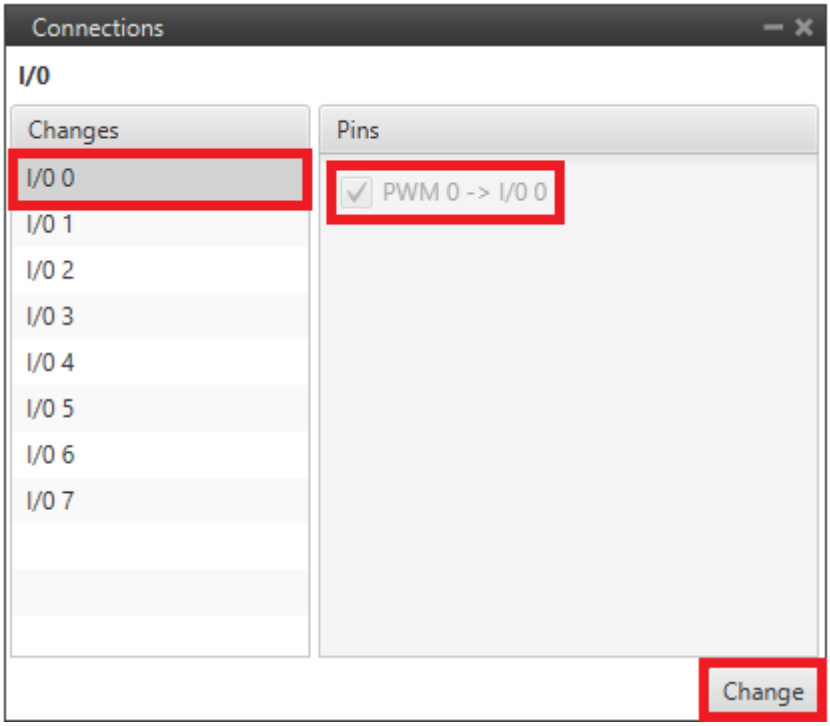

PWM change

> **⚠ Warning**
>
> Pins currently selected as **I/O** will **not be displayed** as they are not configurable in this mode. However, they can be reselected and reconfigured as PWM.

> **ⓘ Note**
>
> When a pin is added as PWM, it is disabled as I/O and enabled as PWM. Hence, in the GPIO panel of **Veronte menu**, the "Function" parameter shall change to "**Mux 1**".

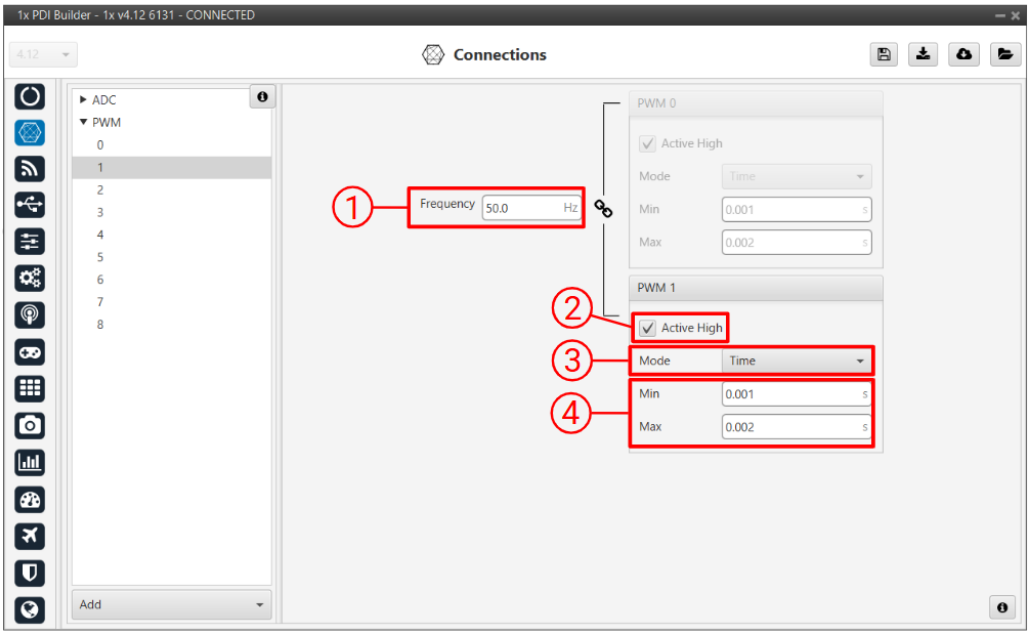

PWM panel

In this menu, the following parameters can be configured:

1. **Frequency**: PWM output frequency. This option determines the period of the pulses sent by the autopilot. The PWM is built in pairs inside the autopilot, and that is why the frequency is indicated in pairs, i.e. when the frequency of PWM 0 is changed, the one of PWM 1 also changes.


> ⚠ **Warning**
>
> It is recommended that this frequency is lower than or equal to the GNC frequency, and always a multiple of it, in order to avoid noise caused by phase shift.

The following table shows the PWM pairs as configured in Autopilot 1x.

PWM 0	PWM 1
PWM 2	PWM 3
PWM 4	PWM 5
PWM 6	PWM 7
PWM 8	PWM 9
PWM 10	PWM 11
PWM 12	PWM 13
PWM 14	PWM 15
PWM 16	PWM 17
PWM 18	PWM 19

2. **Active High**: Polarity high or low (high if enabled).


3. **Mode**: The available options are **Time** and **Duty cycle**.
    - **Time**: The values indicated in **Min** and **Max** parameters are expressed in time units.

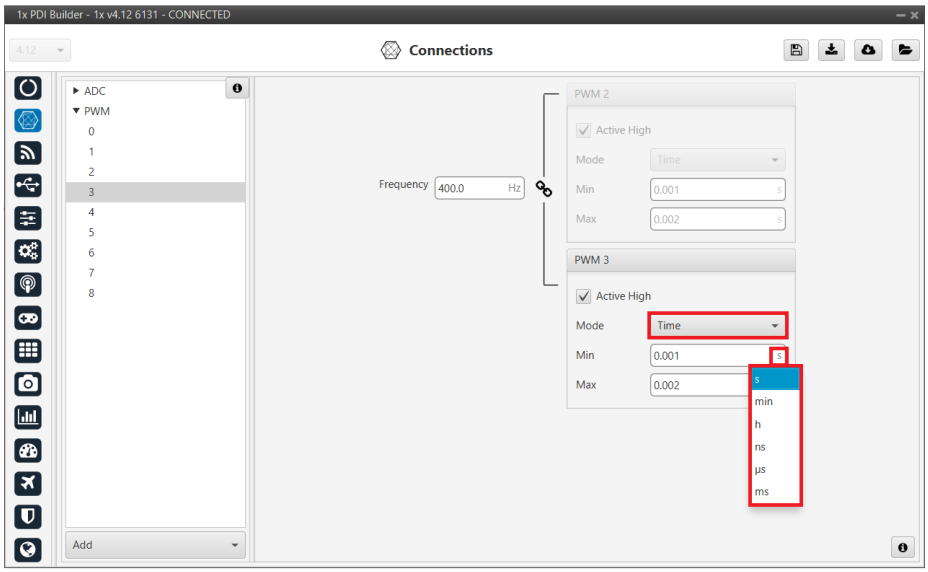


PWM panel - Time units

    - **Duty cycle**: This option is a different way of indicating the pulse width. Now the value indicated in **Min** and **Max** parameters is a percentage which corresponds to the relation between the pulse width over the total period of the sent signal.

      So a 100% duty cycle will correspond to a signal with a constant value of 1, while a 0% duty cycle implies a constant signal with value 0. Between these two extremes, the pulse width can vary as in the examples shown in the following figure.

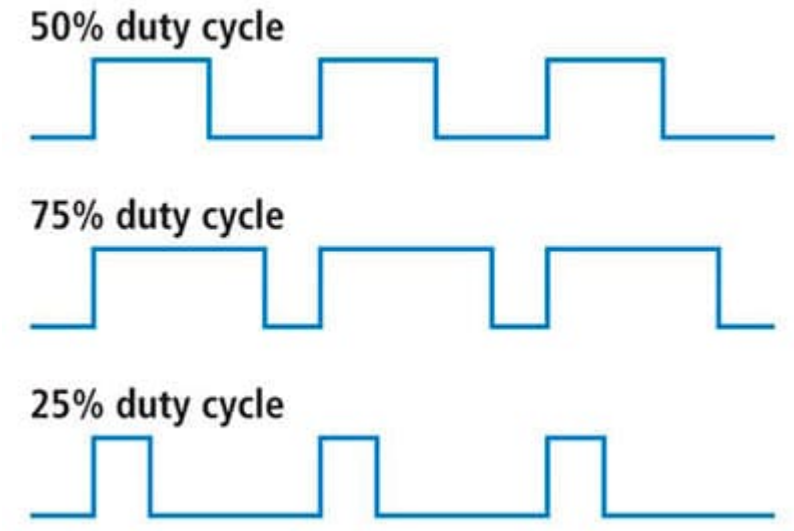

Duty cycle
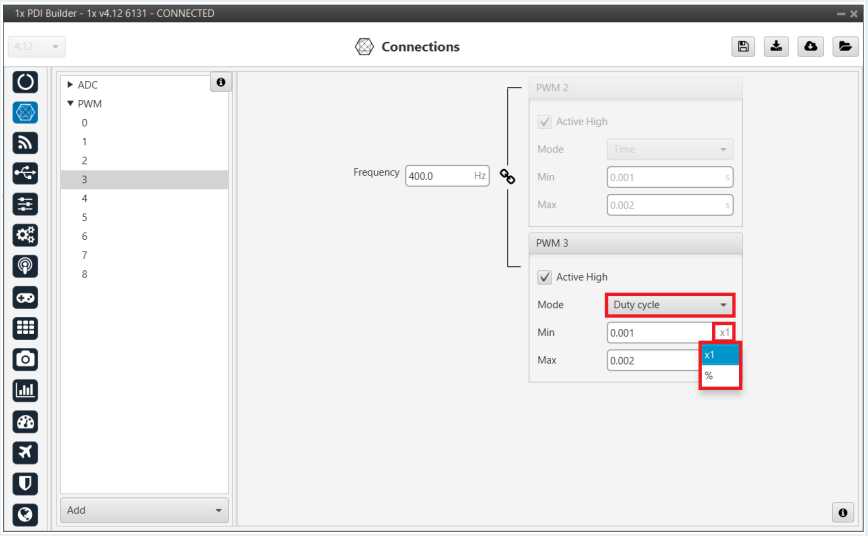
> **Note**
>
> Duty cycle percentages can be expressed in percent and per unit.
>
> 
>
>
> **Duty cycle - percent**

4. **Min/Max**: These parameters are the pulse width values that will make the servo/actuator go to its **lowest/highest position**. It will be the output when the PWM message specifies **0/4095**.

   As an example let's consider the servo of an aircraft elevator, a pulse sent by Autopilot 1x of 0.9 ms will correspond with the lowest point of the servo range (-30 degrees for example). On the other hand, a pulse of 2.1 ms will make the servo go to its top position (for example 30 degrees).

> **Summary**
>
> A PWM is a signal which consists of a series of pulses having a width determined by a percentage over a range specified by the parameters Min and Max. On the other hand, the I/O is a signal with a constant value (1,0) or with a single pulse (1,0).

Sensors

Sensors menu allows to configure any external or internal sensor of Veronte Autopilot 1x.

Accelerometer

Veronte Autopilot 1x incorporates 3 Inertial Measurement Units (IMUs) that allow the 1x system to measure different variables and that are the main navigation data source. In addition, external IMUs can also be used for this purpose.

From the IMU, the user can configure the accelerometer and gyroscope. The first one is explained below.

The user can choose between 3 types of source for the accelerometer:

- **Internal (Internal 2/Internal 3)**: Autopilot 1x uses the internal sensor. The internal sensors available depend on the hardware version of Autopilot 1x.
- **External sensor 0-1**: Autopilot 1x uses values received from custom messages from a no-integrated external sensor.
- **Decimal var sensor 0-1**: Autopilot 1x uses a decimal value provided by an external sensor.


It is **possible** to select **multiple** of these sensors for the navigation algorithm, so that Veronte Autopilot 1x performs a combination of all the measurements of the selected accelerometers. This combination consists of calculating the means and variances of each of these accelerometers in a given time (**time constant for mean and time constant for variance**) to obtain a mean weighted with the inverse of the variance. The lower the variance, the greater the weight of that sensor in the mean.

> ⚠ **Warning**
>
> The **fusion of several IMUs** is **strongly recommended** as default configuration. This way, if one IMU fails, the EKF still receives the measurements provided by the remaining ones.

Sensor


- **Def. sensor**: A default sensor must be chosen. If all selected sensors fail, the measurement value will be that of the default sensor.

> **Note**
>
> The selected sensor will be **automatically included** in the list of chosen sensors, and it will **not be possible to remove it** from that list.

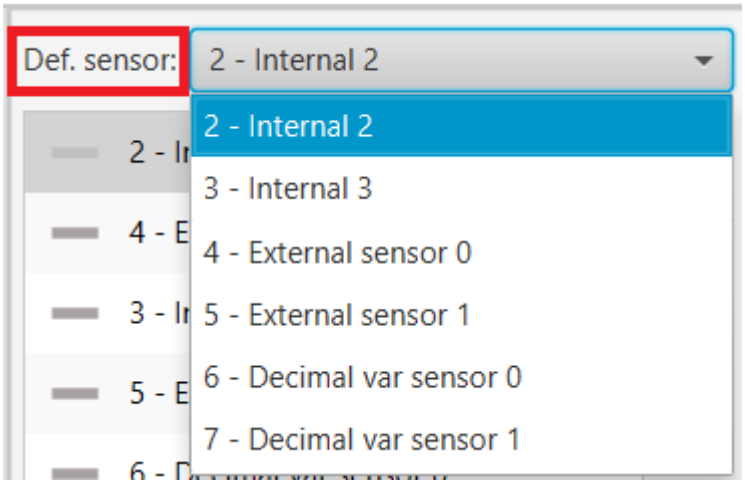

Accelerometer panel - Def. sensor


To select the desired accelerometers, simply add them to the list. To do this, click on the ➕ icon and select them in the panel displayed:

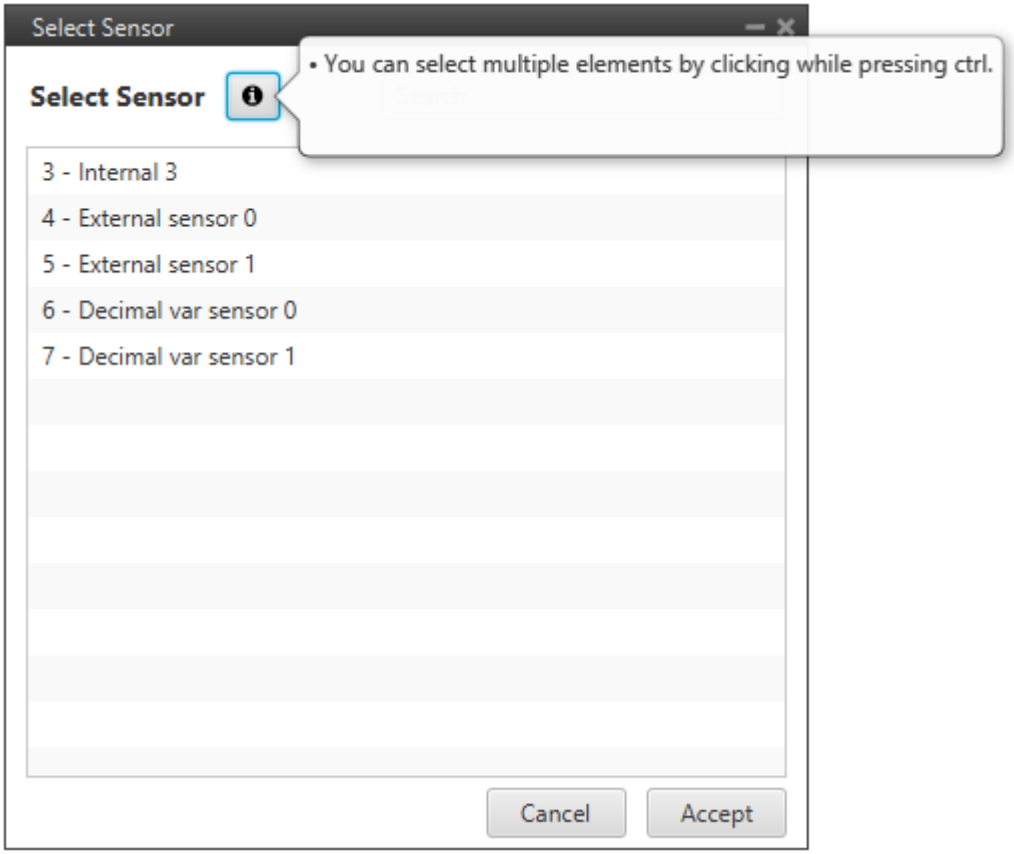

Accelerometer panel - Add accelerometers

Internal 2 / Internal 3

This panel displays the possible parameters that can be configured for the **Internal 2** and **Internal 3**.

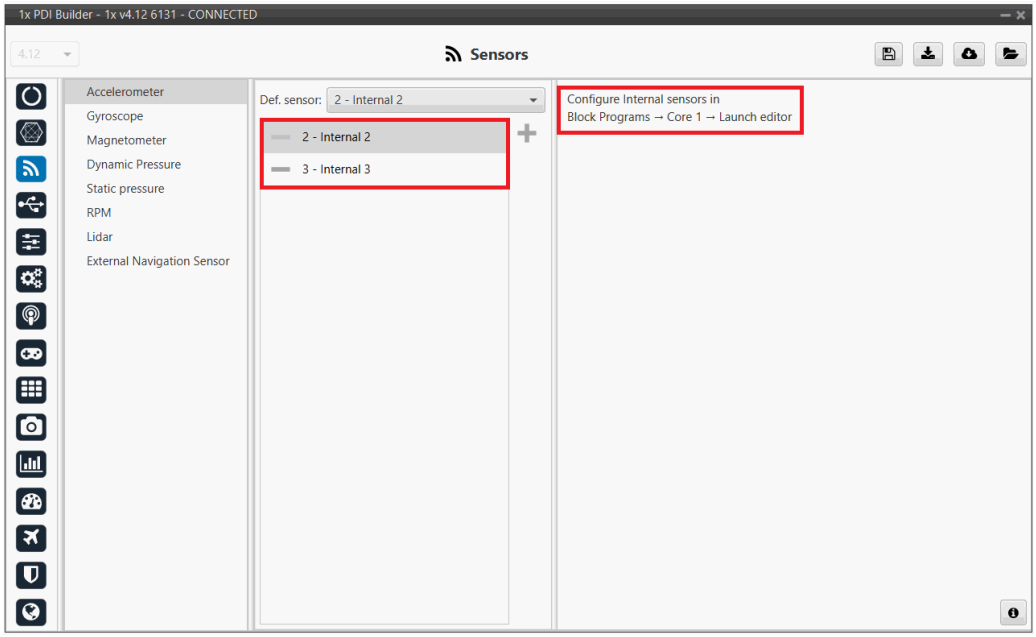


Accelerometer panel - Internal 2-3 configuration

Internal sensors are configured in the Core 1 - Block Programs section.

External sensor 0-1

In this panel, the user must configure some parameters in order to correctly receive and manage the measurements from the external sensor.

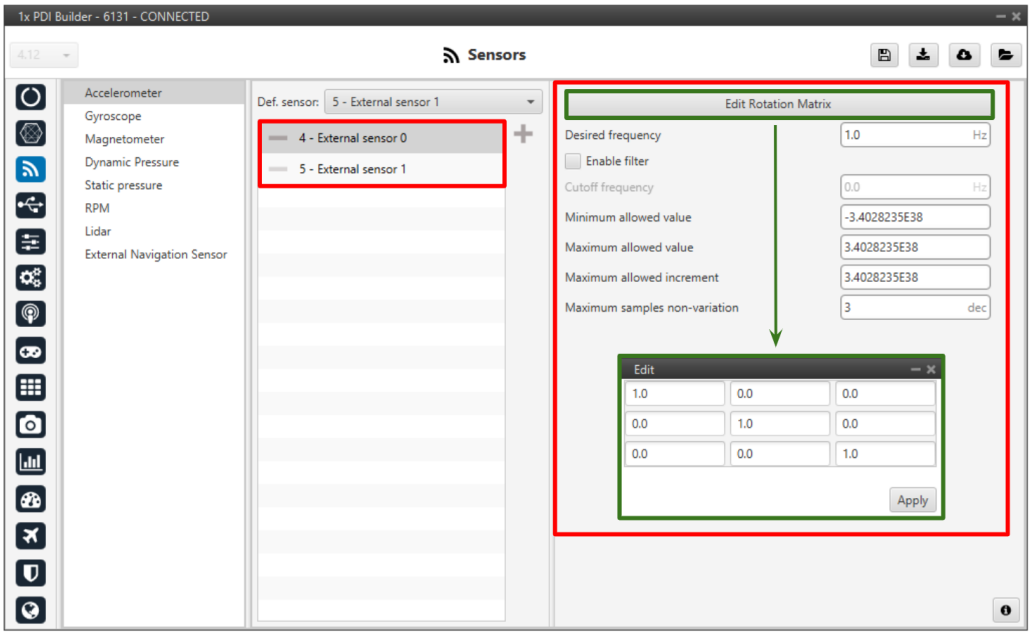

Accelerometer panel - External sensor 0-1 configuration


- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.

  > **Error**
  >
  > The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

  For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.
- **Desired frequency**: The sensor measurement shall only be considered correct if the frequency at which the message with this measurement is received is $\geq 90\%$ of the **desired frequency** defined here by the user. This frequency is stored in the variables External IMU 0 accelerometer reception frequency/External IMU 1 accelerometer reception frequency (RVars 1484 and 1486 respectively).
  For more information on these variables, see the Real Variables (RVar) - 32 Bits - Lists of interest section of the **1x Software Manual**.
- **Enable filter**: Enables a butterworth second order low-pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

Decimal var sensor 0-1

In this panel it is possible to configure real variables provided by an external sensor.

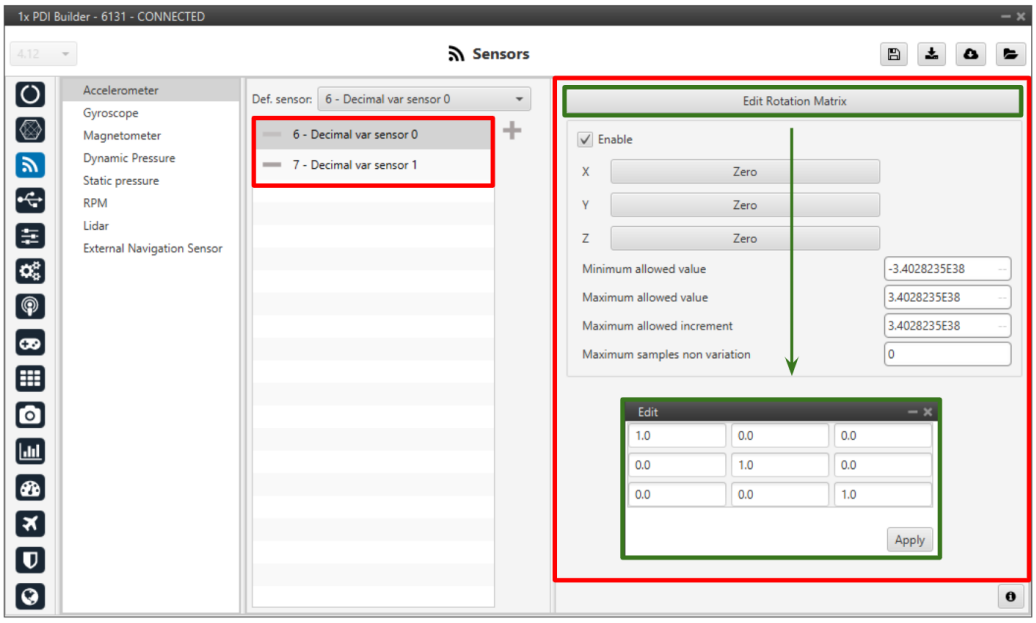

Accelerometer panel - Decimal var sensor 0-1 configuration

- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.

  > **Error**
  >
  > The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

  For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.
- **Enable**: When enabled, the user must select the real user variables for each axis (X,Y,Z) in which the values have been stored.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

The configuration process must be done using custom messages. This is to be configured in the Custom Messages panel of the **Input/Output menu**. The configuration will depend on the device in use and its communication protocol.

Gyroscope

The gyroscope from the IMU can be configured as explained in the panels shown below.

The user can choose between 3 types of source for the gyroscope:


- **Internal (Internal 2 / Internal 3)**: Autopilot 1x uses the internal sensor. The internal sensors available depend on the hardware version of Autopilot 1x.
- **External sensor 0-1**: Autopilot 1x uses values received from custom messages from a no-integrated external sensor.
- **Decimal var sensor 0-1**: Autopilot 1x uses a decimal value provided by an external sensor.

It is **possible** to select **multiple** of these sensors for the navigation algorithm, so that Veronte Autopilot 1x performs a combination of all the measurements of the selected gyroscopes. This combination consists of calculating the means and variances of each of these gyroscopes in a given time (**time constant for mean and time constant for variance**) to obtain a mean weighted with the inverse of the variance. The lower the variance, the greater the weight of that sensor in the mean.

Sensor


- **Def. sensor**: A default sensor must be chosen. If all selected sensors fail, the measurement value will be that of the default sensor.

> ⓘ **Note**
> The selected sensor will be **automatically included** in the list of chosen sensors, and it will **not be possible to remove it** from that list.

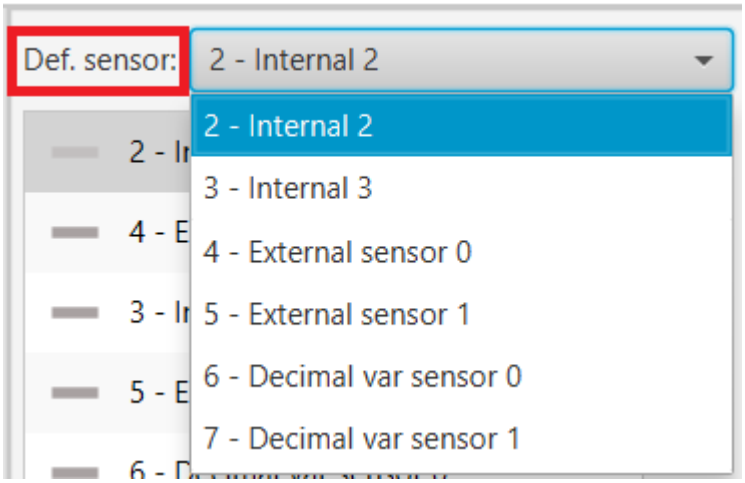

Gyroscope panel - Def. sensor


To select the desired gyroscopes, simply add them to the list. To do this, click on the ➕ icon and select them in the panel displayed:

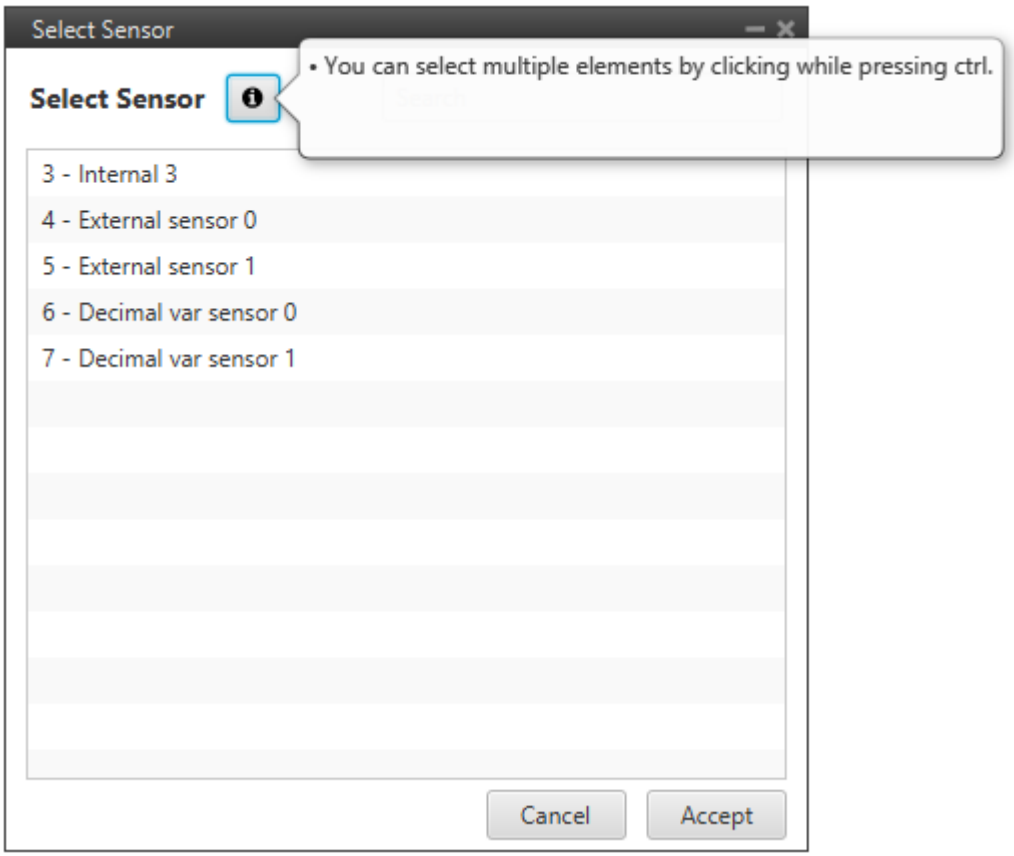

Gyroscope panel - Add gyroscopes

Internal 2 / Internal 3

This panel displays the possible parameters that can be configured for the **Internal 2** and **Internal 3**.

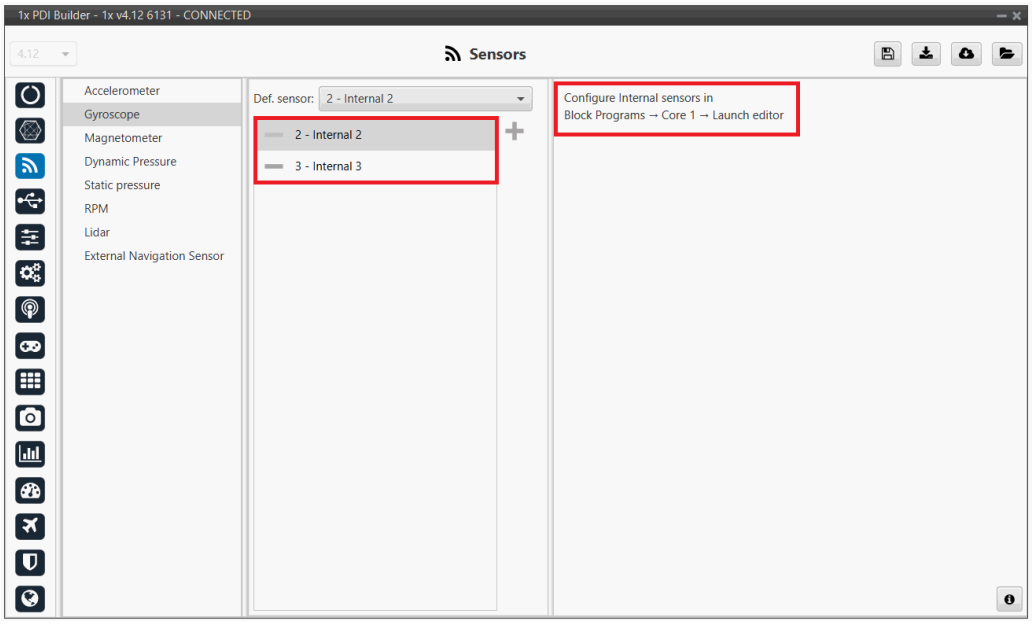


Gyroscope panel - Internal 2-3 configuration

Internal sensors are configured in the Core 1 - Block Programs section.

External sensor 0-1

In this panel, the user must configure some parameters in order to correctly receive and manage the measurements from the external sensor.

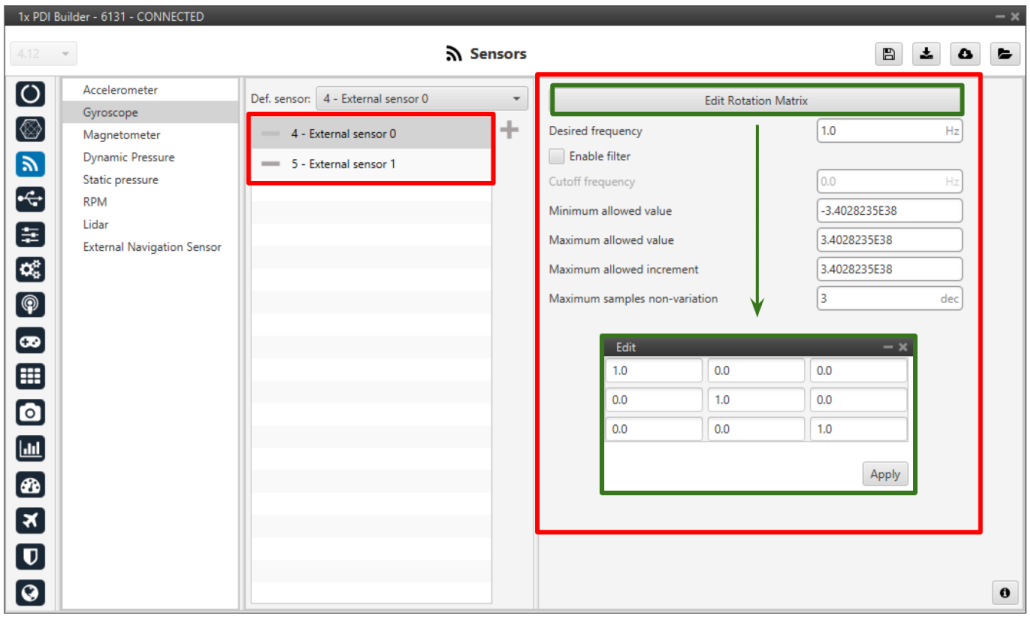

Gyroscope panel - External sensor 0-1 configuration

- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.


> **Error**
>
> The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.

- **Desired frequency**: The sensor measurement shall only be considered correct if the frequency at which the message with this measurement is received is $\geq 90\%$ of the **desired frequency** defined here by the user. This frequency is stored in the **RVars 1488-1489**.
  For more information on these variables, see the Real Variables (RVar) - 32 Bits - Lists of interest section of the **1x Software Manual**.
- **Enable filter**: Enables a butterworth second order low-pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

Decimal var sensor 0-1

In this panel it is possible to configure real variables provided by an external sensor.

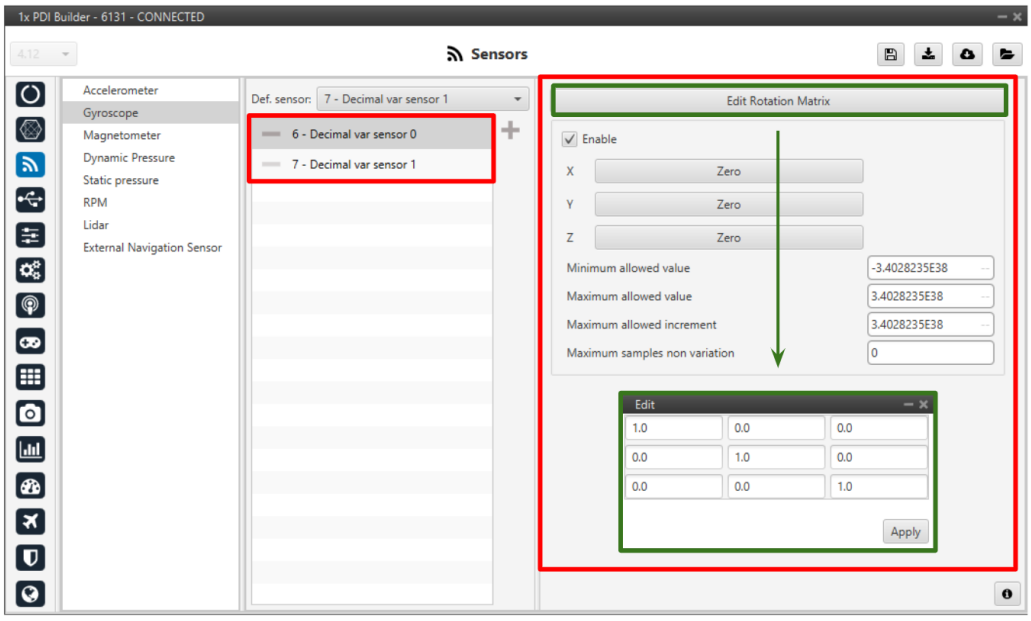

Gyroscope panel - Decimal var sensor 0-1 configuration

- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.

  > **Error**
  >
  > The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

  For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.
- **Enable**: When enabled, the user must select the real user variables for each axis (X,Y,Z) in which the values have been stored.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

The configuration process must be done using custom messages. This is to be configured in the Custom Messages panel of the **Input/Output menu**. The configuration will depend on the device in use and its communication protocol.

Magnetometer

Veronte Autopilot 1x incorporates internal magnetometers that allow the 1x system to measure the magnetic field. In addition, external magnetometers can also be used for this purpose.

The user can choose between 4 types of source for the magnetometer.


- **Internal (Internal 0 / Internal 2)**: Autopilot 1x uses the internal sensor. The internal sensors available depend on the hardware version of Autopilot 1x.
- **External sensor 0-1**: Autopilot 1x uses values received from custom messages from a no-integrated external sensor.
- **Decimal var sensor 0-1**: Autopilot 1x uses a decimal value provided by a no-integrated external sensor.
- **External (LIS3MDL / RM3100)**: Autopilot 1x uses the information from one of the compatible external magnetometers.

It is **possible** to select **multiple** of these sensors for the navigation algorithm, so the user will have **redundancy** in magnetometer sensor.

> **Note**
>
> Veronte Autopilot 1x is designed to automatically detect any of the **LIS3MDL** or **RM3100** sensors when connected via **I2C interface**.
>
> Since the user cannot change the address of any magnetometer, it is essential to ensure that the address set in the software of each respective magnetometer is as follows:
>
> - **Magnetometer LIS3MDL**: 0x1C
> - **Magnetometer RM3100**: 0x20
>
> **LIS3MDL** is integrated inside the Autopilot 1x, but mounted externally to avoid the possible interferences from being close to electronic components.
>
> - **Magnetometer LIS3MDL**: It is a three-axis magnetic sensor with a very small package.

Important

In this panel, the user can only modify some configurable parameters, the selection of the magnetometer and the configuration of the **Variance** are done in the Magnetometer - Sensors blocks of the **Block Programs menu**.

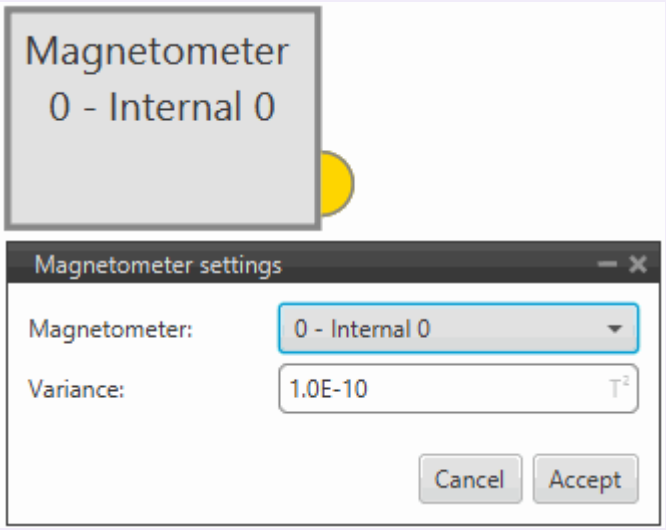


Magnetometer block

Sensor

Internal 0 / Internal 2

This panel displays the possible parameters that can be configured for the internal magnetometers.

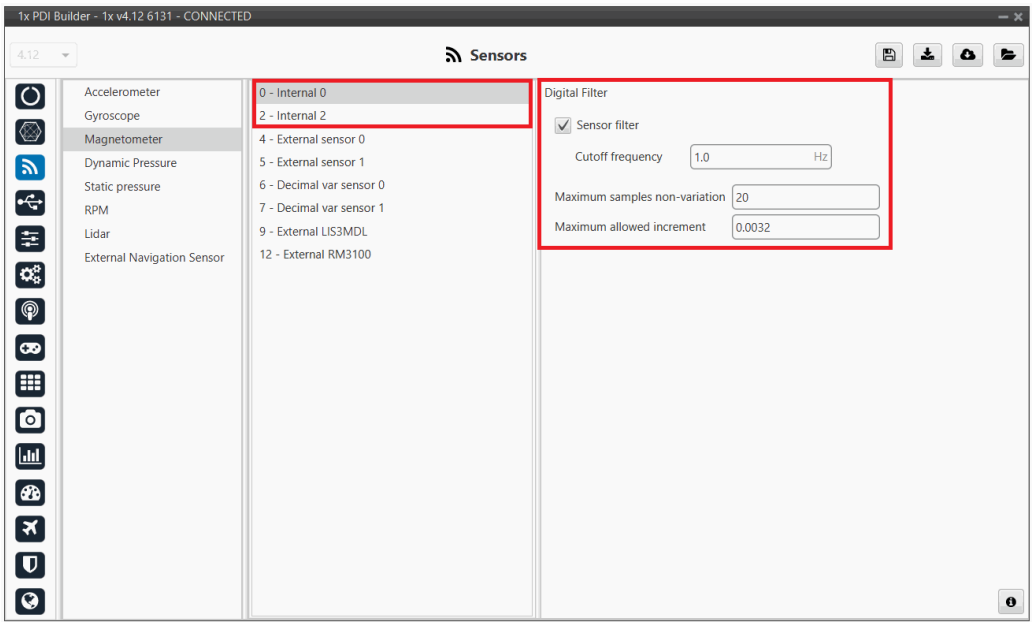


Magnetometer panel - Internal 0-2 configuration

In this panel it is possible the following options regarding the digital filter:

- **Digital filter**: By enabling the **Sensor filter** checkbox, the user enables a low pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz. It is a **software filter**.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.

External sensor 0-1

In this panel, the user must configure some parameters in order to correctly receive and manage the measurements from the external sensor.

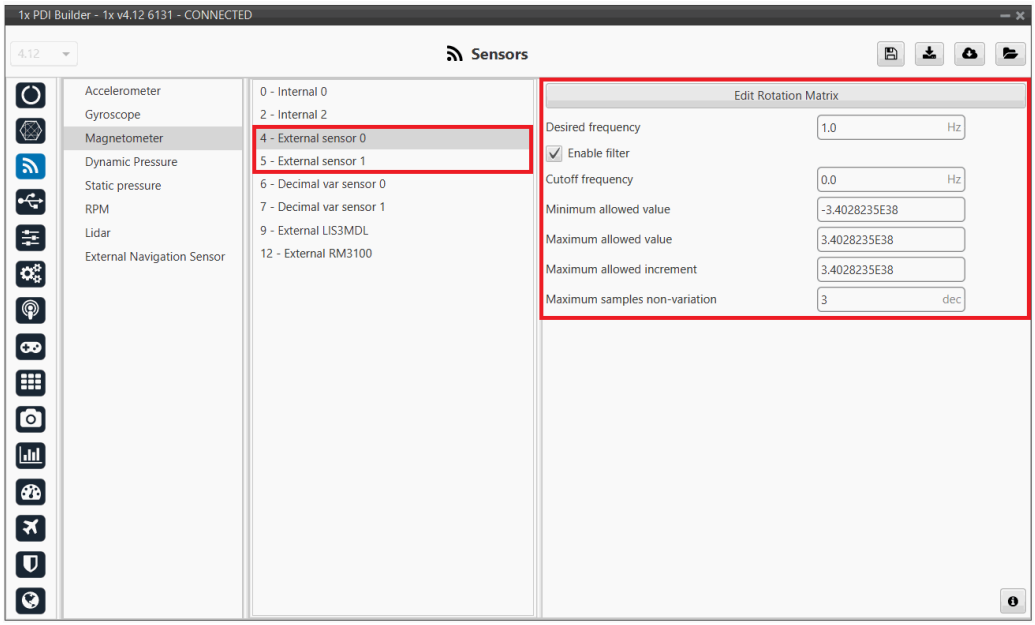


Magnetometer panel - External sensor 0-1 configuration

- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.

> **Error**
>
> The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.

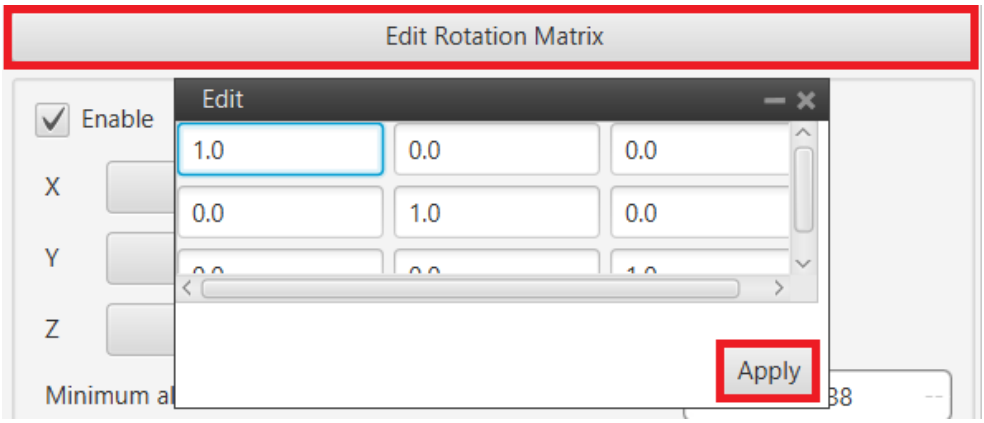


Magnetometer panel - Rotation matrix

- **Enable**: Users must enable it if they want this sensor to be selected.
  - **Desired frequency**: The sensor measurement shall only be considered correct if the frequency at which the message with this measurement is received is $\geq 90\%$ of the **desired frequency** defined here by the user. This frequency is stored in the **RVars 1488-1489**. For more information on these variables, see the Real Variables (RVar) - 32 Bits - Lists of interest section of the **1x Software Manual**.
  - **Enable filter**: Enables a butterworth second order low-pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

Decimal var sensor 0-1

In this panel it is possible to configure real variables provided by an external sensor.

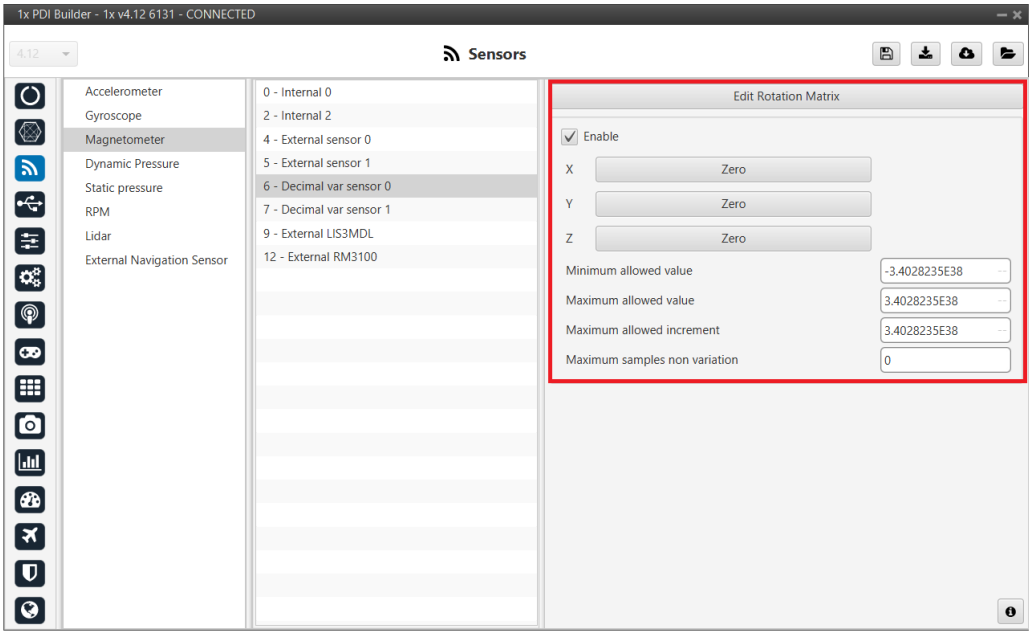


Magnetometer panel - Decimal var sensor 0-1 configuration

- **Edit Rotation Matrix**: Users must set the position of the external sensor with respect to the orientation of the Veronte Autopilot 1x.

  > **Error**
  >
  > The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

  For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.

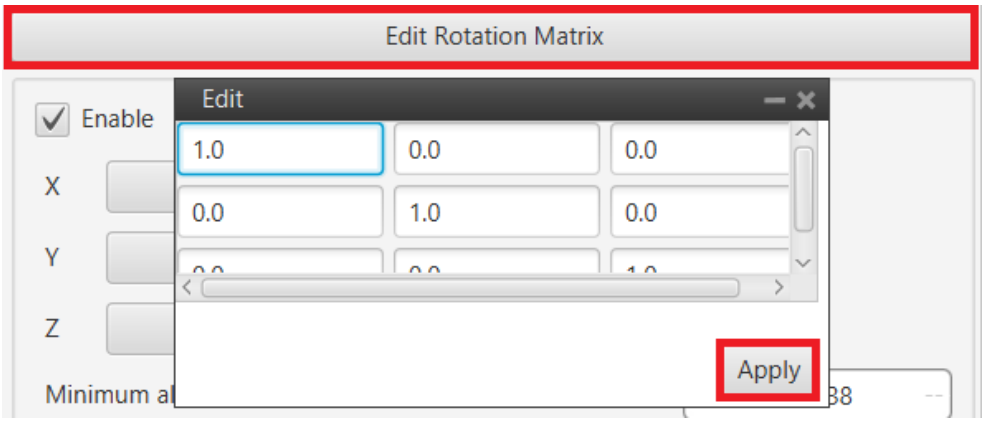


Magnetometer panel - Rotation matrix

- **Enable**: When enabled, the user must select the real user variables for each axis (X,Y,Z) in which the values have been stored.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

The configuration process must be done using custom messages. This is to be configured in the Custom Messages panel of the **Input/Output menu**. The configuration will depend on the device in use and its communication protocol.

External LIS3MDL / RM3100

Autopilot 1x has been designed to have compatibility with these external magnetometers.

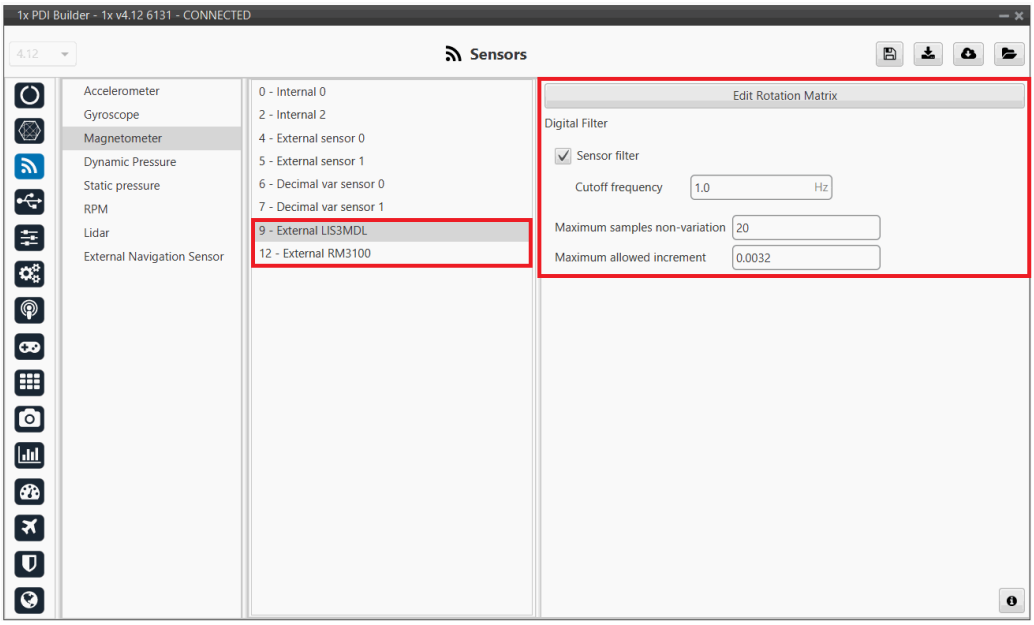


Magnetometer panel - External magnetometers configuration

The user can modify the following parameters:

- **Edit Rotation Matrix**: It must be modified in the case that the axes of the magnetometer do not coincide with those of the aircraft.

  > **Error**
  >
  > The rotation matrix **cannot** be a **zero matrix** and must respect **the orthogonality of the axes**. Not complying with this requirement means an invalid rotation and, consequently, the calibration of this magnetometer will not be possible.

  For more information on Autopilot 1x orientation, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.

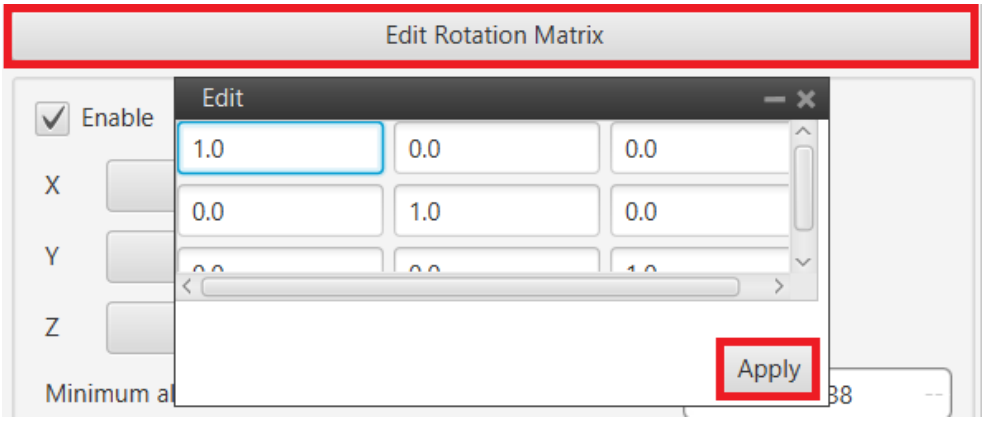


Magnetometer panel - Rotation matrix

- **Digital filter**: By enabling the **Sensor filter** checkbox, the user enables a low pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz. It is a **software filter**.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.

Dynamic Pressure

Autopilot 1x has three pressure input lines, two for static pressure to determine the absolute pressure and one for pitot in order to determine the dynamic pressure.

> **Important**
>
> In this panel, the user can only modify some configurable parameters, the selection of the dynamic pressure sensor, the configuration of the **Variance** and the configuation of the minimum pressure are done in the Dynamic Pressure Sensor - Sensors blocks of the **Block Programs menu**.

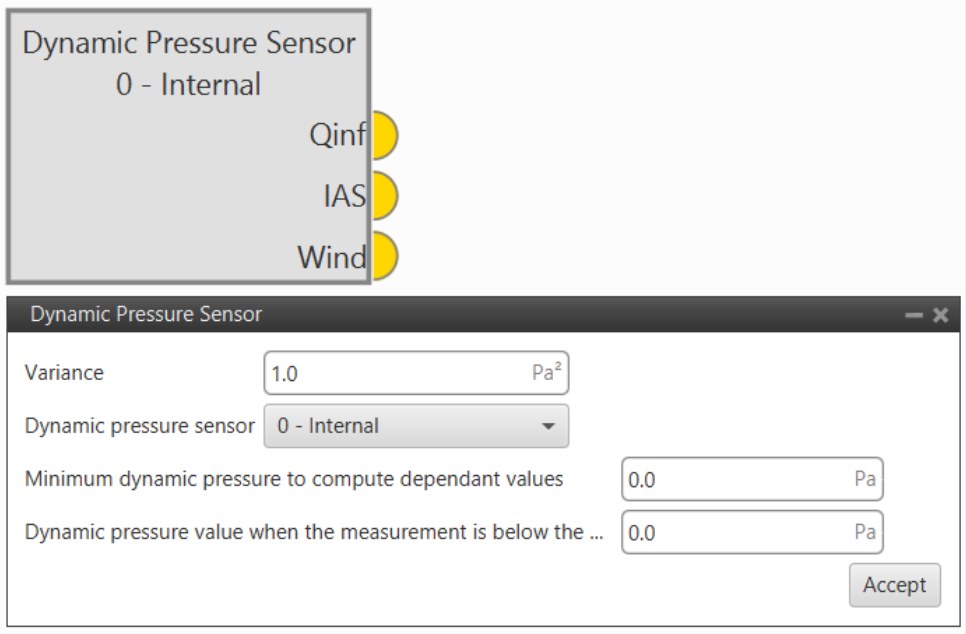

Dynamic Pressure Sensor block


Sensor

The user can choose between 2 types of source:

- **Internal**: Autopilot 1x uses the internal sensor.
- **Decimal var sensor 0-1**: Autopilot 1x uses a decimal value provided by an external sensor.

Internal

This panel displays the possible parameters that can be configured for the internal Dynamic Pressure sensor.

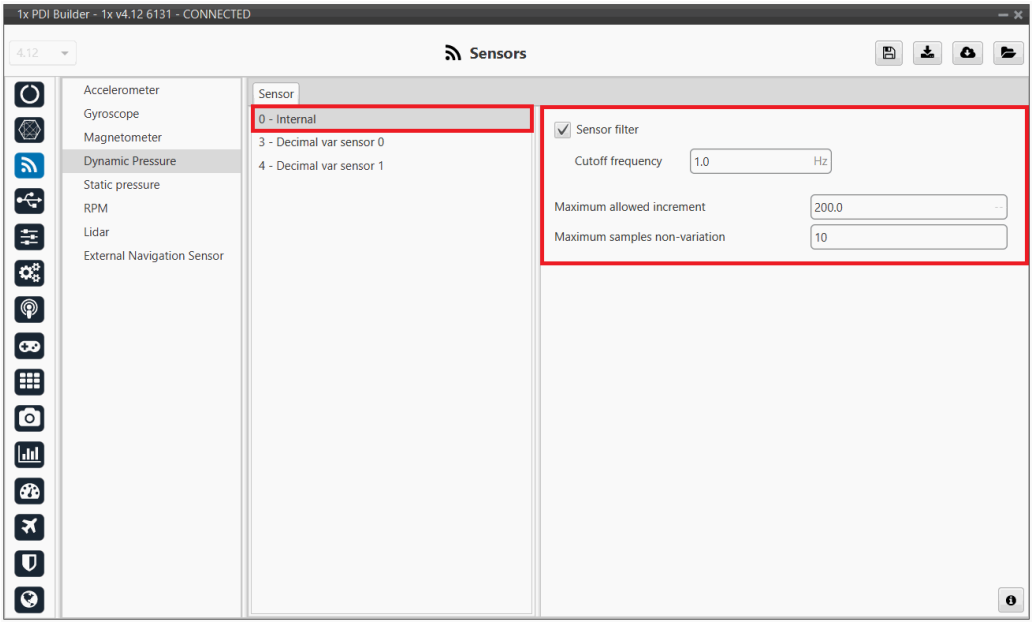


Dynamic Pressure panel - Internal sensor configuration

In this panel it is possible to set different options regarding filters.

- **Sensor filter**: Enables a low pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz. It is a **software filter**.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

Decimal var sensor 0-1

In this panel, the user selects a real variable, this does not require a signal treatment.

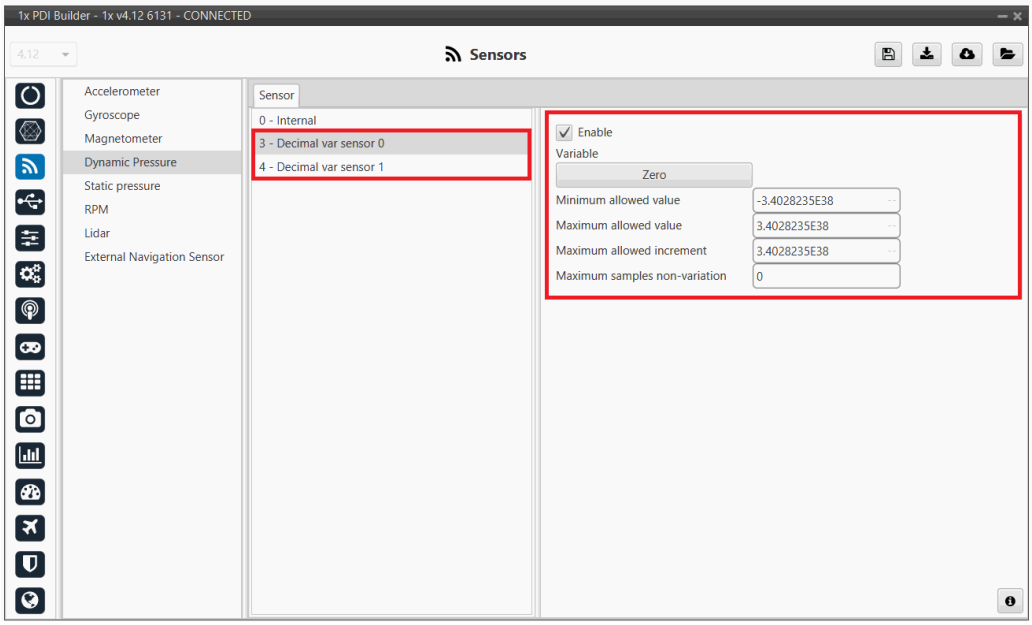

Dynamic Pressure panel - Decimal var sensor 0-1 configuration

- **Variable**: Select the real user variable in which the value has been stored. The process of configuration has to be done using custom messages. This is to be configured in the Custom Messages panel of the **Input/Output menu**. The configuration will depend on the device in use and its communication protocol.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.


Static Pressure

Autopilot 1x has three pressure input lines, two for static pressure to determine the absolute pressure and one for pitot in order to determine the dynamic pressure.

This panel allows the user to configure a static pressure sensor input in 1x.

Important

In this panel, the user can only modify some configurable parameters, the selection of the static pressure sensor and the configuration of the **Variance** are done in the Static Pressure Sensor - Sensors blocks of the **Block Programs menu**.

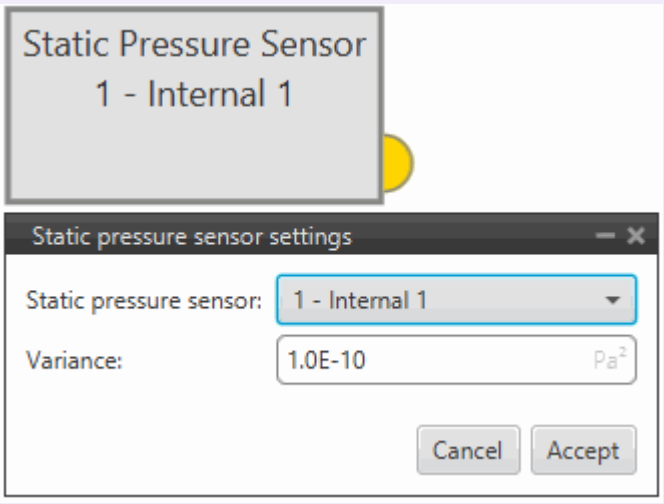

Static Pressure Sensor block


Atmospheric calibration export

The **Atmospheric calibration export** allows, in a standard ground-air configuration, to continuously send information regarding the static pressure configured on the ground platform to the desired air platform. Therefore, it is a **configuration** that must be performed **on the Veronte Autopilot 1x ground unit**.

This function is **useful when making long flights** as the static pressure varies significantly throughout the day and therefore the altitude estimation will also vary.

> **⚠ Warning**
>
> For correct operation both Veronte Autopilots 1x (ground and air units) must measure the same pressure at the same height (this must be checked).

This option is configured independently of the selected Static Pressure sensor.

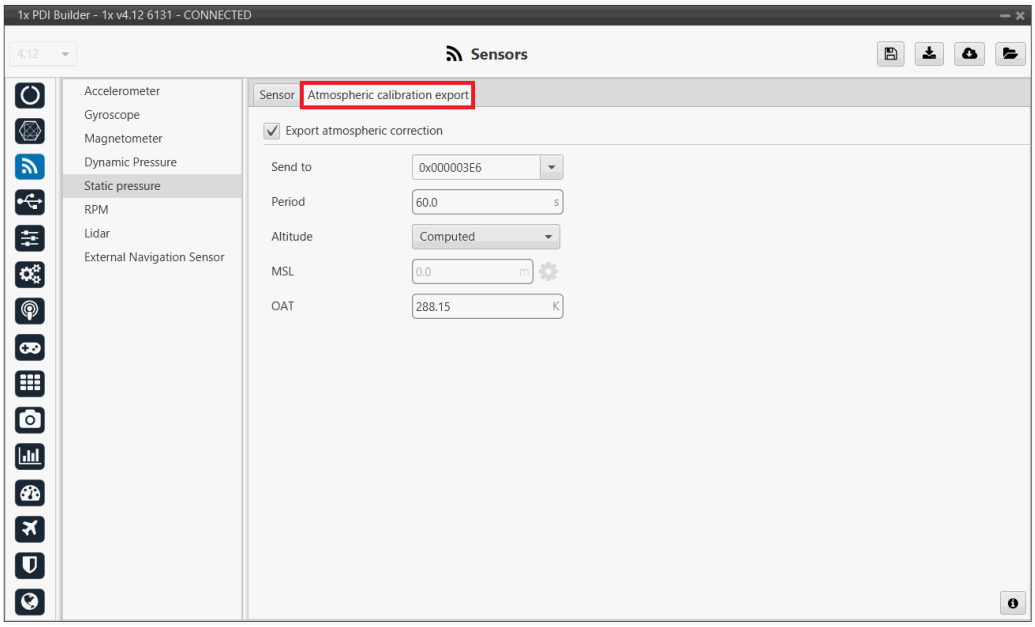

Static Pressure panel - Atmospheric calibration export parameters

- **Export atmospheric correction**: Enables this feature.

This panel has 5 parameters that need to be configured:

- **Send to**: Points to the address where the correction will be sent. For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.
- **Period**: Period of time spent between sending each correction.
- **Altitude**: There are 2 options available for this parameter:
  - **External**: Users can manually enter the altitude if known.
  - **Computed**: By selecting this option, the altitude will be computed by the system.

> ⚠ **Warning**
>
> When this option is selected, it is necessary to add an **automation** in the 1x ground unit to calibrate the atmosphere **periodically** (see Atmosphere Calibration action of the **Automations menu**), to prevent the MSL from drifting.

- **MSL**: Can be entered manually or by a system variable.

> **Important**
>
> This parameter is only enabled when the **External** option is selected as Altitude.

- **OAT**: Outside Atmospheric Temperature, to be defined by the user.

Sensor


The user can choose between 2 types of source:

- **Internal Sensor (Internal 1 / Internal 2)**: Autopilot 1x uses the internal sensor. The internal sensors available depend on the hardware version of Autopilot 1x.
- **Decimal var sensor 0-1**: Autopilot 1x uses a decimal value provided by an external sensor.

Internal 1-2

This panel displays the possible parameters that can be configured for the internal Static Pressure sensors.

Autopilot 1x has embedded these 2 digital static pressure sensors. For more information on the pressure ports, see the Pressure lines - Hardware Installation section of the **1x Hardware Manual**.

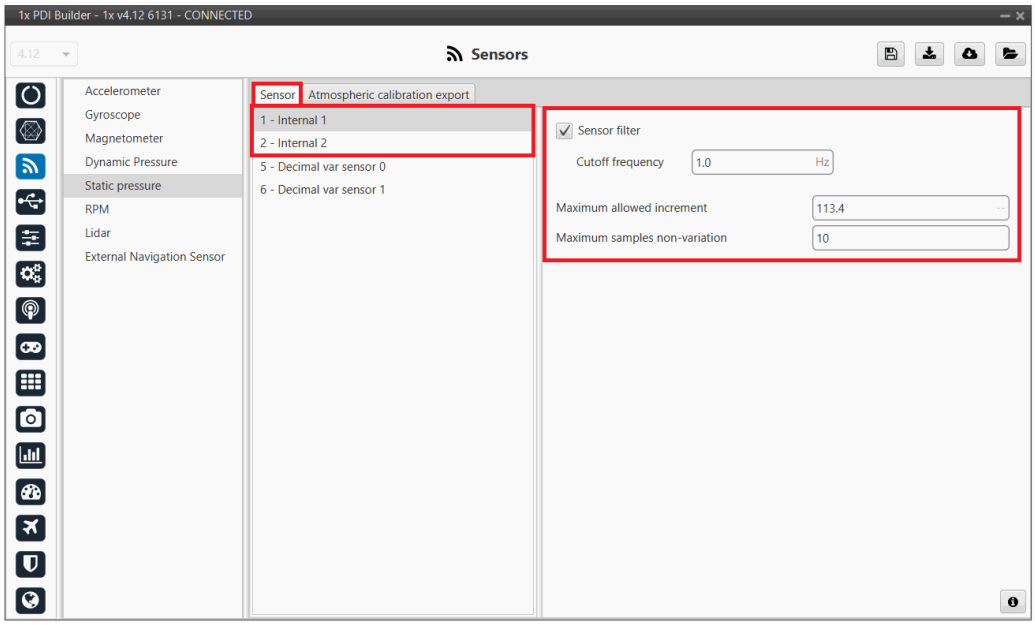


Static Pressure panel - Internal 1-2 configuration

In this panel it is possible to set different options regarding filters.

- **Sensor filter**: Enables a low pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz. It is a **software filter**.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.

Decimal var sensor 0-1

In this panel, the user selects a real variable, this does not requiere a signal treatment.

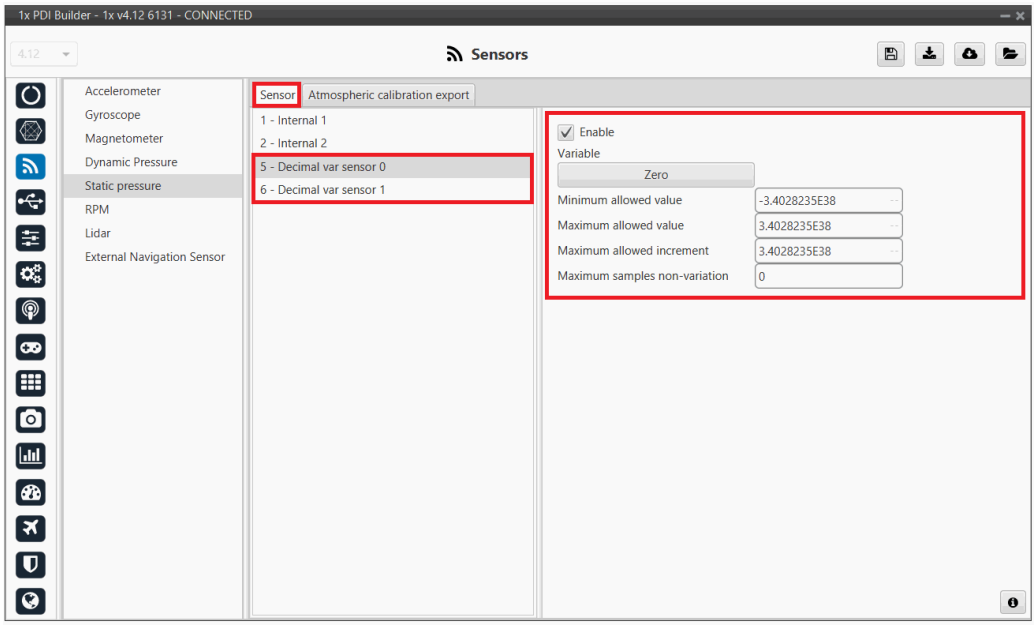


Static Pressure panel - Decimal var sensor 0-1 configuration

- **Variable**: Select the real user variable in which the value has been stored. The process of configuration has to be done using custom messages. This is to be configured in the Custom Messages panel of the **Input/Output menu**. The configuration will depend on the device in use and its communication protocol.
- **Minimum allowed value**: Minimum sensor value.
- **Maximum allowed value**: Maximum sensor value.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum samples non-variation**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

RPM

Autopilot 1x can measure RPMs by reading from up to 6 input sources:

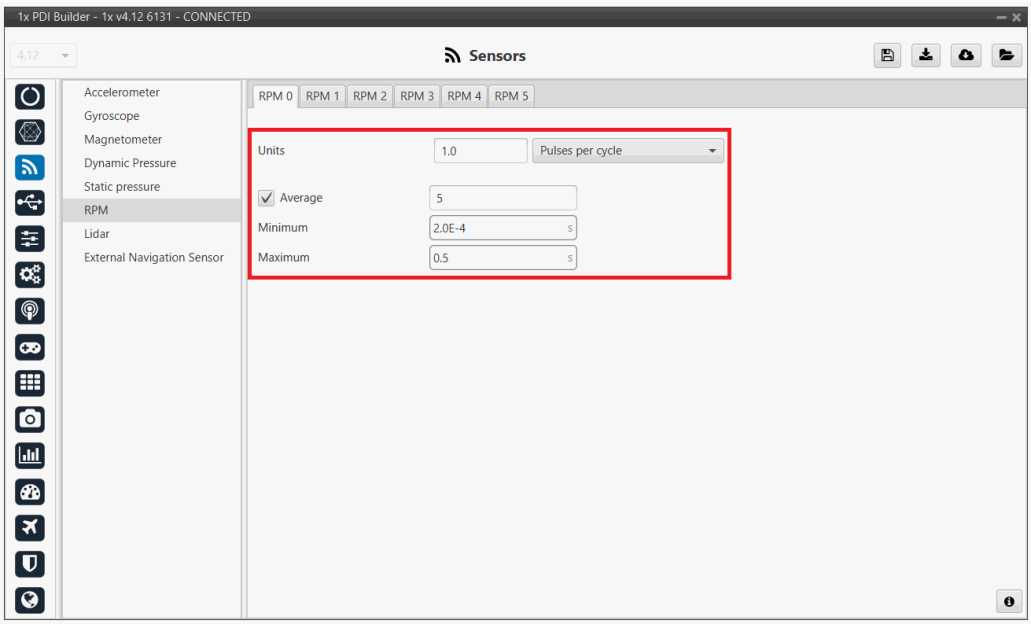

RPM panel

- **Units**: Sensor conversion factor. It can be Custom, Radians per pulse or Pulses per cycle.
- **Average**: Filter to prevent voltage spikes. The readout of the pulse can be filtered as an average output. The amount of measurements to do the average needs to be specified.
- **Minimum**: Here the minimum expected pulse period needs to be specified. This will discard spurius pulses (e.g. induced by EMI) which are smaller than this minimum pulse.
- **Maximum**: This is the maximum period of time allowed without capturing. If no incoming pulse is received for more than this time, the output RPMs will be 0.


Lidar

The I2C bus allows the connection of several devices with different addresses to the same line via master-slave communication. At this moment, Autopilot 1x supports the following Lidar devices:

- **Garmin Lite v3**: Optical distance measurement sensor with a range of 5 cm to 40 m.
- **SF11/LW20**: Long range laser altimeter. Supported SF11/B and SF11/C with a range of maximum 50 m and 0.2 m to 120 m respectively.

- **SF20**: OEM laser altimeter module. Supported SF20/C with a range of 0.2 m to 100 m.


1x allows up to 5 Lidar devices to be connected to the system at the same time. The configuration panel can be seen below:

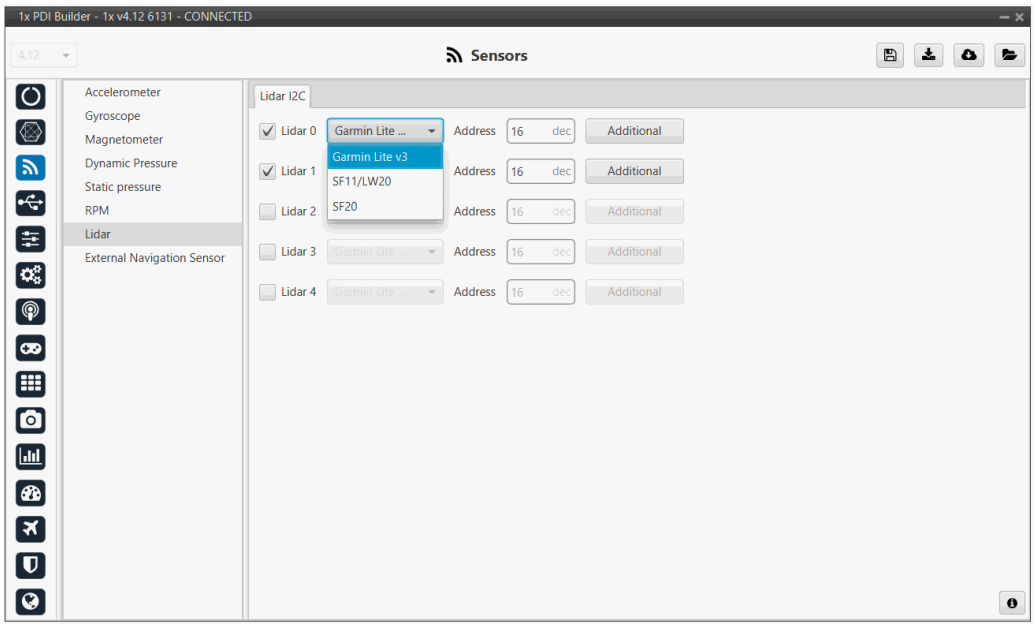

Lidar panel

After enabling the needed number of Lidar devices, configurable parameters are:

- **Type of Lidar**.
- **Address**: With an accepted value between 16 - 239, this is the origin address from the Lidar being configured.
- **Additional**:

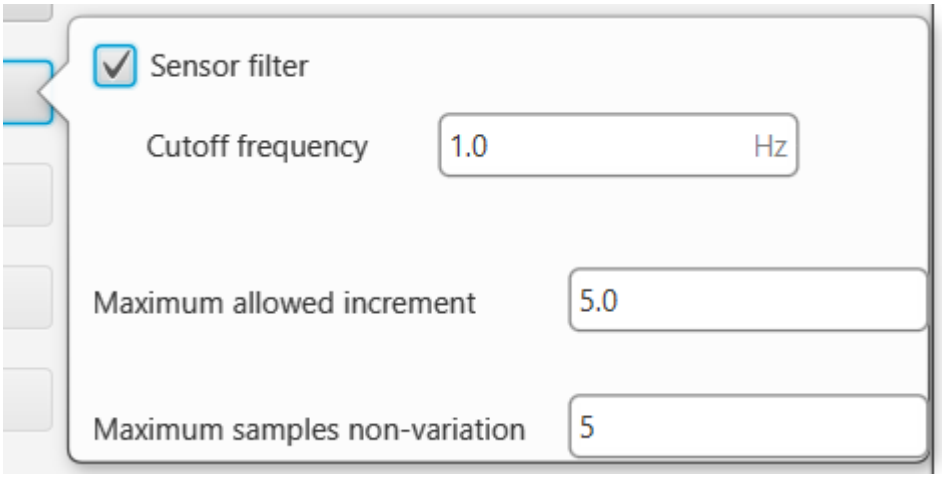

Lidar panel - Additional


- By enabling the **Sensor filter** checkbox, the user enables a low pass filter which its **cutoff frequency** is configured manually, allowing the user to input any desired value in Hz. It is a **software filter**.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.
- **Maximum non-variation samples**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.

> ⚠ **Warning**
>
> I2C address will be different for different devices. Make sure to define it properly by checking the manufacturer documentation.

> ⓘ **Note**
>
> The Lidar number (Lidar 0/4) needs to be kept in order to properly configure the Altimeter later (this must be done in the Altimeter - Sensors blocks of the **Block Programs menu**).

External Navigation Sensor

It is possible to operate Autopilot 1x with a configuration in which navigation is controlled externally, rather than with internal navigation. From this panel, users can configure the frequency with which this external navigation data is processed.

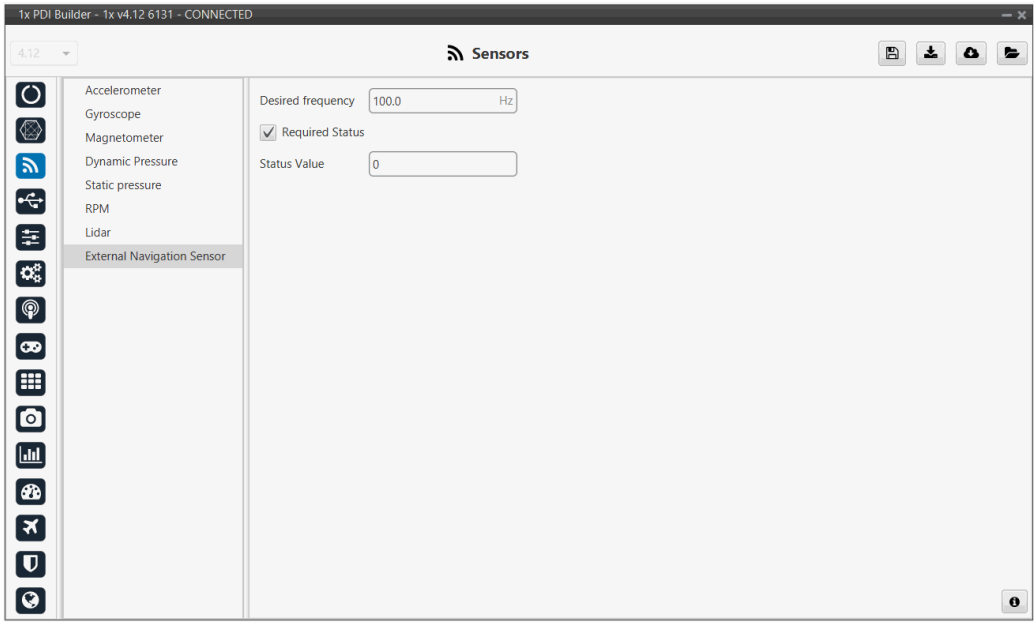

External Navigation Sensor panel

- **Desired frequency**: Enter the desired frequency for external navigation.

> ⚠ **Warning**
>
> External navigation at a frequency greater than 100 Hz on a serial connection at 115200 Baud is not supported due to bandwidth limitations.

- **Required Status**: By enabling Required Status, it is possible to enter the expected integer value in Status Value, that checks the values of a specific variable.

> ⓘ **Note**
>
> To maximize calculation accuracy, it is advisable to keep the Desired frequency **greater than or equal** to the GNC task frequency.

For more information on configuring an **External Navigation Sensor**, refer to the External Navigation - Integration examples section of this manual.

Input/Output

This section of the manual contains the information about external sensors/ devices configuration. These devices are configured on the different ports available in **Veronte Autopilot 1x**:


Port/ Manager	Description
I/O Setup	Configuration of serial port connections, Serial Custom Messages, etc.
CAN Setup	Configuration of the two CAN buses (A and B), CAN Custom Messages and Mailboxes
CAN-FD A Setup	Configuration of the CAN-FD A bus, Mailboxes and Baudrate.
Digital Input	Configuration of PPM signals,


Port/ Manager	Description
	pulses or RPM sensors
Serial	Configurable RS232 and RS485 serial ports
Incremental Counters	Configuration of Incremental Counters to be used in RS Custom Messages and Serial Custom Messages

As **Custom Messages** need to be defined for both serial and CAN communication, there will be a **specific section** for this after the CAN Setup section ⇒ Custom Messages types

I/O Setup

In this panel the user can establish the relationship between a determined signal with a I/O port. This allows users to configure external sensors, messages between 1x units (Tunnel) and custom messages.
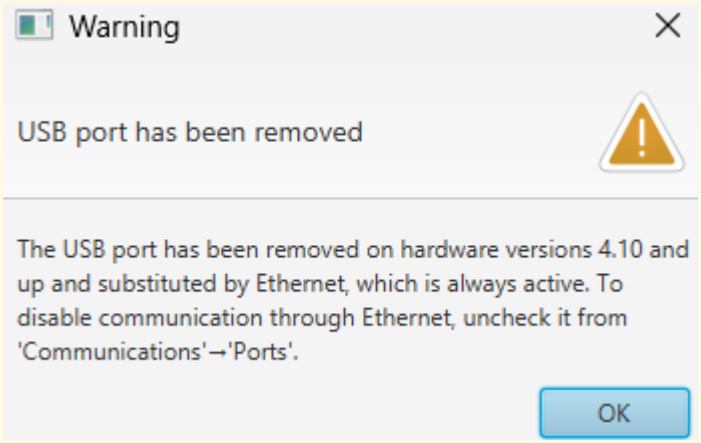
> **⚠ Warning**
>
> Hardware versions higher than **4.10** do **not** allow connection via **USB**.
>
> 
>
>
> If the **USB** port is used for configuration upload, the port must be **reassigned**.

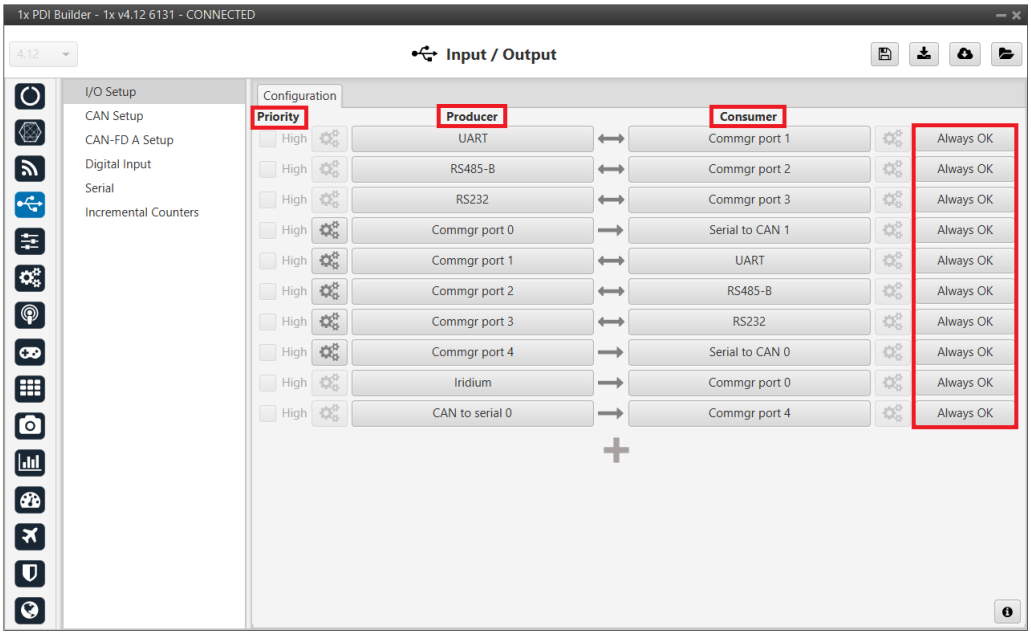


I/O Setup panel

- **Priority**: Connections between I/O ports can be marked with **high priority** with this checkbox. If enabled, they will **run at high frequency: 1000 Hz**. The following table shows whether each connection is **always High priority** (**marked with H**) and cannot be "unchecked", **always Low priority** (**marked with L**) and cannot be "checked", or can be **selected by the user** (**marked with S**) to choose between high and low priority.

<td

Producer\Consumer	UART	RS232	RS485-A	RS485-B	Commgr p
UART		S	S	S	L
RS232	S		S	S	L
RS485-A	S	S		S	L
RS485-B	S	S	S		L
Commgr port 0-5	L	L	L	L	
RS custom message 0-3	L	L	L	L	L
Tunnel 0-2	S	S	S	S	L
GPS 0-1 RTCM	S	S	S	S	
Y 0-2 splitter A-B	S	S	S	S	L
Iridium	S	S	S	S	
Unescape port	S	S	S	S	L
CAN to serial 0-5	S	S	S	S	L
CAN wrapper 0-1	S	S	S	S	L
Veronte LTE	S	S	S	S	L
Veronte LTE Auxiliary	S	S	S	S	L

> **ⓘ Note**
>
> * If an **External Sensor** is configured in RS custom message, the selection status can change from **Low priority** to **selected by the user**.

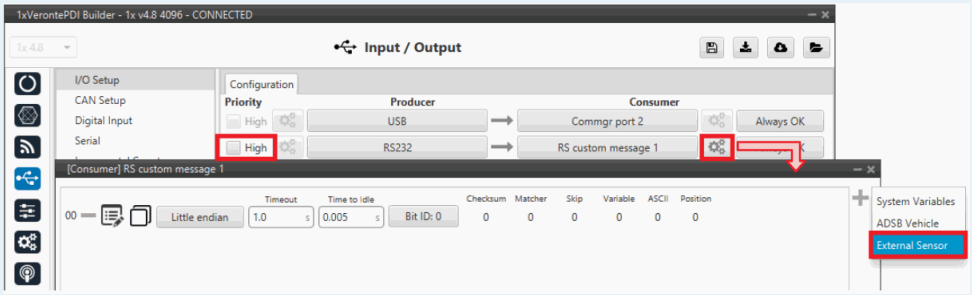


- **Producer**: Functions for creating and sending messages.
- **Consumer**: Functions for receiving and parsing messages.
- **Enable**: To enable/disable telemetry submission.
- **Bit**: This assigns each connection a bit in a way that allows this connection to be activated/deactivated depending on the status of the selected bit.
- **Add a New Row**: Press the + button at the bottom of the connections list to add a new connection. A new empty row will appear with "None" set for both Producer and Consumer.

  By default, the 'Always Ok' bit is set to all connections so that they are always active.

The following are the steps to setting up reception or transmission between ports:


1. Choose the **Producer** to use. If the producer is not currently in use, click on the ➕ sign and add the desired producer.

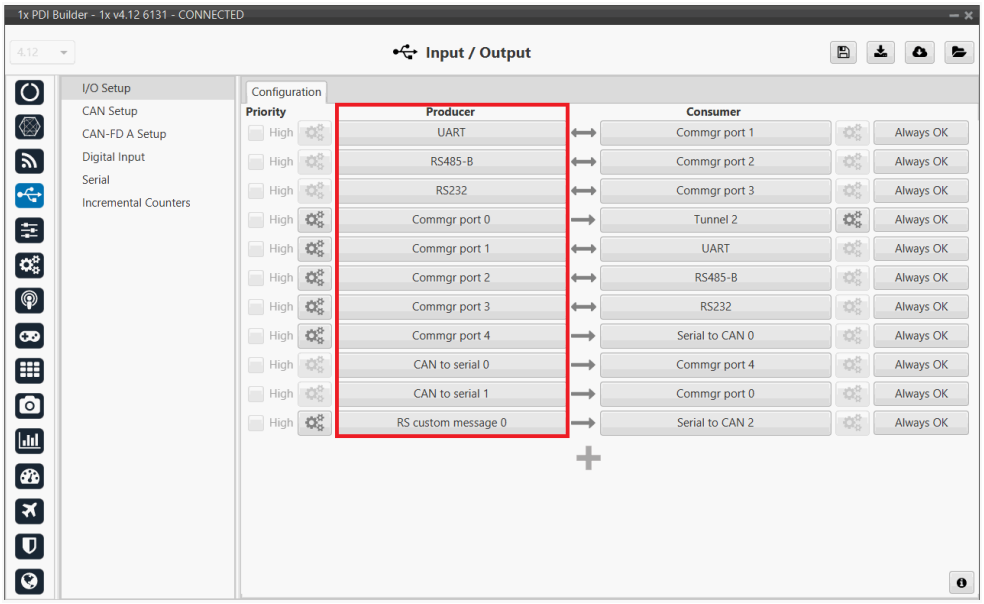

I/O Setup panel - Producers

2. To configure the desired **Consumer** that will be bind to the chosen **Producer**, it is first required to establish the **relationship** between them:
   - **Bind** → : Unidirectional relationship.
   - **Bind Bidirectional** ↔ : Bidirectional relationship. This enables a port to receive or send information.

> **Note**
>
> Once the **Consumer** has been selected, it is possible to undo the selection by pressing the **Clear** button.

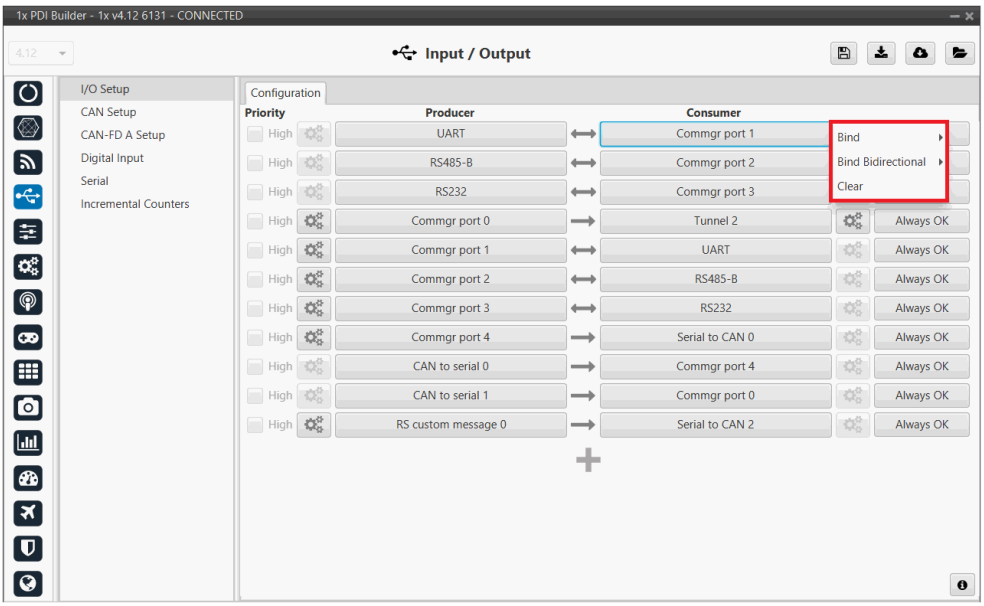

I/O Setup panel - Consumer options

3. Select the desired **Consumer** element.
4. (optional) Configure the **Bit** parameter.

The following I/O ports are available:

Field	Description
UART	UART Port (UART A pin) For more information, see **Pinout - Hardware Installation** section of the **1x Hardware Manual**.
RS232	Serial Port 232
RS485-A	Serial Port 485-A
RS485-B	Serial Port 485-B
Commgr port	COM Manager ports send and receive VCP messages. VCP is the protocol used by Veronte products to communicate. For more information, read the **VCP user manual**.

Field	Description
RS Custom Message	This allows user to send/receive a serial custom message, see **Serial Custom Messages**.
Tunnel	Creates a bidirectional bridge between two devices, see **Tunnel**.
GPS RTCM	This allows the user to send/ receive RTK information from GND unit to AIR unit.
External ultrasound	External ultrasound sensor, see the **Internest - Sensors** section.
Y Splitter	Used to split a signal into 2
Iridium	Iridium communication, see the **Iridium - Communications** section.

Field	Description
Vectornav VN-300	Vectornav VN-300 is an external IMU. For more information, see the **Vectornav VN-300 - Integration examples** section.
Unescape port	This allows user to reconstruct a byte stream with an escape logic, see **Unescape port**.
CAN to serial / Serial to CAN	**Serial to CAN** sends serial streams over a CAN Bus / **CAN to serial** undoes the transformation 'Serial to CAN', see the **CAN to serial/Serial to CAN** section.
CAN wrapper / CAN unwrapper	**CAN wrapper** sends CAN streams over a serial Bus / **CAN unwrapper** undoes this transformation,

Field	Description
	see the **CAN wrapper/CAN unwrapper** section.
NMEA 0183 GGA	NMEA 0183 messages parser, see **NMEA 0183 GGA**.
Veronte LTE	4G Connection. For more information, see the **4G - Communications** section.
Veronte LTE Auxiliary	**Warning** Reserved port.


More information about some elements can be found in the following sections.

Serial Custom Messages

⚠ **Warning**

- Autopilot 1x has a **serial limitation** of **64 messages** per Custom. In addition, there is a global limit shared by all Custom Messages (both consumers and producers), whether **Serial** or **CAN**:
  - Maximum number of **messages**: **104**
  - Maximum number of **fields**: **2000**

It is possible to configure the messages sent/received through the serial port and its conversion to system variables by selecting the option **RS Custom message** and configuring the I/O port.

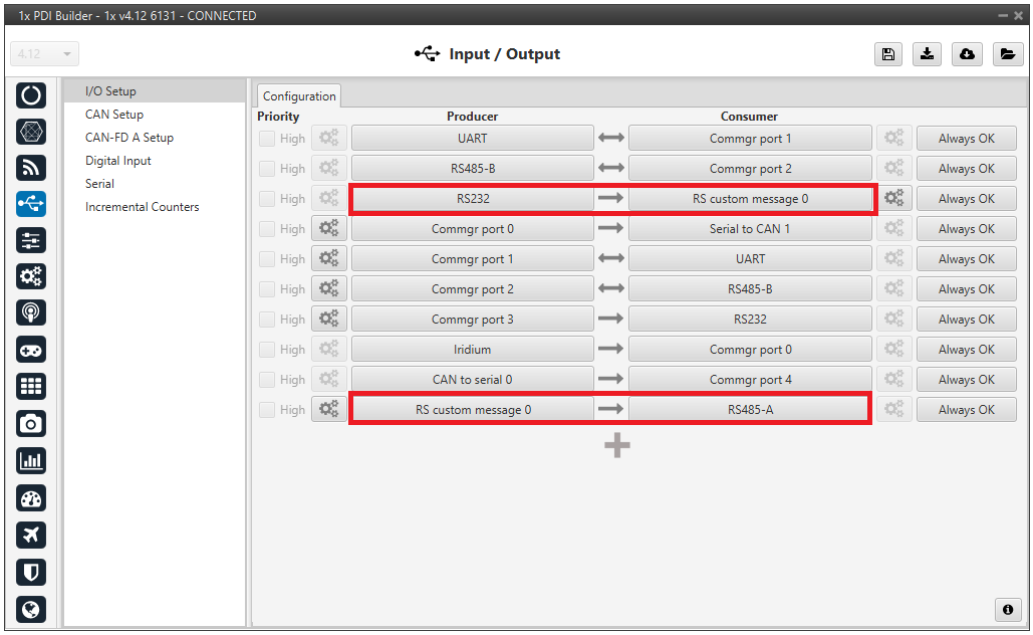


Serial Custom Messages

In the image above two possible configurations using an RS Custom Message can be seen. The 'red' one is configured to receive a given message from an RS232 serial port and the 'green' is used to send a RS Custom Message through an RS485 serial port. It is also possible to use the same RS Custom Message for both tasks if the bidirectional relationship is selected (the arrow indicates this (Bind Bidirectional ↔)).

To configure a RS Custom message, the user must follow the next steps:

1. Press the **configuration button** (icon) and a pop-up window will be displayed.


   In this window press the ➕ icon to add a custom message, the user can choose between **System variables** or **ADSB Vehicle**..

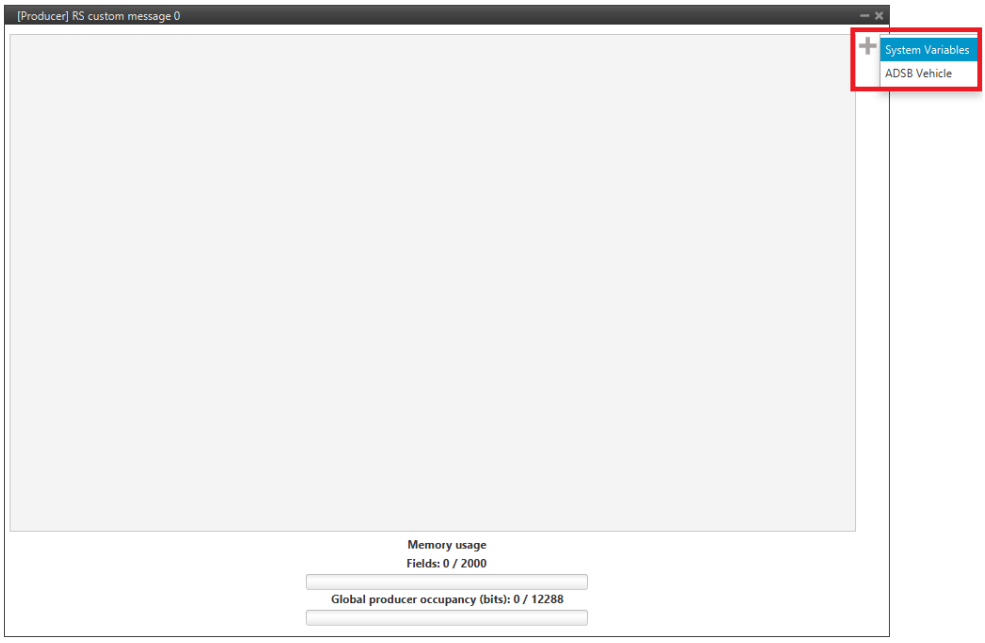

Serial Custom Message configuration

> **Note**
>
> The difference between choosing **System Variables** or **ADSB Vehicle** is that when the user selects **Variable** as the custom message type, only system variables will appear when System Variables is selected, only ADSB variables when ADSB Vehicle is selected.

2. When it is already added, the following options are available to configure a custom message:



Producer RS Custom Message configuration



Consumer RS Custom Message configuration

- **Endianness**: Depending on the order in which the device issue the message, it is possible to select:
  - **Big endian**: Set the value from left to right.
  - **Little endian**: Set the value from right to left.

        - **Mixed endian**: Some devices use this format. If users need to configure it, please contact the support team (create a ticket in the customer's **Joint Collaboration Framework**; for more information, see Tickets section of the **JCF** manual).
    - **Period/Time out**: This option has a dual role depending on if it is used to transmit or receive data.
        - **Period - Producer**: It is the inverse of the send frequency.
        - **Time out - Consumer**: This is the threshold time between receptions to consider that the message is not being received correctly.
    - **Delay/Time to Idle**: The purpose of this feature is ensuring half-duplex communication. This option has a dual role depending on if it is used to transmit or receive data.
        - **Delay - Producer**: After sending the message, the Serial bus will be disabled for this amount of time in order to allow half-duplex communication.
    - **Offset**: It is possible to set a specific time interval in order to delay the sending of messages over time, avoiding simultaneous sending.

      > ⚠ **Warning**
      > Delay time must not be longer than the specified period, since this will result in out-of-order message sending.

        - **Time to Idle - Consumer**: This is the time Autopilot 1x waits before discarding partially parsed bytes.
    - **Bit ID**: This option is only available when a message is configured as **Consumer**. The user bit selected in Bit ID box will be true if the message is being received correctly.

      > ⚠ **Warning**
      > Pay attention that the user bit selected in **Bit ID** is not in use for another task.

3. To create the structure of the message, click on the **edit message button** ( icon) and then press the ➕ icon to add fields to it. The following type

of messages are available to configure a structure: **Variable**, **Checksum**, **Matcher**, **Skip**, **Variable**, **ASCII** and **Position**.
The configuration of each structure is covered in the Custom Messages types - Input/Output section of this manual.

> ⚠ **Warning**
>
> Before configuring any message, user has to know the structure it has to have according to the device that is connected to the port. Each device may have a different message structure when it sends or receives information.

In addition, the steps to be followed from the moment a Serial message arrives at or is sent from the Autopilot 1x are described in the Serial communication - Integration examples section of this manual.


To check serial messages transmission, see the Debug serial messages transmission - Troubleshooting section of this manual.

Tunnel

It is possible to configure a Tunnel, which is a bidirectional bridge between 1x units that communicate to each other sharing information about an external device connected to the Serial or Digital port.

Imagine that it is desired to have a button connected to the 1x air unit to launch a parachute. It is not possible to physically connect the button because the air autopilot is in the flying platform, so a different option is needed. Here is where the tunnel becomes useful. The button could be connected through the Serial or Digital port to the 1x ground unit, and then the signal is sent through the tunnel to the air unit. With this configuration it would be like if the button were physically connected to the aircraft.

Let's consider the following image:

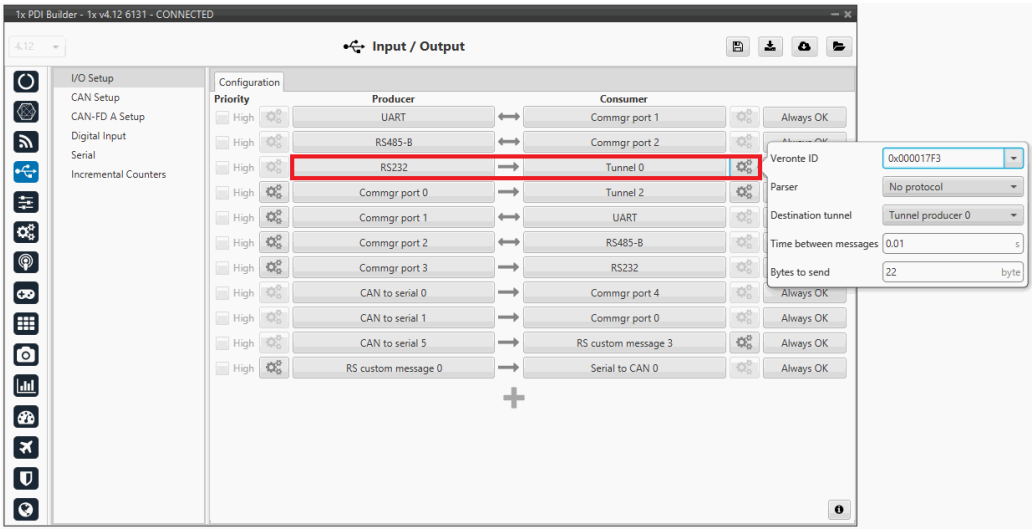

Tunnel configuration

In the image above there is a device connected to the **RS232 (Producer)** and there is a **Tunnel (Consumer)** which sends that information to other Autopilot 1x with a determined ID. On the other hand, **1x air unit** has to be configured to receive the signal sent by other device. In that case the **Producer** will be **Tunnel** and **Consumer** will be the **port or destination tunnel where the device is connected**.

The options available when configuring **Tunnel as Consumer** are:

- **Veronte ID**: Enter the address that will receive the information. The following options are the most common:
  - **App**: Veronte applications address.
  - **Broadcast**: All units on the network. Select this option for a generic configuration.
  - Address of a specific Veronte unit, it can be a 1x, a DRX, a CEX, etc. For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**
- **Parser**: The user can choose protocol to parse message data. The options available are:
  - No protocol
  - RTCM3
  - CANserial


- **Destination tunnel**: Number of port is used to avoid mistakes and identify a Tunnel when using more than one, Tunnel 0, 1 and 2 are available.
- **Time between messages**.
- **Bytes to send**: Sets the message size to send.

When configuring **Tunnel as Producer** (i.e. on the unit that receives the information), no configuration is required. It is only necessary to connect it to a Consumer, usually to a serial port.

Unescape port


To understand what unescape is, the user must first understand what an **escape byte** is.

Let's consider that there is a protocol that defines a **'Flag'** as the start and end byte of the frame. In case the flag or an escape value appears in the frame data, and in order not to misinterpret the message, an escape byte or the same value repeated will be added before them so that, at the time of parsing, it will be reconstructed with the original byte.

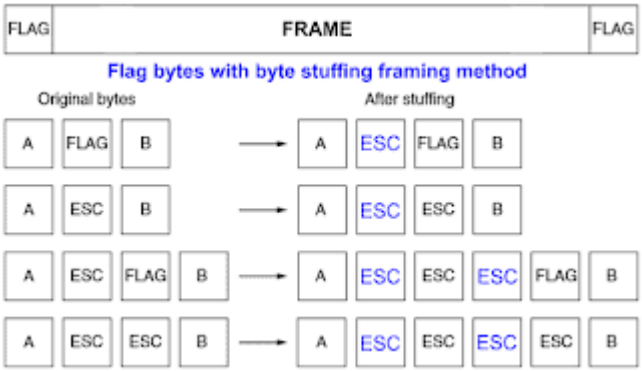

Escape byte

In **1x PDI Builder**, an Unescape port has been implemented to allows to reconstruct a byte stream with an escape logic.

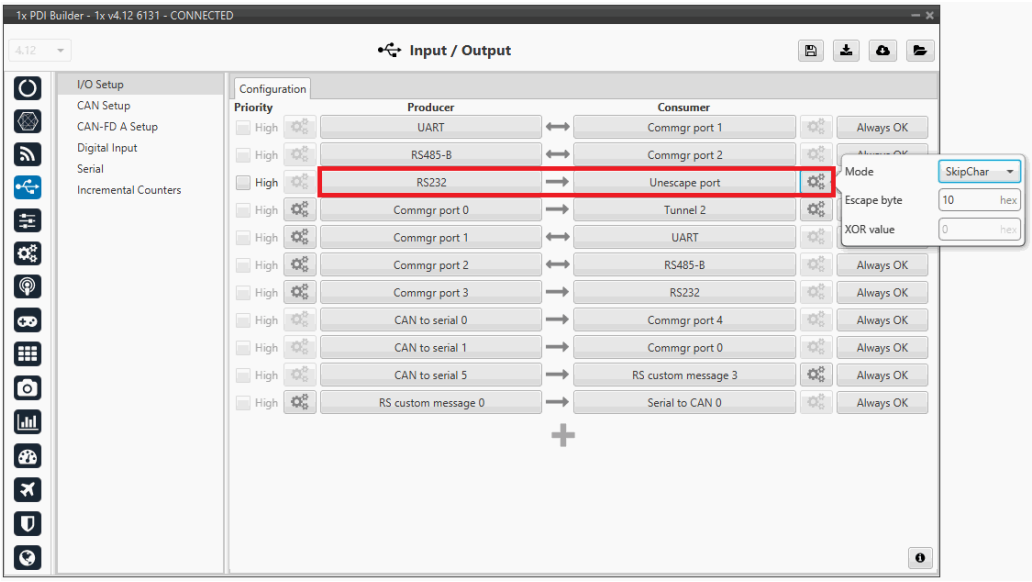

Unescape port configuration

Two modes of escapes are supported:

- **SkipChar**: The unfolding of the value to be escaped, the byte to escape has been repeated in the message.
- **SkipAndXOR**: In this case, the escape byte is entered first and then the value to escape (i.e. the value to escape XOR escape byte).

In addition to this, two more options are available in this pop-up window:

- **Escape byte**: Escape byte added.
- **XOR value**: Only available when '**SkipAndXOR**' option is selected.

CAN to serial/Serial to CAN

The CAN to serial and Serial to CAN ports allow Serial communication via CAN bus. For this, **Serial to CAN** creates a message with a specific sequence which ensures the transmission of serial message data; and **CAN to serial** undoes this transformation to a regular serial message.

To ensure proper communication using the "Serial over CAN" protocol, the following structure must be adhered to:

1. **Frame Structure**
    - Each CAN frame must begin with a **sequence number** in the first byte (**Byte 0**).

- The sequence number must increment monotonically and wrap back to zero after reaching **255**.
- The remaining bytes of the frame (**Byte 1 to Byte 7**) contain the **data payload**.

2. **Frame Sequence Example**

   The following example illustrates a correctly structured frame sequence:

Byte 0 (Sequence)	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
0x34	0xA0	0xA1	0xA2	0xA3	0xA4	0xA5	0xA6
0x35	0xA7	0xA8	0xA9	0xAA	0xAB	0xAC	0xAD
0x36	0xAE						

3. **Deserialization Process**
   - Upon reception, the payload must be reconstructed by concatenating the **data bytes** from sequential frames.
   - The expected output of the deserialized payload will be: 0xA0, 0xA1, 0xA2, 0xA3, 0xA4, 0xA5, 0xA6, 0xA7, 0xA8, 0xA9, 0xAA, 0xAB, 0xAC, 0xAD, 0xAE

> ⚠ **Warning**
>
> - If a **jump of more than 8** in the sequence number is detected, it will be assumed that **some data has been lost** and the **internal counter** will be restarted to the new (higher) sequence number to **realign the data stream**.


For further details on how to use these ports, consult the Serial messages transmission via CAN bus - Integration examples and the Serial messages reception via CAN bus - Integration examples sections of the present manual.

CAN wrapper/CAN unwrapper

The CAN wrapper and CAN unwrapper ports allow CAN communication via serial. For this, **CAN wrapper** creates a message with a specific sequence

which ensures the transmission of CAN message data; and **CAN unwrapper** undoes this transformation to a regular CAN message.

The structure of the messages sent/received by the CAN wrapped and CAN unwrapped respectively is the following:

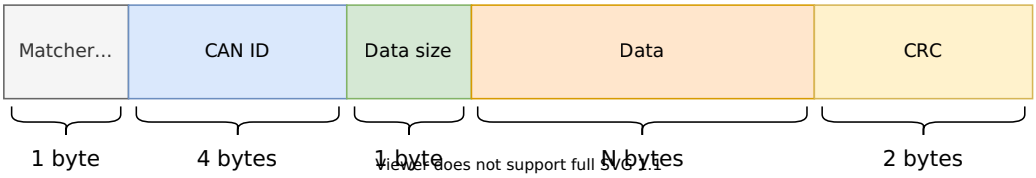

CAN wrapper/unwrapper - Message structure


Content	Size
Matcher: 0xCA	1 byte
CAN ID	4 bytes
Data size	1 byte
Data	N bytes
CRC	2 bytes

For further details on how to use these ports, consult the CAN messages transmission via serial - Integration examples and the CAN messages reception via serial - Integration examples sections of the present manual.

If you want to use an extended CAN ID, in the 4 bytes where the ID is specified, you must set bit 32 to 1. That is to say, execute a logical AND with the desired ID and the mask 0x80000000.

NMEA 0183 GGA

NMEA 0183 GGA is another way to add an external GNSS device. This consumer allows to receive NMEA 0183 messages and parses them directly. The NMEA 0183 GGA configuration menu includes the following parameters:

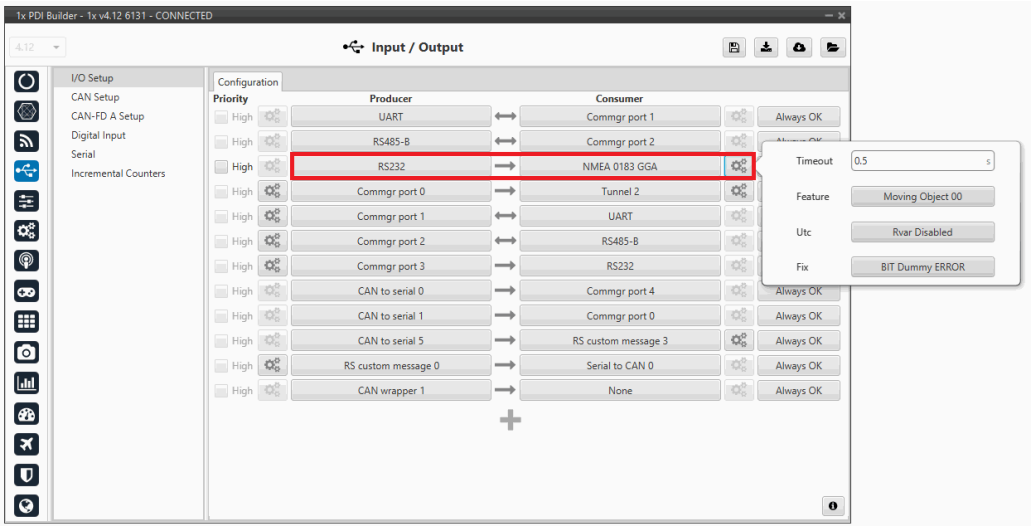

NMEA 0183 GGA configuration


- **Time out**: Defines the period of incoming information from the external system.
- **Feature**: Variable extracted from the message defining the GNSS position. Usually Moving Object variables are used.
- **Utc**: Variable extracted from the message defining the UTC.
- **Fix**: Data provided by the external device which is important to know the status of the positioning.

Once the NMEA message has been parsed, the variables used for **Fix** and **Feature** can be selected in the GPS External configuration of the GNSS block as **Fix Bit** and **GPS Position**. For more information about this configuration, see Sensors blocks - Block Programs section of this manual.

CAN Setup

A CAN (Controller Area Network) Bus is a robust vehicle bus standard widely used in the aviation sector. Autopilot 1x is fitted with two CAN buses that can be configured independently.

The structure of a CAN message can be seen in the following image:

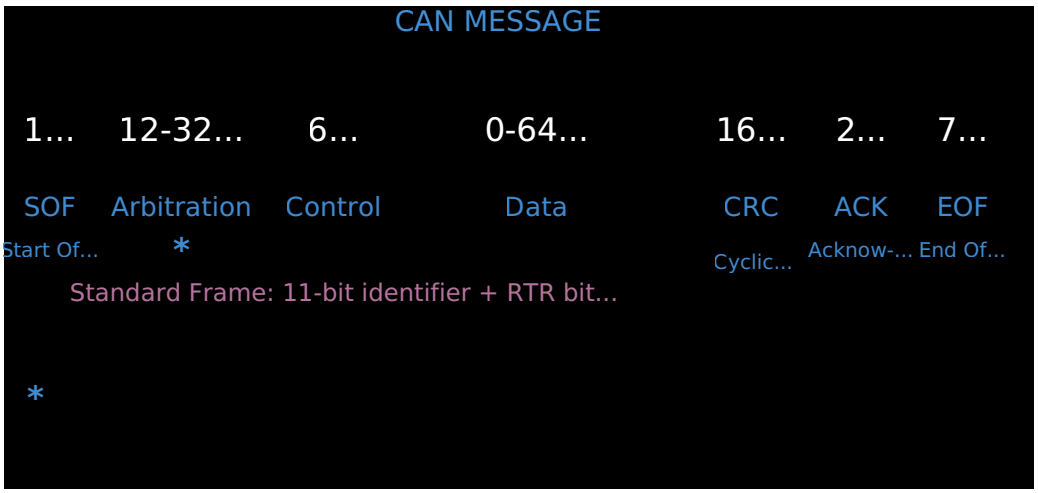

CAN message structure


Only the ID is introduced in the system, the rest of the message layout is already coded. The data field is the one build by the user to send, and parsed when received.

The baud rate of both CAN buses can be configured in the Mailboxes panel.

The steps to be followed from the moment a CAN message arrives at or is sent from the Autopilot 1x are described in the CAN communication - Integration examples section of this manual.

Configuration

This panel allows the configuration of communications between different devices.

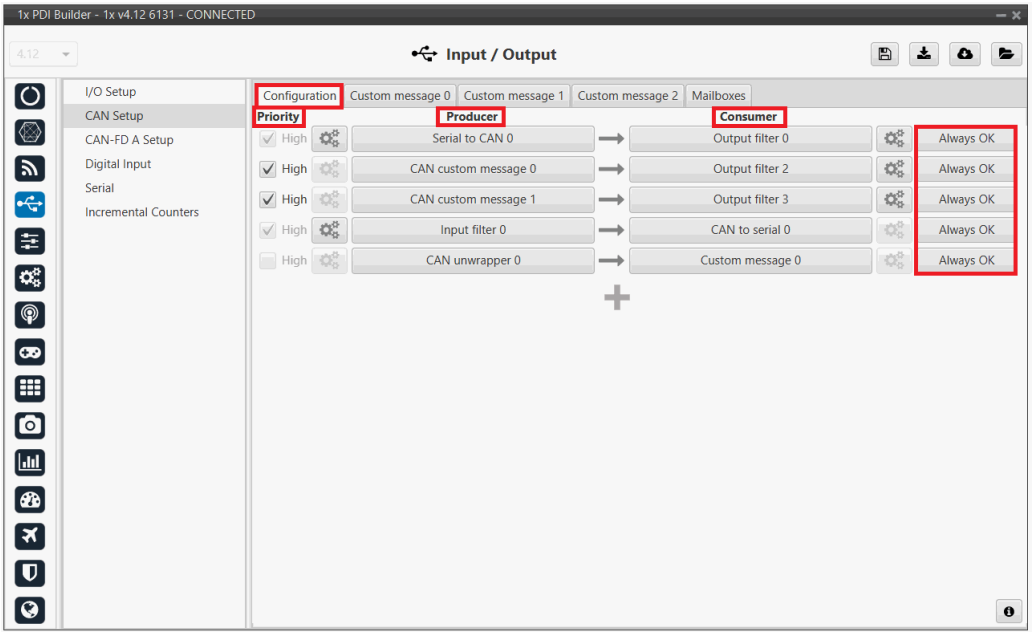

Configuration panel

In this panel, the user can find the same 'columns' (**Priority**, **Producer**, **Consumer** and **Always ok**) as in the I/O Setup panel. In addition, the process for configuring producers and consumers is also the same as described in the I/O Setup - Input/Output section.

Regarding the **Priority** option, users should note:


- Connections that are automatically configured as **high priority** (checkbox marked) and cannot change to **low priority**:
  - **Input filter 0-5** → **CAN to serial 0-5**
  - **Serial to CAN 0-5** → **Output filter 0-5**
- Connections that **can be enabled** as **high priority** (checkbox marked):
  - **CAN custom message 0-2** → **Output filter 0-5**
  - **CAN custom message 0-2** → **CAN wrapper 0-1**
  - **Input filter 0-5** → **Output filter 0-5**
  - **Input filter 0-5** → **CAN wrapper 0-1**
  - **Input filter 0-5** → **CAN 4x**
  - **CAN unwrapper 0-1** → **Output filter 0-5**
  - **CAN GPIO remote 0-1** → **Output filter 0-5**
  - **CAN GPIO remote 0-1** → **CAN wrapper 0-1**
  - **CAN 4x** → **CAN to serial 0-5**
  - **CAN 4x** → **Output filter 0-5**
  - **CAN 4x** → **CAN wrapper 0-1**
  - **CAN 4x** → **CAN 4x**

For some connections the priority option is not available due to computational burden.

> ⚠ **Warning**
>
> In CAN, while the specified period is not guaranteed in the Low state, in the High state it is.
>
> However, only those **messages that are critical for external devices** should be set as **high priority**, as this may disrupt the proper functioning of Veronte Autopilot 1x.

On the one hand, Autopilot 1x has the **producers** shown below:

- **Serial to CAN**: Serial messages over CAN output, it has to be connected to I/O Setup **consumer**. It can be configured in the **configuration button** (icon), a pop-up window will appear:

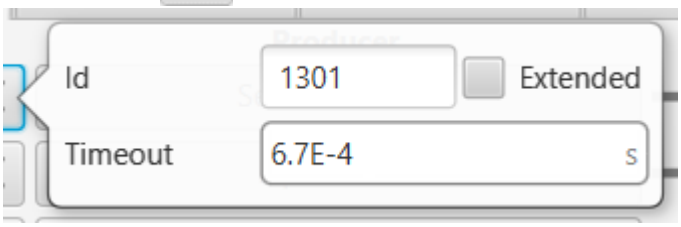

Serial to CAN configuration

  - **Id**: CAN Id must be set and it is used to identify messages. The value set has to be **decimal format**.
  - **Extended**: If enabled, the frame format will be this, 'Extended', i.e. with a 29-bit identifier. Otherwise, the frame format 'Standard' (11-bit identifier) is set by default.
  - **Time out**: This is the threshold time between receptions to consider that it is not being received correctly.
- **CAN custom message**: CAN custom messages transmission. They are configured in the Custom message tabs, explained in Custom Messages section.
- **Input filter**: CAN input filters. Those CAN messages received in one filter can no longer be received in subsequent filters. Input filter must be configured in the **configuration button** (icon), a pop-up window will appear:


Input filter configuration

- **Port**: It is required to configure the CAN bus from which it listens, the user can choose between CAN A, CAN B or CANFD A.
- **Id**: CAN Id must be set and it is used to identify messages. The value set has to be **decimal format**.
- **Mask**: Here a CAN Id mask can be set to filter messages. **The mask marks which bits of the message id (in binary) are matched**. For example, to admit standard Ids (11 bits) from 8 to 11 (100 to 111 in binary) the user should set the mask to binary 11111111100, that is 2044 in decimal.

> ⚠ **Warning**
>
> Make sure that mask is set properly to be able to receive the desired CAN messages.
>
> The mask should be **11 bits for Standard** frame format and**29 bits for Extended** frame format.
>
> More information about this can be found in How to calculate a mask section of this manual.

- **Filter type**: The options available are Standard, Extended and Both.

- **CAN unwrapper**: This undoes the 'CAN wrapper' action, it has to be connected to I/O Setup **consumer**.
- **CAN GPIO remote**: CAN messages to GPIO peripherals such as CEX, MEX and Arbiter. It can be configured in the **configuration button** (icon), a pop-up window will appear:

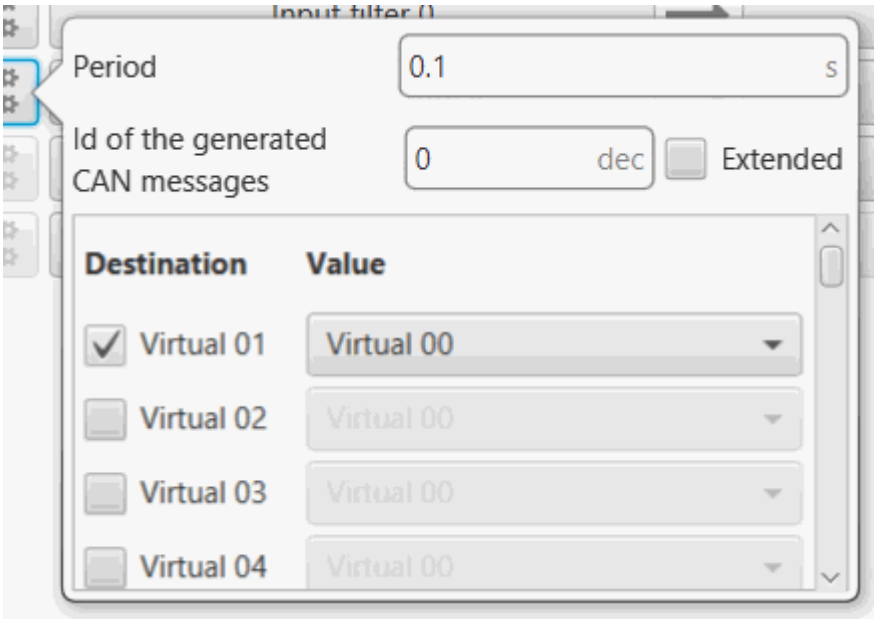

CAN GPIO remote configuration


- **Period**: This is the period of sending messages.
- **Id of the generated CAN message**: CAN Id must be set and it is used to identify messages.
- **Extended**: If enabled, the frame format will be this, 'Extended', i.e. with a 29-bit identifier. Otherwise, the frame format 'Standard' (11-bit identifier) is set by default.
- **Destination**: Here the user select the destination CEX (or other Veronte peripheral) pins.
- **Value**: The user must select the 1x pin to be connected to the CEX (or other Veronte peripheral) pin.

- **CAN 4x**: CAN message transmission already configured for correct **communication between the Autopilots 1x within the Veronte Autopilot 4x**.

If the user has any questions, please contact the support team following the Joint Collaboration Framework.

On the other hand, the **consumers** are the following:

- **CAN to serial**: This undoes the 'Serial to CAN' action, it has to be connected to I/O Setup **producer**.
- **Custom message**: CAN custom messages reception. They are configured in the Custom message panels, explained in Custom Messages section.
- **Output filter**: CAN output filters. The user can choose between CAN A, CAN B, CANFD A or ALL in the **configuration button** (icon).

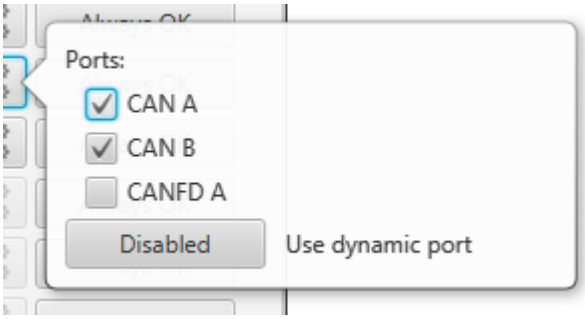

Output filter configuration

- **Use dynamic port**: When enabled, the transmission CAN bus is selected according to the value of a **user variable**. This variable is set

by a custom logic defined by the user (e.g. by means of automations or blocks), allowing the output to follow a specific bus when several are selected.

The user variable is interpreted as a bitmask, where each bit enables one CAN bus: **bit 0** corresponds to **CAN A**, **bit 1** to **CAN B** and **bit 2** to **CANFD A**. The correspondence between the user variable values and the CAN buses is the following:

Binary	Decimal	CANFD A (bit 2)	CAN B (bit 1)	CAN A (bit 0)	Enabled buses
000	0	✗	✗	✗	None
001	1	✗	✗	✓	CAN A
010	2	✗	✓	✗	CAN B
011	3	✗	✓	✓	CAN A + CAN B
100	4	✓	✗	✗	CANFD A
101	5	✓	✗	✓	CAN A + CANFD A
110	6	✓	✓	✗	CAN B + CANFD A
111	7	✓	✓	✓	CAN A + CAN B + CANFD A

- **CAN wrapper**: CAN messages over serial output, it has to be connected to I/O Setup **producer**.


- **CAN 4x**: CAN message reception already configured for correct **communication between the Autopilots 1x within the Veronte Autopilot 4x**.
  If the user has any questions, please contact the support team following the Joint Collaboration Framework.

Custom Messages

In the custom message tabs (there are 3 available), the user chooses the variables to be sent/received over the CAN buses. The following elements can be configured:


- **TX Ini**: Used to configure transmitted messages that are only sent once at the beginning of the operation (sent when the autopilot boots up).
  They can be used to initialize some devices.
- **TX**: Used to configure transmitted messages.
- **RX**: Used to configure the reception messages (where they are stored).

> ⚠ **Warning**
>
> - The **maximum capacity** of a **CAN message** is **64 bits** (8 bytes), so to send more information it must be divided into several messages.
> - Autopilot 1x has a **CAN limitation** of **40 TX** messages per Custom, **40 TX Ini** messages per Custom and **80 RX** messages per Custom.
>   In addition, there is a global limit shared by all Custom Messages (both consumers and producers), whether **Serial** or **CAN**:
>   - Maximum number of **messages**: **104**
>   - Maximum number of **fields**: **2000**

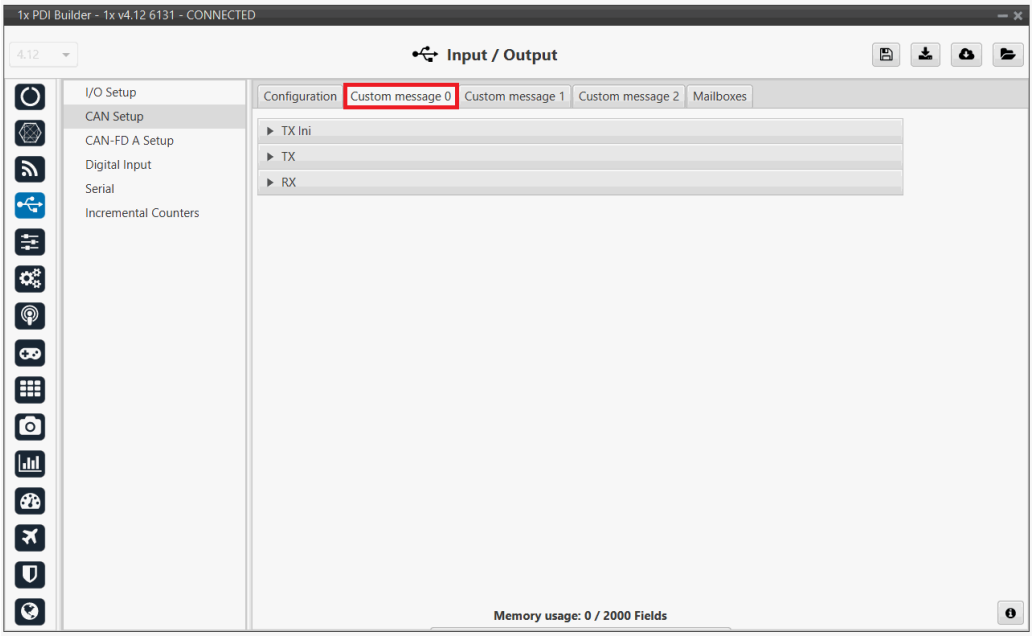

Custom Message panel

TX/TX Ini Messages

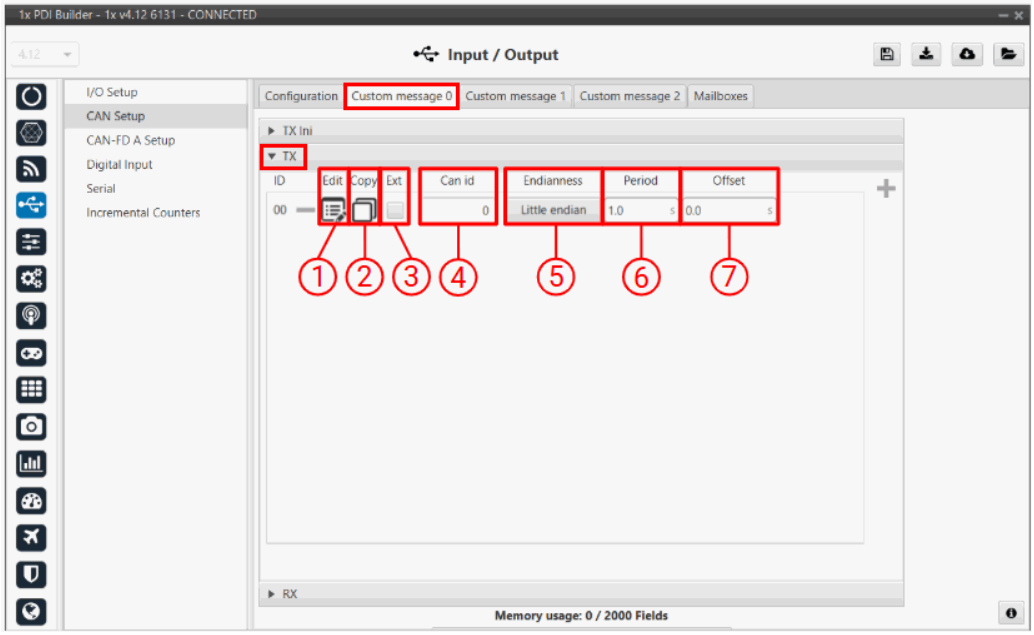

CAN Custom Message - TX

In order to add a new custom message the user needs to press ➕ and a new element will be added into the panel.

1. **Edit** : Displays the menu to configure how the bits/bytes of the message are divided and sent.


   There are six different options that can be added when setting up a custom message: **Variable**, **Checksum**, **Matcher**, **Skip**, **Parse ASCII** and **Position**.

The explanation of how to configure these different types of custom messages is detailed in the following section ⇒ Custom Messages types.

2. **Copy**: This message will be duplicated. **Period**: This is the time in seconds between TX messages delivery. To send a single message on demand, the user has to set its period to -1. This way, this message will only be sent when this action is triggered. Custom CAN TX
3. **Ext**: If enabled, the frame format will be 'Extended', i.e. with a 29-bit identifier. Otherwise, the frame format 'Standard' (11-bit identifier) is set by default.
4. **Can id**: 11-bits (Standard) or 29-bits (Extended) ID used to identify TX messages. The value set has to be **decimal format**.
5. **Endianness**: The endianness of the message must be configured, which indicates how the bytes that it contains are sent/read:
   - **Big endian**: Set the value from left to right.
   - **Little endian**: Set the value from right to left.
   - **Mixed endian**: Some devices use this format. If users need to configure it, please contact the support team (create a ticket in the customer's **Joint Collaboration Framework**; for more information, see Tickets section of the **JCF** manual).
6. **Period**: This is the time in seconds between TX messages delivery. To send a single message on demand, the user has to set its period to -1. This way, this message will only be sent when this action is triggered. Custom CAN TX.
7. **Offset**: It is possible to set a specific time interval in order to delay the sending of messages over time, avoiding simultaneous sending.

RX Messages

The procedure is similar to the one followed in TX messages.

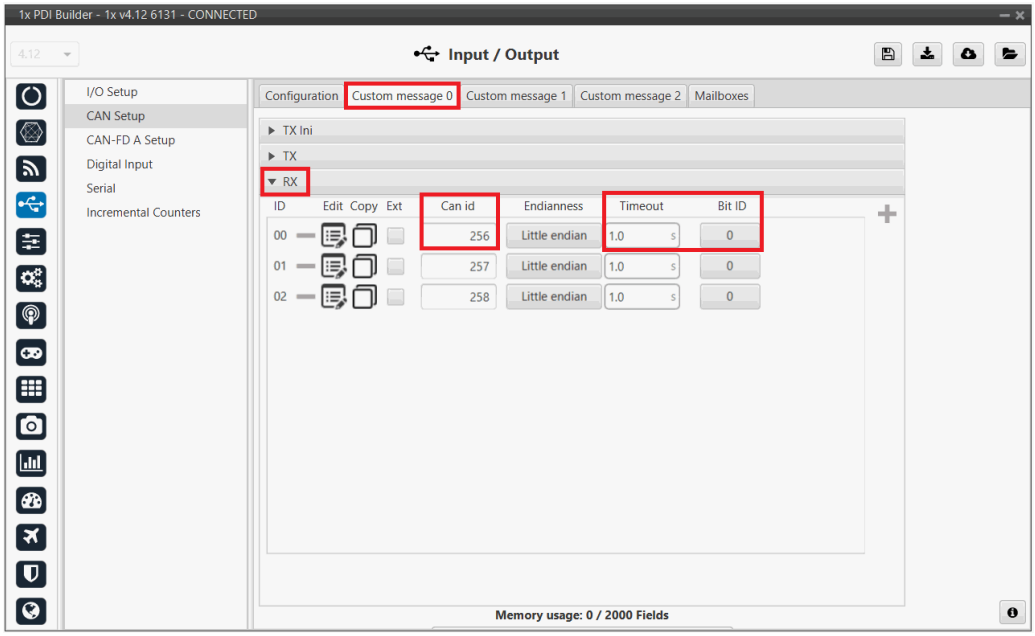

CAN Custom Message - RX

The options and parameters to configure here are almost the same as those described in TX/TX Ini Messages above, except for one:

- **Can id**: The custom message needs to have the expected ID with which the external device/sensor is going to be sending information.

> **Important**
>
> It is important to configure a mailbox for every single reception ID. See Mailboxes section for more information.

Also, unlike TX messages there is **two additional variables per message**:

- **Time out**: for RX messages. This is the threshold time between receptions to consider that it is not being received correctly. For example, if time out is set to 1s and it passes more than 1s since the last reception, the Bit ID will be set to false.
- **Bit ID**: The user bit selected in Bit ID box will be true if the message is being received correctly.

> **Warning**
>
> Pay attention that the user bit selected in **Bit ID** is not in use for another task.


The custom message structure needs to match the reception data-format. **User variables** (real - 32 bits , integer - 16 bits or boolean - 1 bit) may be used to store that data.

Mailboxes

Main screen to configure baudrate and reception mailboxes of each CAN bus (CAN A or CAN B).

Since Veronte Autopilot 1x is going to receive data on the CAN Bus, it is mandatory to configure a certain number of mailboxes to store that data until Autopilot 1x reads it. A mailbox can be configured for multiple CAN message IDs as long as the mask is configured correctly and these messages are **sent spaced out** with enough time between them to allow the high priority core to read each one individually. More information on masks can be found in How to calculate a mask - FAQ section of this manual.

> ⚠ **Warning**
>
> Since **1x PDI Builder allows up to 32 mailboxes**, users should make sure to **leave at least one mailbox free for transmission (TX)**.
>
> If any mailbox is **full** and another message arrives, the **new** message is **discarded**.

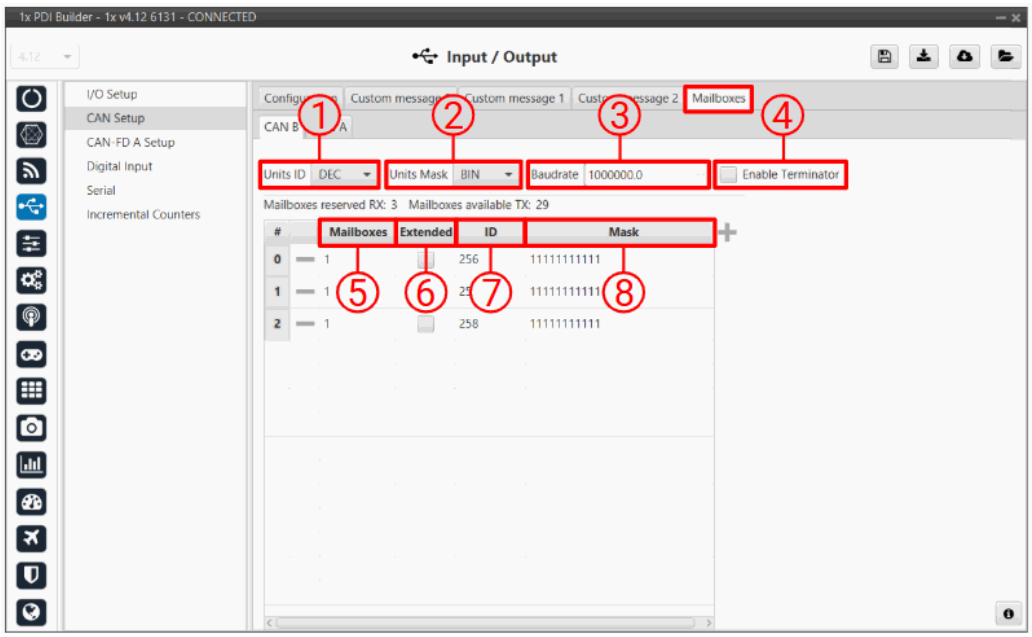

Mailboxes panel

In order to add a mailbox, press the ➕ icon.

The configurable parameters when adding a new mailbox are:

1. **Units ID**: Units available are **Decimal**, **Hexadecimal** or **Binary**.
2. **Units Mask**: Units available are **Decimal**, **Hexadecimal** or **Binary**.
3. **Baudrate**: CAN Baudrate can be configured here.
4. **Enable Terminator**: It allows enabling the internal CAN resistor.

   > ⚠ **Warning**
   >
   > If the function is **not** available for the autopilot version, the CAN resistance **cannot be disabled**.

5. **Mailboxes**: Number of mailboxes assigned to that ID.
6. **Extended**: If enabled, the frame format will be this, 'Extended', i.e. with a 29-bit identifier. Otherwise, the frame format 'Standard' (11-bit identifier) is set by default.
7. **ID**: 11-bits (Standard) or 29-bits (Extended) ID used to identify RX messages. The value set can be defined in different units, this is configured in **(5)**.
8. **Mask**: This filter is configured for reception messages; received data will be stored on mailboxes where message ID coincides with mailbox ID.
   Mask adds some flexibility on the reception, when comparing message with mailbox data, only the value of binary digits configured as 1 on the mask will be taken into account. The value set can be defined in different units, this is configured in **(6)**.
   For example, for a configuration **mask**: **11** 000 and **ID**: **10** 110, all incoming messages addressed to **10** XXX will be received in this mailbox.

> ⚠ **Warning**
>
> Make sure that mask is set properly to be able to receive the desired CAN messages. The mask should be **11 bits for Standard** frame format and **29 bits for Extended** frame format.
>
> More information about this can be found in How to calculate a mask - FAQ section of this manual.

Example


Regarding the configuration of masks for mailboxes, it is possible to have only 1 mailbox for the reception of several messages in order to have more mailboxes available.

To do so, let's take as an example the configuration in the image above, with **ID**: **0010 0101 1000** (600 in DEC) and **Mask**: **1111 1111 1100**, all incoming messages addressed to **0010 0101 10XX** will be received in this mailbox.

This is because the mask that has been configured, looks for the **first 10 bits to match** the configured ID, and **ignores the last 2 bits**.

So, the following messages with CAN ID 600, 601, 602 and 603 could be stored in this mailbox (one at time), because:

- 600 DEC in Binary is ⇒ **0010 0101 1000**
- 601 DEC in Binary is ⇒ **0010 0101 1001**
- 602 DEC in Binary is ⇒ **0010 0101 1010**
- 603 DEC in Binary is ⇒ **0010 0101 1011**

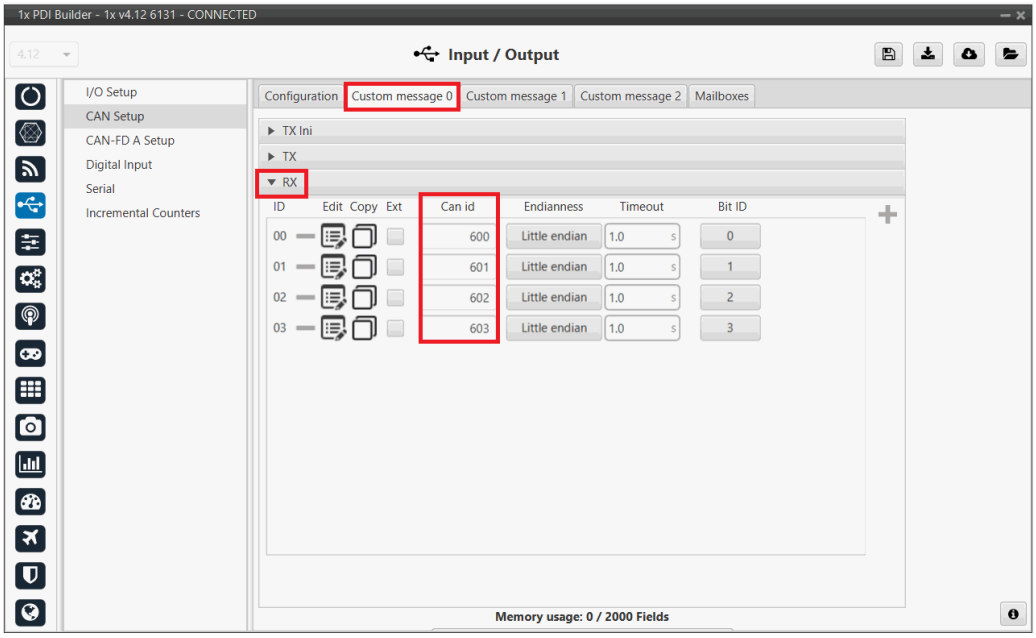

Mailboxes panel - Mask example

Custom Messages types

There are different options that can be added when setting up a custom message: **Variable**, **Checksum**, **Matcher**, **Skip**, **Parse ASCII**, **Parde Hexadecimal ASCII**, **Bitmap**, **BCD**, **Position** and **Incremental Counter**.

Variable

Used to **store certain nº bits in a system variable** (**RX**) or to **send a certain variable** (**TX**).

> ⚠ **Caution**
>
> Users must take into account that Veronte system can handle float variables up to 32 bits (single precision float). Therefore, compression option must be considered to avoid data loss.



Variable configuration - CAN Custom Message

The following parameters are configurable:

- **Variable**: Here the user select the desired system variable.
- **Compression**: The first step is to configure which kind of compression will be used for this variable:
  - **Uncompress**: The variable is taken in its full length, with no value modification.
  - **Uncompress - 64 bits**: Converts the selected variable type to a double precision float:
    - **Real variables (32 bits)**: In **TX**, uncompress from 32 to 64 bits. In **RX**, uncompress from 64 to 32 bits.
    - **Integer variables (16 bits)**: In **TX**, uncompress from uint 16 to float 64 bits. In **RX**, uncompress from float 64 to uint 16 bits.
    - **Bit variables (1 bit)**: In **TX**, uncompress from 1 to 64 bits. In **RX**, uncompress from 64 to 1 bit.

    > ⚠ **Warning**
    > Be careful! This transformation implies a loss of precision in both directions.

  - **Compress**: Compress to the specified number of bits. Users have to specify it in the field **Max** of the **Encode** parameter as follows: $2^n - 1$, where n is the desired number of bits to use to send/receive the variable. Note that this value (Max field) is the maximum value that can be obtained with the desired number of bits (n).

    > ⚠ **Important**
    > This is only available when **Integer variables (16 bits)** are selected.

  - **Compress - Decimals**: The variable is compressed according to the number of decimals specified and the range specified (max and min values). The resultant compression (number of bits) follows the relation $(max - min) \cdot 10^{decimals}$, which yields the encoding of the maximum value of the range (and the number of bits necessary for that).
    The range needs to be specified on the **Encode - Min/Max** field.

- **Compress - Bits Signed**: Specify the number of bits to be compressed to (**negative values accepted**). It is necessary that the user configures **Encode/Decode** options.
- **Compress - Bits Unsigned**: Specify the number of bits to be compressed to (**no negative values accepted**). It is necessary that the user configures **Encode/Decode** options.

> **Important**
> The compression options Compress - Decimals, Compress - Bits Signed and Compress - Bits Unsigned are **not available** when an **Integer variable (16 bits)** is selected.

- **Uncompress - 16 bits**: Converts the selected variable type to a half precision float:
  - **Real variables (32 bits)**: In **TX**, uncompress from 32 to 16 bits. In **RX**, uncompress from 16 to 32 bits.
  - **Integer variables (16 bits)**: In **TX**, uncompress from uint 16 to float 16. In **RX**, uncompress from float 16 to uint 16.
  - **Bit variables (1 bit)**: In **TX**, uncompress from 1 to 16 bits. In **RX**, uncompress from 16 to 1 bit.

- **Encode/Decode**: These values are used to apply a scaling factor after the transformation from binary to decimal value, or before the transformation from decimal to binary value.

> **Note**
> If no compression is desired, the same values must be set in min/max Encode and min/max Decode. For example, Encode min=0 / max=1 and Decode min=0 / max=1.

Example


In the example shown below, a real user variable (32 bits) is being used to receive data from an external device. This data corresponds to the heading angle of the aircraft (which goes **from 0 to 359 degrees**). The device is sending this information in a **16-bit** data frame and the angle value times 100 (hence why the **Decode** parameter goes **from 0 to 35900**). This needs to be saved in **1x PDI Builder** in the user variable in the range 0 to 359 (**Encode**).



Variable configuration example

Checksum (CRC)

Sometimes, **control codes** are needed for **preventing random errors in transmission**, where a bits frame is operated and the result is sent to the receiver to check it. To do so the CheckSum option is used.

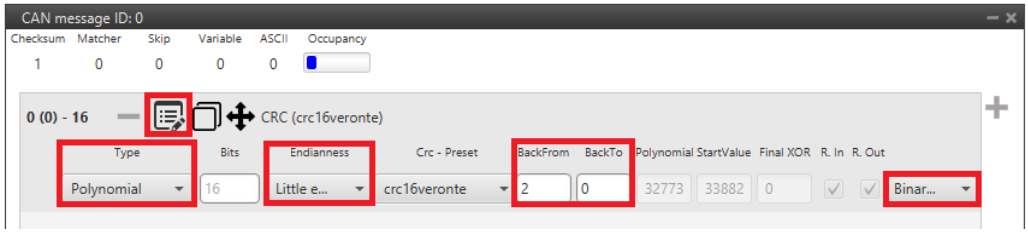


Checksum configuration - CAN Custom Message

- **Type**: User can choose the type of CRC that will be applied.
  - Polynomial: Polynomial algorithm for CRC. Select from a list of predefined Embention CRC (**CRC-Preset** option). This is the most used type.
  - sum: The CRC algorithm (sum) calculates an 8-bit checksum, which is used for error detection purposes. Basically, it processes the sum of all bytes from a sequency, and then performs a bitwise division by 255 to retrieve the CRC result code.
  - sumMod: The CRC module (sumMod) is a process to calculate a checksum, which is used for error detection purposes. It processes the sum of all bytes from a sequency, and uses a euclidian division by the module parameter to obtain the CRC result code.
  - Mavlink: Embention has implemented the Mavlink checksum, used only for Mavlink protocol communications.
  - 8-bit sagetech checksum: It is an owned checksum algorithm from Sagetech, that is used by Sagetech devices for error detection purposes. It is based on Fletcher checksum.

The following parameters must be set **independently of the type** of checksum selected:

- **Endianness**: The endianness of the message must be configured, which indicates how the bytes that it contains are sent/read:
  - **Big endian**: Set the value from left to right.
  - **Little endian**: Set the value from right to left.
- **Back From**: Indicates that the CRC will be computed from the indicated byte (inclusive).
- **Back To**: Indicates that the CRC will be computed to the indicated byte (exclusive).

  Explanation
  - Byte 0 it is referred to the first byte of the Checksum block.
  - The range of calculation of the CRC is defined by the 'Back to' and 'Back from' parameters. They define, respectively, a number of bytes as an offset from the position of the CRC.

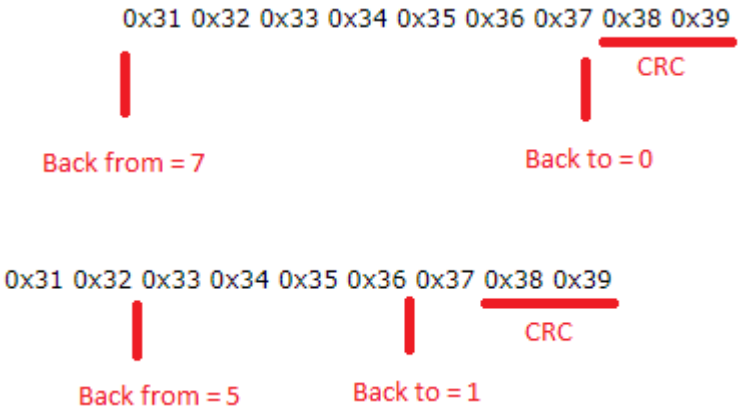


Back to/Back from explanation

- Drop-down menu: User can choose the mode in which the CRC will be output:
  - **Binary mode**
  - **ASCII as hexadeciaml values**
  - **ASCII as decimal values**

The specific parameters for each checksum type, will be described below:

Polynomial type

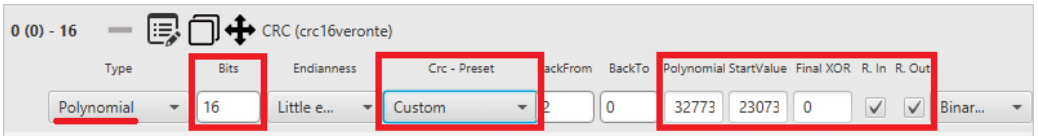


Checksum configuration - Polynomial example

In addition to the 'general' parameters described above, one further parameter must be configured for this type of CRC:

- **CRC - Preset**: List of predefined Embention CRC, where fields nº Bits, Polynomial, Start Value, Final XOR, Reflect In and Out are defined.
  The last option is Custom, where all the above mentioned fields can be defined by the user. Check Polynomial CRC online for more information.
  - **Bits**: This defines the width of the result CRC value (nº bits).
  - **Polynomial**: Used generator polynomial value.
  - **Start Value**: The value used to initialize the CRC value / register.
  - **Final XOR**: The Final XOR value is xored to the final CRC value before being returned. This is done after the 'Result Output' step. Obviously a Final XOR value of 0 has no impact.
  - **Reflected Input**: If this is **enabled**, each input byte is **reflected** before being used in the calculation. Reflected means that the bits of the input byte are used in reverse order. So this also means that bit 0 is treated as the most significant bit and bit 7 as least significant.
  - **Reflected Output**: If this is **enabled**, the final CRC value is reflected before being returned. The reflection is done over the whole CRC value, so e.g. a CRC-32 value is reflected over all 32 bits.

sum type

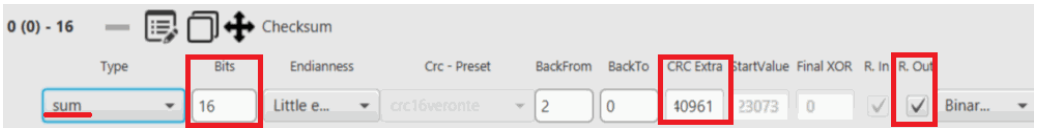


Checksum configuration - sum example

In addition to the 'general' parameters described above, 3 further parameters must be configured for this type of CRC:

- **Bits**: This defines the width of the result CRC value (nº bits).

- **CRC Extra**: Extra CRC added at the end of the message, it will be required by the communication protocol used.
- **Reflected Output**: If this is **enabled**, the final CRC value is reflected before being returned. The reflection is done over the whole CRC value, so e.g. a CRC-32 value is reflected over all 32 bits.

sumMod type

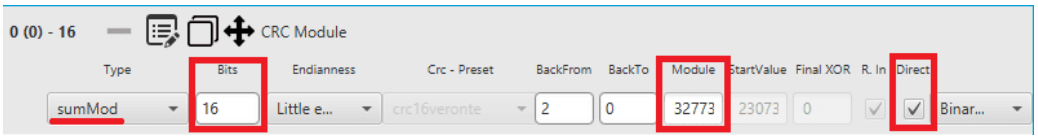

Checksum configuration - sumMod example


In addition to the 'general' parameters described above, 3 further parameters must be configured for this type of CRC:

- **Bits**: This defines the width of the result CRC value (nº bits).
- **Module**: This value is the dividend of the operation carried out.
- **Direct**:
  - If **enabled**, sumMod retrieves the result code directly from the remainder of the division.

    The mathical operation done is: $CRC \% module$.
  - If **disabled**, sumMod keeps the subtraction of the remainder of the division.

    The mathical operation done is: $module - (CRC \% module)$.

Mavlink type

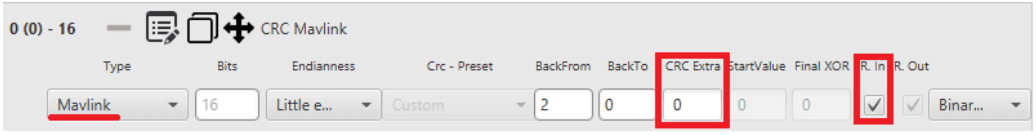


Checksum configuration - Mavlink example

In addition to the 'general' parameters described above, 2 further parameters must be configured for this type of CRC:

- **CRC Extra**: Extra CRC added at the end of the message, it will be required by the Mavlink protocol.

- **Reflected Input**: If this is **enabled**, each input byte is **reflected** before being used in the calculation. Reflected means that the bits of the input byte are used in reverse order.
  So this also means that bit 0 is treated as the most significant bit and bit 7 as least significant.

8-bit sagetech checksum

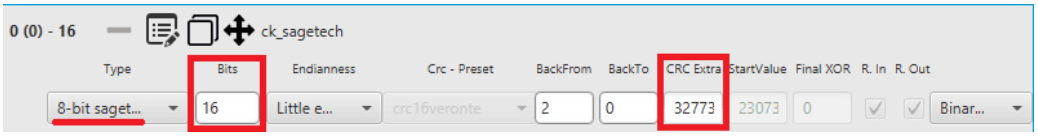

Checksum configuration - 8-bit Sagetech checksum example

In addition to the 'general' parameters described above, 2 further parameters must be configured for this type of CRC:

- **Bits**: This defines the width of the result CRC value (nº bits).
- **CRC Extra**: Extra CRC added at the end of the message, it will be required by the communication protocol used.

Matcher

This option is used to send a **constant value through the bus** in TX or wait for a particular value in RX.



Matcher configuration - CAN Custom Message


- **Value**: Sent/received value for the nº of bits defined below.
- **Bits**: Number of bits in which the matcher is performed.
- **Mask**: It is automatically set when the nº of bits is assigned.

For example, a matcher of 8 bits with a value of 9 will be reading/sending: `00001001` .

Skip

This option is used to **discard a certain number of bits** from the message (the **maximum** number of bits that can be skipped with a single "Skip" are **32**).


This tool can be used when there are variables incoming that are from no interest for the user, not loading unnecessary information into the system.

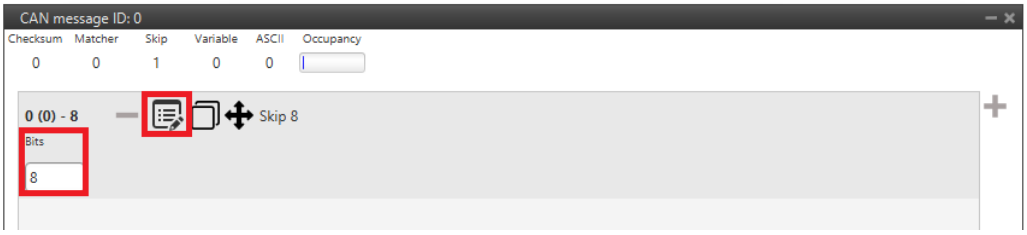

Skip configuration - CAN Custom Message

Parse ASCII

Parsing ASCII is used when the ASCII protocol is required.

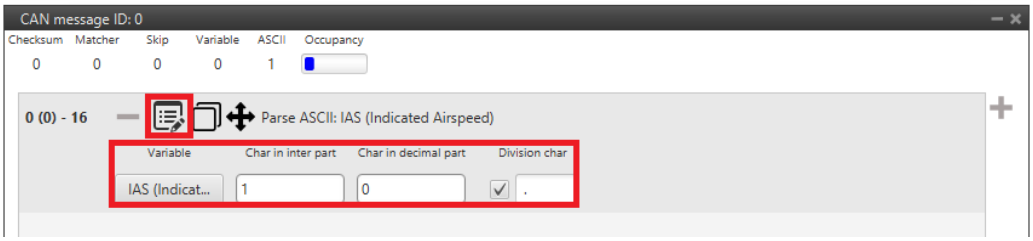

Parse ASCII configuration - CAN Custom Message

ASCII protocol is used for **transforming a character array into decimal values**. For such task, the user needs to define the following parameters:

- **Variable**:
  - If used as **TX**, this variable is where the ASCII will be saved ("uncompress").
  - If used as **RX**, this is the read variable to be transformed into ASCII ("compress").
- **Char in inter part**: The number of characters in the integer part.
- **Char in decimal part**: The number of characters in the decimal part.
- **Division char**: This is the division character ('**.**', '**,**', etc.)

Parse Hexadecimal ASCII

This function is used to interpret a sequence of ASCII characters representing a hexadecimal value and convert it into a real number.




Parse Hexadecimal ASCII configuration - CAN Custom Message

- **Real Variable**: The internal system variable that will be sent (TX) or updated with the received data (RX).
- **Scale Factor**: A multiplier applied to the variable. In RX, the received value is multiplied by this factor before being saved; in TX, the variable value is multiplied by the factor before transmission.

Bitmap

This option is used to map individual bits or groups of bits from the CAN message to boolean system variables or discrete states. It is especially useful for reading or sending status flags, alarms, or digital signals compressed within a single byte.

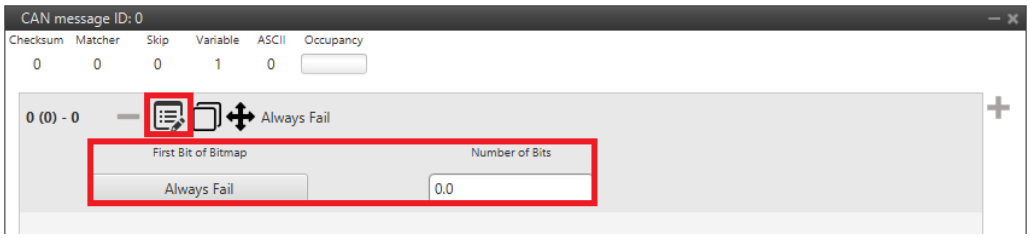


Bitmap configuration - CAN Custom Message

- **First Bit of Bitmap**: Specifies the system variable that corresponds to the first bit of the sequence defined in the CAN message.
- **Number of Bits**: Defines the length of the bit sequence to be mapped. The system will sequentially assign the CAN message bits to the variables starting from the selected one.
  For example, if a 3-bit Bitmap is configured starting from the "Always Fail" variable, the system will map three consecutive bits of the CAN message to the corresponding states.

BCD

BCD (Binary-Coded Decimal) is a coding system where each individual decimal digit (0-9) is represented by its 4-bit binary equivalent. It is used to easily represent and manage decimal numbers in digital systems.

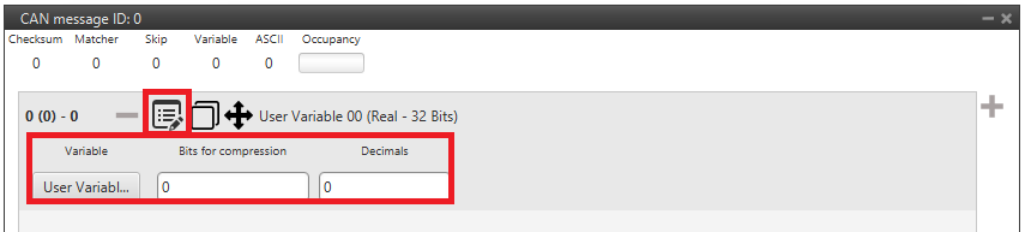

BCD configuration - CAN Custom Message

- **Variable**:
  - If used as **TX**, this variable is where the ASCII will be saved ("uncompress").
  - If used as **RX**, this is the read variable to be transformed into ASCII ("compress").
- **Bits for compression**: Total number of bits occupied by the variable. Each group of 4 bits is equivalent to one digit, and the most significant digit may have fewer bits depending on the specified range
- **Decimals**: Number of digits in the decimal part of the variable

Position

This option is used to map geographical or relative coordinates to the CAN message payload. It allows for the transmission or reception of precise positional data.




Position configuration - CAN Custom Message

- **Feature**: Specifies the internal system parameter related to positioning.
- **Units**: Defines the unit of measurement for the coordinate data.

- **Factor**: A scale factor applied to the value. This ensures the data has the correct resolution when converted between the system's internal representation and the CAN bus format.

Incremental Counters

The Incremental Counter function is used to process the data entered in the Incremental Counters section as input.

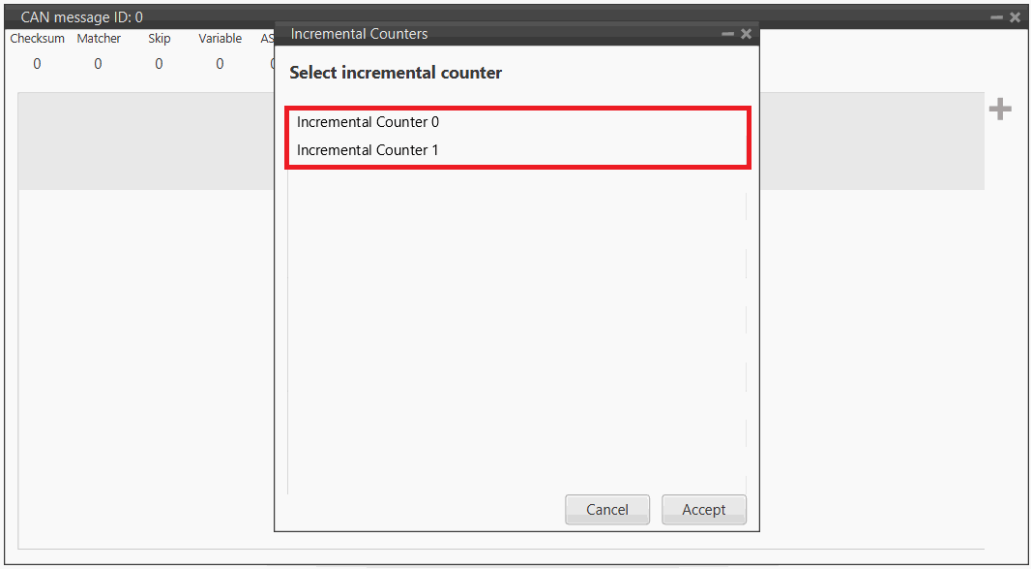

Incremental Counter configuration - CAN Custum Message

Each time a message in which the incremental counter is called is sent the value of the latter is increased by the amount set in the Incremental counter submenu. The value is also reset every time the counter reach the maximum value allowed by the amount of bits configured.


CAN-FD A SETUP

CAN-FD A Setup panel allows for the management of communication on the CAN bus. The setup is divided into two main areas: reception filter management (Mailboxes) and communication speed settings (Baudrate*).

Mailboxes

In this tab, the user defines how the system filters and stores incoming messages from the bus. Since Veronte Autopilot 1x receives data on the CAN-FD bus, it is mandatory to configure mailboxes to temporarily store data until the system processes it. A mailbox can be configured for multiple CAN message

IDs as long as the mask is correctly set and messages are sent with enough spacing for the core to process them.

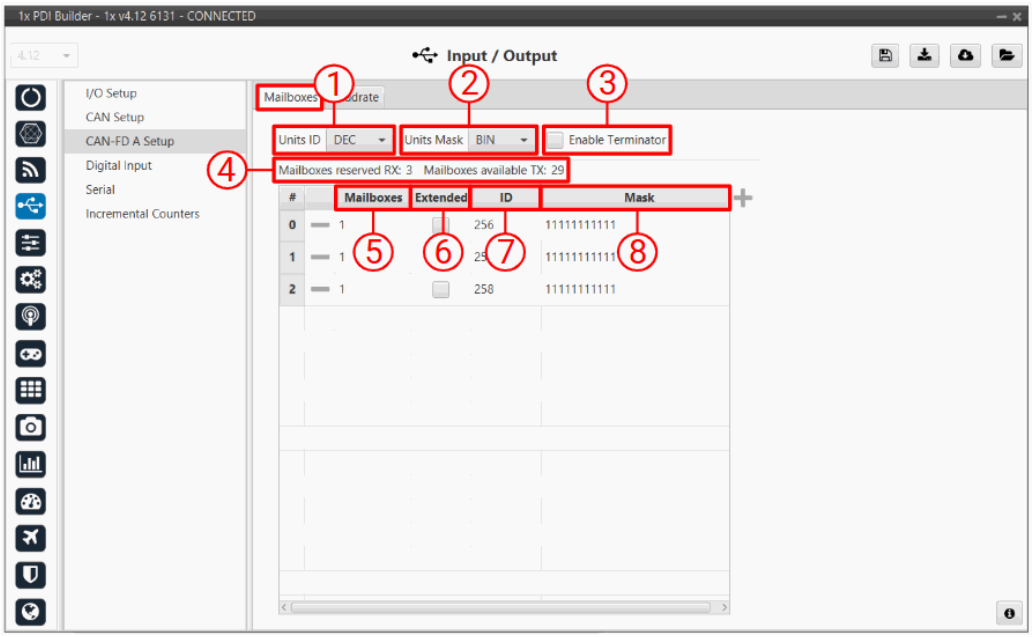

CANFD-A - Mailboxes

In order to add a mailbox, press the ➕ icon.

Find below the configurable parameters:

1. **Units ID**: Units available are **Decimal**, **Hexadecimal** or **Binary**.
2. **Units Mask**: Units available are **Decimal**, **Hexadecimal** or **Binary**.
3. **Enable Terminator**: It allows enabling the internal CAN resistor.

   > ⚠ **Warning**
   >
   > If the function is **not** available for the autopilot version, the CAN resistance **cannot be disabled**.


4. **Mailboxes reserved RX / available TX**: Indicates the real-time distribution of resources. The system has a total of 32 physical mailboxes. Each row added to the reception table occupies hardware mailboxes, proportionally reducing the number of mailboxes available for transmission (TX).
5. **Mailboxes**: Number of mailboxes assigned to that ID.
6. **Extended**: If enabled, the frame format will be this, 'Extended', i.e. with a 29-bit identifier. Otherwise, the frame format 'Standard' (11-bit identifier) is set by default.

7. **ID**: 11-bits (Standard) or 29-bits (Extended) ID used to identify RX messages. The value set can be defined in different units, this is configured in **(5)**.
8. **Mask**: This filter is configured for reception messages; received data will be stored on mailboxes where message ID coincides with mailbox ID.
   Mask adds some flexibility on the reception, when comparing message with mailbox data, only the value of binary digits configured as 1 on the mask will be taken into account. The value set can be defined in different units, this is configured in **(6)**.
   For example, for a configuration **mask**: **11** 000 and **ID**: **10** 110, all incoming messages addressed to **10** XXX will be received in this mailbox.

   > ⚠ **Warning**
   >
   > Make sure that mask is set properly to be able to receive the desired CAN messages. The mask should be **11 bits for Standard** frame format and **29 bits for Extended** frame format.
   > More information about this can be found in How to calculate a mask - FAQ section of this manual.

Baudrate

The **Baudrate** tab allows users to define specific timing and speed parameters for the CAN-FD bus. Unlike standard CAN, the CAN-FD protocol distinguishes between two different bit rate phases: the arbitration phase and the data phase.

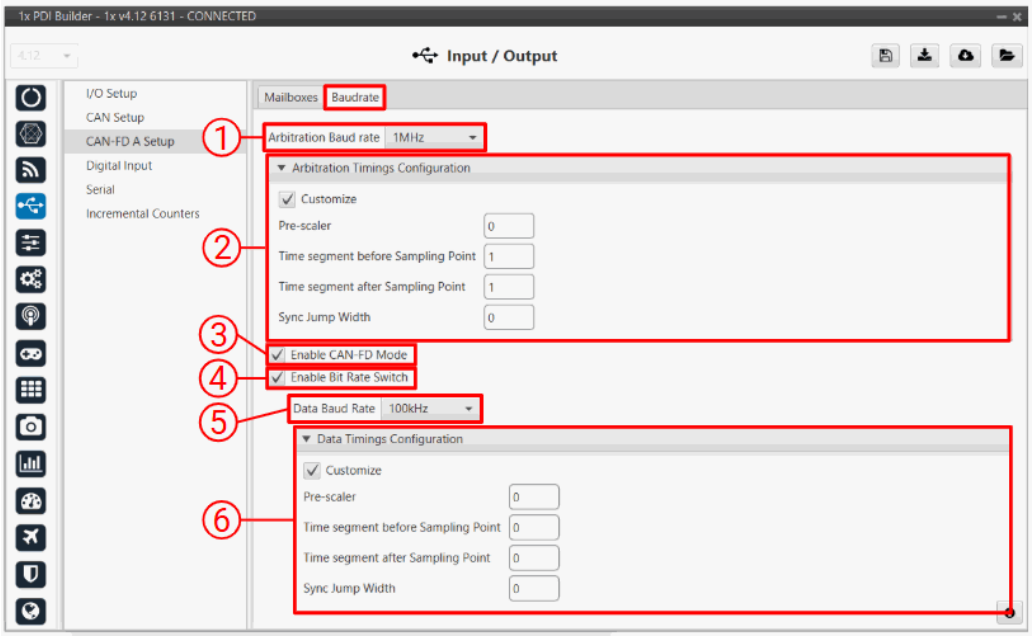

CANFD-A - Baudrate

Find below the configurable parameters:

1. **Arbitration Baud rate**: A dropdown menu to select the base communication speed.
2. **Arbitration Timings Configuration**: By enabling the customize checkbox, users can manually define the low-level timing segments of the bit:
   - **Pre-scaler**: Sets the time quantum length.
   - **Time segment before Sampling Point**: Sets the duration of the phase preceding the sampling point; correct configuration ensures signal stability when the bit is read.
   - **Time segment after Sampling Point**: Defines the phase duration after the sampling point to manage propagation delays on the bus.


     > **Tip**
     > For stable communication, it is generally recommended to configure the timing segments so that the Sampling Point is located between 75% and 80% of the total bit duration.

   - **Sync Jump Width**: Specifies the maximum compensation the system can apply to resynchronize with other nodes in case of phase variations. 3. **Enable CAN-FD Mode**: This checkbox must be enabled to use the Flexible Data-rate frame format.

3. **Enable Bit Rate Switch**: When active, the bus will switch to a higher speed during the data payload section of the frame.
4. **Data Baud Rate**: Sets the high-speed rate for the data phase.
5. **Data Timings Configuration**: This section manages much higher bitrates and requires more precise settings for extremely shorter bits, with the aim of maximizing data transfer efficiency while maintaining signal integrity at high frequency.
   The description of the configurable parameters is analogous to the one reported in the Arbitration Timings Configuration section.

Digital Input

Digital inputs can be used to measure pulse count, pulse widths and PPM signals from a RC radio. Each source shall be connected to the desired consumer to allow measurements.

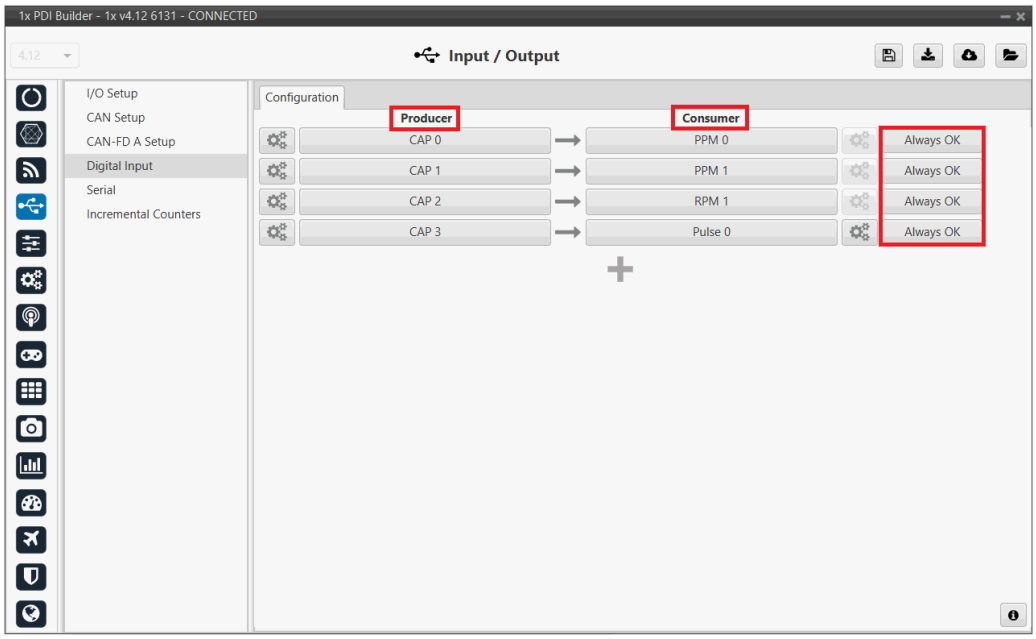


Digital Input panel

In addition, in this menu the user can also find the same 'columns' (**Producer**, **Consumer** and **Bit**) as in the I/O Setup panel. In addition, the process for configuring producers and consumers is also the same as described in the I/O Setup - Input/Output section.

The process to configure a device can be done as follows:

1. Select and configure a **Producer**. There are 6 possible producers: CAP 0 - 5.
   Press on the configuration button (icon) and a new pop-up window will show.

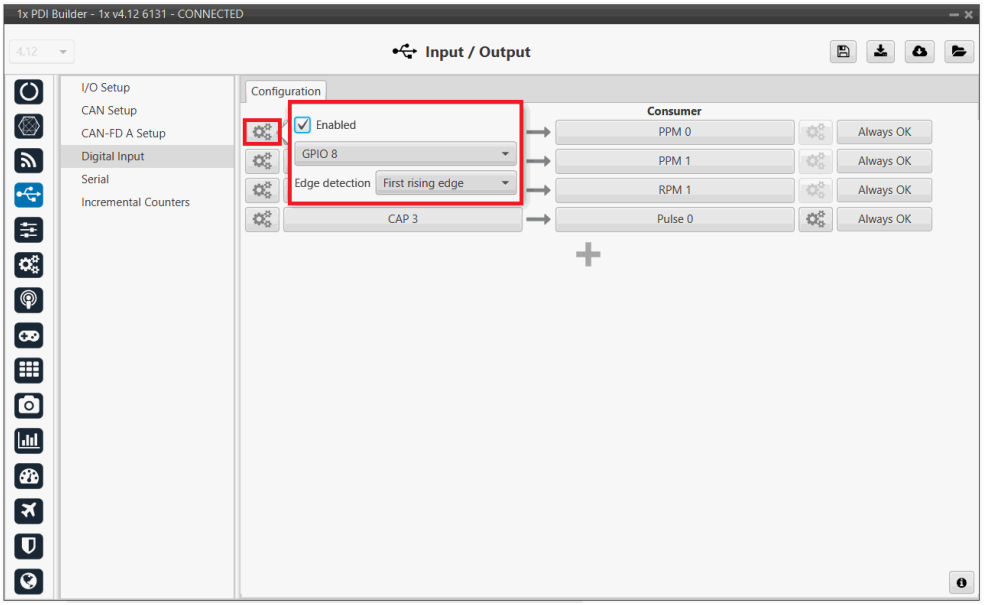


Digital Input panel - Producer

   The pop-up window contains the following configurable elements:

   - **Enable**: By ticking this checkbox, the corresponding producer is enabled.
   - **CAP pin entry**: Selects which **pin** this CAP is associated and, therefore, to which device is connected. It is possible to select these pins.
     Pins available are GPIO 0 to 11, and GPIO A,B.


     > **Note**
     > When using the harness provided by Embention the transmitter Digital Input is connected to the pin 55 (EQEP_A) with pin 59 as Ground.

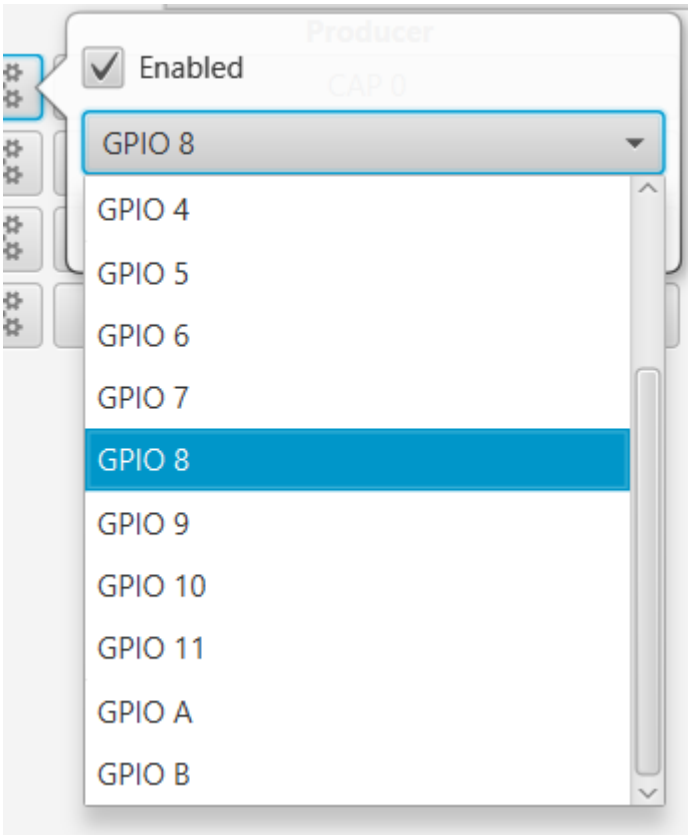

Digital Input panel - CAP

- **Edge detection**: How the pulses are read and transformed into a digital signal (how they are processed).


  By clicking on the drop-down menu, the following options can be selected:

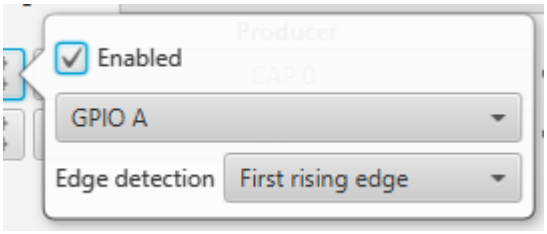

Digital Input panel - Edge detection option


  - **First rising edge**: With this option, when the **rise** of the pulse is detected, the data will start to be stored. Recommended when consumer is **PPM** or **Pulse**.
  - **First falling edge**: With this option, when the **fall** of the pulse is detected, the data will start to be stored.

1. Click on the **Bind** button to select the type of **Consumer**, it is possible to choose among a PPM 0-3 (Stick PPM), RPM 0-5 (RPM sensor) or Pulse 0-3 (Pulse).

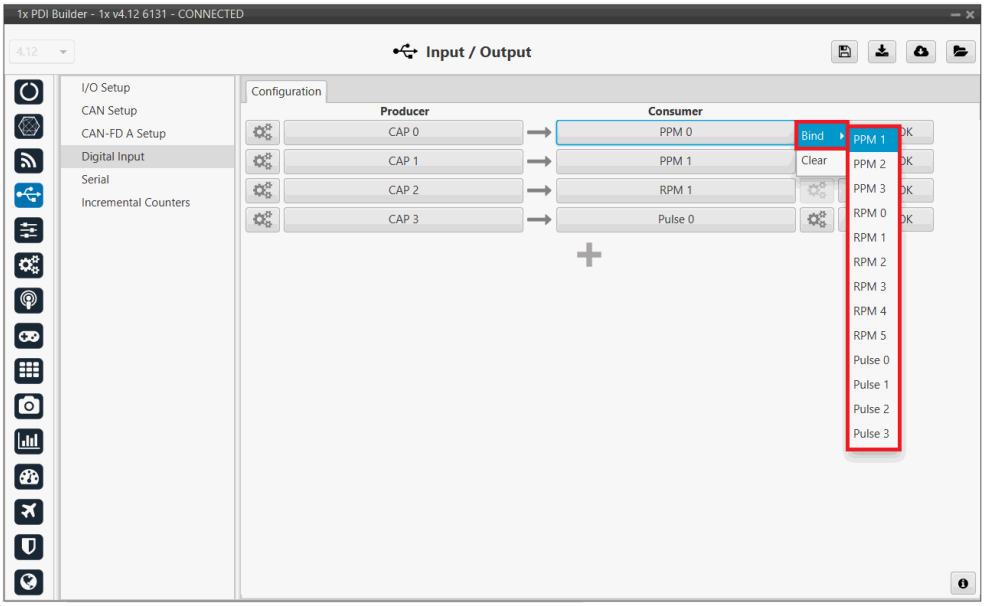

Digital Input panel - Consumer

- **PPM 0-3** selected: PPM is configured in the Stick panel.
- **RPM 0-5** selected: '**RPM 0-5**' variables store the information read here. For more information on the configuration of RPM, see the RPM section.
- **Pulse 0-3** selected: '**Captured pulse 0-3**' variables store the information read here. It is possible to configure it clicking on the **configuration button** ( icon):

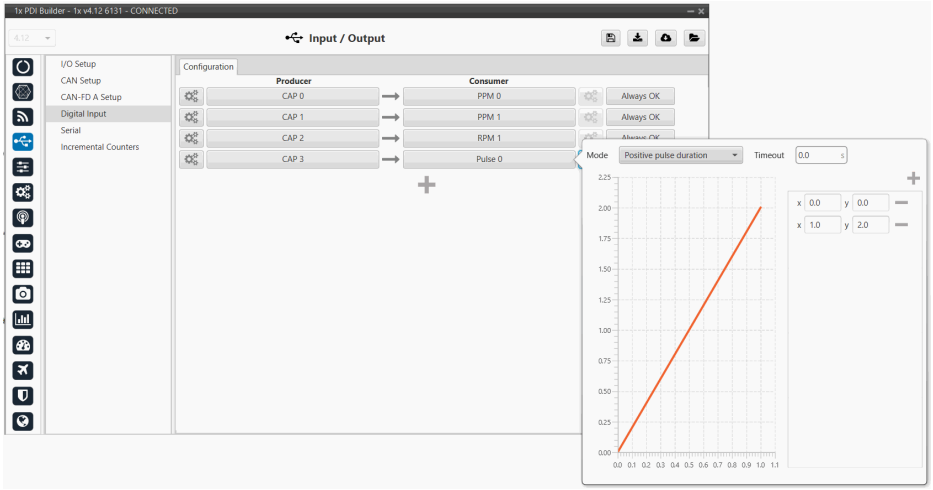


Digital Input panel - Pulse

In the pop-up window, users will find the following options for configuration:

- **Mode**:
  - **Positive pulse duration**: The period of the pulse is obtained. It takes the time in 'High' state.


- **Negative pulse duration**: The period of the pulse is obtained. It takes the time in 'Low' state.

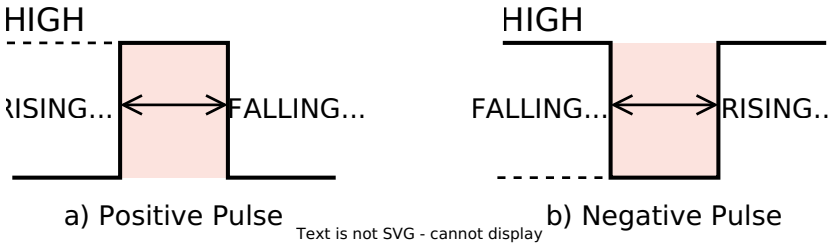

Text is not SVG - cannot display

Positive/Negative pulse duration

- **Positive duty cycle**: The duty cycle. It takes the time in 'High' state.
- **Negative duty cycle**: The duty cycle. It takes the time in 'Low' state.

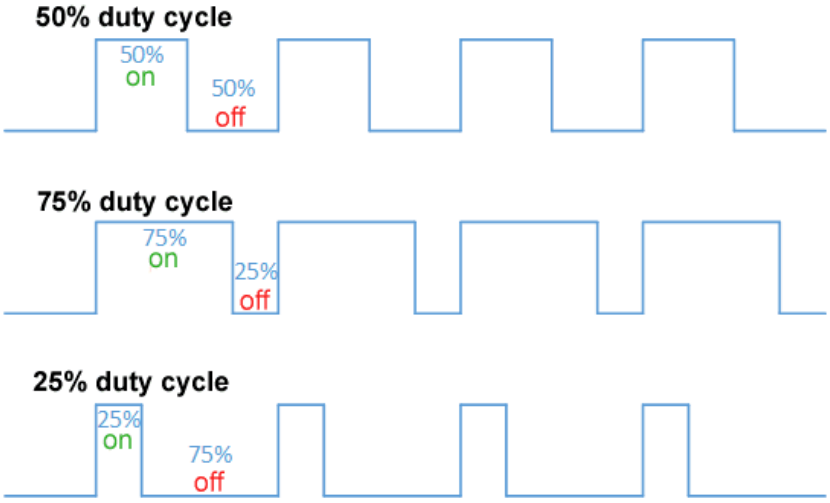


Positive/Negative duty cycle

- **Time out**: This defines the time to consider that no signal is received.
- **Function**: Here the user can customize a function to handle the values.

  Normally, a function is set with the points [0,0] and [1,1], so no transformation is applied, input = output. However, the user can configure it as desired.

Example

Let's imagine that **First rising edge** has been selected as the edge detection option in Producer and the pulse that 1x has to read is a square signal with a period of 2 seconds and a duty cycle of 25% (see image below).

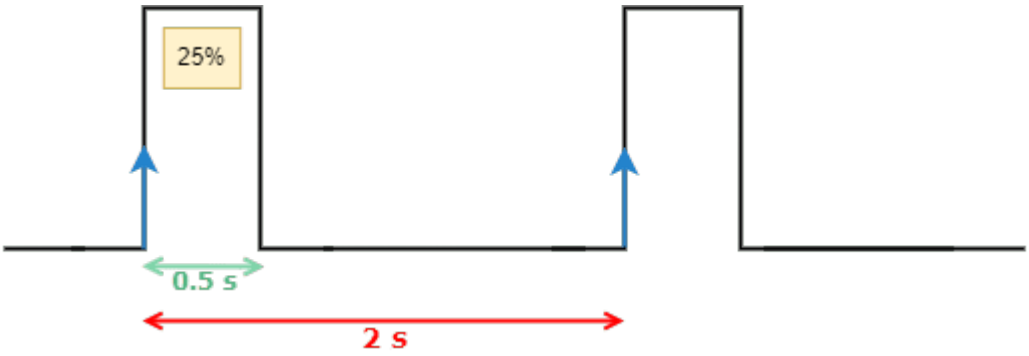

Signal generated

On the other hand, if **Positive pulse duration** is selected as Consumer and it is configured as in the previous image (Digital Input - Pulse), the value obtained in the variable **Captured pulse** (Captured pulse 1 in the following example) will be **0.50s**, this is because it is the period of the "Positive pulse" of that pulse.

However, if **Positive duty cycle** is selected as Consumer, the value obtained in the variable **Captured pulse** (Captured pulse 2 in the following example) will be **0.25**, this is because it is the positive duty cycle of that pulse.




Digital Input example

Serial

In this panel, users must configure the parameters of the different serial ports, **UART**, **RS485-A**, **RS485-B** and **RS232**, in their corresponding tab.

However, as the parameters to be configured are shared across all serial ports, they are explained here:

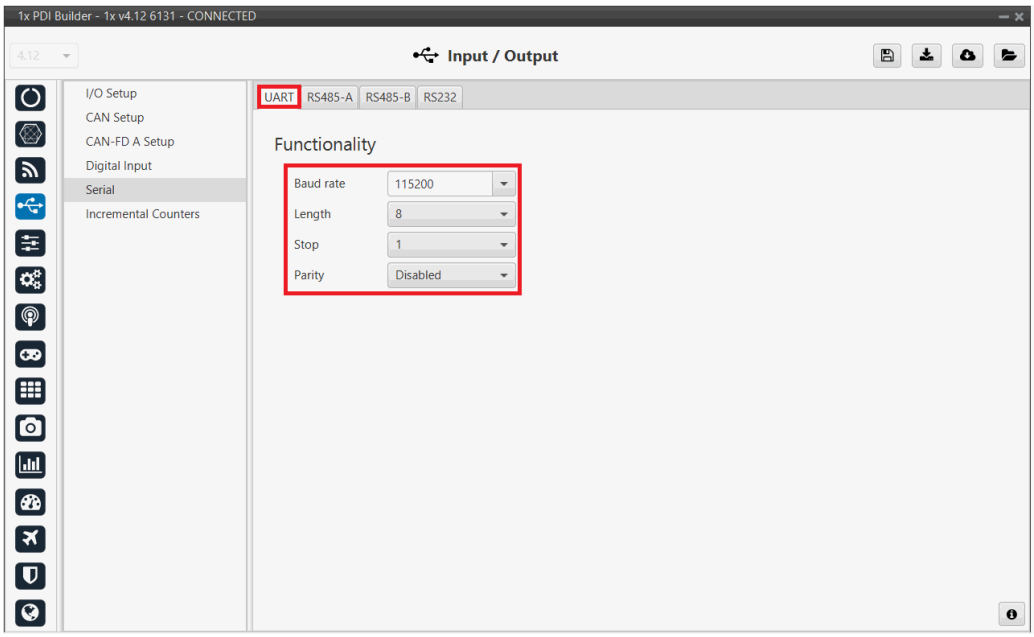

Serial menu - UART panel

- **Baudrate**: This specifies how fast data is sent over a serial line.

  > ⚠ **Warning**
  >
  > **Veronte Autopilot 1x** has a buffer limit of 16 bytes, which is read every 1 ms. Therefore, if the message is larger than 16 bytes, the maximum viable baudrate will be 160,000 bps. If the configured baudrate is higher than 160,000 bps and the message is larger than 16 bytes, then **Autopilot 1x** will lose data.
  >
  > Nonetheless, if the message is smaller or equal to 16 bytes, then the baudrate will not have this limitation.

- **Length**: This defines the number of data bits in each character: 4 to 8 bits.
- **Stop**: Number of stop bits sent at the end of every character: 1, 1.5, 2.
- **Parity**: Is a method of detecting errors in transmission. When parity is used with a serial port, an extra data bit is sent with each data character, arranged so that the number of 1 bits in each character, including the parity bit. **Disabled**, **Odd** or **Even**.

> ⓘ **Note**
>
> All these settings are already specified for a given device, therefore, Autopilot 1x should match with them in order to be able to communicate.

RS232/RS485/UART

Three serial interfaces are available with Autopilot 1x, 1 port RS-232, 1 port RS-485-A, 1 port RS-485-B and one port UART, however more can be added by using a CEX or MEX. Each one of the serial interfaces is associated with a set of pins.


Compatibility table:

Port name	**RS-232**	**RS-485 A-B**		**UART**
		RS-422	**RS-485 A-B**	
Transfer type	Full duplex	Full duplex	Half Full duplex	Full duplex
Maximum distance	100 meters at 9600 bps	1200-1500 meters at 9600 bps		15 meters at 9600 bps
Topology	Point to point	Point to point	Multi point	Point to point
Max number of devices	1	1-10 in receive mode	32	1

Incremental Counters

Incremental Counters panel allows for the creation of cyclic numerical variables used to synchronize data and monitor the integrity of autopilot communications.

This panel enables the configuration of Bits, End values, and Increments for selection within the Custom Message function.

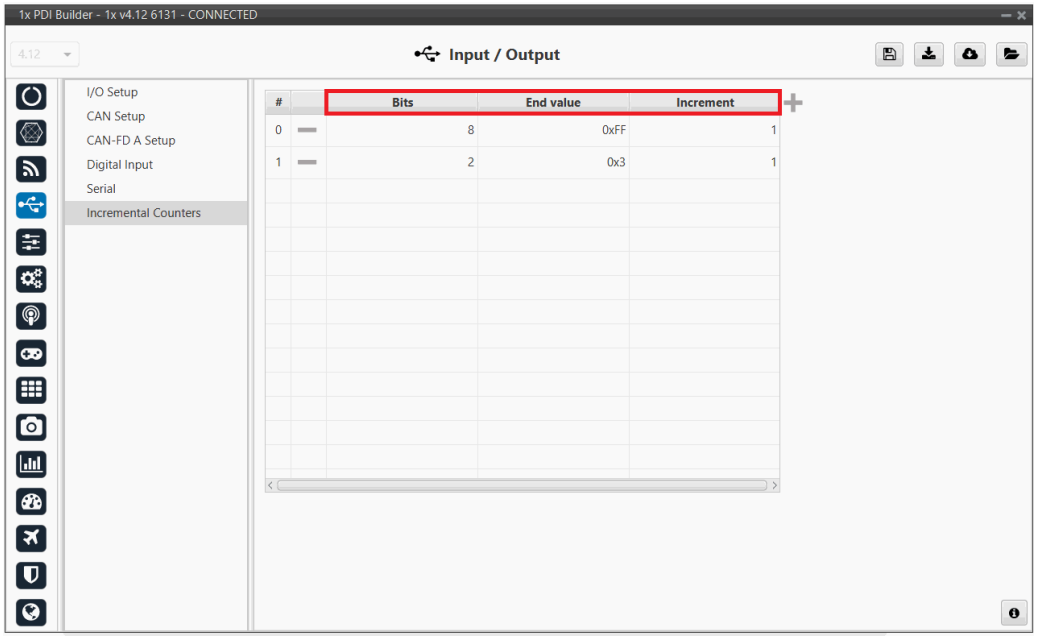

Incremental counters panel

- **Bits**: Determines the number of bits allocated for each increment.
- **End values**: Indicates the expected final value that the variable must reach.
- **Increments**: Represents the actual value that is added to the total.

Use the add button ➕ to include additional fields..


The entered data will be available for use in the Custom Messages type section.

Control

In this menu all the parameters related to the control of the platform can be found. There are 3 panels, each one showing a different menu of configuration.


Phases

In this panel, the flight phases that will control the aircraft at different stages of the operation are created (defined not configured).

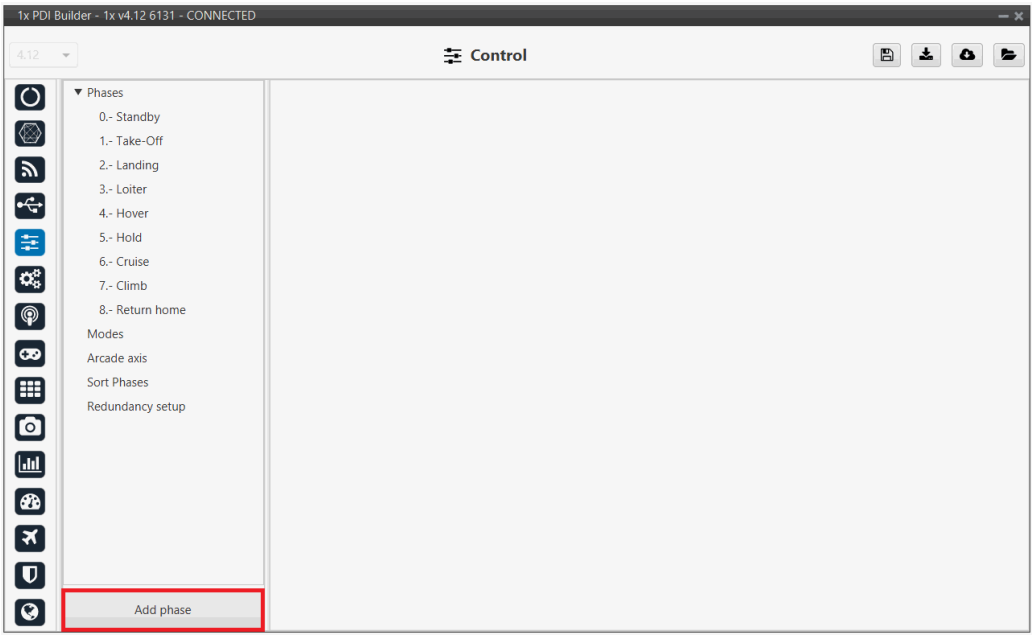

Phases panel

To create a new phase click on Add phase, the user can then select a phase already created or create a new one.

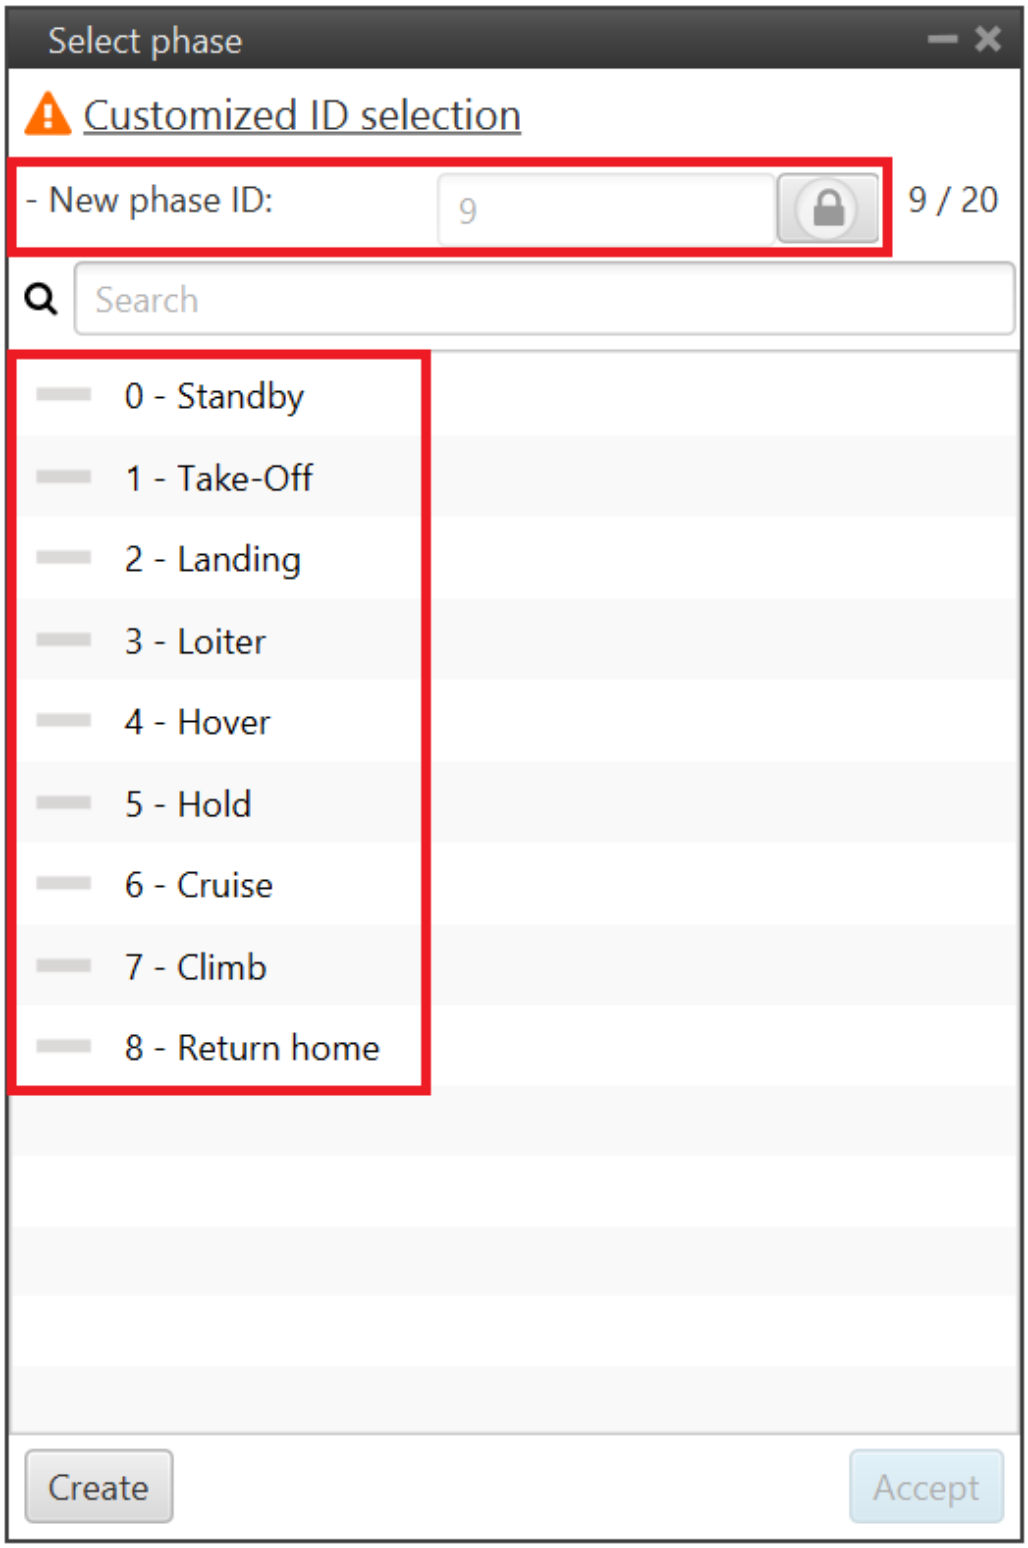


Phases panel - Create phase


- To add a **phase already created**, select the desired phase and click **Accept**.
- By default, when a **new phase** is created, it is assigned with the consecutive ID.

However, if the user wants to create a new phase with a specific ID, the New phase ID option can be "unlocked" by holding down until the process is fully completed (during the unlocking process this icon is "painted"). Once unlocked (when it appears as), the user can assign the desired ID to the new phase.


Finally, click **Create** and the new phase will be added to the list of phases.

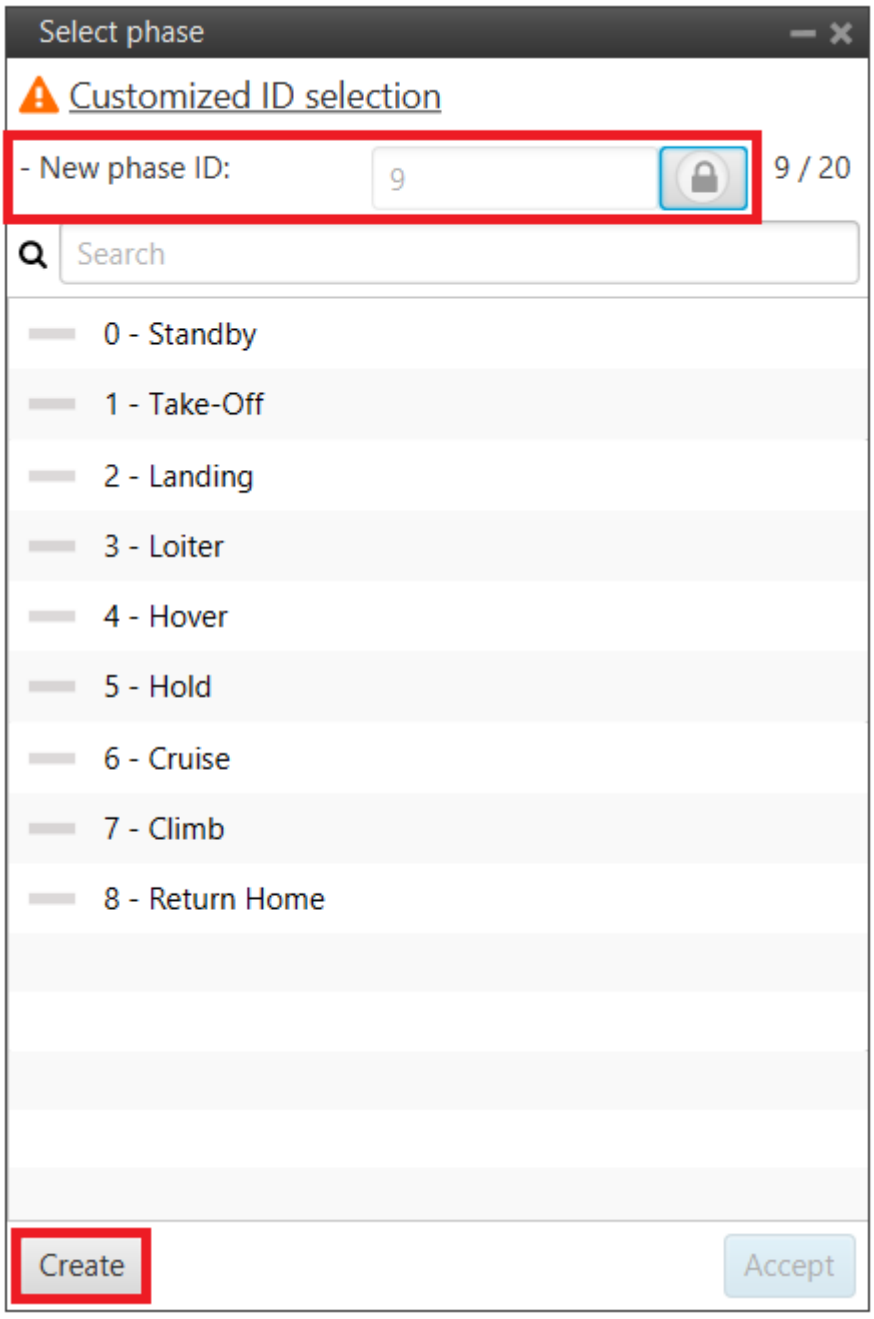

Phases panel - New phase ID
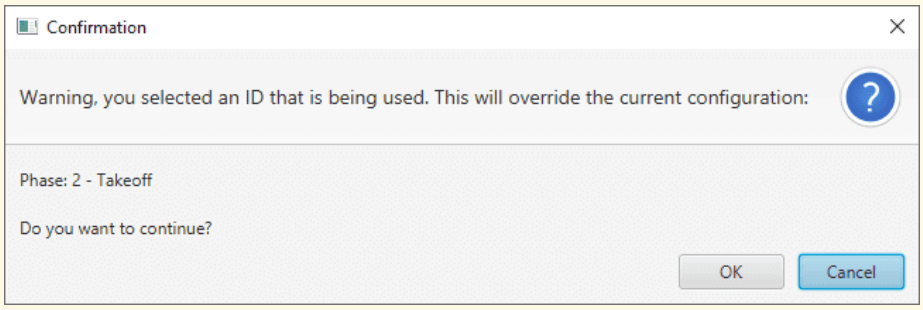
> **⚠ Caution**
>
> When the user enters an ID that is already assigned to a phase, the following confirmation message will appear:
>
> 
>
>
> **Phases panel - New phase confirmation message**
>
> Then, if the user presses 'OK', the existing phase will be removed and a new phase with the entered ID will be added.

In addition, by right clicking on the phase, the user can rename, copy or remove it:

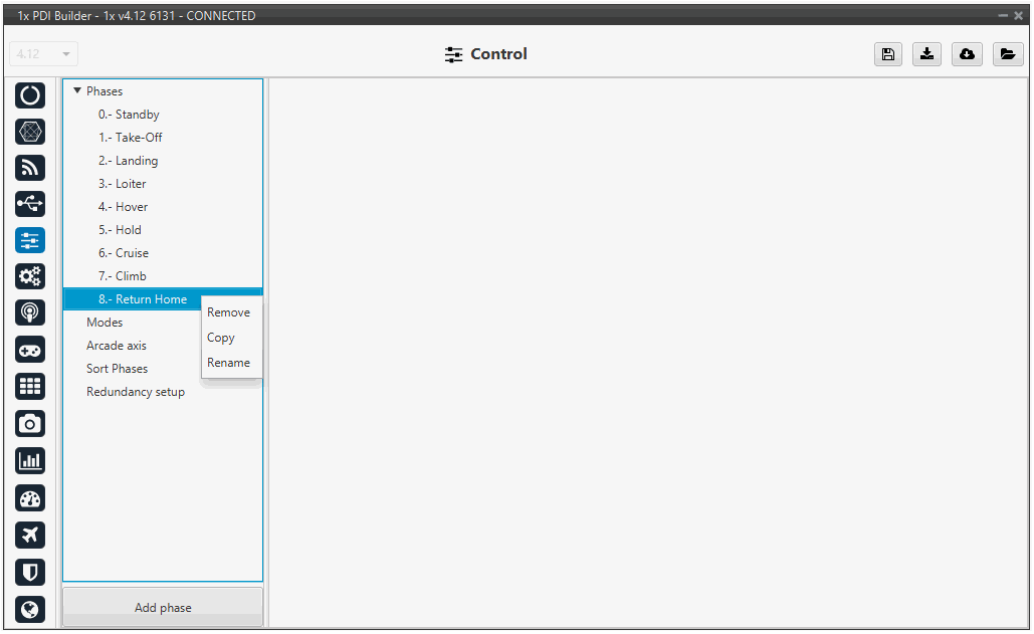


Phases panel - Phase options

> **ⓘ Note**
>
> The configuration of the phases (guidance and control commands) is done in the Block Programs menu.

Modes

This tab allows the creation of custom flight modes. The flight modes determine who is in charge of controlling each one of the aircraft control channels.

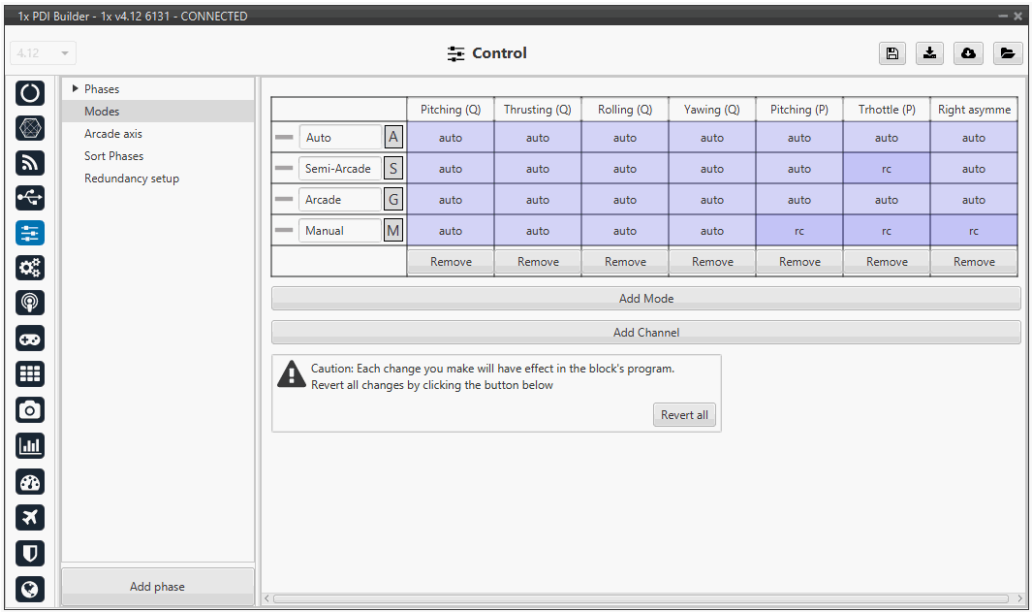

Modes tab

There are 4 different control modes and it is possible to combine them to create custom flight modes. The options available are:


- **auto**: Automatic mode. The control channel is controlled totally by the autopilot.
- **arc**: Arcade mode. The autopilot aids the radio controller during the flight, i.e it could be considered as a mix between automatic and manual. The movements on the pilot stick are the input values on the control system, so the pilot commands a desired pitch, roll, IAS, heading and so on, and is the control system who is in charge of making the platform follow those commands.
- **rc**: Radio Control mode. The control is totally carried out manually. The movements on the pilot stick imply directly movements on the servo linked to that control channel.
- **mix**: In this mode, it is possible to select in which step of the controller will enter the pilot command.

> **Example**
>
> For example, the pitching of an aircraft is commonly controlled with 3 PID being: flight path angle, pitch and pitch rate. In the arcade mode the pilot command will be a desired flight path angle that enters as input of the whole control system, but in the Mix mode is possible to select where we want the command to enter, so the pilot command could be pitch (entering in the second PID directly) or pitch rate (entering directly on the third PID).
>
> The control system will take this input as a disturbance that it wants to discard because the final objective is to match the input of the first PID (a desired flight path angle in this case), so the Mix mode can be used to make small corrections when the aircraft is following a route for example, where we want it to move slightly towards a certain direction by introducing a value directly on the roll PID.

To **change** any of this options, **click on the cell** the user would like to change and the next option will be set.


⚠ Warning

- The name of the mode does not have to correspond to the configuration of the mode. For example, the user can **name** the mode as **Auto** but set the **channels** as **rc** (manual):

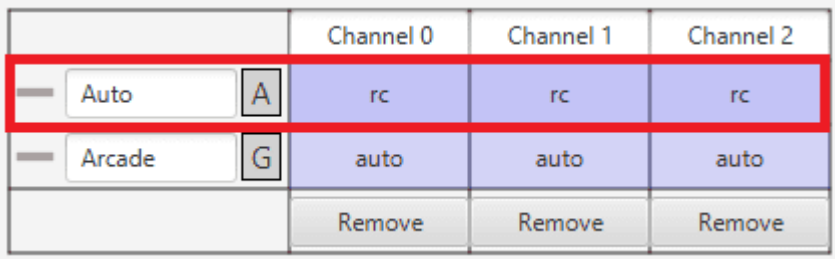

Modes configuration


- Moreover, although the mode is set "sensefully" here, in the block configuration (Block Programs menu) the control does not have to correspond to this.
  For example, if a channel is configured as manual (rc) here but then the control is configured so that the stick input does not control the channel, it will be auto control even though manual is specified. See the following example, where for consistency, the blocks in the 'True' and 'False' cases should be inverted:

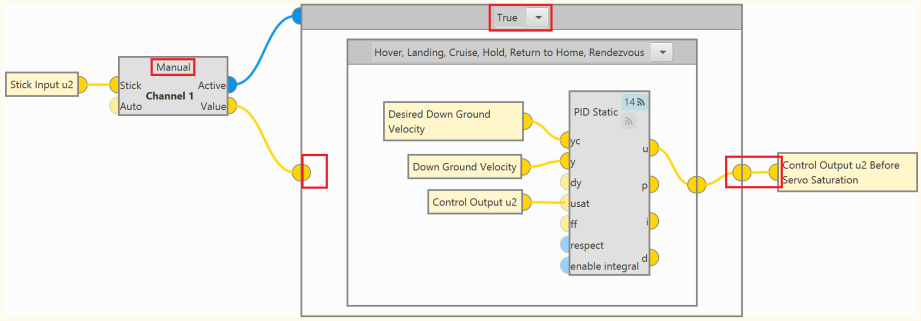

Modes configuration in blocks

- So, it is the user's responsibility to build the configuration correctly. In case of having any questions, the user should contact the support team (create a ticket in the customer's **Joint Collaboration Framework**; for more information, see Tickets section of the **JCF** manual).


> **⚠ Caution**
>
> Each change made will have an immediate effect on the block's program execution. Use the Revert all button to discard changes and restore the initial values

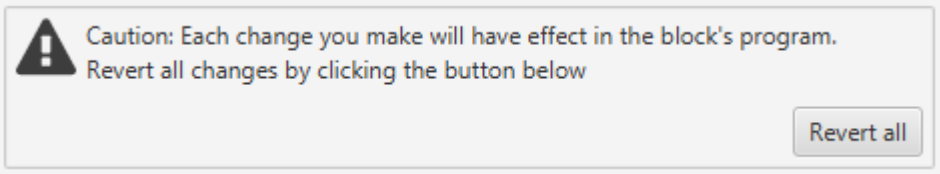

Caution Message

Arcade axis

Arcade axis panel enables the option of changing the center of the system axes. This option is used to create axis systems referred to a certain point or direction, for example, it is useful when the pilot wants all movements to be made with respect to them (Ground axes). In this way, if the pilot commands a right turn, the aircraft will turn to the right relative to the pilot, rather than the right relative to the aircraft (Body axes).

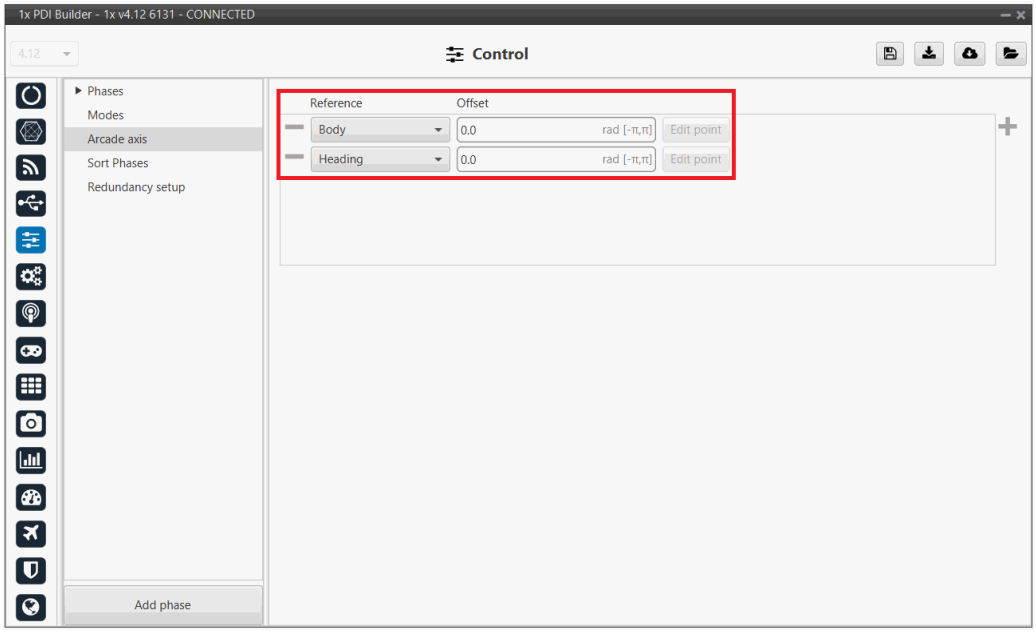

Example of use

It is possible to add up to 5 axes systems, being able to choose between the following types:

- **Body**: Fix the axes in the UAV. It is standard for the pilot.
- **Ground**: Fix the axes in the 1x GND unit.
- **Point**: Fix the axes in a point that user defines.
- **Heading**: Fix the axes in the the heading defined.
- **Desired heading**: Fix the axes in the desired heading.
- **Tangent direction**: Fix the axes in the tangent direction of the designed path.
- **Desired yaw**: Fix the axes in the desired yaw.


It is also possible to select the measurement unit from:

- rad [-π.π]
- ° [-180,180]
- ° [0,360]
- ° ' "
- rad
- rad [0,2π]
- °

An automation can be used to select an Arcade Axis in flight. For more information, check the Actions - Automations section of this manual.

Sort Phases


Sort Phases allows the user to reorder the phases displayed within the panel by dragging the icons. This phase order will be reflected identically in the corresponding Veronte Panel. It is possible to place a second icon in a row, by dragging it onto the row next to the existing icon.

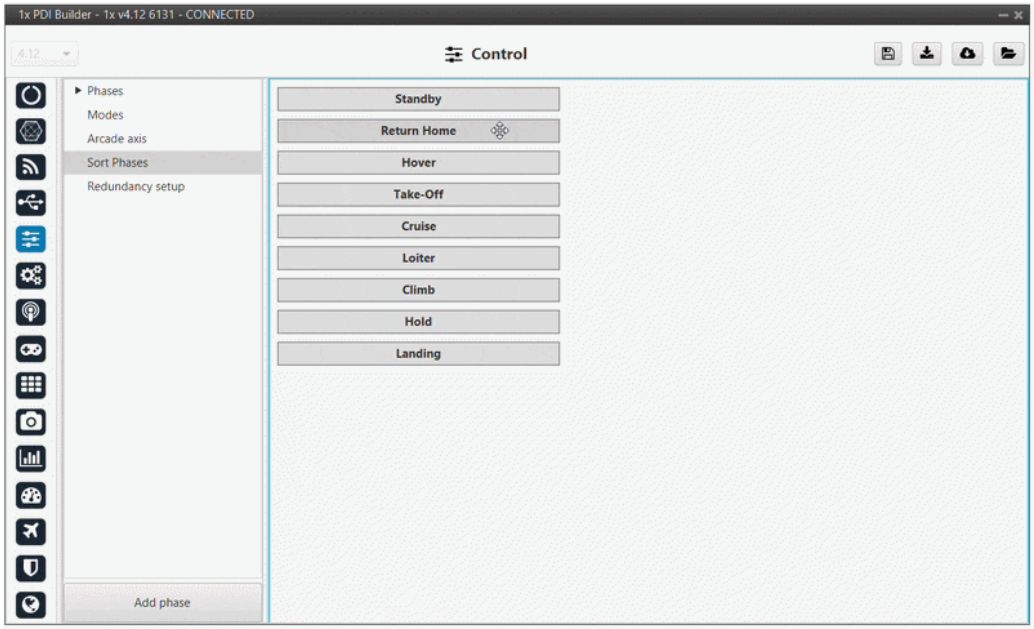

Sort Phases panel

Redundancy setup

The **Redundancy Setup** panel is used to configure the failover logic and communication between multiple autopilot (AP) units. This feature is essential for mission-critical systems where fault tolerance is a primary requirement.

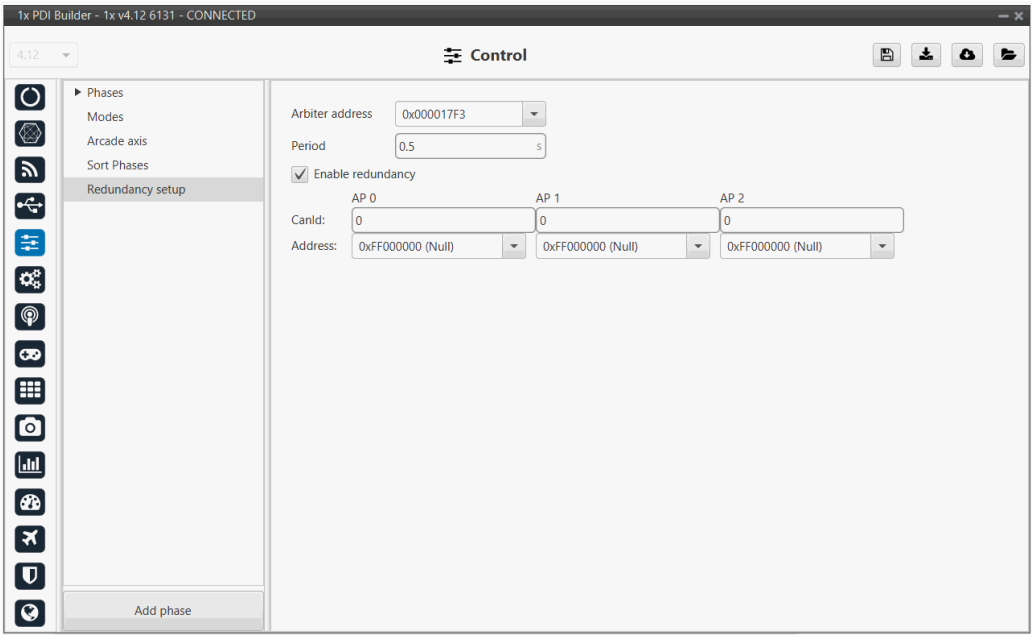

Redundancy setup panel

- **Arbiter address**: By adding the arbiter address, Veronte Ops will recognise it as part of a Redundancy setup, and it will also be possible to do HIL simulations (with Veronte HIL Simulator).


- **Period**: Sending period of Redundancy setup messages. For more information on the transmission of Redundancy setup messages, refer to the CAN Setup - Input/Output section.
- **Enable redundancy**: Allows the output to be overwritten when checked. By enabling it, a table can be created in which columns correspond to each Autopilot 1x and the CanID row to the ID of the CAN message through which each Autopilot 1x communicates information with the other Autopilots 1x within the Veronte Autopilot 4x. Each CAN Id is associated to the CAN 4x producer/consumer of the AP in which it is configured. For more information, refer to the CAN Setup - Input/Output section.
- **CanId**: The unique identifier of the unit within the CAN bus. This allows the system to distinguish between messages sent by different hardware components.
- **Address**: The memory address or system pointer associated with the specific unit for status data exchange.

Automations

Automations are actions that are carried out when a combination of events happen, i.e when the events are accomplished the action is done. An example of what an automation could be a change of phase when reaching a certain altitude and speed, moving a servo when a button is clicked and many other possible combinations.

In this section all the possible events and action will be explained in detail, so the user can combine them to create the automations that best suit their needs.


The following figure shows the layout of the automations menu, with a column for the events and another for the actions linked to these events.

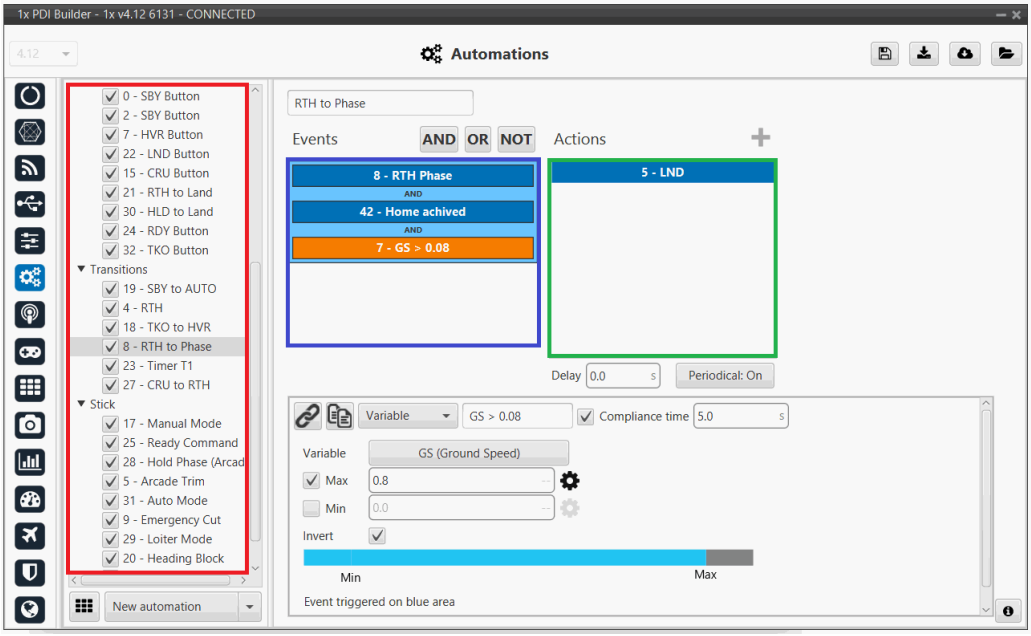

Automations menu

All the automations that have been created (red) are a combination of events (blue) and actions (green). All actions will be performed on event or an event combination triggering.


There are some parameters that can be configured in the events and actions menu and which are applicable independently of the type of event/action configured.

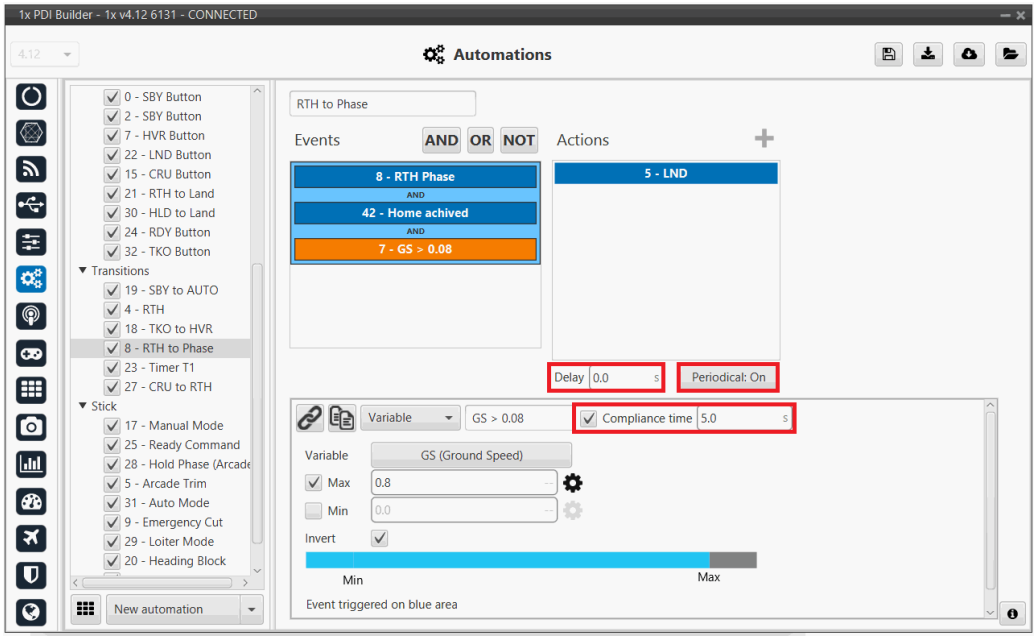

Automations menu - Parameters


- **Compliance time**: It is a value related to the automations. It indicates how much time the event has to be accomplished in order to trigger the action.

- **Delay**: It is the time between the triggering of the event and the beginning of the action.
- **Periodical**: If enabled, it allows to configure actions to take place periodically during the time that the events are active.
  - **Period**: Manually enter the desired periodicity for this action.
  - **Type**: The action can be configured to take place each certain:
    - **Distance**: When using distance, the option **Vector** allows to measure that distance along a direction specified by that vector.

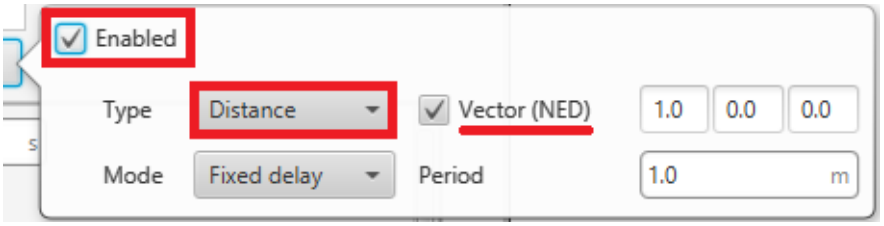


Periodical distance configuration

    - **Time**

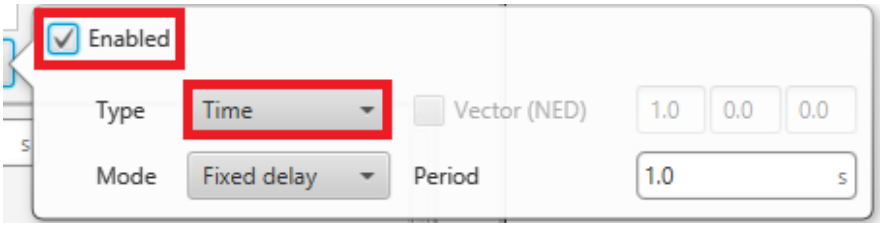

Periodical time configuration

  - **Mode**: The two **Modes** available for both time and distance are **fixed delay** and **fixed period**. In order to explain the difference between them, the following figure is presented as an aid to the user.

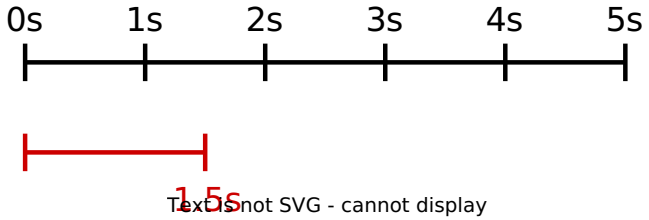

Periodical modes

Let's consider that the system evaluates the automations each second (black line), and the automation that contains the periodical option is configured to be executed every 1.5 seconds (red line). In that case, the **first action** will be **triggered at the second 1.5** but will be

evaluated at second 2. The **second time** that the action is evaluated will depend on the mode, if it is selected:


- **Fixed delay**, the evaluation of the action will be done **1.5 seconds after it was evaluated** the first time, so that will be at **second 3.5**.
- **Fixed period**, the action will be evaluated **1.5 seconds after the first triggering** (not evaluation) so that would be at the **second 3**.

In the real praxis, the evaluation time for the automation is much lower than 1 second so the difference between the modes is much smaller.

New automation

> ⚠ **Warning**
>
> It is important to know that there is a limit of **500 events**, **120 actions** and **100 automations**. For more information, see Automations evaluation and execution - FAQ section of this manual.

To create a new automation press **New Automation** and a new window will be displayed. First, users must add an **event** by selecting a **previous one** (if it exists) or **creating** new one.

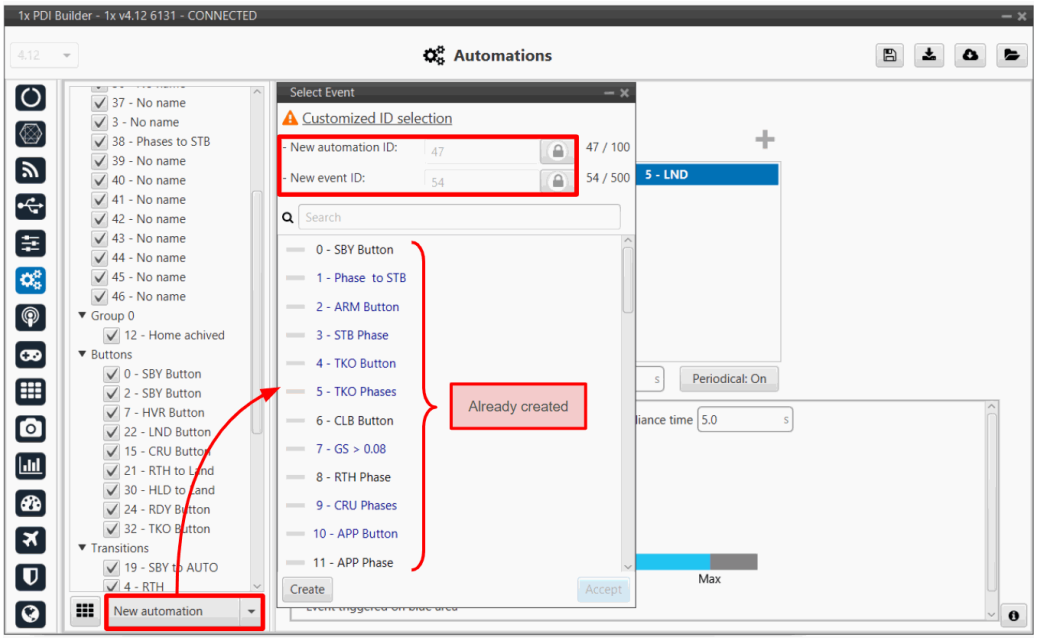


Automations menu - New event

- To add an **event already created**, select the desired event and click **Accept**.
- By default, when a **new automation** is created, it is assigned with the consecutive ID.


  However, if the user wants to create a new automation with a specific ID, the New automation ID option can be "unlocked" by holding down  until the process is fully completed (during the unlocking process this icon  is "painted"). Once unlocked (when it appears as ), the user can assign the desired ID to the new automation.

  Finally, click **Create** and the new automation will be added to the list of automations.

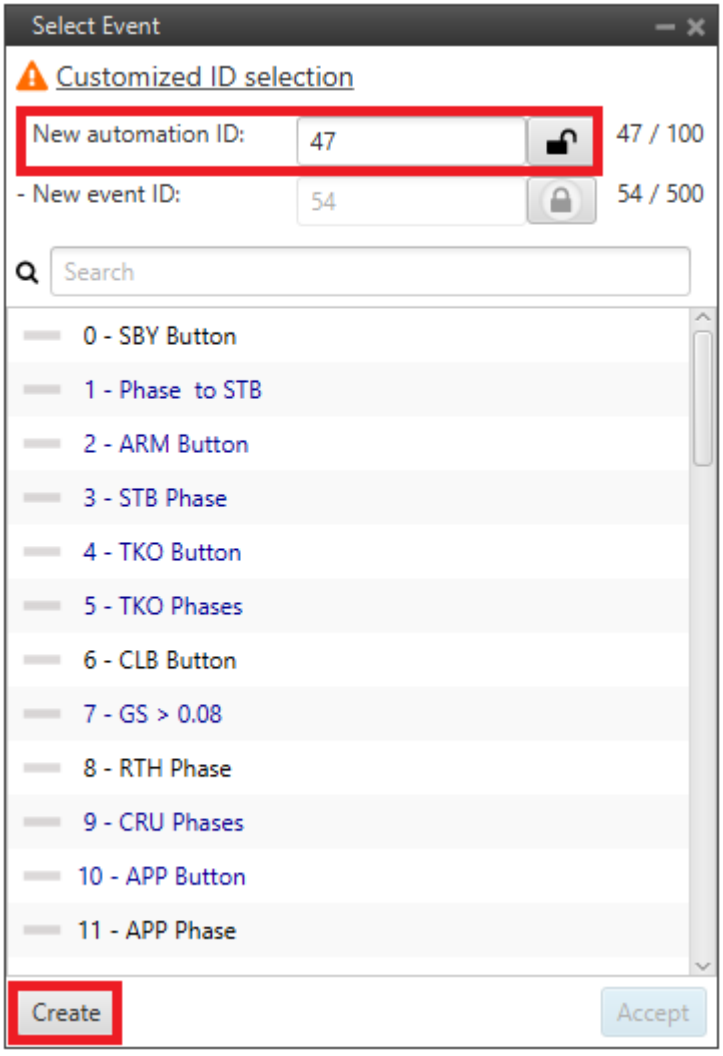

Automations menu - New automation ID


> **⚠ Caution**
>
> When the user enters an ID that is already assigned to an automation, the following confirmation message will appear:

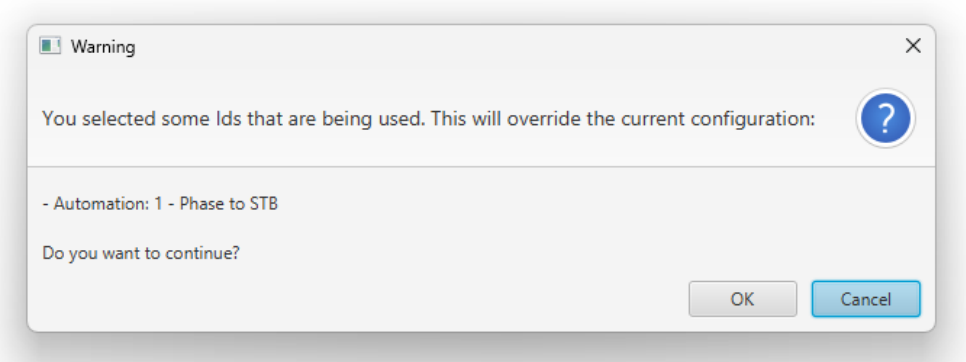

Automations menu - New automation confirmation message

> Then, if the user presses 'OK', the existing automation will be removed and a new automation with the entered ID will be added.

To add an action to the automation, press the ➕ icon and a new window will appear. Here, users can choose to either select a **previous action** (if it exists) or **Create** a new one.

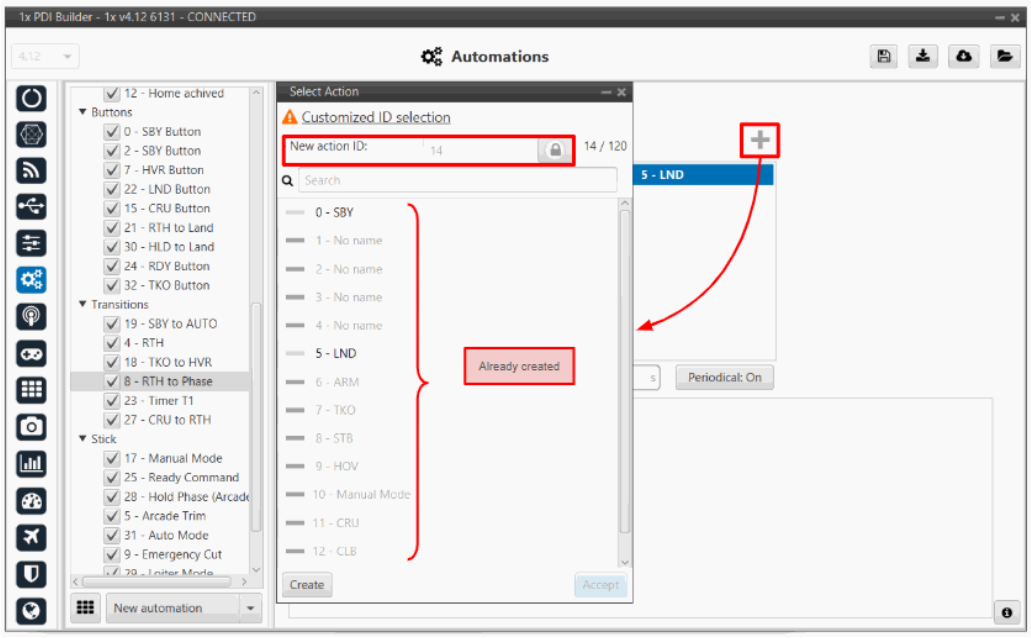

Automations menu - New action


- To add an **action already created**, select the desired event and click **Accept**.

- By default, when a **new action** is created, it is assigned with the consecutive ID.


  However, if the user wants to create a new action with a specific ID, the New action ID option can be "unlocked" by holding down  until the process is fully completed (during the unlocking process this icon  is "painted"). Once unlocked (when it appears as ), the user can assign the desired ID to the new action.

  Finally, click **Create** and the new action will be added.

Automations menu - New action ID
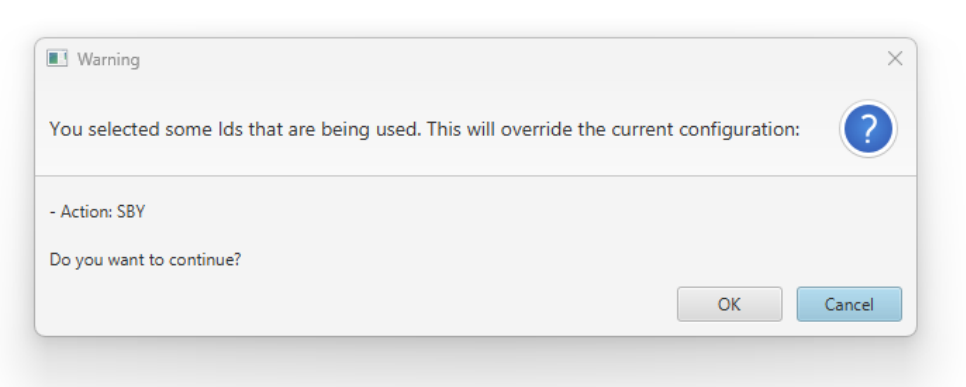
> ⚠ **Caution**
>
> When the user enters an ID that is already assigned to an action, the following confirmation message will appear:
>
> 
>
>
> **Automations menu - New action confirmation message**
>
> Then, if the user presses 'OK', the existing action will be removed and a new action with the entered ID will be added.


When an automation is created, the following options are available:

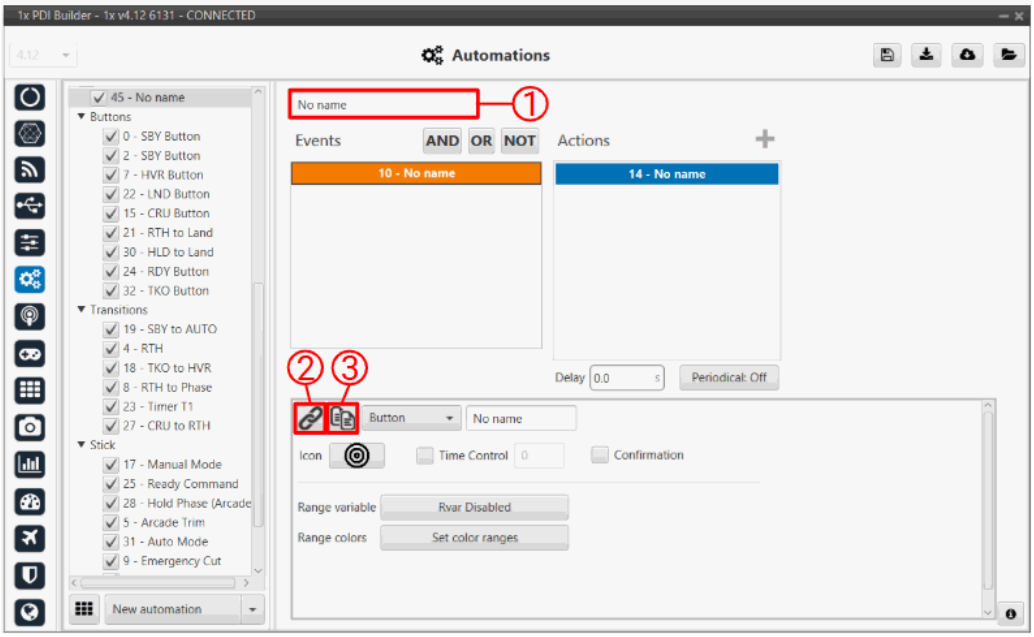

Automations menu - Automation options

1. The user can rename the automation with the name of their choice.
2. **Use existing** button : Select an action or event from the available in the system. When modifying an action or event it will be **modified in all automations where it is in use**.
3. **Clone** button : Clone an existing action or event creating a new one with same parameters configured on the start point.


By right clicking on an automation it is possible to **remove** it, **clone** it or **change it of group**.
When a group is created, the rest of automations that the user wants to add to the group can be done by drag and drop.

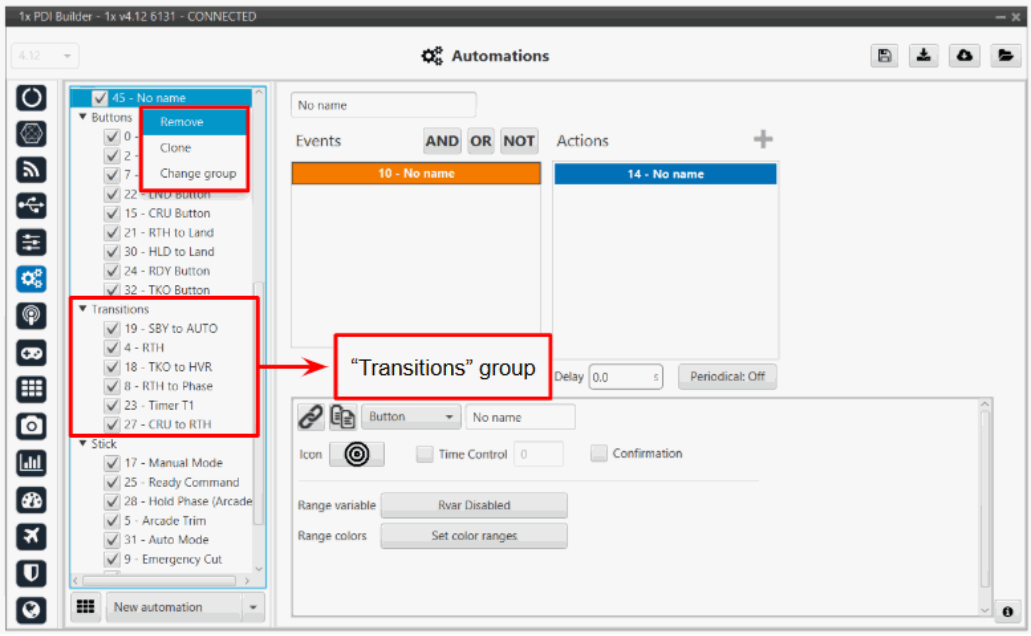

Automations menu - Automations groups

Other options


In the figure below, the user can see 2 additional options:

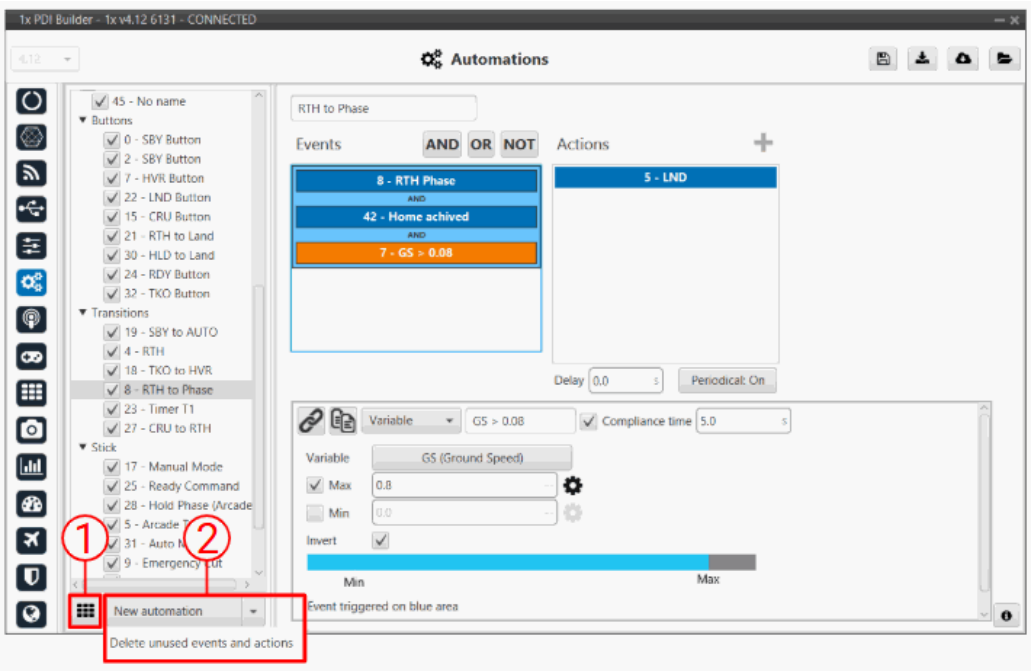

Automations menu - Other options

> **Note**
>
> A maximum of **256** variables can be assigned to the **Events**.


1. By clicking here, a phase transitions table will appear:

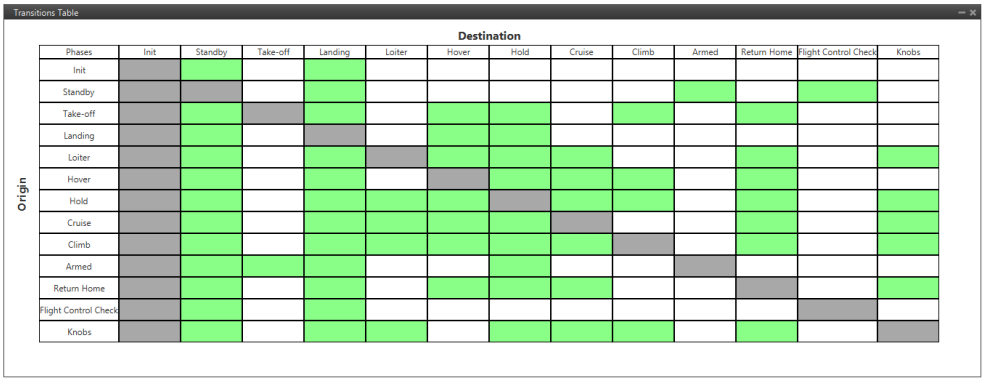

Automations menu - Phase transitions table

In this table, the transitions between each phase can be visualized.

In addition, by clicking on a cell, users can see which automation (and the events) makes the transition between the two phases possible.

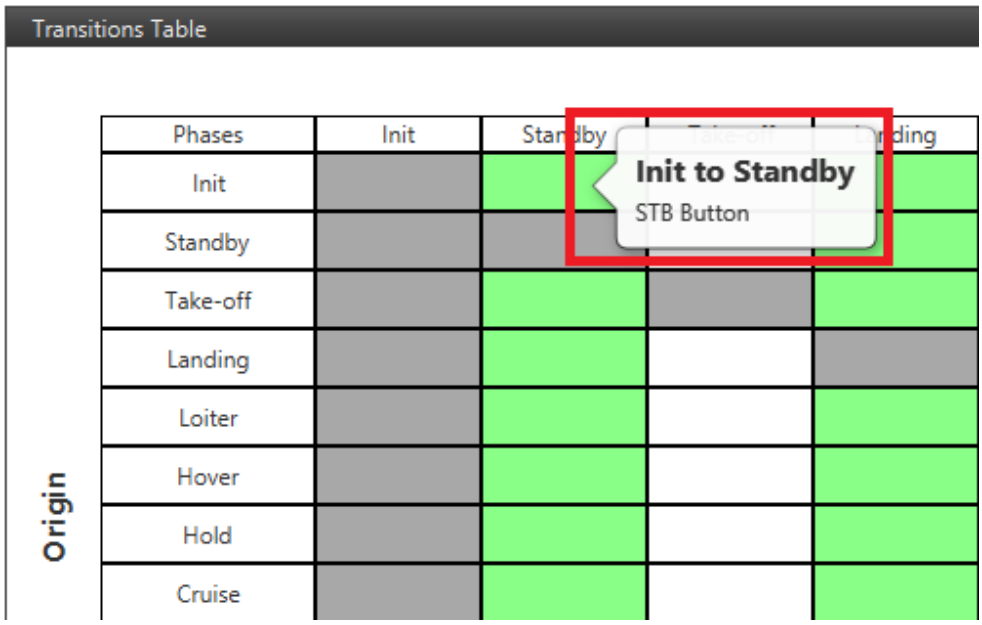


Automations menu - Automation example of phase transitions table

2. **Delete unused events and actions**: This option deletes those created events or actions that are not in use in any automation.

Events

An event is a condition, or set of circumstances, that must occur to trigger determined actions. All the events can be combined to create a custom event, using the **boolean operations** provided by the software (**AND**, **OR**, **NOT**).

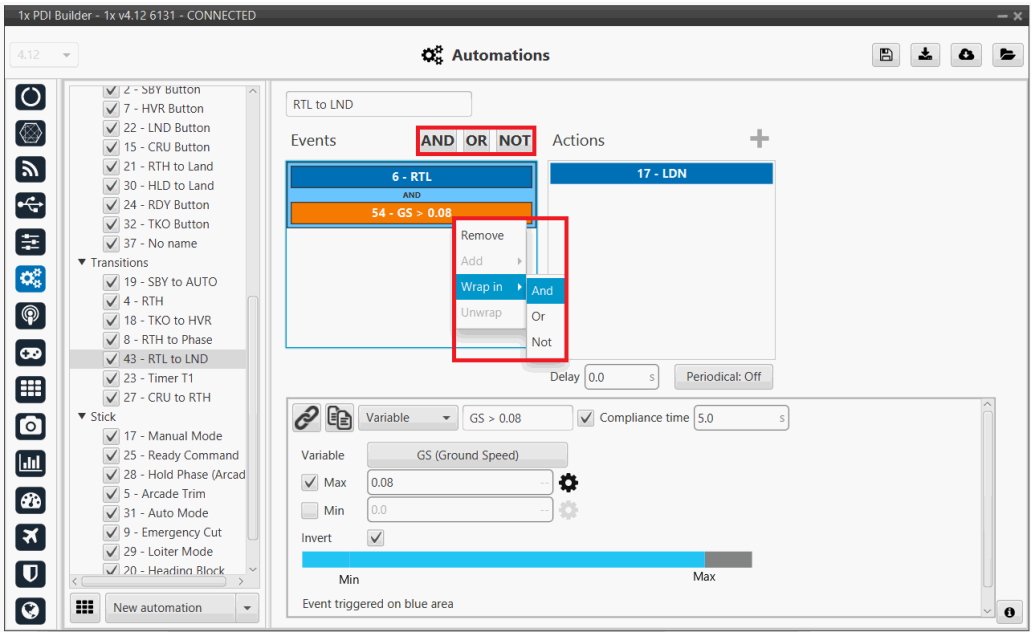

Events options

The following table depicts the meaning of each one of the boolean operators.

Logics	Description
AND	All events grouped on an AND should be accomplished simultaneously in order to activate the automation.
OR	One of the events in the group should be accomplished for activating the automation.

Logics	Description
NOT	The event will be active meanwhile the event or event group is not accomplished.


When there is only one event, clicking on the boolean command will create another event linked to the other one according to that operation. By right clicking on an event and selecting Wrap in allows the creation of an operation as if it was inside brackets, i.e it will be evaluated first. Let's consider the following event group as an example.



Events wrapped

The first operation that is evaluated is the NOT, then the OR between Event2 and the result of the NOT, and finally the AND between Event1 and the result of the OR.

When creating a new event it is possible to choose from one of the **previously created** on the system or to **create** a **new** one.

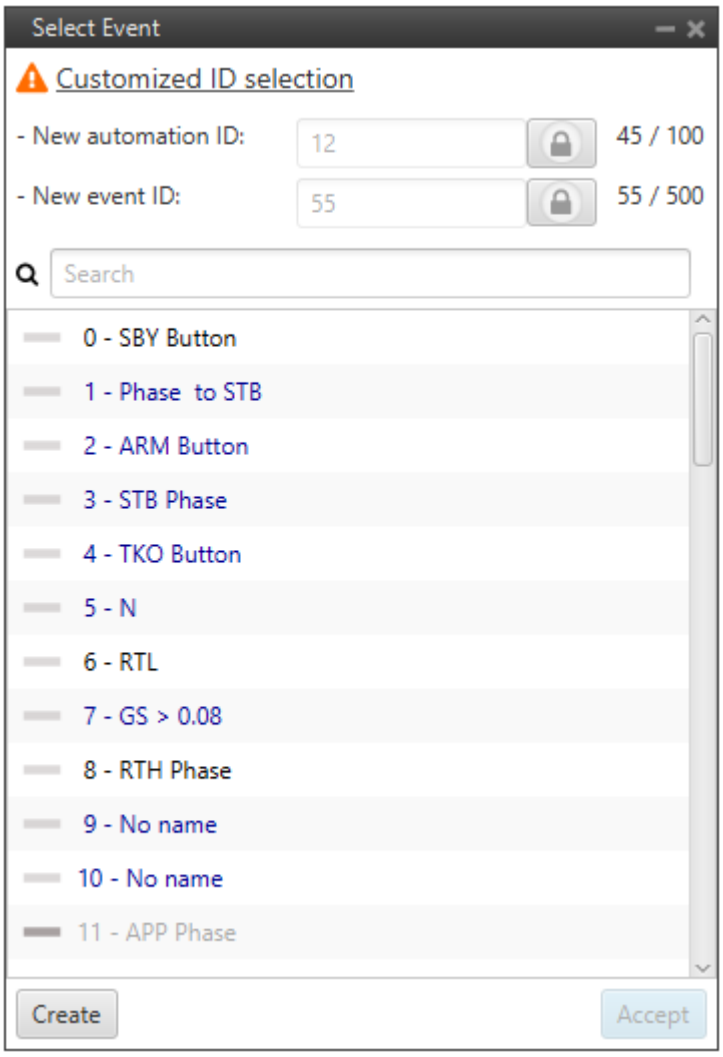


New event


- To add an **event already created**, select the desired event and click **Accept**.
- By default, when a **new event** is created, it is assigned with the consecutive ID.

  However, if the user wants to create a new event with a specific ID, the New event ID option can be "unlocked" by holding down until the process is fully completed (during the unlocking process this icon is "painted"). Once unlocked (when it appears as), the user can assign the desired ID to the new event.


  Finally, click **Create** and the new event will be added.

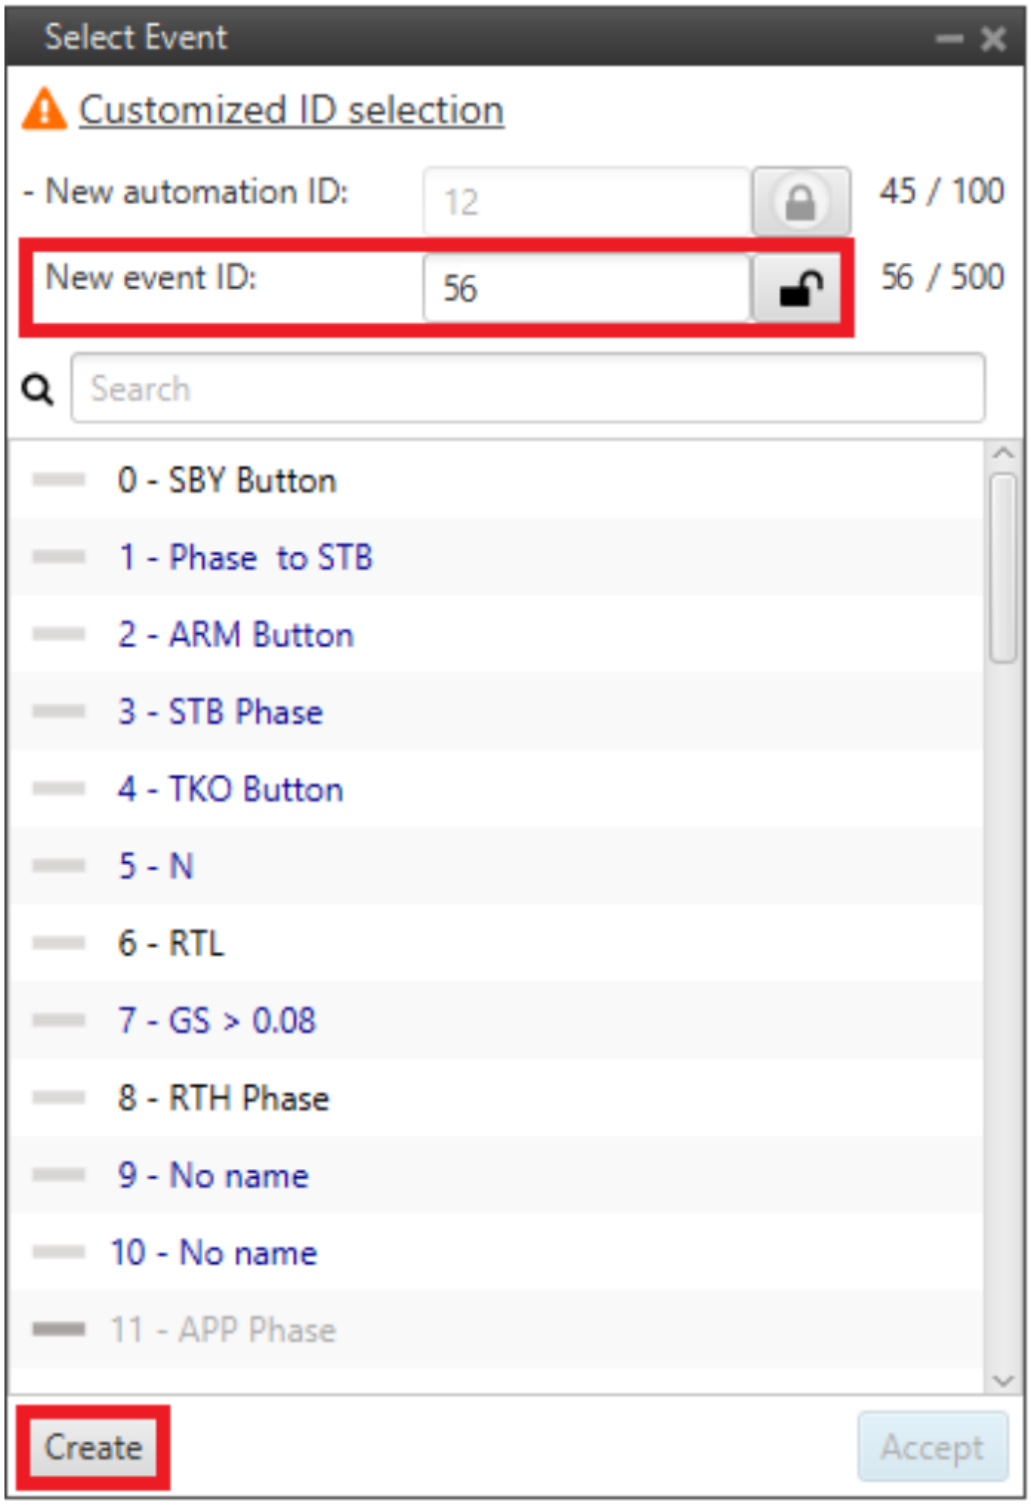

Automations menu - New event ID
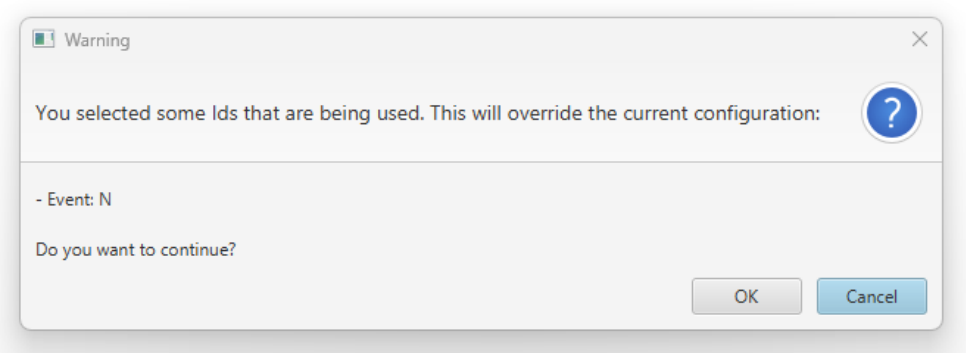
> **⚠ Caution**
>
> When the user enters an ID that is already assigned to an event, the following confirmation message will appear:
>
> 
>
>
> **Automations menu - New event confirmation message**
>
> Then, if the user presses 'OK', the existing event will be removed and a new event with the entered ID will be added.

The user can also rename the event with the name of his choice.

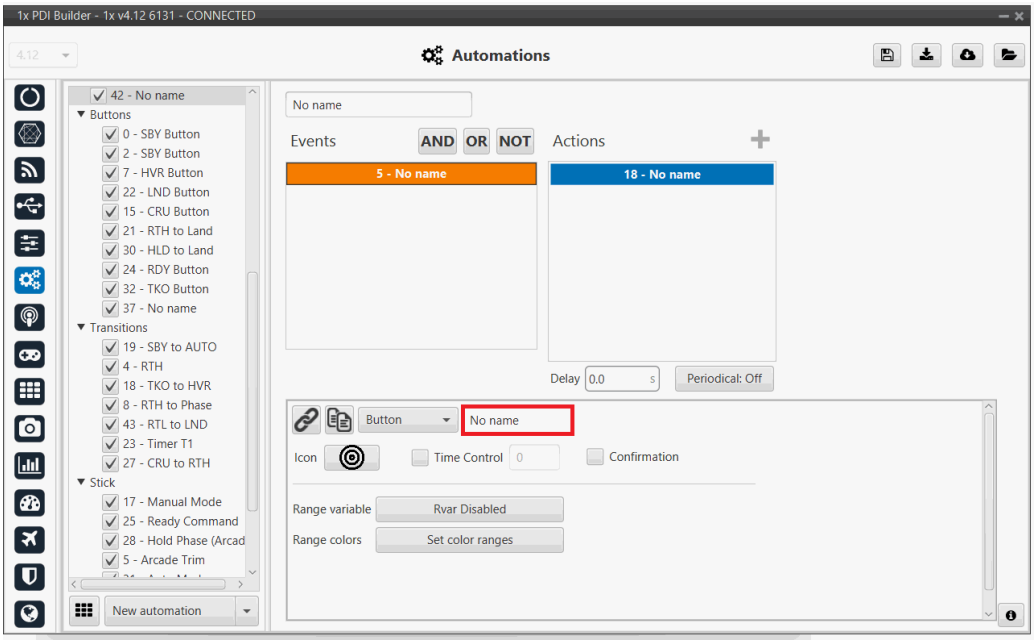


New event - name

The different types of events that can be created are presented below.

> ⚠ **Warning**
>
> Since the same event is shared across two different automations, editing it in one location will automatically update it in the other.

Alarm

This kind of automation allows the user to add any bit of the system as an alarm. Depending on the mode in which it is configured, it will be activated in one way or another.

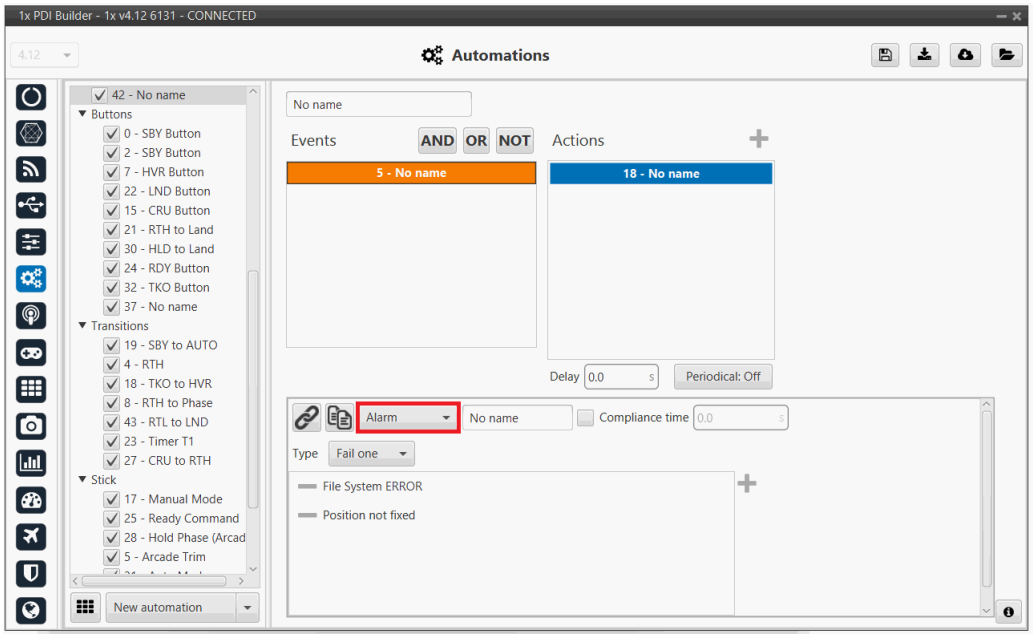

Alarm event


The two possible modes are the following:

- **Fail one**: it is triggered when one of the bits is set to false.
- **All ok**: it is triggered when all bits are set to true.

A common alarm event is the **Position not fixed** in fail one mode, which is triggered when there is not GPS signal in the autopilot.

Button

This option creates a **button** in **Veronte Ops** software that will trigger the action when it is clicked.

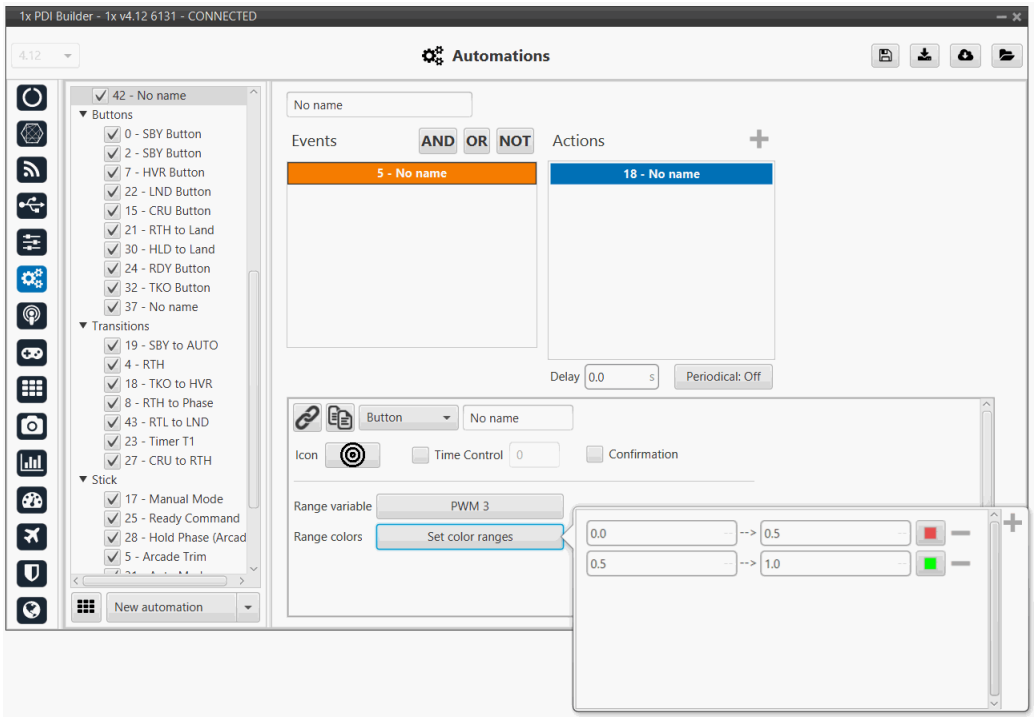

Button event

The following options are available:

- **Icon**: The user can select the most appropriate icon for the event from a list of icons provided by the software.
- **Time Control**: This functionality estabilshes the **time the button must be pressed** to trigger an action.

> **Note**
>
> The time must be specified in **seconds**.


- **Confirmation**: A pop-up window asking for confirmation will be displayed after pushing the button, so it is a safety measure.
- **Range variable** and **range colors** options are used to make the button change its color according to the value of a variable. To do that, select a variable and then indicate as many points as desired, each one with its corresponding value and color.

> **Warning**
>
> For the buttons to be colored, it is necessary that the chosen variables have been added to the **mandatory telemetry**, adding it to the complementary telemetry is not sufficient.

> **Note**
>
> - If a **button event** triggers an action that consists of a change to a determined phase, the button will be displayed in the Veronte Panel of **Veronte Ops** with the name of that phase on it.
> - To create the button for changing to a determinated phase, it is only needed to link **the button event** to the corresponding 'Phase' **action**.
> - If the **button event** is linked to a different action (servo movement, variable, etc.), it can be displayed both in the **Veronte Panel** and as a independent Action button input.

Custom Serial RX

This event is triggered when a previously configured serial message is **received** through the serial bus. That is, when the selected custom message is received, the event becomes **true**. The message has to be configured in Serial custom messages panel of the **Input/Output menu**.

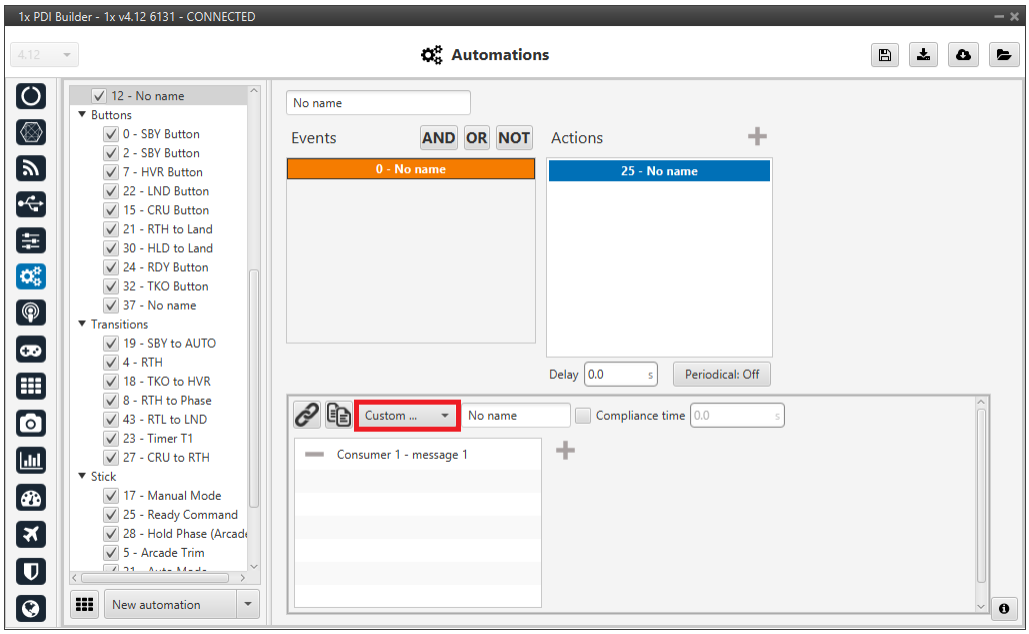


Custom Serial RX event

The two parameters to configure in this event are:

- **Consumer**: The user has to specify where the custom message is located: consumer 0-5.
- **Custom Message**: The number of the custom message whose reception triggers the event.

Mode

The event is triggered when the aircraft is in one of the modes selected.

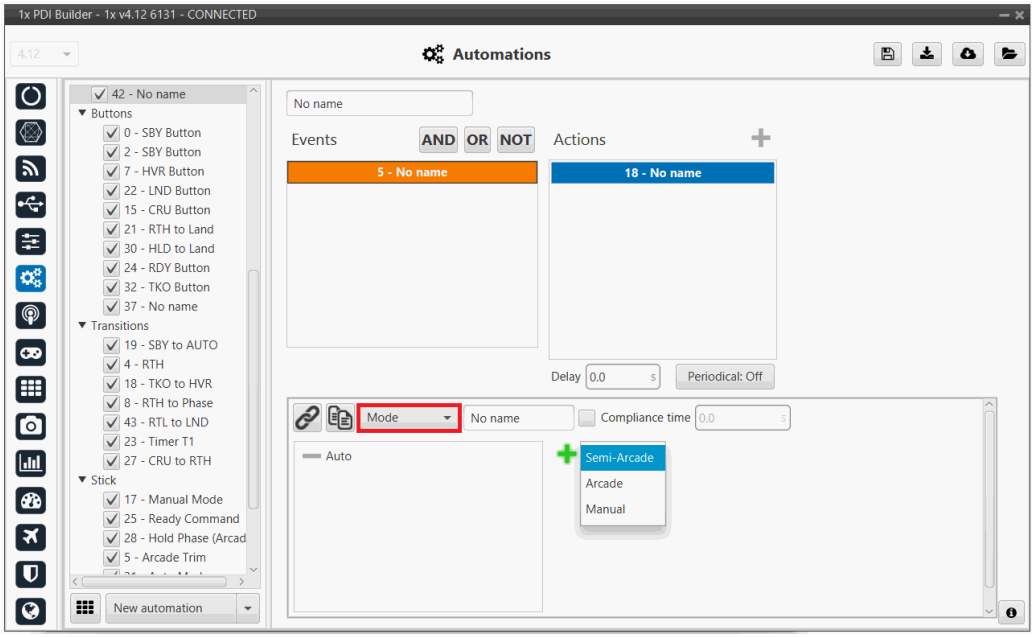


Mode event

These modes have been created previously. See section Modes, for more information about creating modes.

The **compliance time** option could be interesting in this type of event.

Phase

The event is triggered when the aircraft is in the phases selected by clicking on ➕, being in any of them will trigger the action.

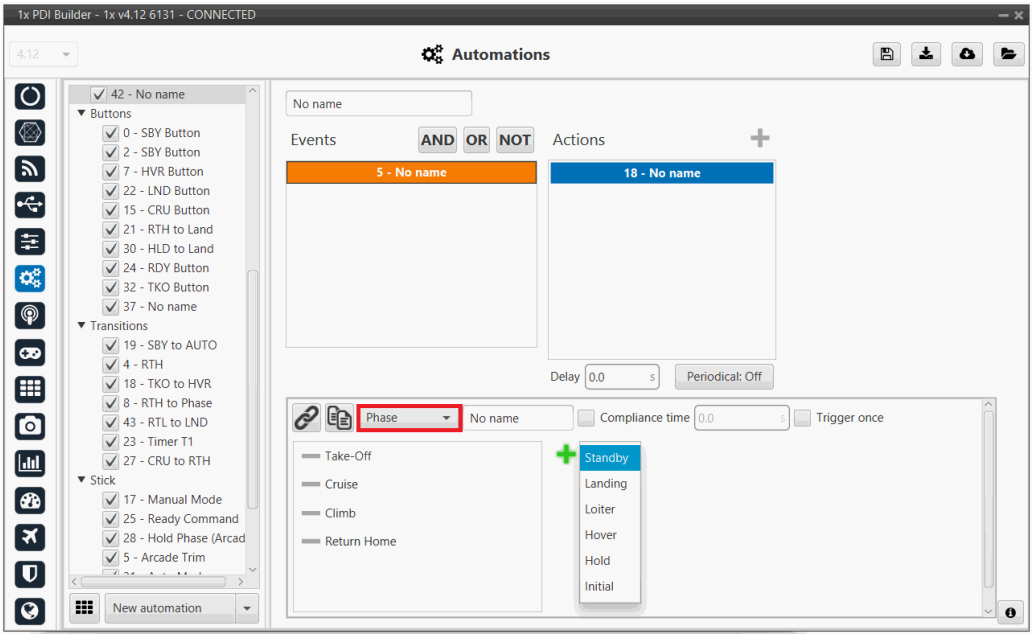

Phase event

These phases have been created previously. See section Phases, for more information about creating phases.

Important


Note that when more than one phase is defined in this event, the **action** is not only **executed** if the platform is in one phase or another, but also when **switching between the added phases**.

That is:

- Platform is in Phase 1 ⇒ Action is executed
- Platform is in Phase 2 ⇒ Action is executed
- Platform switches from Phase 1 to Phase 2 and vice-versa ⇒ Action is executed

Therefore, if the desired behavior is that the action is only triggered by being in one phase or the other, the automation must be defined as 2 different phase events (or as many as desired) linked with an **OR**.

That is:

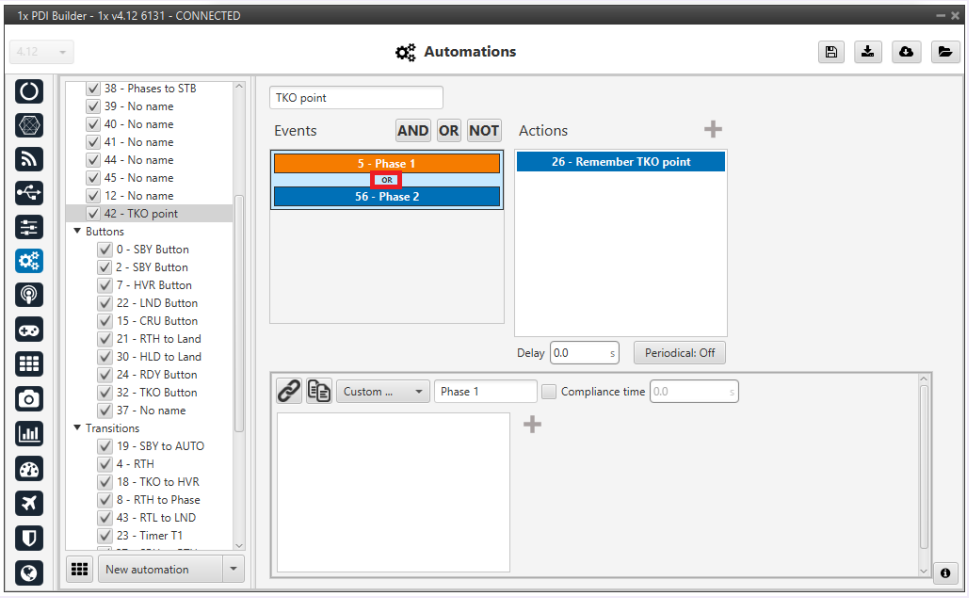


Phase event

Route

This event is related with the patches and marks defined by the user in the Operation elements panel of the **UI menu** and to those created in the mission

(in **Veronte Ops**, see more about the creation of marks and patches in the Veronte Ops manual).

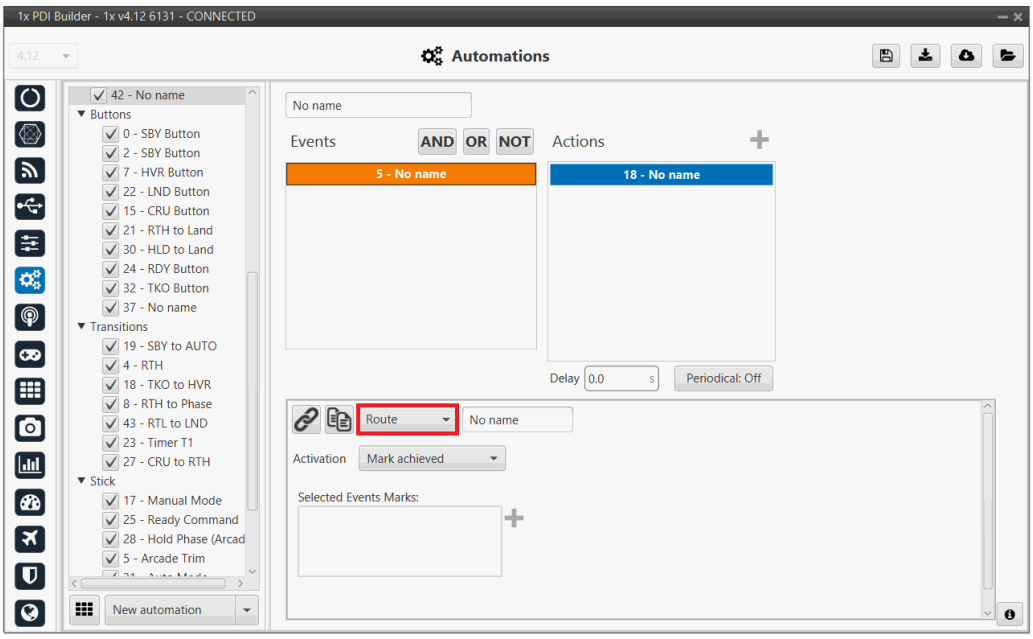


Route event

The following options are available:

- **Activation**: The user can choose between two modes in this event.
  - **Fly to waypoint**: Triggers the action when the platform is flying towards that waypoint (**patch**).
  - **Mark achieved**: Triggers the action when the vehicle has reached the selected mark.
- **Selected marks/points**: To select a mark/waypoint (patch), first define it in the Operation elements panel of the **UI menu**.

STANAG 4586 Message

This option is used to configure and manage messages compliant with the STANAG 4586 standard, ensuring interoperability between the Veronte system and different Core UAV Control Stations or other compliant systems.

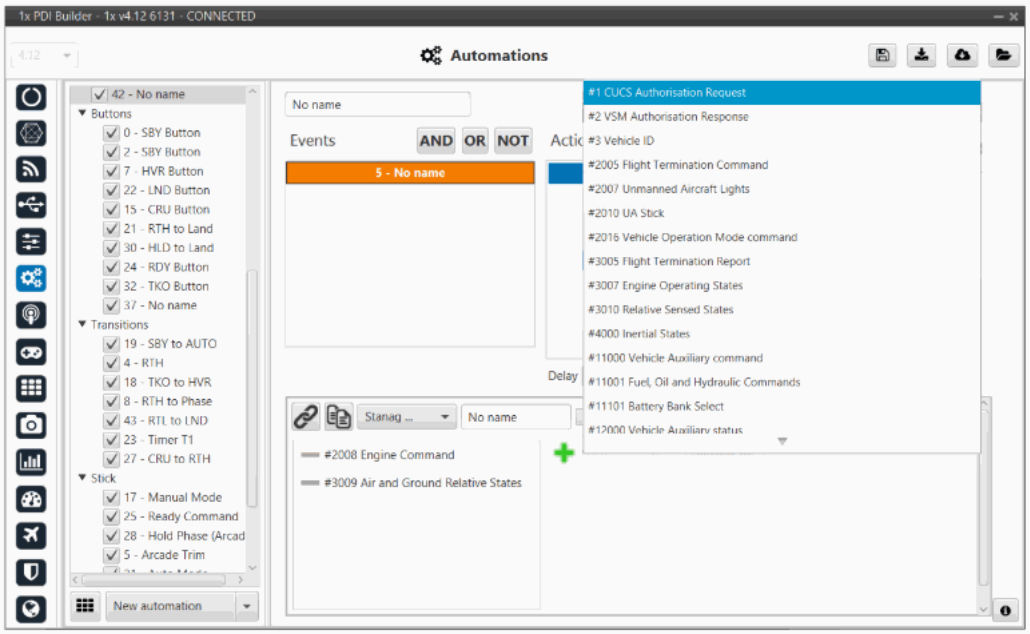


STANAG 4586 message configuration

The list on the left displays the currently configured messages. New messages can be added by clicking on the ➕ icon.

Timer

This event will check the status of the timer selected in the menu. That timer should have been previously configured on the action side of another automation (action type Periodical).

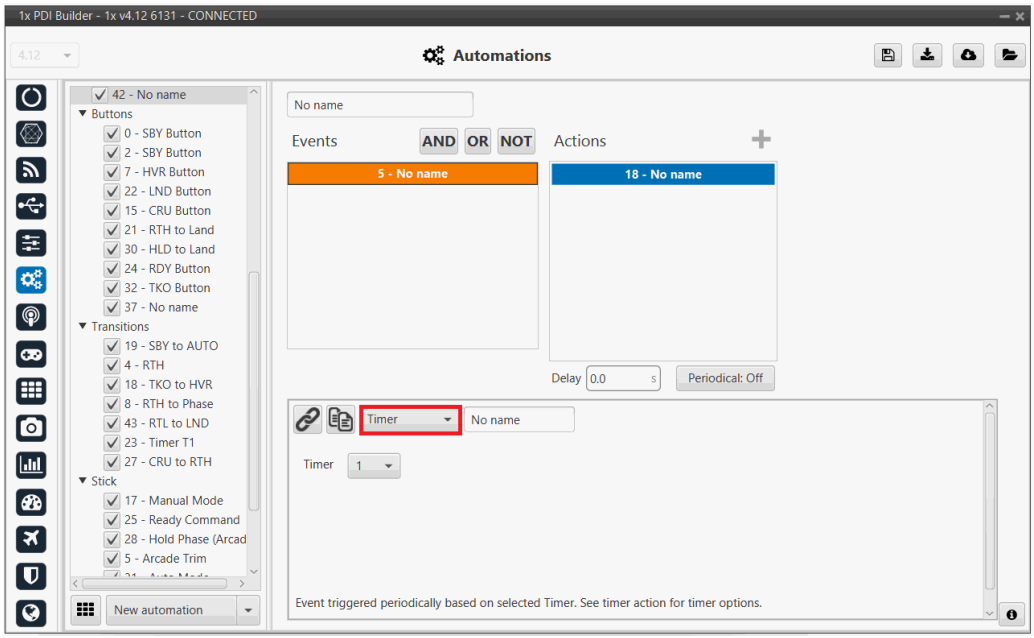

Timer event


In the **Timer** parameter, users must select the number that identifies the timer (previously created with the periodical action) that is evaluated in this event.

For example, if it is desired to take a photo 10 seconds after the takeoff, two automations are required:

1. The first automation should have the **event of Phase Take Off**, with the correspondent **Periodical action** that will start a timer that lasts 10 seconds.
2. The second one should have a **Timer event** with the timer previously created and then an **action to take a photo** when the timer event is triggered.


Variable

This event is triggered when a variable selected is between a range established.

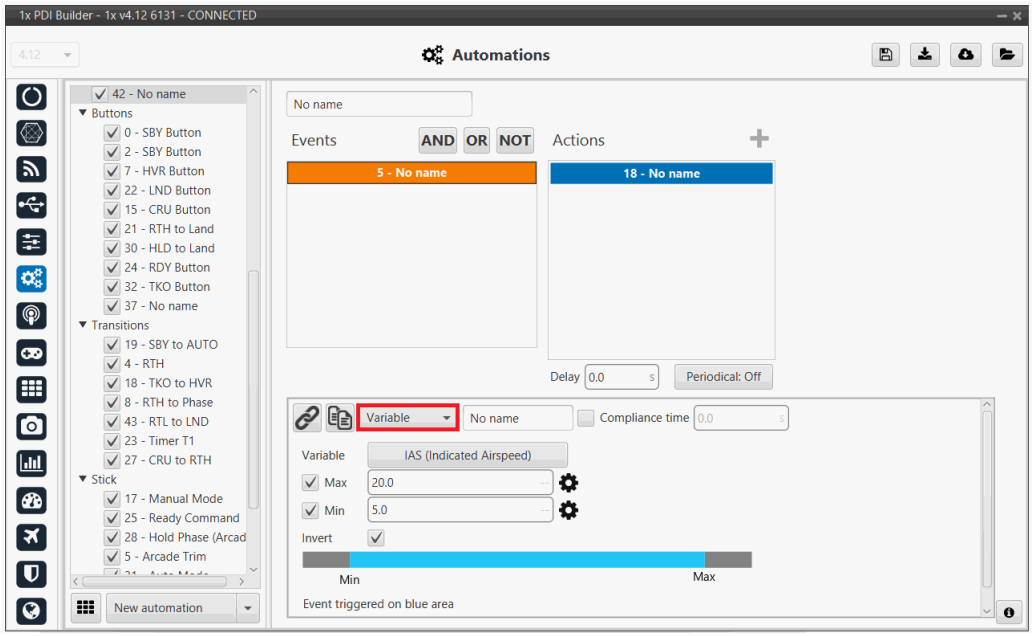

Variable event

- **Variable**: The user can select the variable to be evaluated.

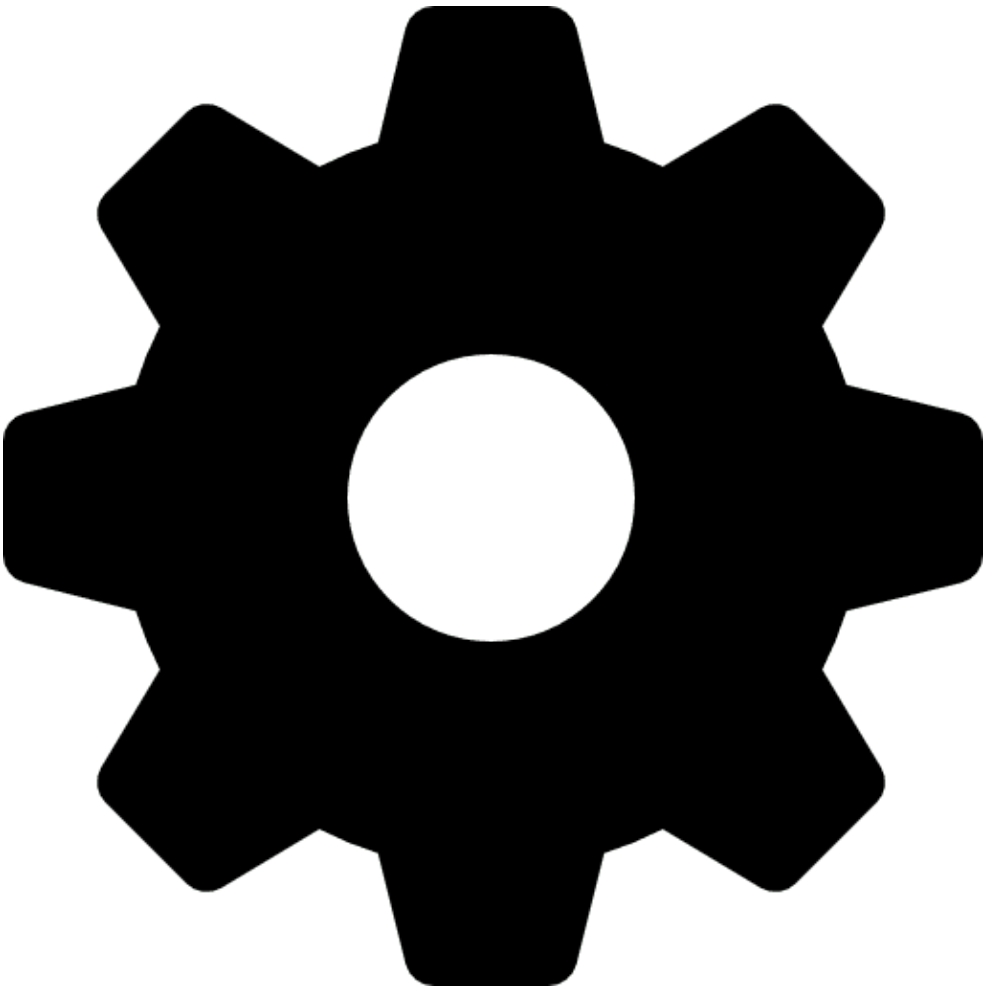
- **Max/Min**: Maximum and minimum values of the threshold are established here. Custom threshold can be established by clicking on the  icon.
- **Invert**: This option will change the interval (the blue area will be gray, and the gray one will be blue).

As an example consider the event of the figure. With that parameters, the event is triggered when the IAS is between 5 and 20 meters per second. If the invert range option is unchecked, the event will be triggered when the IAS is lower that 5 m/s or greater than 20 m/s.

Volume

The action is activated when the aircraft is inside or outside a defined and vertically limited area in the mission For more information on mission creation, take a look at the Veronte Ops manual.

This event allows to select more than one area, in this case, the action will be triggered by being in any of the selected phases, i.e. acting as if an OR had been defined between them.

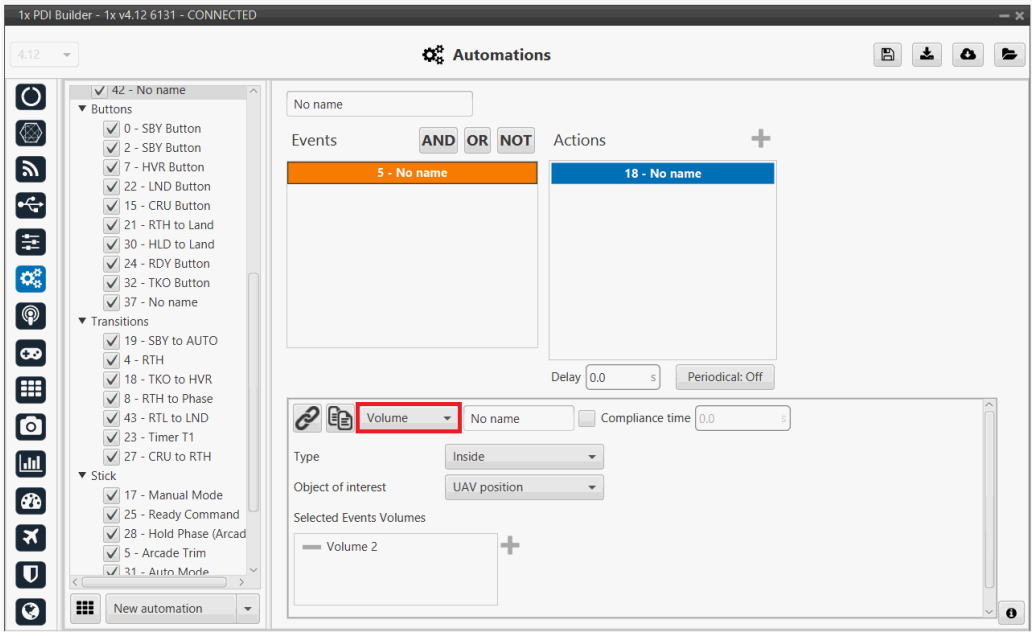


Volume event

- **Type**: Inside or Outside.
- **Object of interest**: The user has to select which object is the one that should fulfill the event.
- **Selected Events Volume**: To select an area, first define the desired areas (**prims**, **cylinders** or **spheres**) in the Operation elements panel of the **UI menu**.

When the event has been labeled ("Event area" in this case) and saved, it is possible to link it to an area drawn on the map with the **Operation panel** (see more about this at the Veronte Ops manual).


Actions

An action is a specific task, operation, or set of activities that will be performed when the event (or group of events) has been accomplished. The actions box contains all the created actions.

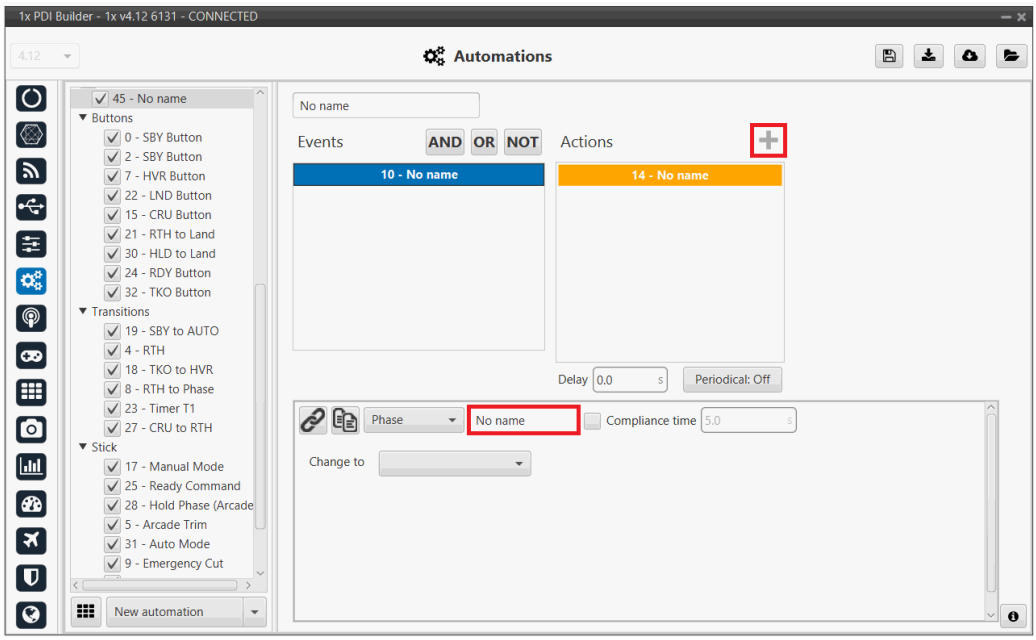

Actions menu - Name

- **Name**: The user can also rename the action with the name of their choice. When creating a new action it is possible to choose from one of the **previously created** on the system or to **create** a **new** one.

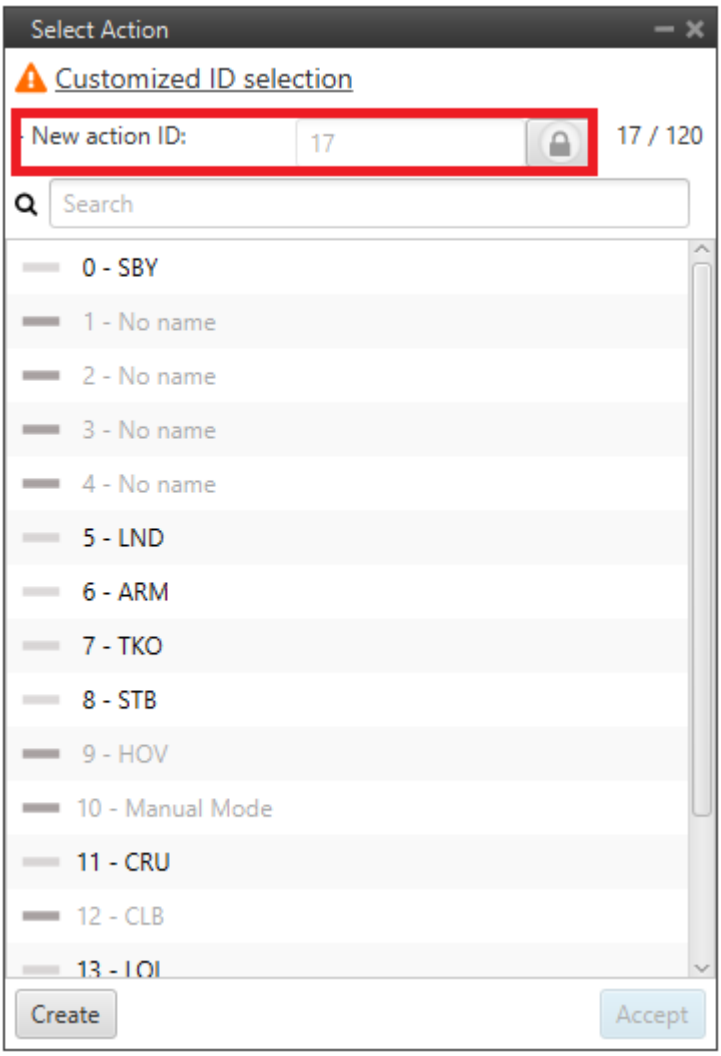


New action

- To add an **action already created**, select the desired event and click **Accept**.
- By default, when a **new action** is created, it is assigned with the consecutive ID.


  However, if the user wants to create a new action with a specific ID, the New action ID option can be "unlocked" by holding down until the process is fully completed (during the unlocking process this icon is "painted"). Once unlocked (when it appears as), the user can assign the desired ID to the new action.

  Finally, click **Create** and the new action will be added.

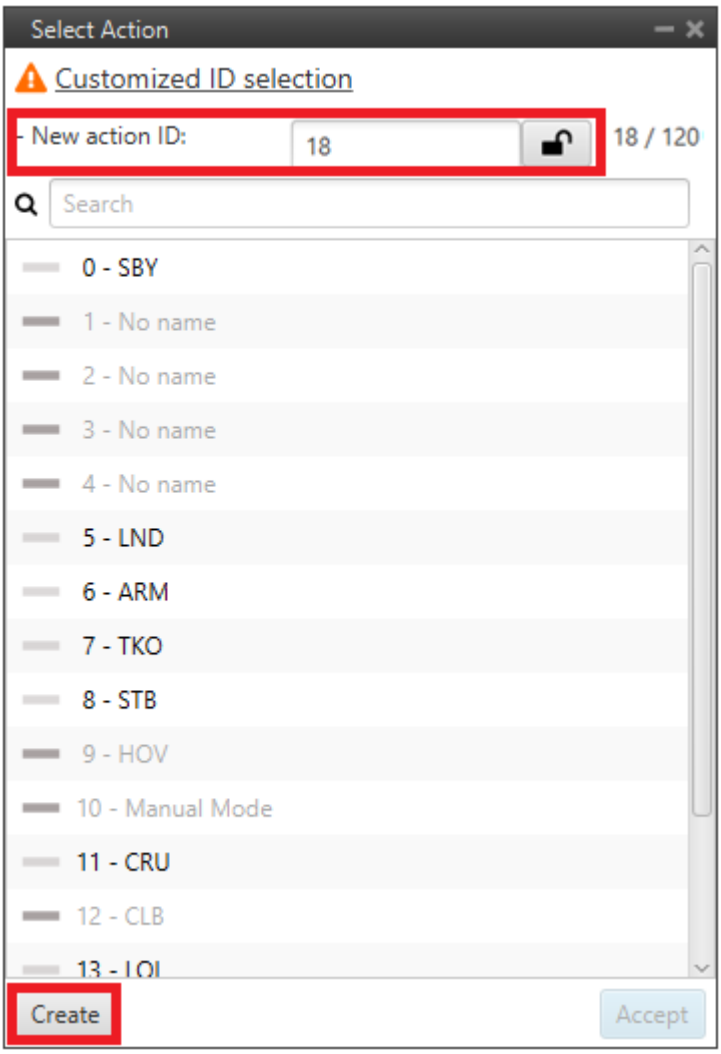

Automations menu - New action ID

> **⚠ Caution**
>
> When the user enters an ID that is already assigned to an action, the following confirmation message will appear:

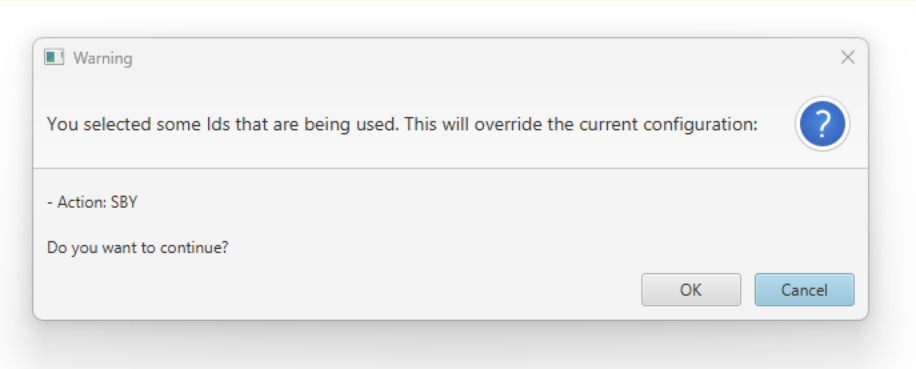

Automations menu - New action confirmation message

> Then, if the user presses 'OK', the existing action will be removed and a new action with the entered ID will be added.


- **Compliance Time**: The time within which the system must reach the transition commanded by the automation.

> ⚠ **Warning**
>
> Since the same action is shared across two different automations, editing it in one location will automatically update it in the other.

The different types of actions that can be created are presented below.

Atmosphere calibration

This action allows the atmosphere calibration in the same way as shown in the **Operational panel of Veronte Ops** (for more information about atmosphere calibration, see Veronte Ops manual).

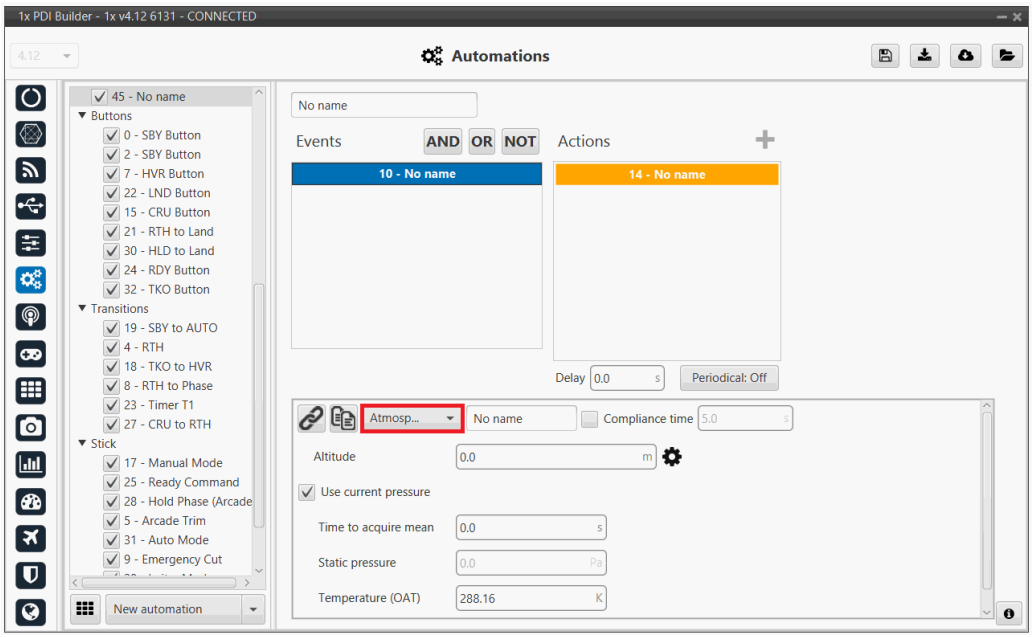

Atmosphere calibration action


The following options can be configured:

- **Altitude**: Actual MSL altitude. The user must choose between entering this value manually or selecting a system variable.
- **User current pressure**: By enabling it, the static pressure will be read from the static pressure sensor during the specified time (**Time to acquire mean**).

- **Static pressure**: If the above option is not enabled, the actual static pressure should be specified manually.
- **Temperature (OAT)**: Outside air temperature.

Change active sensor

This option allows changing the current selected and default sensors used as IMU (accelerometer and gyroscope) and dynamic pressure.

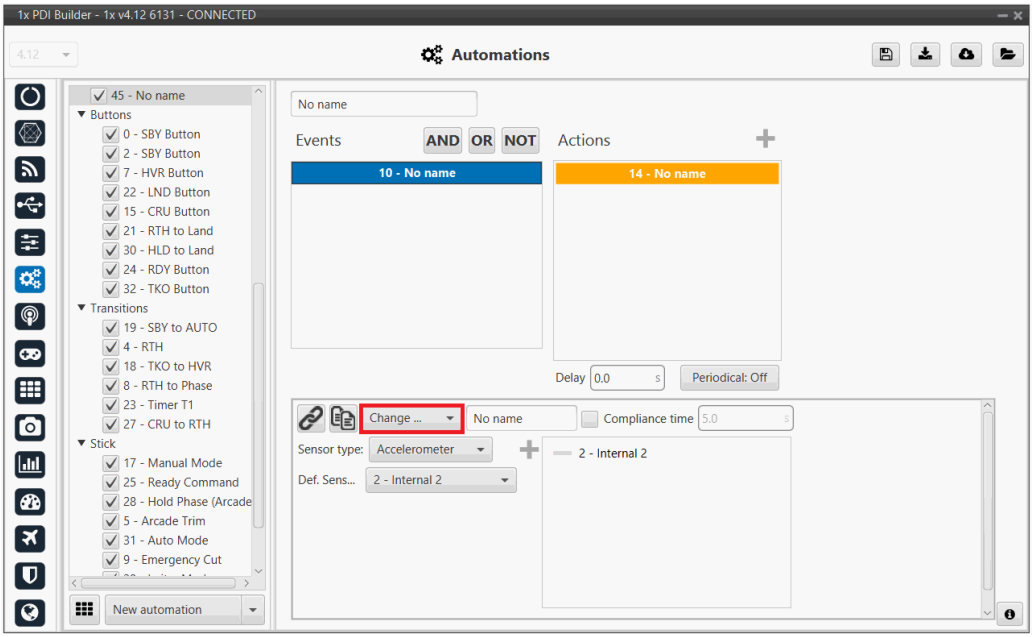


Change active sensor action

- **Sensor type**: Select the type of sensor to be changed with this action: Accelerometer or Gyroscope.

Depending on the **Sensor type** selected, the following parameters change:

- For **Accelerometer** and **Gyroscope**:
  - **Def. Sensor**: A default sensor must be chosen. If all selected sensors fail, the measurement value will be that of the default sensor.
  - ➕ : By clicking here, users can add the selected sensors of their choice.

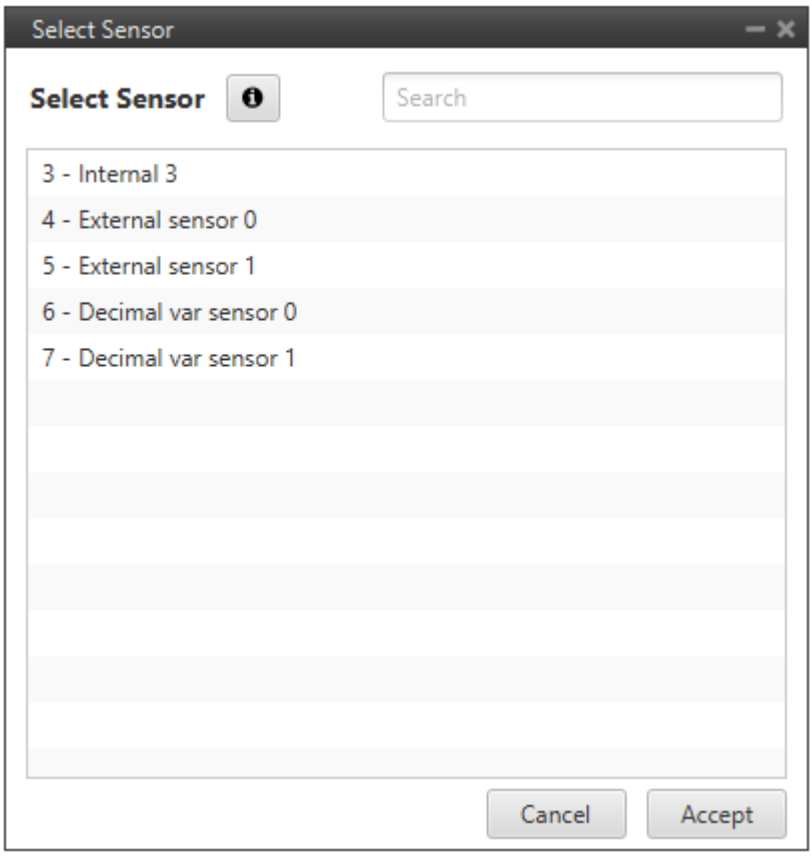


Change active sensor action - Select sensor

> **Note**
>
> The behavior of the default and selected sensors is the same as described in the Sensors section of this manual.

Command block

This action allows the user to configure a gimbal or to trim a radio controller.


> **Note**
>
> This action is disabled by default when Autopilot 1x is started. To activate it, the user have to create a gimbal block or an arctrim block (see more information about it in the Block Programs section of this manual).

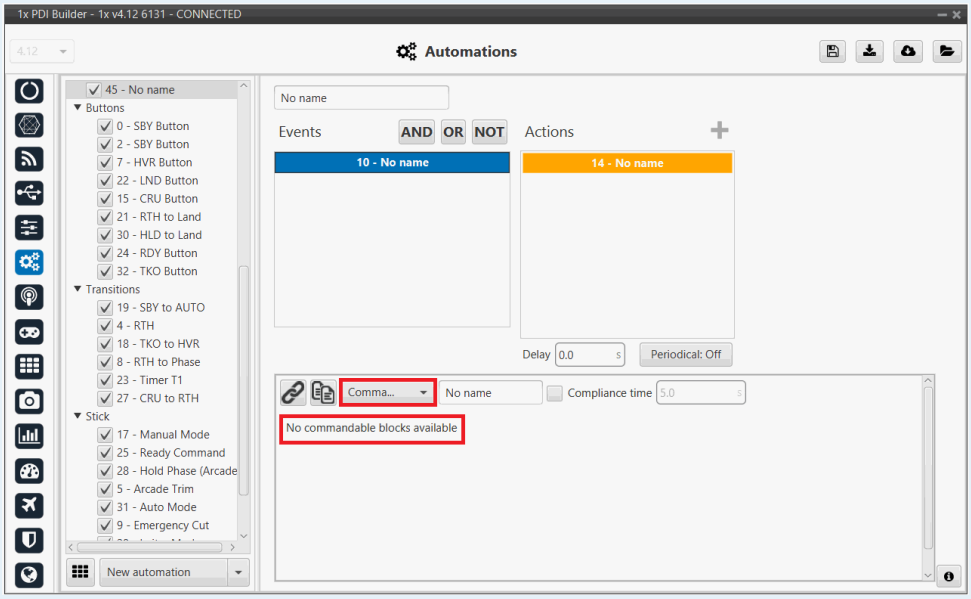

Command block action

Gimbal

When this action is triggered, the gimbal control is enabled. There are several control modes that are explained below.

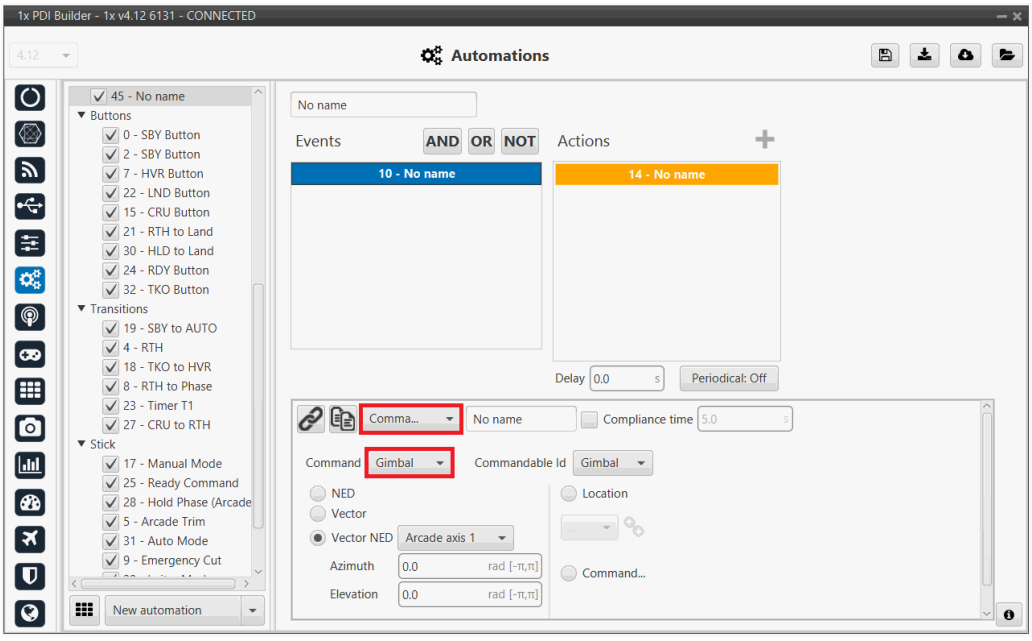


Command block action - Gimbal

- **Commandable Id**: Id of the commandable Gimbal block (users can look up this Id in the block to be commanded, in the Gimbal - Devices blocks of the **Block Programs menu**).
- **NED**: Control using NED axis, defining the initial position through azimuth and elevation.
- **Vector**: This control uses aircraft body axis. The initial position is defined through roll and tilt.
- **Vector NED**: In this case the axis should have been defined in the Arcade axis panel of the **Control menu**.
- **Location**: The gimbal will point towards the projection on the ground at the specified point.
- **Command mode**: Gimbal control is done externally, e.g. via VCP commands.

ArcTrim

This action trims the radio controller, i.e sets as zero the current sticks positions.

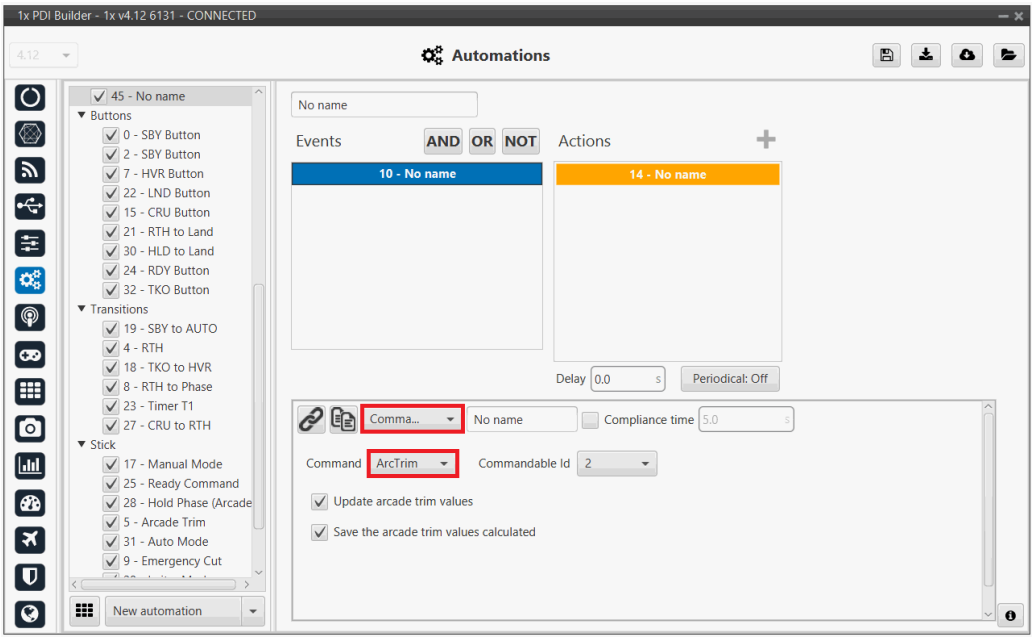

Command block action - ArcTrim


- **Commandable Id**: Id of the commandable ArcTrim block (users can look up this Id in the block to be commanded, in Arc Trim - Servos blocks of the **Block Programs menu**).

- **Update the arcade trim values**: If this option si enabled, the stick is trimmed but not saved in the configuration. This means that **if Autopilot 1x is restarted the trimming is lost**.
- **Save the arcade trim values calculated**: Trim values are **stored** for future flights.

Custom CAN TX

When this action is triggered, a previously configured CAN message is sent through the CAN bus. The message has to be configured in Custom message panel of the **Input/Output menu**.

> ⚠ **Warning**
>
> As this automation is used to send a single message on demand, in its configuration in **Custom Messages**, the user has to set its **period to -1**. This way, this **message will only be sent when this action is triggered**.

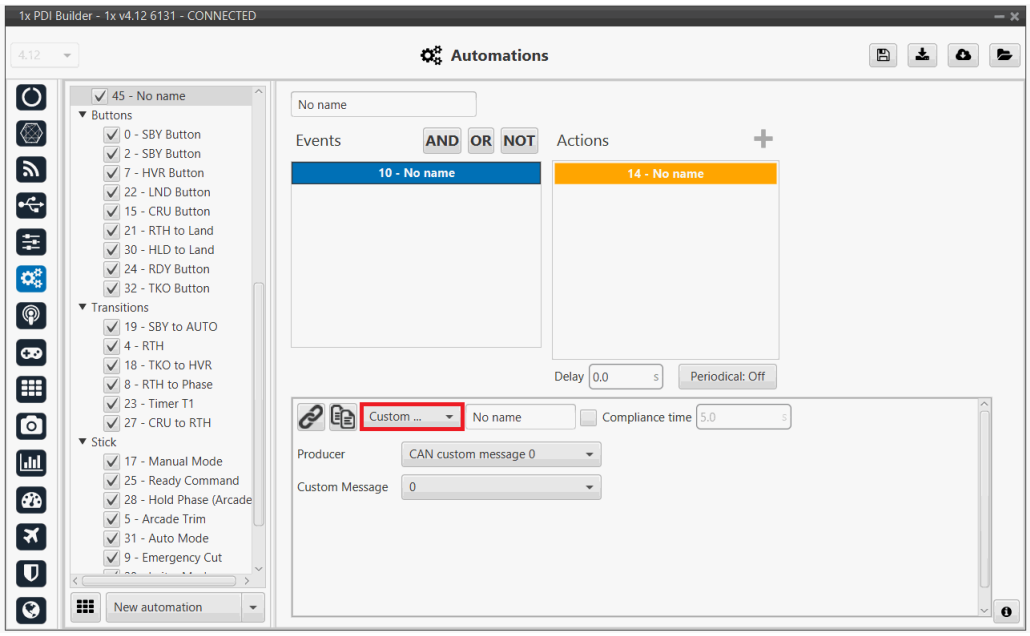

Custom CAN TX action

The two parameters to configure in this action are:


- **Producer**: The user has to specify where the custom message is located: CAN custom message 0, 1 or 2.

- **Custom Message**: The number of the custom message that will be sent.

Custom Serial TX

When this action is triggered, a previously configured serial message is sent through the serial port (RS232 or RS485). The message has to be configured in Serial custom messages panel of the **Input/Output menu**.

> ⚠ **Warning**
>
> As this automation is used to send a single message on demand, in its configuration in **Custom Messages**, the user has to set its **period to -1**. This way, this **message will only be sent when this action is triggered**.

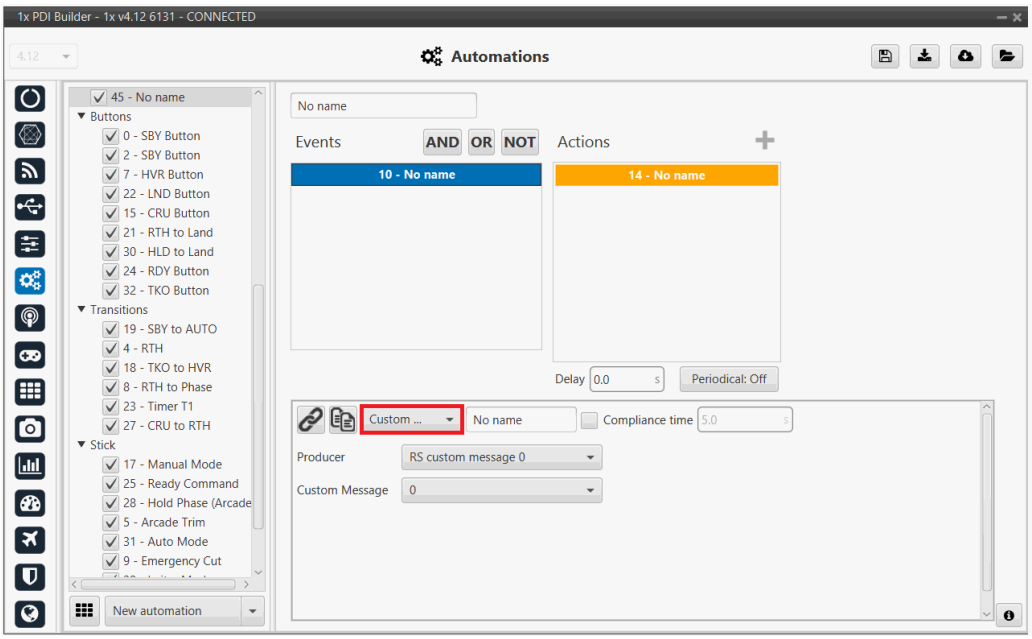


Custom Serial TX action

The two parameters to configure in this action are

- **Producer**: The user has to specify where the custom message is located: RS custom message 0, 1 or 2.
- **Custom Message**: The number of the custom message that will be sent.

DEM calibration


This option allows the calibration of the digital elevation model by setting the **actual AGL value** in the same way as shown in the **Operational panel of Veronte Ops** (for more information about DEM calibration click Veronte Ops manual).

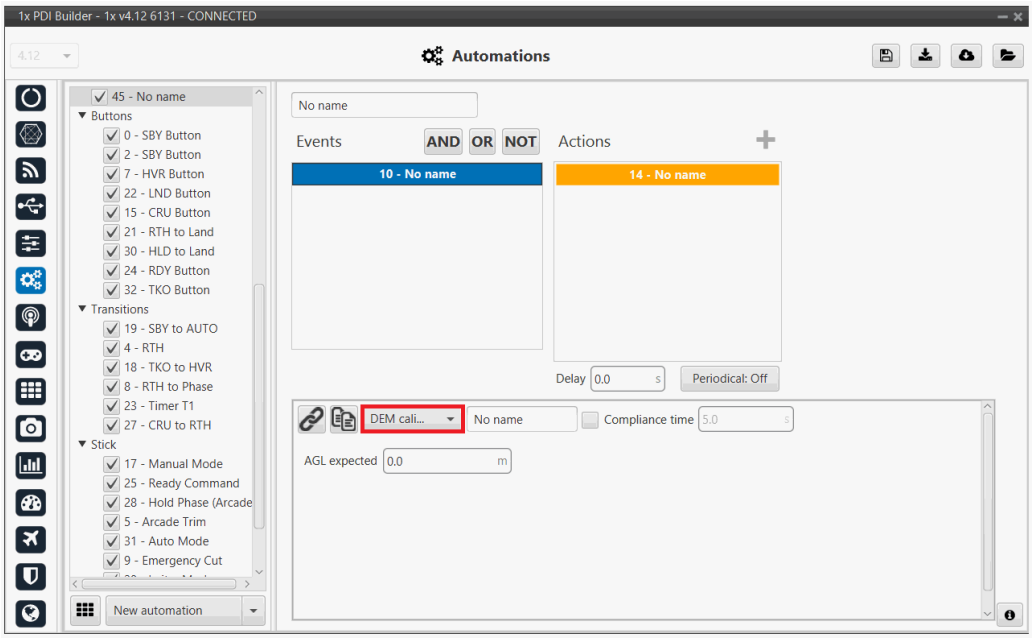

DEM calibration action

Enable/Disable Wind Estimation

This action allows the user to enable or disable the wind estimation.

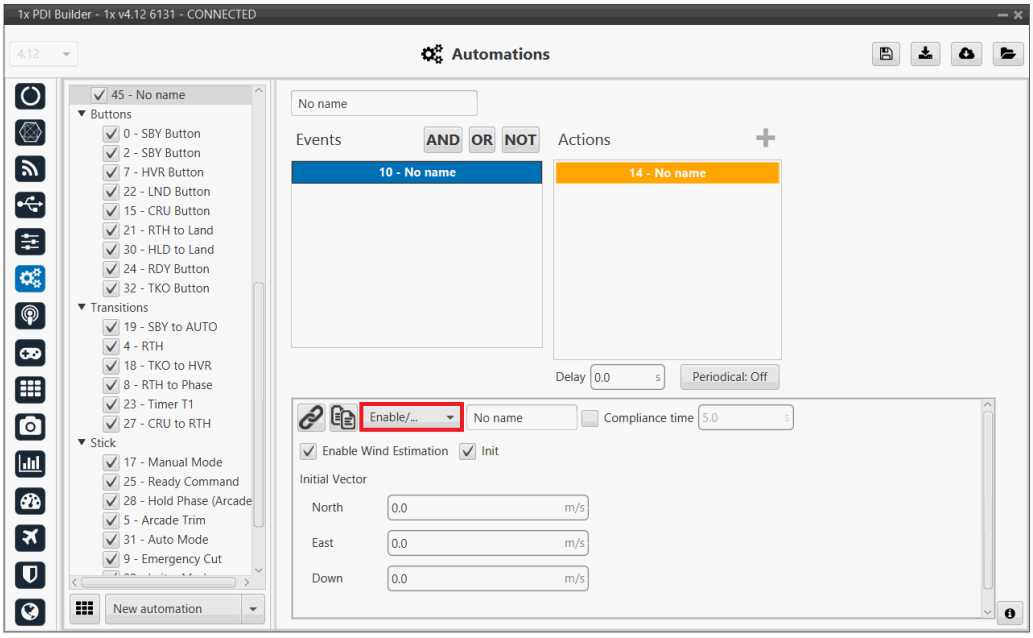


Enable/Disable Wind Estimation action

The following parameters can be configured:

- **Enable Wind Estimation**: Enabled/Disabled.
- **Init**: By enabling it, an initial wind vector can be set to a faster convergence of the estimation.
  - **North, East, Down**: Inital wind vector.

FTS-Activation

This action activate the flight termination system (FTS) bit.

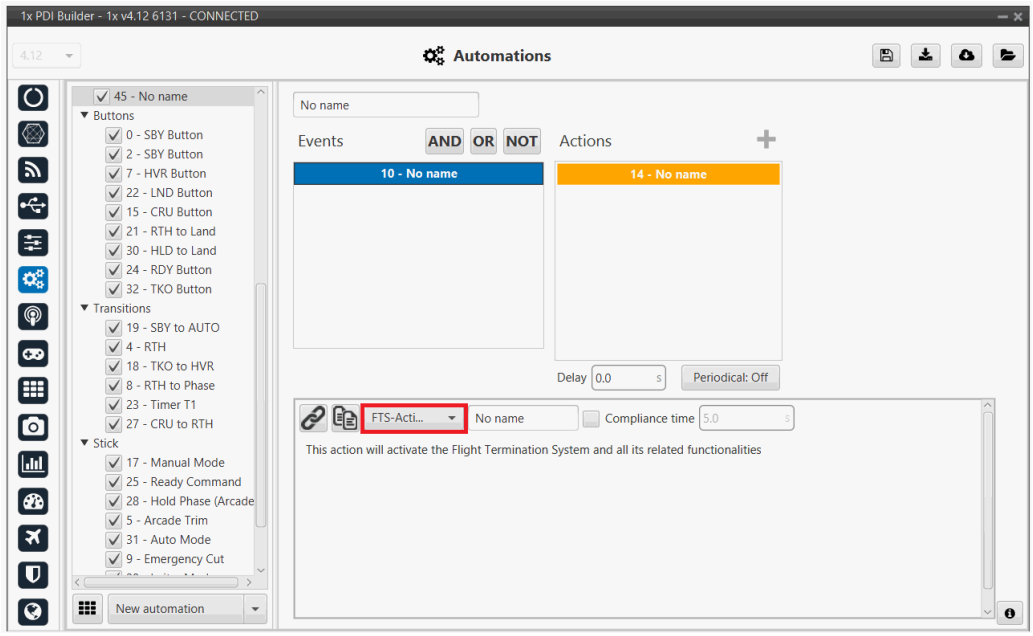


FTS-Activation action

In DRX, when two or more autopilots activate their FTS the arbiter can activate a safe system such as a parachute.

Feature

When this action is triggered, a position is stored in the desired variable. This position can be absolute or relative (in the figure below the current position of the aircraft would be saved):

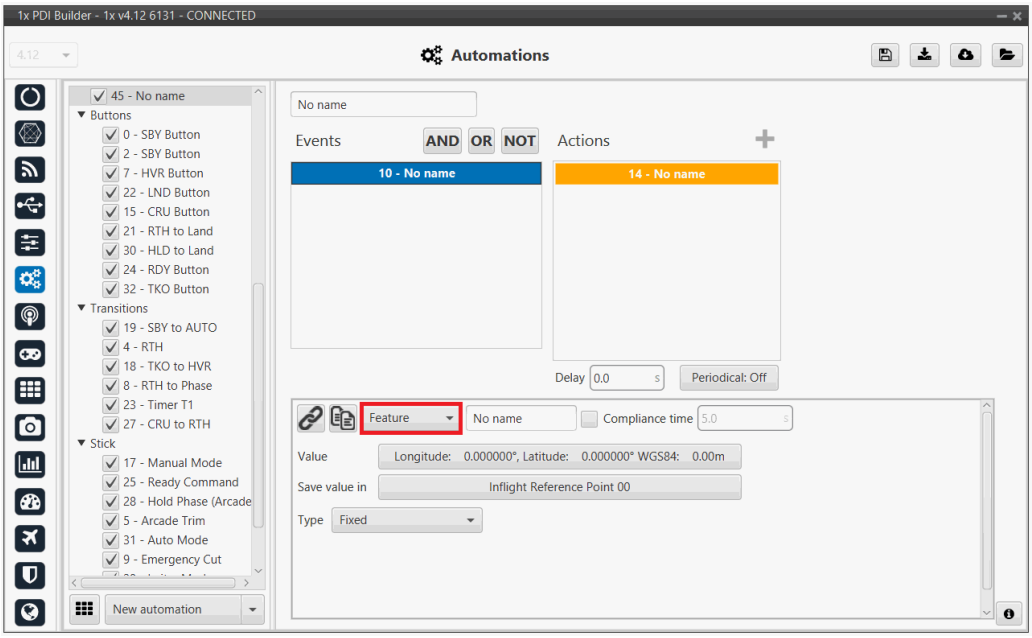

Feature action

The following options should be configured:

- **Value**: Specified the position to be stored, this position can be **absolute** or **relative**.
  - **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude, longitude and altitude (being possible to define this last one with respect to the ellipsoid, WGS84, to the sea level, MSL or to the ground, AGL).
  - **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Save value in**: The position has to be saved in an 'Inflight Reference Point'.
- **Type**: There are 2 types of features:
  - **Fixed**: Once the point has been generated it remains fixed.
  - **No change**: If the **point** has been created **relative**, it remains relative all the time.


> **ⓘ Note**
>
> This option only appears when the position has been previously defined as **Relative**.

This action is very useful for storing the take-off point for later landing at the same place.

Format SD

> **⚠ Warning**
>
> This action will have irreversible effects on your Autopilot 1x. Formatting the SD card will delete important and mandatory files for the correct functioning of Autopilot 1x.
>
> In order to recover a formatted, please contact the support team (create a ticket in the customer's **Joint Collaboration Framework**; for more information, see Tickets section of the **JCF** manual).


This action will format the SD card, deleting the configuration and flight logs from it.

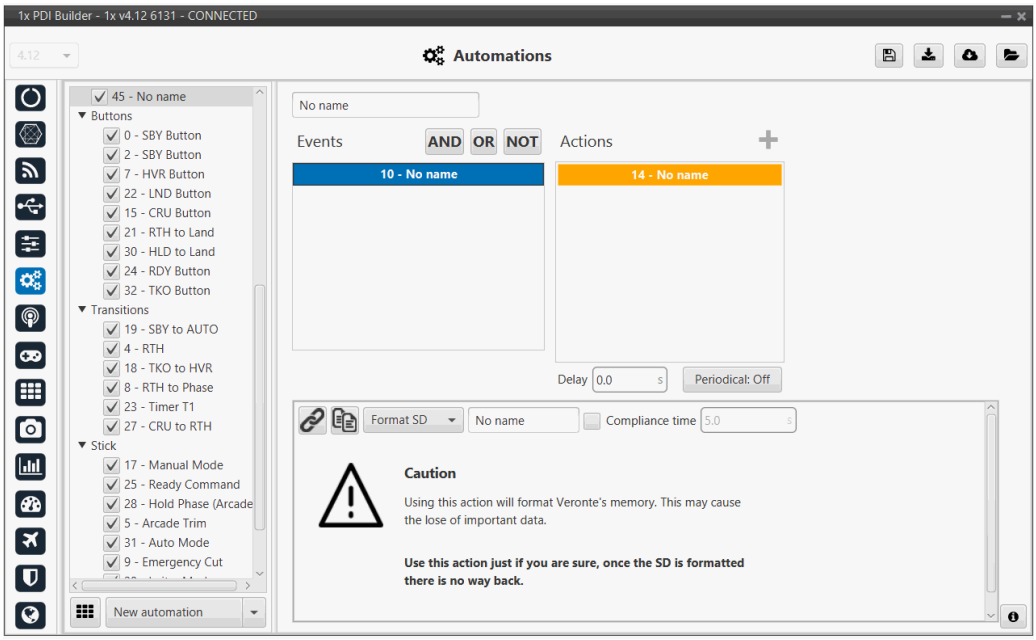

Format SD action

Go to

This action is used to make the aircraft go to a patch created by the user with the mission toolbar of **Veronte Ops**. For more information about the mission toolbar, take a look at the Veronte Ops manual.

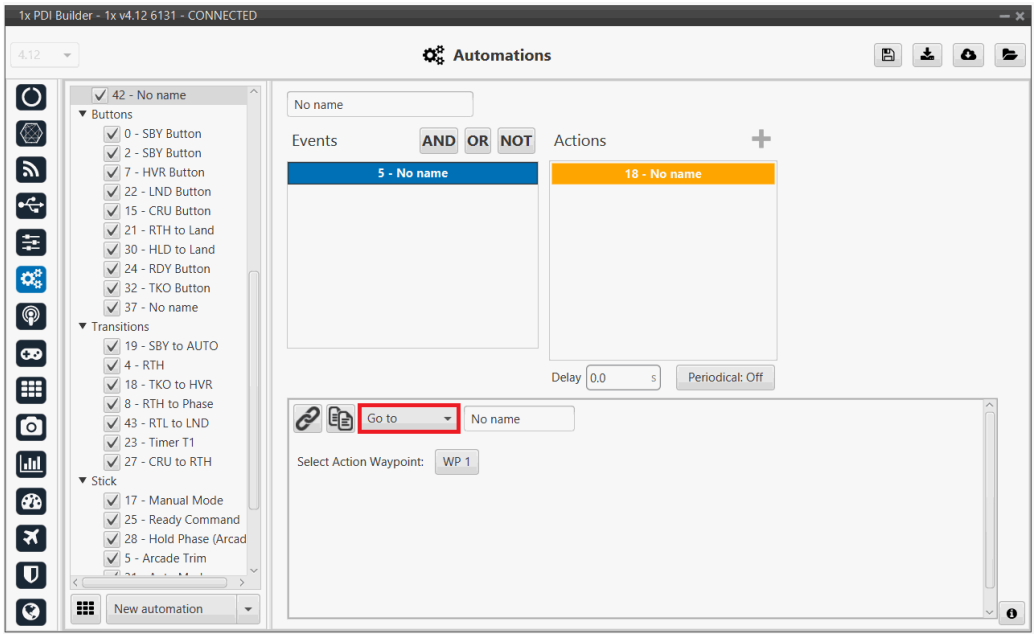

Go to action


In this action one parameter can be configured:

- **Select Action Waypoint**: To select point (**patch**), first define it in the Operation elements panel of the **UI menu**.

Once the action is triggered, the vehicle will go to that patch. If the patch is on a route, the vehicle will follow the selected patch and then it will continue the route going to its adjacent.

Mode

The Mode function defines the system's level of autonomy. This option triggers a transition to the selected flight mode.

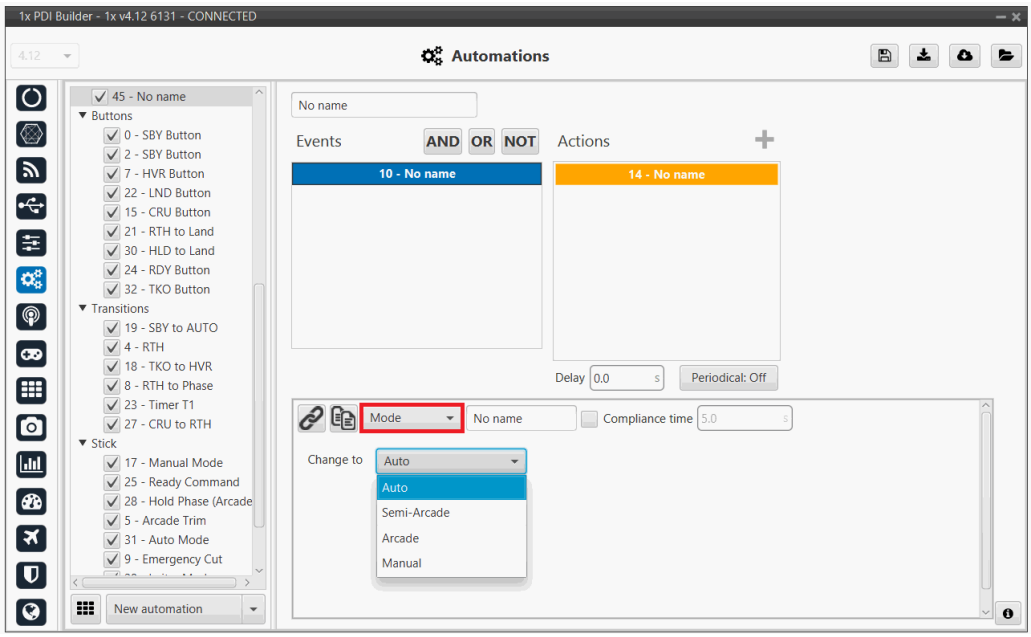

Mode action

- **Auto**: The control channel is totally controlled by the autopilot, following the planned mission or autonomous routines such as RTH or waypoint navigation.
- **Semi-Arcade:**: A hybrid configuration where the autopilot stabilizes specific variables (e.g., altitude or position) while still allowing the pilot to provide partial manual inputs.
- **Arcade**: The control system facilitates assisted piloting by interpreting stick movements as desired velocity or relative direction commands, rather than direct surface deflections.
- **Manual**: The autopilot minimizes its intervention, providing the pilot with direct control over the aircraft's attitude and power.

These modes have been created previously. See Modes - Control section, for more information about creating modes.


Navigation

This action is used to change the navigation mode used by the aircraft.

By default, the UAV uses an Internal sensor fusion algorithm, but for example, if the GPS fails, the Autopilot 1x switches to **inertial navigation**. Since in this type of navigation, the estimation of position and velocity diverges over time, if that happens, it is advisable to switch to another type of navigation (External).

> **Note**
>
> This **behavior** is not specific to Veronte Autopilot 1x, it is **common to all inertial navigations**.

The navigation without GPS will make the aircraft fly stable but it will not be possible to command a path to follow during that time, so this action can be used as a safety mode to avoid a malfunction of the system when the GPS signal is lost.

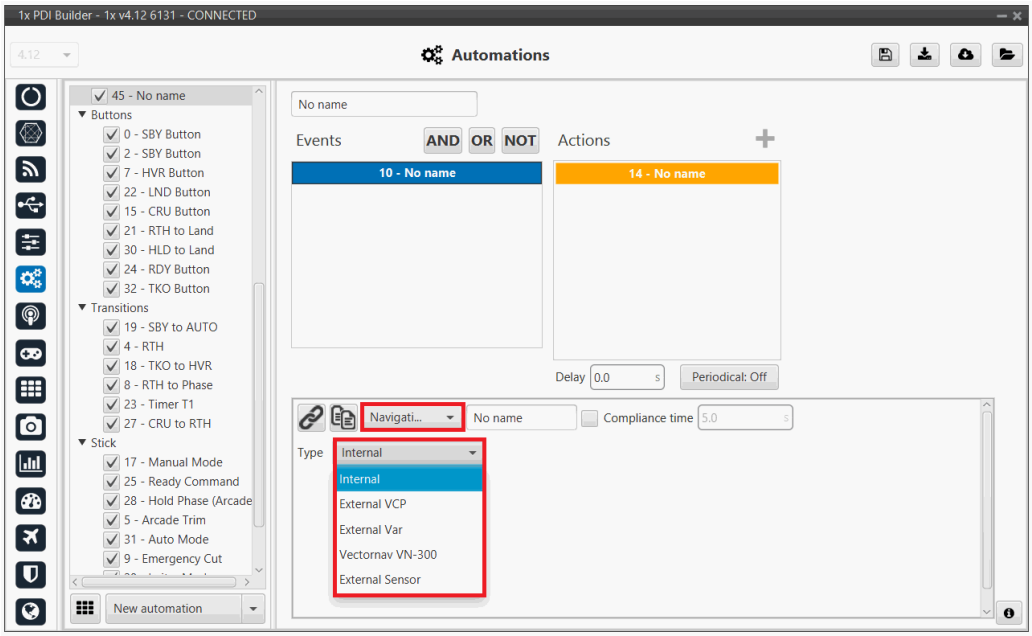

Navigation action

The options available are:


- **Internal**: Uses internal data for navigation. Data (position, attitude, etc.) is processed into 1x unit from sensor measures.
- **External VCP**: Uses external data for navigation. Data (position, attitude, etc.) is provided by Veronte Communication Protocol (VCP).
- **External Var**: Uses external data for navigation.
  - It takes directly the **attitude, velocity and acceleration data** of the following real variables from the memory:
    - **ID 259**: External yaw
    - **ID 260**: External pitch
    - **ID 261**: External roll

        - **ID 262**: External roll rate
        - **ID 263**: External pitch rate
        - **ID 264**: External yaw rate
        - **ID 265**: External velocitiy north
        - **ID 266**: External velocity east
        - **ID 267**: External velocity down
        - **ID 268**: External acceleration x body axis
        - **ID 269**: External acceleration y body axis
        - **ID 270**: External acceleration z body axis
        - **ID 271**: External GPS Time of Week
    - **Position data** is read from the **Moving Feature 00**.
- **Vectornav VN-300**: Uses external data for navigation. Data (position, attitude, etc.) is provided by Vectornav VN-300.
- **External Sensor**: Uses external data for navigation. Navigation data (position, attitude, velocity, and acceleration) is provided by a compatible external sensor connected to the system.

  For more information, see the Vectornav VN-300 - Integration examples section of this manual.

Obstacle avoidance

This action enables avoidance of any obstacle previously created in **Veronte Ops** (for more information, see Veronte Ops manual).

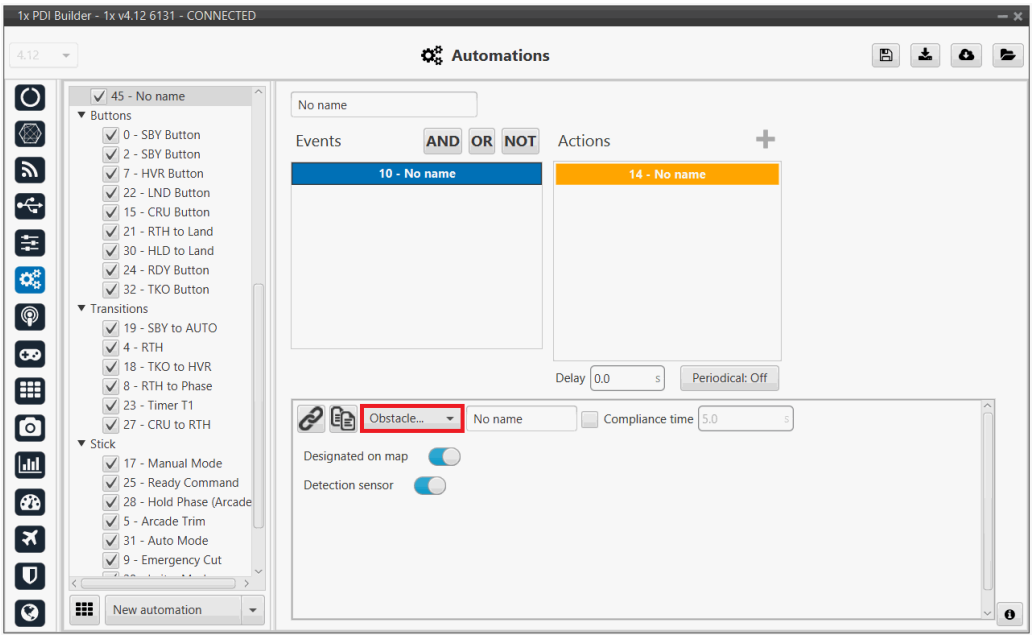


Obstacle avoidance action

2 types of obstacles can be enabled:

- **Designated on map**: By activating this option Veronte Autopilot 1x attempts to avoid all obstacles on the map which may include prisms, cylinders, etc., as well as aircraft received by ADS-B.
- **Detection sensor**: Obstacles previously defined in **Veronte Ops**.

Output

This action is used to set an output value in a GPIO pin. The output pin must have been configured as a **GPIO output** (visit GPIO - Connections section of this manual).

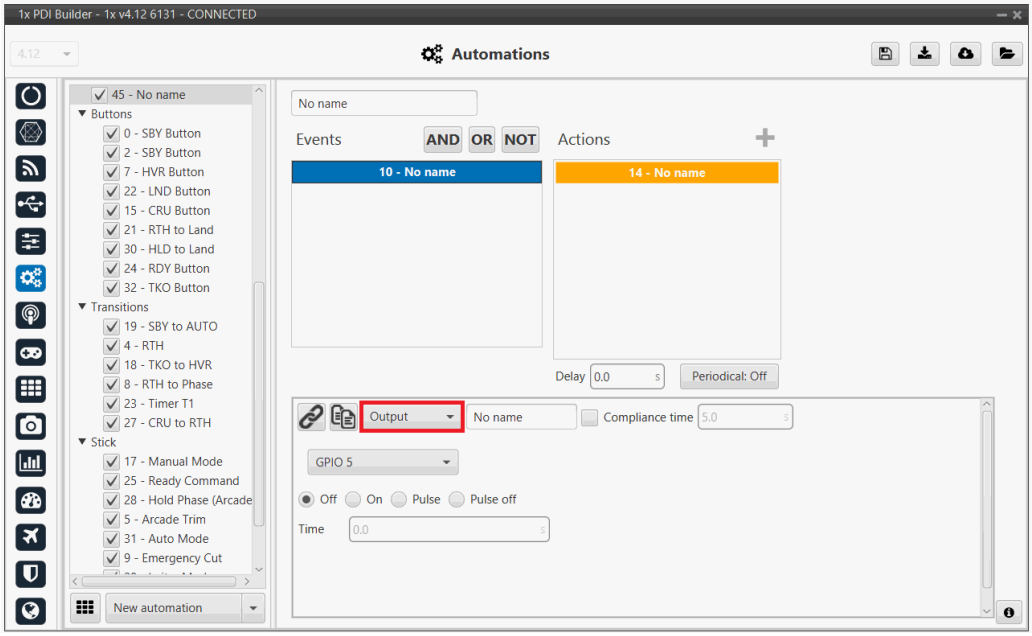

Output action


The user can select, in the drop-down menu, between a GPIO output or a virtual output. The virtual option works like a normal GPIO output, but physically this output is not in the autopilot. It is used, for example, with a CEX.

There are four possible output signals:

- **Off**: Provides continuous 0V output.
- **On**: Provides continuous 3.3V output.
- **Pulse**: Provides 3.3V for the specified time and after that 0V.
- **Pulse off**: Provides 0V for the specified time and after that 3.3V.

Periodical

This action is used to set a timer during a flight operation.

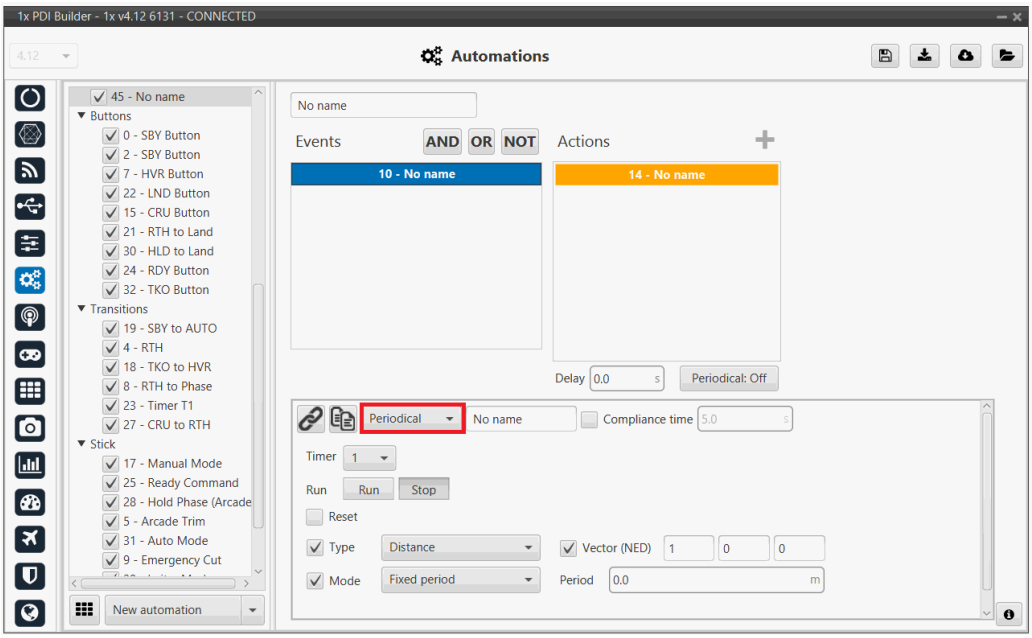

Periodical action

The following parameters are configured:


- **Timer**: This parameter is an identifier for the timer, so it can be used in an event for another automation.
- **Run**: Sets the timer status:
  - **Run**: The timer will start.
  - **Stop**: The timer will be stopped. Another automation should be created to run it again.
- **Reset**: When this action is active, the timer is reset to zero before starting to measure.
  - **Stop + Reset**: The timer will be stopped and set back to zero.
- **Type**: These available options have been previously explained in Automations.
- **Mode**: The difference between fixed delay and fixed period has been previously explained in Automations.

For a better understanding of this action, a set of examples are detailed below with possible combinations of the different options.

- **Run + Distance/Time + Continuous**: When the action is triggered, the timer will be started and will measure distance/time from that instant until the moment when the autopilot is turned off (or until another automation acts on the same timer).
- **Run + Distance/Time + Fixed Delay/Period**: Once the action has been triggered, the timer will start to measure a distance/time. Each time the value indicated in Period is reached, the event linked to this timer (in another automation) will be triggered.
  For example, if the user wants to take a photo each 25 meters, in a first automation, the timer should have Distance in the Type option and 25 meters in Period, then in the second automation, an event of type Timer is created (and linked with the timer before created), so each time the timer reaches 25 meters the event will be triggered and the action will be carried out.
- **Distance + Vector (NED)**: The distance is measured in the direction indicated by the vector.

Phase

The flight phase is changed to the one selected in this action.

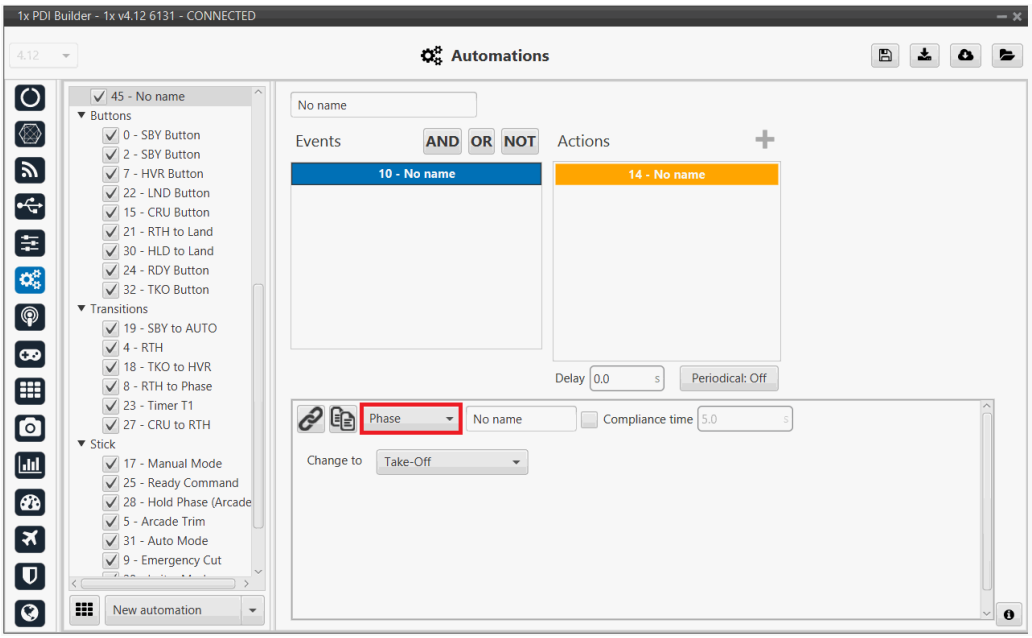


Phase action

These phases have been created previously. See Phases - Control section, for more information about creating phases.

Ports


This action allows the user to switch between 4 pre-set configurations defined in the Ports panel of the **Communications menu**.

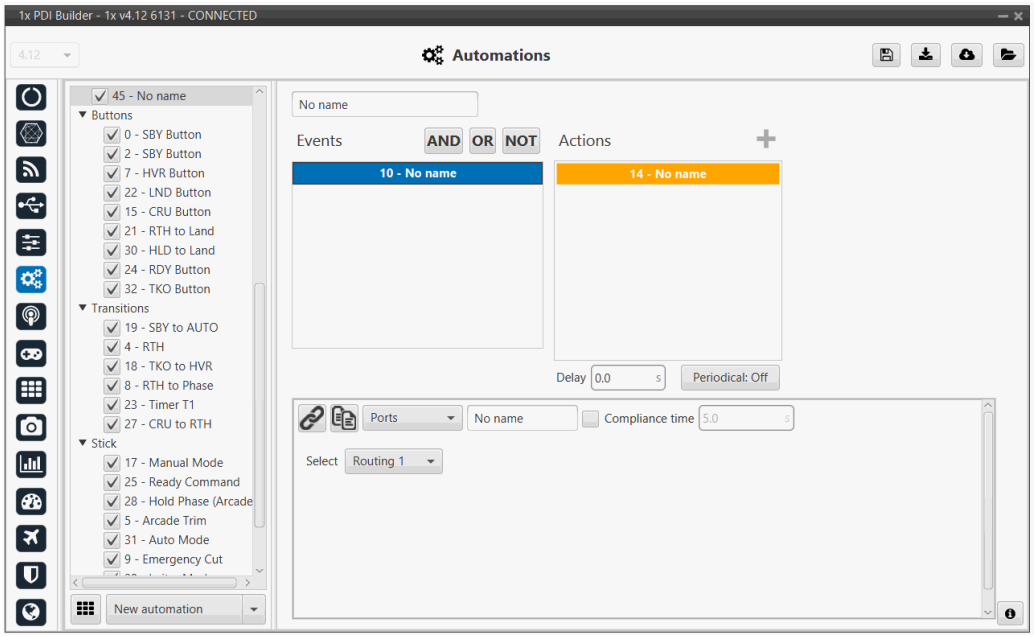

Ports action


Run block program

When this action is triggered, the block program specified in the "Execute" label is executed.

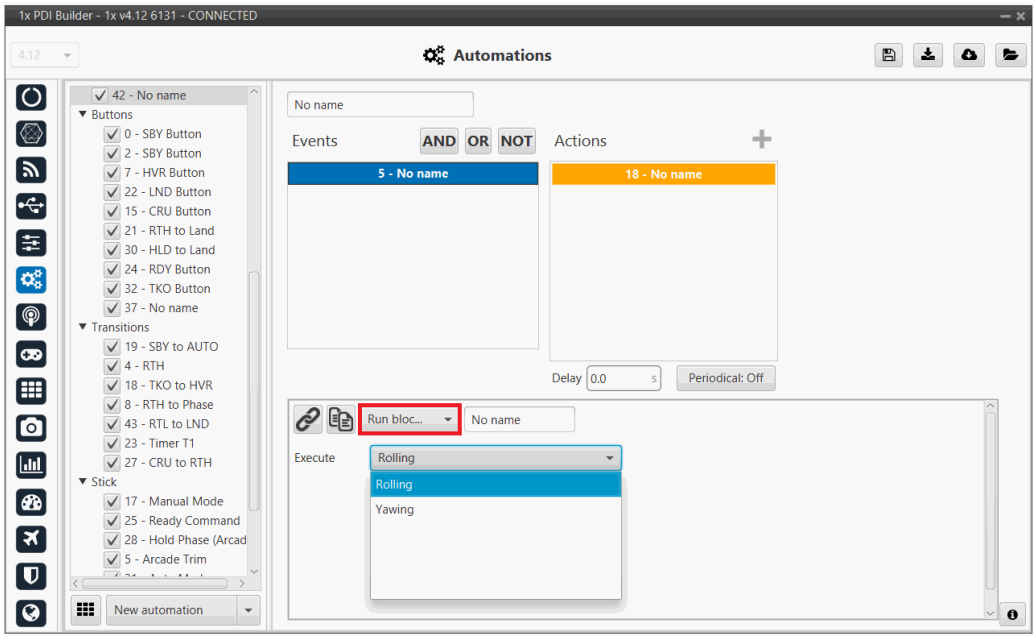

Run block program action


This action can run those programs that have the lightning icon in grey color as those programs with the lightning icon in black color run continously. For more information about programs, see section Block Programs.

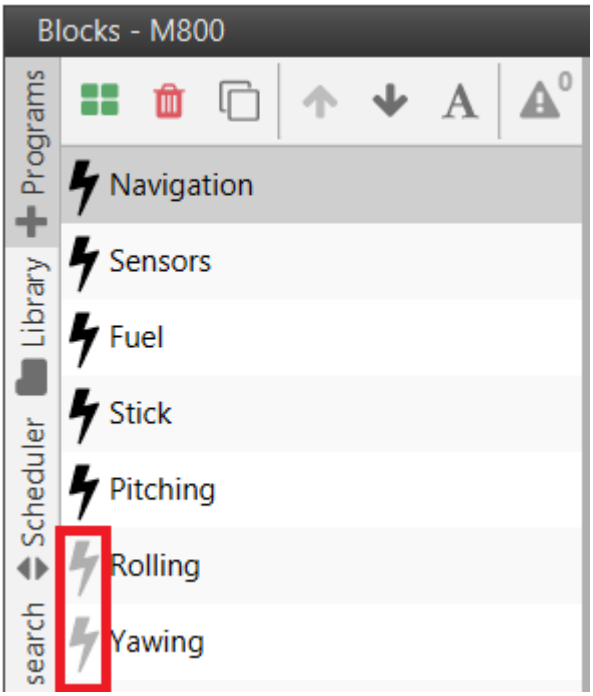

Grey lightning icon

STANAG 4586 message

This action is used to manage and respond to standardized messages compliant with the STANAG 4586 protocol. It allows the Autopilot 1x to interact with external Core UAV Control Stations by linking specific automation triggers to standardized command sets.

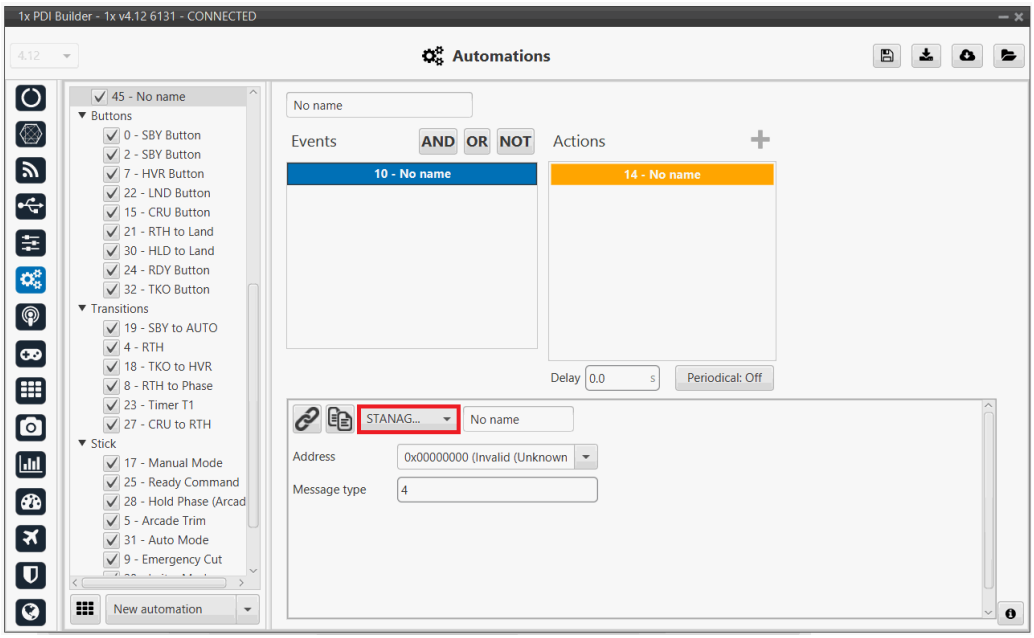


STANAG 4586 message action

- **Address**: Defines the network address of the destination or source unit for the STANAG 4586 communication.
- **Message type**: The user can specify the numerical ID of the STANAG 4586 message to be handled or transmitted.

Safety Bits

This action selects a predefined safety bits list.

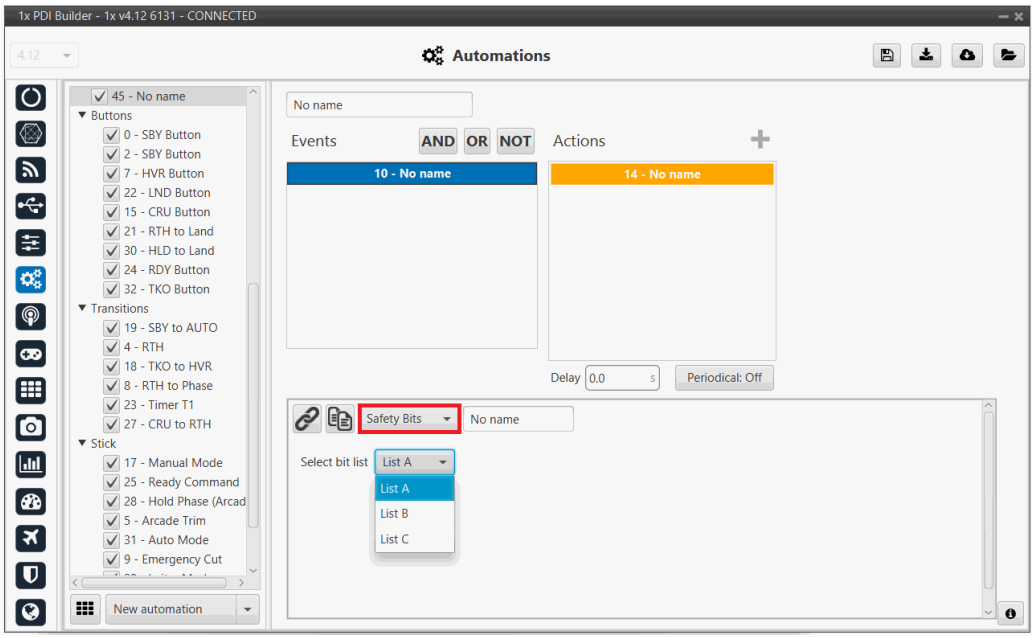


Safety Bits action

This list must be previously configured. For more information about this, see Safety bits - Safety section of this manual.

Select Arcade axis


The axes system of the aircraft is changed to one that has been previously created in the Arcade Axis panel of the **Control menu**.

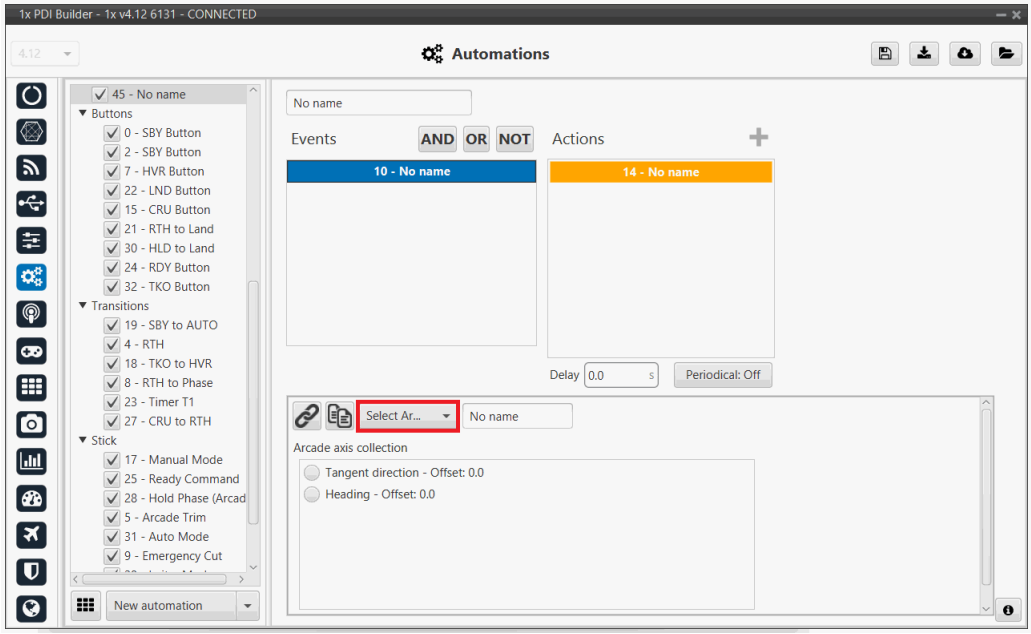

Select Arcade axis action

Stick priority

The user can switch between the two priority tables of the **Stick block** (for more information about the stick block, see Block Programs section of this manual). By default priority table 0 is selected when Autopilot 1x starts.

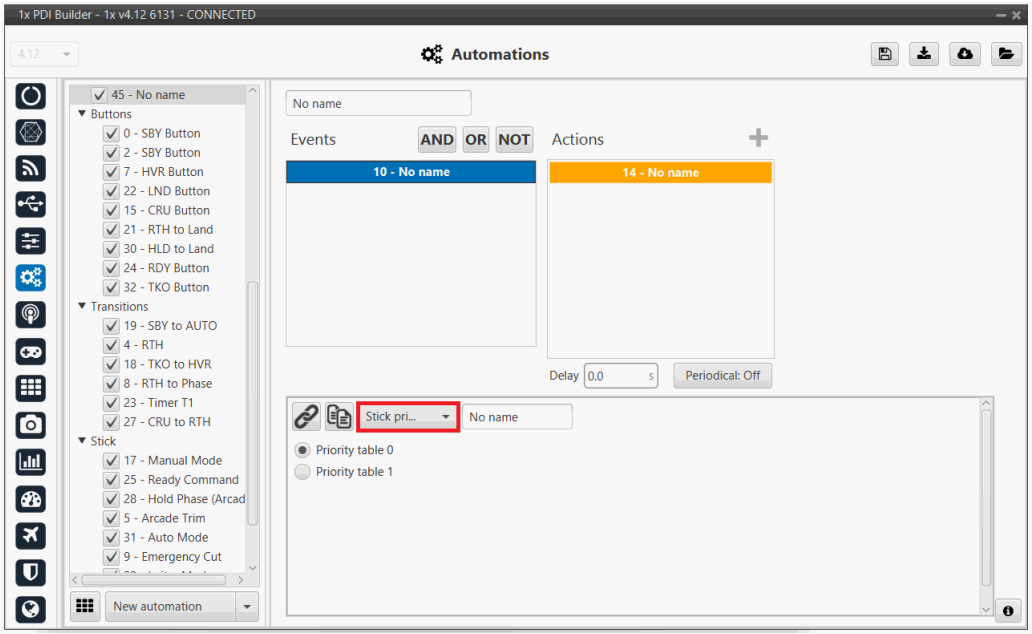


Stick priority action

Terrain obstacle

This action is used to cause the aircraft to climb when it is reaching the ground (normally an altitude of zero metres), acting in the same way as an obstacle, with a **vertical repulsion**.

> ⚠ **Caution**
>
> - This only prevents "vertical" collisions.
> - This option cannot be activated all the time because it will not allow the aircraft to land.

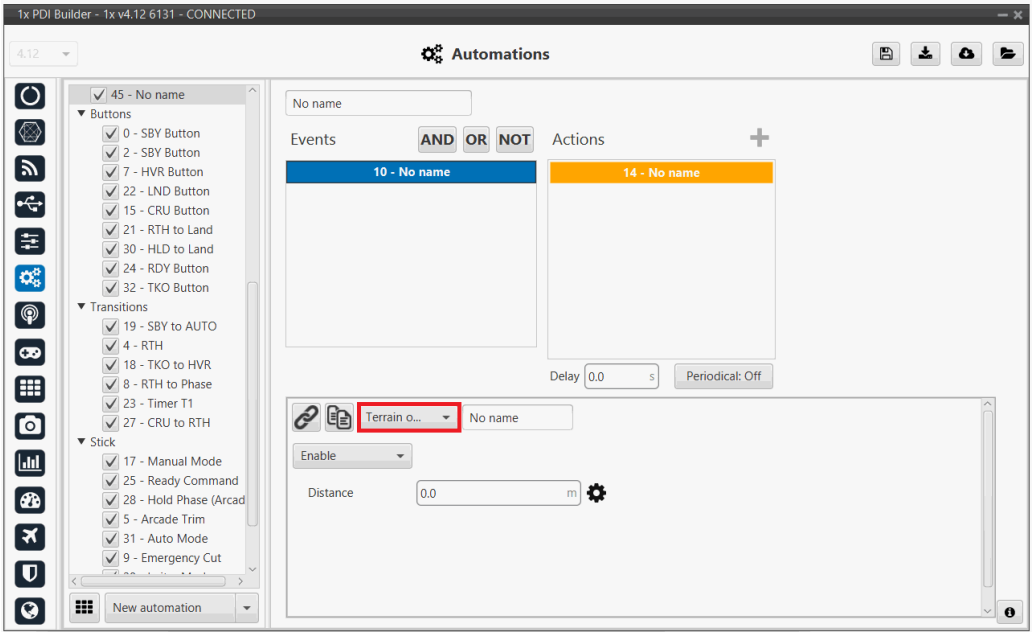

Terrain obstacle action

- **Enable/Disable**: When this option is enabled, the ground + an offset (Distance) is considered an obstacle, in the same way as those that can be defined from **Veronte Ops**. For more information on obstacles, please refer to the Set Obstacle (Sphere item) - Mission section of the **Veronte Ops** user manual.
- **Distance**: Establishes the distance between the ground and the edge of the imaginary obstacle. The repulsion generated will be inversely proportional to the distance of the uav to this edge, being maximum when the uav is directly over the edge.

> **Important**
>
> The distance at which the repulsion starts will be inversely proportional to the acceleration set in the "**Obstacles/Geofencing**" configuration tab of the Envelope block.


Track

This action is used to configure a hover/loiter route (depending if it is a multicopter or an airplane) for the platform. Besides, there exists an option to follow a moving object.

There are 3 different options for the Track action, selecting **Disabled** no action will have effect on the guidance. The others are explained below.

Position

The aircraft will loiter/hover in a selected point.

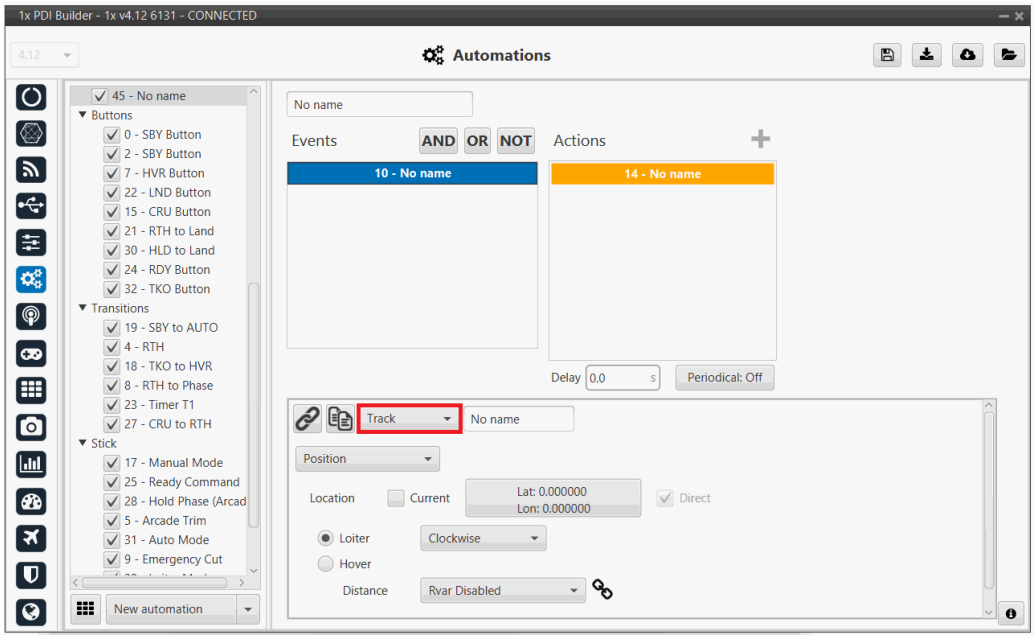

Track action - Position


The following options are available:

- **Location**:
  - Selecting **Current** will make the platform to **hover** over the position that the vehicle has when this action is triggered, or **loiter** around that point in a circular route.
  - The box **Longitude**, **Latitude** allows the user to select the point where the hover/loiter will be performed.
- **Loiter**: It is also possible to select the direction of the loiter (**Auto**, **Clockwise** and **Anticlockwise**).
- When **Hover** is selected the option **Direct** can be enabled.
  - If direct is **enabled**, the autopilot will calculate the control actions to reach the desired point based on the position error with that point.
  - If direct is **disabled**, the autopilot will trace a path to the desired point and calculate the necessary control actions for this 'new route'.

- **Distance**:
  - **Distance + Loiter**: In this case, distance indicate the radius of the loiter circular route.
  - **Distance + Hover**: This option allows the user to define an acceptance radius around the position of the hover center. If the UAV position is inside this circle, then Autopilot 1x considers it is hovering correctly and will keep the position. If the center of the hover changes its position and the UAV position is out of the hovering area, 1x will fly to the hovering center, and once it is inside the circle, the hover will start.

Follow Leader

The platform will follow a moving object.

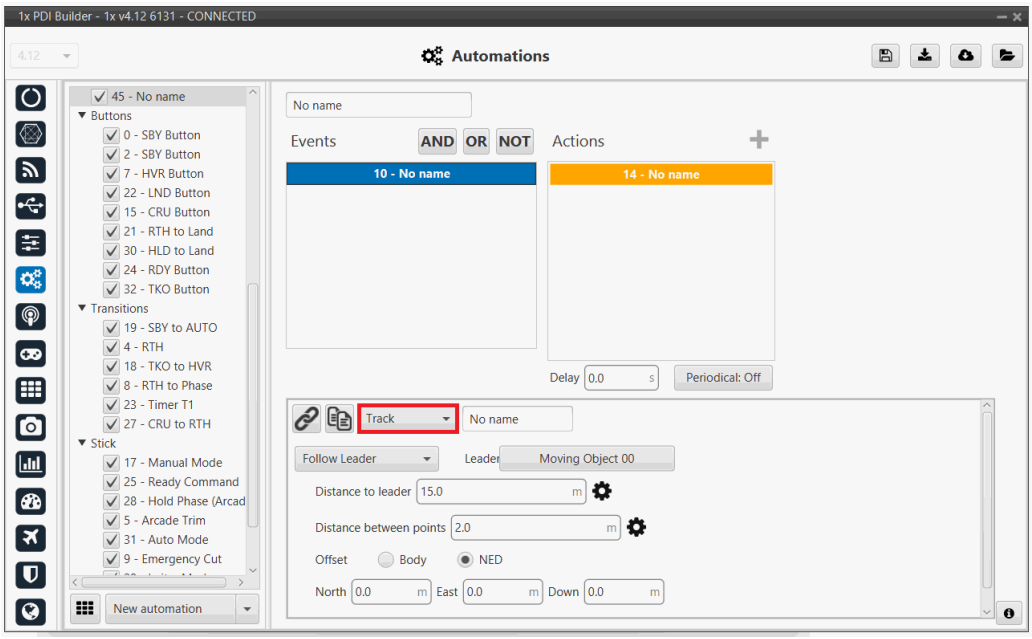

Track action - Follow Leader


In this action the following parameters can be configured:

- **Leader**: Here is selected the object to follow, e.g. Moving Object.
- **Distance to leader**: Distance to leader over trajectory.
- **Distance between points**: Leader route is generated by points separated by the distance specified here.
- **Offset**: User can establish offset parameters related to trajectory in Body or NED coordinates.

> **Note**
>
> To configure correctly this automation, the user has to follow the next steps:
>
> - Configure Telemetry in Air and Ground units.
> - Configure the automation as desired.

User Log


An entry, previously configured in the User Log panel of the **Telemetry menu**, is added to the on-board log.

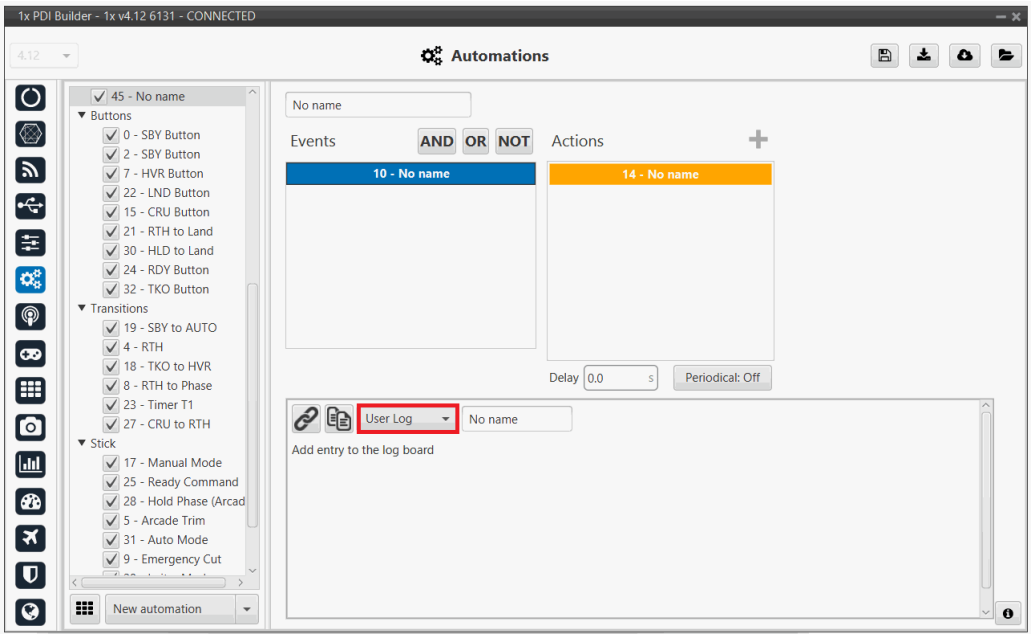

User Log action

Variable


This action allows the user to select variables or enter values and store them in user variables.

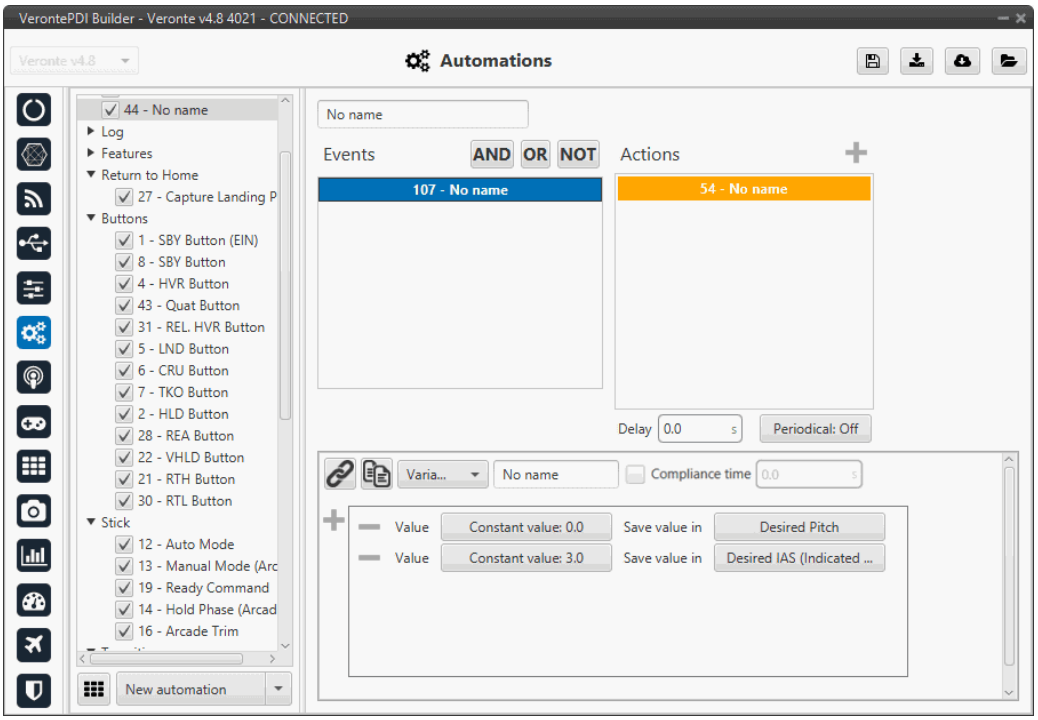

Variable action

Yaw

When this action is triggered, the current yaw will be set to the one configured here.

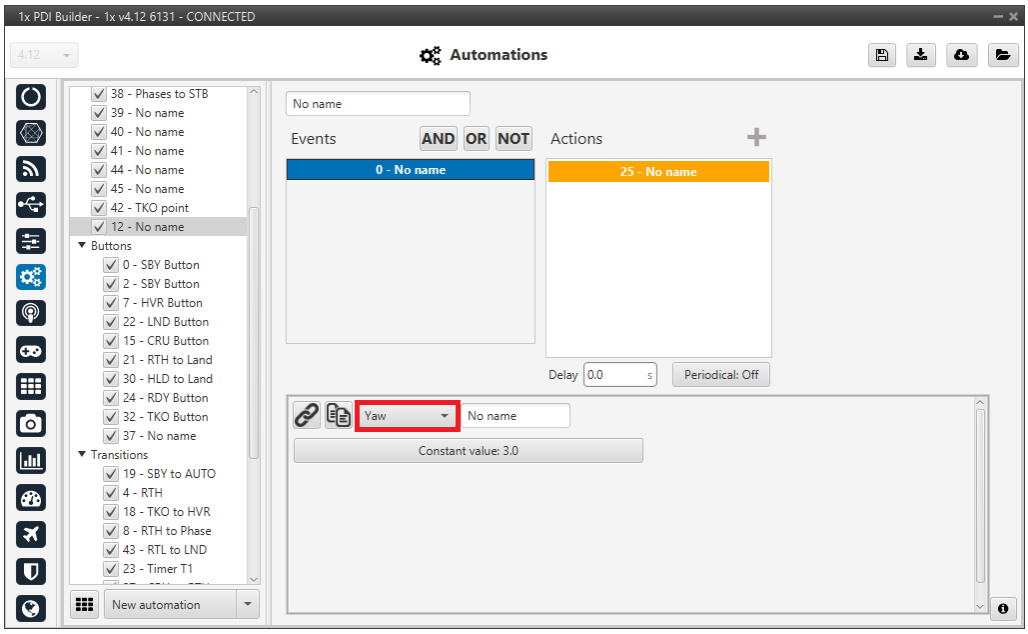


Yaw action

This action is useful when flying without a magnetometer, as the user can establish the current yaw value when it is known.

Communications

Ports

Ports configuration allows the user to configure which communication ports (Commgr Ports in I/O Setup) will be used for communication. When using the **Route** feature, Autopilot 1x can be configured to **route** VCP messages for an external Veronte device with a known address (ID) through a given port.

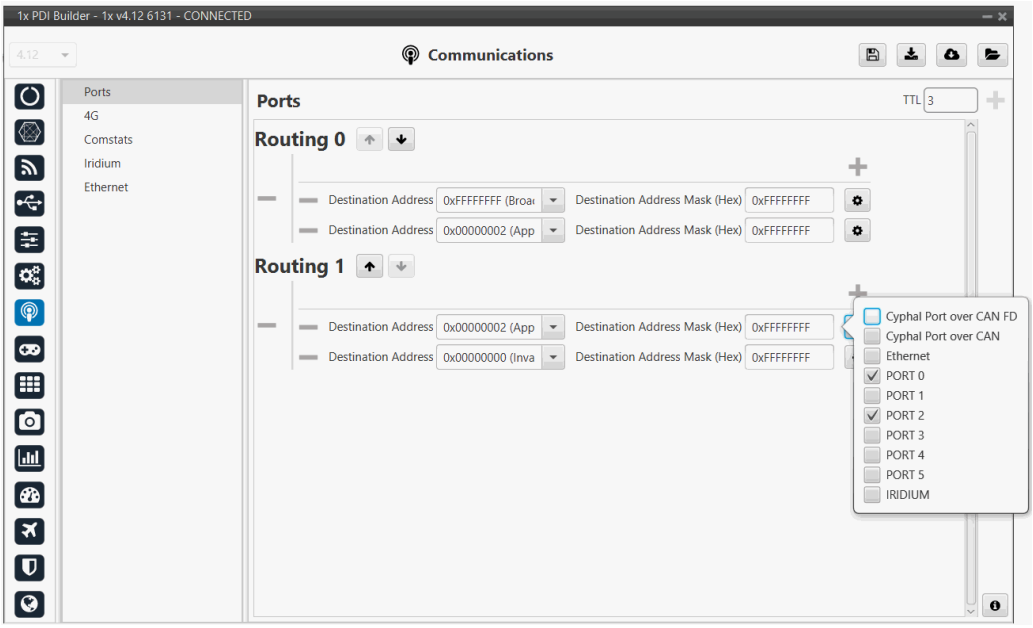

Ports panel

The Ports panel allows for data traffic management based on the Destination Address and the application of a Mask.

- **TTL**: Time To Live defines the maximum number of hops a data packet can make across network nodes before being discarded. It prevents network congestion by ensuring packets do not circulate indefinitely in the event of a routing loop.
- **Routing**: The system applies routing based on the packet's destination address instead of a simple port-to-port pass-through.
- **Destination Address**: Indicates the specific address for which the message is intended.
- **Destination Address Mask (Hex)**: Functions as a filter to make a single routing rule valid for multiple addresses.

Clicking the configuration icon ⚙ opens the interface selection list.


> **Note**
>
> A single port **cannot** be assigned to multiple routing logic types simultaneously. If a port is selected to handle traffic based on a Destination Address and Mask, it cannot be used for direct port-to-port forwarding at the same time.

It is possible to define up to 2 routing setups, which can be switched unsing the Ports action of the **Automations menu**.

Routing 0 will always be selected by default when booting Autopilot 1x.

Application example

A practical example of the use of this menu are 1x ground unit configurations. These configurations should have configured a Routing of **Address 2** (App) (**Veronte applications**, in this case Veronte Ops) through the Commgr port to which the **RS232 consumer** is connected (to allow connection to the PC). In this example, **Port 0 producer** is the one connected to RS232 consumer.

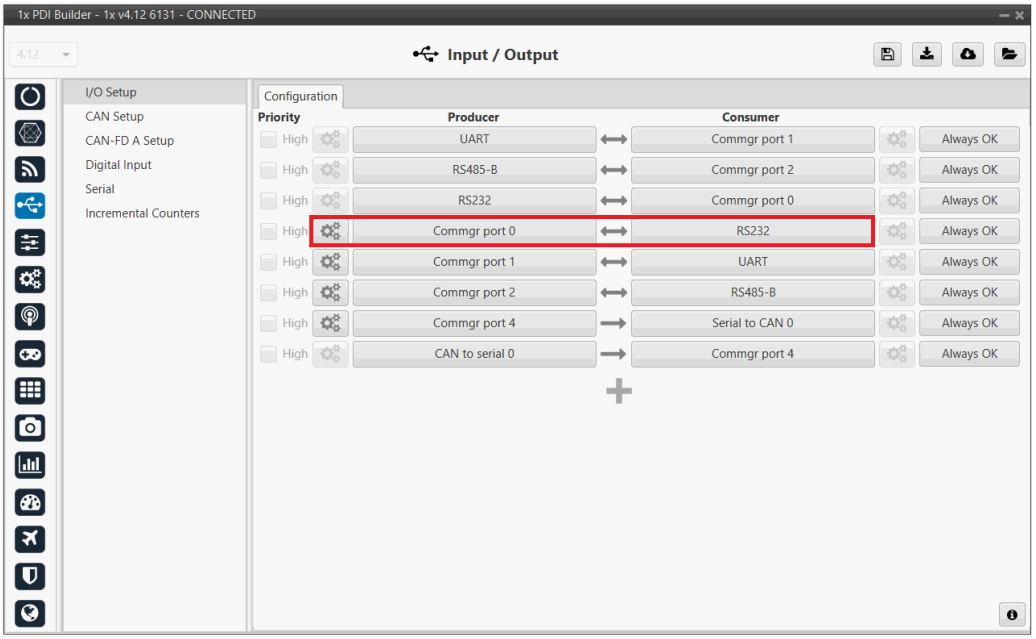

Ports panel - I/O Setup configuration

This way, any messages that are received through a Commgr Port with **address 2** (App), will be re-routed through Port 0 and received by **Veronte Ops** software, including any messages generated by 1x ground unit itself.

> ⚠ **Warning**
>
> An incorrect Port configuration can **disable RS232 communication**. If this happens, 1x will not be able to be detected through **Veronte Link** software. If this is the case, please visit Forcing maintenance mode - Troubleshooting section of the **1x Hardware Manual**.

4G

Checking the **Enable** box will enable the use of 4G communication through the **Veronte LTE** Consumer/Producer in the I/O Setup.

> ⚠ **Warning**
>
> Be careful when configuring 4G communication on the Veronte Autopilot 1x as the **configurations** for Autopilots 1x with `hardware version 4.8` and for Autopilots 1x `hardware version 4.5` are **not compatible**.


ESIM

The embedded **ESIM** in Autopilot 1x allows the user to send and receive telemetry using a commercial data provider.

The connection between the air unit and the ground station is established through the Veronte Cloud server. To connect with Veronte Cloud the following parameters have to be set:

- **Host**: rt.STANAG 4586.utm.systems
- **Port**: 3117

Host and Port can be changed if the used server differs from Veronte Cloud, but the communication protocol does not change.

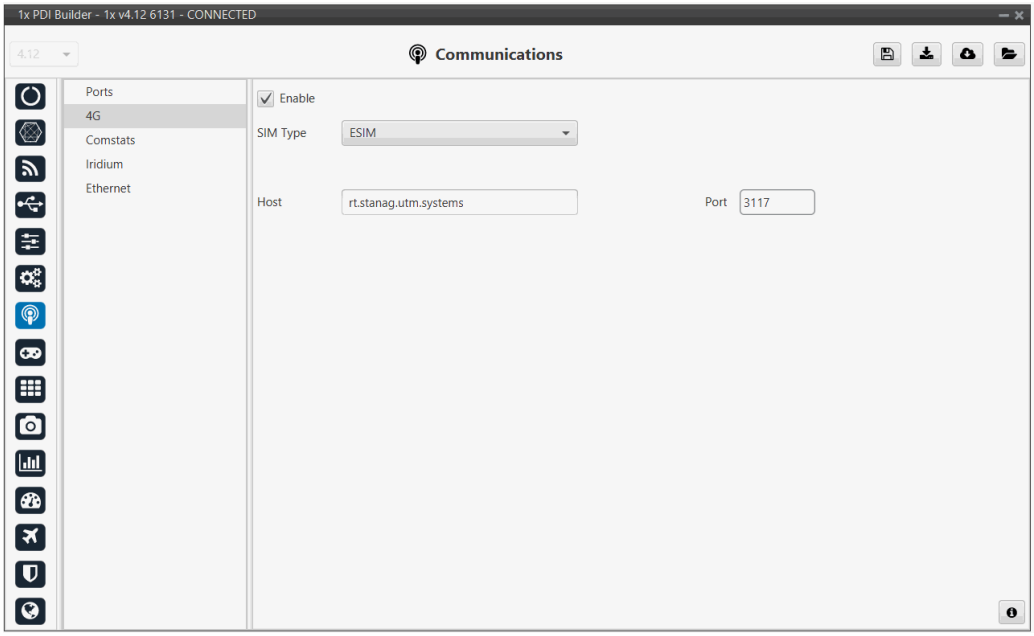

4G panel - ESIM


> **Note**
>
> In order to use the embedded **SIM** card, the contract with the data supplier needs to be done through **Embention**. Please contact sales@embention.com for more information on availability, coverage, suppliers and prices in your country.

Comstats

The Comstats feature allows Autopilot 1x to make an estimation of the overall **quality of the communication** channel.

1x will send periodically (**If enabled**) a message with its current communication statistics (packets sent and received per second). Then, any other 1x unit can receive this information and compare against its own statistics to estimate the average amount of packets lost in the communication.

The results of this estimation can be monitored in variables **RX Packet Error Rate** (ID 2000) and **TX Packet Error Rate** (ID 2001). These variables can be used to enable, for example, failsafe actions in case of degradation or loss of communications.

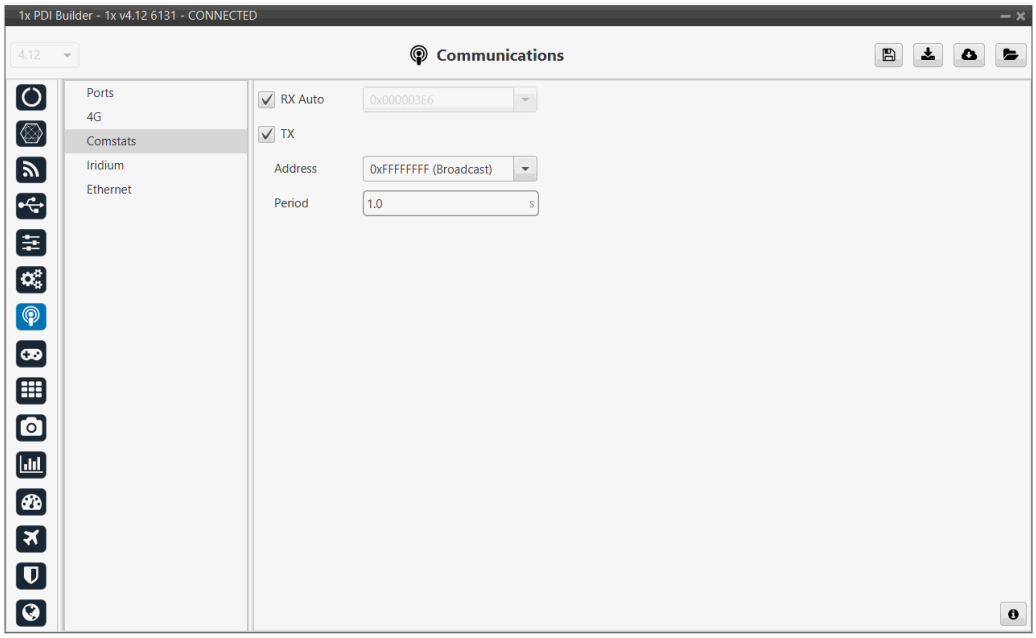

Comstats panel

It is possible to configure the source or destination of the statistics, as well as the frequency at which the Comstats message is sent:

- **RX Auto:** Enabling this option will use the first remote AP found. If this option is disabled, the user must enter manually the address of the unit used for Comstats calculation.
  For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.
- **TX:** When enabled, the unit will periodically send its Comstats message (set the period). Enter the address to which the message should be sent.
  For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.

> **Note**
>
> Enabling **TX** will enable Autopilot 1x to send its Comstats message, but in order to compute Packet Error rate it's necessary to **receive** the **TX** message from a different unit.

- **Destination Address**: Defines the target ID for the statistics packets.


- **Period**: Specifies the frequency at which the statistics are transmitted. By clicking on the unit of measurement, it is possible to select an alternative unit from the available options.

> ⚠ **Warning**
>
> **Packet error rate** is a good indicator of the status of the communication, but it is not representative of the radiolink status. For monitoring the status of the radiolink RSSI Variables (820-822) shall be used instead. Depending on the configuration it is posible to have bad Error rates with good RSSI (overloaded radiolink) or good Error rates with bad RSSI (degraded communication with low load on radiolink). For the best results, it is recommended to use a combination of both statistics for failsafe automations.

Iridium

Checking the **Enable** box will enable the use of Iridium communication through the **Iridium** Consumer/Producer in the I/O Setup.

> ⚠ **Warning**
>
> Before using the module, the user will have to register both of them > (sender/receiver) in the RockBlock website. For further information > about the registration process, visit the RockBlock Management > System.

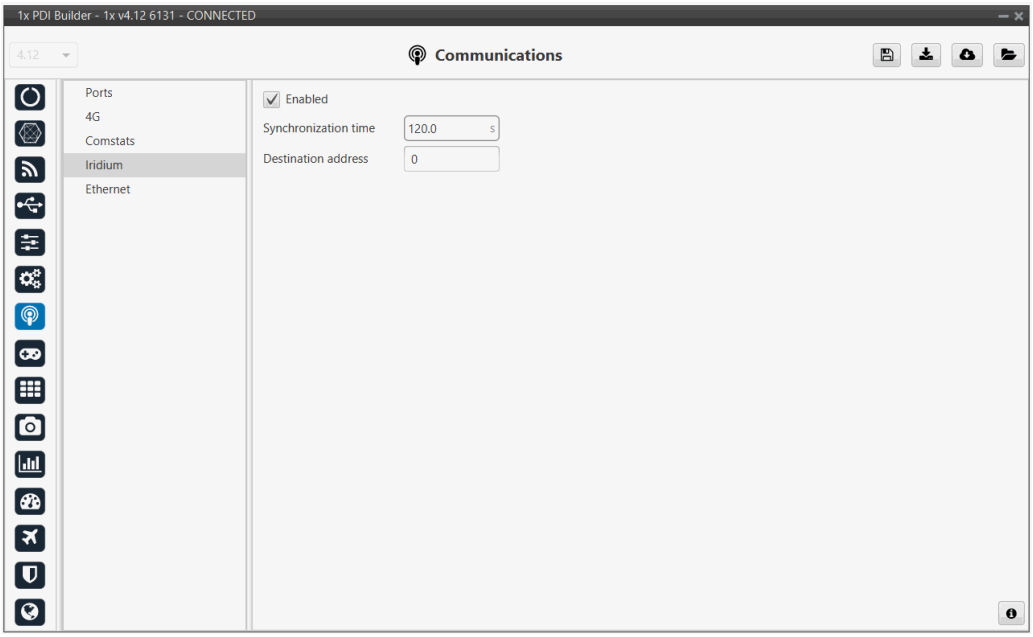

Iridium panel


In this menu the following parameters have to be set:

- **Synchronization time**: This is the transmission period, i.e., the time between 2 consecutive messages. This is a parameter that the user should configure taking into consideration its mission.
- **Destination address**: SN (Serial Number) of the destination Iridium module.

> **Note**
>
> To configure the syncronization time, it would be advisable to think about how the user want to use the Iridium communication. The user will pay for credits, and each credit means one message. Each individual message has to be paid, so the syncronization time can be configured in order not to run out of credits.

Ethernet

This panel allows users to manage the communication between the STANAG 4586 protocol and the IP network interface.

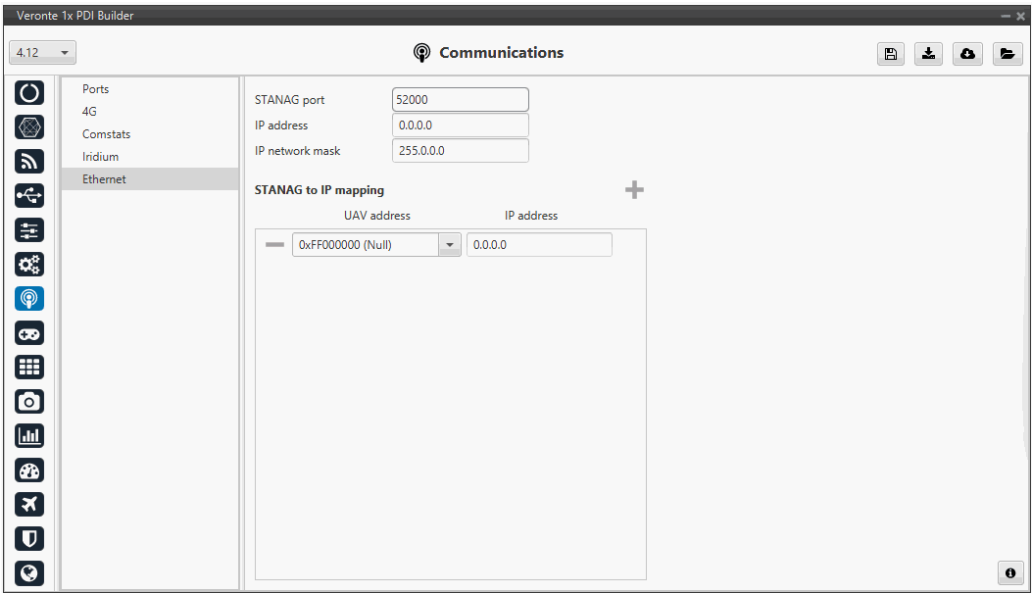

Ethernet panel

- **STANAG 4586 port**: Specifies the UDP port used for sending and receiving STANAG 4586 packets.
- **IP address**: The static IP address assigned to the Veronte device on the local network.
- **IP network mask**: The subnet mask that defines the extent of the local network.
- **STANAG 4586 to IP mapping**
  - **UAV address**: The unique identifier of the device within the STANAG 4586 protocol.
  - **IP address**: The physical IP address corresponding to that specific STANAG 4586 ID.

Stick

In this section, the stick configuration on **1x PDI Builder** is explained.

This menu allows the user to set **up to four transmitters** and **one virtual stick**. The autopilot's capabilities allows it to receive information from four different transmitters at the same time plus transforming some values into a virtual stick.

The content presented in the next menus covers:

- Setting of the transmitter's parameters.


- Definition of exponential response-curves for the desired channels.
- Trimming of the channels' neutral position.
- Setting of the data receiving port on the autopilot.
- Definition of a virtual stick.

Transmitter (0-3)

The wired connected transmitters are configured through the following panels.

PPM

This panel provides the options to configure a Pulse Position Modulation (PPM) radio controller to control the platform fitted with the autopilot.

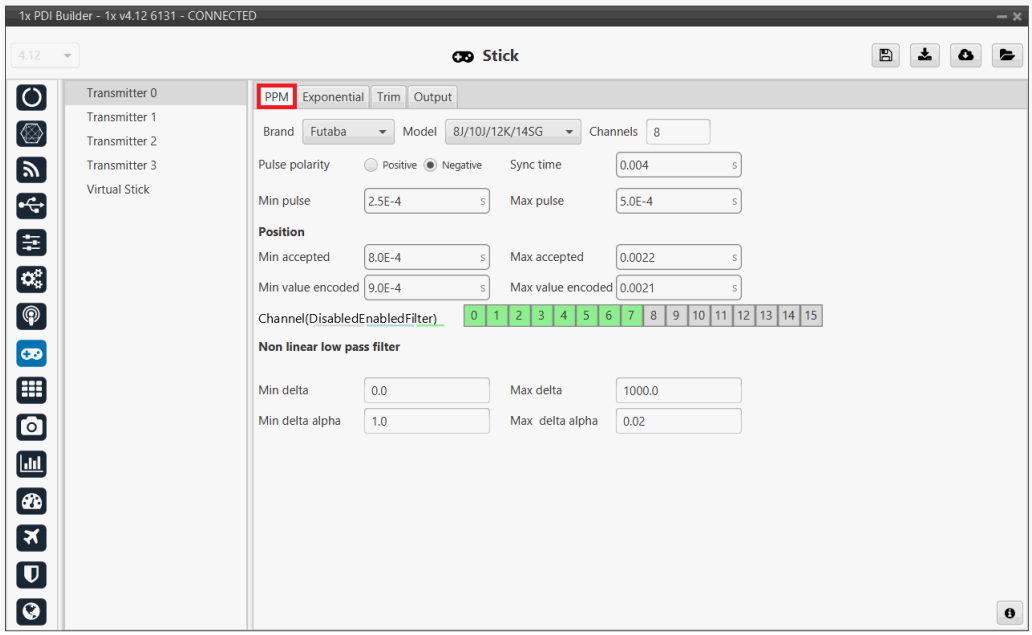

PPM panel

- **Brand**, **Model** and **Channels**: **1x PDI Builder** has been configured to provide the user with the expected parameters to configure different transmitters models.

Brand	Models	Channels
Futaba	8J / 10J / 12K / 14SG	8 (for 8J and 10J) 12 (for

Brand	Models	Channels
		12K and 14SG)
	T18SZ	8
Jeti	DC 16 / DC 24	16
FrSky	Taranis X9D	8
	Horus X12S	8
TBS	Crossfire	8
Embention	Stick Expander	16
Custom	—	—


    - Custom: If the user's transmitter is not among those mentioned above, choose this option and replace the parameter values with the appropriate ones.
- **Pulse polarity**: Indicates the pulse polarity:
    - **Positive**: Default signal is low and goes up to high.
    - **Negative**: Default signal is high and goes down to low.
- **Sync time**: Minimum time on the PPM output till the next frame. It tells the receiver to reset its channel counter.
- **Minimum/Maximum pulse**: Pulse length, it depends on the system and it is a constant value (usually 0.2-0.5 ms).
- **Position**
    - **Minimum/Maximum accepted**: Pulse length accepted for each channel. Standard for R/C servos uses a pulse of 1 ms for the

maximum position at one end, 1.5 ms for the midpoint and 2 ms for the maximum position at the opposite end.

- **Minimum/Maximum encoded**: If there is noise and the signal is varying around the minimum/maximum values accepted, Autopilot 1x will encode those values to the ones set here. For instance, a pulse length between 0.8-0.9 ms will be considered as one of 0.9 ms.
- **Channels**: Sets the number of channels accepted. Besides, it is possible to Disable/Enable/Filter each channel individually.

- **Non linear low pass filter**
  - **Minimum/Maximum delta**: Default parameters are recommended.
  - **Minimum/Maximum delta alpha**: Default parameters are recommended.

The figure below shows the PPM signal that arrives to Veronte Autopilot 1x:

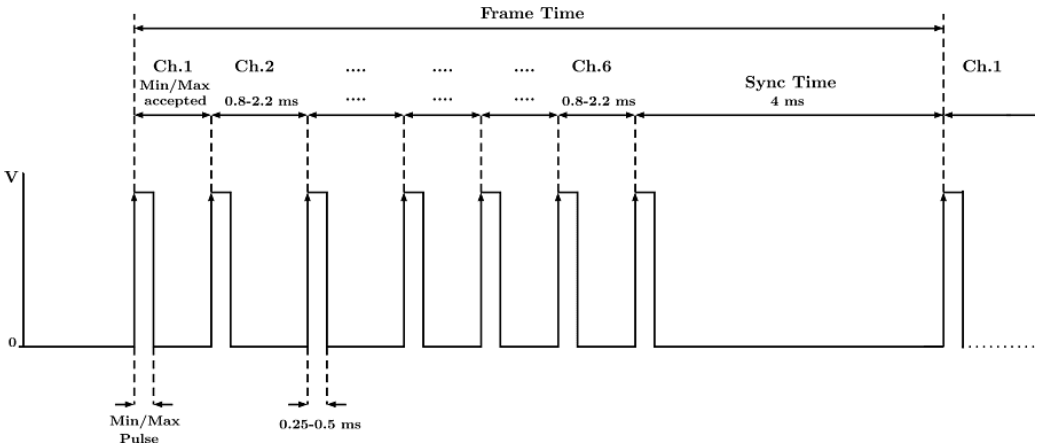


PPM signal

Exponential

The second panel allows the user to define an exponential stick response for every channel.

The allowed inputs range from 0 to 1 and there is a graph showing the generated response curve, as can be seen in the figure below.

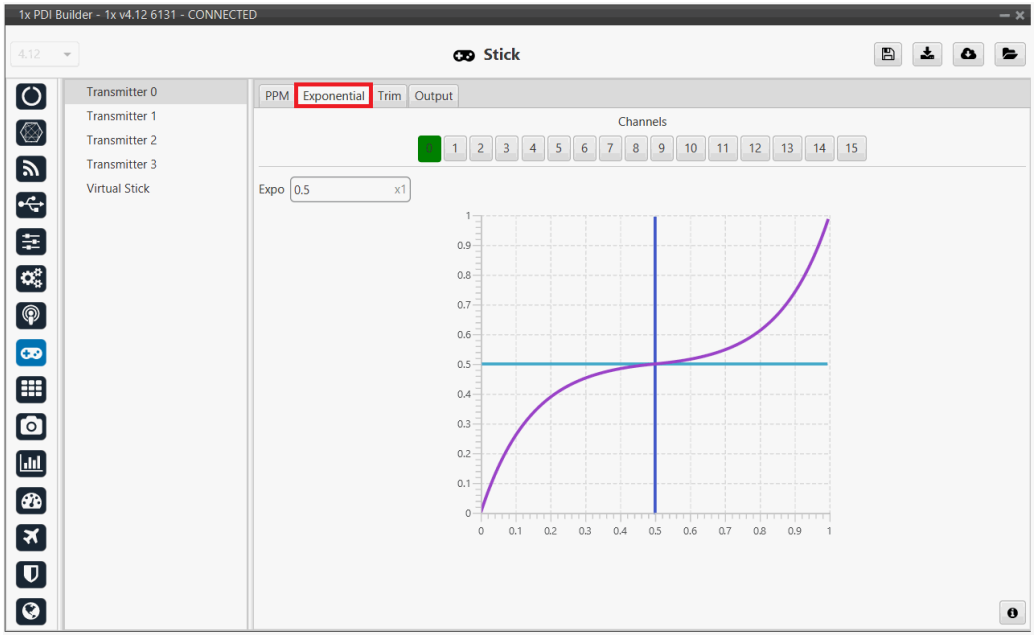


Exponential panel

The **X axis** of the graph corresponds to the stick input and the **Y axis** is the result of applying the exponential function to that stick input.

Trim

By enabling the **Avanced** option, the user can set the expected trim values manually. The user should have a deep knowledge on its transmitter if this option is selected.


Finally, on the right hand side, the **Reset** button puts every parameter back to 0.

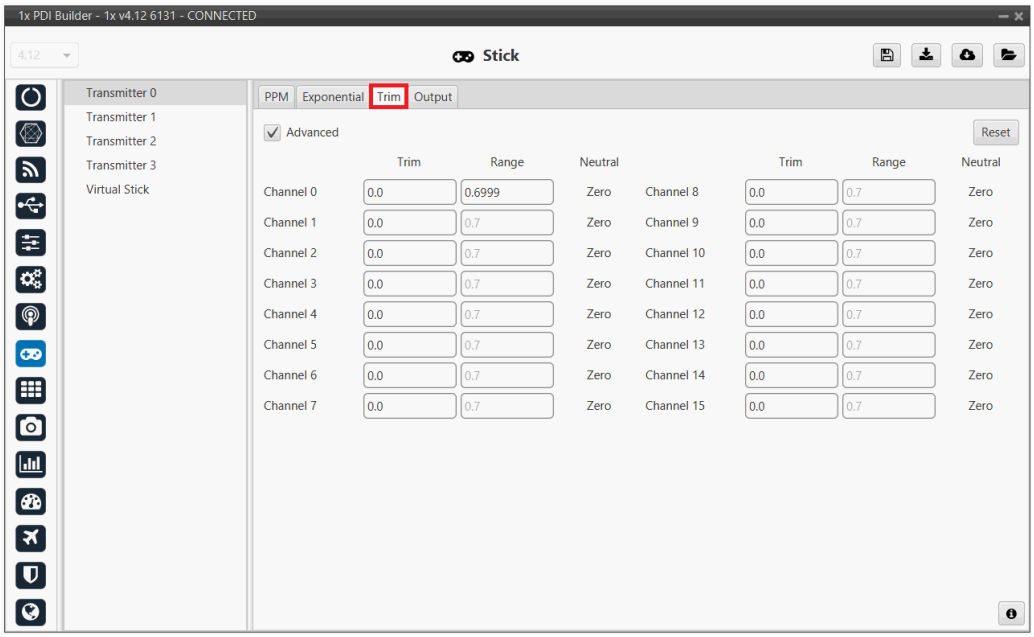

Trim panel

Output

In this panel the user sets the receiving port and process the incoming commands. Once the stick has been configured, the commands that arrive at the ground autopilot have to be sent to the air unit.

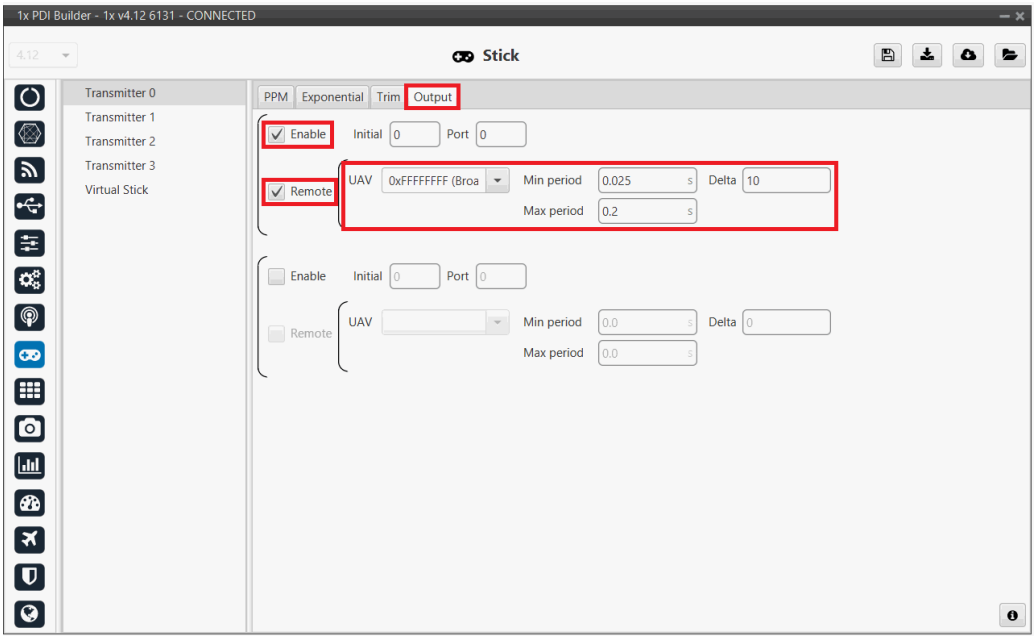

Output panel

In this menu, the following parameters can be configured:

- **Enable**.
- **Initial Channel at destination**: The user indicates to which channel of the air autopilot will be sent the first channel received in the ground unit. The channels arrive at the platform in order and without spaces between them.

  For example, if at the GND channels 6,7,8,9 and 10 are enabled, the AIR will receive channels 1,2,3,4 and 5. Therefore channel 6 of the stick will be channel 1 in the AIR configuration.
- **Port**: If more than one transmitter is configured, each transmitter must be configured on a different port. This has to match the port set on the air unit.

- **Remote**: It has to be enabled if the user wants to allow the delivery of the commands to the platform.
  - **UAV**: The address of the UAV that receive the commands has to be indicated. The following options are the most common:
    - App: Veronte applications address.
    - Broadcast: The commands are sent to all units on the network. **This option is recommended**.
    - 1x v4.X XXXX: The address of a specific air unit.


    For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.
  - **Min period**: As the period is the inverse of the frequency, this is the **maximum frequency**. Therefore, to give the pilot more control, this is the frequency that is set when the **stick is commanding**. A Min period of **0.02s** is recommended.
  - **Max period**: As the period is the inverse of the frequency, this is the **minimum frequency**. Thus, to free up bandwidth, this is the frequency that is set when the **stick is idle**.

    A Max period of **0.2s** is recommended.
  - **Delta**: This parameter determines whether the frequency is set to the minimum or maximum period set above.s If Autopilot 1x detects a **change above** the **delta value**, the frequency goes to the **maximum frequency** (minimum period). While if the **changes are less than this value**, it switches to the **minimum frequency** (maximum period). **10 Hz** are recommended.

> ⓘ **Note**
>
> An example of the Stick integration can be found in the **Integration examples** section of this manual.

Virtual Stick

This menu enables the processing of variables as stick control inputs, allowing reading stick signals distinct from PPM or USB.

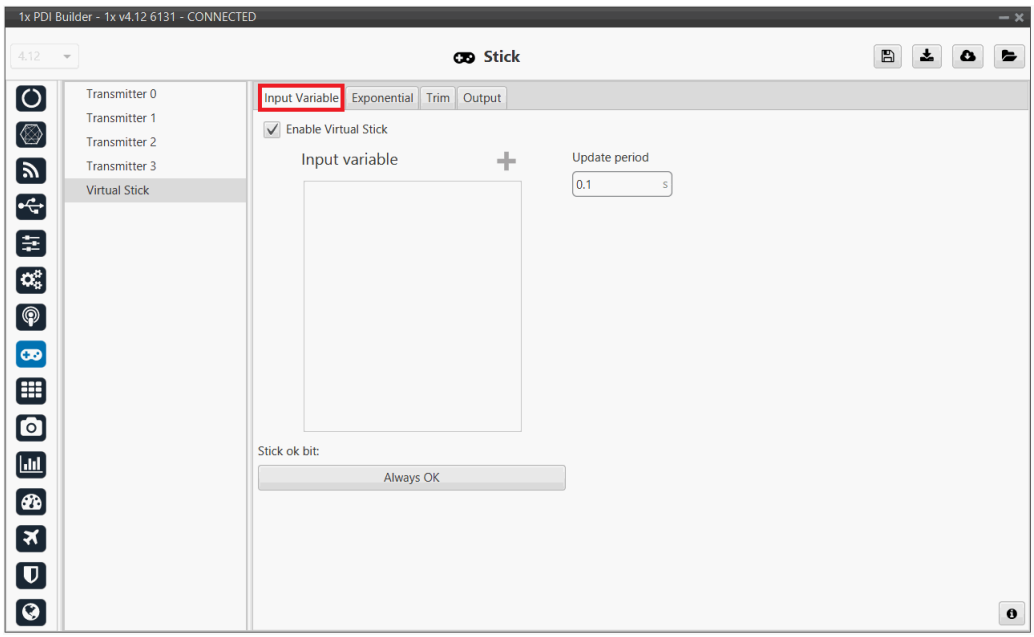

Virtual Stick - Input Variable panel

In this panel the user can configure:

- **Enable Virtual Stick**
- **Input variable**: Place here the variables containing the stick information. A maximum of 16 variables can be added as Input variables.

> **Important**
>
> This menu assigns the introduced variables to the stick communication channels **in the entered order**, i.e.:
>
> First variable added → **Channel 0**
>
> Second variable added → **Channel 1**
>
> Third variable added → **Channel 2**

- **Update period**: Configure the period required. A period of **0.02 s** is recommended.
- **Stick ok bit**: Select the bit which indicates if the virtual stick configuration is properly set.

The panels **Trim**, **Exponential** and **Output** are the same as the Transmitter ones, so refer to the Transmitter section for more information.


> **Note**
>
> An example of the Virtual stick integration can be found in the **Integration examples** section of this manual.

Block Programs

Block programs are the **core of Autopilot 1x**. In this menu, all **flight control algorithms** can be found, divided in different independent programs with different functions. All programs are executed at GNC (Guidance-Navigation-Control) time.

A **Program** is a custom algorithm executed by Autopilot 1x. While their main purpose is the control of the aircraft, Programs can be used to **develop a wide variety of applications**, from simple math operations to complex estimation filters.

Block programs provide the user with a **block programming interface** that 1x will then **execute at core frequency**. The fact that it is designed in this way gives it a high versatility, unlimited freedom and mimo control capabilities. This high versatility is thanks to this block programming interface, as they are **easily manageable** and **highly customisable blocks**, so that each customer can perfectly define their control algorithms regardless of the vehicle and the target they have.

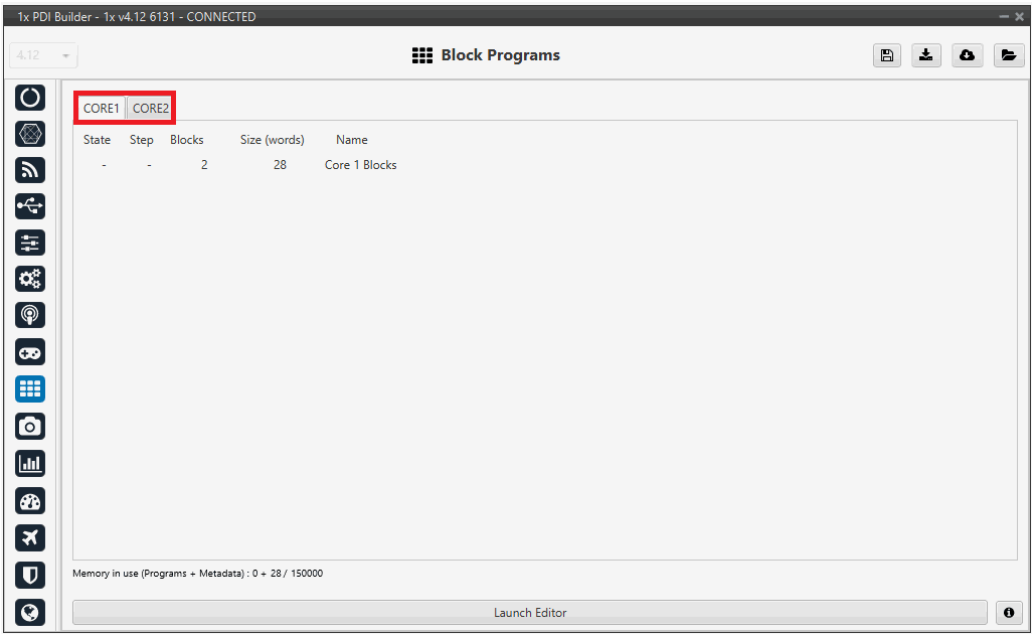


Block program

The Block Programs interface is divided into two distinct environments:

- CORE 1: Processes high-frequency data from the IMU (accelerometer and gyroscope) to ensure real-time stability and attitude control.
- CORE 2: Manages high-level mission logic, external communications, and peripheral payload integration.


CORE 1

CORE 1 includes the blocks to interface inertial measurement units (IMU) such as **Internal 0**, **Internal 1**, **Internal 2**, and **Internal 3** , which are necessary to detect the orientation and movement of the system.

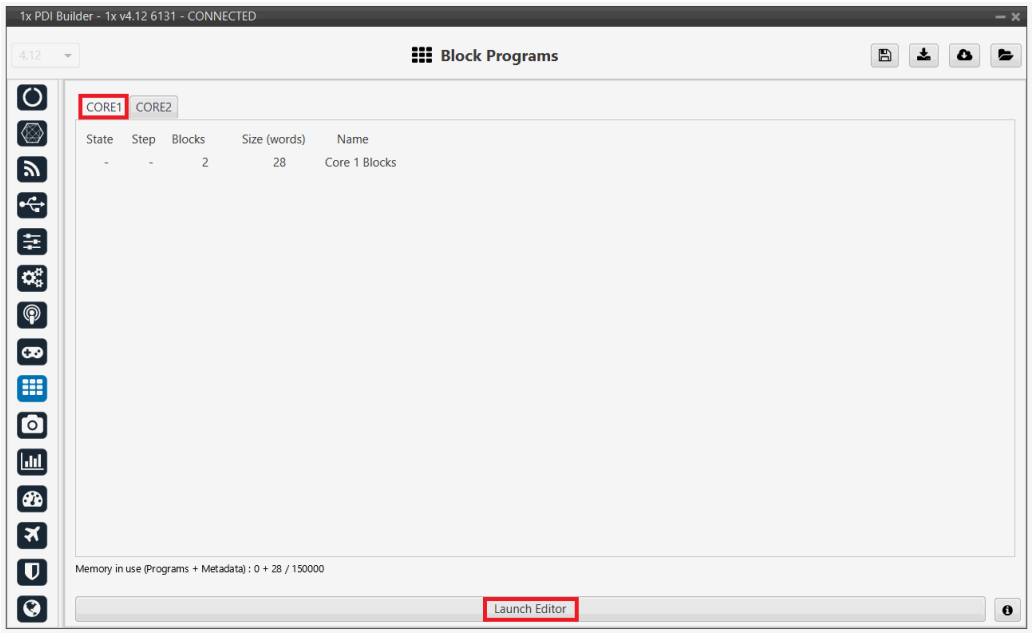

Block Programs menu

Click on Launch Editor to visualize the blocks.

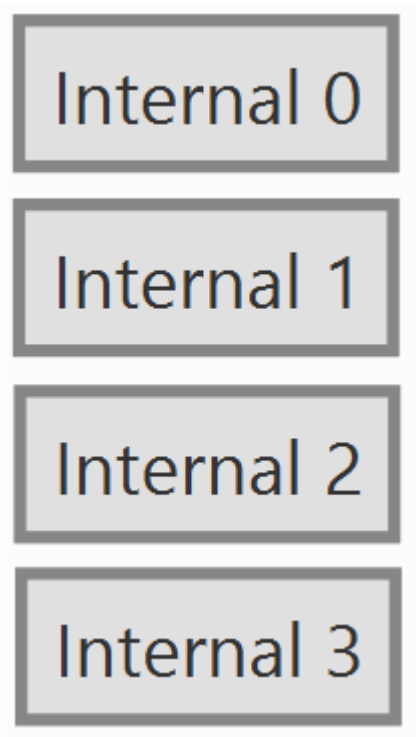

Block Programs


Right-click and select "Edit" to view the configuration.

Common configuration

- **Maximum non-variation samples**: Maximum number of samples with the same value, beyond which measurements are discarded. In case of failure, measurements are discarded.
- **Maximum allowed increment**: Maximum increase in sensor measurement between one measurement and the next.

By clicking on the ➕ button, it is possible to add either a **Low Pass** or a **Notch filter**.


- **Low Pass**:

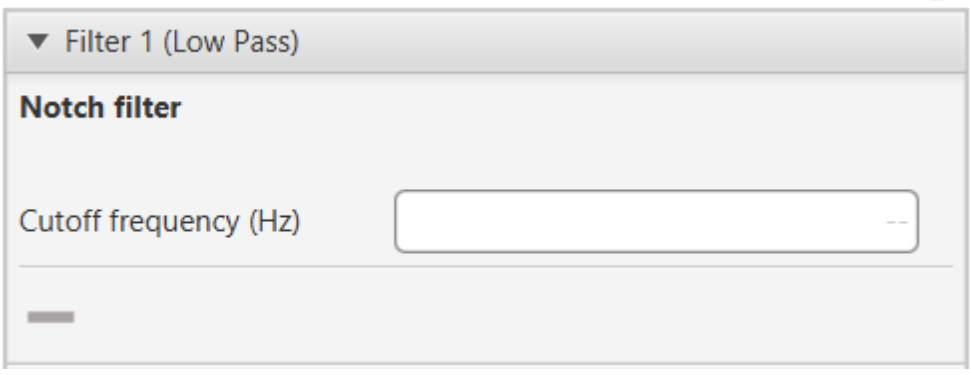

Filter - Low Pass

- **Cutoff Frequency (Hz)**: Defines the center frequency where the filter is applied.

- **Notch Filter**:

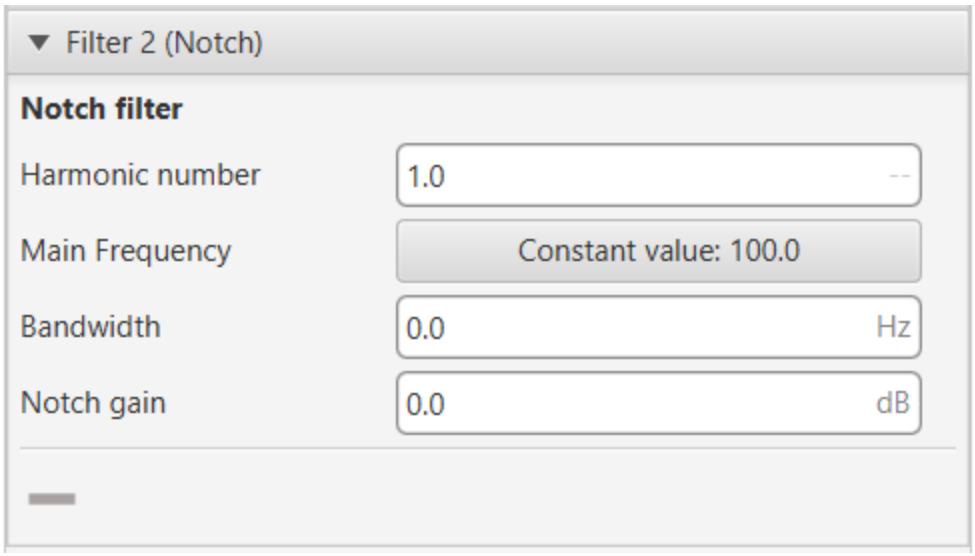


Filter - Notch

Notch filter is a filter that dampens signals only at a specific frequency. - **Harmonic Number**: Allows the filter to target specific harmonics of the main frequency. - **Main Frequency**: Main frequency (Hz) at which the notch filter reaches its maximum damping.

> ⚠ **Warning**
>
> When a user variable is used to set this frequency, it must be initialized to a value other than 0, otherwise a PDI error will occur.

- **Bandwidth**: Design parameter. There is a damping of at least 3 dB within the bandwidth. The main frequency at which the maximum damping (notch gain) is reached, lies in the center of this spectrum.
- **Notch gain**: Design parameter. This parameters sets the maximum damping (dB) for the main frequency.

> ⓘ **Note**
>
> Setting this parameter to zero disables the filter.

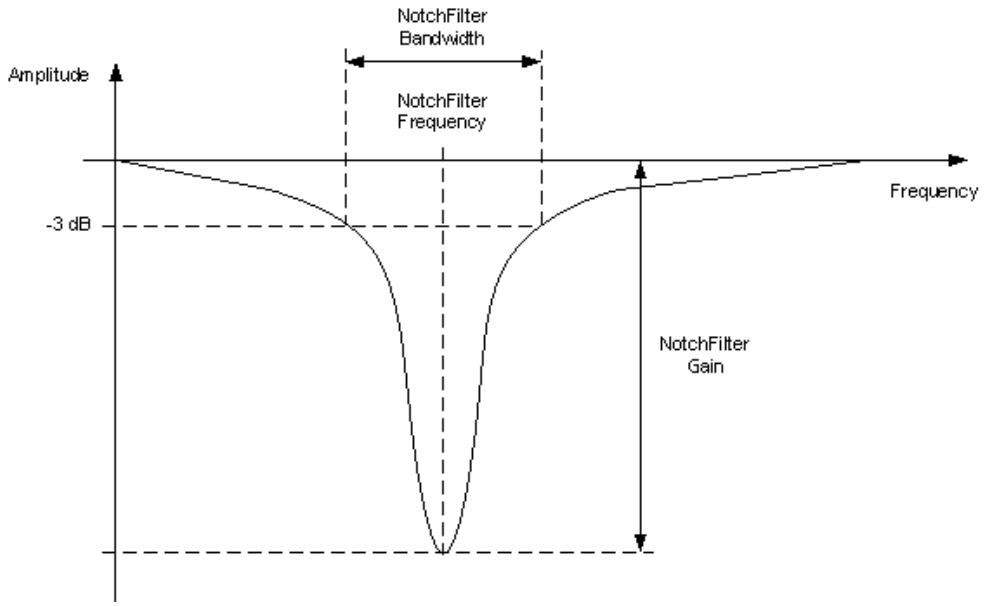


Notch filter

Internal 0-1

The Internal 0-1 manages the sensor connected to communication port 0-1.

- **Accelerometer**

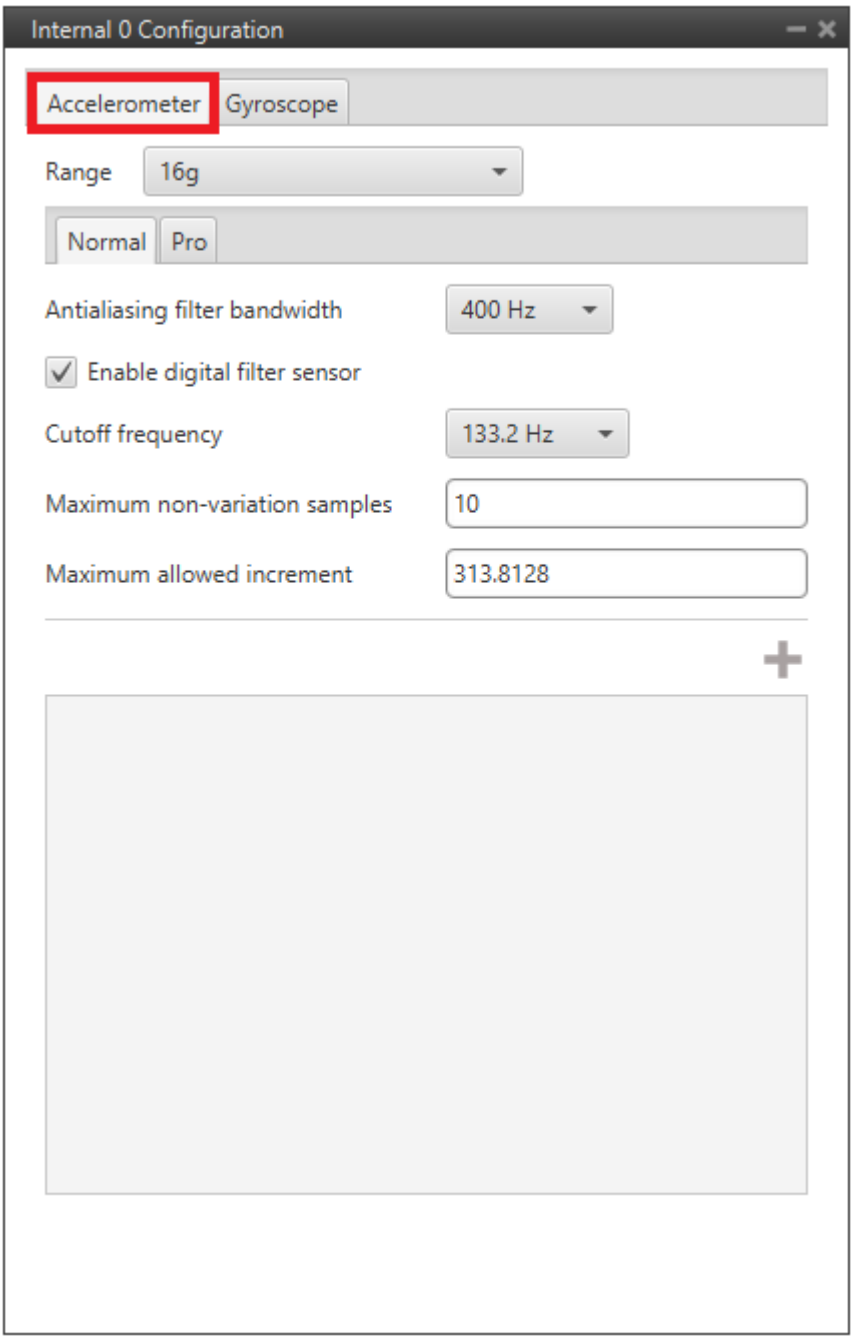

Internal 0-1 - Configuration

- **Range**: Selectable range of forces that the accelerometer can measure, high ranges implies less precision while small ranges might mean the system saturates.


Values allowed are **2g**, **4g**, **8g** and **16g**.

- **Antialising filter bandwith**: It is the bandwidth of the antialiasing **low pass filter**.
  The options available are 50Hz, 100Hz, 200Hz and 400Hz, the greater the value selected the worse the filtering will be.

- **Enable digital filter sensor**: Enables a low pass filter which its **cutoff frequency** is configured from the options 16.65Hz, 66.6Hz, 133.2Hz and 740.0Hz.

This is a **hardware filter**, included directly in the accelerometer.

- **Gyroscope**

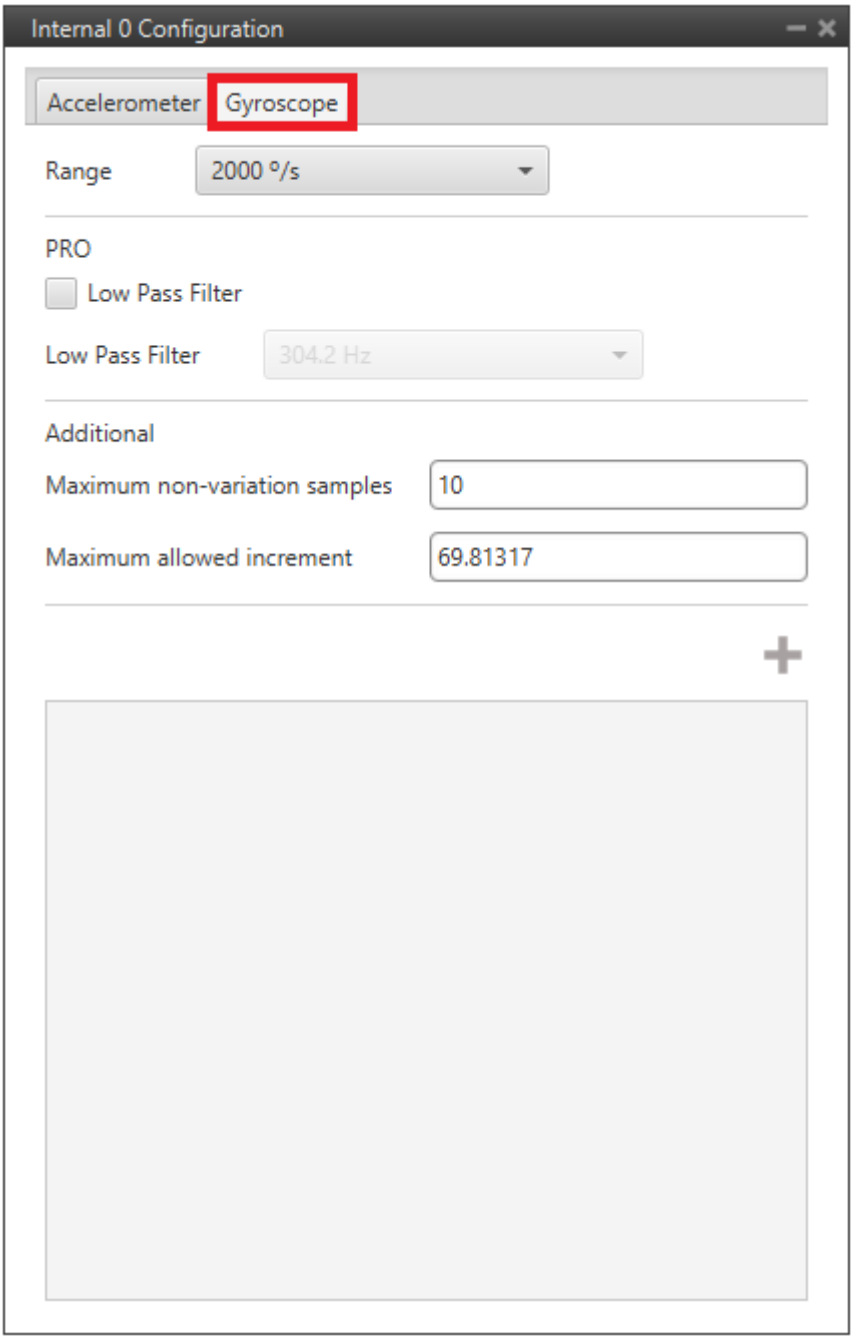

Internal 0-1 - Configuration

- **Range**: Sets the maximum range of performance, high ranges implies less precision while small ranges might mean the system saturates. Values allowed are 125°/s, 250°/s, 500°/s, 1000°/s and 2000°/s.


- **Low Pass Filter**: Filter that attenuates high frequencies to clean the signal from noise and mechanical vibrations, stabilizing the sensor's reading.
  Values allowed are 12.5 Hz, 25.1 Hz, 49.8 Hz, 99.6 Hz, 166.6 Hz, 220.7 Hz, 304.2 Hz and 435.2 Hz.

The common configuration parameters are not explained again.

Internal 2

Internal 2 block dedicated to reading data from the inertial measurement unit, commonly used for standard navigation and attitude applications.

- **Accelerometer**:

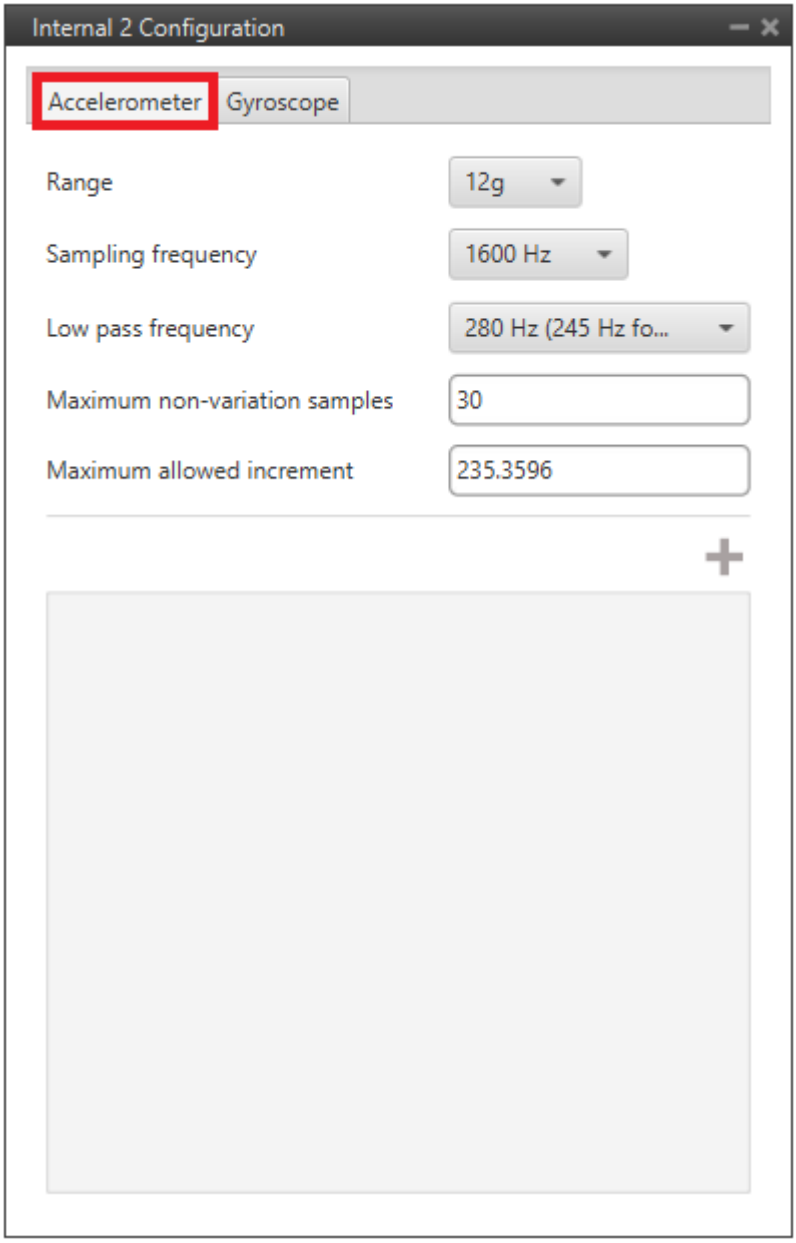


Internal 2 - Configuration

    - **Range**: Selectable range of forces that the accelerometer can measure, high ranges implies less precision while small ranges might mean the system saturates.

  Values allowed are **3g**, **6g**, **12g** and **24g**.

    - **Sampling frequency**: That is the frequency at which the measurements are read out. Values allowed are 12.5Hz, 25Hz, 50Hz, 100Hz, 200Hz, 400Hz, 820Hz and 1600Hz. We recommend the **highest**.
    - **Low pass frequency**: This is a **hardware filter**, included directly in the accelerometer, which its **cutoff frequency** is configured from the options 145Hz, 234Hz (215Hz for Z axis) and 280Hz (245Hz for Z axis).

- **Gyroscope**:

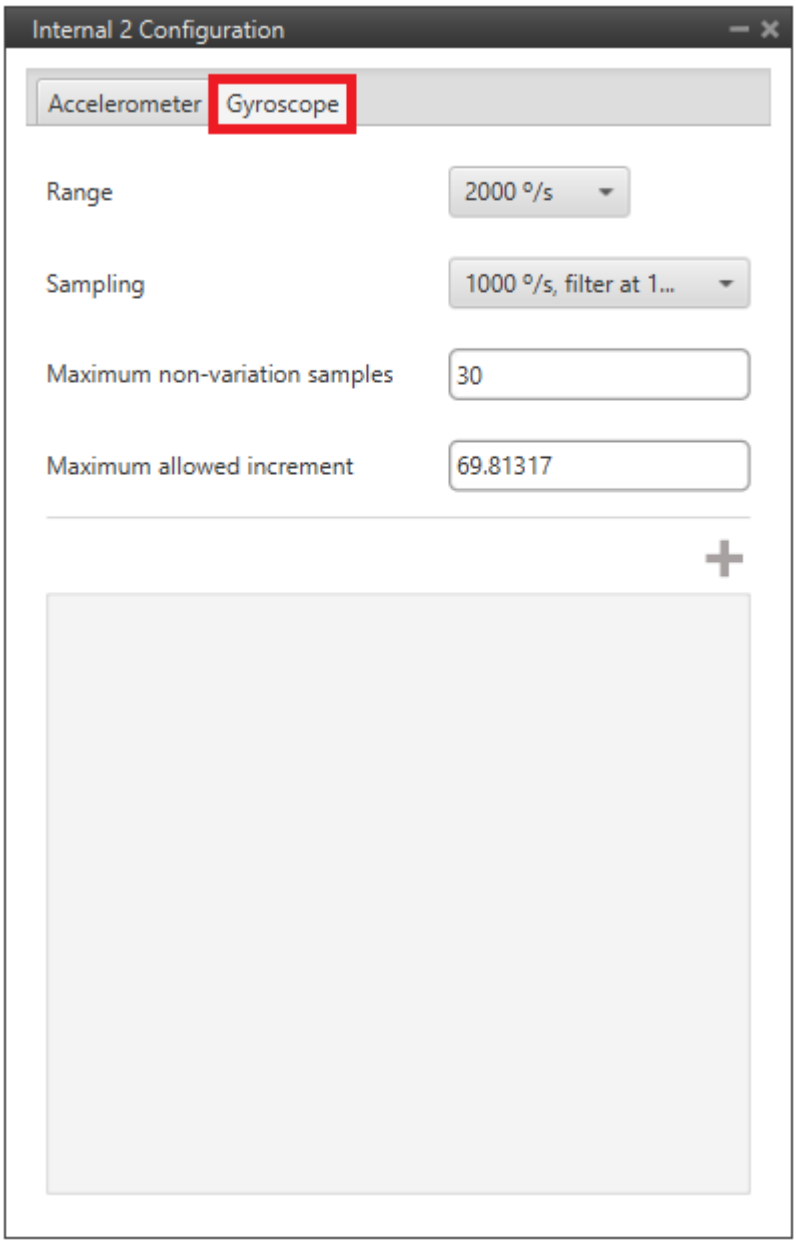

Internal 2 - Configuration


- **Range**: Sets the maximum range of performance, high ranges implies less precision while small ranges might mean the system saturates. Values allowed are 125°/s, 250°/s, 500°/s, 1000°/s and 2000°/s.
- **Sampling**: That is the angular velocity at which the measurements are read out. Values allowed are 100°/s filter at 32 Hz, 200°/s filter at 64 Hz, 100°/s filter at 12 Hz, 200°/s filter at 32 Hz, 400°/s filter at 47 Hz, 1000°/s filter at 116 Hz, 2000°/s filter at 230 Hz and 2000°/s filter at 532 Hz.

The common configuration parameters are not explained again.

Internal 3

Internal 3 block manages the interface with the high-precision inertial sensor.

- **Accelerometer**:

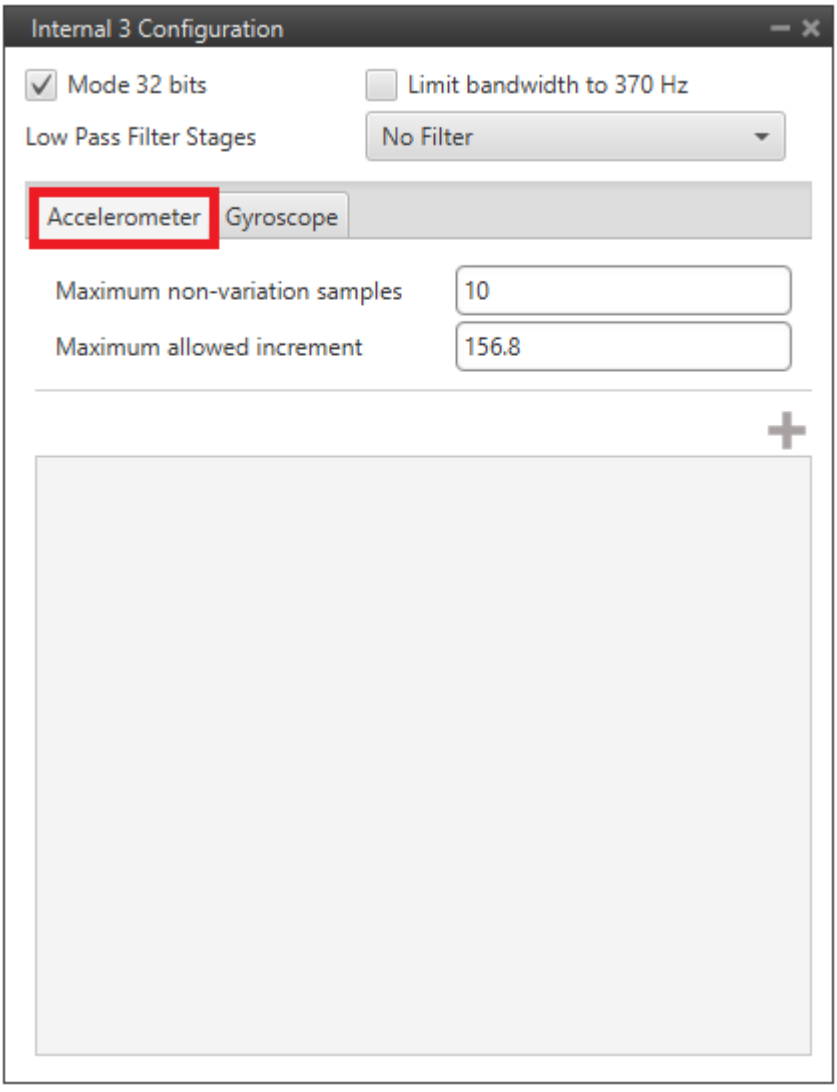

Accelerometer - Configuration

- **Mode 32 bits**: Enable or disable. With 32 bits of precision. We recommend enabling it.
- **Limit bandwith to 370Hz**: Enable or disable. It can only be used without using a Low Pass Filter Stages. We recommend disabling it.
- **Low Pass Filter Stages**: IMU's Hardware filter. The options available are:
  - No filter
  - 1 stage (Cutoff f=364Hz)
  - 2 stages (Cutoff f=165Hz)
  - 3 stages (Cutoff f=80Hz)
  - 4 stages (Cutoff f=40Hz)
  - 5 stages (Cutoff f=20Hz)
  - 6 stages (Cutoff f=10Hz)

We recommend **4 stages (Cutoff f=40Hz)** option.


> ⚠ **Warning**
>
> - It is **recommended** to choose the **hardware filter** (Low Pass Filter) except if a lower **cutoff frequency** is needed (< 10 Hz).
> - It is **not recommended** flying without a filter.

- **Gyroscope**:

  The configuration of the Gyroscope is analogous to that of the Accelerometer.

  The common configuration parameters are not explained again.


CORE 2

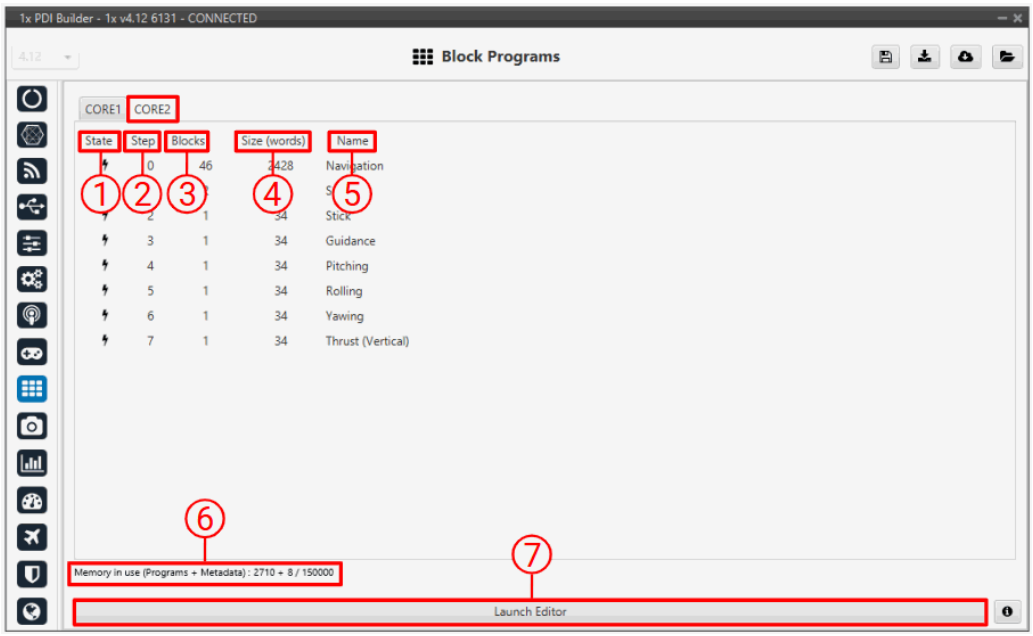

Block Programs menu

1. **State**: There are two types of programs, those with a black lightning symbol and those with a grey lightning symbol.


   The black ones are programs that are executed periodically, **at core frequency**. While those with grey lightning are only "active" when they are executed using an automation (Run Block Program, see Actions - Automations section of this manual).
2. **Step**: This number determines the order of execution of the programs.
3. **Blocks**: This indicates the number of blocks in each program.
4. **Size (words)**: This is the memory taken up by each program.
5. **Name**: Program name, it is set by the user.
6. **Memory in use**: It is the operation performed to calculate memory in use.
7. **Launch Editor**: Click here to start configuring a program. A new window will appear:

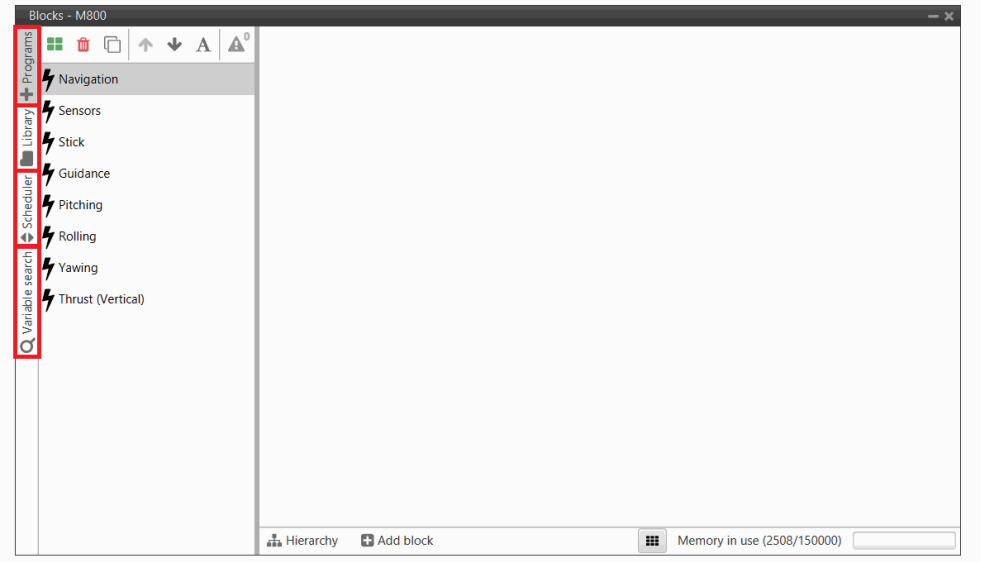

Block Programs tabs


- **Variable Search**: The Variable Search function allows locating variables within the different logic modules of the project.
- **Scheduler**: In this tab users can configure the **frequency** (in Hz) at which **each program is executed**.

  By default the GNC frequency is defined for all programs, however, the user can modify it by pressing the '**+**' and '**-**' buttons next to the frequency.

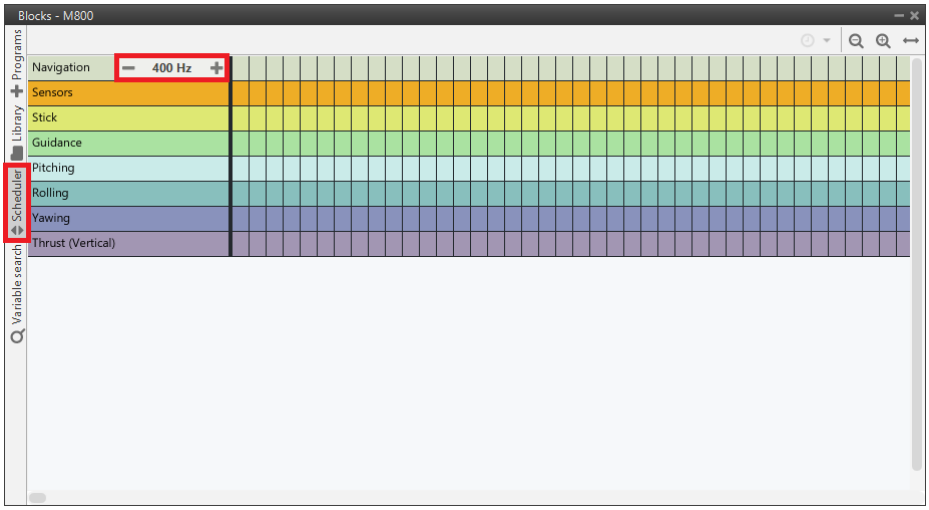

Block Programs menu - Scheduler


If the user reduces the frequency of a program, it is possible to move it so that the the programs run in different slots:

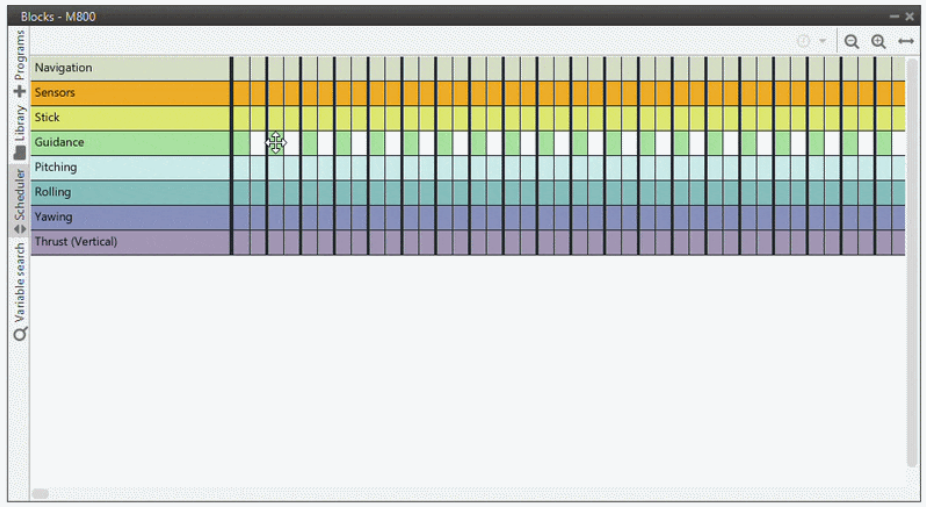

Block Programs menu - Scheduler slots

> **Important**
>
> If the program is **not executed periodically** (grey lightning symbol), it will **not** appear in the **Scheduler** tab.


- **Library**: Here the user can create **custom blocks**. This tab is explained in more detail in Library blocks section.
- **Programs**: All Block Programs are created and configured in this tab:

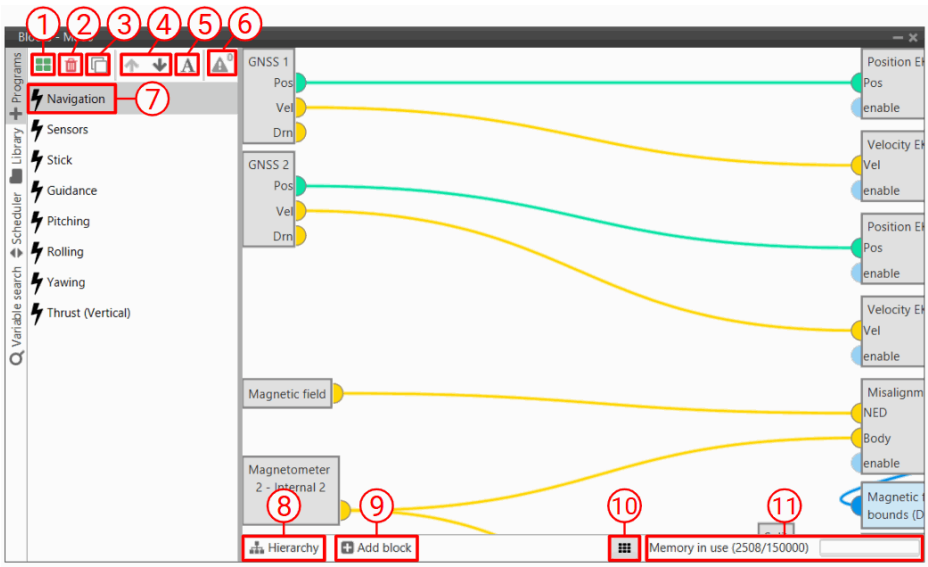


Block Programs menu - Programs options

1. **Add program** : Add a new empty block program.


2. **Remove program**  : Remove a selected program.
3. **Move up/down**

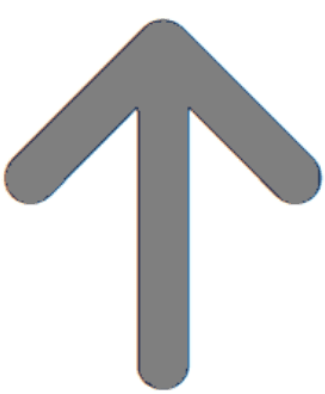  : Use them to determine the order of execution of a selected program. Programs are **executed from top to bottom**.

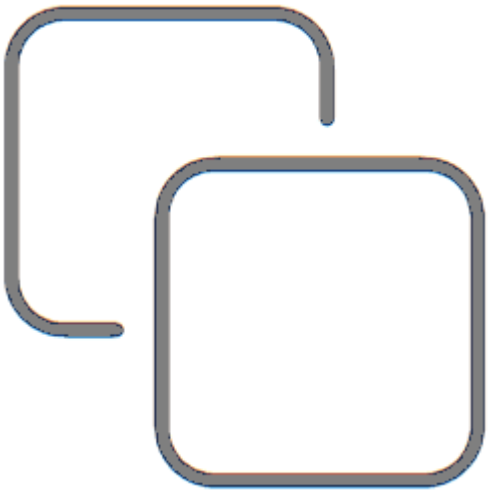4. **Copy program**  : Copy a selected program.

5. **Change name**  : Rename a selected program.


6. **Move to error**  : When there are errors or warnings, the number of errors/warnings is displayed here and by clicking on them, **1x PDI Builder** takes the user to the program with that error.

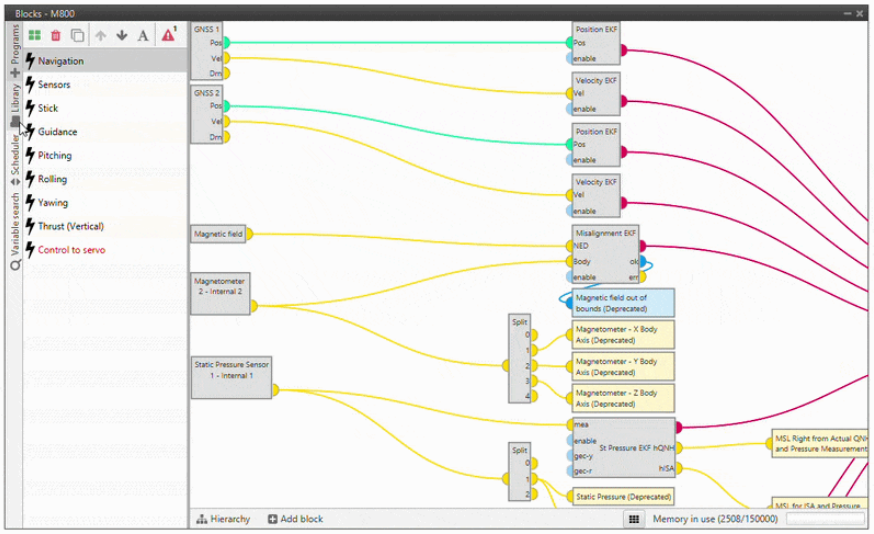

Block Programs menu - Move to error


7. **State** and **name** of program. Clicking on ϟ icon will toggle the execution mode. 8. **Hierarchy**: By clicking here, a new column

menu will appear where users can see "information" about the existing blocks on the selected program.

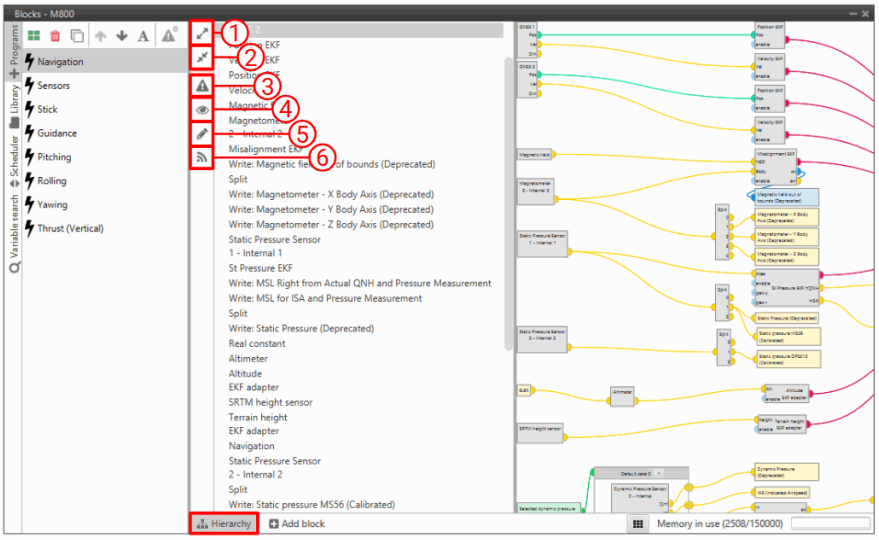


Block Programs menu - Hierarchy panel

1. **Expand All**: By clicking on it, all menus that are collapsed will be expanded, e.g. in programs that have **Switch** blocks.

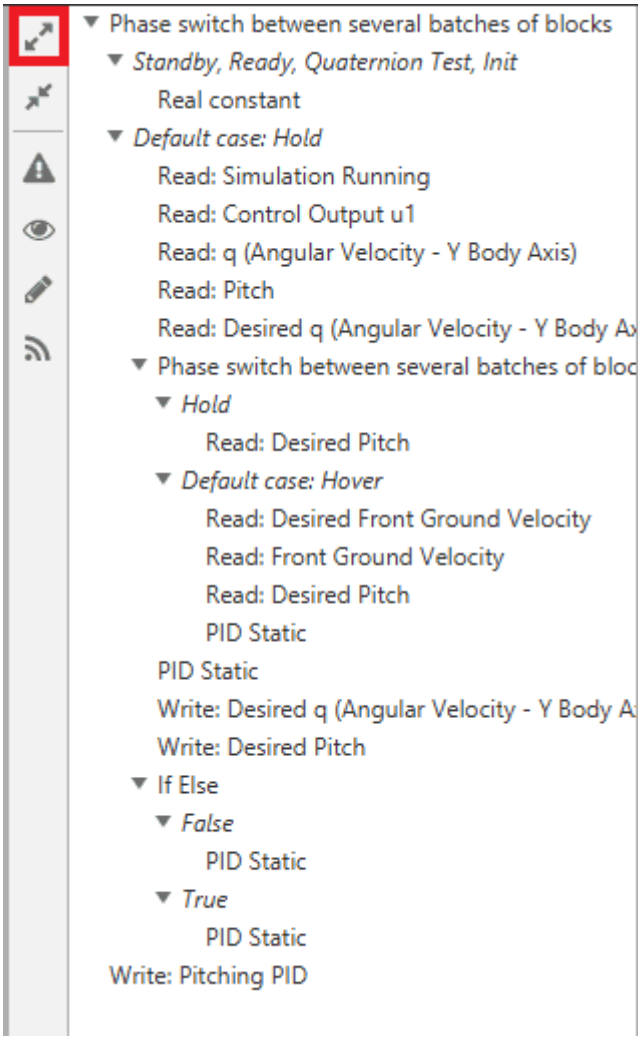


Expand All

2. **Collapse All**: By clicking on it, all menus that are expanded will be collapsed, e.g. in programs that have **Switch** blocks.

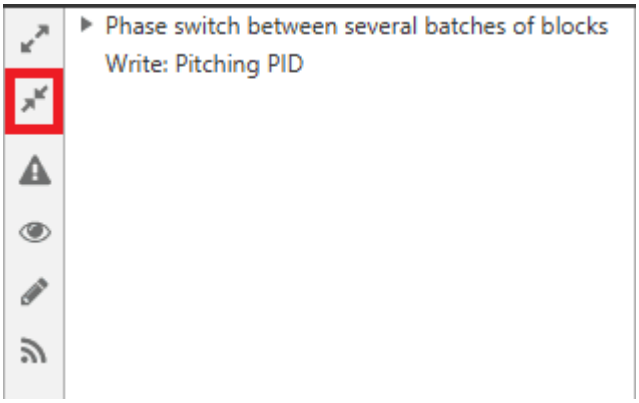


Collapse All

3. **Show blocks with errors**:

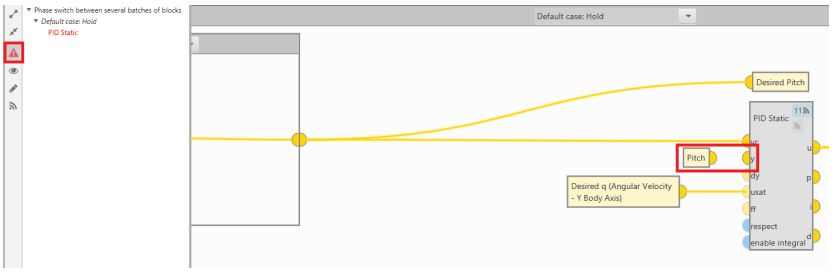


Show blocks with errors

4. **Show blocks that read from variables**:

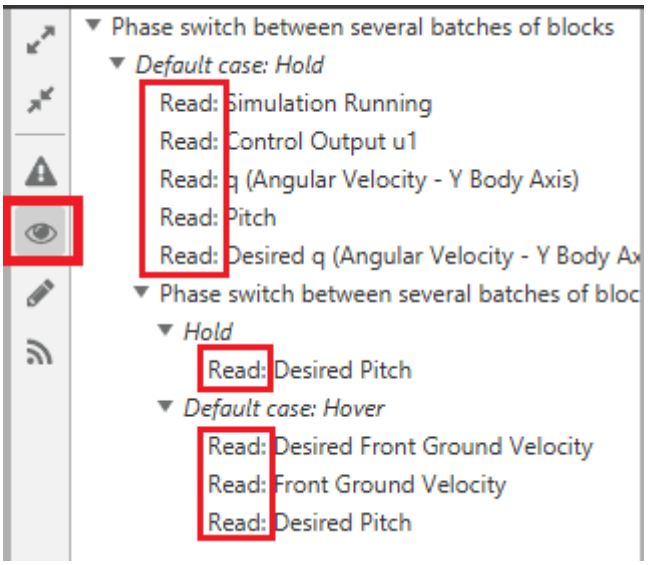


Show blocks that read from variables

5. **Show blocks that write in variables**:

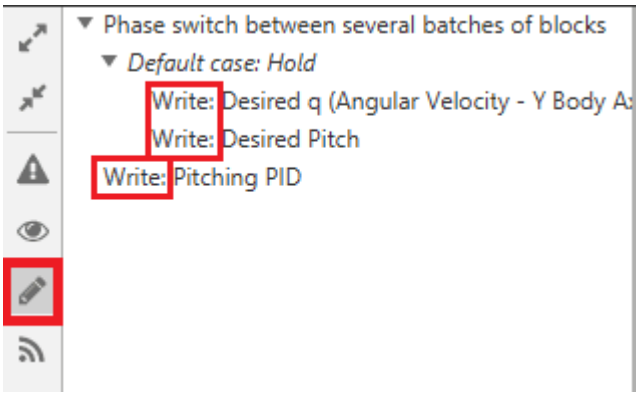


Show blocks that write in variables

6. **Show blocks that can be commanded**:

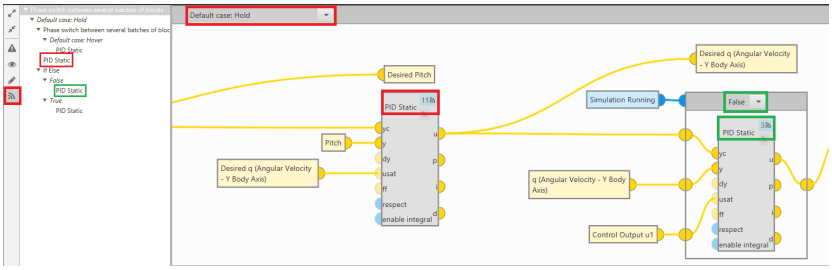

Show blocks that can be commanded

7. **Add block**: By clicking here, a new column panel will appear where users can choose the block they want to add.

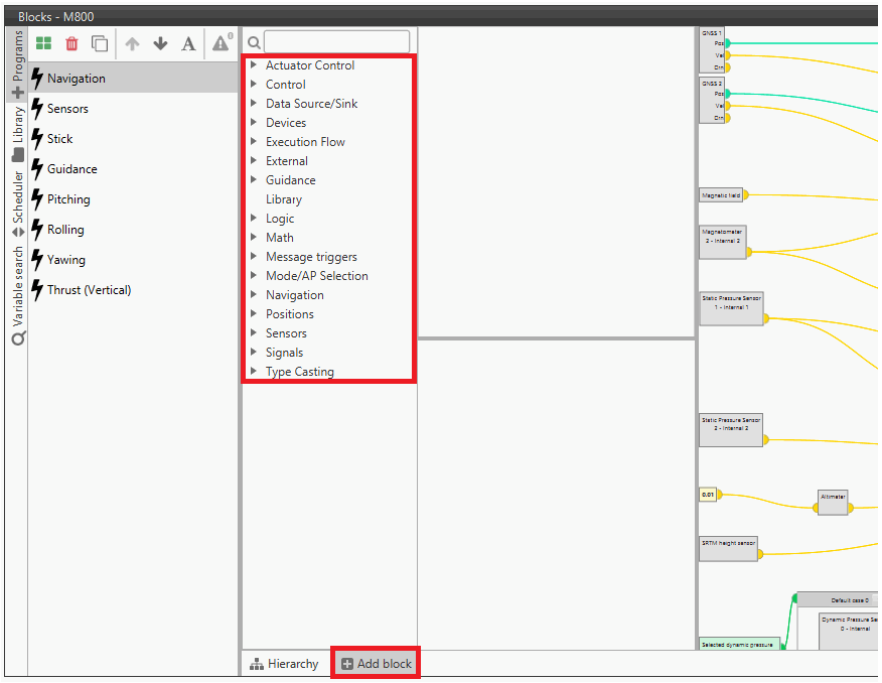

Block Programs menu - Add block panel

8. **Grid Settings**: Tihs interface provides controls for managing the spatial organization of the block diagram.
    - **Snap to grid**: Enables or disables the automatic alignment feature. When active, blocks will "magnetically" lock to the nearest grid intersection during a drag-and-drop operation.
    - **Grid cell width**: Defines the horizontal distance between grid lines. Increasing this value creates larger horizontal intervals for block placement.
    - **Grid cell height**: Defines the vertical distance between grid lines. This is used to align parallel signal flows and EKF modules.
9. **Memory in use**: Estimation of the remaining memory available. If no more memory is available, no new blocks will be allowed to be created.

    The allocated memory for each block depends on the block type.

    > **Important**
    >
    > - User must be aware that each block has its own size, so **the larger the size of a block, the more space it will take up**.
    > - Thus, the more programs are created, the more space is occupied.
    > - In addition, there is information stored as **metadata** about the organization and position of each block in the diagram that also represents part of this space.
    >
    > > **Tip**
    > >
    > > To optimize memory, it is better to use more but smaller blocks than one large block.

Blocks

- To **add a block**:
    1. Click on '**Add Block**'.

2. Search and **select a block**. When a block is selected, its description is displayed.
3. **Click and drag** it to import into the program.

- By **right clicking** on a block, the user can:
  - **Edit**: This options opens its configuration menu. It is also possible to open the configuration by double clicking on the block.
  - **Remove block**: Remove the selected block.
  - **Copy**: Copy the selected block.
  - **Paste**: Paste the block that has been copied.
  - **Change constant value/variable/variables**: User can change the constant value entered/the selected variable/s, e.g. to be read or written.

> **Note**
>
> Only available for Data Source/Sink blocks.

- To **re-locate blocks**, just click and drag them.



Block Programs menu - Adding blocks


Block inputs and outputs use a color code in order to indicate variable types:

-  : 32-bit Real variables.

-  : BIT Boolean variables.
-  : 64-bit Feature variables.
-  : 16-bit Integer variables.
-  : Position measurement data.
-  : Guidance data.
-  : Sensor data for EKF.

> **Note**
>
> Connectors can also be **Arrays** of variables.


An input and an output can be **linked** directly with the mouse and **unlinked** by right clicking on the input/output:

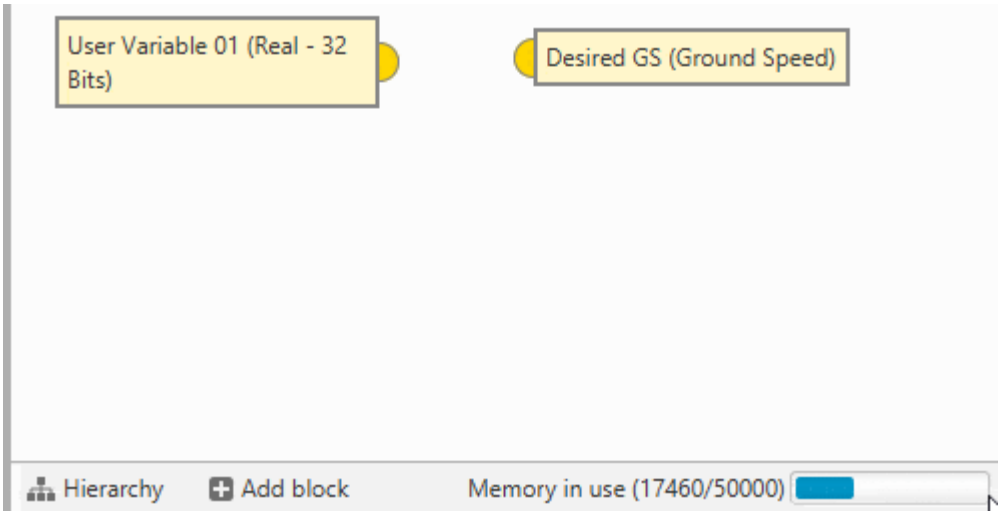

Linking blocks


ⓘ Note

- An input and output with **different variable types** cannot be linked without a **Type Cast block**. For more information on this block, see Type Casting blocks section of this manual.

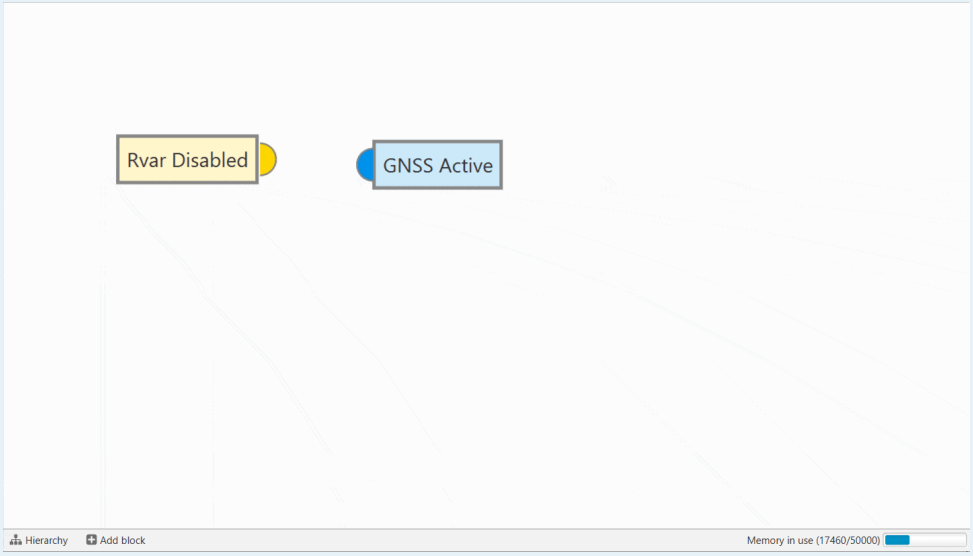

Type Casting block


- All **inputs** of each block **must be connected**, otherwise **1x PDI Builder** will report an **error**. **Outputs do not need to be linked**.

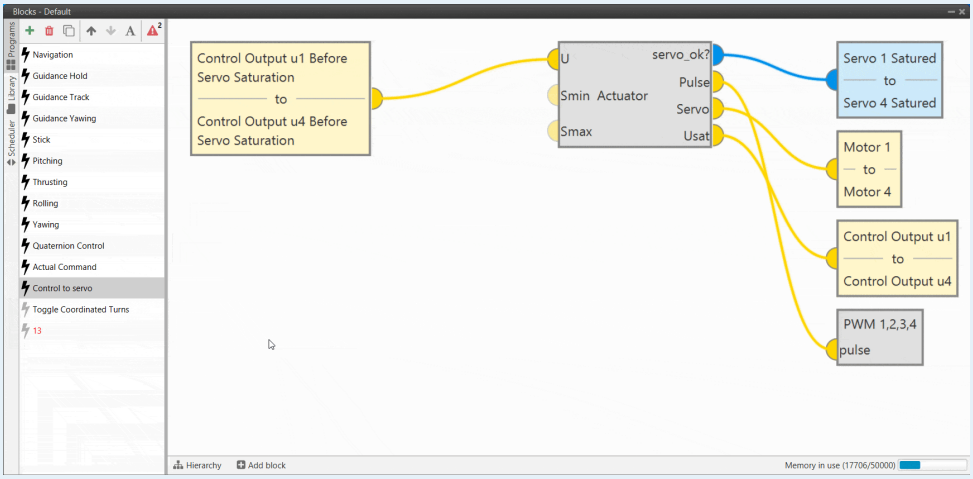

Errors in blocks

- An exeception of the previous rule are translucid inputs  , which are optional. These inputs will have a default value if not linked.

- To **select multiple blocks** simultaneously, press the Shift key on the keyboard and select the desired area.

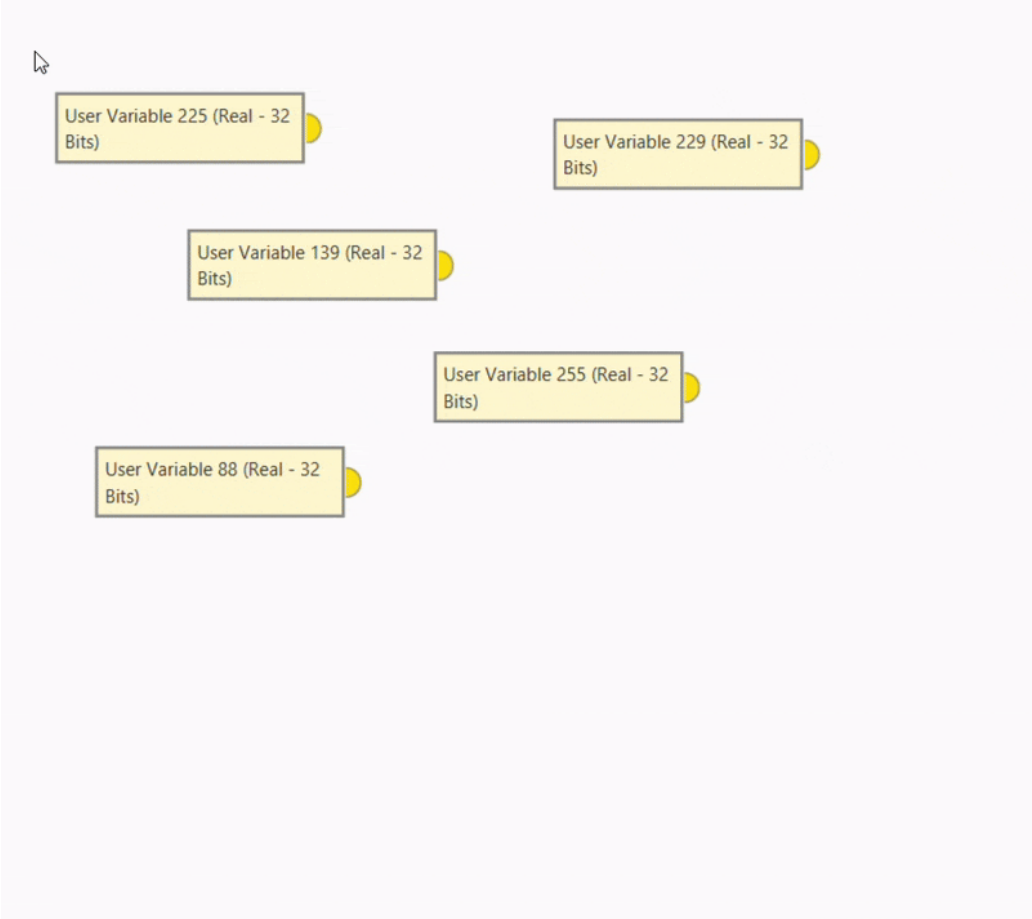

Blocks selection

Right-clicking provides options to **Copy** or **Delete** the selected blocks.

The different types of blocks available in **Block programs** are:

- Actuator Control: transforming and sending control actions to the system's actuators.
- Control: Control-related blocks (**PID Static**, Tsched PID, ECU control etc.).
- Data Source/Sink: Input/Output blocks. Programs can have access to any variable available within Autopilot 1x system.


  Results can then be stored in **User Variables** for display, use as a different program input, feedback, etc.
- Devices: These blocks allow to configure **devices connected to the autopilot**.
- Execution Flow: Programming-like blocks for operation flow control. These blocks allow to **alter parts of a program depending on a condition** (If-Else, Integer Case, Phase Case, etc.).
- External: **External block** allow the integration of custom user code, communication with external peripherals, or data exchange with HIL simulators.
- Guidance: In these blocks the **guidance of the flight phases** is configured.
- Library: Blocks **created manually** combining already defined blocks. They are created in the **Library** tab which can be accessed on the left-hand side of this menu.
- Logic: **Logical gates** to operate with boolean variables (AND, NOT, and OR).
- Math: **Mathematical blocks**, which include a variety of mathematical operators: **basic** (sum, multiply, square root, etc.), **trigonometric** (sine, cosine, tangent, etc.), **vectors** (norm, dot product, rotations, etc.).
- Message triggers: Manage conditional data packet transmission based on specific events or time intervals.
- Mode/AP Selection: Blocks that allow interaction with **flight modes** and redundancy.
- Navigation: These blocks allow the **autopilot navigation** to be configured.
- Positions: Blocks for **operating with position-type variables** (create position, read position, relative position, etc.).
- Sensors: In these blocks, some of the **sensors are configured**.

- Signals: Blocks for **signal processing** (IIR filter, rate limiter, etc.).
- Type Casting: Blocks for variable **conversion** (Real to BIT, Integer to real, etc.).

Servos blocks


Actuator

Actuator block controls the transformation of the action to the servo value.

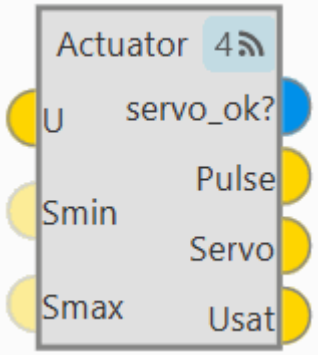

Actuator block

- **Inputs**
  - **U**: Control actions (U) before servo saturation.
  - (Optional) **Smin**: Vector of minimum values allowed for the servos.
  - (Optional) **Smax**: Vector of maximum values allowed for the servos.
- **Outputs**
  - **servo_ok?**: Output BIT vector that indicates the servos that had to be trimmed to prevent saturation.
  - **Pulse**: PWM pulse for servos.
  - **Servo**: Servo value.
  - **Usat**: Control actions (U) after servo saturation.
- **Configuration menu**:

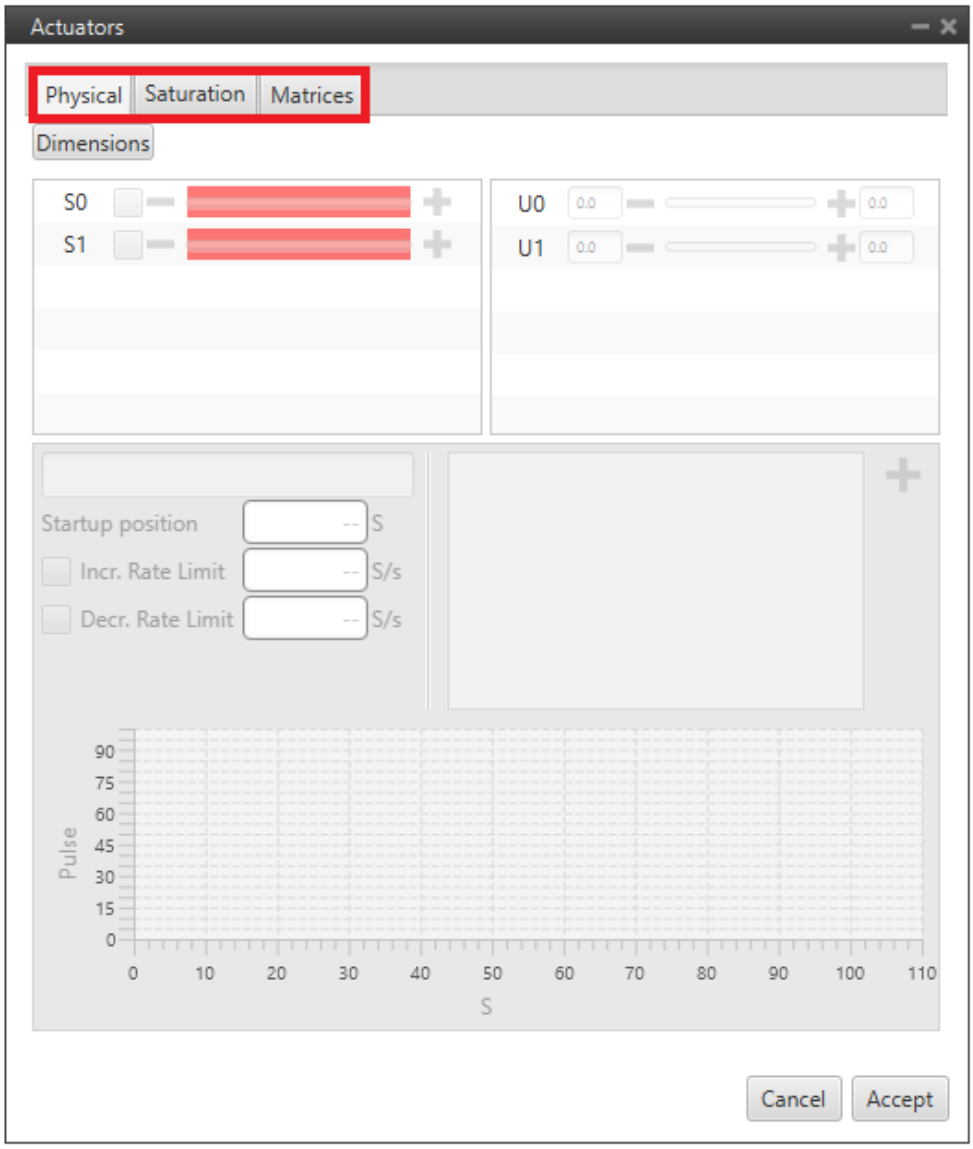


Actuator block configuration

The servo configuration is divided into 3 different menus: **Physical**, **Saturation** and **Matrices**.


- **Physical**: This tab allows the actuators physical configuration.

> ⚠ **Warning**
>
> The calibration of all connected actuators is performed in the 1x PDI Calibration software.

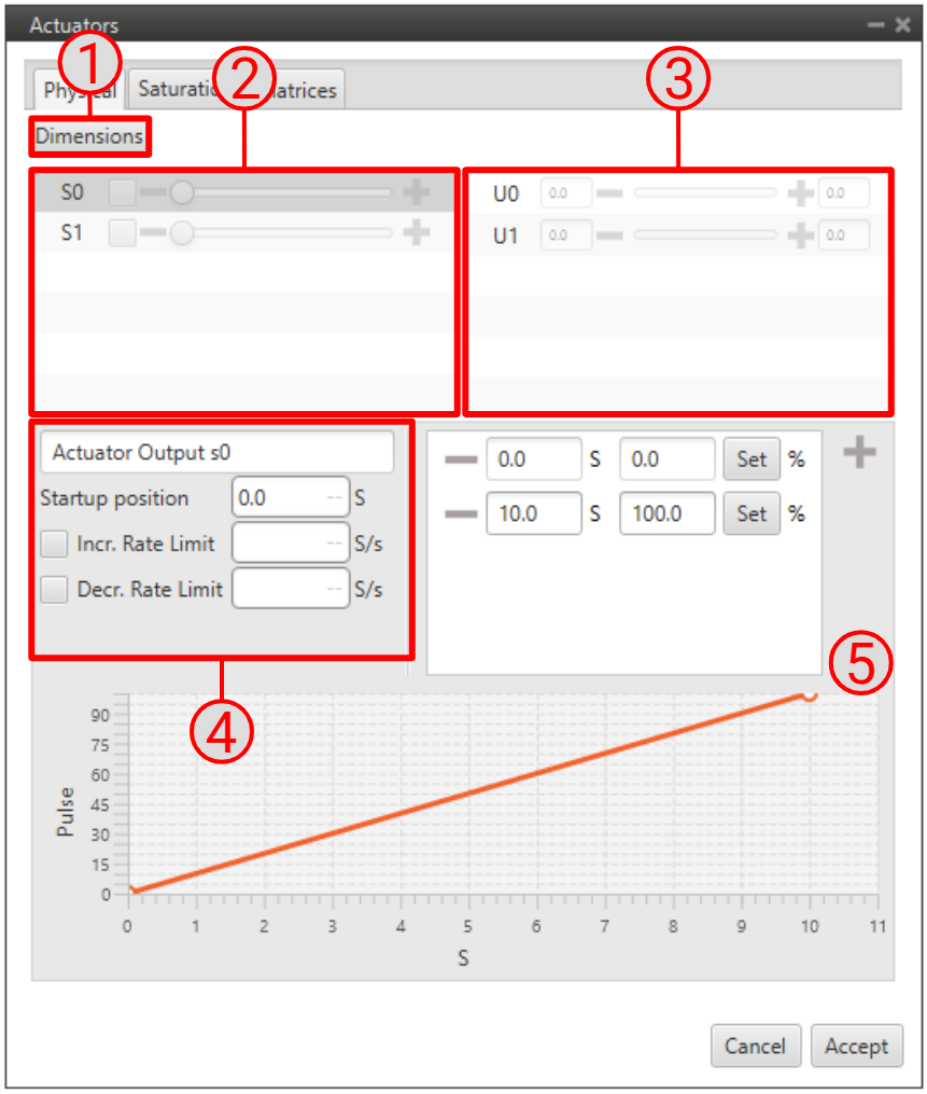

Actuator block configuration - Physical

1. **Dimensions**: Set the number of servos and control outputs.

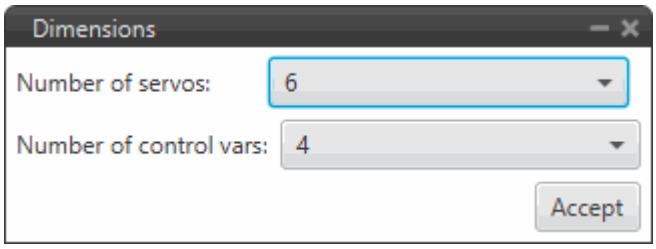

Actuator block configuration - Physical dimensions

> **Note**
>
> Veronte Autopilot 1x allows up to 32 actuators to be configured at the same time.

2. **Servos (actuators)**: This menu contains the servos of the platform.

> ⚠ **Warning**
> The modification of this menu is not available from this block, as mentioned above, this calibration is carried out in the 1x PDI Calibration software.

3. **Control Signals**: This menu contains the variables representing the control signals/outputs U generated by the system. The mapping of the controls to servo positions is indicated within the **SU matrix**, which is set in the **Matrices tab**.


> ⚠ **Warning**
> The modification of this menu is not available from this block, as mentioned above, this calibration is carried out in the 1x PDI Calibration software.

4. **Servo parameters**:
   - **Actuator Output variable**: If the Actuator output variable has been renamed, it will be renamed here as well.
   - **Startup position** (S): Sets the initial values of the actuators.
   - **Increasing/Decreasing Rate Limit** (S/s): Sets a rate limit for increasing/decreasing motions of the servo.
5. **Servo Position - PWM**: This option is used to set the mapping of the S servo position to the PWM signal.

   In this example, 1 S position corresponds to a 100 % pulse to be sent to the corresponding servo (Motor 1).

   The mapping is expressed through the **graph**, where the user can enter as many points as desired.


- **Saturation**: In this menu, the user can configure the behavior of the platform when one or more of its actuators is/are in saturation state.

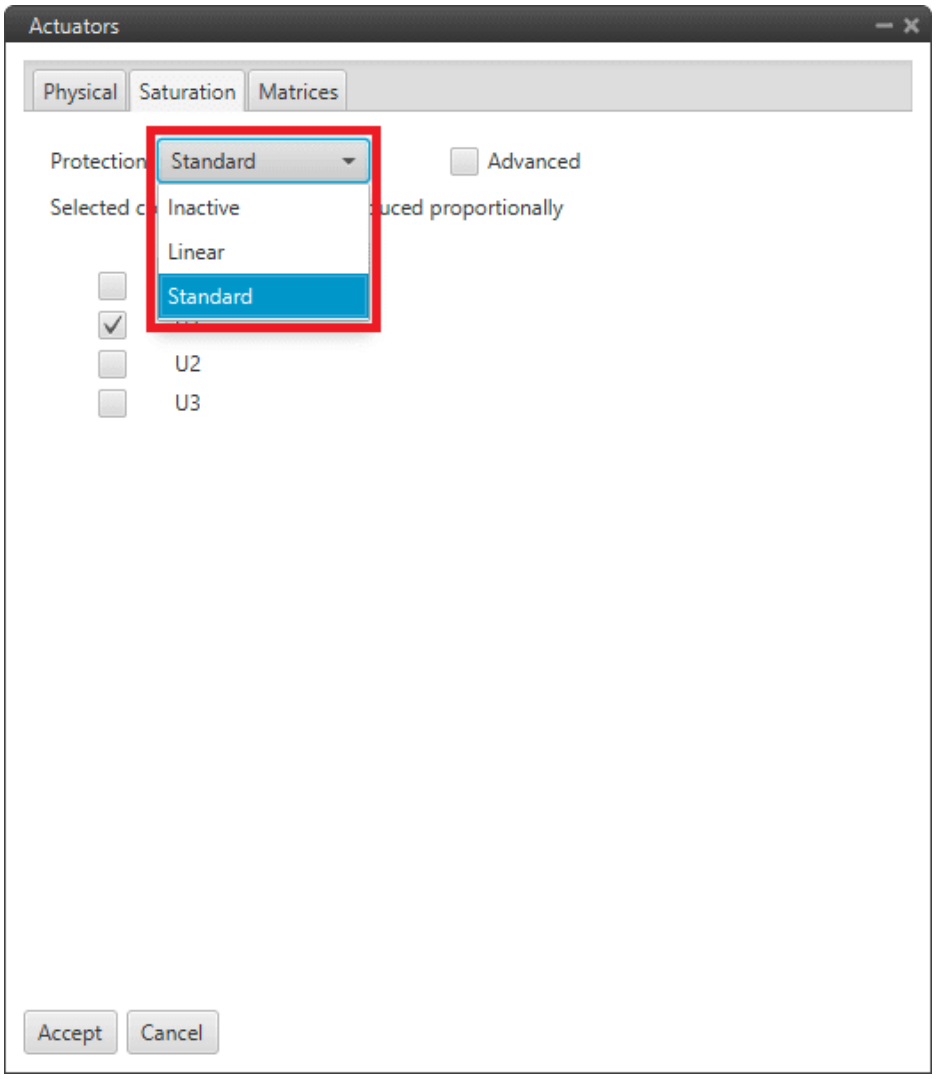

Actuator block configuration - Saturation

The three available options are:

- **Inactive**: The system does not respond to saturation.
- **Linear**: The system affects all the actuators in the same way if saturation is reached.
- **Standard**: The system affects only the selected actuators if saturation is reached at any actuator. It can be chosen from 1 to all of them (which will be linear action).

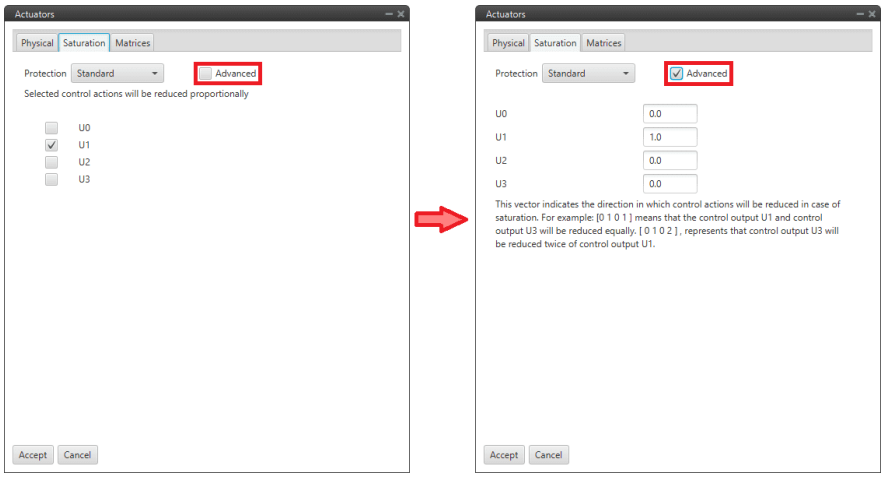

Actuator block configuration - Saturation Standard

Clicking the **Advanced** checkbox generates a vector that includes all control outputs, allowing proportional control over the system when saturation occurs. This tool is configured to allow the user to have more extensive control over this feature if required.


- **Matrices**:

  SU and US are 2 matrices (inverse of one another, respectively) which contain the relationship between actuator outputs S and control outputs U, i.e. the influence of each control channel on each actuator output. The option of having a configurable SU matrix allows Veronte Autopilots 1x to control any type of vehicle, independently of how its control surfaces/devices are set and adjusted.

  U is a vector which contains the control outputs of the platform, e.g. **pitch**, **roll**, **yaw**, **throttle**, etc. The values of U do not represent a physical variable.


  They are instead fictitious variables which are used in the control algorithm. What is actually applied to the system are the actuators movements, i.e. the PWM signals sent to the servos, which are mapped in the S vector.

  The relation between S and U is essential for the right attitude control of the platform.

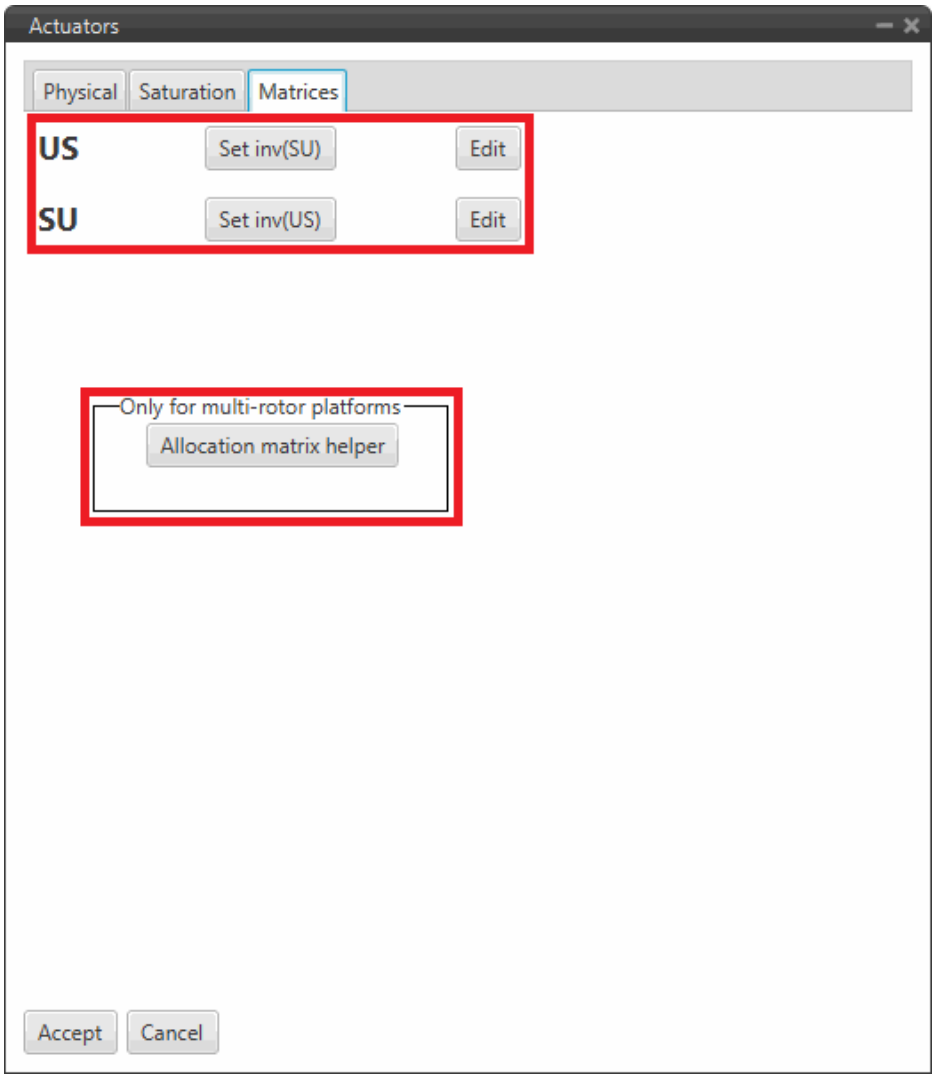

Actuator block configuration - Matrices

- Normally, the **SU matrix is defined** instead of the US matrix because it is **more intuitive**, the US is calculated automatically. To define it, click Edit and the following pop-up window will open with the matrix. Control outputs U are placed on the columns and actutator outputs S on the rows.

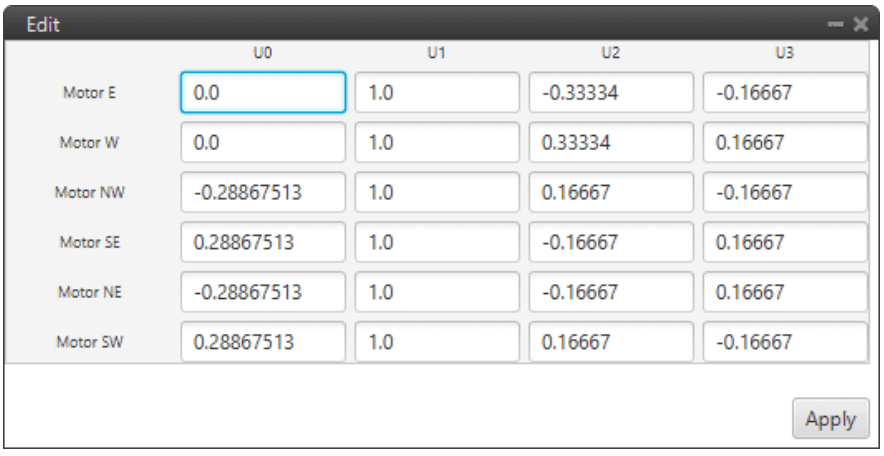


Actuator block configuration - SU matrix

- In addition, an allocation matrix is available to help the user configure these matrices for a **multi-rotor**.

> ⚠ **Warning**
>
> Regarding the selection of the parameters of SU matrix, the order of magnitude of the parameters should be respected at least for every row, i.e. every control channel, as long as there are no coupled control channels U.

> **Good Practice Recommendations**
>
> - Unitary values are recommended. Doing so, U will be equal to S. And if S has been defined according to a physical value - e.g. deflected angle, then control outputs can be easier to understand.
> - The order of magnitude and the value of the SU parameters will not influence control algorithm calculations. But it will affect the control parameters, i.e. the control gains.
> - It is recommended to keep the same order of magnitude for the whole matrix. That will allow an easier set up of a scaled version of the platform. Keeping the same SU and knowing the scaling factor, then the new control gains should be the old ones multiplied by that scaling factor. This practice can also be useful for transition to similar platforms.
> - The SU matrix and S vector should be defined accordingly in order to follow the sign convention for aerial navigation, a positive roll lowers the right wing, a positive pitch moves the nose up and a positive yaw moves the nose the right.


An example of the use of this block is given below:

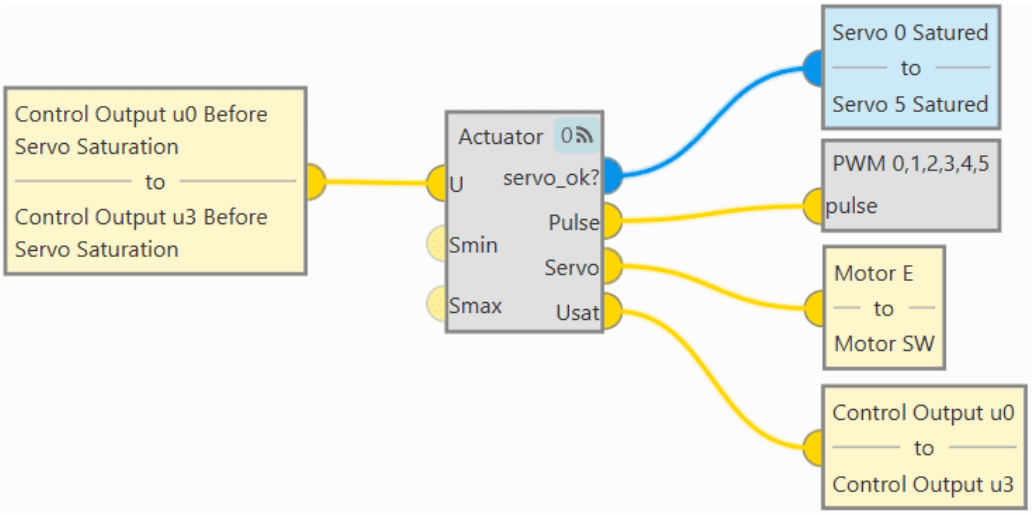

Actuator block - Example of use

Arc Trim


Arcade stick trim block is used to set the zero-stick position for the Arcade Mode.

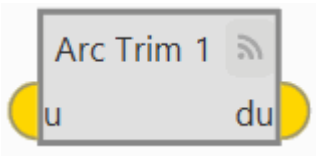

Arc Trim block

The Stick input variable that enters the navigation algorithm is called 'Stick input d ', which is the one obtained from the **Arc Trim block**.

It is calculated as $D = U - U_0$, where U_0 is the arcade trim.

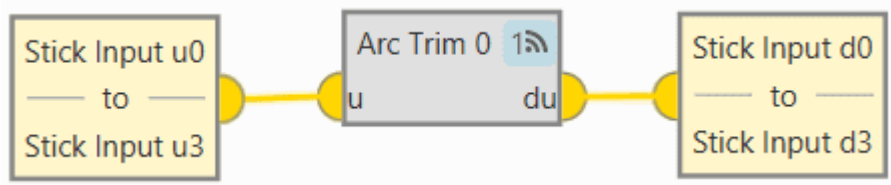

Arc Trim block - Example of use

- **Input**
  - **u**: Input stick vector to trim.
- **Output**
  - **du**: Trimmed stick vector.
- **Configuration menu**:



Arc Trim block configuration


- **Vector size**: This parameter specifies the number of elements contained within the vector processed by this block. In the provided example, the size is set to 2.

For more information on this automation, see the ArcTrim (Command block) action - Automations section of this manual.

> ⚠ **Warning**
>
> The Arcade mode has to be trimmed before flight. If not trimmed, the zero level will be different from the desired one.

PWM

PWM block applies the input vector to the configured PWM outputs.

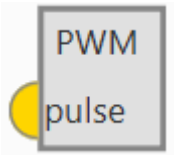


PWM block

- **Input**

  pulse: Input vector of pulses to apply.

- **Configuration menu**:

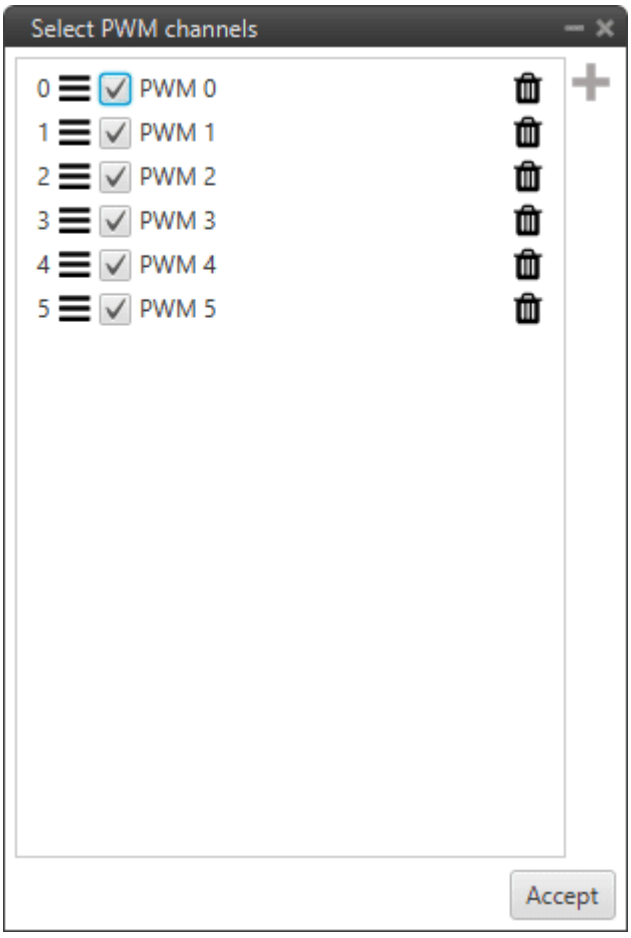

PWM block configuration

- ➕ : Users must enter the PWM variables to be configured.
- ☰ : PWMs variables can be sorted as desired by simply dragging and dropping them.
- Check the variable to enable commands to this PWM.
- 🗑: Deletes the PWM.


A PWM servo configuration can be found in the PWM (Servos) - Integration examples section of this manual.

Control blocks

Control blocks are those related to the creation of control loops.


PID

PID Static block allows the user to build a PID (Proportional, Integral and Derivative) controller with fixed gains.

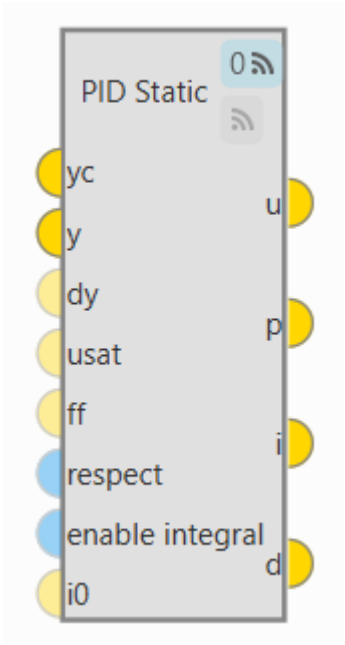

PID block


As can be seen in the figure above, PID Static block has 2 buttons that enable or disable the block to be commanded from the 1x PDI Tuning software.

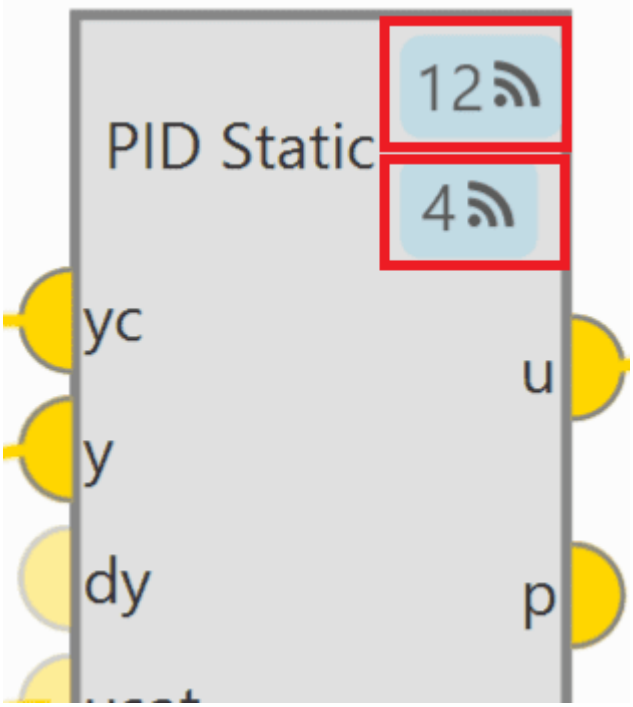

PID block - Command buttons

The first button is for activating 'Command PID' and the second one is for the 'Autotune' command. For more information on these commands, please refer to the Tuning section of the **1x PDI Tuning** user manual.

Each command button has a **different ID** that allows the user to identify it during the command.
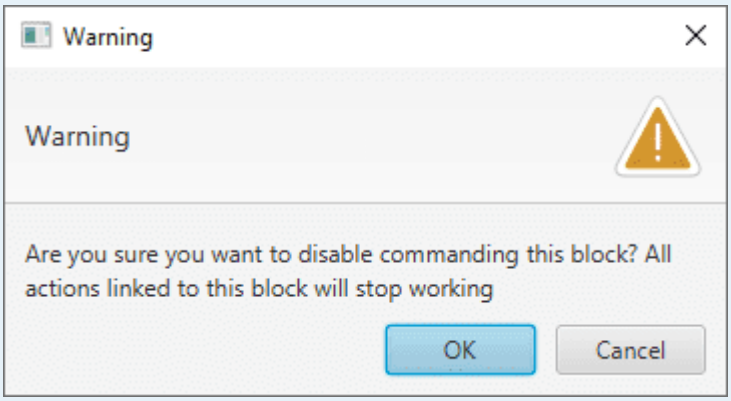
> **Note**
>
> To avoid disabling a block by mistake, the following warning message appears when disabling it:
>
> 
>
>
> **Warning message when disabling the command**

- The PID mathematical implementation in Veronte Autopilot 1x is the following:

$$C = Kp + \frac{1}{T_i} \cdot IF(z) + \frac{Td}{\tau + DF(z)}$$

Where:

$$DF(z) = T_s \cdot \frac{z}{z-1} \quad ; \quad IF(z) = \frac{T_s}{2} \cdot \frac{z+1}{z-1} \quad ; \quad LPF(s) = \frac{}{\tau s}$$

- **Inputs**
  - **yc**: Target value, desired set-point of the controlled variable.
  - **y**: Closed loop, value of the controlled variable.
  - (Optional) **dy**: Derivative of the controlled variable (computed numerically from 'y' if not connected).

 (Optional) **usat**: Previously applied control action after saturation (used for anti-windup and respect). If not connected a value of zero is assumed.

 (Optional) **ff**: Feed-forward control, this value is added to the 'u' output before applying the output limits. If not connected a value of zero is assumed.

 (Optional) **respect**: When TRUE the output 'u' is equal to the input 'usat' (except in the first step, for safety reasons) and the integral component is estimated with the information in 'y' and 'yc'. When FALSE the PID works as usual. If not connected a value of FALSE is assumed.

 (Optional) **enable integral**: When TRUE the the PID works as usual. When FALSE the integral is exponentially discharged. If not connected a value of TRUE is assumed.

 (Optional) **i0**: If connected, this value is used to initialize the integral part of the PID when in on_focus or respect.

- **Outputs**


   u: Control output after applying PID limits.

   p: Proportional part of the output before the PID limits are applied.

   i: Integral part of the output before the PID limits are applied.

   d: Derivative part of the output before the PID limits are applied.

- **Configuration menu**:
  Double click on the block to open its configuration menu.

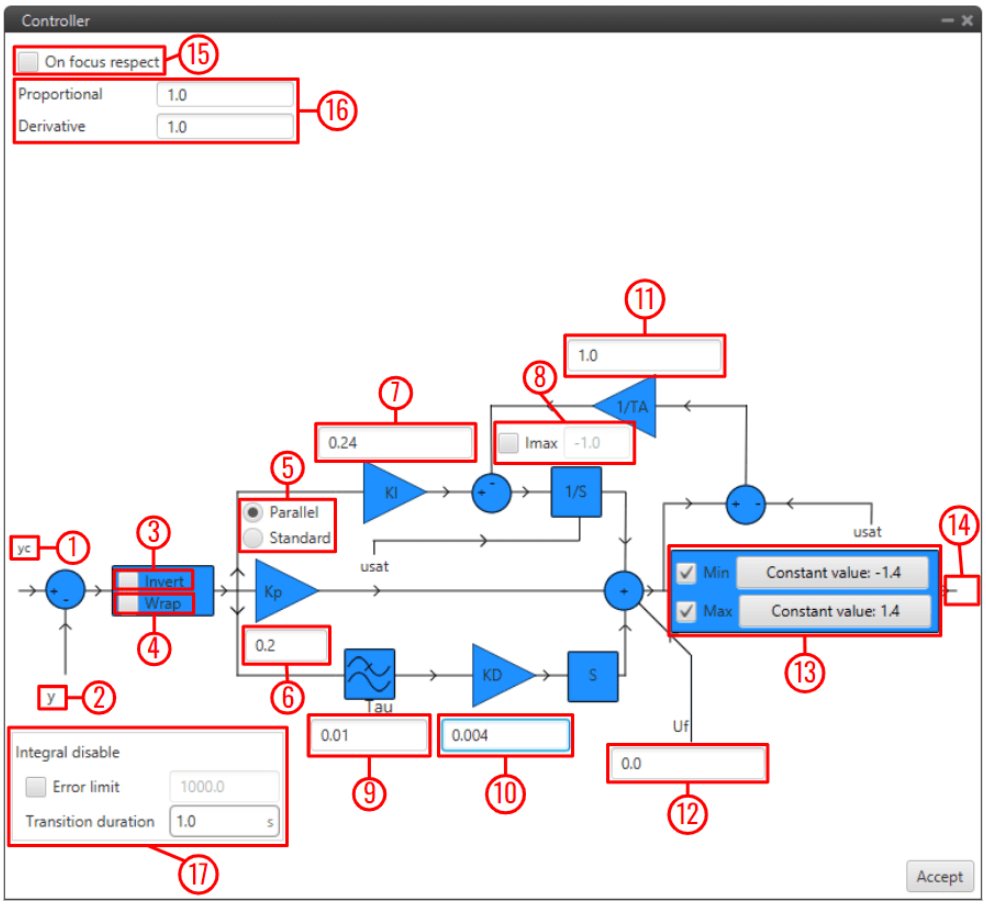

PID block configuration


1. **yc**: Input variable.
2. **y**: Feedback variable.
3. **Invert**: Apply a -1 gain .
4. **Wrap**: Perform a [-pi, pi] wrap.
5. **Parallel/Standard**: In parallel mode, PID gains are independent. In standard mode, I & D gains are scaled by P gain.
6. **KP**: Proportional gain.
7. **1/TI**: Integral gain.
8. **Imax**: Maximum value for integral term. Value must be possitive and the limit applied is symmetrical ([-Imax, Imax]).
9. **tau**: Time constant for the derivative term first order LPF.
10. **TD**: Derivative gain.
11. **TA**: Anti-windup gain. Recommended value around x10 KI. Unloads integral term if output is saturated.
12. **Uf**: Output offset. **Feedforward** value is also applied at this point.
13. **Min/Max**: Output limits. Users can manually enter a value or select a variable.

14. **u**: PID output.
15. **On focus respect**: If respect is enabled, when the PID is first executed, an initial I value will be applied so that **'u' = 'usat'** for the first iteration.
16. **Proportional/Derivative Beta**: **yc** scaling for proportional and derivative terms. Unless necessary, value should always be **1**.
17. **Integral disable**: Disables integral term if **(yc - y) > Error limit**.

> **Tip**
> Remember to always use '**wrap**' for direction controllers, such as 'Heading' or 'Yaw' PIDs. This will allow the UAV to always turn in the right direction.

Quaternion Control

Quaternion Control block for fixed multirotor aircraft.

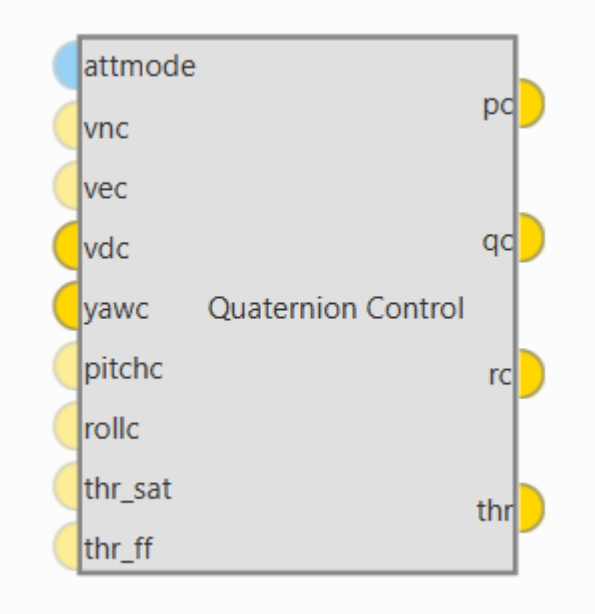

Quaternion Control block

- The Quaternion Control mathematical implementation in Veronte Autopilot 1x is the following:
  - The quaternion control algorithm calculates the desired direction and magnitude of the thrust vector of a multicopter in order to achieve the desired NED velocities, these generate a three-component acceleration vector in NED coordinates, which is compared with the actual direction

of the thrust vector to obtain a quaternion representing the rotation from the actual to the desired thrust.

The error is applied to a control law determined by a time constant that provides the body angle rates to achieve the desired acceleration.

- In addition, the algorithm is **divided in two quaternion calculations** depending on the yaw being controlled or not:
  - Reduced: Only the crucial angles of the thrust desired vector are considered. The yaw is not controlled directly.
  - Full: Both the pointing direction of the vector and the yaw is controlled.

- **Inputs**


(Optional) **attmode**: Flag for velocity (hover) or angle (hold) control. If true only the angles will be controlled, if false or not connected the velocity of the aircraft will be controlled.

(Optional) **vnc**: Desired north velocity (only used if velocity mode is active). Assumed zero if not connected.

(Optional) **vec**: Desired east velocity (only used if velocity mode is active). Assumed zero if not connected.

vdc: Desired down velocity.

yawc: Desired yaw.


(Optional) **pitchc**: Desired pitch (only used if angle mode is active). Assumed zero if not connected.

(Optional) **rollc**: Desired roll (only used if angle mode is active). Assumed zero if not connected.

(Optional) **thr_sat**: Saturated thrust from previous step. Used for respect and antiwindup.

(Optional) **thr_ff**: Thrust PID feed-forward (NED vector). Assumed zero in all components if not connected.

- **Outputs**
  - **rrc**: Desired p (Angular Velocity - X Body Axis).
  - **prc**: Desired q (Angular Velocity - Y Body Axis).
  - **yrc**: Desired r (Angular Velocity - Z Body Axis).
  - **thr**: Desired thrust.
- **Configuration menu**:

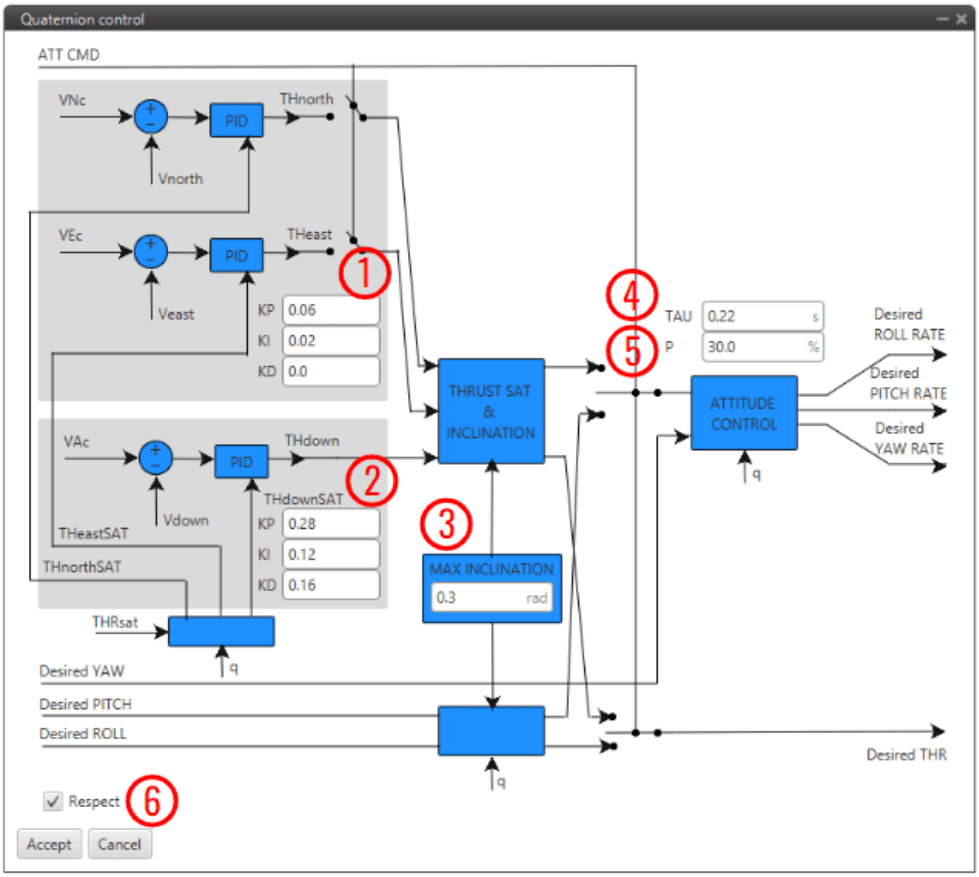

Quaternion Control block configuration

As this block is mainly constituted by 3 PID controllers (for more information, see PID block), only some relevant parameters are detailed below:

1. PID to transform desired velocities into desired accelerations in NED.
2. PID to transform the vertical velocity into desired acceleration.


3. **MAX INCLINATION**: Maximum inclination allowed to the aircraft.
4. **TAU**: Time constant of the system. It is also the gain used for the feedback controller. **Recommended values** between **0.1 and 0.25 seconds**.
5. **P**: Reduction factor indicating how the yaw is to be controlled compared to pitch and roll.

   The idea is that the "yaw control power" is lower in a multicopter as it is controlled by angular momentum difference between motors while pitch and roll is controlled by thrust difference. By default, it is configured to 30%.
6. **Respect**: If enabled, when the block is executed for the firs time, an initial I value will be applied so that **'thr' = 'thr_sat'** for the first iteration.

Furthermore, the thrust is assumed to be between 0 and 1. In case the user has other values for the thrust, it is recommended to use an Interpolation block at the input and output to adjust the range between 0 and 1.

Scheduler

Scheduler block is a multidimensional look-up table interpolator with no extrapolation. This block is used to output a data array based on an input interpolation point.

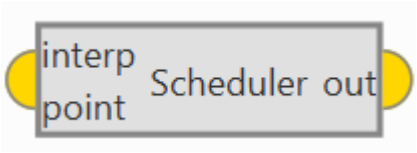

Scheduler block

- **Input**


interp point: Interpolation point provided as an array of N dimensions (where N corresponds to the number of independent variables defined in the table).

- **Output**

out: Interpolated data array resulting from the look-up operation.

T-Sched PID

TSched PDI block is a PID (Proportional, Integral and Derivative) controller with table scheduled parameters. It allows to scale most PID parameters using an external variable, usually the speed (Ground speed or IAS).

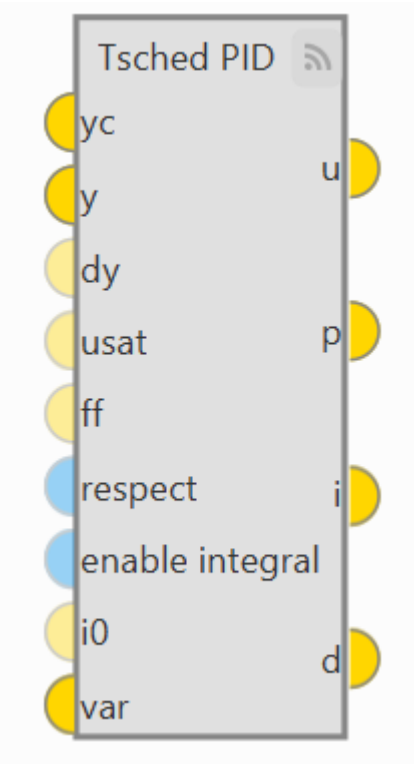

TSched PID block

It works in a very similar way to the PID Static block, except that in that block the gains are fixed and in the TSched block they are adjusted for different values of the input variable.

For this reason, the inputs and outputs are the same, but in this block an additional input is added:

- **Inputs**
  - **yc**: Desired set-point of the controlled variable.
  - **y**: Value of the controlled variable.

 (Optional) **dy**: Derivative of the controlled variable (computed numerically from 'y' if not connected).

 (Optional) **usat**: Previously applied control action after saturation (used for anti-windup and respect). If not connected a value of zero is assumed.

 (Optional) **ff**: Feed-forward control, this value is added to the 'u' output before applying the output limits. If not connected a value of zero is assumed.

 (Optional) **respect**: When TRUE the output 'u' is equal to the input 'usat' and the integral component is estimated with the information in 'y' and 'yc'. When FALSE the PID works as usual. If not connected a value of FALSE is assumed.

 (Optional) **enable integral**: When TRUE the PID works as usual. When FALSE the integral is exponentially discharged. If not connected a value of TRUE is assumed.

 (Optional) **i0**: If connected, this value is used to initialize the integral part of the PID when in on_focus or respect.

 var: Value used to interpolate in the table for obtaining the PID parameters.

- **Outputs**

 u: Control output after applying PID limits.


 p: Proportional part of the output before the PID limits are applied.

 i: Integral part of the output before the PID limits are applied.

d: Derivative part of the output before the PID limits are applied.

- **Configuration menu**

  Double click on the block to open its configuration menu.

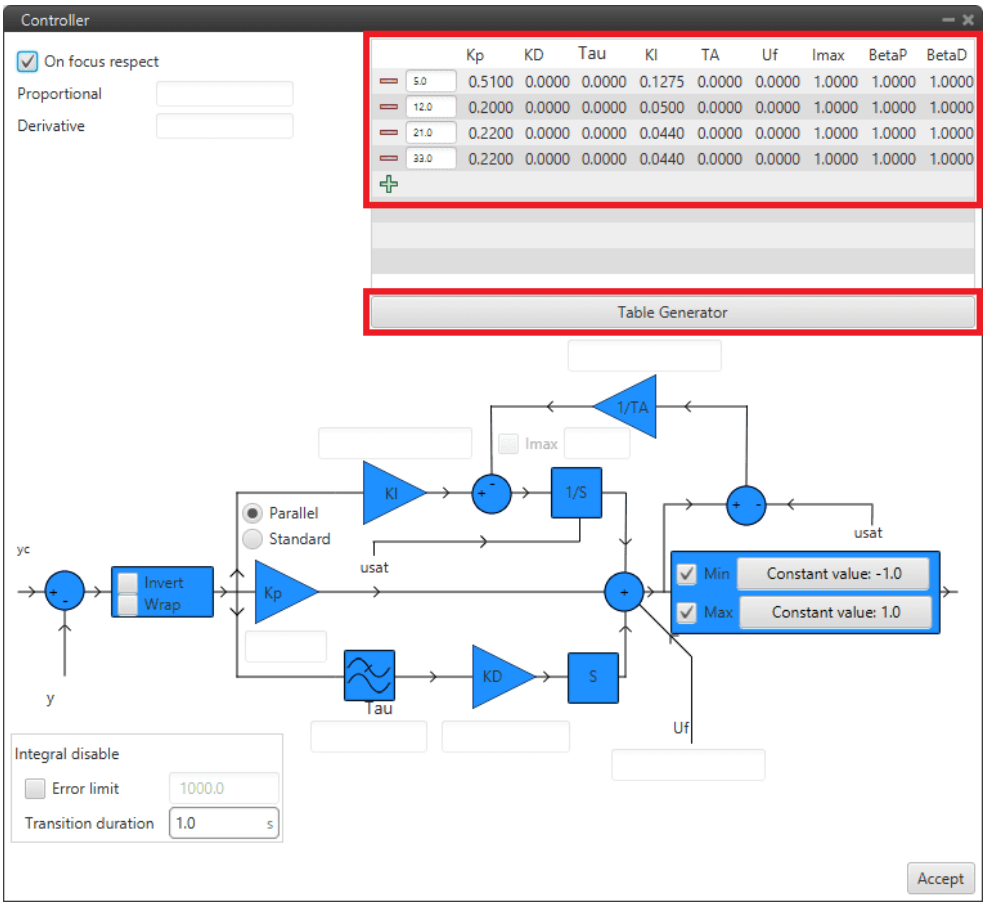


TSched PID block configuration

In this block, the PID gains for the different values of the input variable must be entered in the table above instead of in the diagram. To add more values, simply click on ➕ and to remove them, click on ➖.

If the variable is outside the limits, the values of the closest point will be applied. Values between points are **linearly interpolated**.

In addition, clicking on "Table Generator" will bring up another configuration menu:

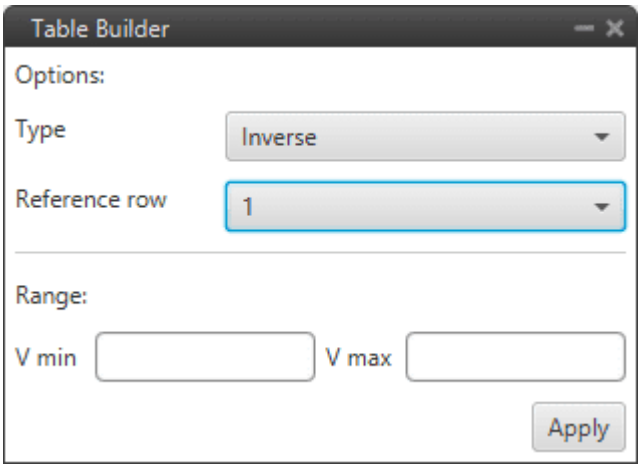

TSched PID block configuration - Table Generator

This is another option to enter the PID gains for different values of the input variable, instead of manually entering all the gains, the **Table Generator** will generate them according to the parameters to be configured:

- **Type**: Depending on the type of function selected, the gains are calculated differently.
  - **Inverse**: It will calculate the different gains with an inverse function.
  - **Proportional**: It will calculate the different gains with a proportional function.
  - **Quadratic**: It will calculate the different gains with a quadratic function.


Type	Result (K_p)
Inverse	$\frac{K_{p_i} V}{V_i}$
Proportional	$\frac{K_{p_i} V_i}{V}$
Quadratic	

Type	Result (K_p)
	$K_{p_i} \frac{V_i^2}{V^2}$

- **Reference cow**: Users must select the reference values from which the other values will be calculated.
- **Range**: The minimum and maximum values of the input variable between which the gains have to be calculated have to be defined.

Then just click on "**Apply**" and the maximum number of points that the table allows will be generated.

Example

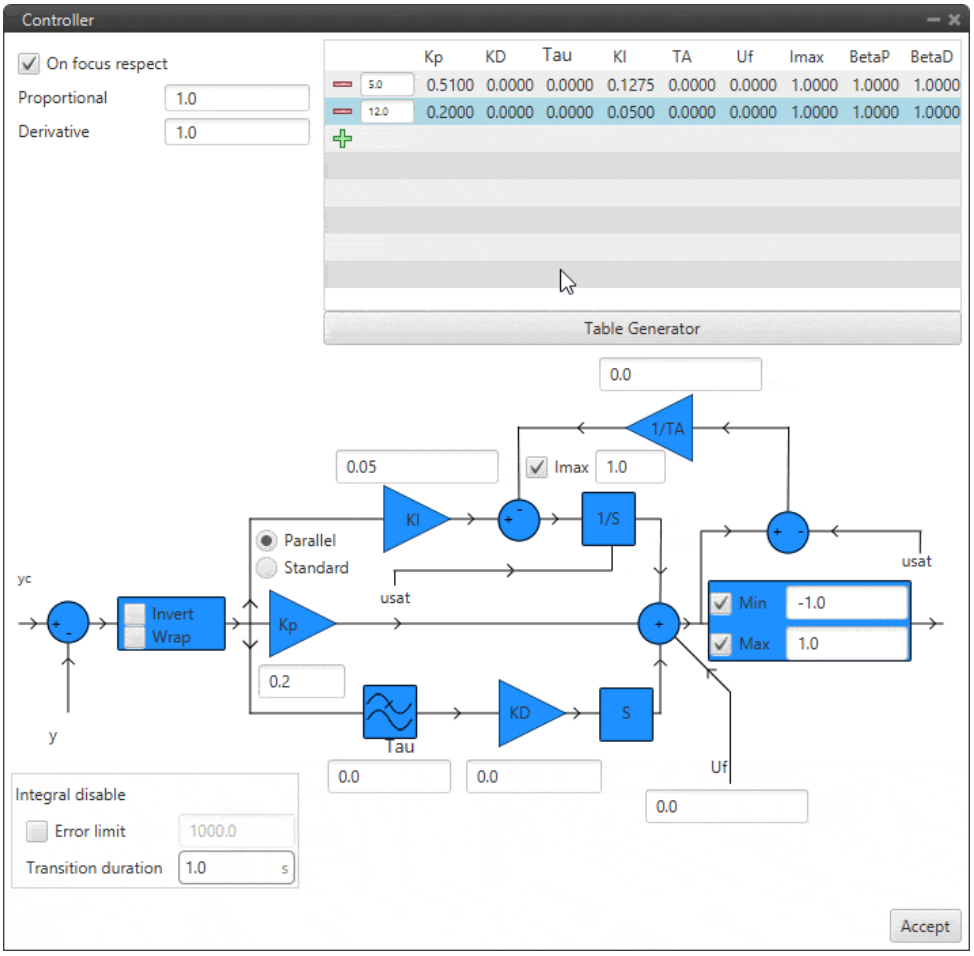

Example of Table Generator


Total Energy Control

Total Energy Control block has been designed for the **decoupling of the control of the speed and FPA in fixed-wing aircrafts**. This block uses the internal navigation estimation.

It will provide two errors that must be minimized in order to obtain the desired speed and flight path:

- **Energy Distribution Error**: Distribution of sistem energy between kinetical and geopotential energy. This error shall be used to control the aircraft's **pitch** or **FPA**.
- **Energy Rate Error**: Rate of change of the Total System Energy. This error accounts for the necessary increase or decrease in **thrust**.

The outputs **Desired energy rate** and **Desired distribution energy rate** are useful as feed forward in control.

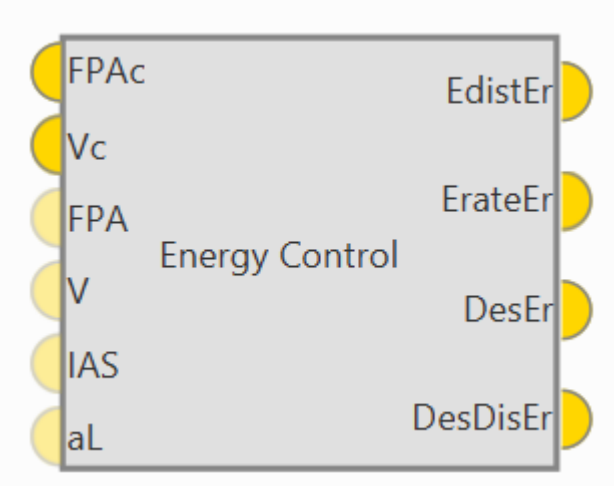

Energy Control block

- **Inputs**

  FPAc: Desired FPA (Flight Path Angle) set-point.

  Vc: Desired velocity set-point. Depending on the block configuration the velocity can be IAS or Ground Speed.

  (Optional) **FPA**: Navigational FPA (Flight Path Angle).


  (Optional) **V**: Navigational FPA (Flight Path Angle).

- (Optional) **IAS**: Navigational IAS.
- (Optional) **aL**: Navigational longitudinal acceleration.

- **Outputs**
  - **EdistEr**: Energy distribution error for pitch control.
  - **ErateEr**: Energy rate error for thrust control.
  - **DesEr**: Desired energy rate.
  - **DesDisEr**: Desired distribution energy rate.

- **Configuration menu**:

  Some parameters of the Energy algorithm can be modified by double clicking on the block:

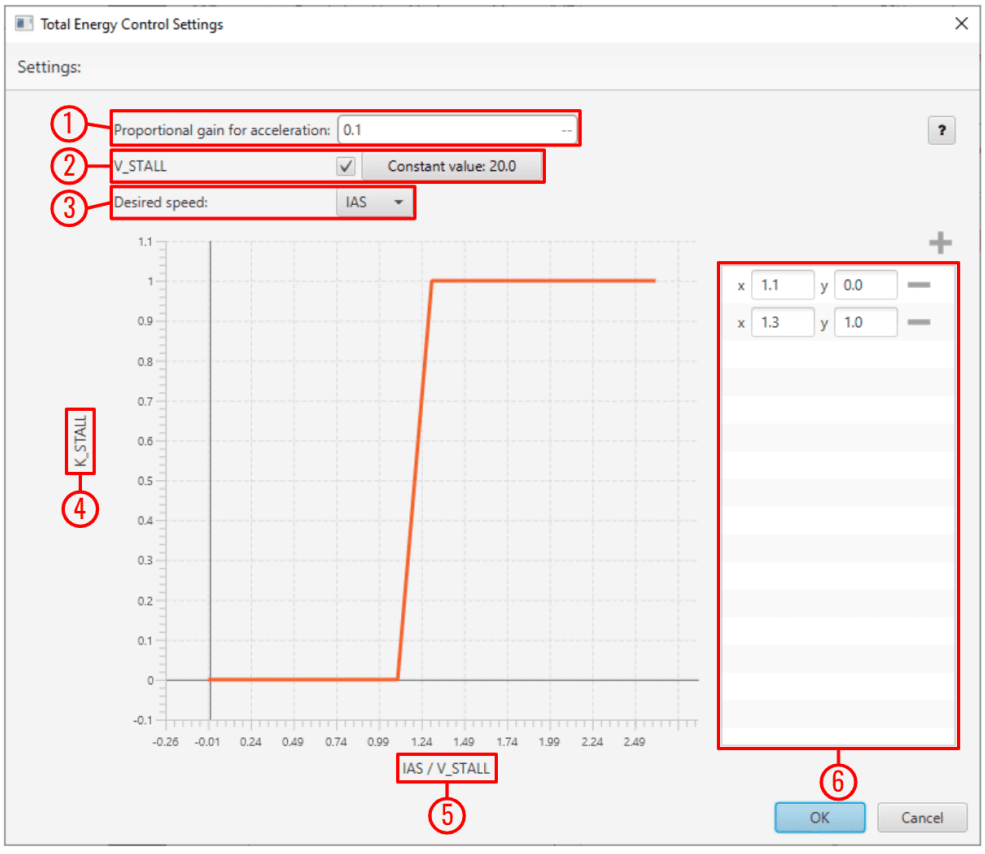

Energy Control block configuration

1. **Proportional gain for acceleration**: This is an indication of how aggresive the algorithm is when trying to gain speed.

The higher the value, the faster the algorithm will try to 'dive' in order to gain speed.

A typical **recommended** value is around **0.1-0.3**. Higher values are only recommended for fast maneuvering platforms.


2. **V_STALL**: Stall velocity parameter can be enabled or disabled. Users can manually enter this value or select a variable.
3. **Desired speed**: The user must choose between **IAS** and **GS** (Ground Speed) for reference. The use of GS is not recommended unless Airspeed measurement is not available.
4. **K_STALL**: Stall correction coefficient. If 1, energy control is balanced for altitude and speed. If 0 only speed control is taken into account.
5. **IAS/V_STALL**: Speed/Stall ratio. Ratio between current speed and minimum speed.
6. **Stall correction interpolation function**: Defines how the relationship between the stall correction coefficient and the Speed/Stall ratio works.

   The default configuration (as shown in the figure above) is **recommended**.

   > ⓘ **Note**
   >
   > The Stall correction coefficient is a **Safety** tool that can be used to sacrifice altitude control in order to improve speed control when speed gets close to the stall velocity (**V_STALL**) defined above.

Data Source/Sink blocks

- **Source blocks** allow to **import into the program any variable** available in the system. Additionally the **Const Real/Vector** allows to create a constant variable or vector.
- **Sink blocks** allow **overwriting** the following system **variables**:
  - User Variables
  - Desired variables (variables whose name starts with '**Desired**')

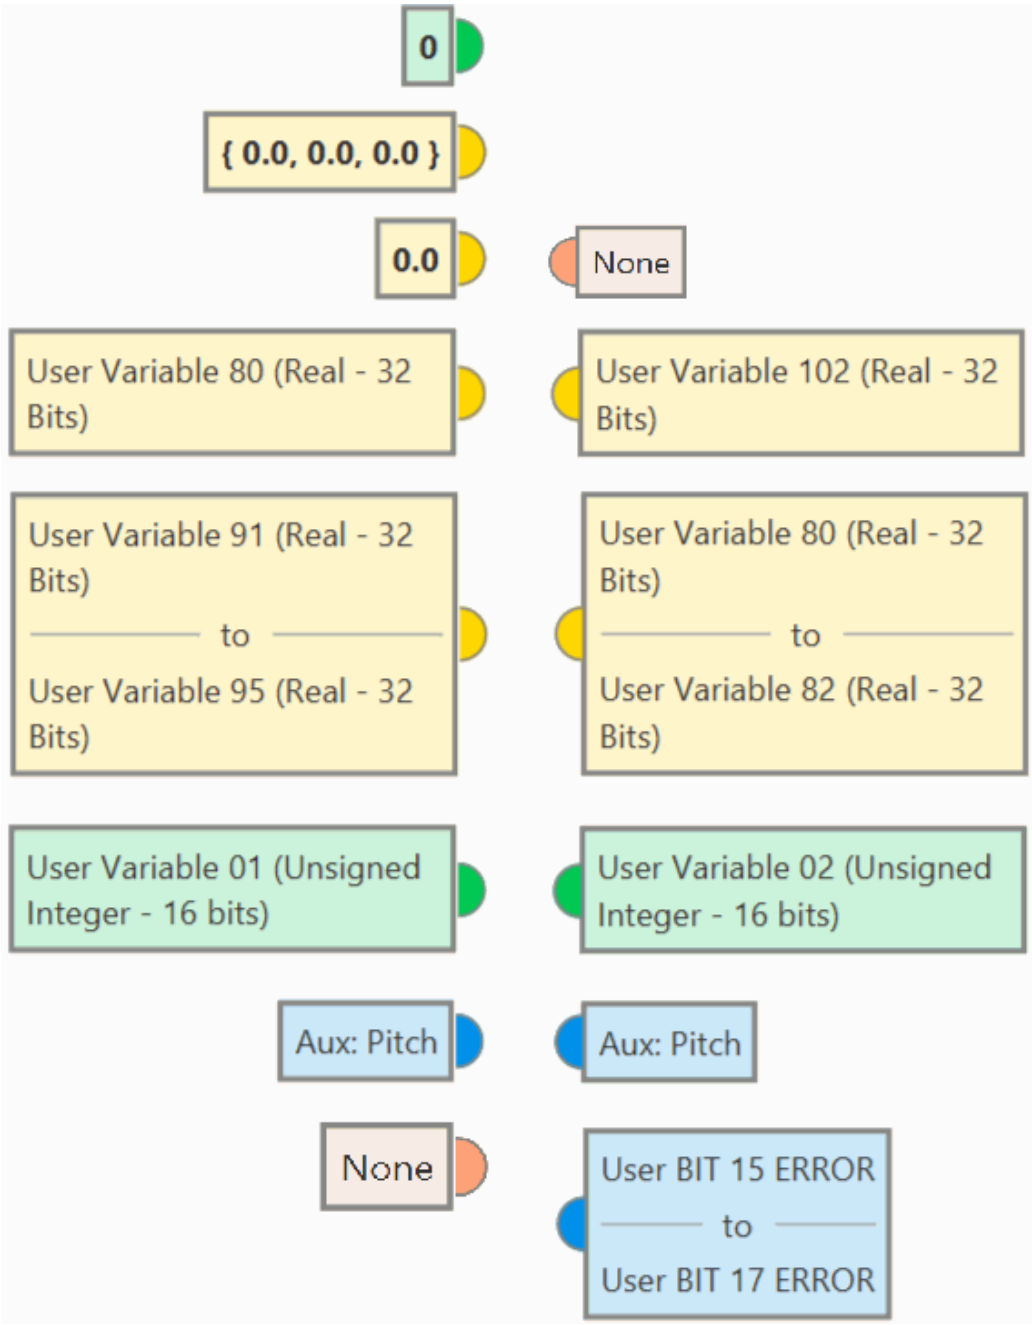

Source/Sink blocks

> ⚠ **Warning**
>
> - **Desired variables** are naturally written by **Guidances** algorithms. If an active **Guidance is writting** a certain Desired variable, writting it with a **Sink block** should be **avoided**.
> - Using **Sink blocks to overwrite System Variables** usually results in the change not taking effect, but in **some cases** could end up causing Autopilot 1x to **malfunction**.
> - Avoid using **Sink blocks** to write any variable that does **not belong** to one of the **groups listed** above.

Devices blocks

Devices connected to Autopilot 1x and a clock can be configured with these blocks.


Clock

Clock block computes the time elapsed since the last reset or since the last step execution (depending on the block configuration).



Clock block

- **Input**
  - (Optional) **Reset**: The clock is reset when the input value is TRUE. Assumes FALSE if unconnected.
- **Output**
  - **Time**: Computed time in seconds.
- **Configuration menu**:

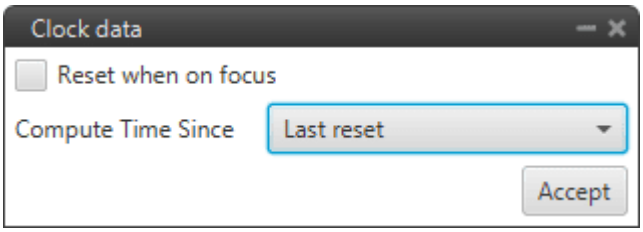


Clock block configuration

- **Reset when on focus**: If enabled, the clock will be reset the first time it is executed.
- **Compute Time Since**: The available options are:
  - **Last reset**: The block acts as a 'normal clock', counting the time since it was started/restarted.
  - **Last step**: Time elapsed since the program, in which the block is added, was executed.

Gimbal

Gimbal block is a gimbal device controller that uses current navigation estimation.

It allows users to configure a Gimbal Camera by defining the movements the system has (from predefined combinations of Pan, Tilt and Roll), its logic and a distance vector.

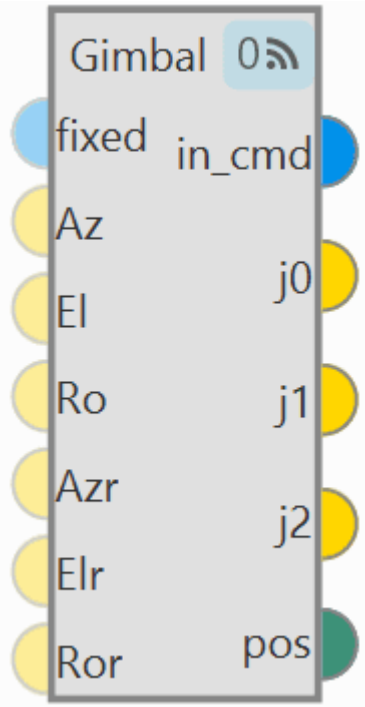

Gimbal block

- **Inputs**

   (Optional) **fixed**: Mode of operation:

  - If **TRUE** the gimbal is in **absolute orientation mode** and uses the **inputs** '**Az**', '**El**' and '**Ro**'.

  - If **FALSE** the gimbal is in **arcade mode** and uses the **inputs** '**Azr**', '**Elr**' and '**Ror**'.

  - If **not connected** assumes **FALSE**.

   (Optional) **Az**: **Desired azimuth**. This input is only used when '**fixed**' input is **TRUE**. Assumes **zero if not connected**.

   (Optional) **El**: **Desired elevation**. This input is only used when '**fixed**' input is **TRUE**. Assumes **zero if not connected**.

   (Optional) **Ro**: **Desired roll**. This input is only used when '**fixed**' input is **TRUE**. Assumes **zero if not connected**.

   (Optional) **Azr**: **Desired azimuth rate**. This input is only used when '**fixed**' input is **FALSE**. Assumes **zero if not connected**.

   (Optional) **Elr**: **Desired elevation rate**. This input is only used when '**fixed**' input is **FALSE**. Assumes **zero if not connected**.

   (Optional) **Ror**: **Desired roll rate**. This input is only used when '**fixed**' input is **FALSE**. Assumes **zero if not connected**.

- **Outputs**

   **in_cmd**: Has a value of **TRUE** when the gimbal block is being **externally commanded**, FALSE otherwise.


   j0: Gimbal joint 0 angle in radians. This is the **desired Pan angle**.

j1: Gimbal joint 1 angle in radians. This is the **desired Tilt angle**.

j2: Gimbal joint 2 angle in radians. This is the **desired Roll angle**.

pos: **Position** in the surface of the Earth where the **gimbal is pointing to**.

- **Configuration menu**:

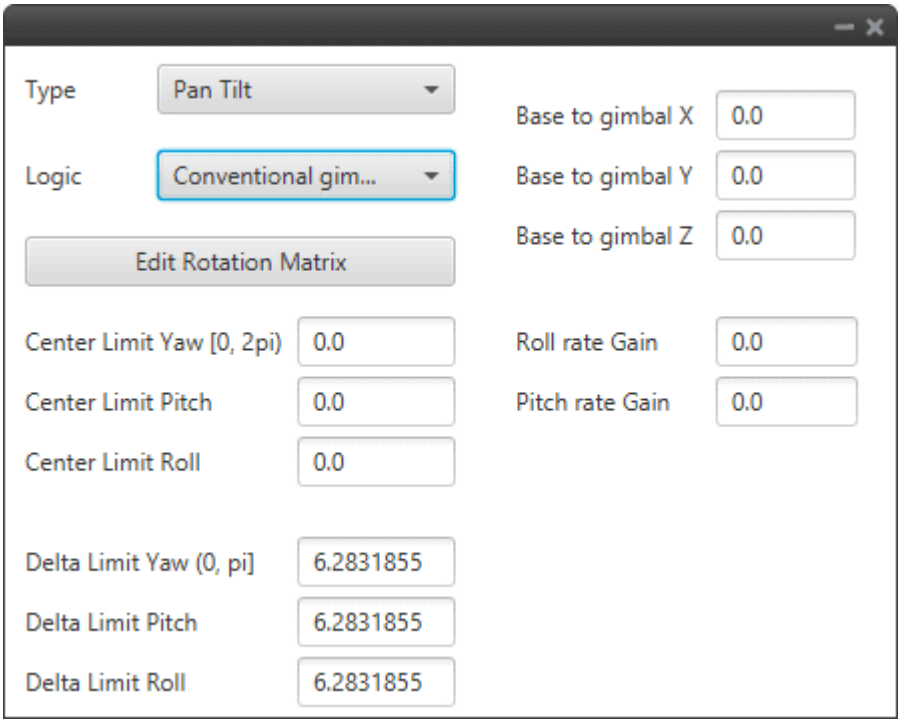

Gimbal block configuration

The following parameters must be configure:

- **Type**: Defines the **angles that the Veronte Autopilot 1x will control** from the payload system from a combination of Pan (Z-axis, same as Yaw), Tilt (Y-axis, same as Pitch) and Roll. The three options available are:
  - **Pan & Tilt**
  - **Pan, Roll & Tilt**
  - **Roll & Tilt**

- **Logic**: Defines the kind of payload system configured:
  - **Conventional gimbal**: This option writes over the **variables** Joint 1-3 of Gimbal 1-3 which are **used** later to **configure camera control and stabilization from Autopilot 1x**.
  - **Self-stabilized gimbal**: The payload system **only needs movement inputs** and the variables mentioned will have no output.
- **Base to gimbal X/Y/Z**: Defines the vector linking Veronte Autopilot 1x controlling the payload system and the payload system itself, on Veronte body axes.
- **Edit Rotation Matrix**: Matrix to rotate the system to match the aircraft coordinate system.




Gimbal block configuration - Rotation Matrix

- **Center Limit Yaw [0, 2pi]/Pitch/Roll**: Center of the range of movement.
- **Delta Limit Yaw [0, pi]/Pitch/Roll**: That is how much the gimbal can move in positive and negative from the center defined above.


> ⓘ **Note**
>
> This part of limit is because there are some gimbals that cannot make a full turn on some axis.

- **Roll/Pitch rate Gain**: Gains to compensate for **roll rate** or **pitch rate inputs**.

An example of use is given below:

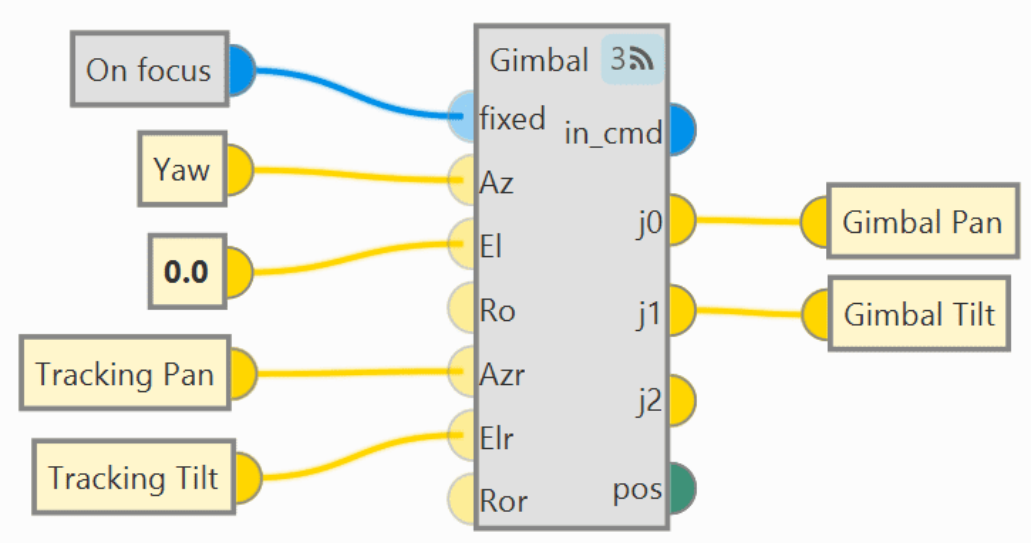


Gimbal block - Example of use

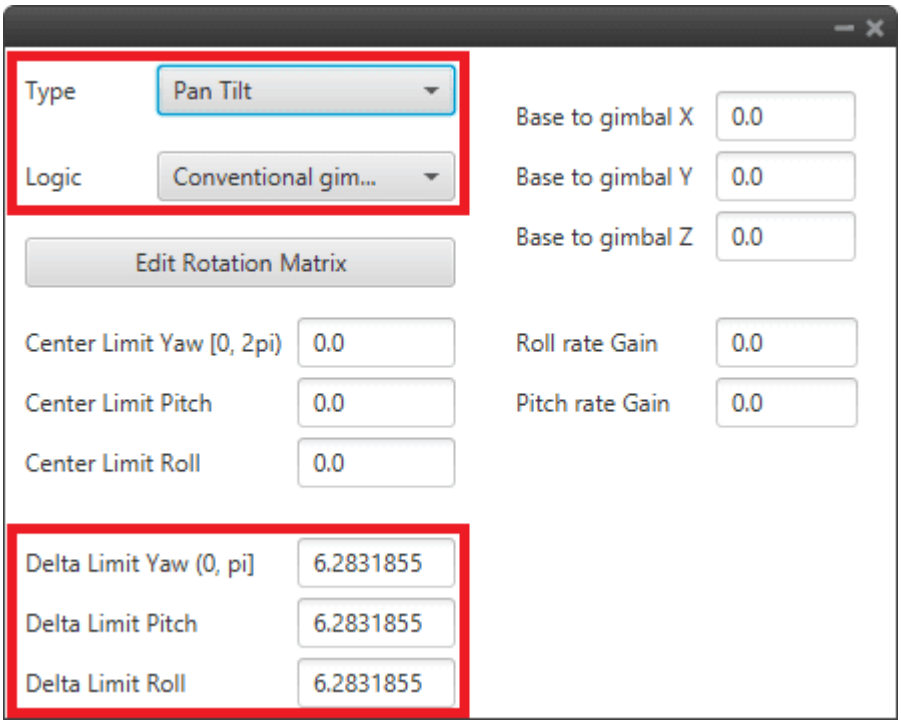

Gimbal block - Configuration example

Stick

Stick block is a stick reader, with it the user can configure the stick parameters for manual and arcade modes.

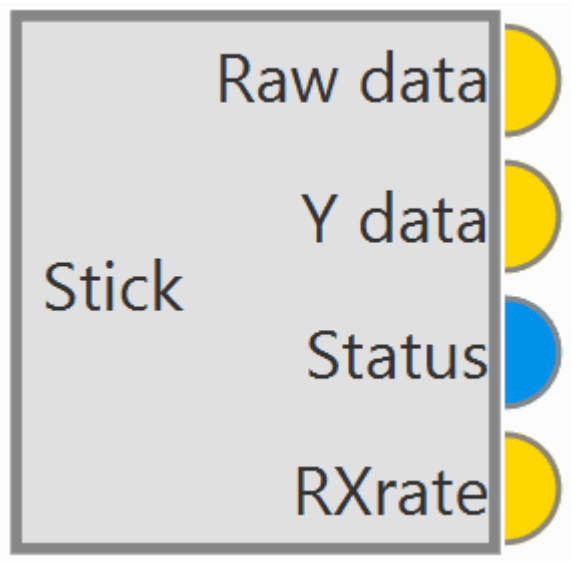

Stick block

> ⚠ **Warning**
>
> This block is mandatory for the use of the transmitter. For more information on the stick configuration, see the Stick - Integration examples section of this manual.

- **Outputs**

  Raw data: Raw stick channels.


  Y data: Stick channels after transformation (matrix and offset).

  Status: TRUE if the stick is read without timeouts, FALSE otherwise.

  RXrate: Stick update frequency rate (Hz).


Configuration menu:

- **Sources**: In this tab the user can set multiple transmitter inputs with the respective **priority**, **from top to bottom**.

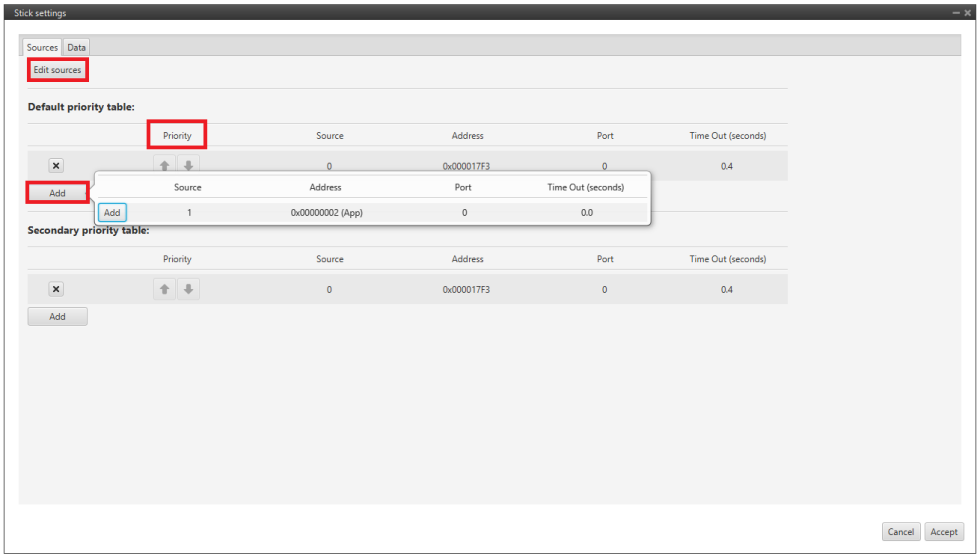

Stick block configuration - Sources

- **Priority table**: By default, one priority table is set. The user can configure a second one.
  - **Priority**: Use arrows to determine the priority of the selected source. Priority is set **from top to bottom**.
  - **Add**: An already defined source can be added to the priority table.
- **Edit sources**: New sources can be defined in this menu.

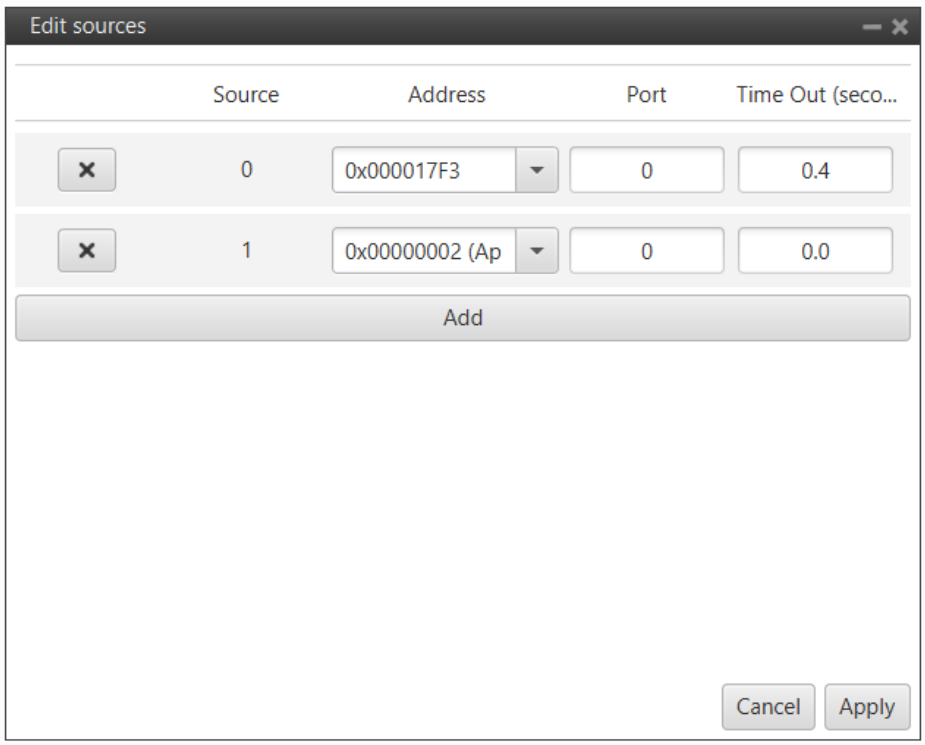

Edit sources menu

- **Source**: It is the order in which sources are created in this menu. This **does not set the priority**.

- **Address**: This defines the source from which the stick information is taken from. The following options are the most common:
  - App 2: Means that the information is coming from the **stick widget** of **Veronte Ops**.
  - Local: Represents the **actual selected autopilot** (i.e. the transmitter is connected to it).
  - Any: The information comes from all linked autopilots.
  - 1x v4.X XXXX: Means the information is coming from a **particular autopilot**, which needs to be visible in **Veronte Link**.

  For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.
- **Port**: From each source it is posible to have more than one stick information, e.g. two transmitters can be connected to the same autopilot.

  The port is an identifier to distinguish them.
- **Time Out**: This defines the time to consider the source inactive. Therefore the incoming stick information will be always the one from the source with higher priority and active. Once it is considered inactive the following active source will send its stick information.

  The lower this value, the more frequent the stick will be lost. We **recommend** a value of **0.4 s**.


- **Data**: In this tab the user can configure *Mix Matrix*, *Raw channels* and *Offset*.

  The movement that the pilot makes on the stick produces variations on a vector called $(Raw\ channels)$ of length n, where n goes from 1 to the total number of employed transmitter channels. The values reached by the components of $(Raw\ channels)$ are limited between 0 and 1. These stick movements need to be processed to produce the input signals that will go into the control algorithm, in the case of arcade mode; or directly into the servos for manual mode.

The process begins by mapping each one of the sticks inputs to PWM signals into a vector called $Output$ of length m, where m goes from 1 to the total number of actuators.

The full definition of $Output$ is $Output = (Mix\ Matrix) \cdot (Raw\ channels) + Offset$, where:


- $(Mix\ Matrix)$ is a matrix that transforms raw stick inputs $(Raw\ channels)$ to PWM signals $Output$.
- $Offset$ is an offset vector, which corrects the $Output$ vector.

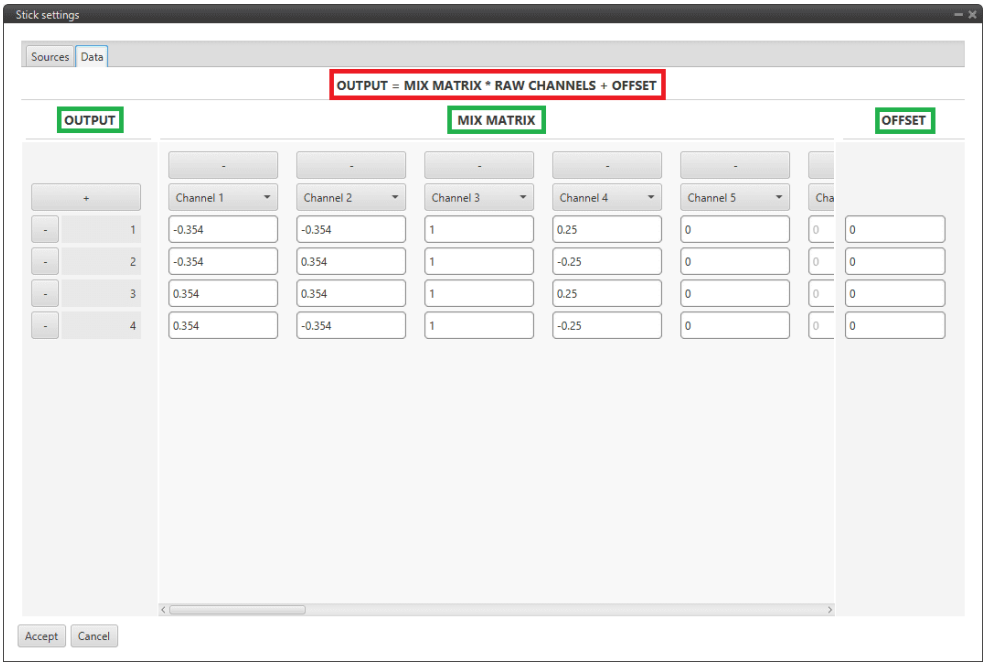


Stick block configuration - Data

Execution Flow blocks

Execution Flow blocks allow to switch sections of a program during its execution among a set of pre-configured options.

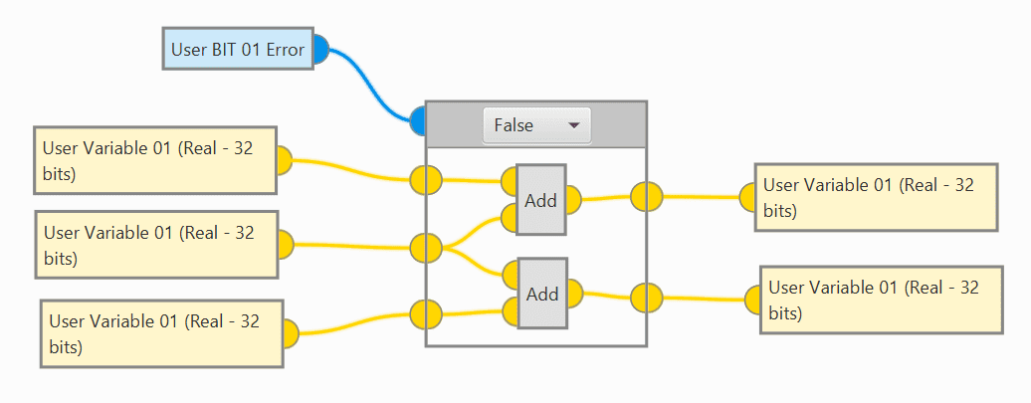

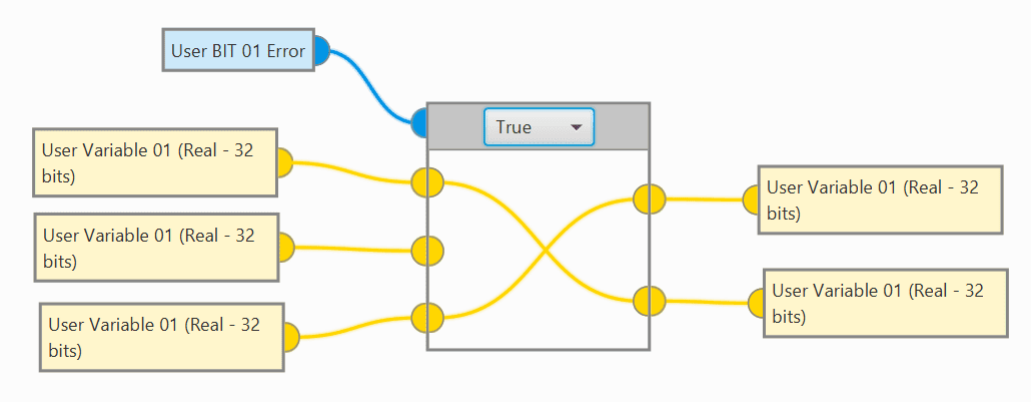


Execution flow blocks

Execution flow blocks are divided into 2 different types of blocks: On focus block and Switch blocks.

On focus block


The On Focus block outputs a boolean value, which is **only True the first time** the block is executed.

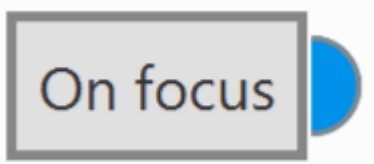

On focus block

- If used inside a **Switch Block**, the value will be **True** each time the case is selected.
- On Focus can be used to **trigger actions** or **initialize variables** whenever a case is switched.


The following example would initialize **User Variable 01** to **7** whenever **Landing** phase is selected:

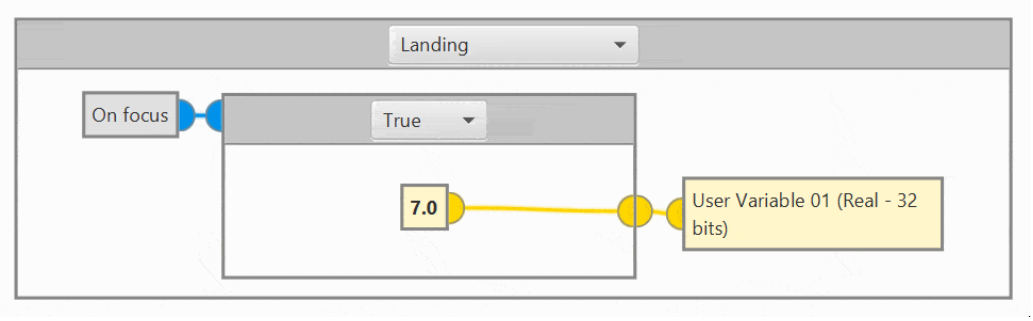

On focus block example


Switch blocks

- **If-Else Switch block**: Choose between two cases based on the state of a boolean variable.

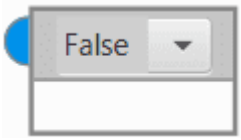


If/Else switch block

It is possible to swap the blocks of each case (False/True) by simply **right-clicking** inside an if/else switch block and selecting '**Invert**'.

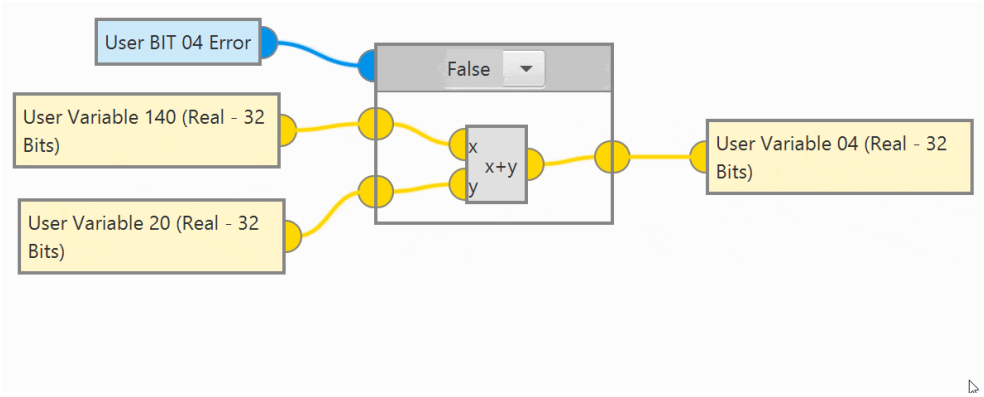

Invert created blocks

- **Integer Switch block**: Choose a case based on the value of an integer variable.

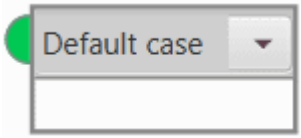


Integer switch block

Right click on the Integer switch block to access the configuration options:

  - **Add Case**: Create a new empty case.
  - **Copy Case**: Create a copy of the current case.
  - **Delete Case**: Delete the current case.
  - **Add Entry**: Add a new **entry** to the current case. An **entry** is a condition under which the case will be selected. The same entry can on only be in one case at a time. Adding an **entry that already exists** will move said entry to the current case.
  - **Delete Entry**: Remove an entry from the current case.

    - **Set as Default case**: The Default case will be executed whenever the switch condition does not match any of the existing entries.
- **Phase Switch block**: Same as Integer Switch, but using Flight Phases as the switch condition.

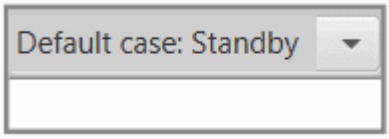


Phase switch block

> ⚠ **Warning**
>
> **Phase Switch and Integer Switch Blocks** will report a '**PDI ERROR**' if they don't have at least 1 case with entries.


Use of switch blocks

- **Add blocks inside**: Drag and drop the desired block inside the Switch block:

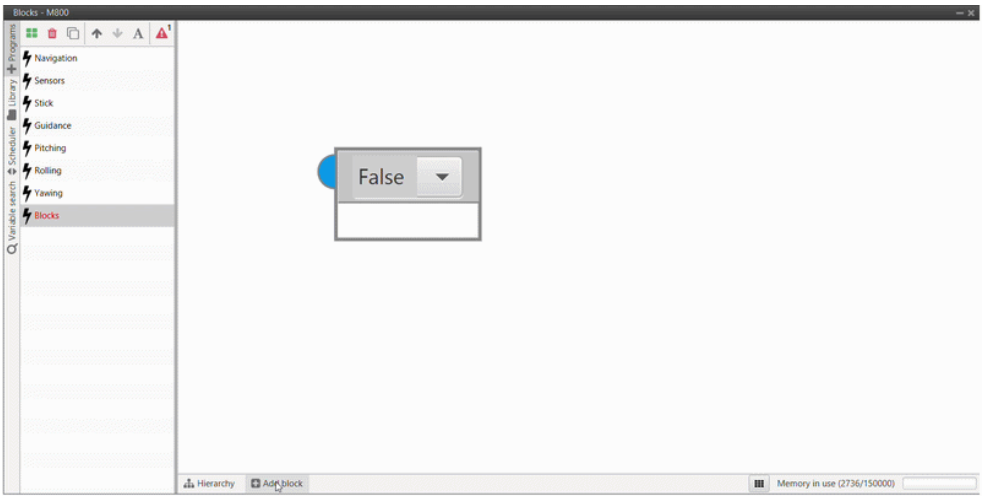

Create a block inside a switch block

- **Input/Output**: **Right click** inside a Switch block and select **add Input/Output**. To **remove** them, **right click** and select **Remove Input/Output**:

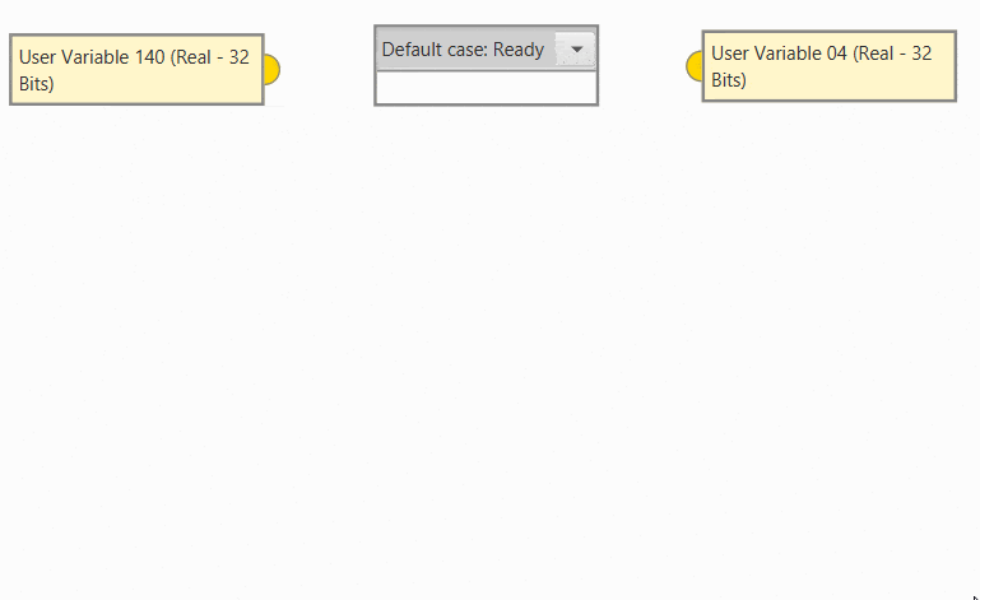


Add/Remove an input/output of a switch block

> **Note**
>
> The size of a switch block depends on the blocks it contains. A switch block will always have the size of the **biggest** of its existing cases.


External blocks

This function allows you to create a custom block.

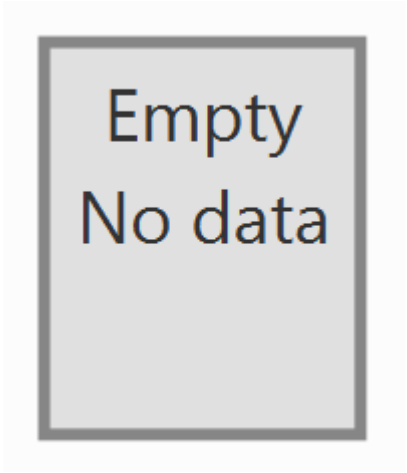


External block

Below, it is possible to modify the custom block.

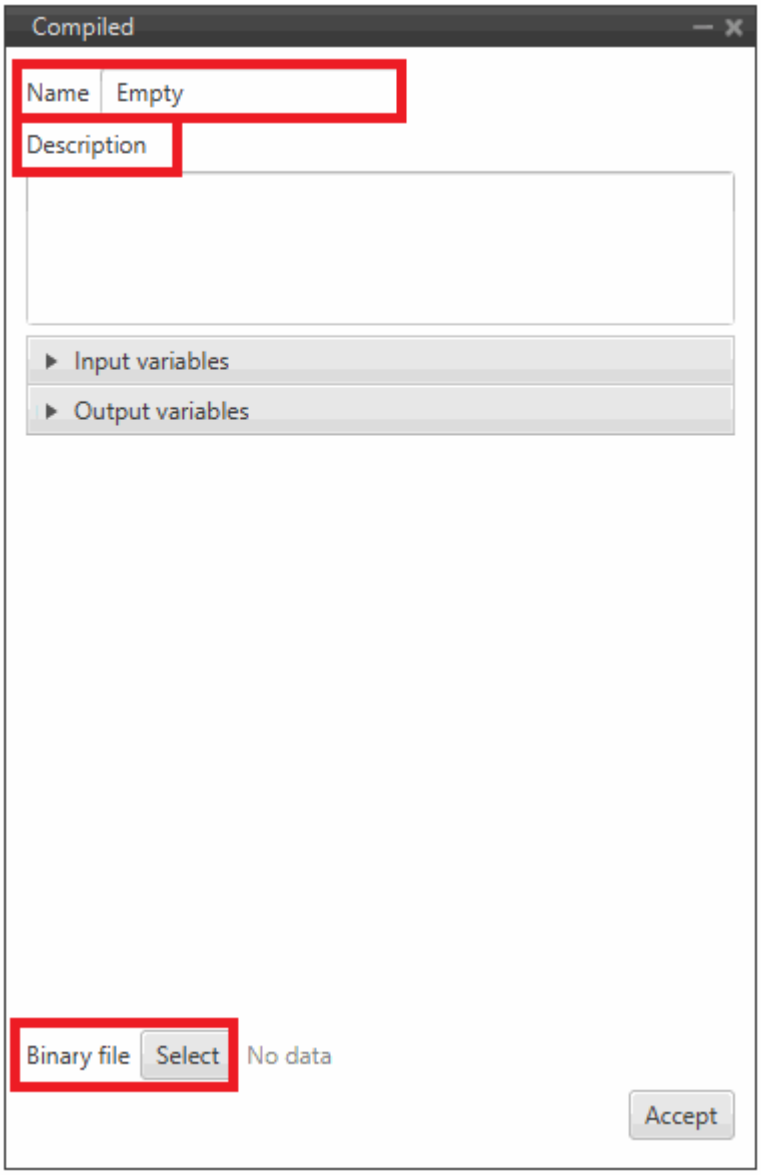


External block - Configuration

- **Name**: Enter the desired name for the block.
- **Description**: Insert the description of the block.
- **Binary file**: Upload the code file in binary format.

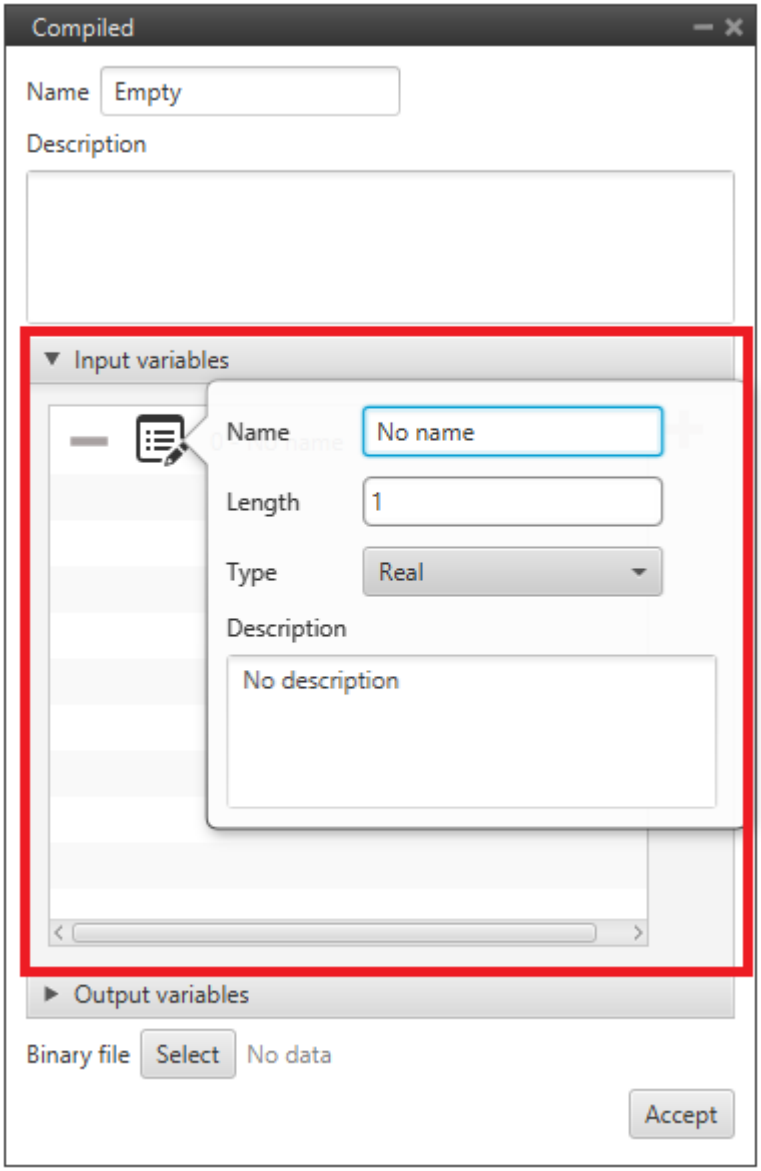

External block - Input

- **Name**: Enter the desired name for the input variable.
- **Lenght**: Assign the variable length, which is determined by the variable type introduced.
- **Type**: Choose from the following options: Real, Unit 16 or Boolean.
- **Description**: Insert the description of the input.

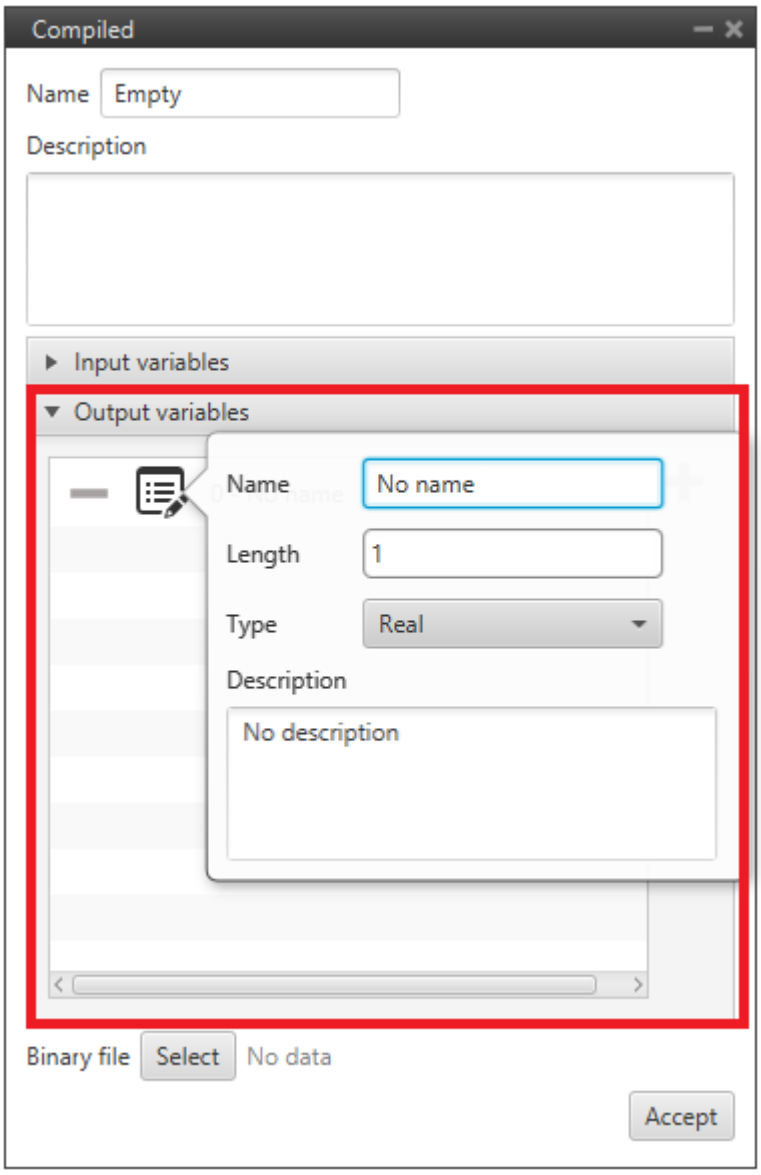

External block - Output

- **Name**: Enter the desired name for the output variable.
- **Lenght**: Assign the variable length, which is determined by the variable type introduced.
- **Type**: Choose from the following options: Real, Unit 16 or Boolean.
- **Description**: Insert the description of the output.

> **Note**
>
> For input and output length refer to Data Source/Sink blocks section of this manual.

Guidance blocks

When defining a guidance system, we refer to a set of commands sent to the platform controller in order to make it carry out a certain task. This task could be follow a line, climb, land, hold one of its states at a certain value and so on.

In **1x PDI Builder**, it is possible to combine a series of guidances to create custom flight phases that will make the aircraft perform in a given way.

Each **Guidance block** contains a **set of parameters to be configured**. All of them are presented as follows.

Name	Description
Climb	Makes the aircraft climb from the start of the phase to another altitude.
Cruise	Makes the aircraft follow a determined route created by the user.
Envelope	Used to define the safety limits of the aircraft, ensuring variables like speed and pitch stay


Name	Description
	within a secure operational range
GENEX	Generic guidance law block used to generate reference trajectories or control signals based on customizable mathematical parameters.
Guidance	The main block for configuring the flight path logic, determining how the aircraft transitions between waypoints and follows the active route.
Landing	

Name	Description
	Creates the route that the airplane will follow to land.
Modified PNav	Proportional Navigation law with an additional bias or correction factor, often used to improve the intercept path or smooth the approach.
PNav	Proportional Navigation guidance law used to intercept moving targets by keeping the line-of-sight rotation rate at zero.
Rendezvous	Used to create a

Name	Description
	meeting point where the Air unit will approach a second unit (either Air or Ground) within a determined offset.
Taxi	Creates a linear path along the runway that is followed by the aircraft.
VTOL	Vertical take-off and landing.
Yaw current/ heading/ north	Indicates the behavior of the platform in the yaw axis.

Guidance blocks common configuration

All the guidance blocks presented below, have the **same inputs and outputs**, and some **common configuration parameters**.

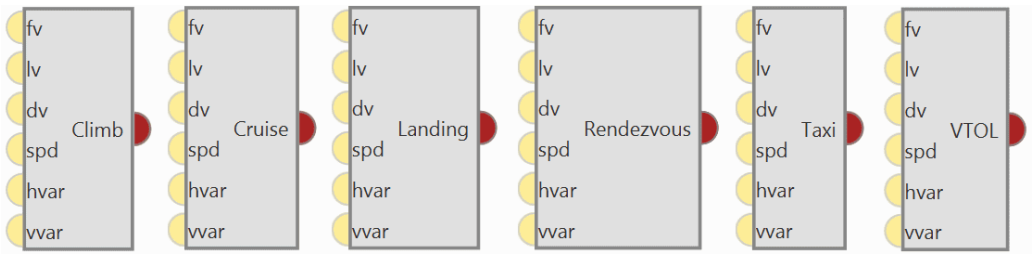

Common guidance blocks

- **Inputs**

  (Optional) **fv**: **First** component of desired 'hover here' arcade velocity in the horizontal plane. The actual direction of this speed depends on the selected arcade axis.

  (Optional) **lv**: **Second** component of desired 'hover here' arcade velocity in the horizontal plane. The actual direction of this speed depends on the selected arcade axis.

  (Optional) **dv**: Down (vertical) 'hover here' desired arcade velocity.

  (Optional) **spd**: **Arcade cruise speed increment**.

  (Optional) **hvar**: Scale variable for the T-Sched PID of the horizontal guidance.


  (Optional) **vvar**: Scale variable for the T-Sched PID of the vertical guidance.

- **Output**

  Pin 0: Guidance data for the **Guidance Computation block**.

  > ⚠ **Warning**
  >
  > To produce a guidance computation, these blocks must be connected to the Guidance Computation block via this output.

- **Configuration menu**:

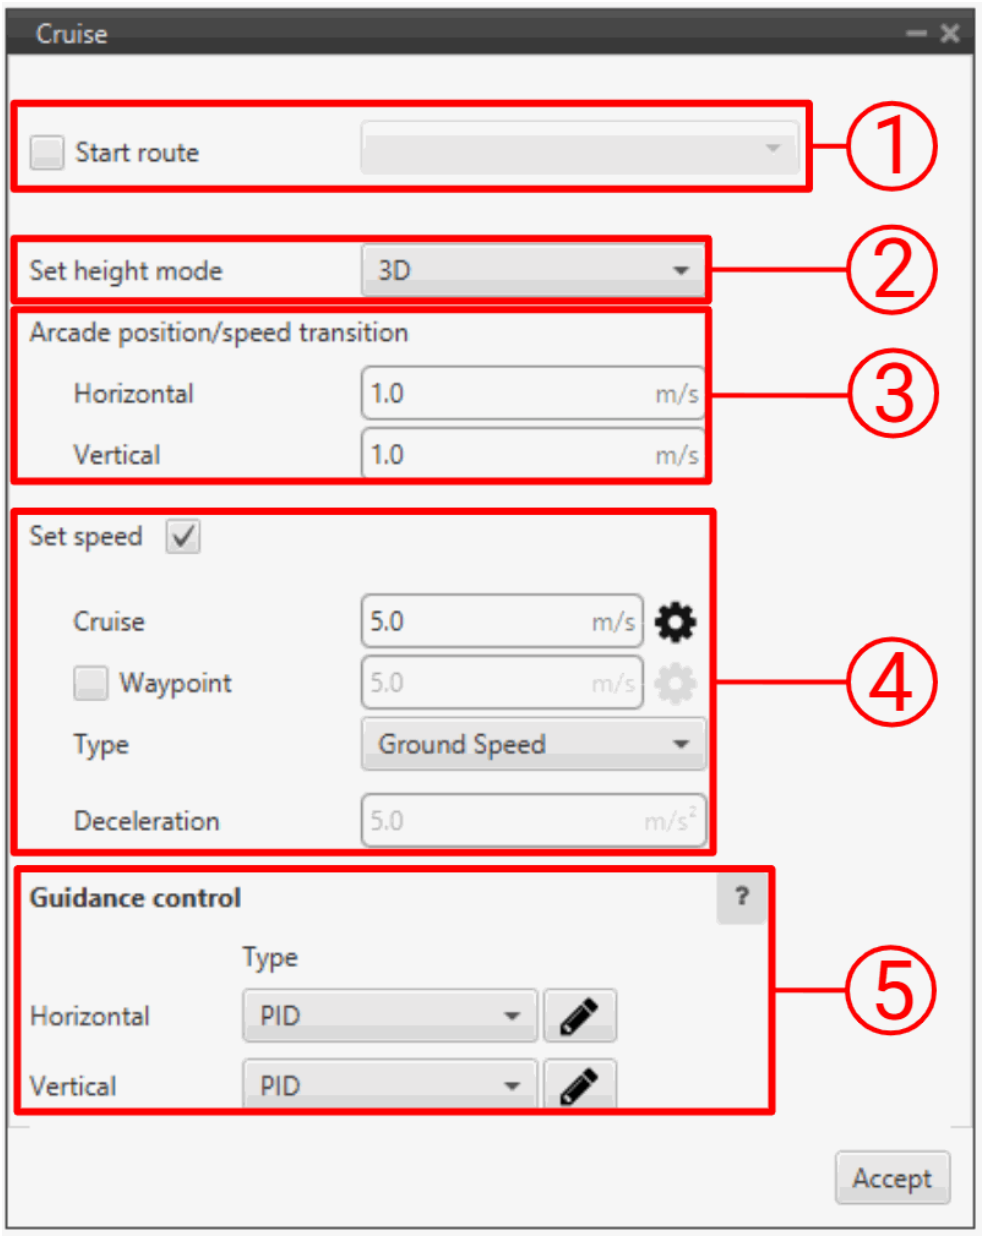

Common guidance blocks configuration

All the parameters that define the guidance are detailed:

1. **Start route**: This option allows the user to select the first waypoint to be flown by the aircraft. The user should first enable this option and then select the desired path to bo the first-of-the-route.
2. **Set height mode**: Height mode indicates how the aircraft will perform the defined path. There are three possible height modes:
    - **2D mode**: If this mode it is selected, the platform will follow the predifined route without taking into account the altitude of the waypoints, it will keep the altitude that it has at the moment it enters in the guidance.

- **2.5D mode**: The vehicle will follow a 3D trajectory that connects both waypoints. However, it will give **priority to horizontal guidance**.

  Autopilot 1x will try to adjust its position and altitude to the path (both horizontally and vertically), but if for any reason it cannot reach the altitude of the final waypoint, it will considered that it has been reached if its position matches the position of the waypoint.
- **3D mode**: The vehicle will follow a 3D trajectory that connects both waypoints. In this case, **horizontal and vertical guidance have the same priority** level. This means that Autopilot 1x will not consider that a waypoint has been reached until its position and altitude match the waypoint's ones.

  As this type of guidance may result in a vertical flight, it is **reserved for multicopters or hybrid platforms**.

3. **Arcade position/speed transition**: In Arcade mode the trajectory generated (position) is not followed and instead the aircraft moves according to the commanded speed.

   The **Horizontal** and **Vertical speed parameters** serve as the upper thresholds for when the aircraft guidance should be based on position, even in Arcade mode. This parameters are mainly **useful** for platforms like **multicopters**.
4. **Set speed**: This option sets the speed that the vehicle will have during the manoeuvre.
   - **Cruise**: Lets the user set the velocity modulus of the guidance. This velocity can be slightly modified by the autopilot control algorithms.
   - **Waypoint**: If enable, it indicates the speed at which the platform will reach the waypoints of the path, i.e. it will travel along the path with the speed indicated in the option **Cruise** and then it will decelerate or accelerate to the speed indicated here.
   - **Type**: Defined speed. Can be **IAS** (Indicated Airspeed) or **Ground speed**. Normally, **IAS** is used for **airplanes** and **Ground speed** for **multicopters**.

- **Deceleration**: This can only be configured when **Waypoint** option is enabled. Maximum allowed acceleration/deceleration to meet the desired velocity.


5. **Guidance control**: These PIDs are defined to guarantee stability of guidance loop, they are used to calculate the Desired Speed Vector based on the current position error.

   Then, the resulting vector, along with the Guidance parameters, will be used to generate the Desired variables (ID 100 - 258 Rvars) that can be used as inputs for the control loops.

   For both **Horizontal** and **Vertical** guidance, the user can choose the **type of control** between PID or T-Sched PID.

   Besides, by clicking on the  icon of both guidance, a pop-up window will appear where the control parameters should be entered, for more information on the latter check Control blocks.

   In the horizontal-position PID (see image below), North-East current position of the aircraft is compared to the desired position. The output of the PID controller is going to be a ground speed in the North-East plane, which translates into a desired lateral and front ground speeds in body axes. The same logic applies for the vertical-position PID.

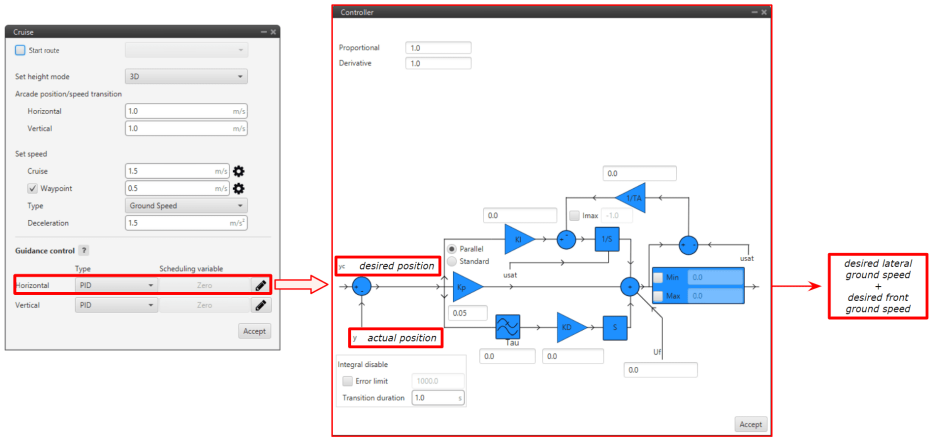


Horizontal Position PID


However, the algorithm is more complex than this simple PID.

For tuning, it is usual **to use only proportional term in the PID**:

- A **high proportional** will **converge faster** to the desired position **but with overshoot**.
- A **lower proportional** will make the **arrival** to the desired position **slower** but it is a **smooth convergence**.

Next figures shows this behavior with $Kp = 0.2$ and $Kp = 0.02$.

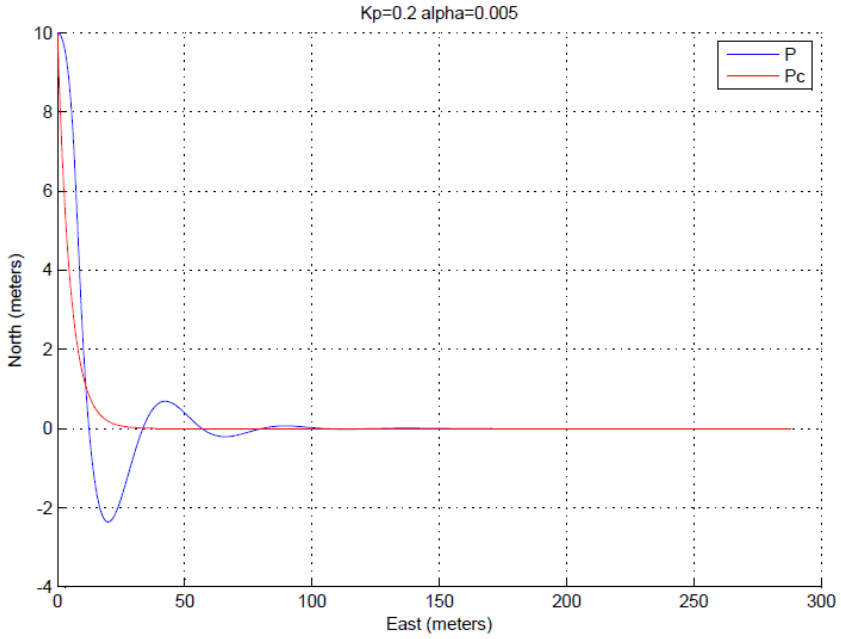

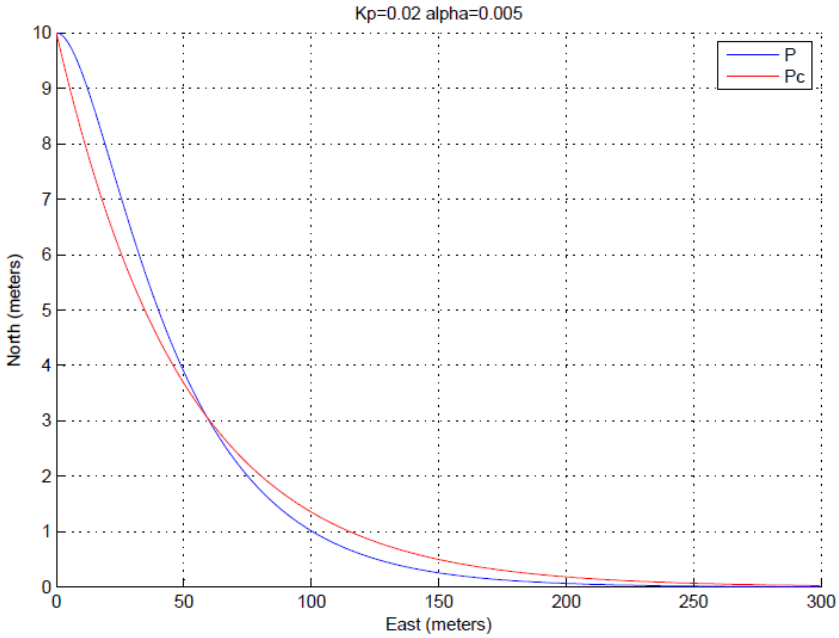

PID Proportional gains

Guidance-generated Variables

The guidances contained within Veronte Autopilot 1x generate a series of variables that are later used in the control loops as the input of the PIDs. Generally, variables named as Desired are used in this Guidance.

The list of variables is the following:


- Desired position.
- Track position.
- Track state (current patch, last patch).
- Desired latitude, desired longitude, desired WGS84, desired MSL, desired AGL.
- Desired velocity.
- Desired front groundspeed, desired lateral groundspeed, desired velocity down.
- Desired tangential acceleration.
- Desired IAS.
- Guidance north error.
- Guidance east error.
- Guidance down error.
- Desired body velocities.

- Desired velocities north, east, down.
- Desired heading, FPA and bank.
- Route-guidance distance - tangential component.
- Route-guidance distance - horizontal component.
- Route-guidance distance - perpendicular component.

Climb

Climb guidance is used to make the aircraft climb from the start of the phase to another altitude. Commonly, this guidance is used after the take-off to fly from the ground to cruise altitude through a loiter point, but it can be employed for other purposes.


Climbing guidance generates a three-dimensional trajectory.

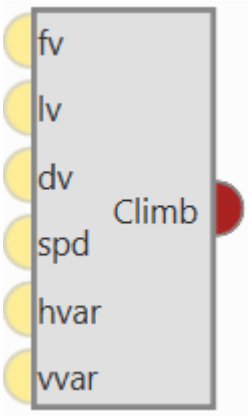

Climb block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Configuration menu**:
  The climbing path is automatically generated and is not directly shown to the user until the aircraft enters this phase. This is due to the algorithm recalculating the path each time to take into account the aircraft's actual flight conditions and the user's indicated parameters.

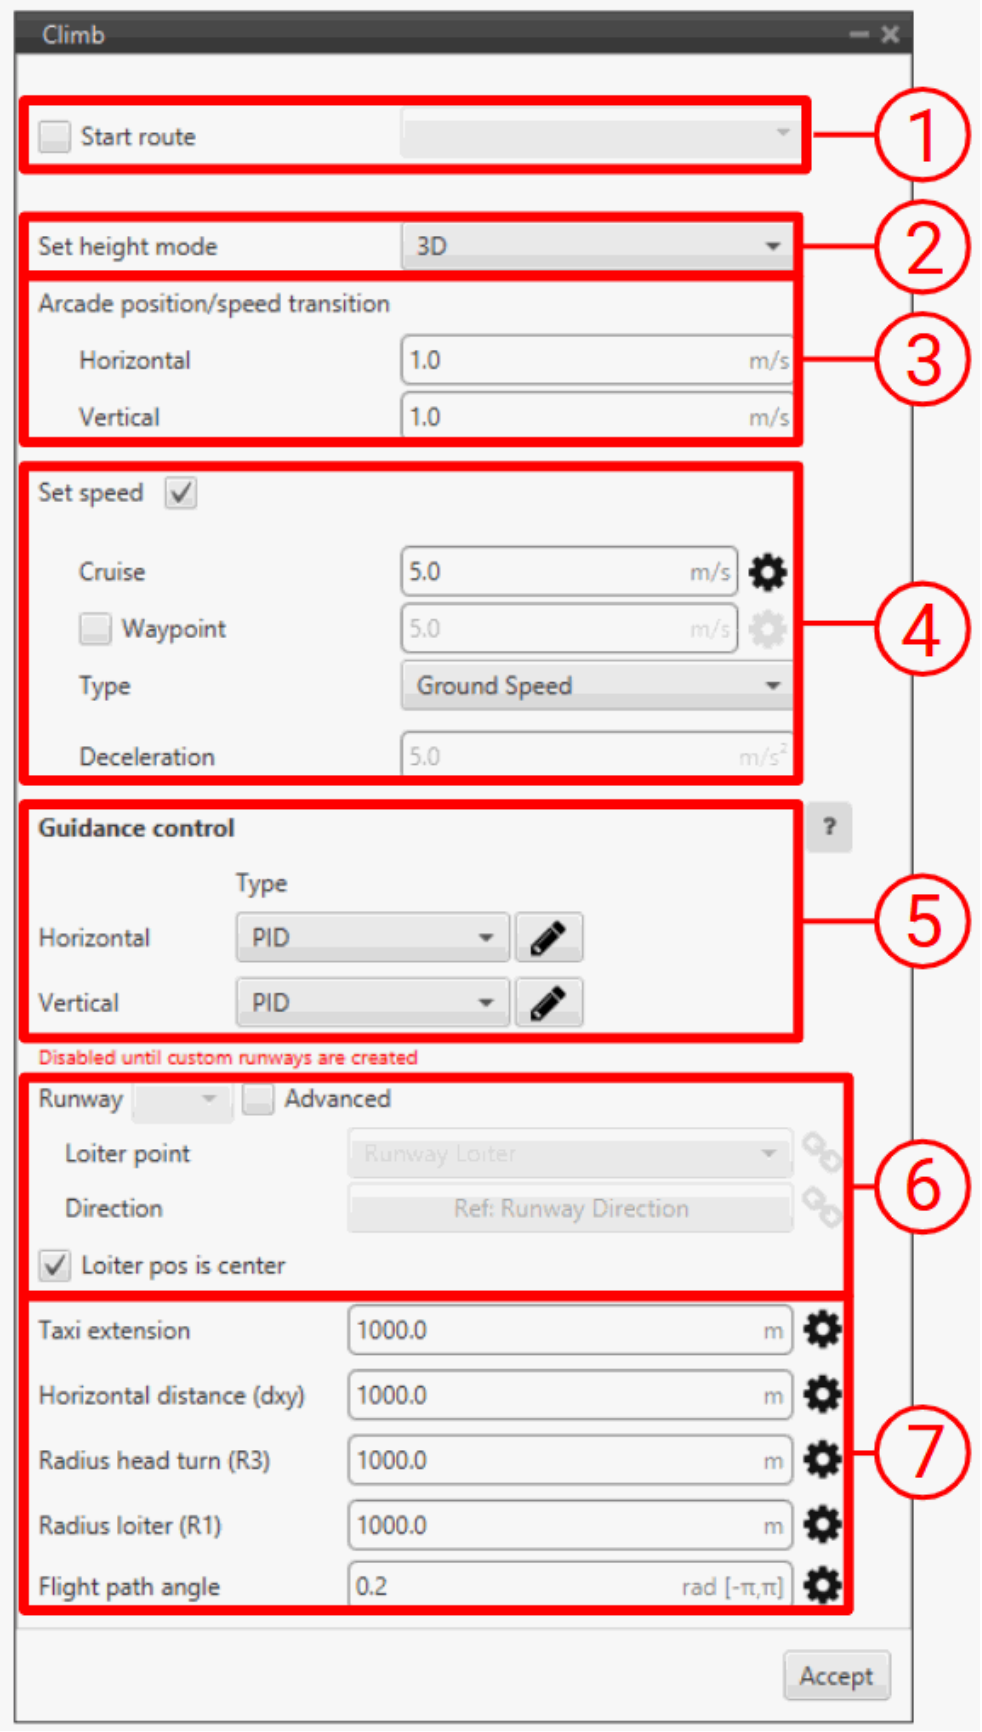


Climb block configuration


Below, the parameters shown above are going to be described. Later, a brief description of the algorithm and its behavior in different possible situations will be presented:

1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
6. **Runway and Loiter position**: Here the user can define the loiter and runway positions and direction. However, the default option is to define them in the **Runway option** of **Veronte Ops** (for more information, see Veronte Ops manual).

   If the Advanced option is chosen, then the user can define these parameters. By clicking on

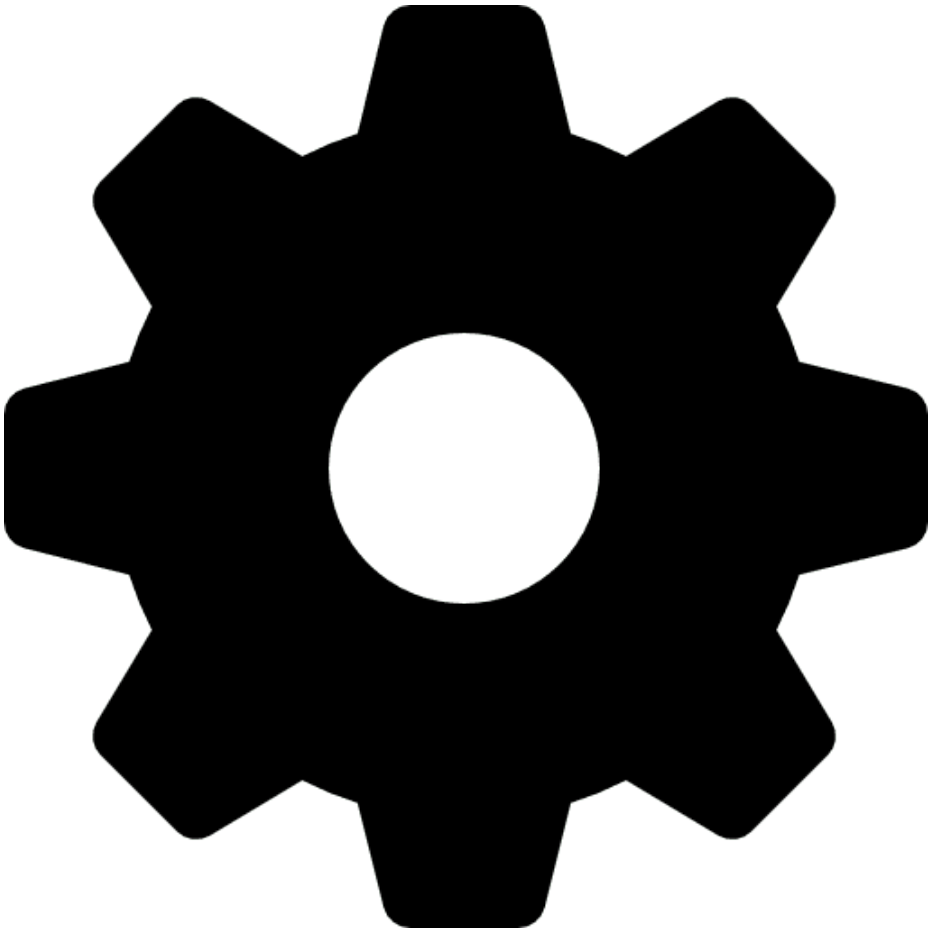


or

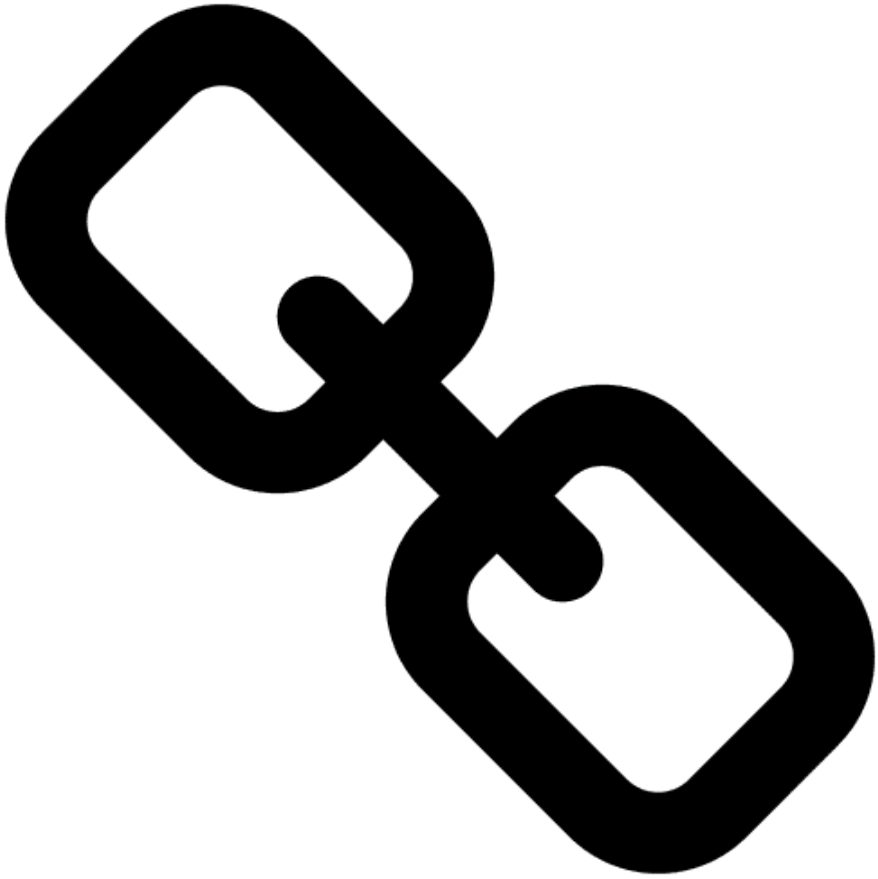


different

options will be displayed:

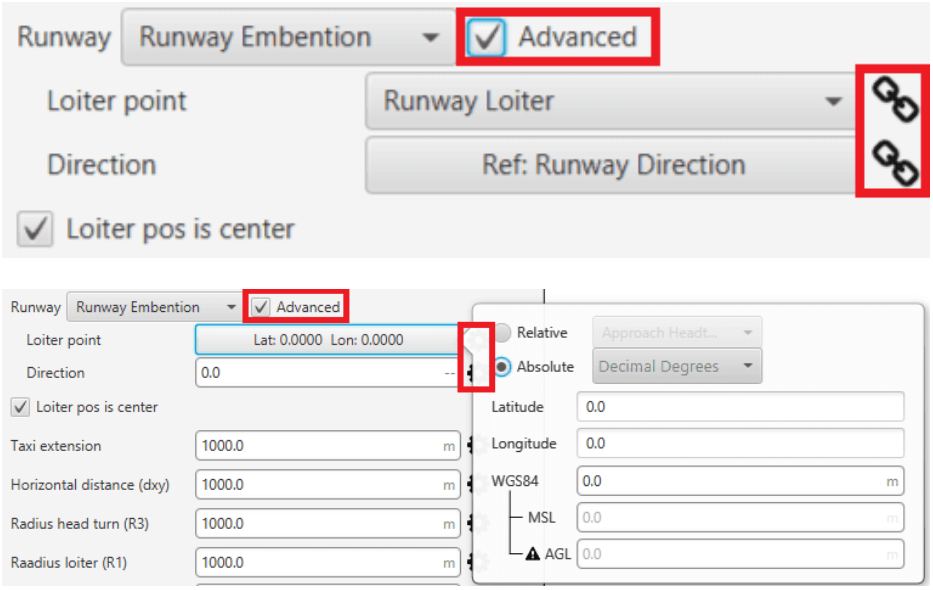


Runway and Loiter Position Options

- **Loiter point**: Defines the loiter point. The two available options are:

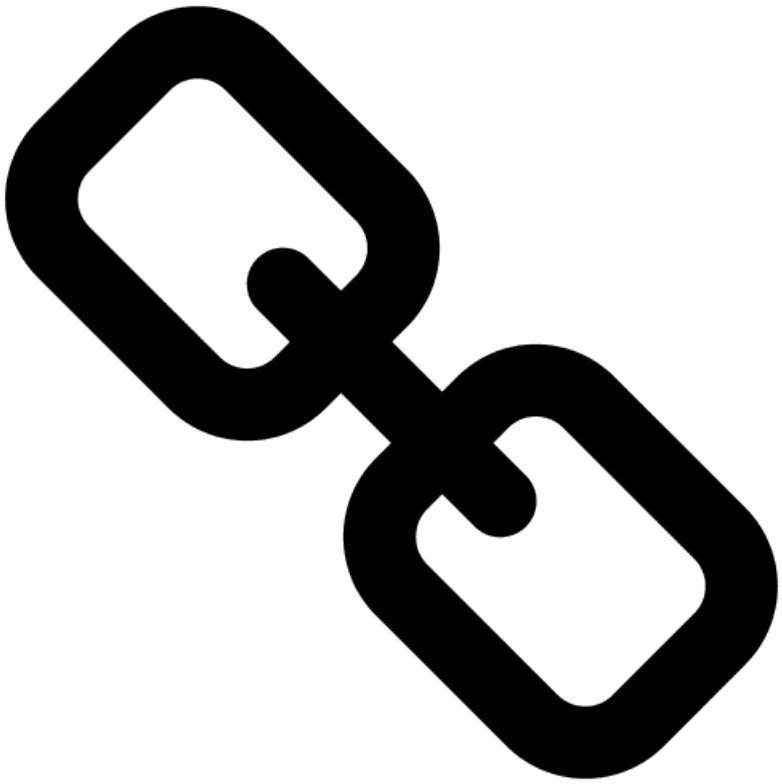


icon selected: By default, this point is the runway's loiter. But the user can select in the drop-down list any other previously defined point.

This includes waypoints defined in the Mission (in **Veronte Ops**), among many others.

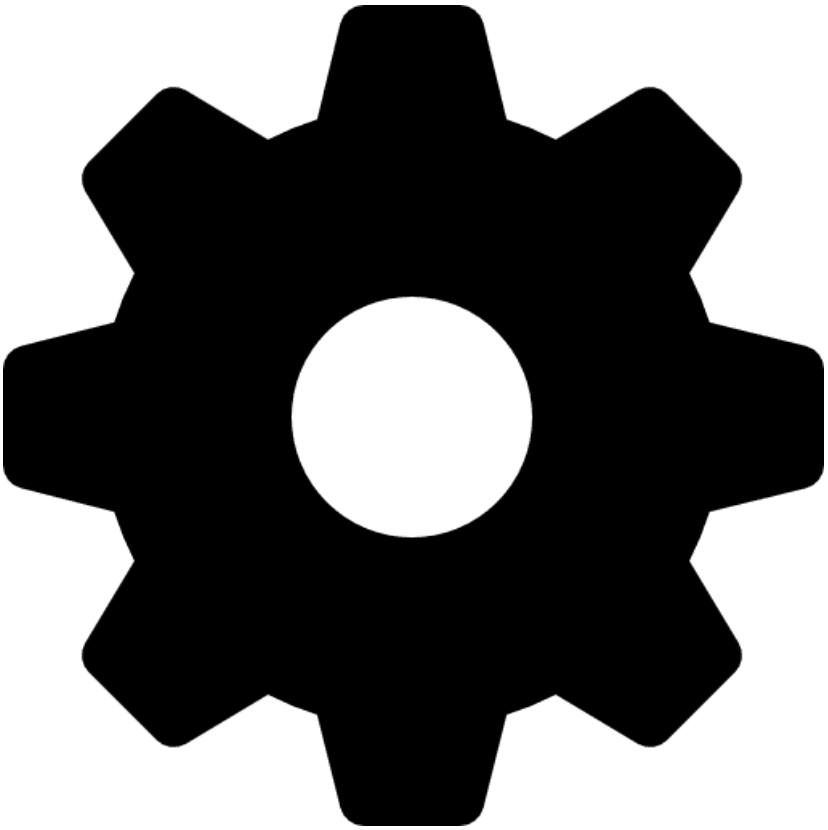
 icon


selected: Alternately, the user can manually define the Loiter point. Then it can be configured in two ways:

- **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude, longitude and altitude (being possible to define this last one with respect to the ellipsoid, WGS84, to the sea level, MSL or to the ground, AGL).

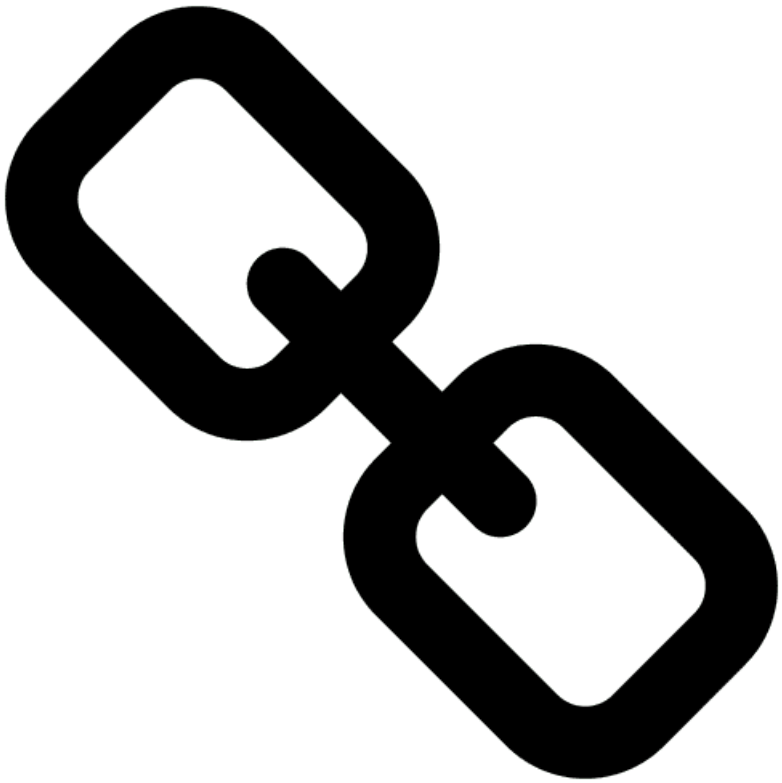- **Direction**: Defines the runway direction. Again, there are two available options:
  -  icon

    selected: By default, it is the same as the selected runway. It can be also chosen from a list of options including runway direction, tailwind direction, etc.

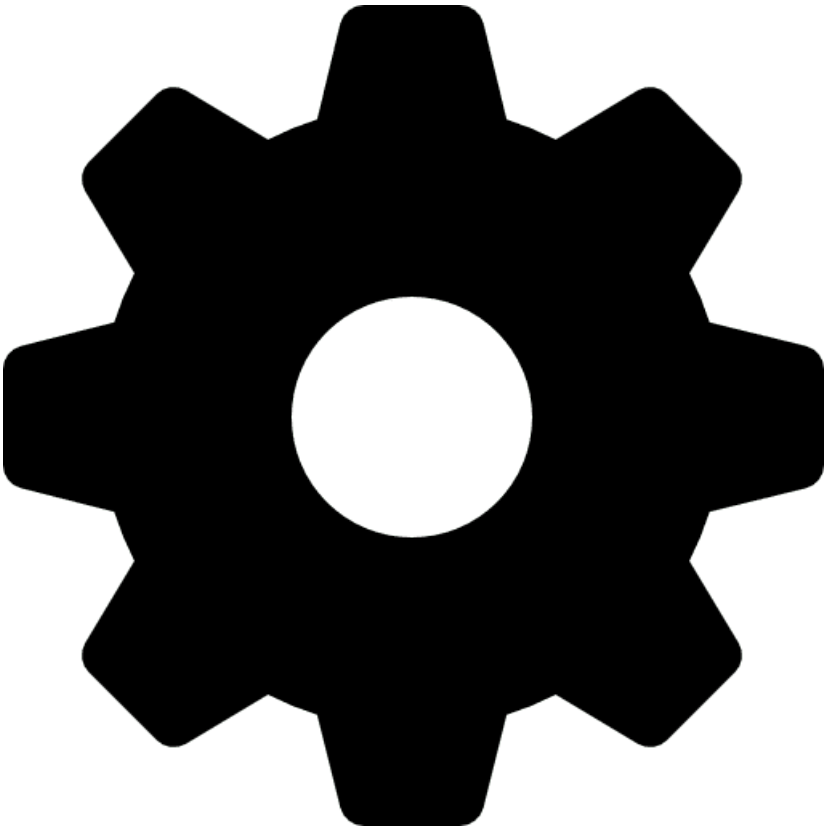-  icon selected: Alternately, it can also be defined as an angle with respect to the magnetic north.
- **Loiter pos is center**: If this box is enabled, the defined loiter point will be the center of the loiter circular trajectory. In case of not, the circular loiter trajectory will pass through that point.

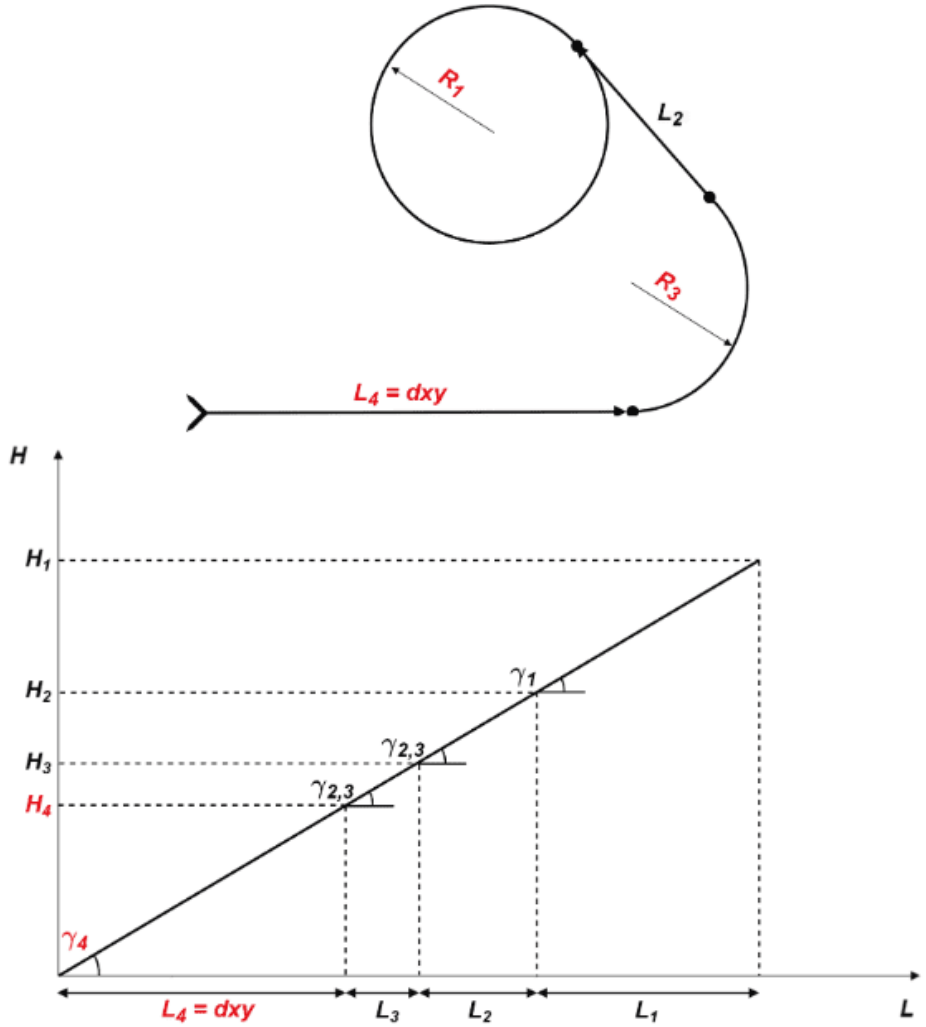


Climb route top and front views with parameter identification

7. **Route**: Here is where the user can set some of the the climbing path parameters (those highlighted in red on the above diagram).
   First, the user-defined parameters are described and then, some considerations on the behavior of the climb algorithm are explained:
   - **Taxi extension**: This parameter does not apply to this algorithm.
   - **Horizontal extension (dxy)**: Absolute ground distance of the first path, L_4 . From the start of the climb to the start of the turn that faces the loiter path. This distance will remain fix always and it will also fix L_4 path's final point height, H_4 . More information below.
   - **Radius Head Turn (R3)**: Radius of the turn to head the platform towards the loiter.
   - **Radius loiter (R1)**: Radius of the ascending helix path to reach the loiter height.


- **Flight Path Angle**: The FPA (γ_4) is the angle at which the aircraft will climb. Before the algorithm execution, all Flight Path Angles, γ_i , are equal: $FPA = \gamma_4 = \gamma_{2,3} = \gamma_1$. The algorithm can modify $\gamma_{2,3}$ and γ_1 . In that case, the Flight Path Angle option will serve as the **upper threshold**.

> **Note**
> The rest of the parameters shown in the figure above are calculated automatically by the algorithm (L_1, L_2, L_3, H_1, H_2, H_3, γ_1, $\gamma_{2,3}$).

Each of these parameters can be entered manually or linked to an Operation Guidance defined by the user clicking on

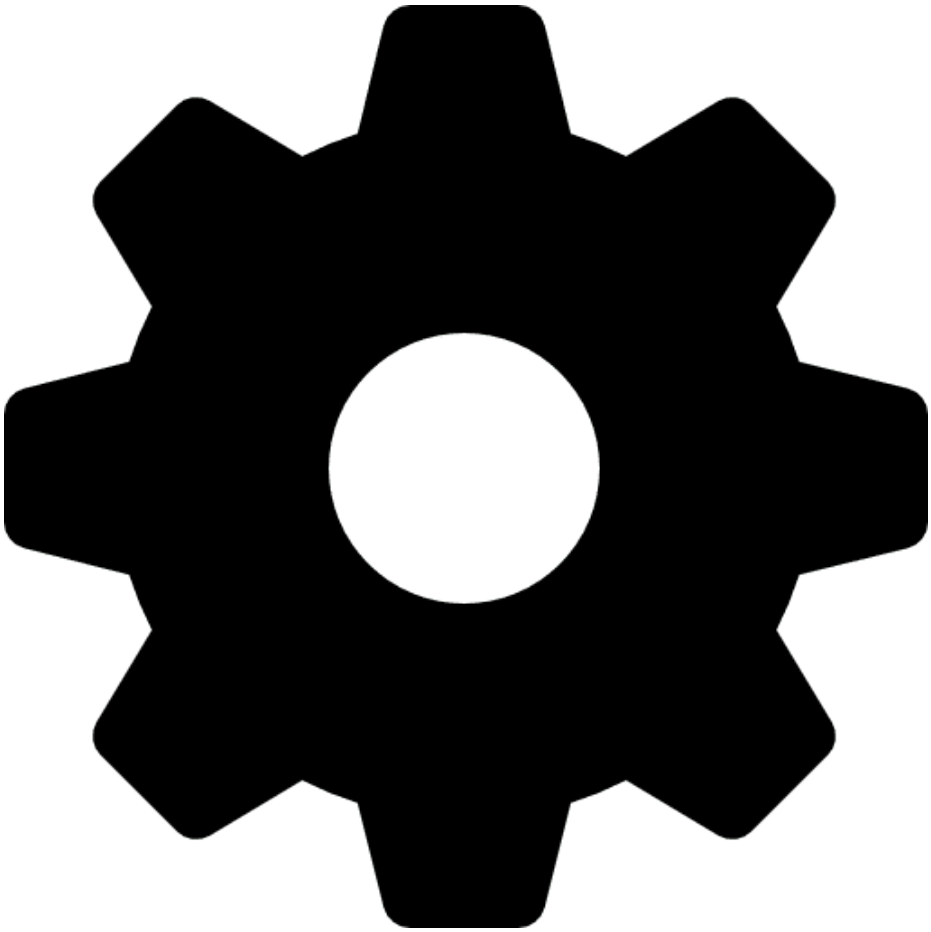

or

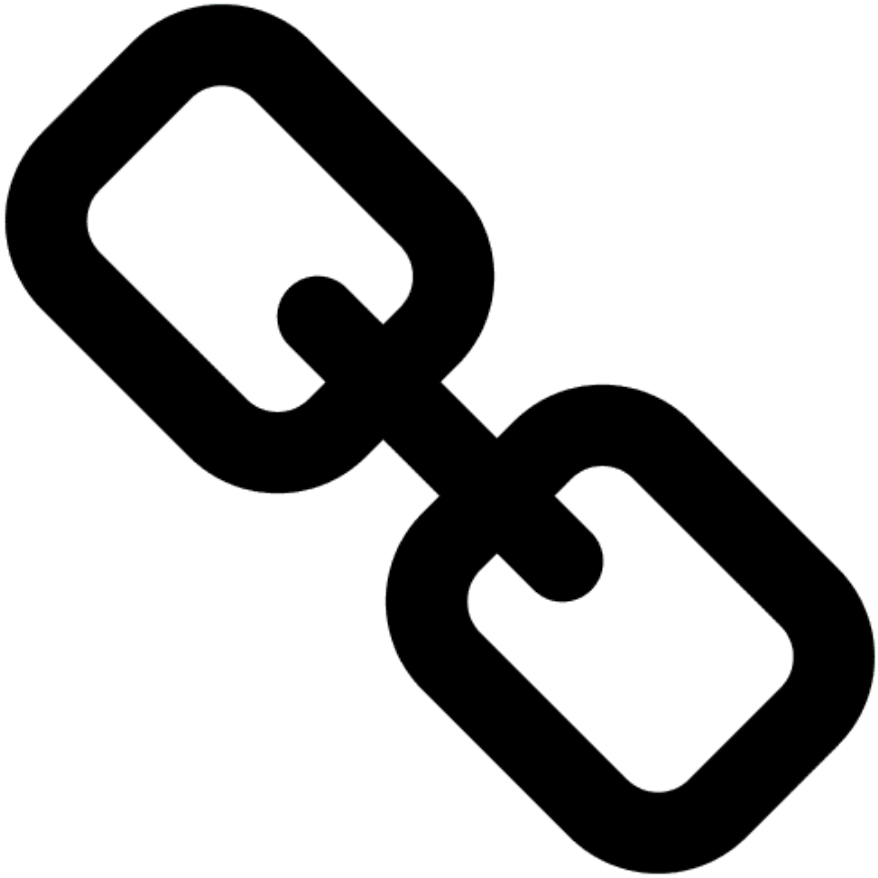

.

Climbing guidance parameters behavior


The climbing track is not fix, the algorithm recalculates the paths each time to take into account the aircraft position and the user's parameters. The trajectory usually has 4 paths, excluding the final loiter path:

- **General trajectory description**:
  - L_4 is the first path. The user can set the horizontal length, dxy, the direction (in Runway direction) and the path's final point height, H_4 with the defined Flight Path Angle. This is very relevant, as seen later. **The path length can not be zero**.

$$\gamma_4 = FPA$$

$$H_4 = dxy \cdot \tan(\gamma_4)$$


  - L_3: Circular turn to head the platform towards the loiter. The user can set the radius, R_3. It is **possible to set this path to zero** clicking on

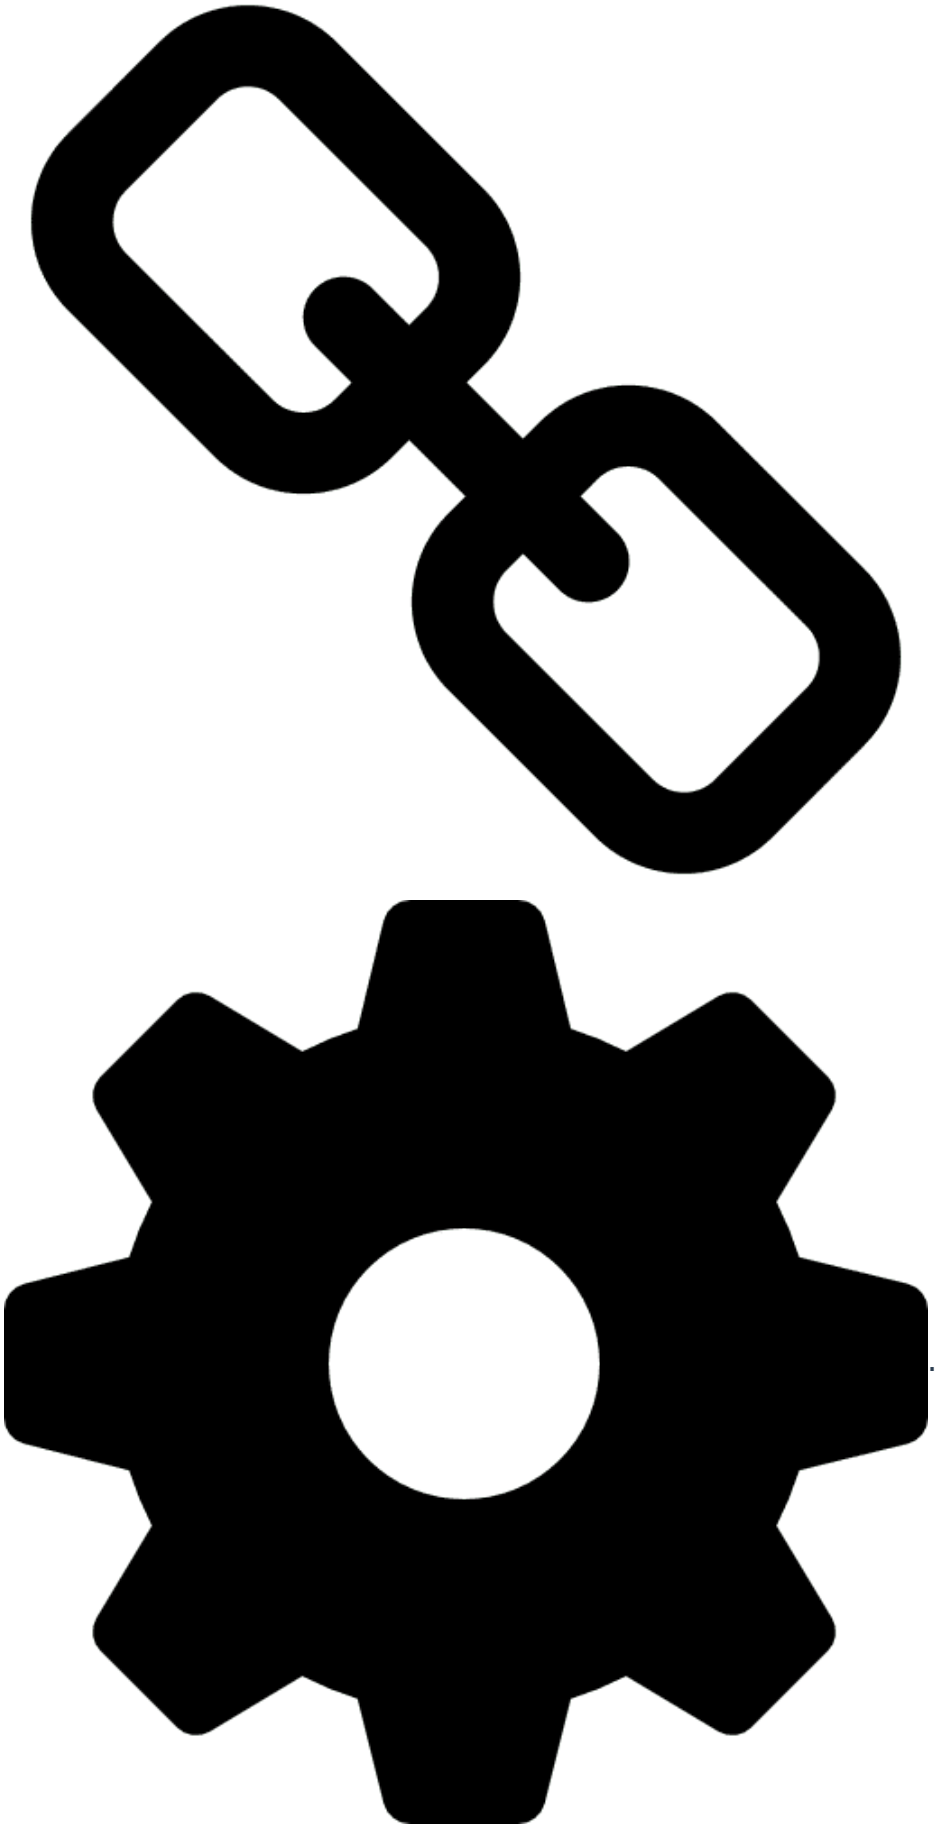

The FPA, $\gamma_{2,3}$, can be modified by the algorithm.


- L_2 : Straight path that reaches the climbing loiter point. This path is **completely automatic generated**. Its FPA, $\gamma_{2,3}$, can be modified by the algorithm.
- L_1 : Ascending helix path to reach the loiter height. The user can set the radius, R_1 .

- **Loiter height effect**: Loiter height's, H_c , modifies the algorithm general behavior. Depending on whether H_c is bigger or smaller than H_2 or smaller than H_4 the algorithm will modify some parameters, in particular the flight path angles:
  1. $H_2 < H_c$: This is the general case, in this situation no corrections will be applied as shown below and $\gamma_{2,3} = \gamma_1 = FPA$.

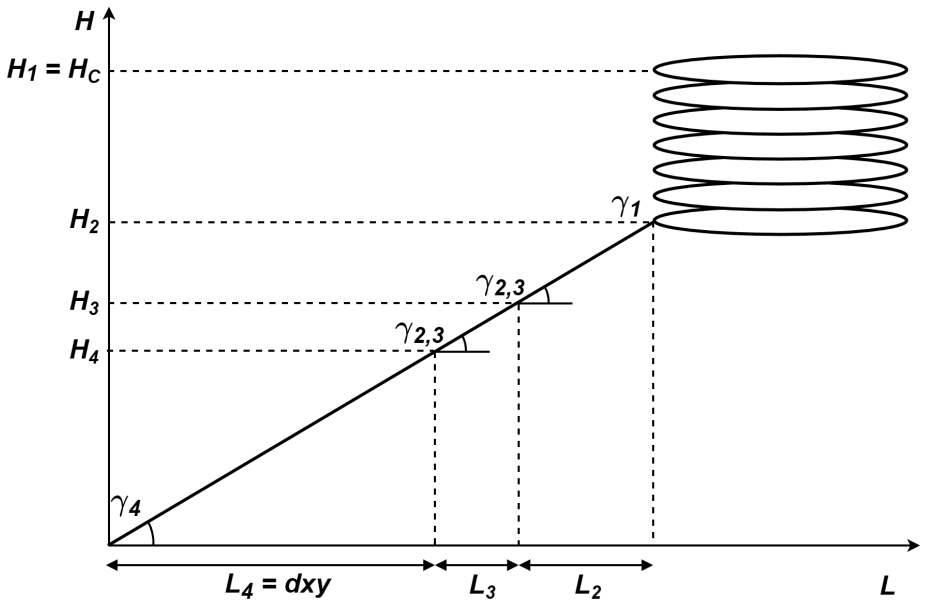


Climbing heights when $H_2 < H_c$

  2. $H_4 < H_c < H_2$: In this case, the algorithm will compute a new $\gamma_{2,3}$ to avoid surpassing the loiter's height and γ_1 will be zero.

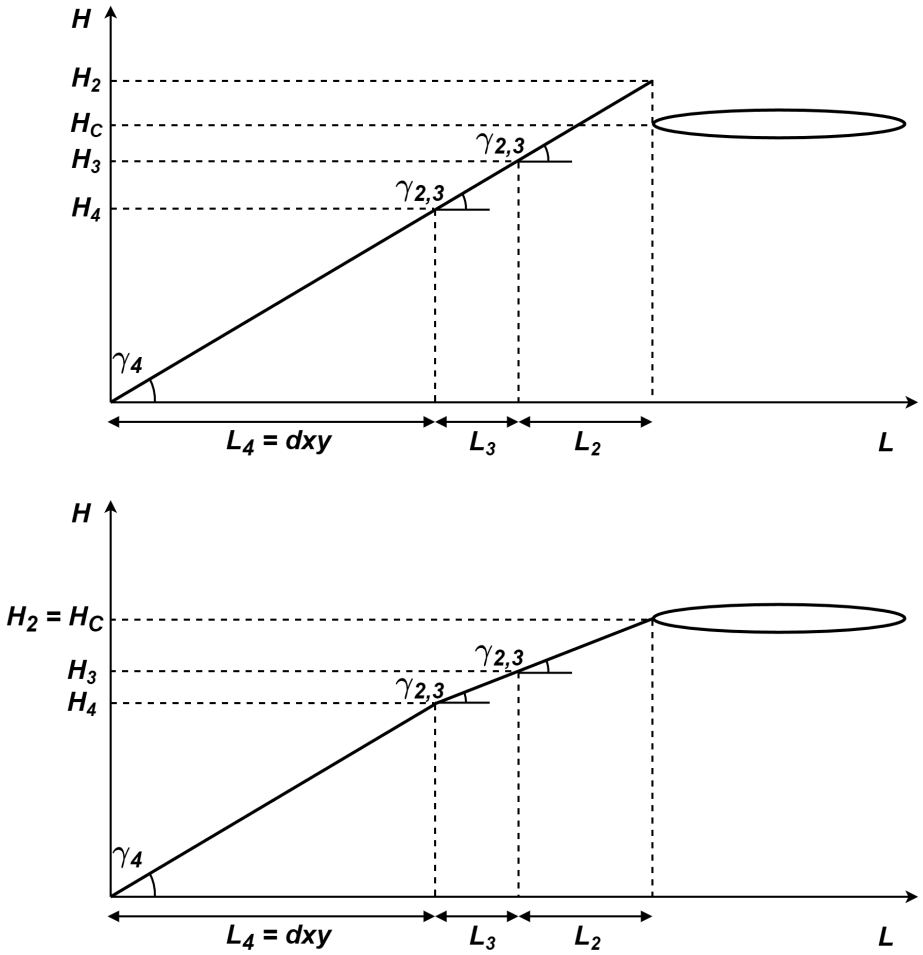

Climbing heights when $H_4 < H_c < H_2$

3. $H_c < H_4$: In this case, the algorithm will force $H_c = H_4$. So H_4 **will be the new loiter height** keeping $\gamma_4 = FPA$ and the other flight paths angles equal to zero, $\gamma_{2,3} = \gamma_1 = 0$.

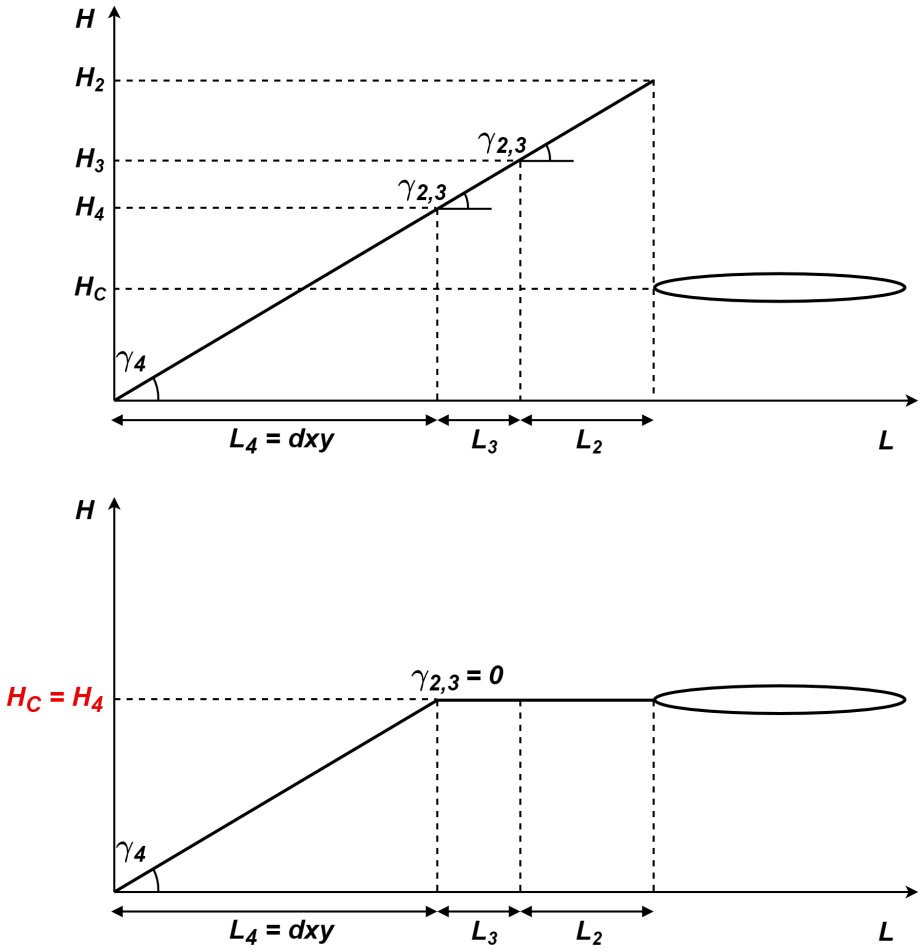


Climbing heights when $H_c < H_4$

Cruise

This phase is used to make the aircraft follow a position-based route created by the user in **Veronte Ops** (for more information, see Veronte Ops manual). This is the principal use of this guidance algorithm, but it can also be used to make the aircraft go to a certain location (e.g, a waypoint) without indicating the complete route, thus being a guidance used to command a movement by position.


Cruise guidance generates a three-dimensional trajectory.

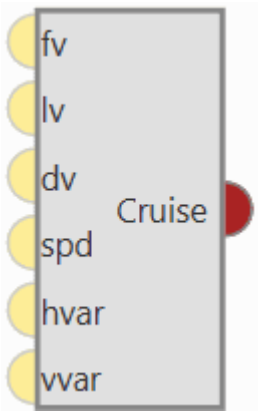

Cruise block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Configuration menu**:

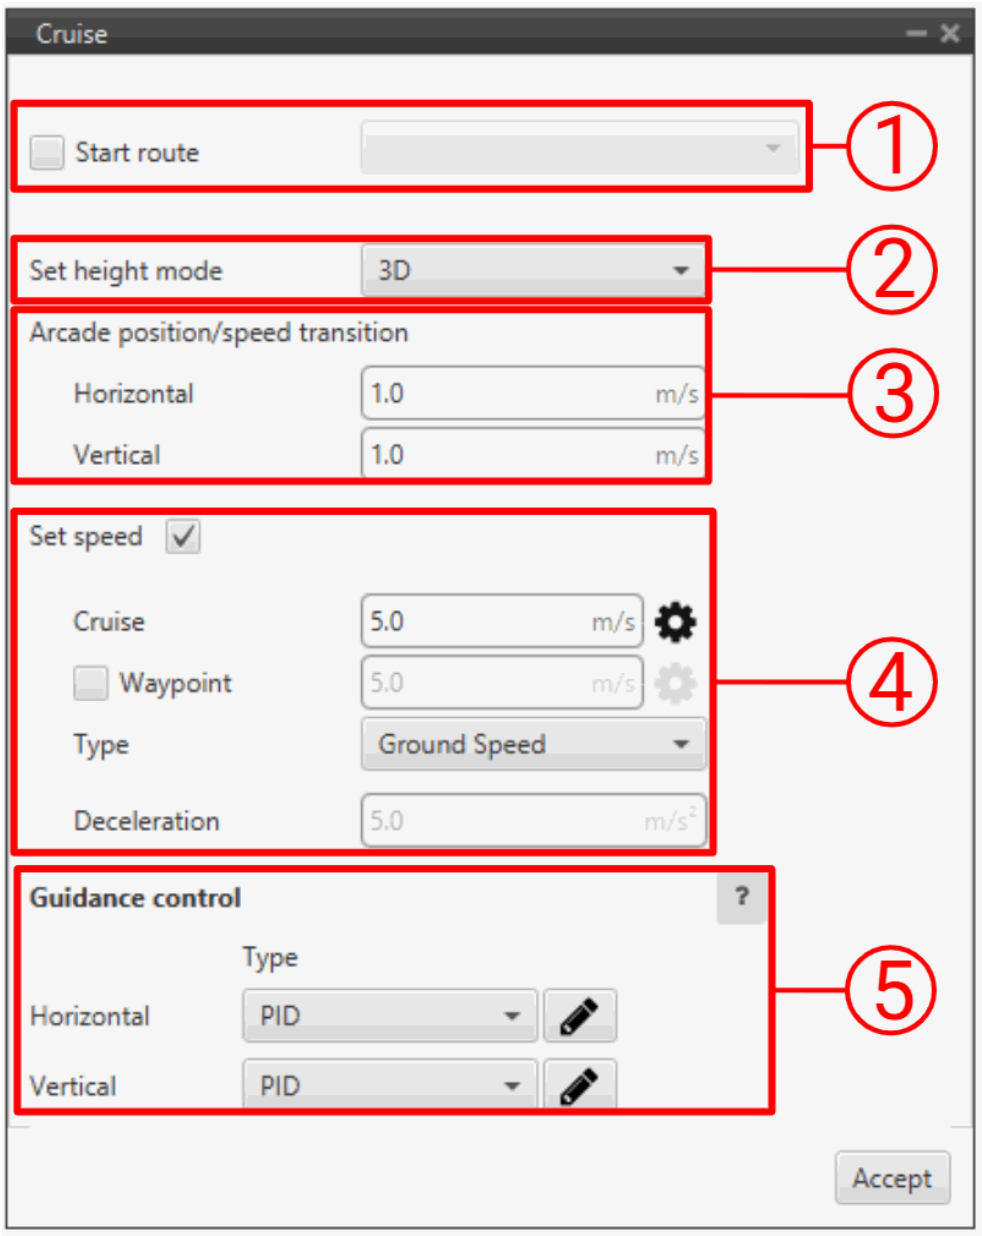

Cruise block configuration

All the parameters that define the cruise guidance are detailed.

1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.

4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.

Envelope

Envelope block is used to configure the flight envelope of the aircraft. Here the limits that will not be exceeded during the operation are set.

These limits are respected by the guidance and depend on how the control is implemented.

> ⚠ **Warning**
>
> Although the acceleration has been limited here, if the control is configured so that the pilot in manual mode can control the pitch angle, this acceleration limit will have no effect.



Envelope block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Output**


  Pin 0: Flight envelope configuration.

Important

If users wish to have more than one envelope in their configuration, they must configure as many envelope blocks as they wish and make the connection to the Guidance Computation block through a block of type Switch.

To do this, the desired conditions must be set for the Autopilot 1x to make the switch in the **Switch** block.


An example of how to implement more than one envelope is shown below:

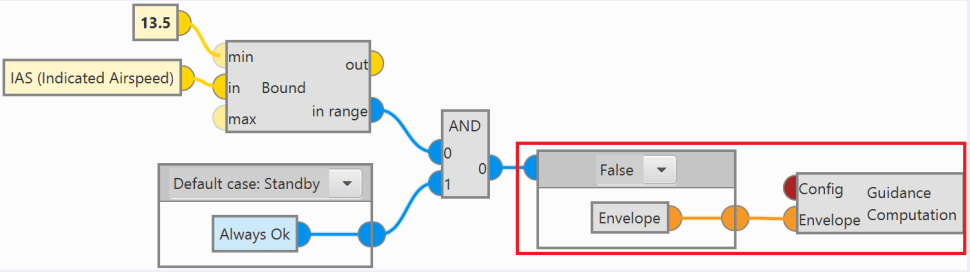

Example of more than one Envelope block

- **Configuration menu**: The configuration of this block is divided into 3 different tabs:

  Envelope

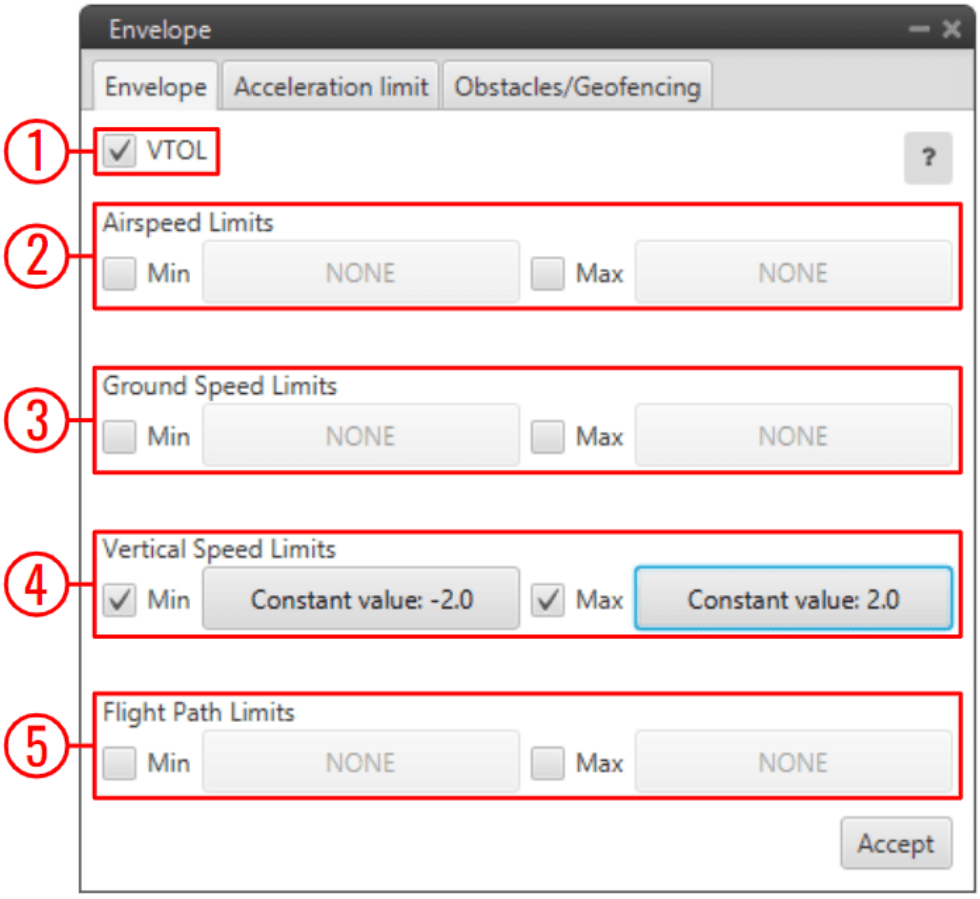

Envelope block configuration - Envelope


1. **VTOL**: If this option is enabled, when the vehicle reaches the last waypoint of its route (and it is an open path), a hover is done instead of a loiter point.
2. **Airspeed Limits**: Limits for the indicated airspeed (IAS). Values indicated here have effect over the "Cruise" guidance, but is **overrided** if there is a **Hold command** on the IAS, so the user must be careful with the velocity commands.
3. **Ground Speed Limits**: Minimum and maximum ground speed of the platform. In case of strong wind, these parameters set the minimum GS that the aircraft can reach, for lower values than this one the thrust will be automatically increased to gain speed and avoid a point where the platform is stopped in the air.
4. **Vertical Speed Limits**: Similar to the previous limit. It sets the minimum and maximun value for the vertical speed of the platform.
5. **Flight Path Limits**: Maximum and minimum values for the flight path angle (angle of climb or descent).

> **Note**
>
> - Users can manually enter values or select variables instead.
> - These limits will modify how guidances command your vehicle to move, but will not apply when the aircraft is not being controlled by a guidance (i.e manual/assisted flight).
> - These values should not represent the maximum limits that the platform can withstand, but the maximum values that should be present during a normal operation.

Acceleration limit

In this second tab there are more options to fix the limits (positive and negative direction) of acceleration and jerk in SI units.

Acceleration limits are applied in any phase with position guidance. They modify the desired velocity. The algorithm compares the current desired velocity with thatstored in previous step. There are six values to define.

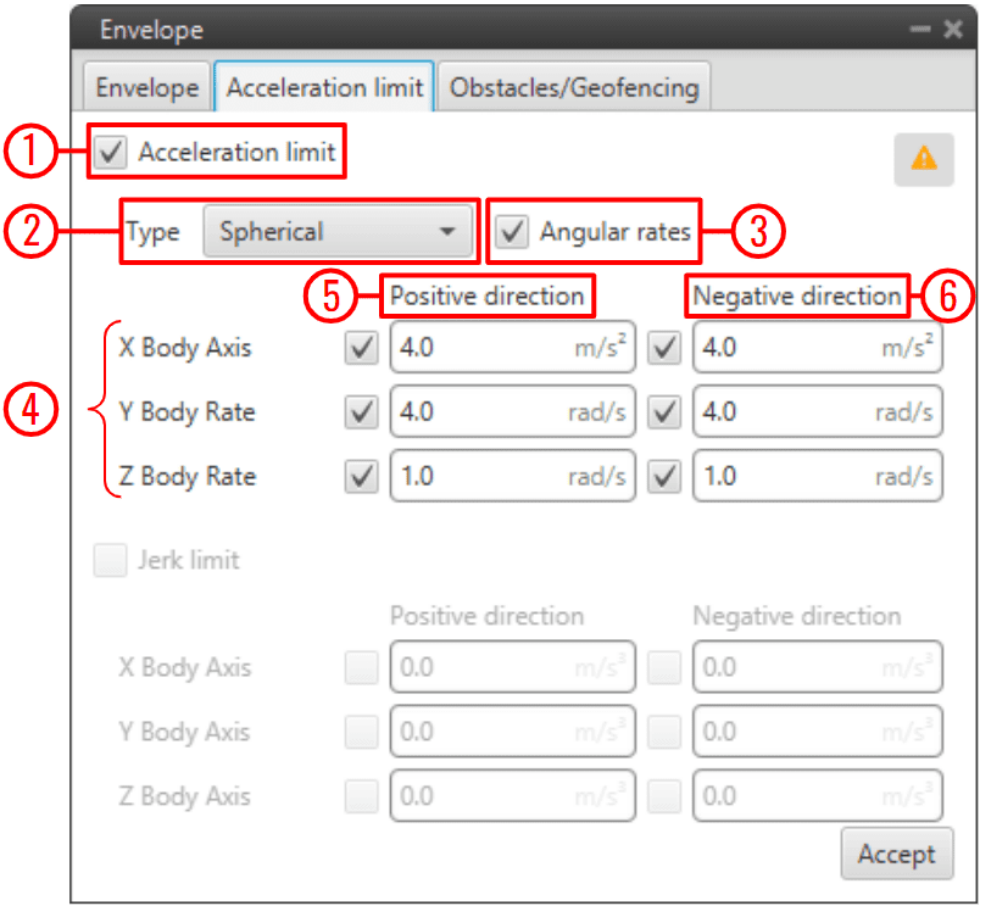


Envelope block configuration - Acceleration limit (Spherical frame)

The configurable options in this menu are:

1. Enable/Disable the acceleration limit.
2. **Type**: User can choose between **Cartesian Body** and **Spherical**. **Cartesian Body** is normally used for **multicopters** or **aircraft that allow 3-dimensional movement**, while the **Spherical** type is used for **conventional aircraft**.
3. **Enable/Disable angular rates**: The user also can selected directly angular rates option which allows him set limits in Y body rate and Z body rates.
4. **Axes**:
   - In **Cartesian Body** the axes refer to the body frame (X Body Axis, Y Body Axis, Z Body Axis).
   - In **Spherical** type, the algorithm internally applies limits in module, inclination and azimuth to maintain the limits set by the user in body frame (body frame limits will be turn into spherical limits).
5. **Positive direction**: The limit for acceleration. If desired velocity has the same sign as in the previous step, and it is lower (in absolute value) this limit is applied. For example, if a multicopter is flying in negative X direction, and it has to increase desired velocity in same direction this limit will be applied.
6. **Negative direction**: The limit for deceleration. In the case positive direction limit is not used.


The second derivative of velocity (**Jerk**) imposes another limit in acceleration. It modifies the behavior of the vehicle.
Depending on values, it's possible to get more smoothness during guidance. Algorithm ensures that when desired velocity is reached the acceleration value is near 0. As acceleration limits, user can set 6 values (3 for positive direction limit and 3 for negative direction limit).

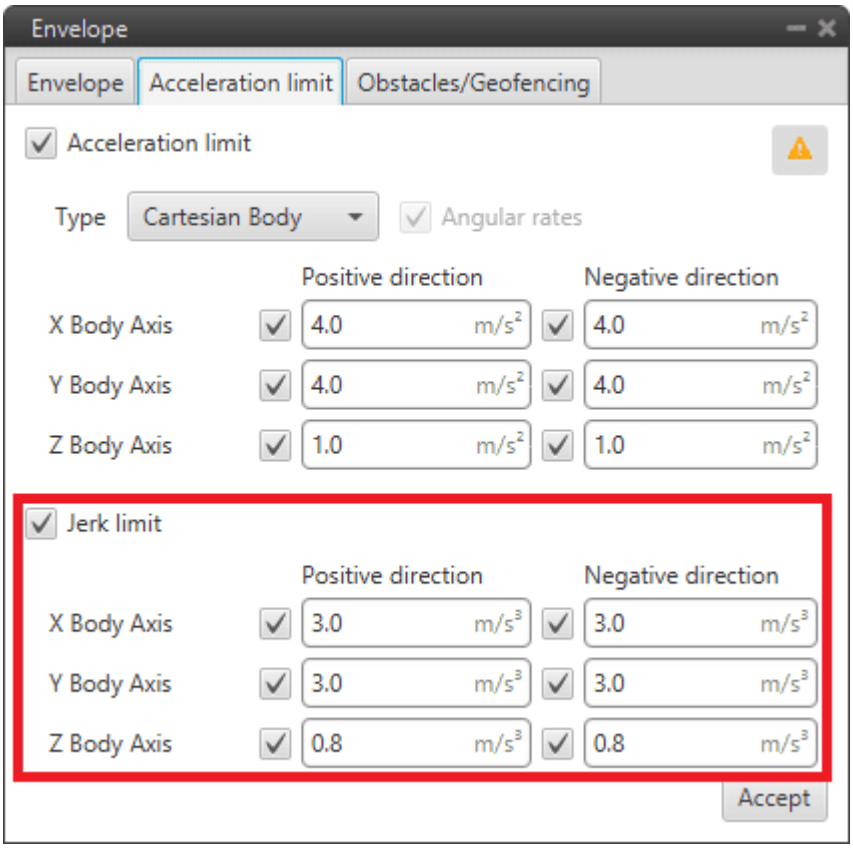

Envelope block configuration - Acceleration limit (Cartesian frame)


The effects of these limitations are explained below.

First, the acceleration limits are disabled. The stick that controls Thrust is moved and desired velocity change according to this stick command.
In Desired velocity chart we can see this effect and in bottom acceleration chart is shown how acceleration is not limited (hight values reached).

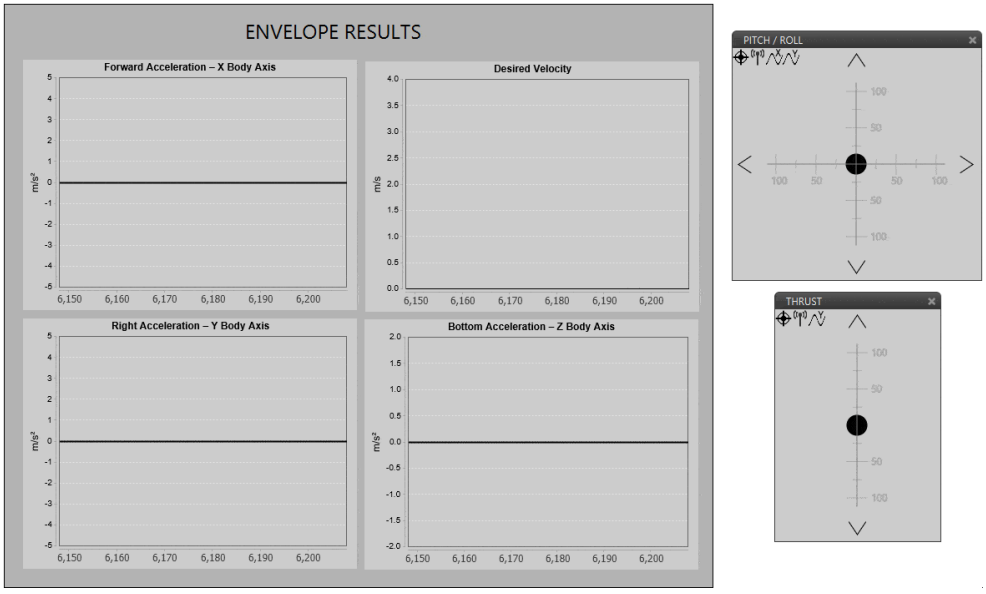


Only velocity limit (Thrust)

Now, a limit in acceleration bottom axis is set to 0.1. Now the desired speed grows with a lower slope due to the imposed limitation.
Also in the acceleration bottom chart we can see how the value oscillates within the imposed limit.

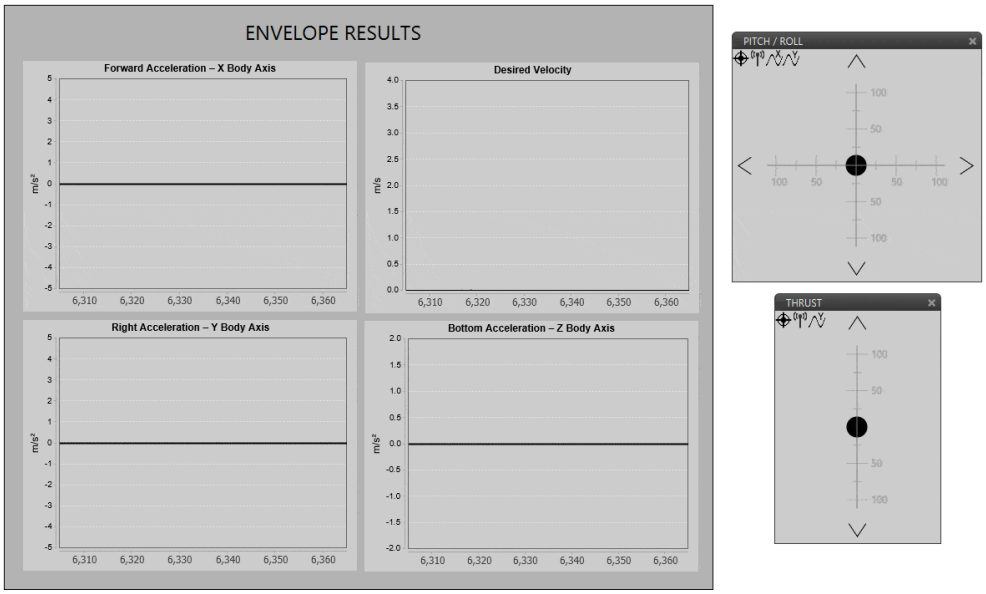


Acceleration limit (Thrust)

To compare acceleration and jerk, roll axis is chosen. In the first gif below only the first limit is applied.

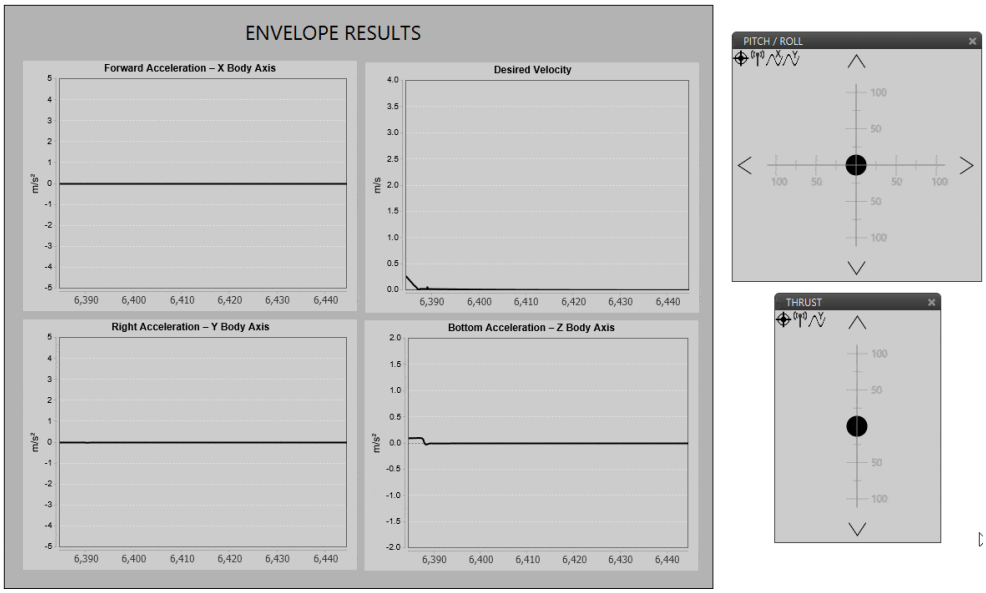

Acceleration limit (Cartesian frame)

When the jerk limit is also enabled we can see how acceleration (in Y Body axis) does not show peaks, and changes in desired velocity are smoother.

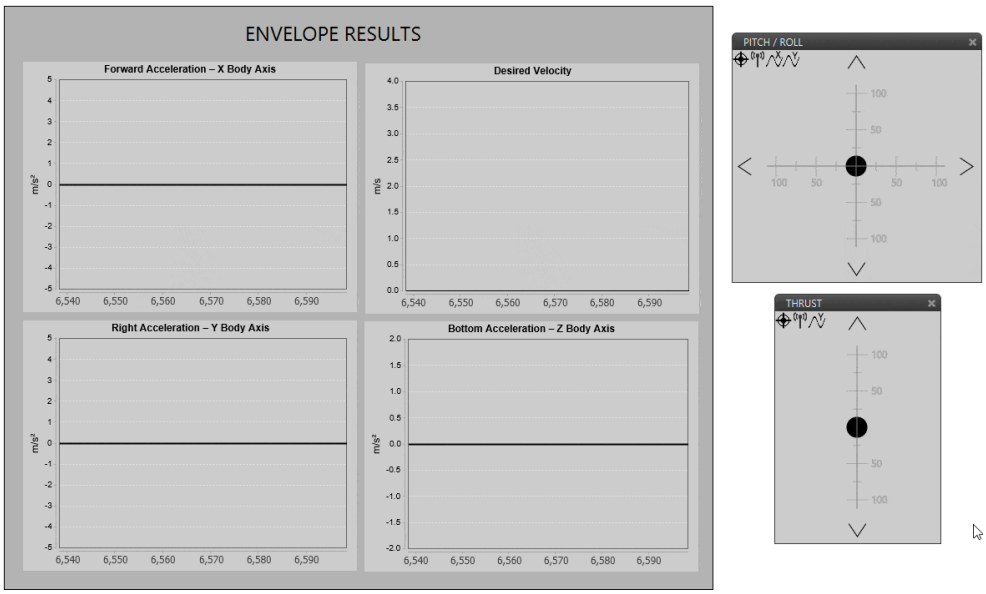


Acceleration limit (Cartesian frame)

Obstacles/Geofencing

Users should configure this last tab when using the **geofencing** functionality of **Veronte Autopilot 1x**.

The **maximum deceleration** desired when approaching the obstacle can be entered manually or by selecting a variable.

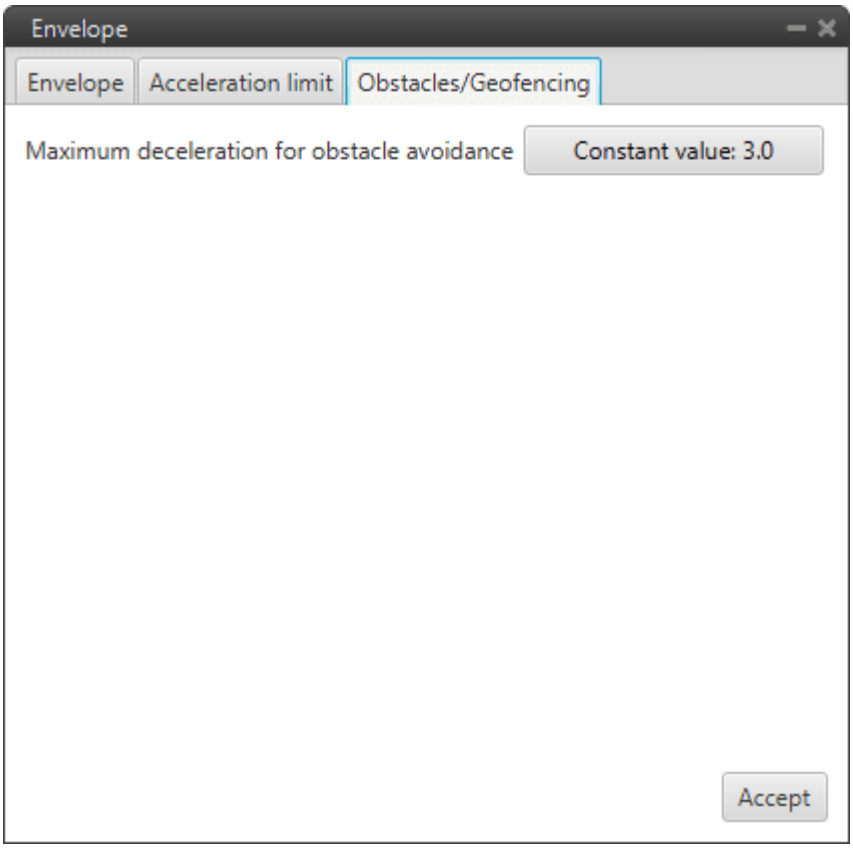


Envelope block configuration - Obstacles/Geofencing

Guidance Computation

Guidance Computation block takes the configuration and arcade data from a given type of guidance and computes the guidance parameters. It is always necessary to add it with these Guidance blocks: Climb, Cruise, Landing, Rendezvous, Taxi and VTOL.

In additon, an Envelope block must also be connected to this block to compute the flight envelope of the aircraft in the guidance.

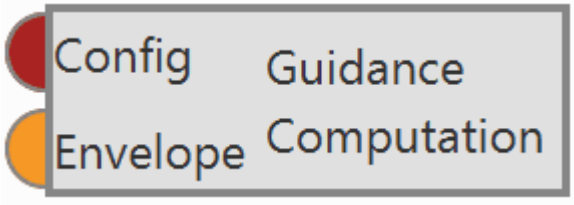


Guidance Computation block

- **Inputs**
  - **Config**: Guidance configuration.
  - **Envelope**: Flight envelope.

Landing

Landing guidance is used to generate the flying path the aircraft will follow when landing on a certain runway.

Landing guidance generates a three-dimensional trajectory.

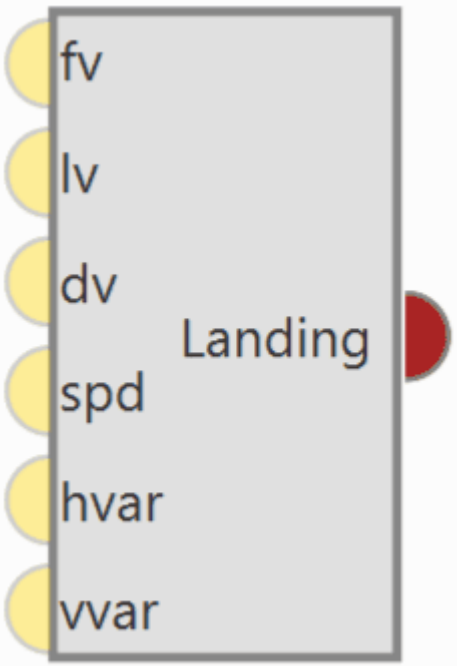


Landing block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Configuration menu**:

  The generated path is not directly indicated by the user as in cruise guidance (which is defined in **Veronte Ops**), instead a trajectory is generated based on the parameters detalied later in this section, as in climb guidance.

  Below, find all the information to be defined by the user together with the corresponding Figures showing the location of these parameters in the menu.

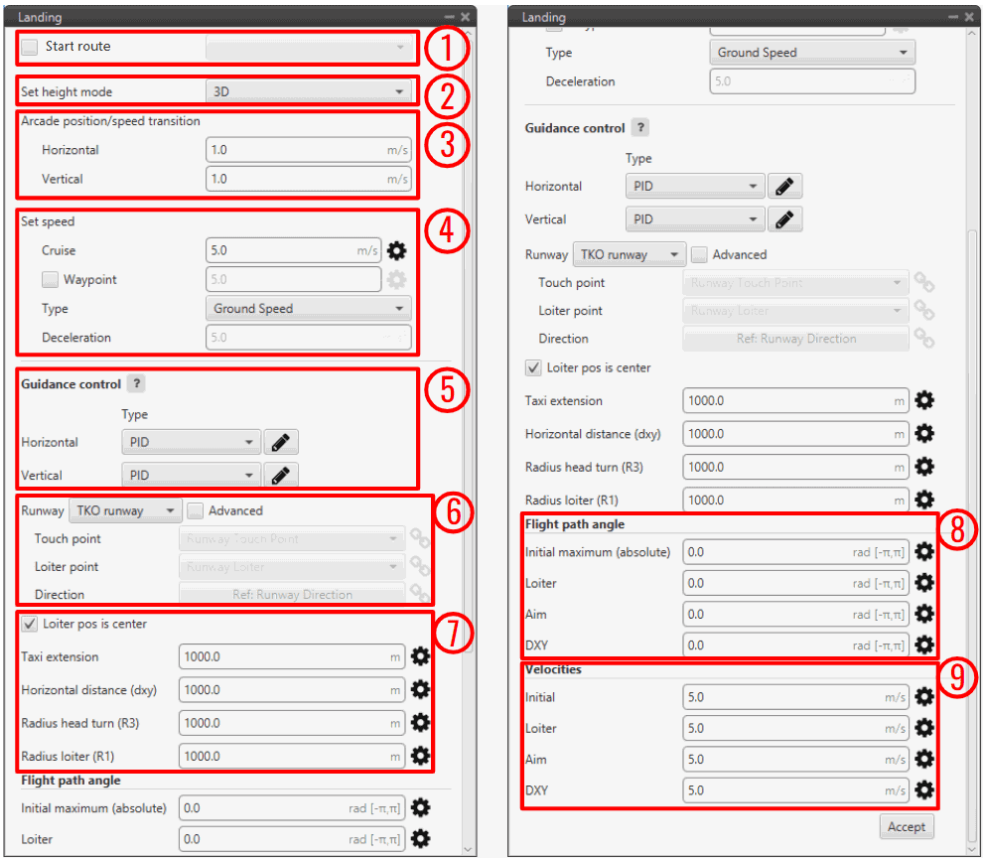



Landing block configuration

1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
6. **Runway and Loiter position**: Here the user can define the loiter and runway positions and direction. However, the default option is to define

them in the **Runway option** of **Veronte Ops** (for more information, see Veronte Ops manual).


If the Advanced option is chosen, then the user can define three parameters. By clicking on

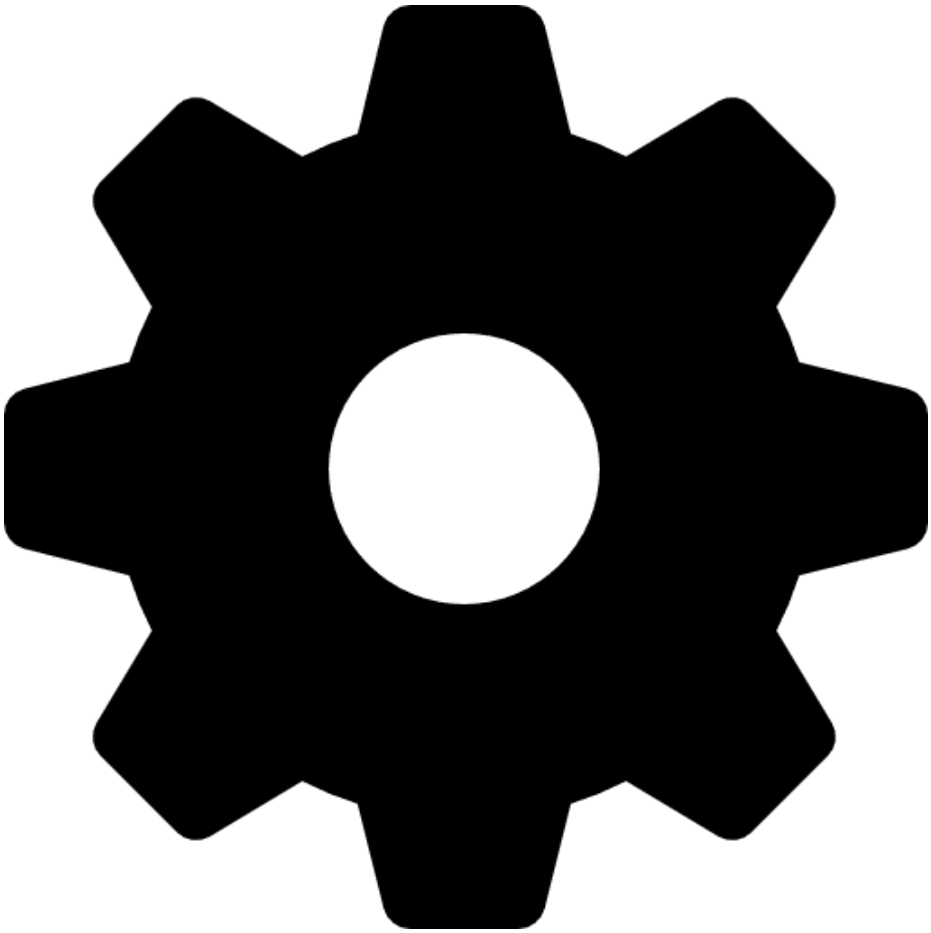
 or

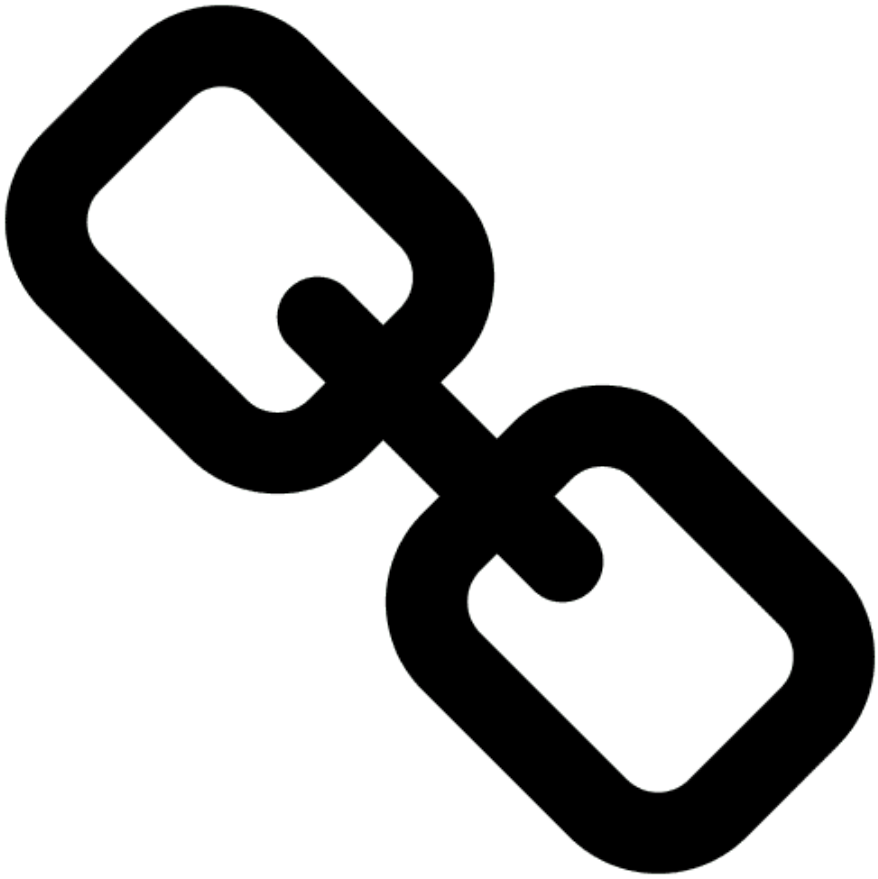


different

options will be displayed:

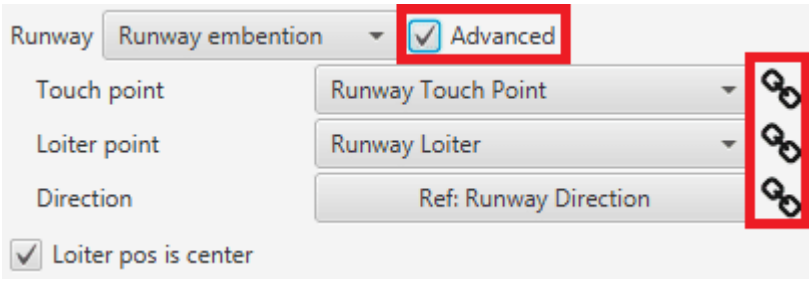


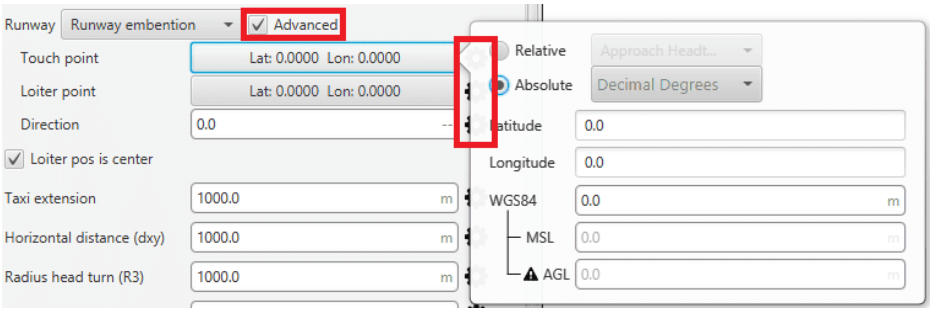

Runway and Loiter Position Options

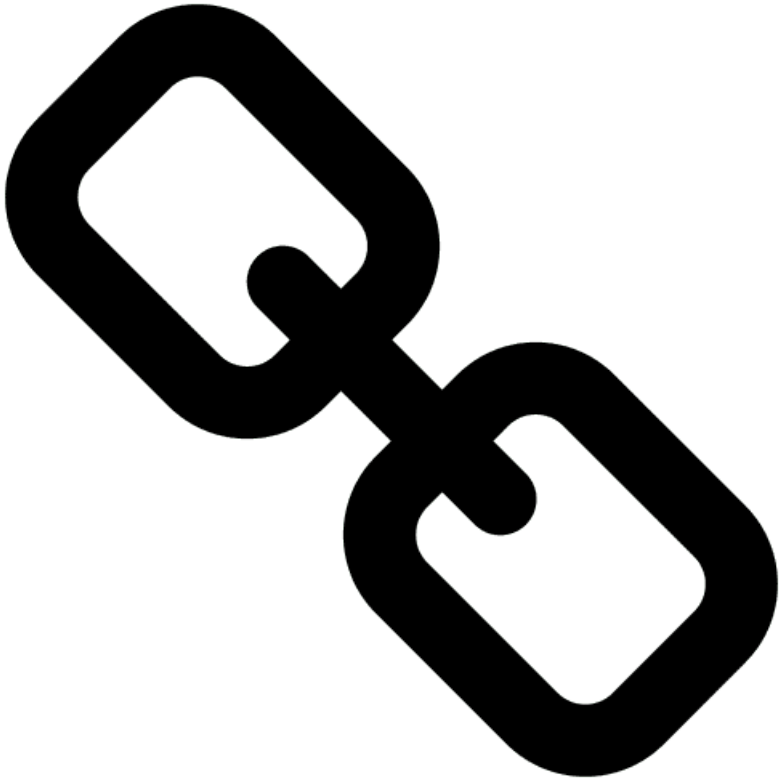
- **Touch point**: Defines the touch point of the runway. The user can configure it in 2 different ways:
  -  icon

    selected: By default, this point is the runway's touch point. But the user can select in the drop-down list any other previously defined point. This includes waypoints defined in the Mission (in **Veronte Ops**), among many others.

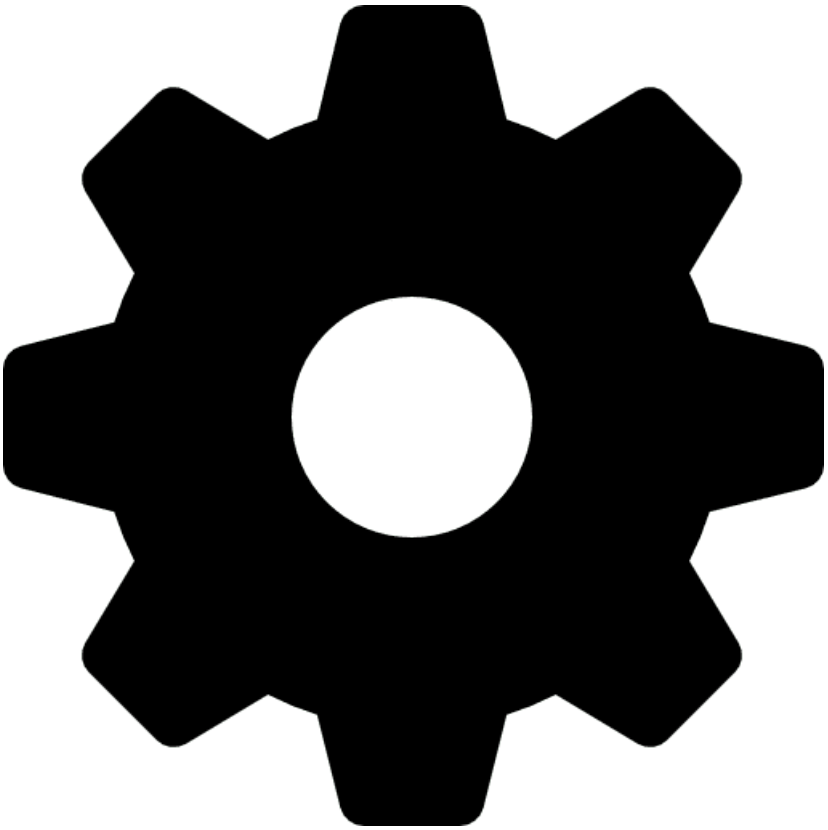
 icon

selected: Alternately, the user can manually define this point. Then it can be configured in two ways:

- **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude, longitude and altitude (being possible to define this last one with respect to the ellipsoid, WGS84, to the sea level, MSL or to the ground, AGL).

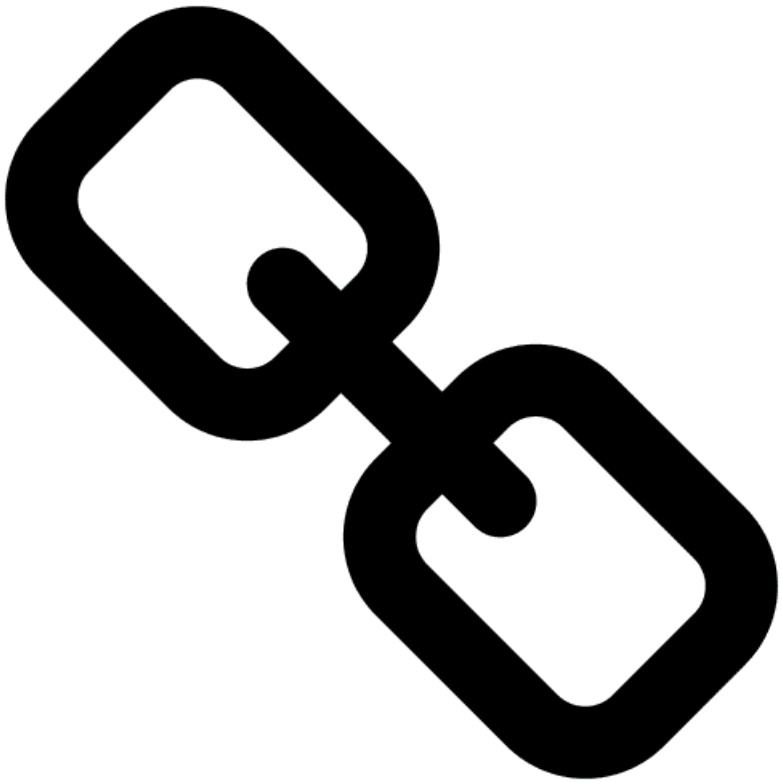
- **Loiter point**: Defines the loiter point. The two available options are:
  -  icon

    selected: By default, this point is the runway's loiter. But the user can select in the drop-down list any other previously defined point.
    This includes waypoints defined in the Mission (in **Veronte Ops**), among many others.

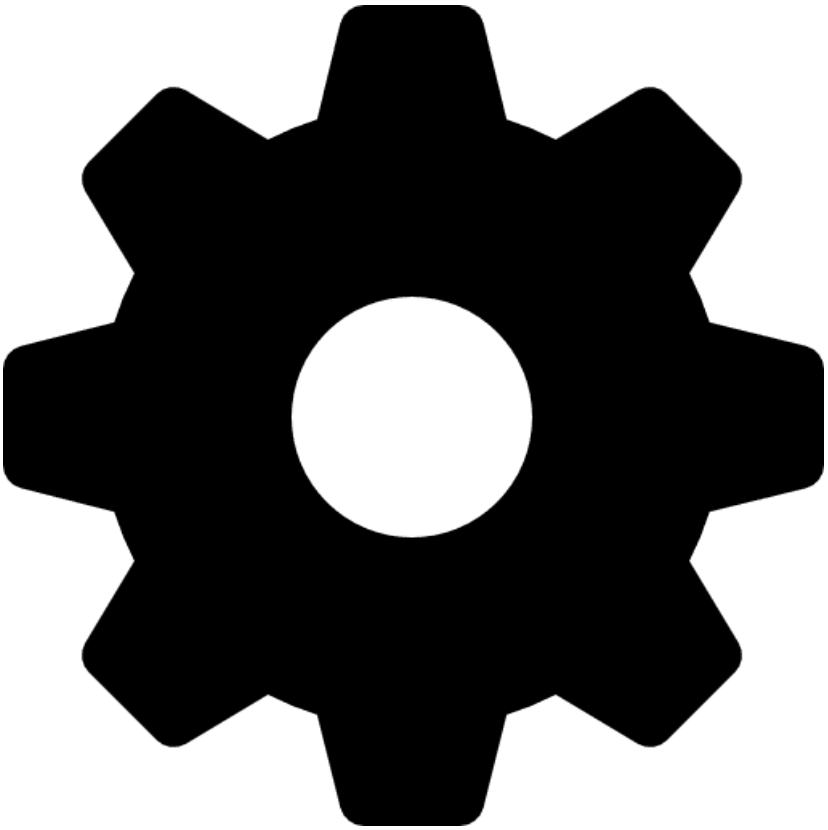
-  icon

selected: Alternately, the user can manually define the Loiter point. Then it can be configured in two ways:

- **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude, longitude and altitude (being possible to define this last one with respect to the ellipsoid, WGS84, to the sea level, MSL or to the ground, AGL).

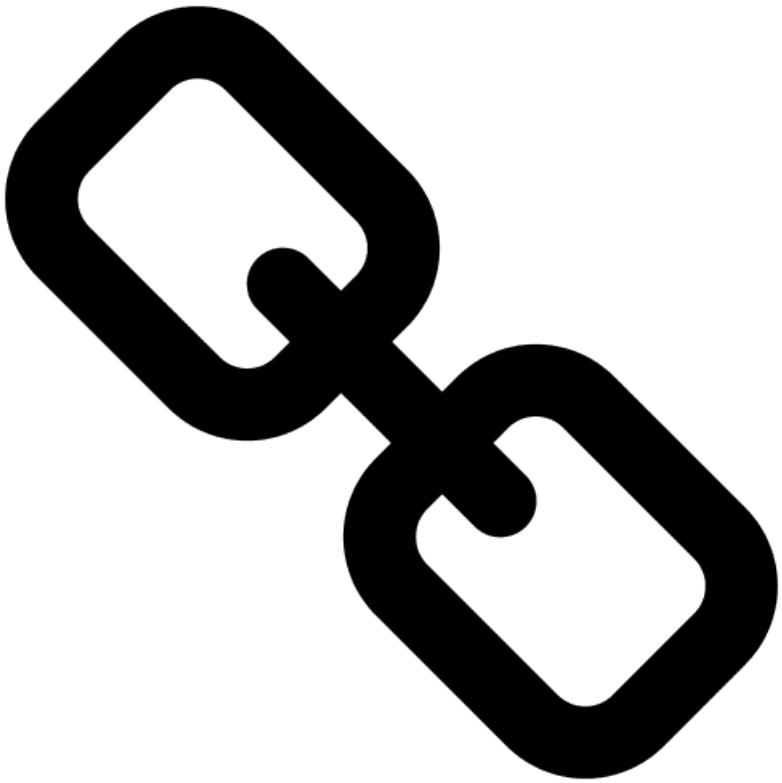- **Direction**: Defines the runway direction. Again, there are two available options:
  -  icon

    selected: By default, it is the same as the selected runway. It can be also chosen from a list of options including runway direction, tailwind direction, etc.

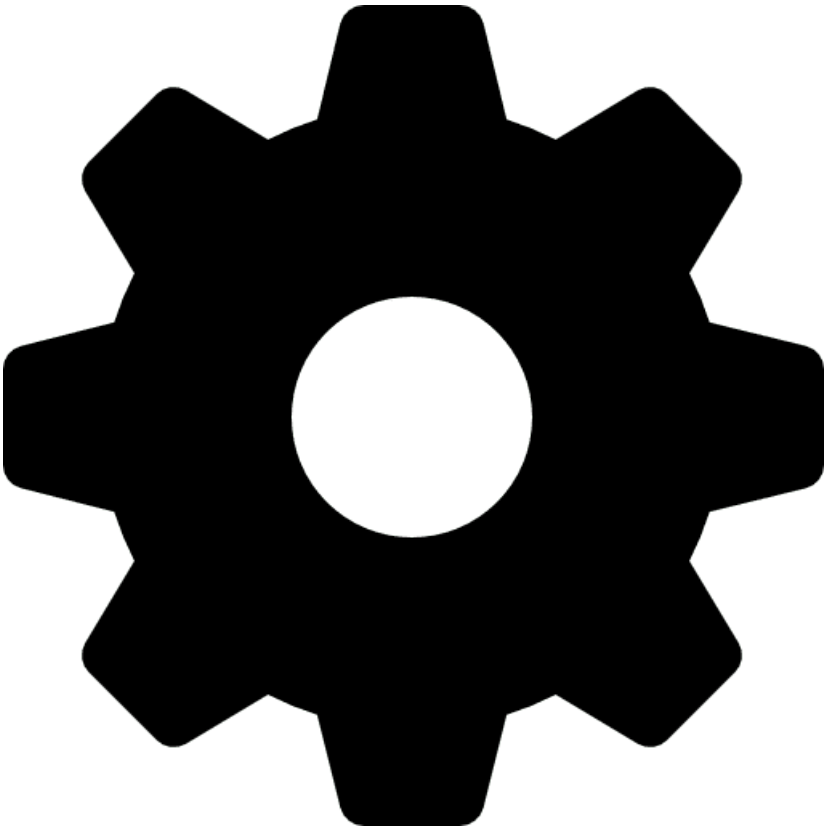
 icon

selected: Alternately, it can also be defined as an angle with respect to the magnetic north.


- **Loiter pos is center**: If this box is enabled, the defined loiter point will be the center of the loiter circular trajectory. In case of not, the circular loiter trajectory will pass through that point.

1. **Trajectory distances**: Here the user defines some of the trajectory distances. This distances match the trajectory patches lengths L or are proportional to them. See the explanation below for more information on every patch.
   - **Taxi extension**: Distance from touchdown to where the aircraft is brougth to a full stop.
   - **Horizontal extension (dxy)**: Distance before the head of the runway. At the end of this length, touchdown is expected.
   - **Radius Head Turn (R3)**: Radius of the last turn in order to face the runway direction ($L_3 \propto \pi R_3$).
   - **Radius loiter (R1)**: Radius of the descending loiter for the aircraft to reach an altitude suitable to perform the landing manoeuvre ($L_1 \propto \pi R_1$).

   Each of these parameters can be entered manually or linked to an Operation Guidance defined by the user clicking on

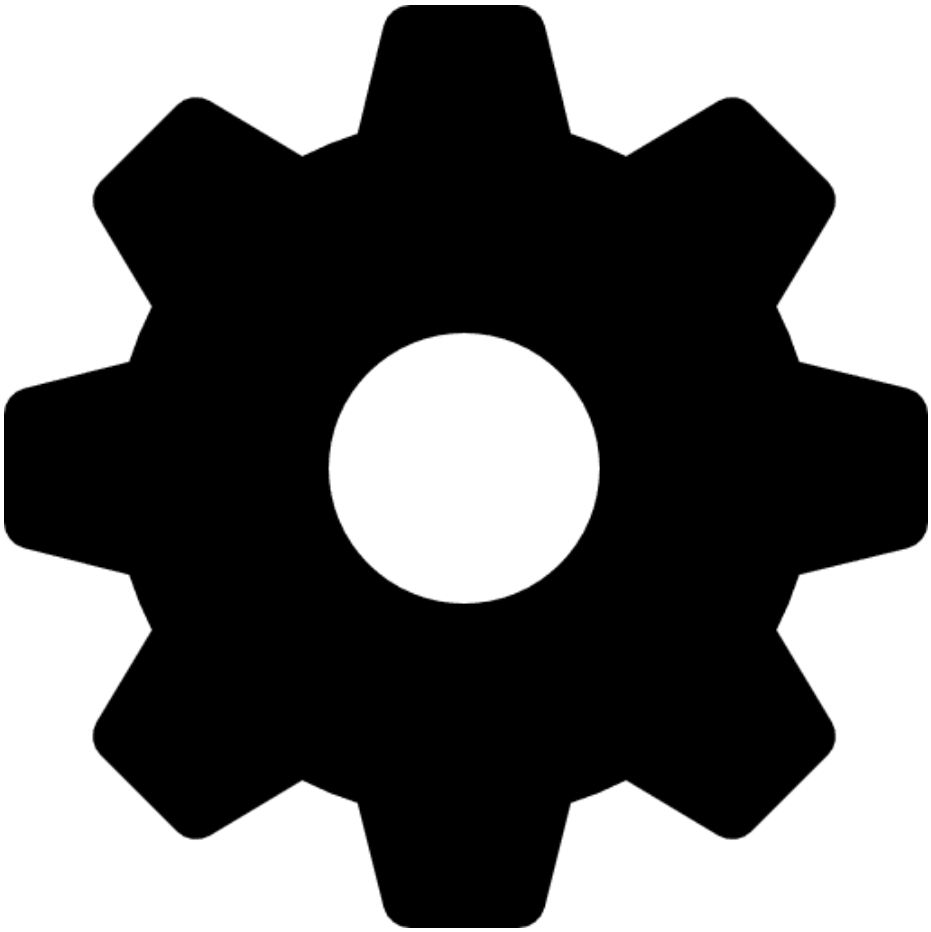

or

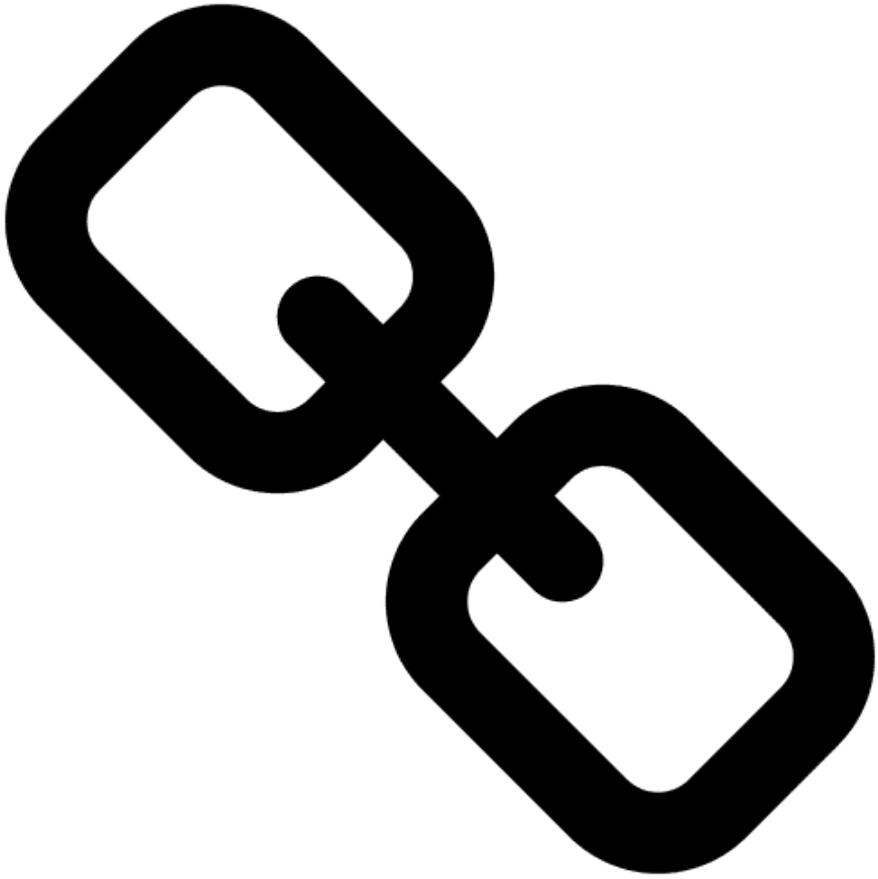


.


> **Note**
> Some patches don't have an associated user-defined distance, and are automatically calculated by the landing guidance algorithm, as they depend on some of the above distances and other parameters defined below.

2. **Trajectory flight path angles**: Here the user defines the desired trajectory flight path angles for each of the patches of the trajectory. See the explanation below for more information on every patch.
   - **Initial maximum (absolute)**: Desired flight path angle γ_0 of patch 0.
   - **Loiter**: Desired flight path angle γ_1 of patch 1.
   - **Aim**: Desired flight path angle $\gamma_{2,3}$ of patches 2 and 3.
   - **DXY**: Desired flight path angle γ_4 of patch 4.
3. **Trajectory velocities**: Here the user defines the desired trajectory velocities for each of the patches of the trajectory. See the explanation below for more information on every patch.
   - **Initial**: Desired velocity v_0 of patch 0.
   - **Loiter**: Desired velocity v_1 of patch 1.
   - **Aim**: Desired velocity $v_{2,3}$ of patches 2 and 3.
   - **DXY**: Desired velocity v_4 of patch 4.

   Each of these parameters can be entered manually or linked to an Operation Guidance defined by the user clicking on

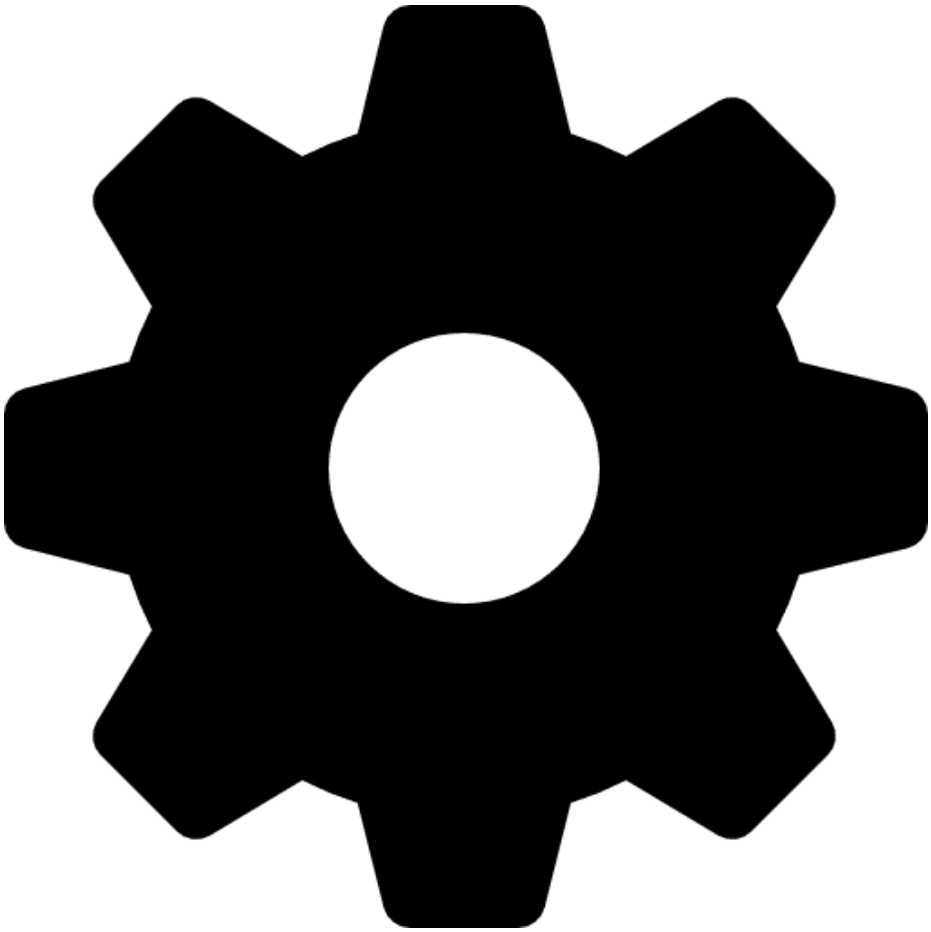

or

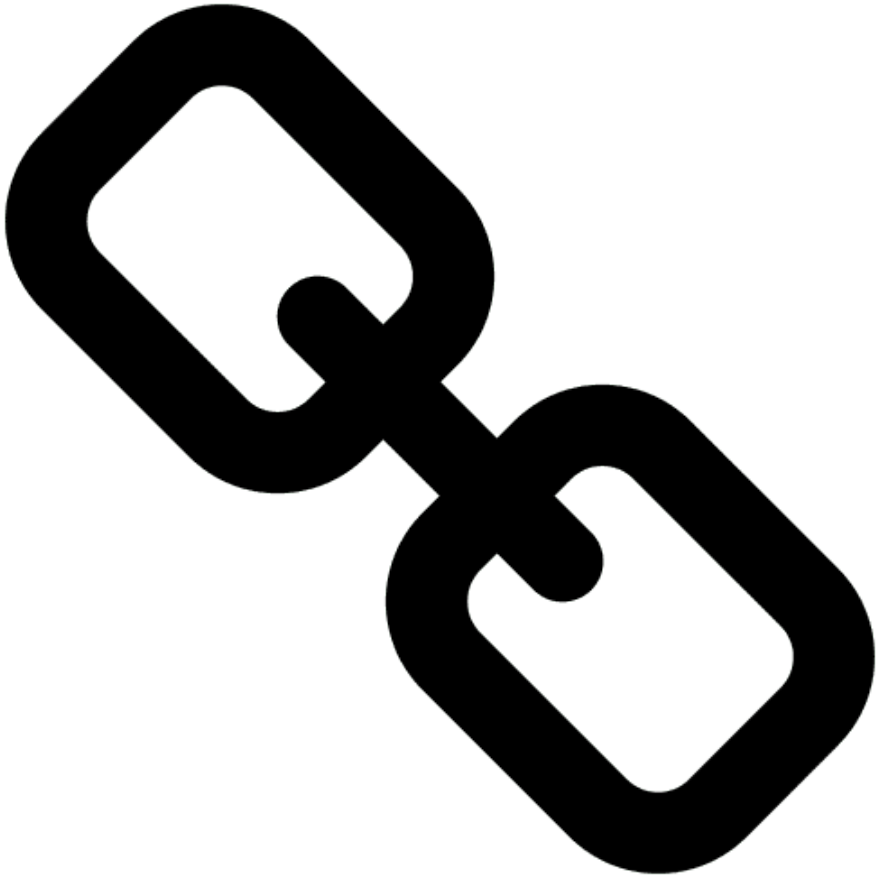

.


The generated trajectory of the landing guidance defines the route that the aircraft follows from the point when the phase with this guidance is entered, to the point where it touches the ground, see the Figure below. The landing route has two parts, being decomposed into 6 patches:

- **First part**: Descending loiter used to descend from the cruise altitude to an altitude where the heading manoeuvre towards the runway can be performed.
  - **Patch 0**: This patch is generated from the point the landing phase is entered to where the loiter is located. Variables that influence this patch are γ_0, v_0 , altitudes H_0 and H_1 , and **Loiter point** position.
  - **Patch 1**: The patch length (L_1) will depend on the amount of loops on the loiter. The latter can go from 0 to more than 1 loop, depending on the altitude necessary to descend/ascend. Variables that influence this patch are γ_1, v_1 , altitudes H_1 and H_2 , and **Radius loiter (R1)**.

  The loiter exiting point altitude is computed so that patches 2 to 5 can be performed following their desired v and γ . So it exists the possibility of starting the landing manoeuvre at a lower altitude thant the exiting point of the loiter. In that case, the loiter would be used to ascend.
  If the aircraft starts the landing phase at an altitude similar to the one of the loiter (defined in point 7), then the loiter patch is simplified into a turn (during the turn the altitude can still be adjusted) and the turn's length will depend on the latter.

- **Second part**: Final approach of the landing, which consists on turning, facing the runway and touchdown.
  - **Patch 2**: Patches 3 and 4 need to match the distances defined above. Patch number 2 will connect the exit of the loiter patch with the beginning of patch 3. Variables that influence this patch are $\gamma_{2,3}$, $v_{2,3}$, altitudes H_2 and H_3 , **Loiter point** and **Touch point** positions.
  - **Patch 3**: Turning of the aircraft to face the runway. Variables that influence this patch are $\gamma_{2,3}$, $v_{2,3}$, altitudes H_3 and H_4 and **Radius Head Turn (R3)**.

- **Patch 4**: At the end of the patch the aircraft lands. Variables that influence this patch are γ_4, v_4 , altitude H_4 and **Horizontal extension (dxy)**.
- **Patch 5**: Taxi extension for the aircraft to slow down.

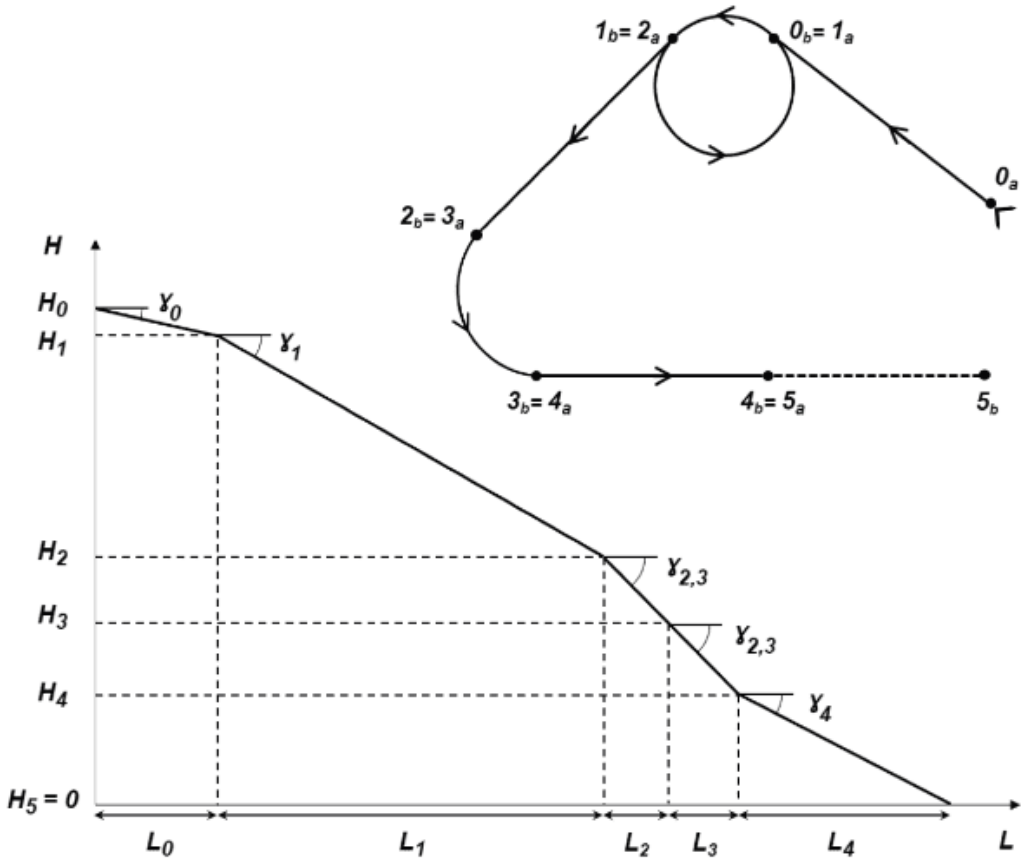


Landing route top and front views with parameter identification

Rendezvous

Rendezvous guidance is used to create a meeting point where the 1x air unit will approach a second unit (either another air or base) within a determined offset.

This guidance updates constantly the vehicle attitude in order to track, with the shortest path, the position of the second unit (named as Base hereafter). This guidance works for both **static** and **moving Base**.


Rendezvous navigation is ready for taking **Internest** input to improve the precision from its guidance, being the most suitable kind for Internest integration.

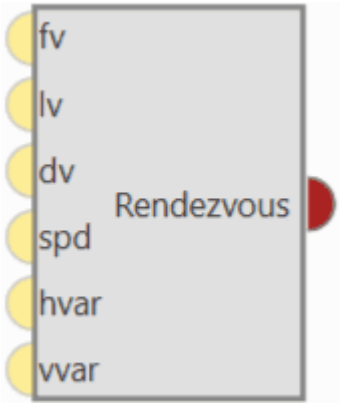

Rendezvous block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Configuration menu**:
  All the parameters that define the rendezvous guidance are detailed.

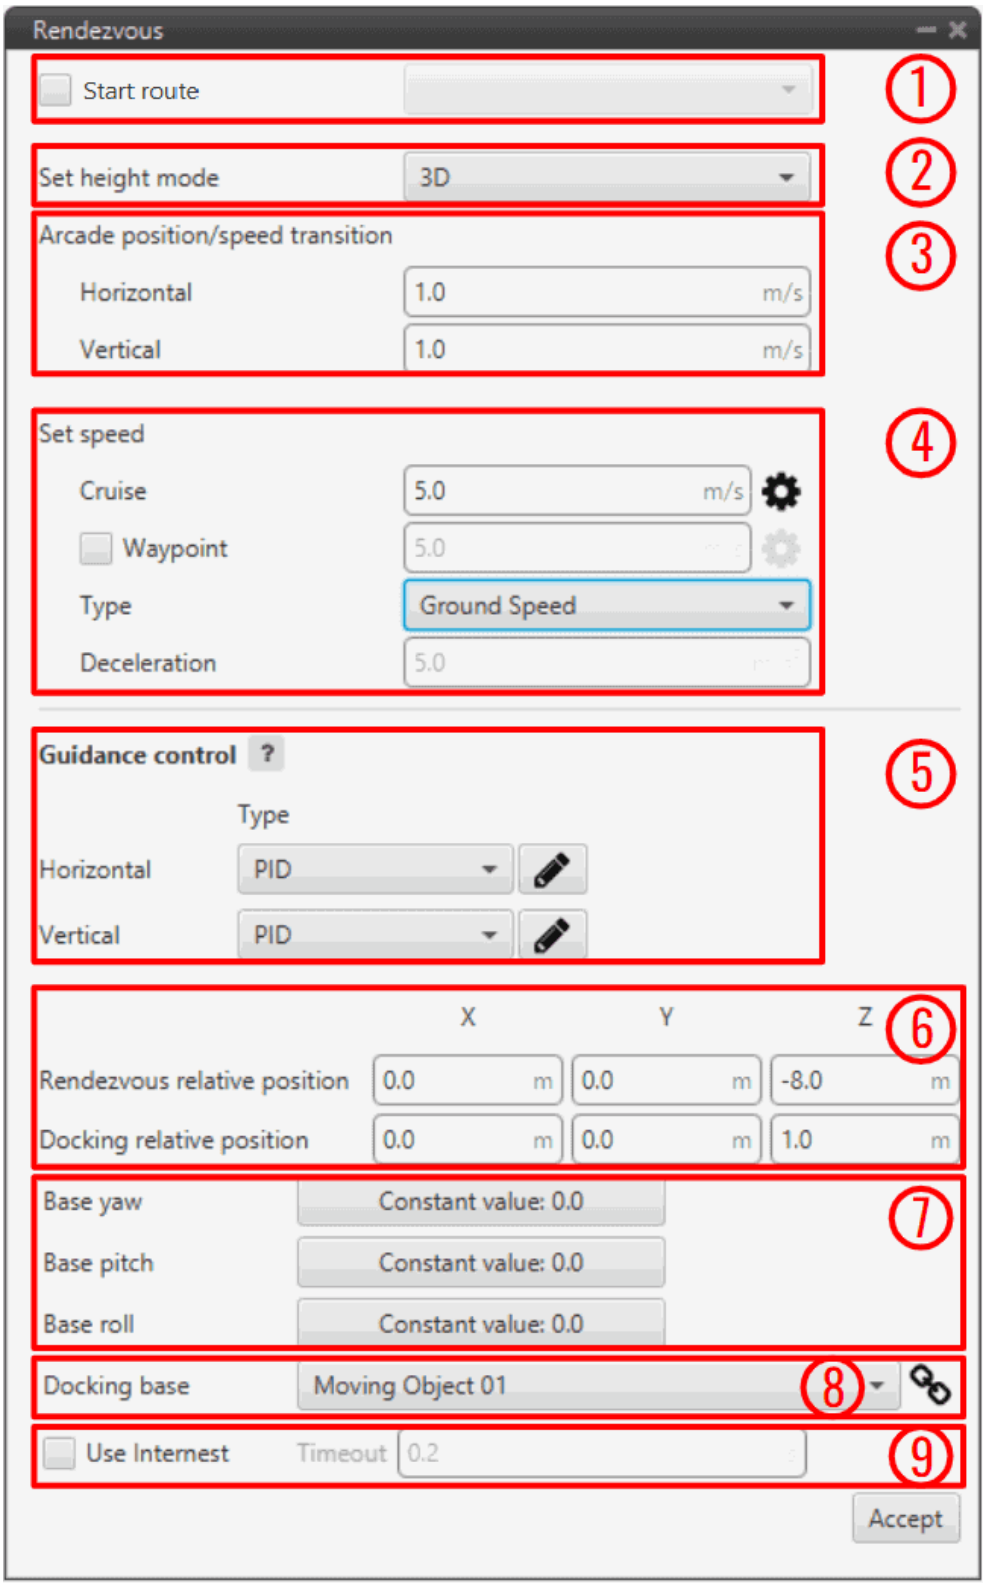

Rendezvous block configuration

1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.


2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
6. **Relative position**: For both Docking and Rendezvous the axes are set according to Autopilot 1x orientation (for more information about 1x orientation visit Orientation - Hardware Installation section of the **1x Hardware Manual**).
   - **Rendezvous relative position**: **3D point** used **to configure the meeting point for the 1x air unit**. This point will be tracked by the vehicle and, once reached, it will start travelling to Docking relative position. For **VTOL**, **X** and **Y components must be equal**.
   - **Docking relative position**: **3D point** used **to configure the offset for the approaching vehicle to the Docking base**. This will be the difference from GNSS position that defines the landing point.

     > ⚠ **Warning**
     >
     > Usually, the **docking relative position** is set by slightly **overlapping** the **'Docking base'** in order to ensure that the 1x air unit reaches it, as can be seen in the figure below.

7. **Base yaw, pitch & roll**: Defines the attitude from the Base body. These values affect the navigation by orienting the air unit to be equal to the attitude from the Base unit. To be configured with **telemetry** (example below).

8. **Docking base**: Defines the position of the GNSS antenna connected to the Base unit. If the guidance is being configured for a 'moving' Base, a Moving Object must be assigned to it.
9. **Use Internest**: As Rendezvous navigation is prepared to take Internest input, here the user can enable its use and configure a Timeout.

The following figure gives an overview of some parameters introduced (note that the negative Z-coordinate is due to the Autopilot 1x axes convention):

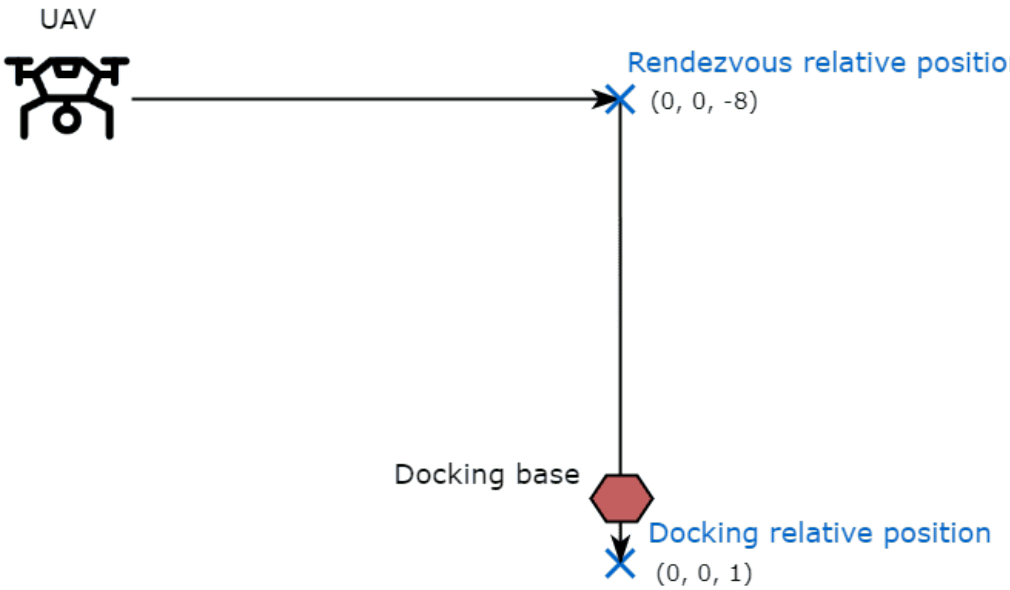

Rendezvous guidance parameters


In order to know how **to configure the Moving Object**, which is assigned to Docking Base and the Base attitude, see Data transmission between Veronte Autopilots 1x - Integration examples section of this manual.

Finally, in order **to see the Moving Object position in the Veronte Ops interface**, in the **1x Air unit**:

1. Go to Telemetry menu → **Telemetry** panel → **Data link to VApp**.
2. Add **Moving Object** to the list of variables.

Taxi


Taxi guidance is used to create a linear path along the runway that is followed by the aircraft. This command is normally used in the take-off phase, where the airplane is wanted to keep the direction of the runway while is accelerating until the lift-off point.

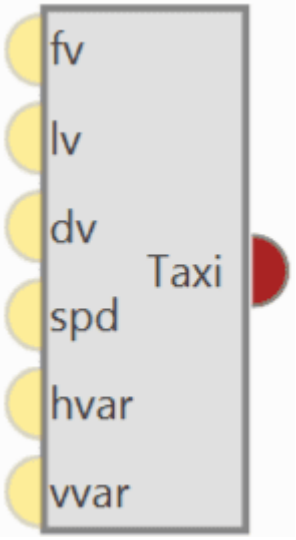

Taxi block

> ⚠ **Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.


- **Configuration menu**:

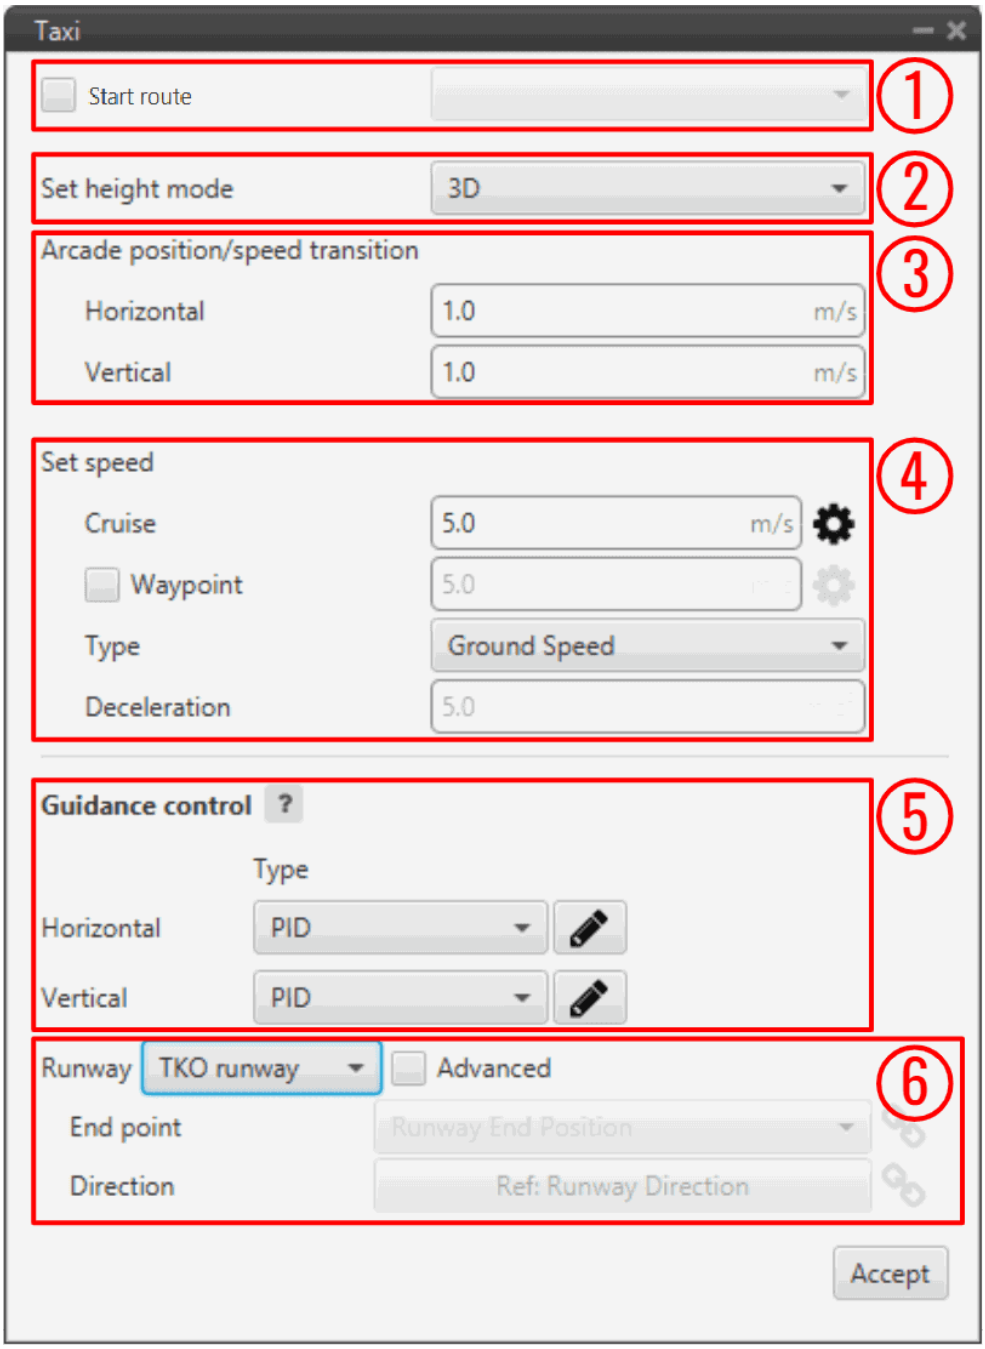


Taxi block configuration

All the parameters that define the taxi guidance are detailed.


1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.

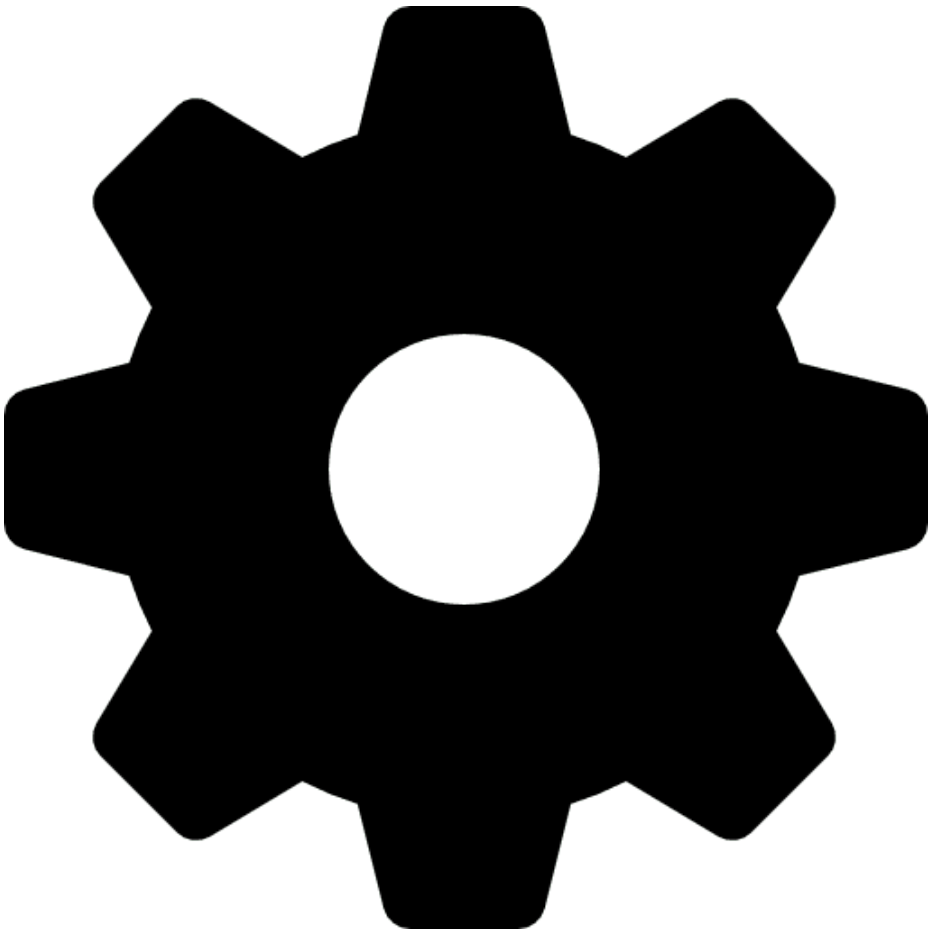
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
6. **Runway**: Here it is selected a runway previously configured, see the **Runway option** of Veronte Ops for more information.
   Besides, it is possible to use the Advanced mode and select a different end point or direction. By clicking on  or

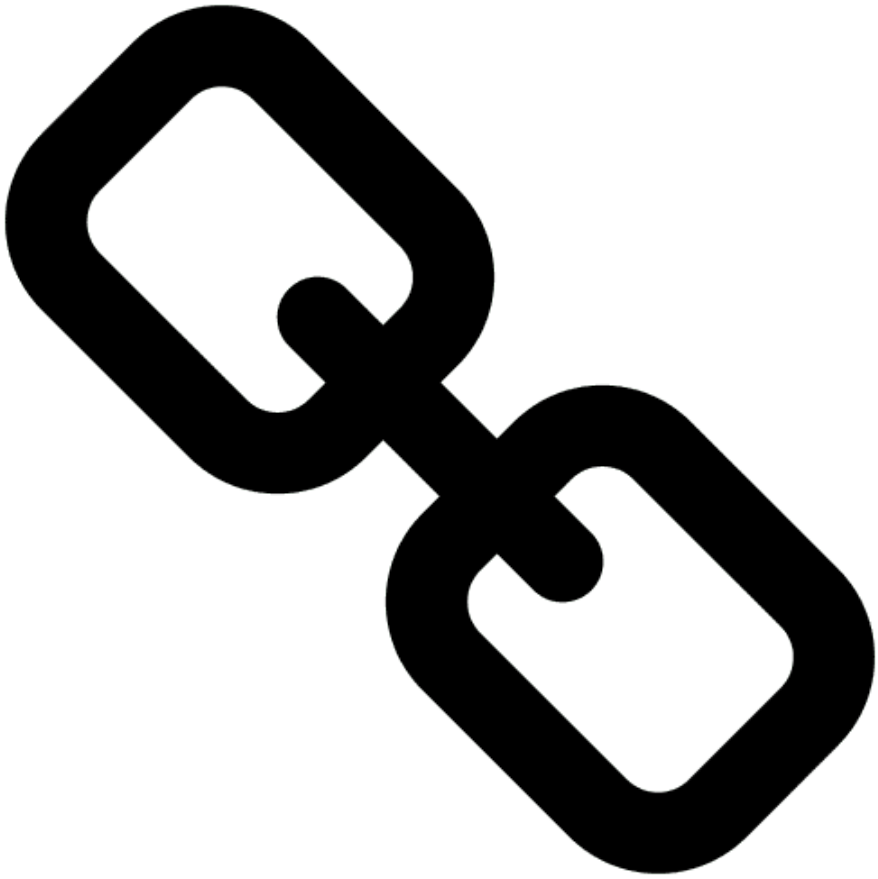


different


options will be displayed:

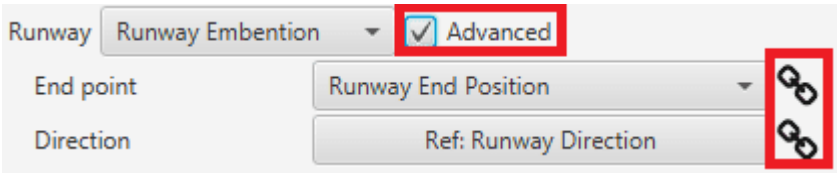

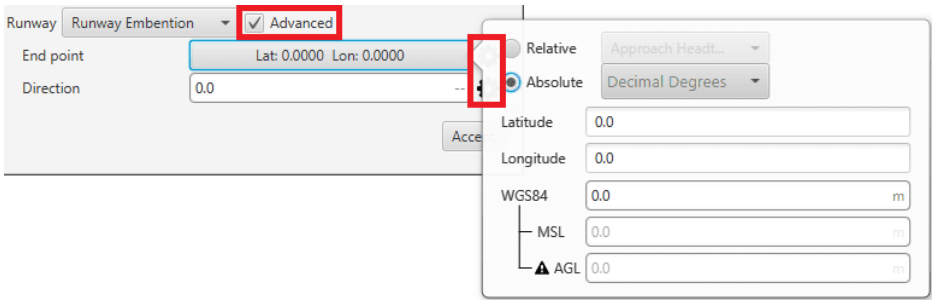


Runway parameters

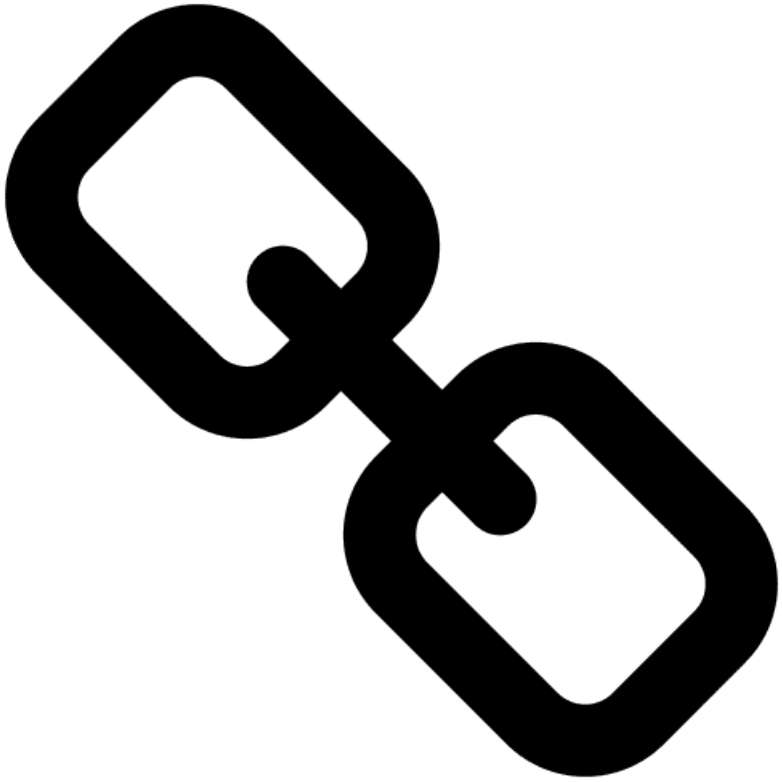- **End point**: Defines the end point of the runway. The two available options are:
  -  icon selected: By default, this point is the end of the runway. But the user can select in the drop-down list any other previously defined point. This includes waypoints defined in the Mission (in **Veronte Ops**), among many others.

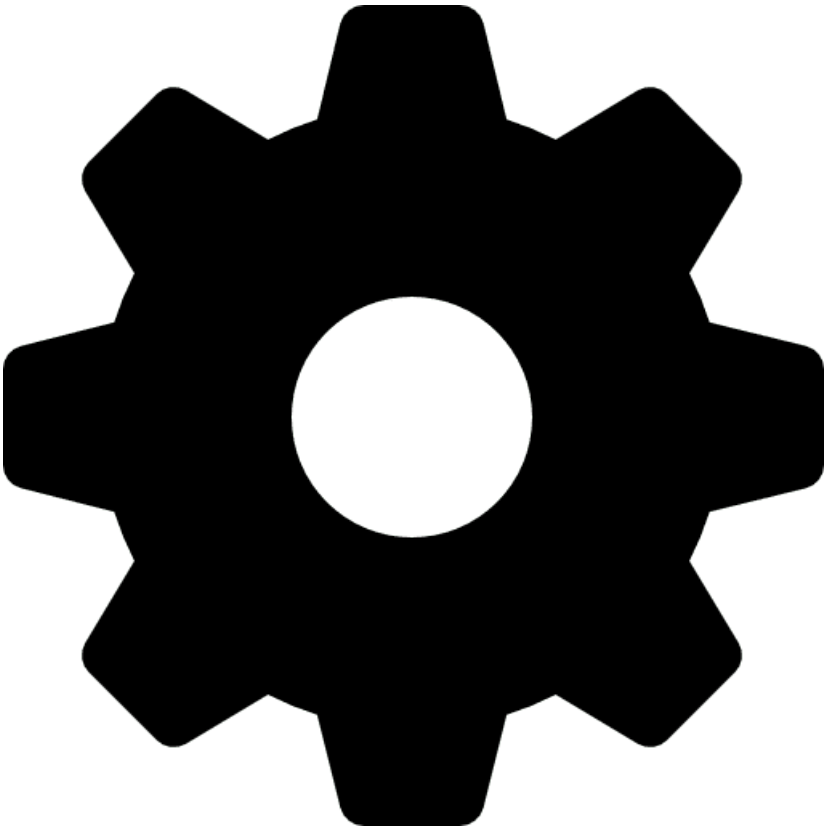
 icon

selected: Alternately, the user can manually define the End point. Then it can be configured in two ways:

- **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude, longitude and altitude (being possible to define this last one with respect to the ellipsoid, WGS84, to the sea level, MSL or to the ground, AGL).

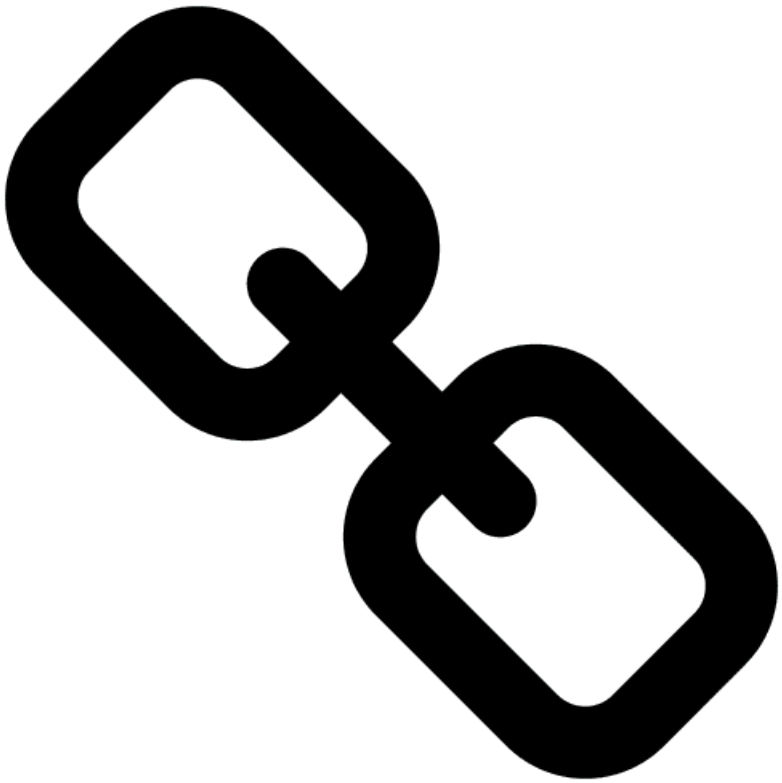- **Direction**: Defines the runway direction. Again, there are two available options:
  -  icon

    selected: By default, it is the same as the selected runway. It can be also chosen from a list of options including runway direction, tailwind direction, etc.

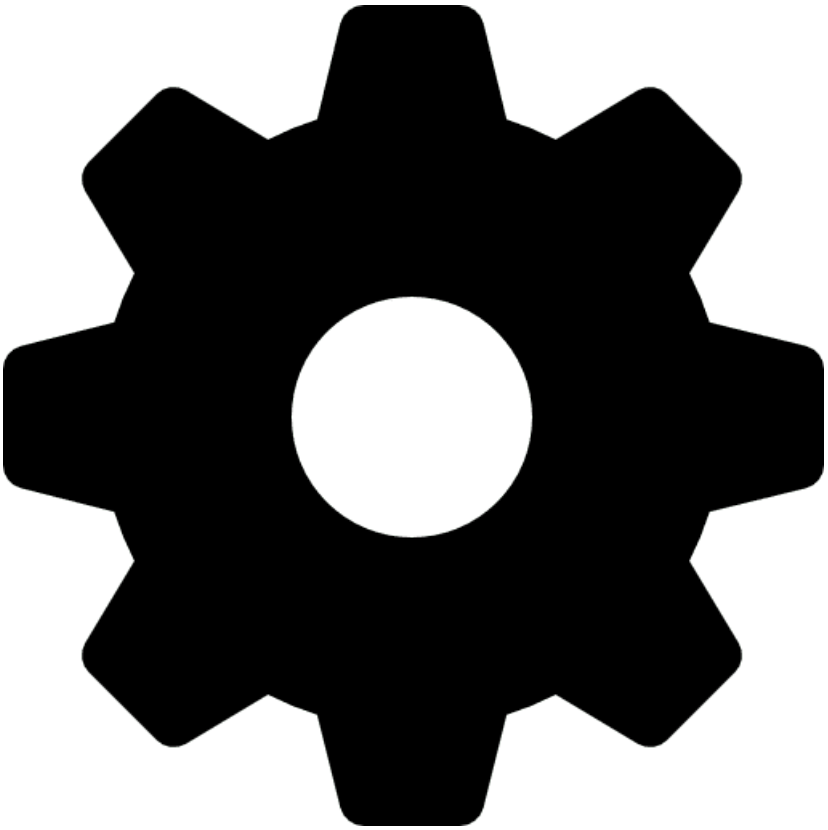

icon

selected: Alternately, it can also be defined as an angle with respect to the magnetic north.

VTOL

VTOL guidance (vertical take-off and landing) is used in **multicopters** for the take-off and landing operations. This guidance consists on the creation of a vertical line that starts at the point where the platform enters in this guidance.


VTOL guidance generates a vertical straight trajectory.

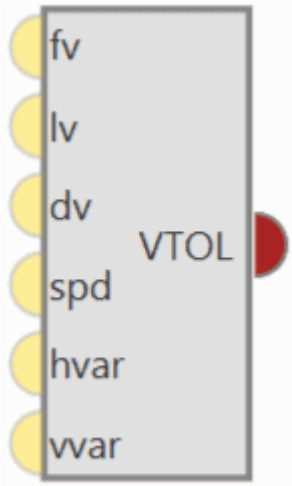

VTOL block

> **⚠ Warning**
>
> In order to produce a guidance computation this block has to be connected to the Guidance Computation block.

- **Configuration menu**:

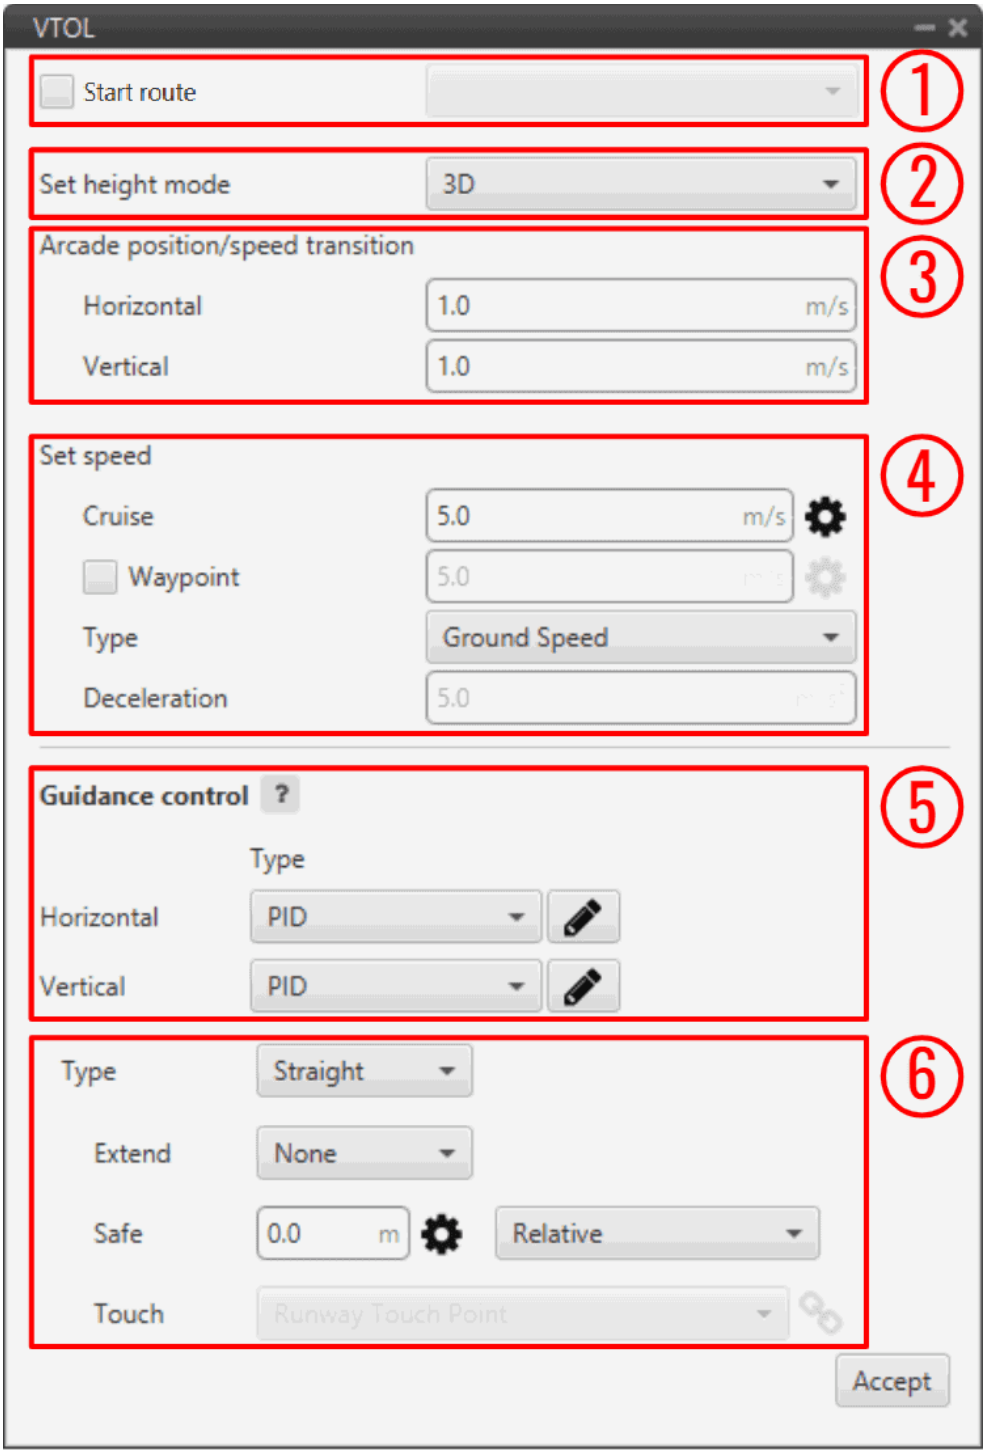


VTOL block configuration


All the parameters that define the VTOL guidance are detailed.

1. **Start route**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
2. **Set height mode**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
3. **Arcade position/speed transition**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
4. **Set speed**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
5. **Guidance control**: This is detailed in the common guidance block parameters, described at the beginning of this section in Guidance blocks common configuration.
6. **Type**: These parameters are used to indicate how the multicopter follows the route during the take-off and landing.
   - The path **Straight** consists on a vertical line from the point where the vehicle enters in this phase. In the case of a take-off, the line goes from the ground to an altitude indicated by the user.
   - The second option, **Hangman**, the path consists on a vertical and horizontal line.

   - **Extend**: When **Up** or **Down** are selected, the value set in Safe will be discard, and the platform will ascend or descend, until a next change.
   - **Safe**: This parameter defines the altitude the aircraft reach. The user can select an Operation Guidance point from the drap-down

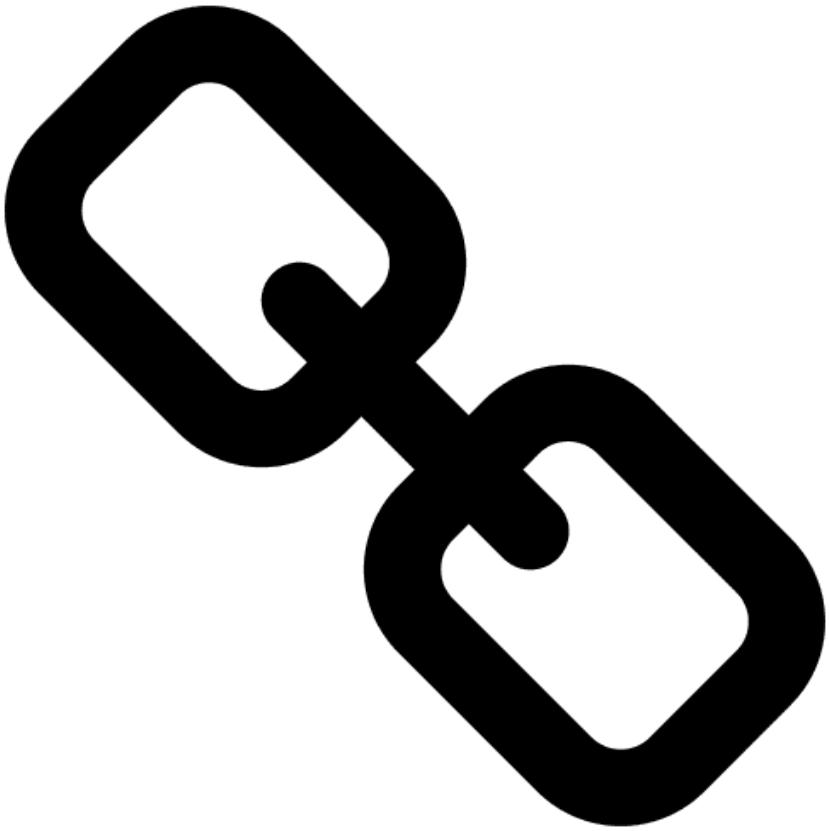list ( icon

selected) or manually enter a value

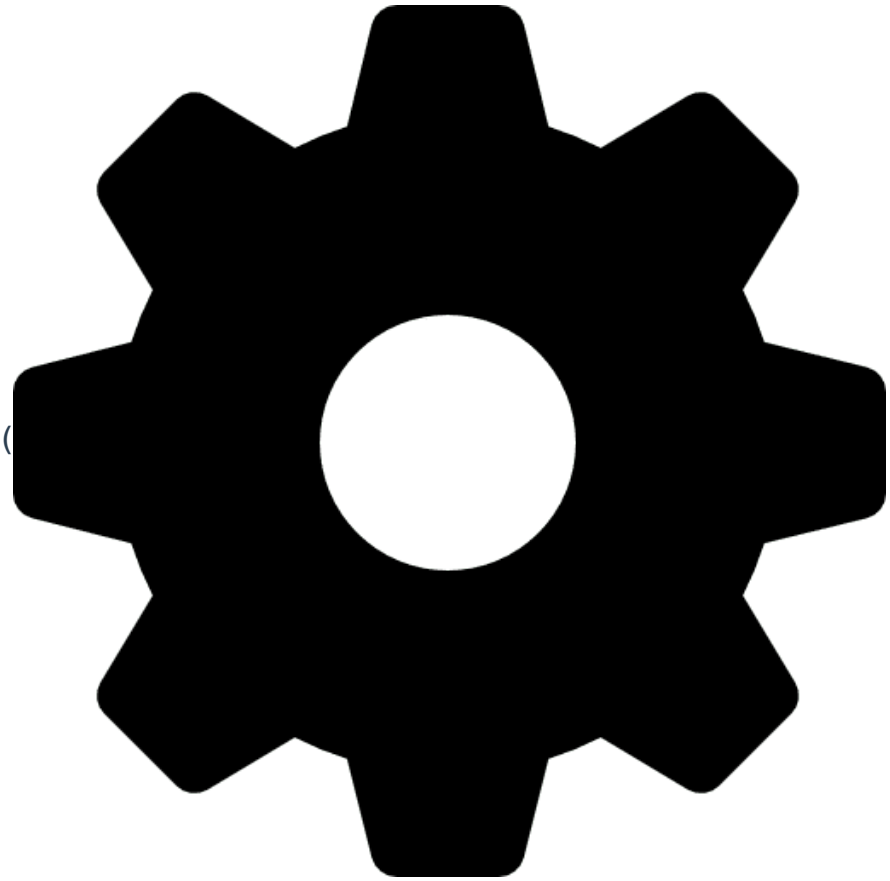( icon selected), this latter value can be:

- **Relative**: Starting from the initial point of the route (current platform position).
- **Absolute altitude**: MSL, AGL or WGS84.


  As an example, in a Take-Off operation, an altitude of -10000 meters can be indicated as the final point of the route, so it is sure that the multicopter will keep climbing until another phase is commended (via automation or manually).

  The same procedure is done in the landing, indicating a big relative distance (for example 100 meters from the starting point), so it is sure that the vehicle reaches the ground, and an automation is set to stop the platform when it touches the surface.


> ⓘ **Note**
>
> When the option relative is selected, a positive value will made the aircraft descend. Therefore, this value is Positive down.

- **Touch**: Additional parameter **to be configured when the type Hangman is selected**. It defines a point that the aircraft has to reach. For instance, after go Up/Down the set value, the aircraft will perform an horizontal movement according to the defined point. Finally, when the aircrafts is over the point, it will descend until reaches that point.
  Usually, this option is used to land at the same point where it took-off (**Return to Take-Off point**) or when there are obstacles in the area and by performing this movement the platform can avoid them and land safely.

  There are 2 ways to configure it:

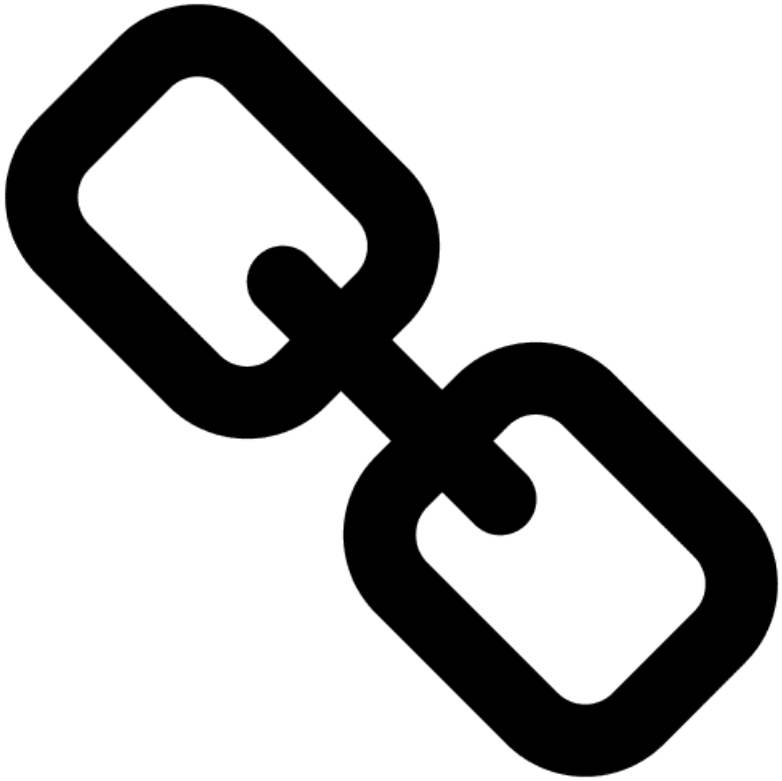
  -  icon

    selected: By default, this point is the touch point of the runway. But the user can select in the drop-down list any other previously defined point. This includes waypoints defined in the Mission (in **Veronte Ops**), among many others.

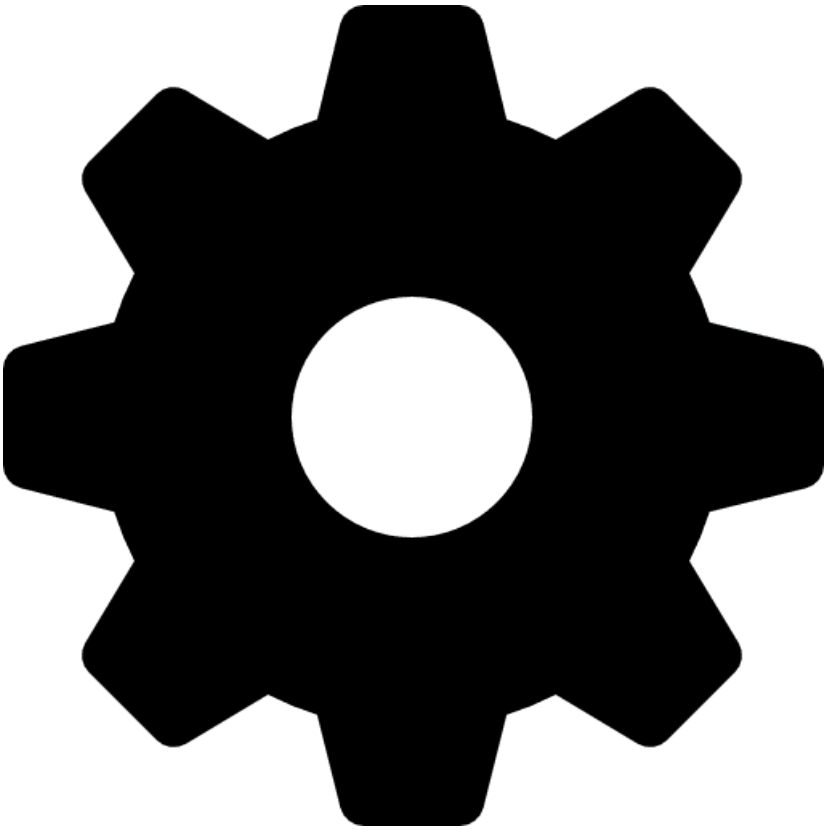
icon


selected: Alternately, the user can manually define this point. Then it can be configured in two ways:

- **Relative**: In this case, the position of the point is relative to another point. That point could be any platform fitted with an Autopilot 1x.
- **Absolute**: The coordinates can be set in UTM, MGRS, Decimal Degrees or Degress º " '. They are indicated through the latitude and longitude.

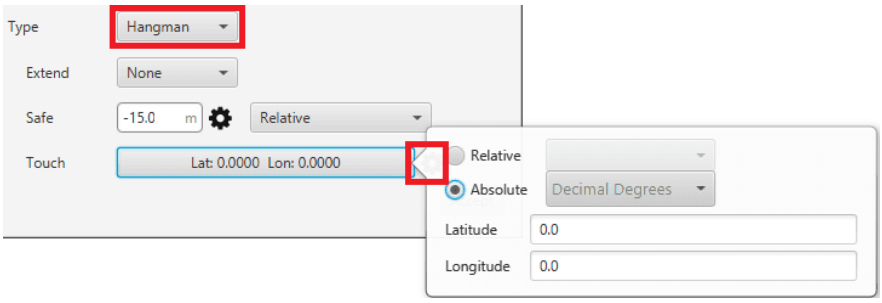

Touch options

The following image gives an overview of some parameters introduced:

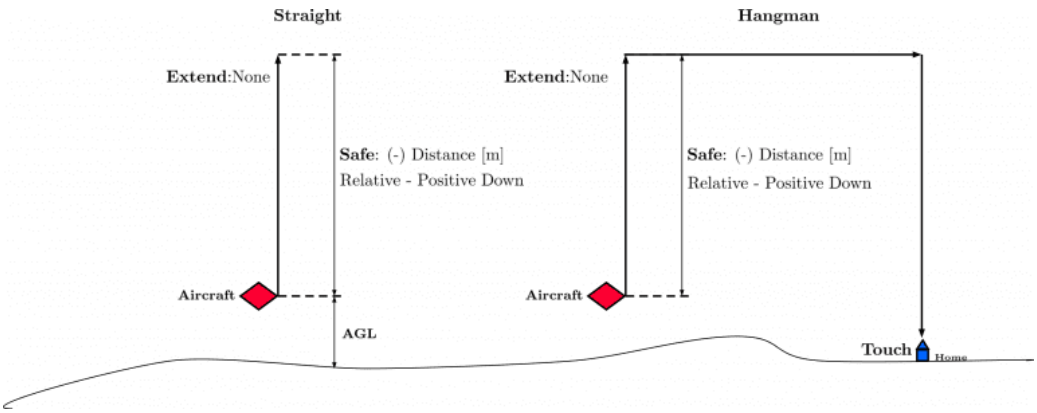


Parameters Overview

Yawing current

Yaw guidance is used in multicopters to indicate the behavior of the platform in the yaw axis. This option is normally used during the cruise phase of the multicopters, because the route can be carried out with the aircraft without rotating in the yaw axis, or rotate it to point its longitudinal axis parelel to the path.

Yawing current block produces the desired yaw by **keeping the yaw reading in on focus**. That is, the multicopter will **keep the yaw angle it has when entering in the phase** that contains this guidance. **Desired Yaw = Current Yaw**.

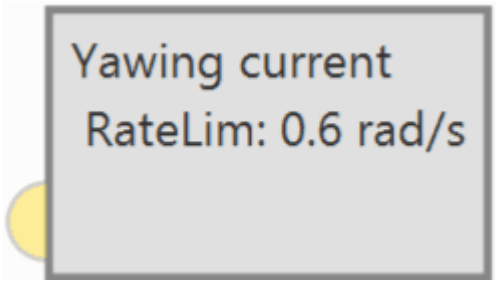

Yaw current block

- **Input**

  (Optional) **Commanded yaw offset with respect to reference**:

  It is the desired yaw increment with respect to the yaw reference set in the block.
- **Configuration menu**:



Yaw current block configuration


- **Limit enabled**: When activated, the yaw rate limit will be set to a constant value indicated below.
- **Limit rate value**: The user can enter this value in different units. The available units are: **rad/s**, **rad/m**, **rad/h**, **rps**, **rpm**, **rph** and **°/s**.

Yawing heading

Yaw guidance is used in multicopters to indicate the behavior of the platform in the yaw axis. This option is normally used during the cruise phase of the multicopters, because the route can be carried out with the aircraft without rotating in the yaw axis, or rotate it to point its longitudinal axis parelel to the path.

Yawing heading block produces the desired yaw as **an angle offset from heading**.

Heading represents the direction of the velocity vector and, when it is very small, its estimation is more complex and the direction is constantly changing. Because of this, the **approximation Yaw = Heading** is introduced when the **estimated velocity is close to 0**.

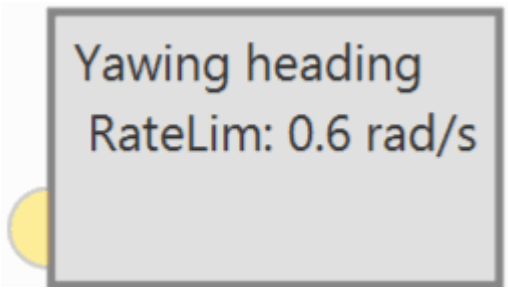

Yaw heading block

- **Input**

(Optional) **Commanded yaw offset with respect to reference**:

It is the desired yaw increment with respect to the yaw reference set in the block.

- **Configuration menu**:




Yaw heading block configuration

  - **Limit enabled**: When activated, the yaw rate limit will be set to a constant value indicated below.
  - **Limit rate value**: The user can enter this value in different units. The available units are: **rad/s**, **rad/m**, **rad/h**, **rps**, **rpm**, **rph** and **°/s**.

Yawing north

Yaw guidance is used in multicopters to indicate the behavior of the platform in the yaw axis. This option is normally used during the cruise phase of the multicopters, because the route can be carried out with the aircraft without rotating in the yaw axis, or rotate it to point its longitudinal axis parelel to the path.

Yawing north block produces the desired yaw as **an angle offset from north**. That is, the yaw of the multicopter will be rotated so that its longitudinal axis always has **north as a reference**.

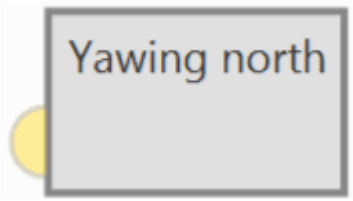

Yaw north block

- **Input**

(Optional) **Commanded yaw offset with respect to reference**:

It is the desired yaw increment with respect to the yaw reference set in the block.

- **Configuration menu**:



Yaw north block configuration


  - **Limit enabled**: When activated, the yaw rate limit will be set to a constant value indicated below.
  - **Limit rate value**: The user can enter this value in different units. The available units are: **rad/s**, **rad/m**, **rad/h**, **rps**, **rpm**, **rph** and **°/s**.

On the other hand, there are 3 more blocks that help the navigation guidance.

Navigation guidance blocks


These blocks, based on the position of a target, calculate the acceleration required to reach that position.

- **PNav**: Proportional navigation block. The algorithm implemented in this block is based on the fact that two vehicles are on a collision course when their direct line-of-sight does not change direction as the range closes. So, PNav **dictates that the missile velocity vector should rotate at a rate proportional to the rotation rate of the line of sight** (LOS-rate), and in the same direction.

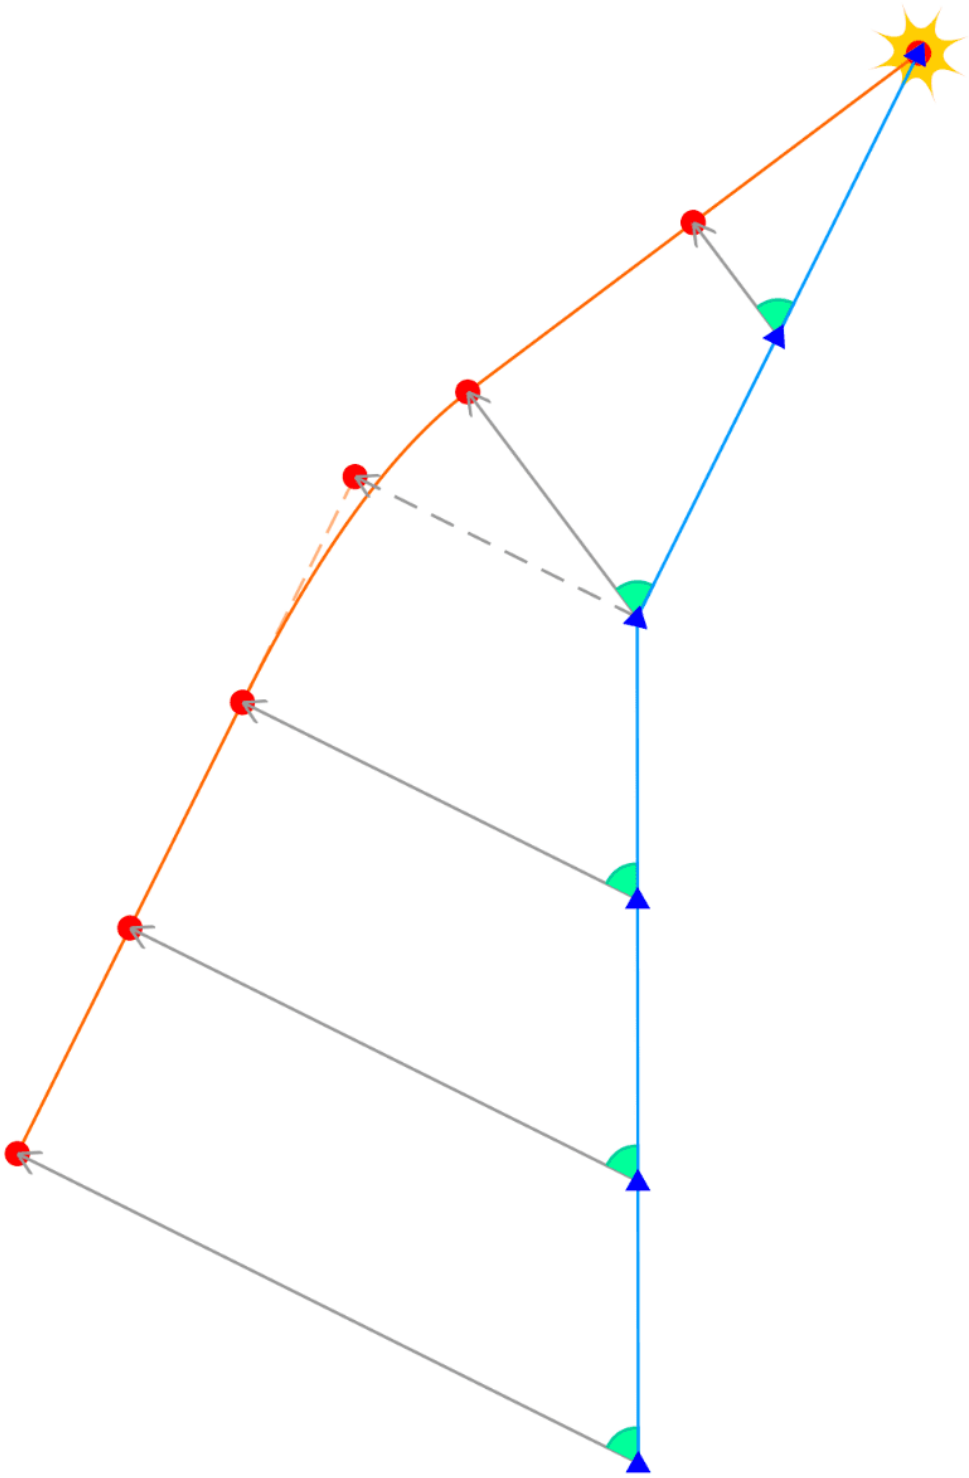

PNav algorithm: A missile (blue) intercepts a target (red) by maintaining constant bearing to it (green)

- **Modified PNav**: Modified proportional navigation guidance (Old Miura).
- **GENEX**: Generalized Vector Explicit Guidance (GENEX) block.

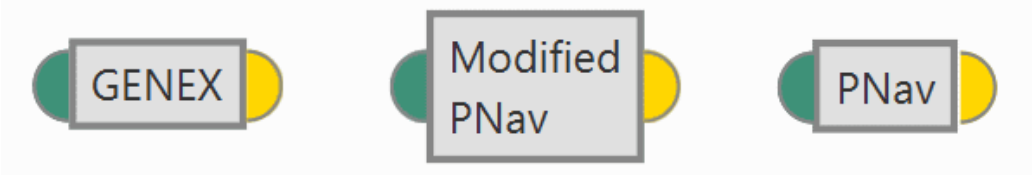

Navigation guidance blocks

They are configured the same, but with slightly different algorithms:


- **Input**

  Pin 0: Target position.

- **Output**

  Pin 0: Desired acceleration in body axis.

- **Configuration menu**:

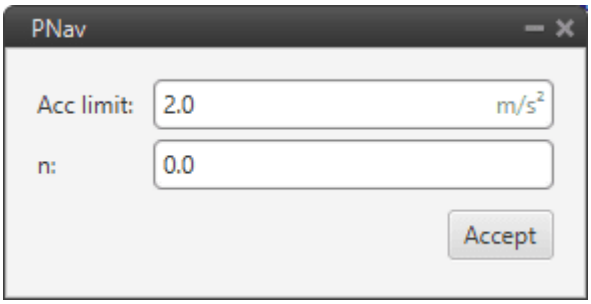

PNav block configuration


The following parameters are configurable:

- **Acc limit**: The user can fix a limit for the acceleration. The units available for this value are: **m/s²**, **ft/s²**, **in/s²** and **g**.
- **n**: It is a proportional parameter.

Library blocks

Library blocks are custom blocks. They are usually a combination of blocks that are used many times in the configuration of block programs, so for ease of configuration, the user can group them into a single block.


There are 2 types of Library blocks: Custom and Default blocks.

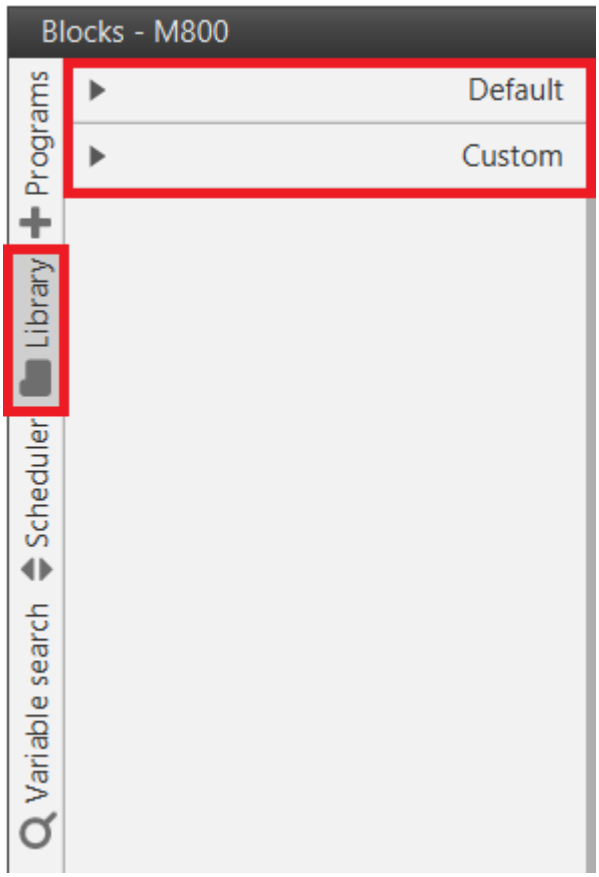

Library blocks menu


- **Custom**

  These are custom blocks created by the user. They can be added by simply clicking on . An example of how to create one of these blocks is shown below:

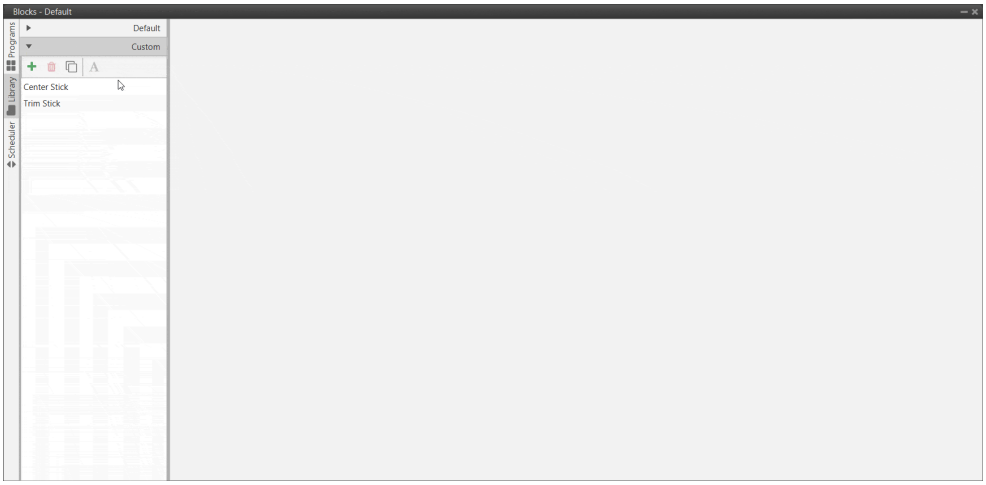


Example of custom library block

Examples of such blocks are those related to the Stick, which have been named "Center Stick" and "Trim Stick":

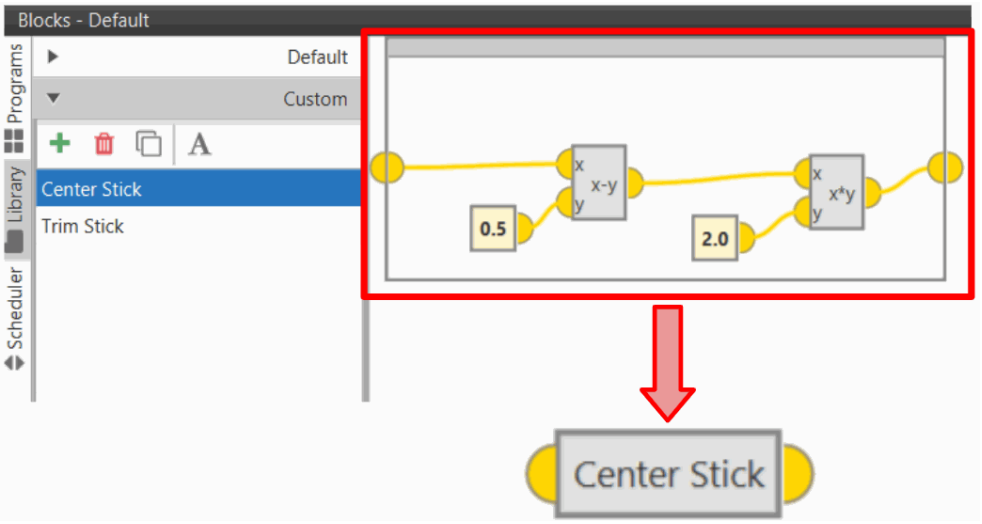

Example of custom library block - Center Stick

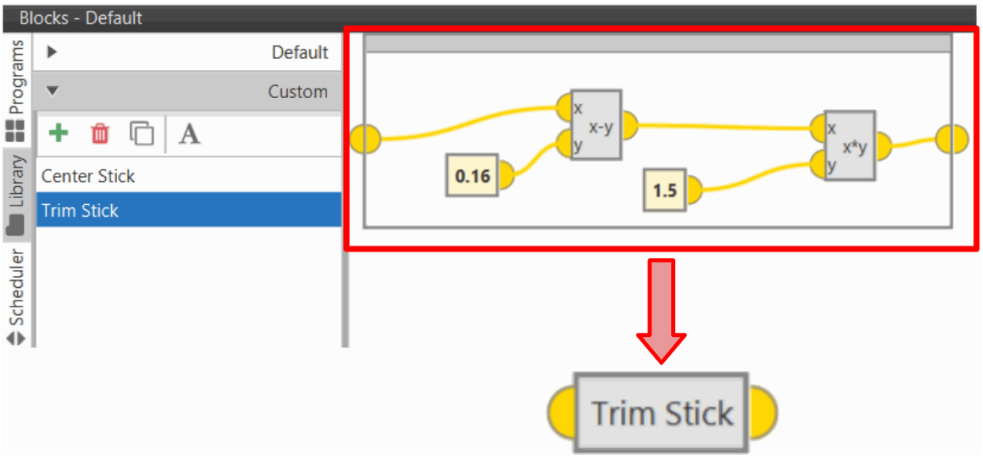


Example of custom library block - Trim Stick


> ⚠ **Warning**
>
> A maximum of **32 Custom libraries** can be created.

- **Default**

  There is only one 'Default' library block, it is called: **Sagetech ADSB**. This is a block created for the Transponder/ADS-B "**Sagetech MXS**".

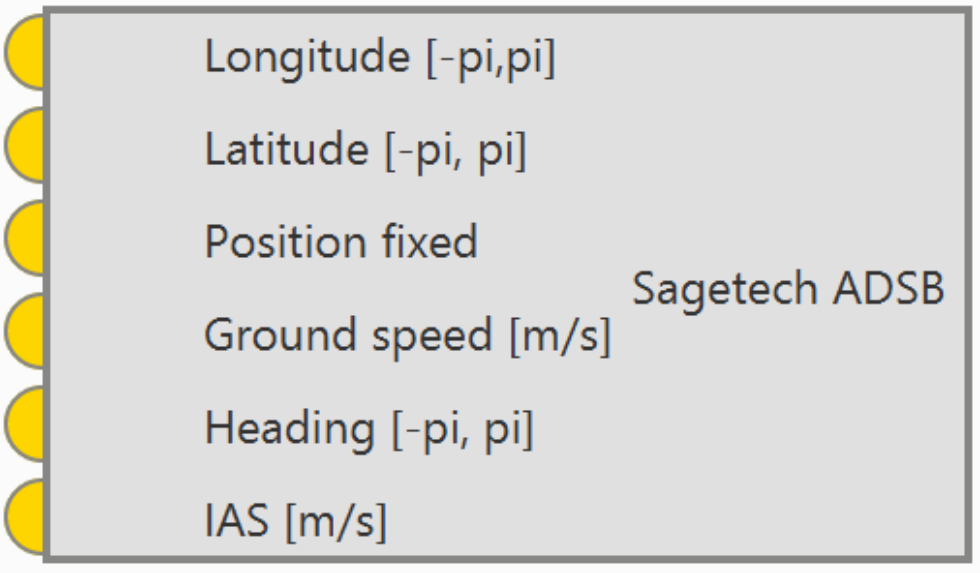


Default library block - Sagetech ADSB block

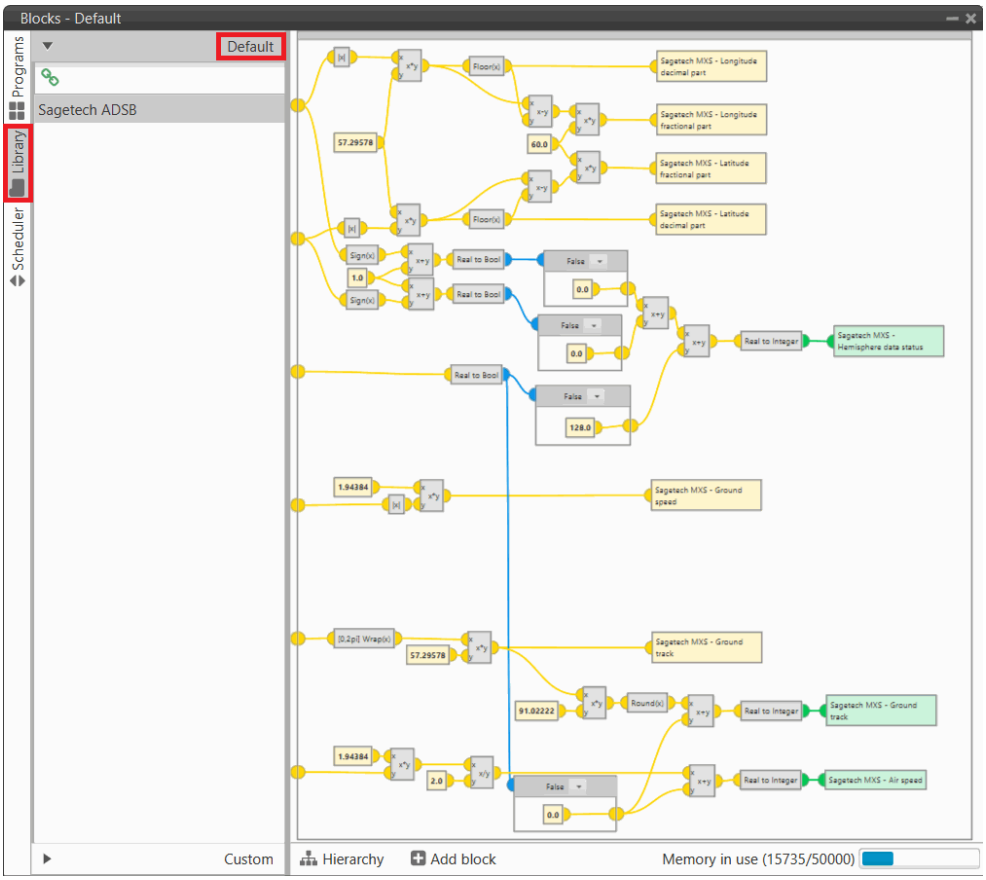


Default library block - Sagetech ADSB block configuration

By clicking on the

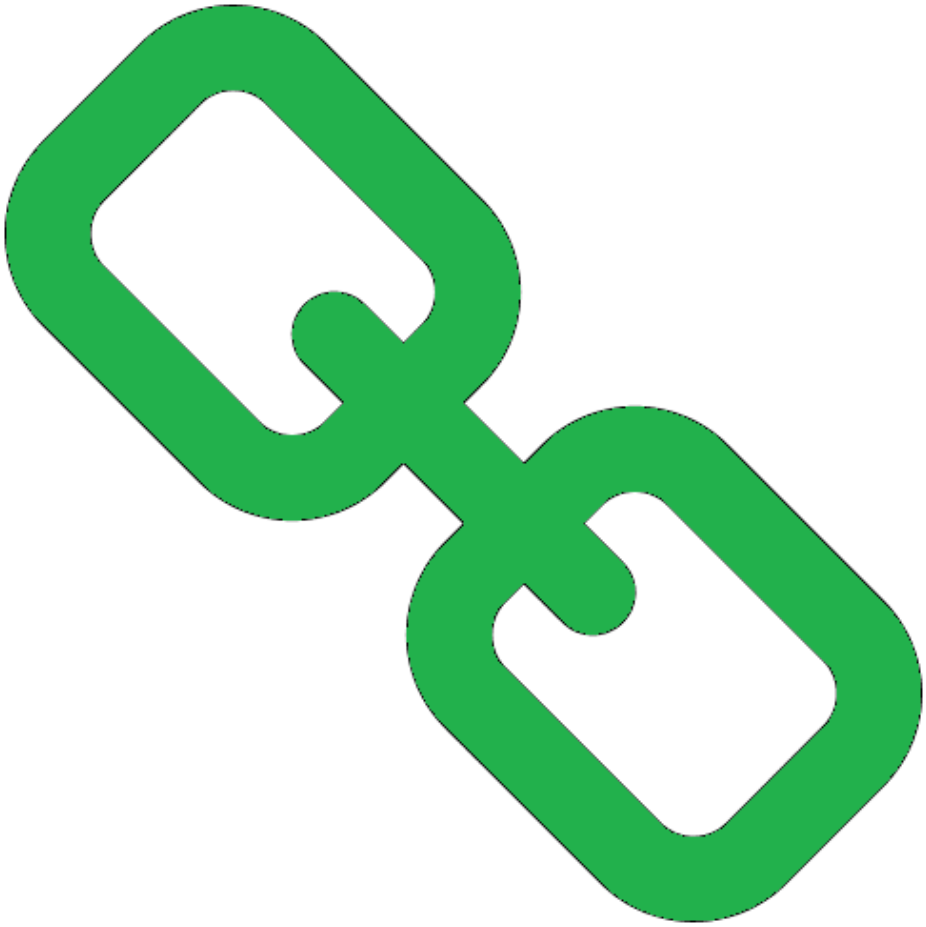

icon, it will

appear as 'Custom' block and will be available in the Library blocks, so that users will be able to use it in their programs.

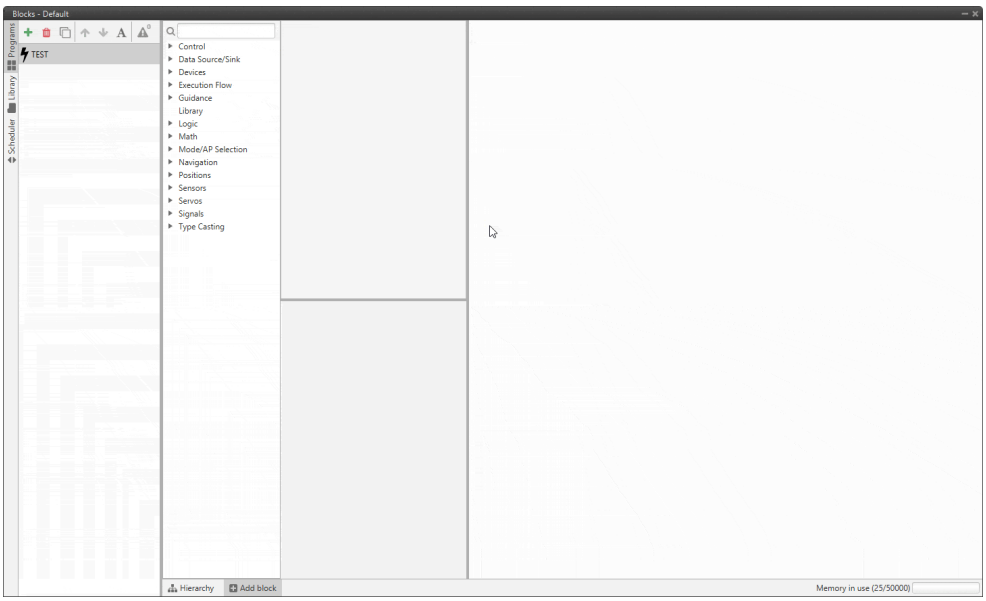


Default library block - Sagetech ADSB

Logic blocks

Logic gates for operating with boolean variables.

AND

Returns true if ALL inputs are true, else return false.

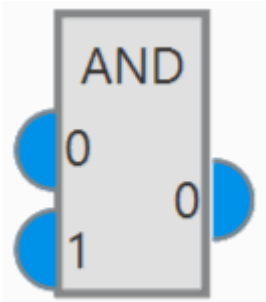

AND block

- **Inputs**
  - **0**: Input bit.
  - **1**: Input bit.
- **Output**
  - **0**: Output bit.
- **Configuration menu**



AND block configuration

Here the user can configure the number of inputs. The units available units for this value are: **bin**, **octal**, **dec** and **hex**.

NOT

Logical complement (negation) computation.




NOT block

- **Input**
  - **0**: Input bit.
- **Output**
  - **0**: Output negated bit.

OR

Returns true if ANY of inputs are true, else return false.

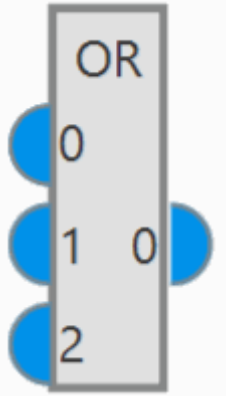

OR block

- **Inputs**
  - **0**: Input bit.
  - **1**: Input bit.
  - **2**: Input bit.
- **Output**
  - **0**: Output bit.
- **Configuration menu**




OR block configuration

Here the user can configure the number of inputs. The units available units for this value are: **bin**, **octal**, **dec** and **hex**.

Math blocks

Math blocks allow to perform a wide variety of mathematical operations.

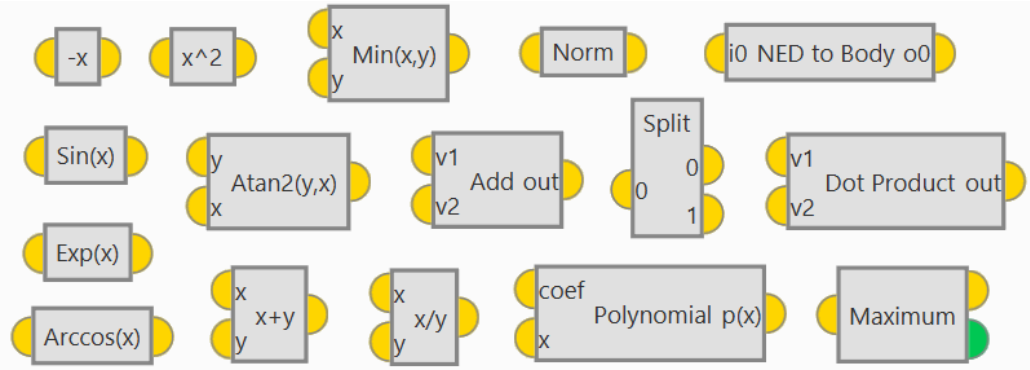

Math blocks

f(x)

Math blocks with 1 input and 1 output.

All f(x) math blocks have the same input and output:

- **Input**

  : Input value, real variable or constant.

- **Output**

  : Output value.

> ⚠ **Warning**
>
> All these blocks express the **output value in radians**.

Users will find the following blocks:

- **-x**: Change of sign.
- **1/x**: Inverse of the input (1/x).
- **[-0.5,0.5] Wrap**: Wrapping to the range [-0.5, 0.5].

- **[-pi,pi] Unwrap**: Angle unwrap from [-pi, pi] limits. This block converts an angle signal in the range [-pi, pi] to a continuous signal in the range [-inf, +inf] assuming the smallest angle change between execution steps.
- **[-pi,pi] Wrap**: Angle wrapping to the range [-pi, pi] radians.
- **[0,1] Wrap**: Wrapping to the range [0, 1].
- **[0,2pi] Wrap**: Angle wrapping to the range [0, 2*pi] radians.
- **Arccos(x)**: Arccos function.
- **Arcsin(x)**: Arcsin function.
- **Arctan(x)**: Arctangent function.
- **Ceil(x)**: Closest intger rounding towards plus infinity.
- **Cos(x)**: Cosine function.
- **Exp(x)**: Natural exponent (e number to the power of the input of the block).
- **Floor(x)**: Closest integer rounding towards minus infinity.
- **Log(x)**: Natural logarithm.
- **Round(x)**: Rounding to closest integer.
- **Sign(x)**: Sign of the input. It returns '**1**' if the input is **positive or zero** and '**-1**' if **negative**.
- **Sin(x)**: Sine function.
- **Sqrt(x)**: Square root.
- **Tan(x)**: Tangent function.
- **x^2**: Square of the input.
- **|x|**: Absolute value.

f(x,y)

Math blocks with 2 inputs and 1 output.

All f(x,y) math blocks have the same inputs and output:

- **Inputs**
  - : Input value, real variable or constant.
  - : Input value, real variable or constant.
- **Output**


: Output value.

Users will find the following blocks:

- **Atan2(y,x)**: Calculates one unique arc tangent value, where the signs of both arguments are used to determine the quadrant of the result.
- **Max(x,y)**: Returns the maximum value of the two inputs.
- **Min(x,y)**: Returns the minimum value of the two inputs.
- **Remainder(x/y)**: Remainder block computes the remainder of the division with the first input as numerator and second input as denominator.
- **x*y**: Mulitplier block.
- **x+y**: Adder block.
- **x-y**: Subtract block computes the subtraction of the first input minuts the second input.
- **x/y**: Divider block computes the division with the first input as numerator and second input as denominator.
- **x^y**: Computes the first input raised to the power of the second input.

Polynomial

This block performs a polynomial evaluation, it returns the value of the polynomial defined by the coefficients for the value of x.

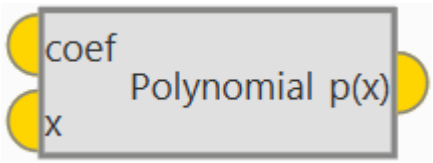

Polynomial block

- **Inputs**

  coef: Array of polynomial coefficients. The order is in increasing order of powers, that is first element is the independent term, second term is the proportional term, third the quadratic term, etc.


  x: Value of evaluation of the polynomial.

- **Output**

p(x): Result of the polynomial evaluation.

r64 f(x)

These blocks belong to the Math library and are used to perform standard mathematical operations on signals within the control logic.

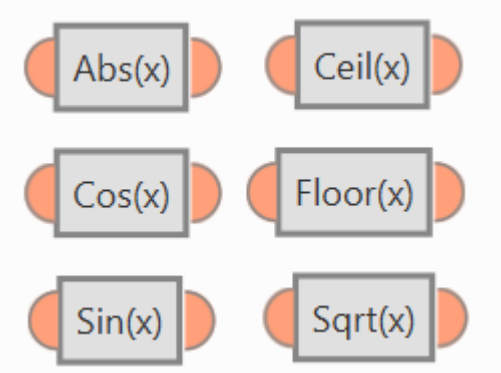

Math blocks

Each block receives an input value, applies the corresponding mathematical function, and provides the result as an output.

- **Input**

  Input value.
- **Output**


  Output value.

Users will find the following blocks:

- **Abs(x):** Calculates the absolute value.
- **Ceil(x):** Closest integer rounding towards plus infinity.
- **Cos(x):** Cosine.
- **Floor(x):** Closest integer rounding towards minus infinity.
- **Sin(x):** Sine.
- **Sqrt(x):** Calculates the square root of the input.

r64 f(x,y)

These blocks are used to perform arithmetic and trigonometric operations that require two input variables.

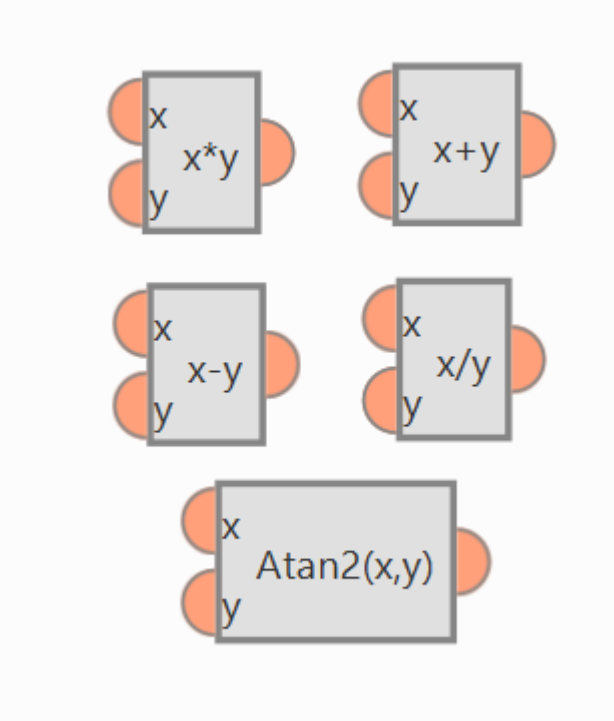

Math blocks

Each block processes two input signals to produce a single mathematical result:

- **Inputs**
  - x: Input value.
  - y: Input value.
- **Output**
  - Output value.


Users will find the following blocks:

- **Atan2(x,y):** Calculates the multi-quadrant arctangent. This function returns the angle in radians between the positive x-axis of a plane and the point given by the coordinates.
- **x*y:** Multiplies the first and second values.
- **x+y:** Adds the first and second values.
- **x-y:** Subtracts the first and second values.
- **x/y:** Divides the first and second values.

> ⚠ **Warning**
>
> Precaution must be taken to ensure the divisor y is **never zero** to prevent undefined mathematical results or system errors.

Unit16

Mathematical blocks designed to operate on 16-bit unsigned integers. These blocks are optimized for logical and binary arithmetic operations.

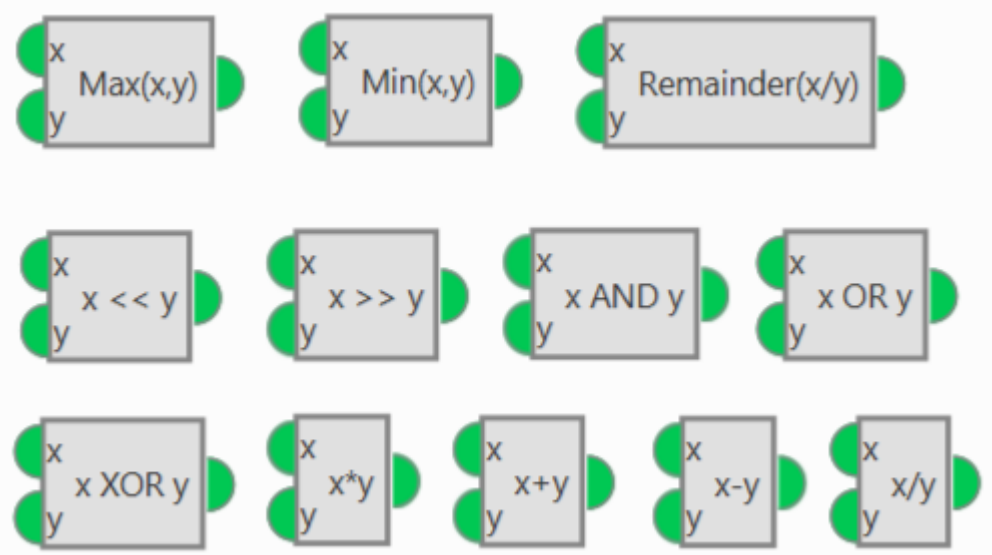

Unit16 blocks

All Uint16 math blocks share the same input and output:

- **Inputs**
  - x: Input value.
  - y: Input value.
- **Output**
  - Output value.

Users will find the following blocks:


- **Max(x,y)**: Returns the maximum between the first input and the second input.

- **Min(x,y)**: Returns the minimum between the first input and the second input.
- **Remainder(x/y)**: Returns the remainder of the division of the first input by the second input.
- **x << y**: Returns the bit-wise left shift (<<) of the first input the number of places indicated by the second input.
- **x >> y**: Returns the bit-wise right shift (>>) of the first input the number of places indicated by the second input.
- **x AND y**: Returns the bit-wise AND of the first input and second input.
- **x OR y**: Returns the bit-wise OR of the first input and second input.
- **x XOR y**: Returns the bit-wise XOR of the first input and second input.
- **x*y**: Returns the multiplication of the two inputs.
- **x+y**: Returns the addition of the two inputs.
- **x-y**: Returns the subtraction of the first input minus the second input.
- **x/y**: Returns the division of the first input by the second input.

Vectors

These are blocks that perform operations with vectors.

- **Add**: Adds two vectors together.

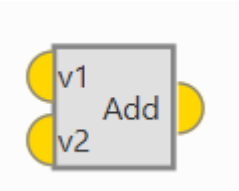

Add block

  - **Inputs**


    v1: Vector 1 addend.

    v2: Vector 2 addend.

  - **Output**

    Pin 0: Ourput vector sum.

- **Add Elements**: Adds all the element of the input vector.

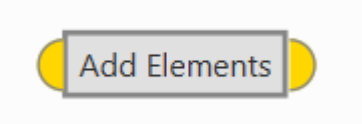

Add element block


- **Input**

  Pin 0: Input vector.

- **Output**

  Pin 0: Sum.

- **azeld -> xyz**: Conversion from azimuth, elevation and distance to NED (North, East, Down).

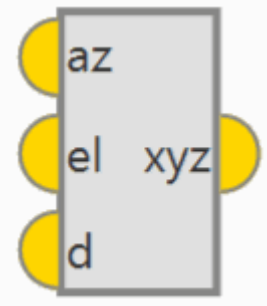

azeld -> xyz block

- **Inputs**

  az: Azimuth in radians.


  el: Elevation in radians.

  d: Distance in meters.

- **Output**

  xyz: NED (North, East, Down) vector in meters.

- **Body to NED**: Rotates a vector from the Body frame of reference to North, East, Down.

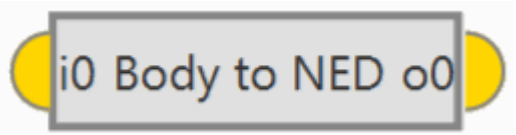

Body to NED block


- **Input**

i0: Vector in Body frame.

- **Output**

o0: Vector in NED frame.

- **Bundle**: Returns a vector whose components are the inputs of the block. In its configuration, the user can set the number of inputs.

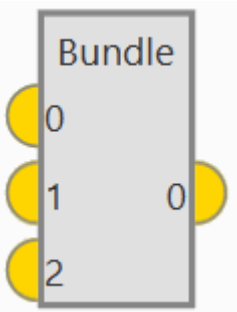

Bundle block

- **Cross product**: Produces the cross product multiplication of the input vectors.
  - **Inputs**

v1: Vector 1 to perform cross product.

v2: Vector 2 to perform cross product.

  - **Output**

0: Output vector cross product.

- **Dot Product**: Returns the dot product of the input vectors.
  - **Inputs**


v1: Vector 1 to perform dot product.

v2: Vector 2 to perform dot product.

  - **Output**

o0: Output vector dot product.

- **Linear Transformation**: Returns the input vector multiplied by the transformation matrix. In order to edit the transformation matrix, double click on the block.

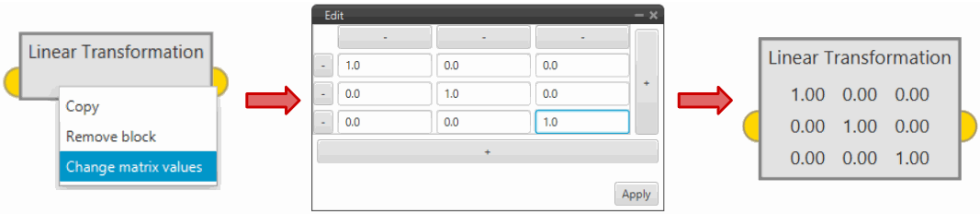

Linear Transformation block

- **m x v**: Multiplies a 3x3 matrix by a vector of size 3.
  - **Inputs**

    m: Matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.

    That is, the input vector must be: [00 10 20 01 11 21 02 12 22]

    Where the matrix will be:

    $$\begin{pmatrix} 00 & 01 & 02 \\ 10 & 11 & 12 \\ 20 & 21 & 22 \end{pmatrix}$$

    v: Column vector with 3 elements.
  - **Output**

    Pin 0: Product of the matrix and the vector, with 3 elements.
- **m1 x m2**: Multiplies two 3 by 3 matrices.
  - **Inputs**

    m1: First matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.

    m2: Second matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
  - **Output**

    Pin 0: Matrix product of both matrices, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.

- **m1 x m2T**: Multiplies a 3x3 matrix by the transpose of another 3x3 matrix.
  - **Inputs**
    - **m1**: First matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
    - **m2**: Second matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
  - **Output**
    - **Pin 0**: Matrix product of the two inputs, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
- **m1T x m2**: Multiplies the transpose of a 3x3 matrix by another 3x3 matrix.
  - **Inputs**
    - **m1**: First matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
    - **m2**: Second matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
  - **Output**
    - **Pin 0**: Product of both matrices, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
- **m1T x m2T**: Multiplies the transpose of two 3x3 matrices.
  - **Inputs**
    - **m1**: First matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
    - **m2**: Second matrix, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.
  - **Output**

Pin 0: Matrix product of both matrices, as an array of 9 elements, where the element 0 is 00 of the matrix, the 1 is 10 and so on.

- **Mat2quat**: Transforms a 3-by-3 rotation matrix (**input**) into its equivalent quaternion (**output**).

  In its configuration users can select whether to conjugate the quaternion or not.

- **Max**: Returns the value and position (integer output) of the highest component of the input vector.
- **Min**: Returns the value and position (integer output) of the lowest component of the input vector.
- **Multiply Elements**: Returns the product of the components of the input vector.
- **NED to Body**: Rotates a vector from the North, East, Down frame of reference to Body.

  NED to Body block

  - **Input**

    i0: Vector in Body frame.

  - **Output**

    o0: Vector in NED frame.

- **Norm**: Computes the norm of the input vector.
- **Quat2mat**: Transforms a quaternion (**input**) into its equivalent 3-by-3 rotation matrix (**output**).

  In its configuration users can select whether to transpose the matrix or not.

- **Scale**: Multiply the input vector (**vIN**) by a scalar value (**k**).
- **Split Bool**: This block takes a boolean vector as input and splits it into as many outputs as the user wishes, each one of them can be a vector or a single value from the input.

  Each output produces a vector with the size (number of elements) indicated in **Size** from the element of the **input vector** indicated in the **Index** parameter.

  In the following example:

  - The first output produces a vector of size 4 with the first four elements (from 0 to 3).
  - The second output only generates a vector of size 1 with the fifth element (4).
  - The third output produces a vector of size 3 with the third to fifth elements (from 2 to 4).



Split Bool block example

- **Split Real**: This block works in the same way as **Split Bool** block does. Nonetheless, **Split Real** operates with real instead of boolean variables.
- **Substract**: Subtracts from the first input vector (**v1**) the other input vector (**v2**).
- **Vector rotation**: Rotates a given vector of 3 elements (**vector to rotate**) by the provided rotation angles (**rotation angles**).
- **xyz -> azeld**: Conversion from NED (North, East, Down) to azimuth, elevation and distance.



xyz → azeld block


- **Input**
  - **xyz**: NED (North, East, Down) vector in meters.
- **Outputs**
  - **az**: Azimuth in radians.
  - **el**: Elevation in radians.
  - **d**: Distance in meters.

Message triggers

The **Message Triggers** is responsible for managing and automating the transmission of data packets to external interfaces. These blocks act as "logical switches" that determine when specific information should be transmitted through the system's communication channels.

CAN message trigger

CAN message trigger block acts as an activator for CAN producers. Its primary function is to trigger the transmission of a specific, previously configured CAN custom message based on a logical event within the control program.

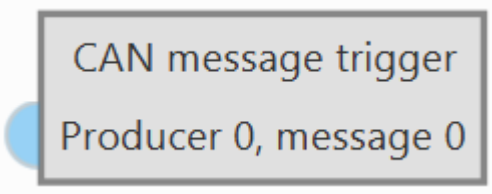


CAN message trigger block

When the input signal receives a boolean TRUE value, the block commands the corresponding CAN producer to transmit the assigned message over the network.

- **Input**

Pin 0: Enable bit.

- **Configuration menu** :

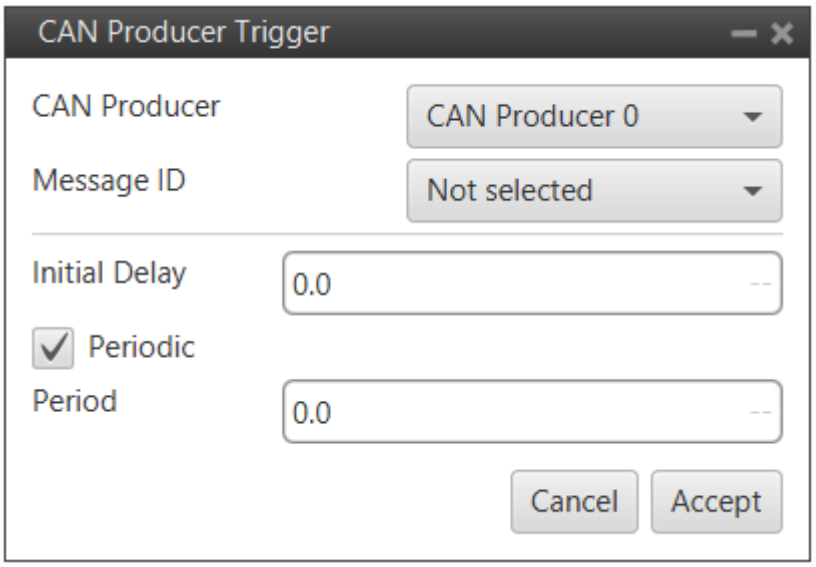


CAN Producer Trigger block configuration

- **CAN Producer**: Allows the selection of which CAN Producer instance is to be triggered.
- **Message ID**: Specifies the exact message that must be sent.
- **Initial Delay**: Waiting time before the first message is sent after the trigger is activated.
- **Periodic**:
  - If disabled, the message is sent once as soon as the input transitions from False to True.
  - If enabled, the message is sent repeatedly as long as the input remains True.
- **Period**: If the Periodic mode is active, it defines the time interval (in seconds) between consecutive transmissions of the message.

Serial producer trigger

Serial message trigger block serves as an activator for serial communication. It is designed to trigger the sending of serial custom messages through the autopilot's serial ports.

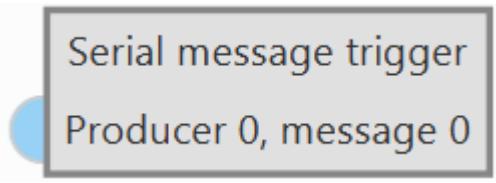


Serial message trigger block

- **Input**



Pin 0: Enable bit.

- **Configuration menu**:

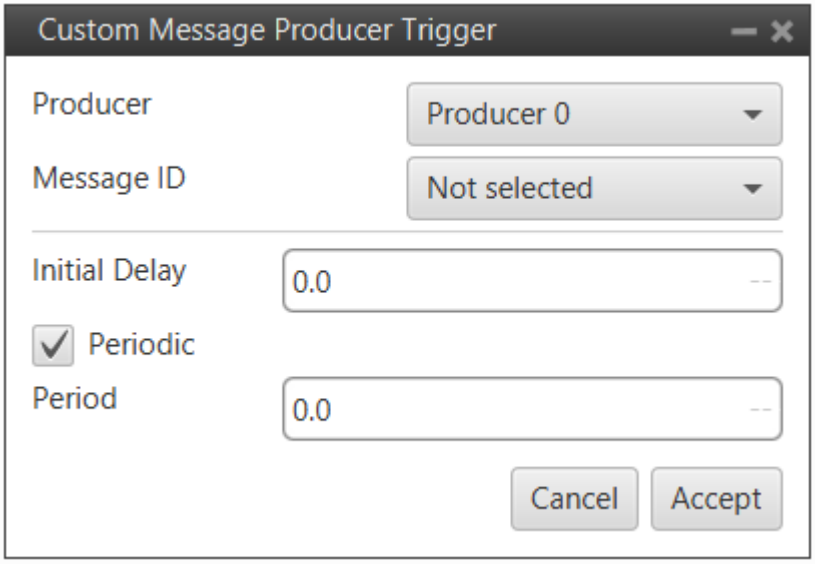

Serial Producer Trigger block configuration

- **Producer**: Selection of the Serial Producer instance that contains the message definition.
- **Message ID**: Selection of the specific message within the chosen Producer to be sent to the serial bus.
- **Initial Delay**: Initial delay before the message is actually transmitted after the input becomes True.

- **Periodic**:
  - If disabled, the message is sent as a single event when the input transitions from False to True.
  - If enabled, the message is transmitted cyclically as long as the input condition remains True.
- **Period**: The time interval between consecutive message transmissions when the Periodic mode is active.


Mode/AP Selection blocks

Mode/AP Selection blocks allow to interact with flight modes and redundancy.

AP Selection


AP selection block behaves differently depending on the selected AP:

- If **this AP is the selected one** then the **input is copied into the output** and the **input is sent** to the other APs **via CAN** (needed to have correct CAN ports configuration).
- If **this AP is not the selected one** then the **outputs** are the **received values via CAN** from the selected AP.

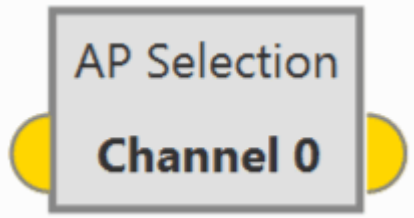

AP Selection block


- **Input**
  - **Pin 0**: Values computed by this AP.
- **Output**
  - **Pin 0**: Values computed by the selected AP.
- **Configuration menu**: The user must select the channel through which information is shared between the APs.

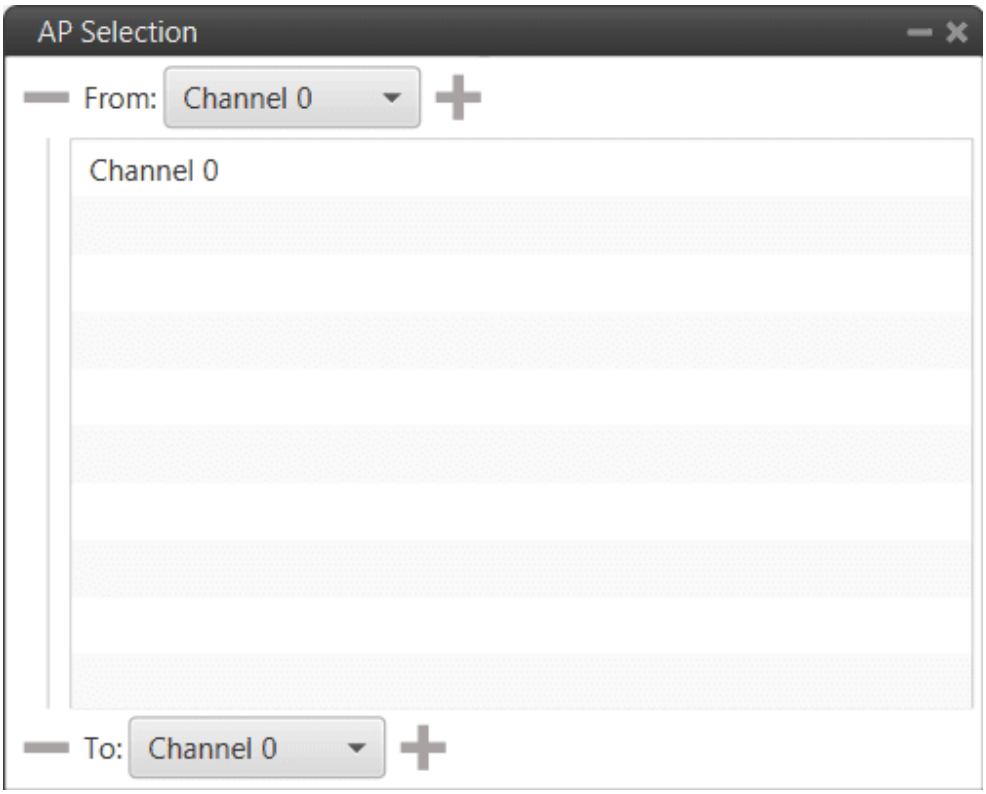

AP Selection block configuration

This block **normally is used for the control outputs**. The APs share the control outputs with each other so that they all use the control output of the selected AP. Therefore, the **input** is the **control output of the AP in the configuration** and the **output** is the **control output of the selected AP**. This can actually be used with any type of variable that you want to share and use the selected AP's variable.


This block is intended to be used as **input** for the inner loop PID (at **control rate**), so that the Integral term of the 3 Autopilots 1x of the DRx remains the same. An example of this use is shown below:

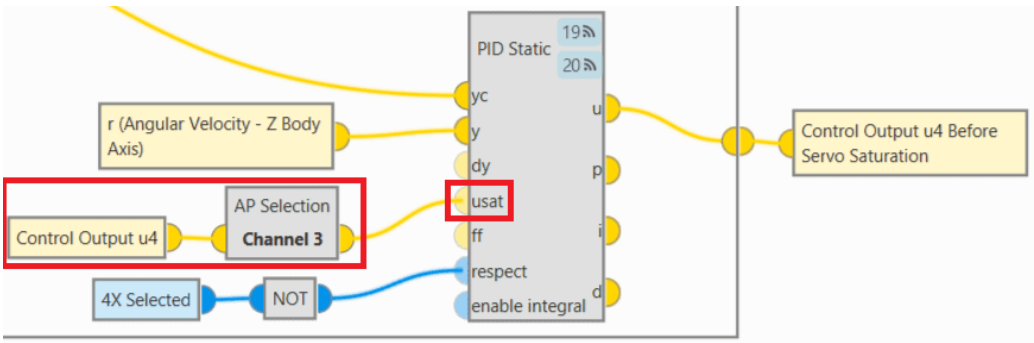

AP Selection block - Example of

Arcade

Arcade Pure block switches between two input signals according to the current mode of the configured channel. Refer to the modes configuration table to check the configuration (go to Modes panel in the **Control menu**).

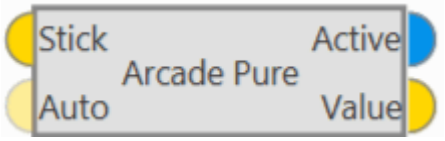

Arcade block

- **Inputs**

  Stick: **Arcade value** to be applied when the configured channel is **in arcade mode**.


  (Optional) **Auto**: **Auto value** to be applied when the configured channel is **not in arcade mode**. The default value if not connected is zero.

- **Outputs**

  Active: **TRUE** if the configured channel is **in arcade mode**, FALSE otherwise.

  Value: Value to apply. In **arcade mode**, this value is equal to the first input (**arcade value**) and in **any other mode** is equal to the second input (**auto value**).

- **Configuration menu**:

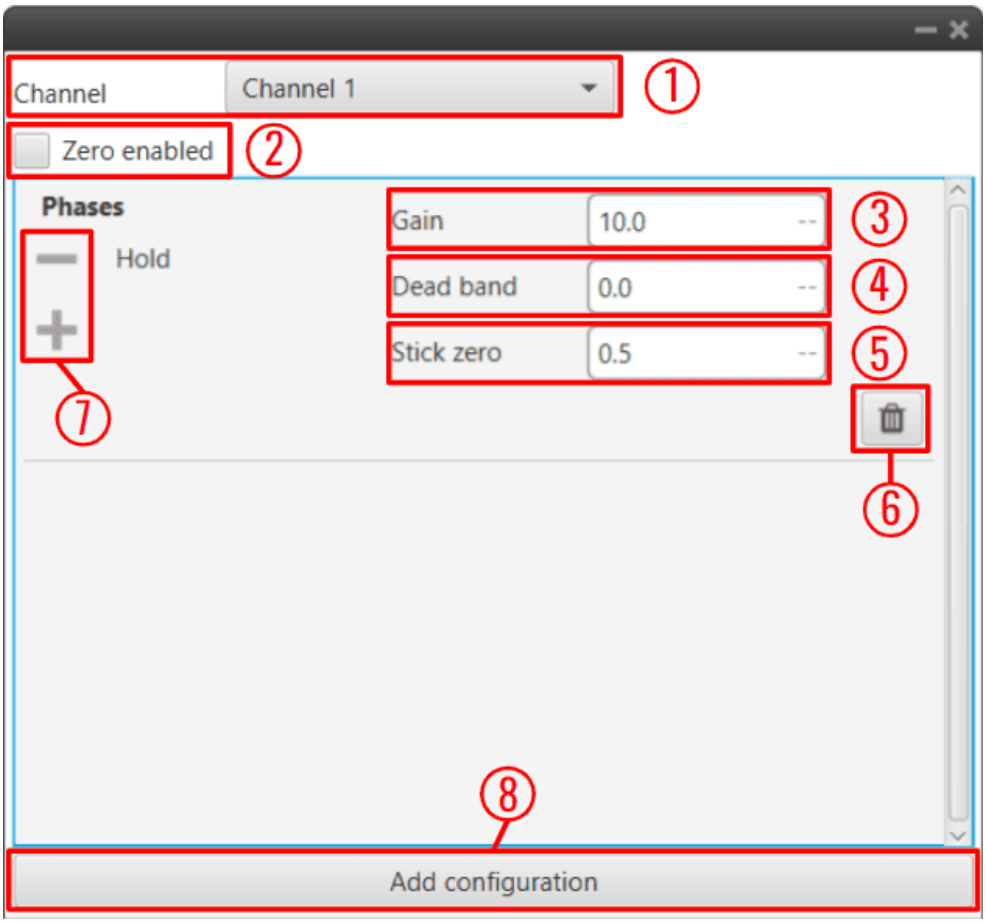


Arcade block configuration

The following parameters must be configured:

1. **Channel**: Channel controlled by this block. Be careful, each channel is related to a control output previously defined in the Modes panel of the **Control menu**.
2. **Zero enabled**: It can be enabled by the user.
   - **Disabled**: If the **stick is in position "0"**, even if it is in arcade mode, the autopilot processes it as if it were **in auto mode**, and consequently, the value of the output **active** will be **false** and the value of the output **value** will be that of the **auto input**.
   - **Enabled**: If the **stick is in position "0"** and in arcade mode, the autopilot still processes it as being **in arcade mode**, so the output **active** value will be **true** and the output **value** will be that of the **stick input**.
3. **Gain**: The output value is the result of multiply the **stick input** by this gain.
4. **Dead band**: Creates a zone where the movement of the stick is not sent to the system.

5. **Stick zero**: Output value when the value of the stick input is 0.

> **Note**
>
> The following diagram details the differences between the parameters **Dead band** and **Stick zero**:

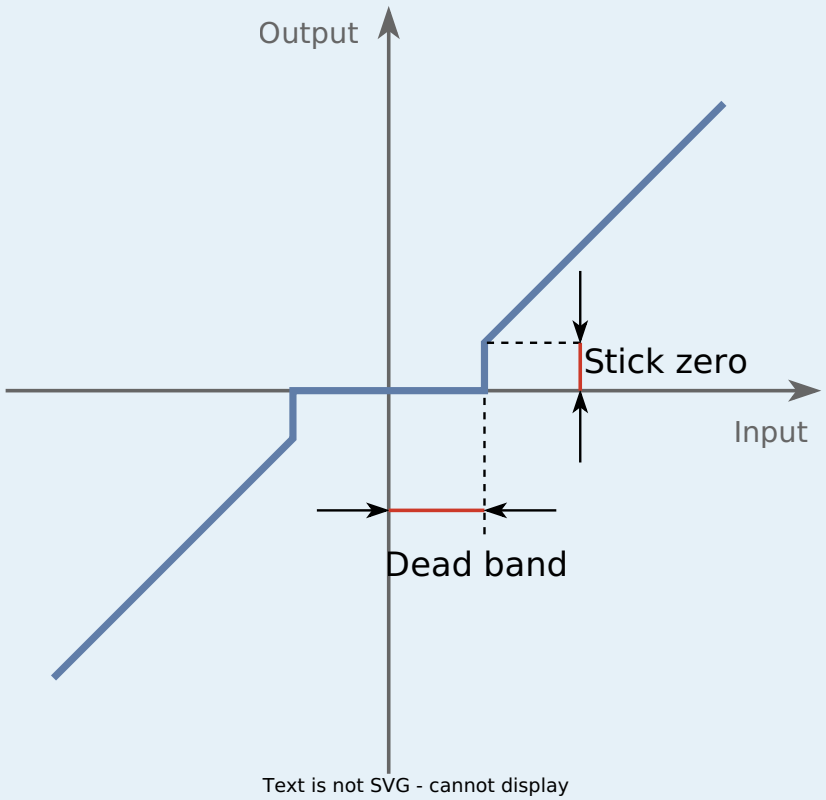


Arcade block configuration - Dead band VS Stick zero

6. Delete a group of phases.
7. Delete/Add a phase to a group.
8. **Add configuration**: Add a new group of phases affected by this block.


Arcade Bounce

Arcade Bounce block switches between two input signals according to the current mode of the configured channel preventing bounces in transitions from arcade to auto. Refer to the mode configuration table to check the configuration (go to Modes panel in the **Control menu**).

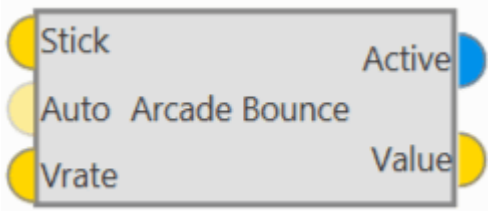


Arcade Bounce block

In the pictures below there is an example controlling the yaw.

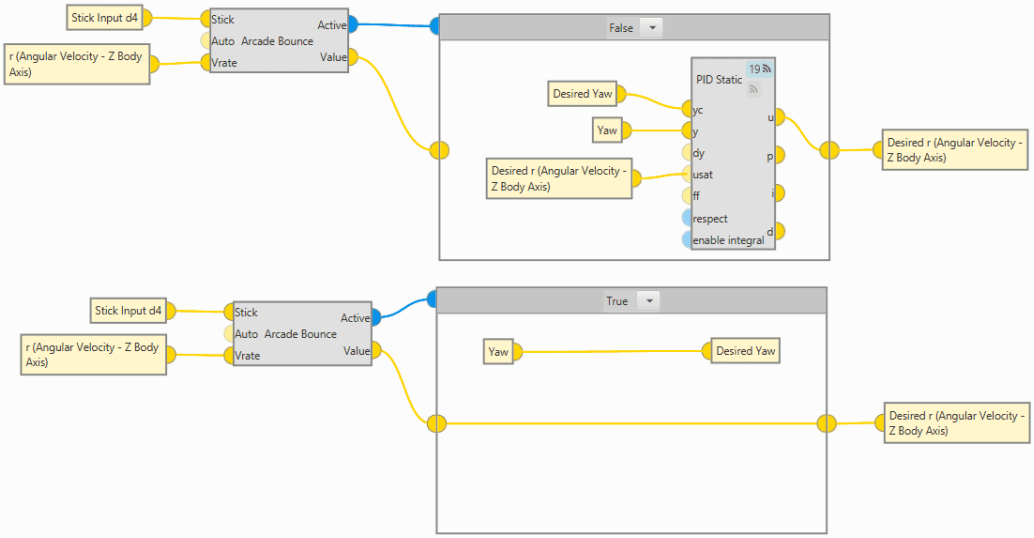

Arcade Bounce block example

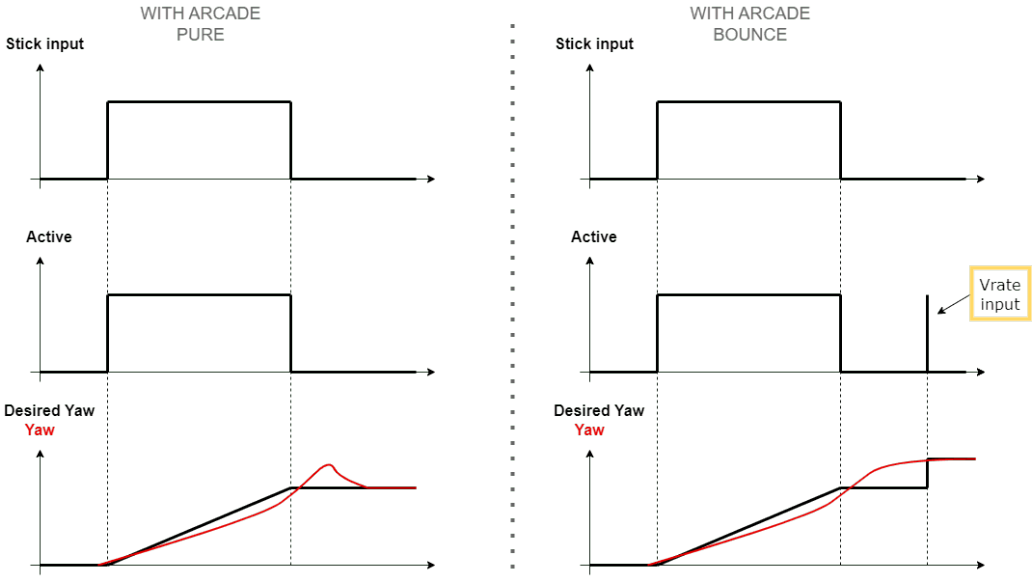

Arcade Pure VS Arcade Bounce

This example is explained below:

When the stick is in its zero position, the command sent is 0, so the status of the Active BIT is FALSE (low level), and the desired yaw is the last yaw saved when the status was TRUE (high level).

However, the platform can still have a **yaw rate** (r (Angular Velocity) variable in the block example) and in an **arcade pure block** it could experiment this **bounce**.


Therefore, with the **Arcade Bounce block**, when the Yaw rate (**Vrate input**) approaches 0 (**changes its sign**), this BIT reverts to TRUE (for a moment), and even though a new yaw rate is not being commanded with the stick, the desired yaw is being updated with the current yaw.

As it is very similar to the Arcade Pure block, the inputs and outputs are the same, except that an additional input is added to this block:

- **Input**

  Vrate: Controlled variable used to prevent bounces.

- **Configuration menu**:

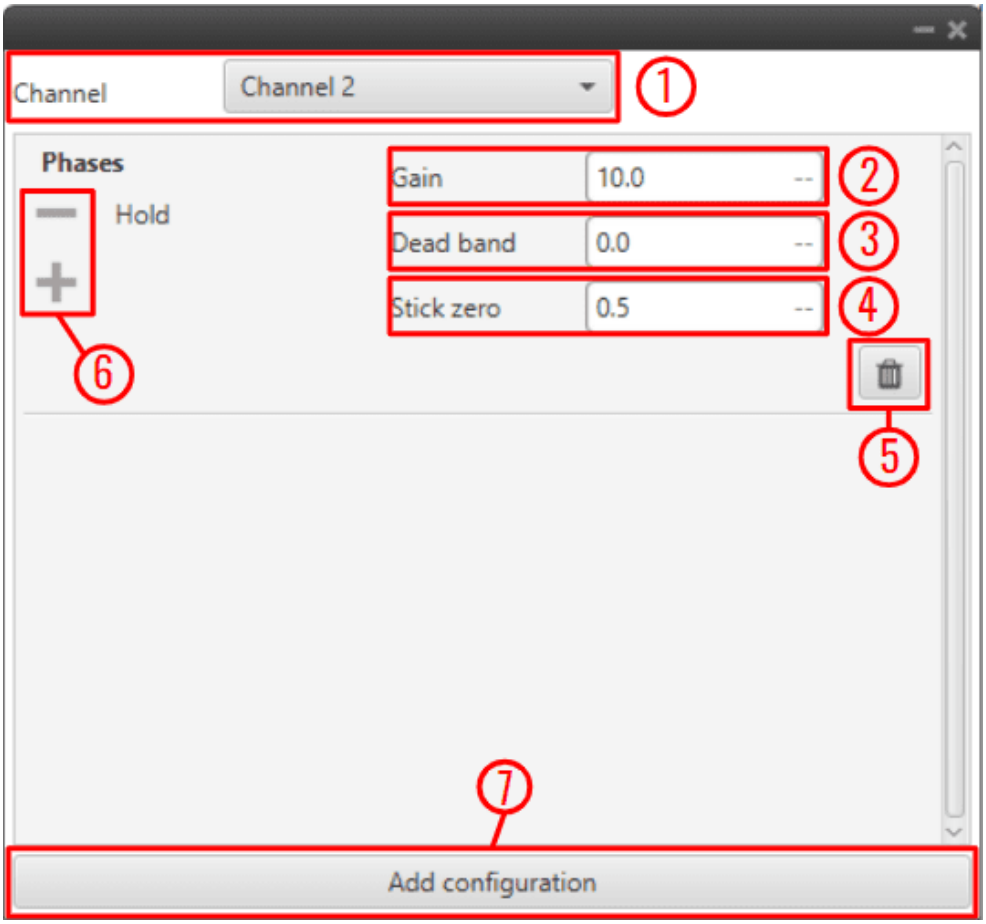

Arcade Bounce block configuration


The following parameters must be configured:

1. **Channel**: Channel controlled by this block. Be careful, each channel is related to a control output previously defined in the Modes panel of the **Control menu**.
2. **Gain**: The output value is the result of multiply the **stick input** by this gain.

3. **Dead band**: Creates a zone where the movement of the stick is not sent to the system.
4. **Stick zero**: Output value when the value of the stick input is 0.
5. Delete a group of phases.
6. Delete/Add a phase to a group.
7. **Add configuration**: Add a new group of phases affected by this block.

Arcade Extend

Arcade Extend block switches between two input signals according to the current mode of the configured channel smoothing the transition by **extending the arcade mode until the input 'Val' goes below the configured margin**. (Similar to Arcade Bounce block). Refer to the mode configuration table to check the configuration (go to Modes panel in the **Control menu**).

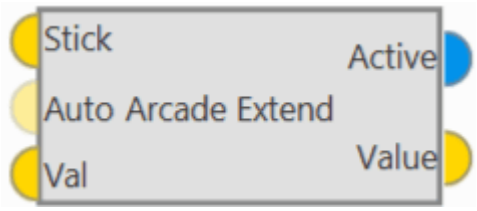


Arcade Extend block

As it is very similar to the Arcade Pure block, the inputs and outputs are the same, except that an additional input is added to this block:

- **Input**

  Val: Controlled variable used to extend the arcade to auto transitions.
- **Configuration menu**:

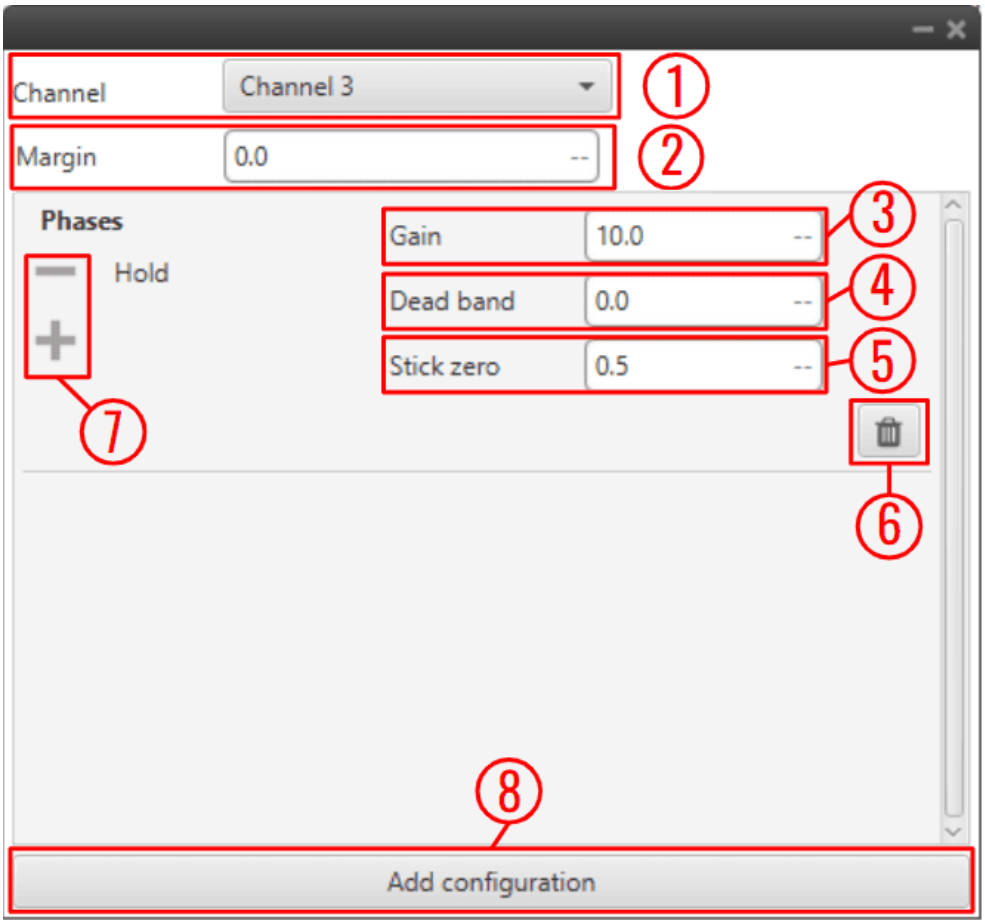


Arcade Extend block configuration

The following parameters must be configured:

1. **Channel**: Channel controlled by this block. Be careful, each channel is related to a control output previously defined in the Modes panel of the **Control menu**.
2. **Margin**: If the 'Val input' is higher than the margin set here, the autopilot will remain in **arcade mode**.
3. **Gain**: The output value is the result of multiply the **stick input** by this gain.
4. **Dead band**: Creates a zone where the movement of the stick is not sent to the system.
5. **Stick zero**: Output value when the value of the stick input is 0.
6. Delete a group of phases.
7. Delete/Add a phase to a group.
8. **Add configuration**: Add a new group of phases affected by this block.


Manual

Manual block switches between two input signals according to the current mode of the configured channel. Refer to the mode configuration table to check the configuration (go to Modes panel in the **Control menu**).

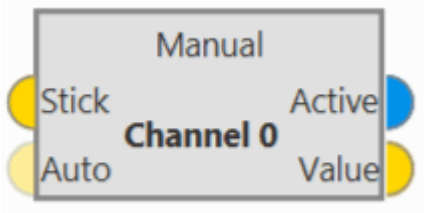

Manual block

- **Inputs**
  - **Stick**: **Manual value** to be applied when the configured channel is **in manual mode**.
  - (Optional) **Auto**: **Manual value** to be applied when the configured channel is **not in manual mode**. The default value if not connected is zero.
- **Outputs**
  - **Active**: TRUE if the configured channel is in manual mode, FALSE otherwise.
  - **Value**: Value to apply, which **in manual mode** is equal to the first input (**manual value**) and in **any other mode** is equal to the second input (**auto value**).
- **Configuration menu**: The user must select the channel to be controlled.

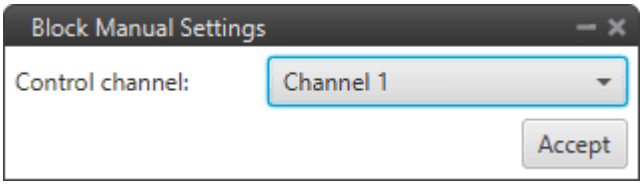


Manual block configuration

Mix

Mix block adds a 'Stick' signal to an 'Auto' signal if the **current mode** for the configured channel is **MIX**, otherwise the output is directly the 'Auto' signal. In

other words, it allows a variable offset to be applied to the input using one of the stick channels.

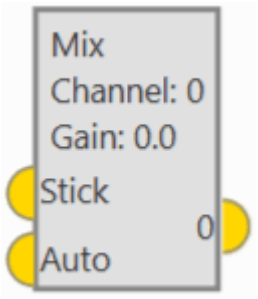

Mix block

- **Inputs**
  - **Stick**: Value to be added to 'Auto' when the configured channel is in MIX mode.
  - **Auto**: Auto value.
- **Output**
  - **0**: If the **configured mode** of the configured channel is **MIX** the **output** is the **addition of 'Stick' and 'Auto'**, otherwise the output is directly 'Auto'.
- **Configuration menu**:



Mix block configuration

The following parameters can be configured:

- **Channel**: The user must select the channel to be controlled.
- **Gain**: This gain will multiply the 'Stick' input (before the addition with the 'Auto' input) if the current mode is MIX.

Navigation blocks


EKF Adapters

These blocks allow the connection between the autopilot sensors (internal or external) and the calculation of the navigation algorithm. That is, they "convert" the sensor data into EKF data in order to implement them in the navigation block (Extended Kalman Filter algorithm).

For this reason, EKF Adapters blocks normally work with the Sensor blocks as inputs.

Altitude

Altitude block adapts an exteral altimeter sensor, like LIDAR, Sonar, etc., to the EKF input.

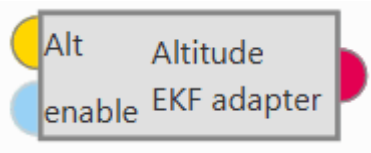

Altitude block

- **Inputs**

  Alt: Altitude measurement as a 3-dimensional real array with the following components:

  - 0: Update flag
  - 1: Altitude measurement
  - 2: Variance

  This input corresponds to the Altitude Sensor block.


  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Output**

  Pin 0: EKF input data (H, R, y).

> **Note**
>
> - **H**: Observation matrix.
> - **R**: Measurement covariance matrix.
> - **y**: Measurement.

- **Configuration menu**:

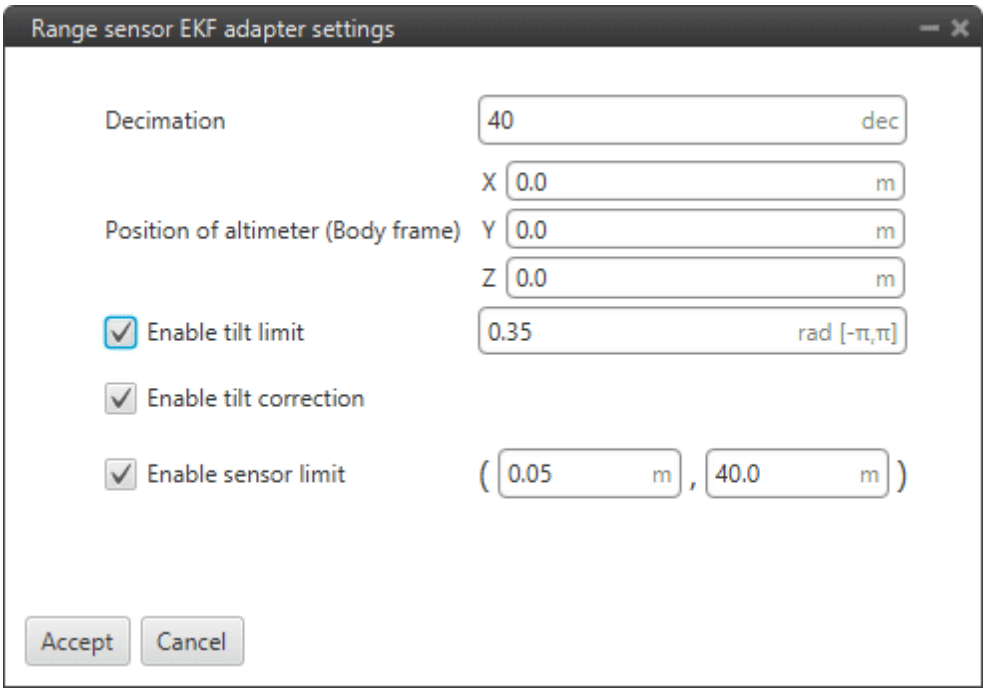

Altitude block configuration

The following acceletometer parameters must be configured:

- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 40** (in decimal units).

  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.
- **Position of altimeter (Body frame)**: Parameter to indicate the distance from the altimeter to the center of gravity of the platform.

  This is used to take into account the weight of the altimeter in the aircraft control.
- **Enable tilt limit**: The altimeter is normally installed in a fixed position having a constant direction with respect to the platform. Taking a


LIDAR as an example, it is used to measure altitude so it has to point towards the ground, in a direction parallel to the Z body axis. When the vehicle is not level on its X or Y axis (has a pitch or roll angle different from zero), the LIDAR will not point in a direction perpendicular to the ground, and the measurement taken will not be the real altitude of the aircraft. This option is a safe condition to discard the measure of an altimeter when its tilt angle exceeds a certain value defined here.

- **Enable tilt correction**: Allows the correction of the altimeter sensor measurement, normally AGL measurent, with internal pitch and roll measurements.

$$correction = (AGL\ \ measurement) \cdot \cos(pitch) \cdot \cos(roll)$$

- **Enable sensor limits**: It is the range in which the sensor measurement is taken to be processed by **1x PDI Builder**. Any external value will be discarded by the system.


The following figure shows a diagram with the values of maximum and minimum sensor limits altitude, and the maximum tilt angle.

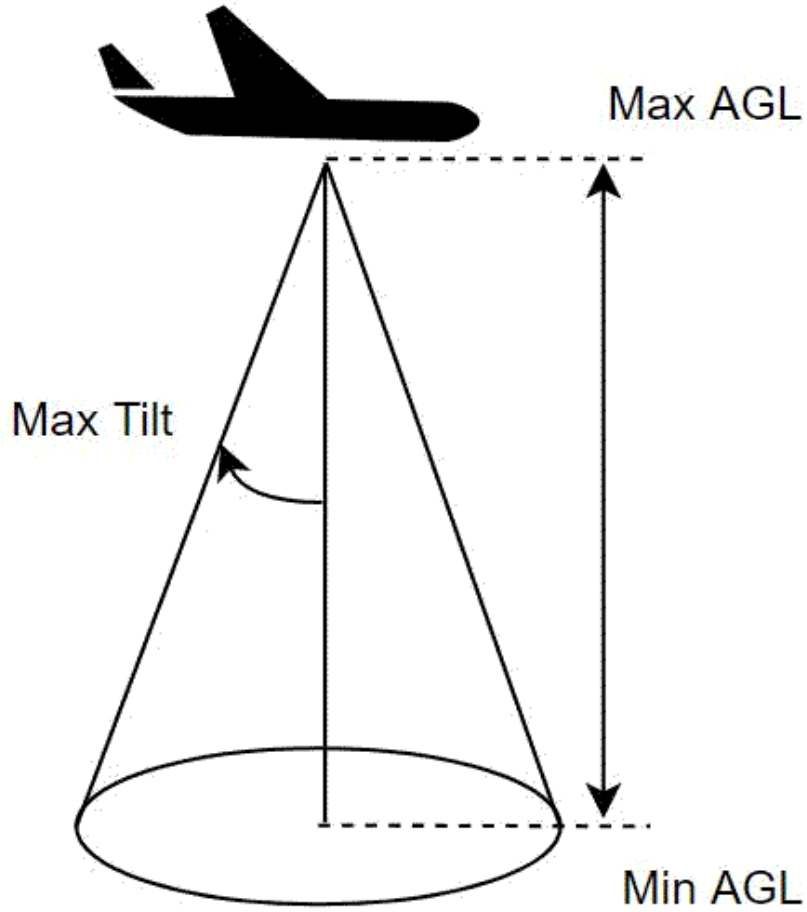

Altitude block - Limits

Custom adapter

Custum adapter block adapts external and custom navigation data into a format that can be used by the EKF filter of the Veronte autopilot.

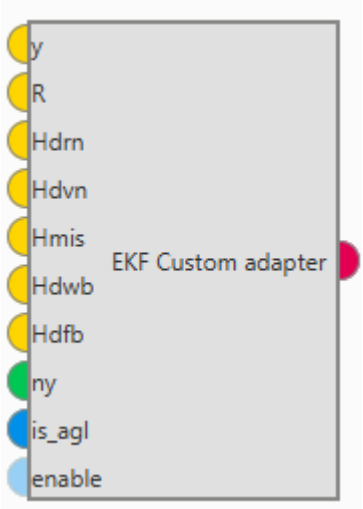

Custum adapter block

- **Inputs**:

y: Measurement.

R: Measurement covariance matrix.

Hdrn: Observation matrix for the position increment states.

Hdvn: Observation matrix for the velocity increment states.

Hmis: Observation matrix for the misalignment states.

Hdwb: Observation matrix for the gyroscope bias increment states.

Hdfb: Observation matrix for the accelerometer bias increment states.

ny: Size of the measurement (1D, 2D or 3D).


is_agl: Is AGL measurement

(Optional) enable: Optional boolean input to enable (true) or disable (false) the input in the EKF. Not connected means enabled.

- **Outputs**:

  Pin 0: EKF input data for navigation computation.

- **Configuration menu**:

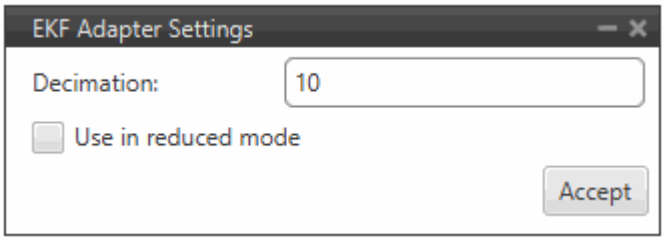

Custum adapter configuration

The following parameters are configurable:

- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 40** (in decimal units).
  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.
- **Use in reduced mode**: Allows data to be used even in situations of system overload or emergency

GNSS Compass

GNSS Compass block takes two relative position measurements and converts them to **misalignment vectors** to use in the EKF **for attitude correction**.



GNSS Compass block

- **Inputs**: These inputs correspond to the GNSS Sensor block.

  Drn1: **Relative position measurement** 0 as a **10-dimensional real array** with the following components:

  - 0: Update flag
  - 1: Rover flag: 1 is rover, 0 is base
  - 2: Time stamp
  - 3: North relative distance
  - 4: East relative distance
  - 5: Down relative distance
  - 6: Relative distance variance
  - 7: X body antenna position
  - 8: Y body antenna position
  - 9: Z body antenna position

  Drn2: Relative position measurement 1 as a 10-dimensional real array with the same components as described above.

- **Outputs**


  NED: **Baseline vector in NED frame** as a **5-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: North component
  - 2: East component
  - 3: Down component
  - 4: Variance

  Body: **Baseline vector in body frame** as a **5-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: X body component
  - 2: Y body component
  - 3: Z body component
  - 4: Variance.


An example of how to implement this block is presented below:

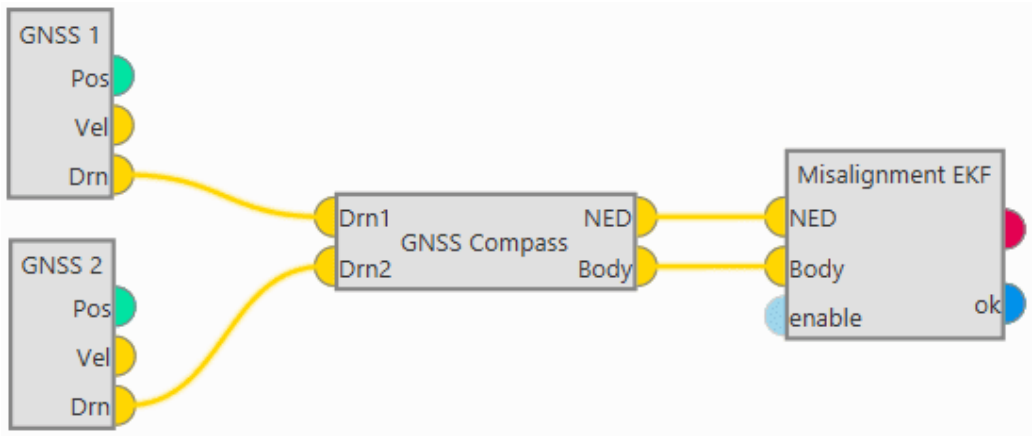

GNSS compass block example

Misalignment

Misalignment block transforms from **two vectors expressed in NED and body frames** to **EKF misalignment data for attitude correction**.

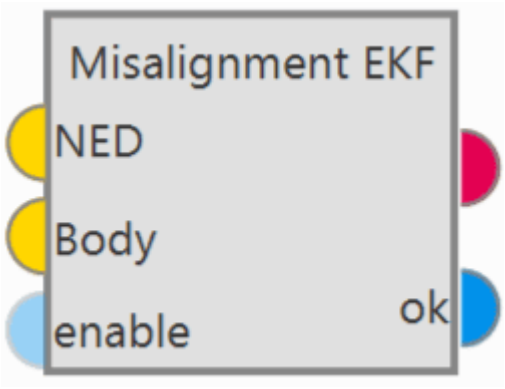

Misalignment block

- **Inputs**

  NED: **Vector measured in NED frame as a 5-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: North component
  - 2: East component
  - 3: Down component
  - 4: Variance

  Body: **Vector measured in body frame as a 5-dimensional real** array with the following components:

  - 0: Update flag (always 1)
  - 1: X body component
  - 2: Y body component
  - 3: Z body component
  - 4: Variance.

  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Outputs**


  Pin 0: EKF input data (H, R, y).

> **Note**
>
> - **H**: Observation matrix.
> - **R**: Measurement covariance matrix.
> - **y**: Measurement.



ok: Measurement check bit, returns **true** if the **measurements pass the module checks**, false otherwise.

- **Configuration menu**:

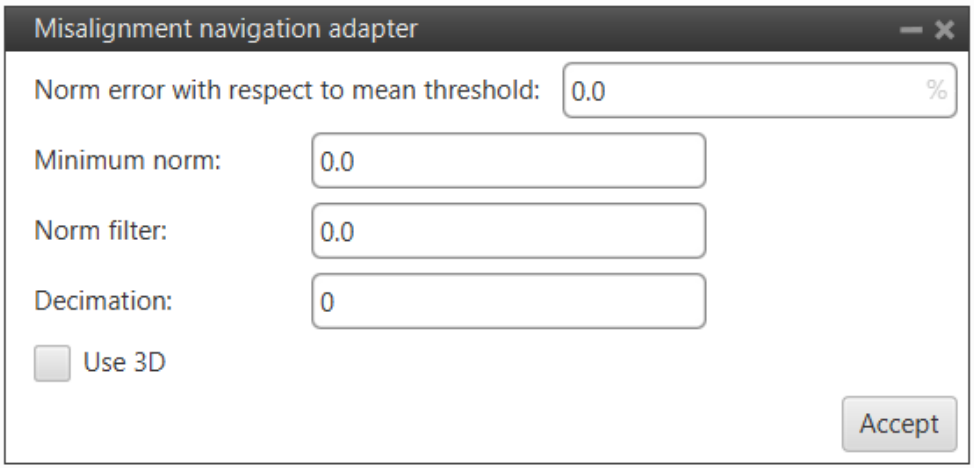

Misalignment block configuration

The following parameters are configurable:

- **Norm erroe with respect to mean threshold**: In order to use the measures that enter the block, the moduli of both measurements must be similar according to the equation:

$$\left| \frac{nmn - nmbn}{(nmn + nmbn) \cdot ndthr} \right| < 1$$

Where,

- *nmn* : This is the norm of the first input vector.
- *nmbn* : This is the norm of the second input vector.
- *ndthr* : **Norm diff. threshold** as a percentage of one, users should look at the absolute value.

- **Minimum norm**: In addition, it must also be fulfilled that the moduli of the measures are **greater than the Minimum norm defined here**.

- **Norm filter**: This parameter is to filter the measurement of $\left|\frac{nmn - nmbn}{(nmn + nmbn) \cdot ndthr}\right|$ to use it in the Madgwich algorithm.
- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 10** (in decimal units).
  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.
- **Use 3D**: If enabled, the attitude correction will be in 3D, as by default, only the attitude correction in the horizontal plane is activated.

Discard measures due to an error in the norm below. The following equation is used:


$$norm_{err} = \frac{nmn - nmbn}{(nmn + nmbn)/2}$$

- *nmn* : This is the norm of the first input vector in NED coordinates.
- *nmbn* : This is the norm of the second input vector in body coordinates.

If the block is in 2D mode, the norm is applied after setting the down component (in NED) of both vectors to zero. This value must be less than the norm diff thersold value.

Position

Position block adapts **absolute position** data to **EKF data for position update**.

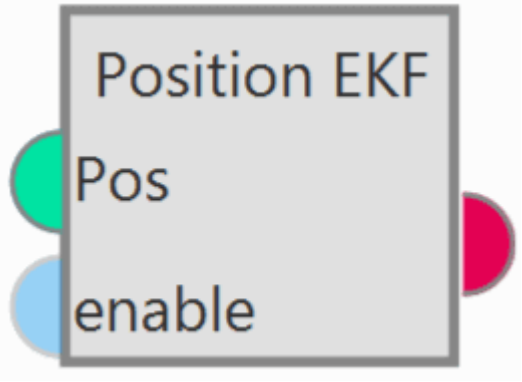

Position block

- **Inputs**

  Pos: Absolute position measurement. This input corresponds to the GNSS Sensor block or Relative position sensor block.


  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Output**

  Pin 0: EKF input data (H, R, y).

  > **Note**
  > - **H**: Observation matrix.
  > - **R**: Measurement covariance matrix.
  > - **y**: Measurement.

- **Configuration menu**:

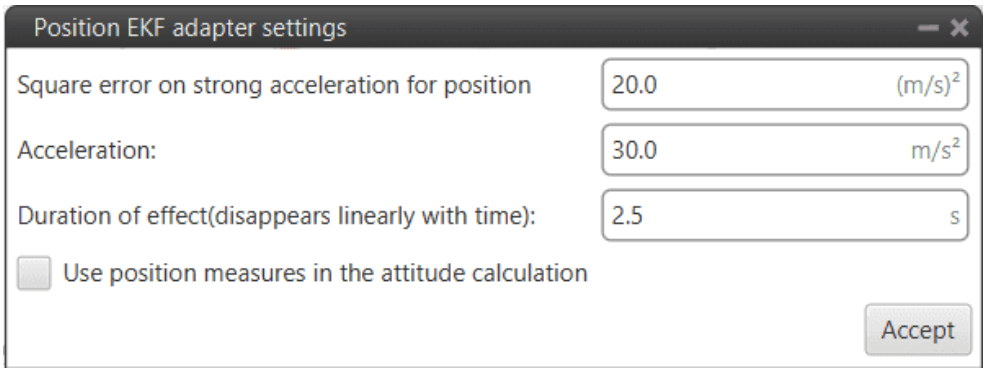

Position block configuration


Users must configure the following parameters:

- **Square error on strong acceleration for position**: Under strong acceleration the variance for the position solution is changed to the specified value.
- **Acceleration**: Threshold definition. When this threshold is exceeded, strong acceleration variances are considered.
- **Duration of effect (disappears linearly with time)**: Time needed to restore the default variances of the GNSS solution.

- **Use position measures in the attitude calculation**: When enabled, the position data from the GNSS solution is considered for the attitude estimation.

Static Pressure

Static Pressure block converts **static pressure** measurement into **EKF data for altitude update**.

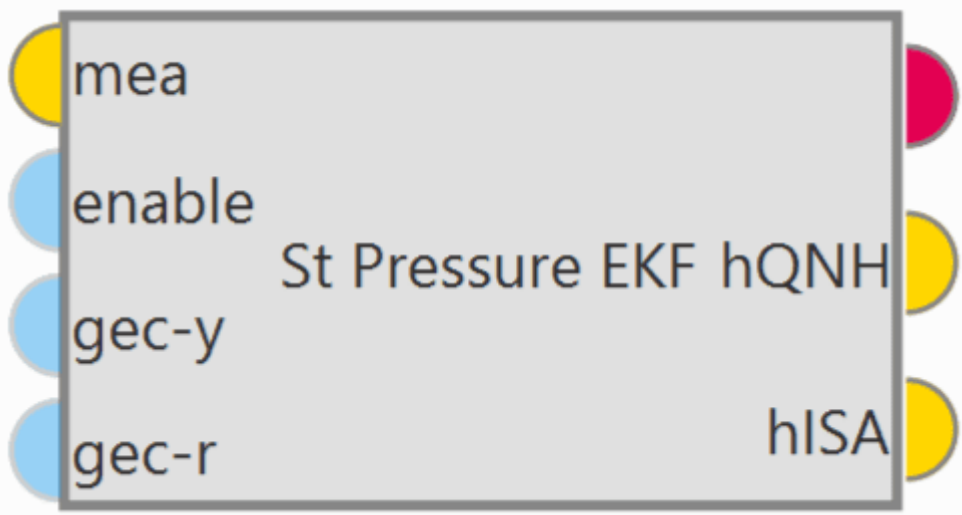

Static Pressure block

- **Inputs**

  mea: Static pressure measurement as a **3-dimensional real array** with the following components:

  - 0: Update flag
  - 1: Pressure
  - 2: Variance

  This input corresponds to the Static Pressure sensor block.

  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

  (Optional) **gec-y**: Enable **ground effect measurement correction** (true) or disable (false). **Not connected means disabled**.

  (Optional) **gec-r**: Enable **ground effect variance increment** (true) or disable (false). **Not connected means disabled**.

- **Outputs**


  Pin 0: EKF input data (H, R, y).

  > **Note**
  > - **H**: Observation matrix.
  > - **R**: Measurement covariance matrix.
  > - **y**: Measurement.

  hQNH: **MSL** right from **actual QNH and pressure** measurement.

  hISA: **MSL** for **ISA and pressure** measurement.

- **Configuration menu**:

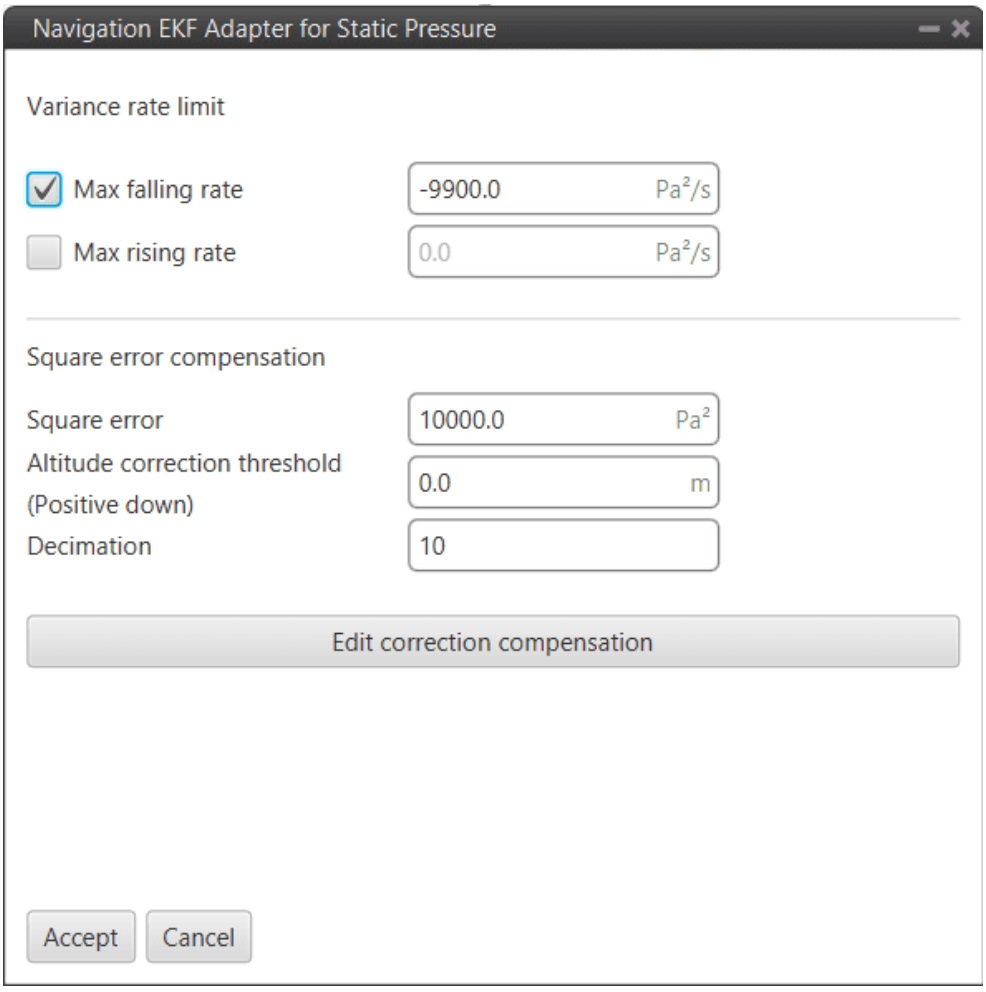

Static Pressure block configuration

The following parameters must be configured:

Variance rate limit

- **Max falling rate**: Defines the maximum falling rate of the system.
- **Max rising rate**: Defines the maximum rising rate of the system.

Square error compensation: Compensation in the pressure square error applied when **Veronte Autopilot 1x** is close to the ground. This is to correct the Ground Effect for landing purposes.

- **Square error**: This value is automatically calculated from the square error of the static pressure sensor (see Static Pressure sensor block).
- **Altitude correction threshold (Positive down)**: The user has to define an Altitude Difference for the system to apply the Ground Effect. While landing, the aircraft will feel a increase in the static pressure due to the Ground Effect, and this pressure difference (transformed into meters) is the Threshold that can be configured here. If set to 0, whenever Ground Effect is enabled, it will make its effect.
  In other words, Altitude error is the measurement from the static pressure sensor in meters minus the estimated state of the UAV.

Explanation

The ground effect creates a high pressure below the UAV when it is close to the ground, this increase in pressure readings produces the navigation to "go down". Veronte Autopilote 1x can mitigate the ground effect in two ways:


- 1: Increasing the static pressure sensor variance (R) used for the Extended Kalman filter. This means that other height sources, for example GNSS will be used more strongly to estimate the altitude near the ground. This is configured with the boxes "Square error" and "Altitude correction threshold (Positive down)". If enabled, the R used in the EKF for the static pressure sensor will be increased to be the value configured in the box when the "altitude error" measured by the static pressure sensor is higher than the configured threshold in the down direction. Example, if the current estimated state of the UAV is 10 meters MSL and the measurements from the static pressure sensor tell that the UAV is at 5 meters MSL. If the "Altitude correction threshold (Positive down)" is less than 5 then the R used for this sensor will be the one configured in the "Square error". Please notice that ground effect correction must only be enabled when close to the ground so that the navigation performance is not negatively impacted when there is no ground effect.
- 2: Modifying the actual measurement of the static pressure sensor. When this function is enabled the "altitude error" corresponding to the static pressure sensor is modified according to the **Correction compensation** table presented below. The idea is that altitude errors that would make the estimation of the height to go down are changed to reduce the altitude error. It is also important to only enable this when close to the ground. Using the same example as before, the 5 meters down of altitude error for this sensor would be transformed to only 4 meters for example, that way this sensor would pull down the estimated altitude a little bit less.

> **Note**
> Please note that these two ways of compensating the ground effect can be enabled/disabled separately and that they only have to be used when close to the ground. It is recommended to test in controlled conditions.

- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 10** (in decimal units).

  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.

Correction compensation: Users can edit the correction compensation by clicking here:

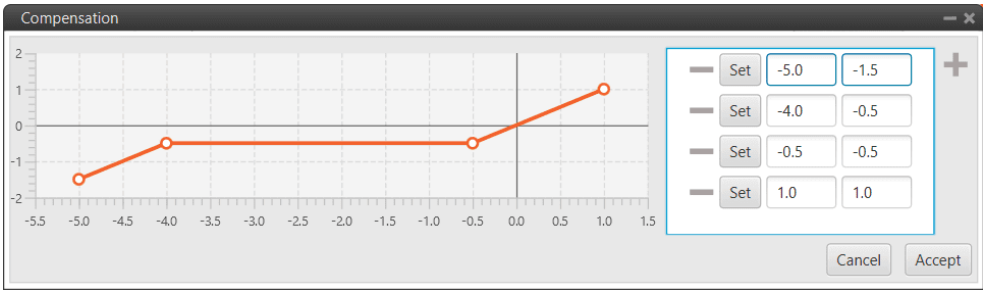

Static Pressure block configuration - Correction compensation table


The user can add or remove points from the correction compensation table. The correction will have the 'shape' made by these points.
The **altitude error** used is computed from the actual altitude error by interpolating in the table (with extrapolation).

- X-axis: Actual altitude error
- Y-axis: Actual error used in EKF

> **Note**
> The value entered in column Y is an adjustment of how "strong" the ground effect compensation is. The unit of measurement is meters.

Terrain height

Terrain height block transforms from **terrain height** measurement to **EKF data for terrain height update**.

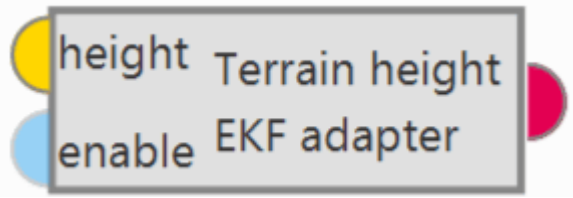

Terrain height block

- **Inputs**

  height: **Terrain altitude as a 4-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: Valid flag (inside mesh)
  - 2: Terrain height
  - 3: Variance

  This input corresponds to the SRTM height sensor block.


  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Output**

  Pin 0: EKF input data (H, R, y).

  > ⓘ **Note**
  > - **H**: Observation matrix.
  > - **R**: Measurement covariance matrix.
  > - **y**: Measurement.

- **Configuration menu**: The user must configure the decimation of this sensor.

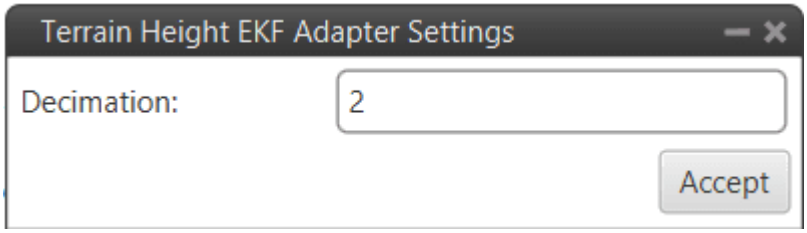


Terrain height block configuration

This parameter defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 2** (in decimal units).
If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.

Velocity

Velocity block converts **velocity** measurement into **EKF data for velocity update**.

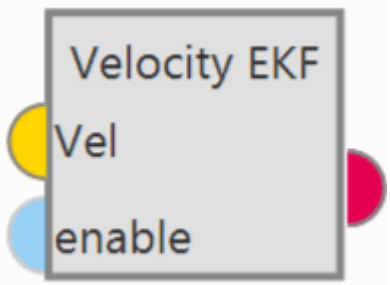

Velocity block

- **Inputs**

  Vel: Velocity measurement as a **12-dimensional real array** with the following components:

  - 0: Update flag
  - 1: Fix flag
  - 2: North velocity
  - 3: East velocity
  - 4: Down velocity
  - 5: North velocity variance
  - 6: East velocity variance
  - 7: Down velocity variance
  - 8: X body antenna position
  - 9: Y body antenna position
  - 10: Z body antenna position
  - 11: Measurement delay

This input corresponds to the GNSS Sensor block.


(Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Output**

  Pin 0: EKF input data (H, R, y).

  > **Note**
  > - **H**: Observation matrix.
  > - **R**: Measurement covariance matrix.
  > - **y**: Measurement.

- **Configuration menu**:

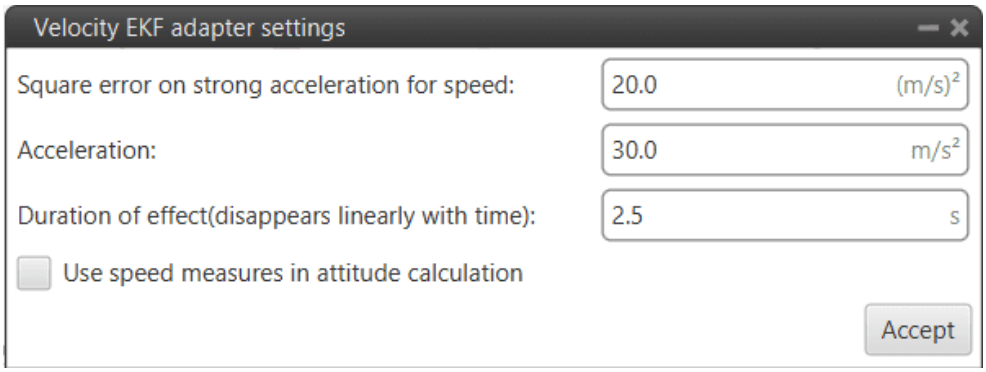


Velocity block configuration

Users must configure the following parameters:

- **Square error on strong acceleration for speed**: Under strong acceleration the variance for the speed solution is changed to the specified value.
- **Acceleration**: Threshold definition. When this threshold is exceeded, strong acceleration variances are considered.
- **Duration of effect (disappears linearly with time)**: Time required to restore the default variances of the GNSS solution.
- **Use speed measures in the attitude calculation**: When enabled, the speed data from the GNSS solution is considered for the attitude estimation.

Velocity down

Velocity down block adapts the **velocity down** measurement to **EKF data for velocity down update**.

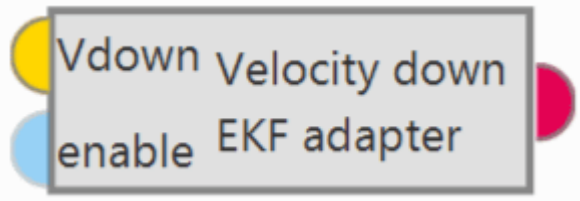

Velocity down block

- **Inputs**

  Vdown: Velocity measurement down measurement.


  (Optional) **enable**: Optional boolean input to enable (true) or disable (false) the input in the EKF. **Not connected means enabled**.

- **Output**

  Pin 0: EKF input data (H, R, y).

  > ⓘ **Note**
  > - **H**: Observation matrix.
  > - **R**: Measurement covariance matrix.
  > - **y**: Measurement.

- **Configuration menu**:

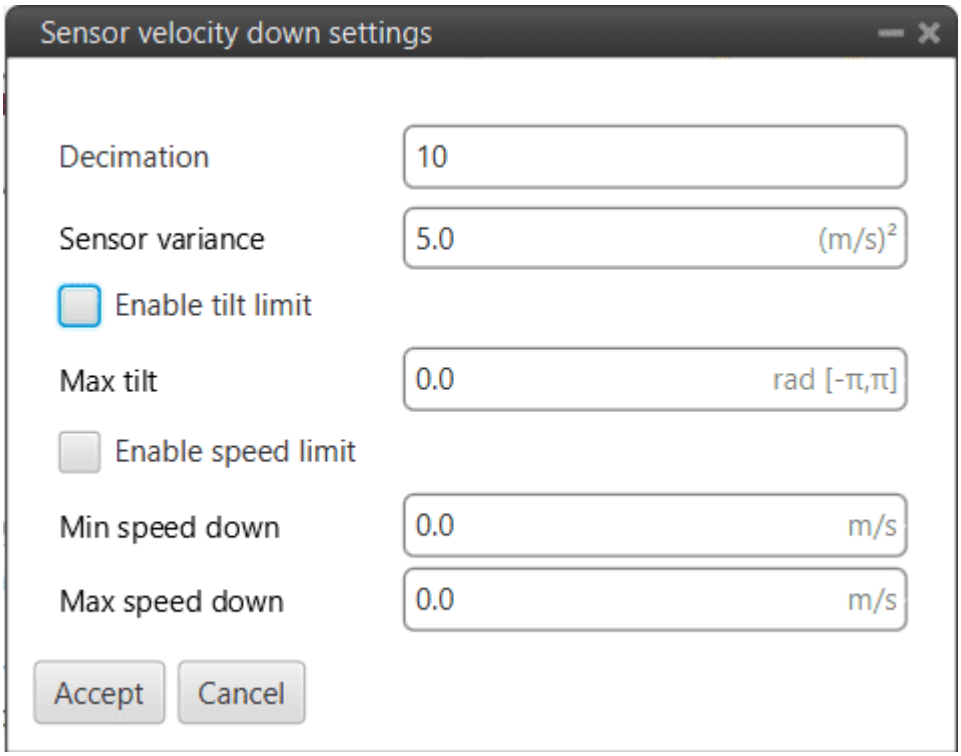

Velocity down block configuration

The following parameters must be configure:


- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 10** (in decimal units).

  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.
- **Sensor variance**: Sensor error variance.
- **Enable tilt limit**: The sensor measures the variable in a direction perpendicular to the longitudinal axis of the platform, so when it is tilted the reading will not be reliable. This option allows the definition of a tilt limit, so that if the limit is reached, the sensor reading will be discarded.
- **Max tilt**: A maximum tilt can be defined.
- **Enable speed limit**: This option allows a speed limit to be set, so that if the limit is reached, the sensor reading will be discarded.
- **Min speed down**: Defines the minimum limit of the speed measured by the sensor.

- **Max speed down**: Defines the maximum limit of the speed measured by the sensor.

EKF Split

EKF Split block shows all the **sensor information** that is going into the EKF algorithm.

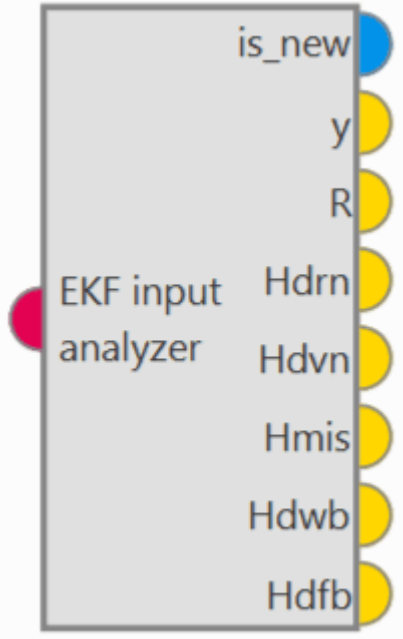

EKF Split block

- **Input**

  Pin 0: EKF input data **from any EKF input adapter block** (H, R, y).

- **Outputs**

  is_new: Update flag (**true** when a **new measurement is generated**, false otherwise).

  y: Difference between measurement at iteration K and the measurement at iteration K-1. (3-dimensional real array)

  R: Measurement **covariance matrix**. (3-dimensional real array)


  Hdrn: Observation matrix for the **position increment states**. (9-dimensional real array)

- **Hdvn**: Observation matrix for the **velocity increment states**. (9-dimensional real array)
- **Hmis**: Observation matrix for the **misalignment states**. (9-dimensional real array)
- **Hdwb**: Observation matrix for the **gyroscope bias increment states**. (9-dimensional real array)
- **Hdfb**: Observation matrix for the **terrain altitude increment state**. (9-dimensional real array)

This block is designed for any EKF adapter block, i.e. a standard block for all EKF adapter blocks, therefore some outputs only correspond to a certain type of EKF adapter block. And, consequently, **the outputs that do not correspond to the connected block, will get 0 as value**.

Atention

Be careful! Check that the **blocks to which the outputs are connected match in size with the data**, i.e. if the output is a 9-dimensional real array, a split block or a multiple user real variable with size 9 must be connected to it in order to display the data.

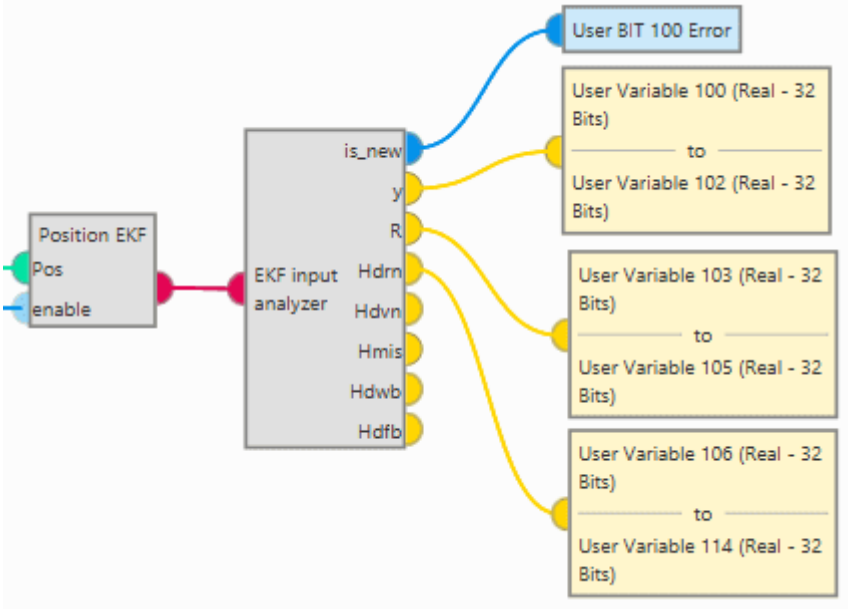

EKF Split block - Example


Navigation

Navigation block **updates the Veronte navigation variables** (position, velocity, attitude, etc.) based on the **current selected navigation source**.

For a detailed list of navigation variables of **Autopilot 1x**, please consult the Navigation Variables - Lists of interest section of the **1x Software Manual**.

ⓘ Note

This block has by default 1 input, in its configuration the user must set the desired size of inputs.

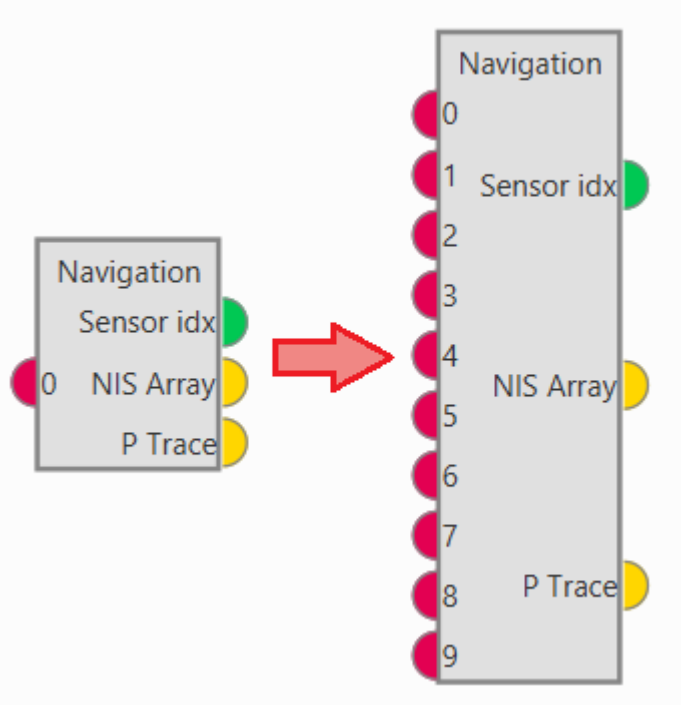

Navigation block

Veronte Autopilot 1x integrates a navigation system that can operate with GPS and without GPS coverage.

In the navigation with GPS, the system uses it to fly the aircraft along a route or to a given waypoint. It is possible to control the aircraft's position (longitude and latitude) and the altitude. This is the navigation used by default by the system when everything is working properly.

In case the GPS signal is lost, the navigation can easily measure the attitude angles with a greater precision than using a simple IMU. With these measures, it is possible for the system to control pitch, roll and yaw and then maintain a safe attitude when the GPS signal is lost, avoiding any possible malfunctions. It is recommended to create an automation to change to a phase where the attitude angles are controlled, in case of loss of GPS signal. For more information visit Automations section of this manual.

> **Note**
>
> The yaw can be measured in the navigation without GPS only if the magnetometer is activated in the navigation window.

- **Input**

   **0**: EKF input data **from any EKF input adapter block**.

- **Output**


   **0**: Index + 1 of the current input measurement used to update the EKF state. A value of **zero means that no measurements have been input to the EKF in the current step**.

   NIS Array: Array containing the NIS values for each of the block's inputs.

   P Trace: Current trace of the covariance matrix P.

- **Configuration menu**: This menu contains the parameters used in the Kalman Filter algorithm to fuse the information provided by the different sensors.

  This data is used in the navigation system to generate the commands sent to the aircraft. This menu contains the following entries for **basic configuration**:

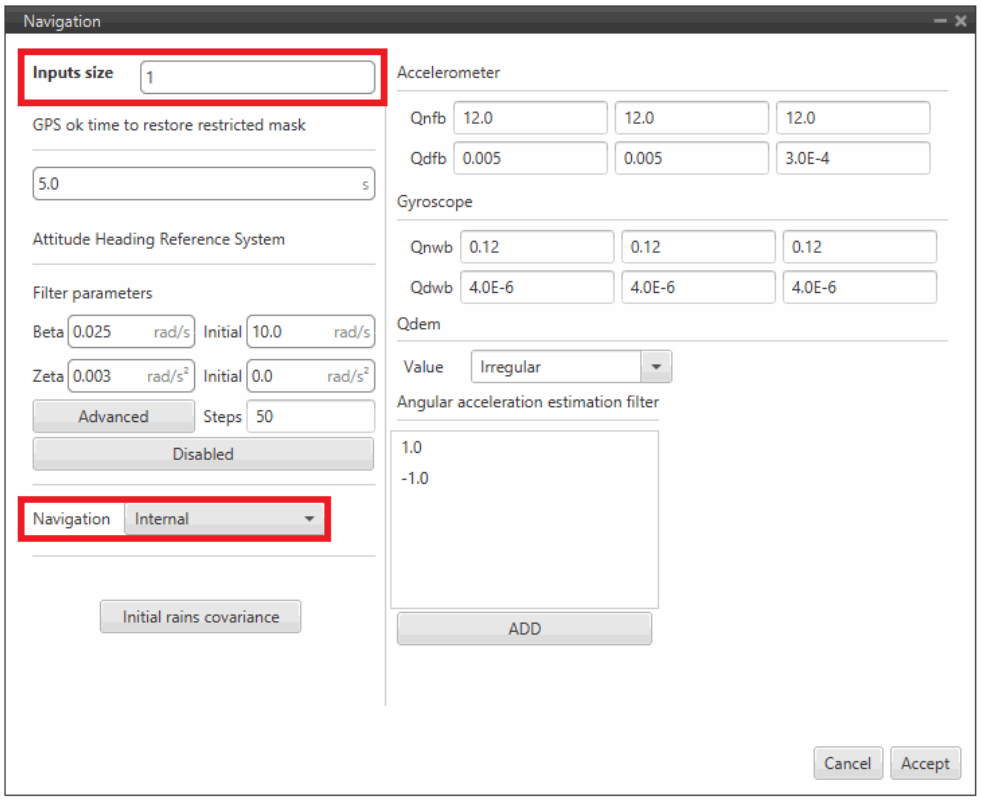

Navigation block configuration - Basic parameters

> ⚠ **Warning**
>
> **The values of the parameters of this menu should only be changed by advanced users**.
>
> If the user is not familiar with the Kalman Filter algorithm and Sensor Fusion, do not change the default parameters.
>
> Although this configuration menu must be set by default or modified by advanced users, the **2 following parameters** must be **configured by all users**:

- **Inputs size**: Users must set the number of inputs.
- **Navigation**: The type of navigation must be selected, tha available options are:
  - **Internal**: Uses internal data for navigation. Data (position, attitude, etc.) is processed into 1x unit from sensor measures.
  - **External VCP**: Uses external data for navigation. Data (position, attitude, etc.) is provided by Veronte Communication Protocol (VCP).

- **External Var**: Uses external data for navigation. It takes directly the **attitude, velocity and acceleration data** of the following **real variables** from the memory:
  - **ID 259**: External yaw
  - **ID 260**: External pitch
  - **ID 261**: External roll
  - **ID 262**: External roll rate
  - **ID 263**: External pitch rate
  - **ID 264**: External yaw rate
  - **ID 265**: External veloctiy north
  - **ID 266**: External velocity east
  - **ID 267**: External velocity down
  - **ID 268**: External acceleration x body axis
  - **ID 269**: External acceleration y body axis
  - **ID 270**: External acceleration z body axis
  - **ID 271**: External GPS Time of Week


  Position data is read from the **Moving Feature 00**.
- **Vectornav VN-300**: Uses external data for navigation. Data (position, attitude, etc.) is provided by Vectornav VN-300.

  For more information, see the Vectornav VN-300 - Integration examples section of this manual.

> ⓘ **Note**
>
> If further information is required, please contact the support team by creating a Ticket in the customer's **JCF** or contact the sales team (sales@embention.com).

In addition, this menu contains the following entries for **advanced configuration**:

> ⚠ **Warning**
>
> **The values that appear here should only be changed by advanced users**.

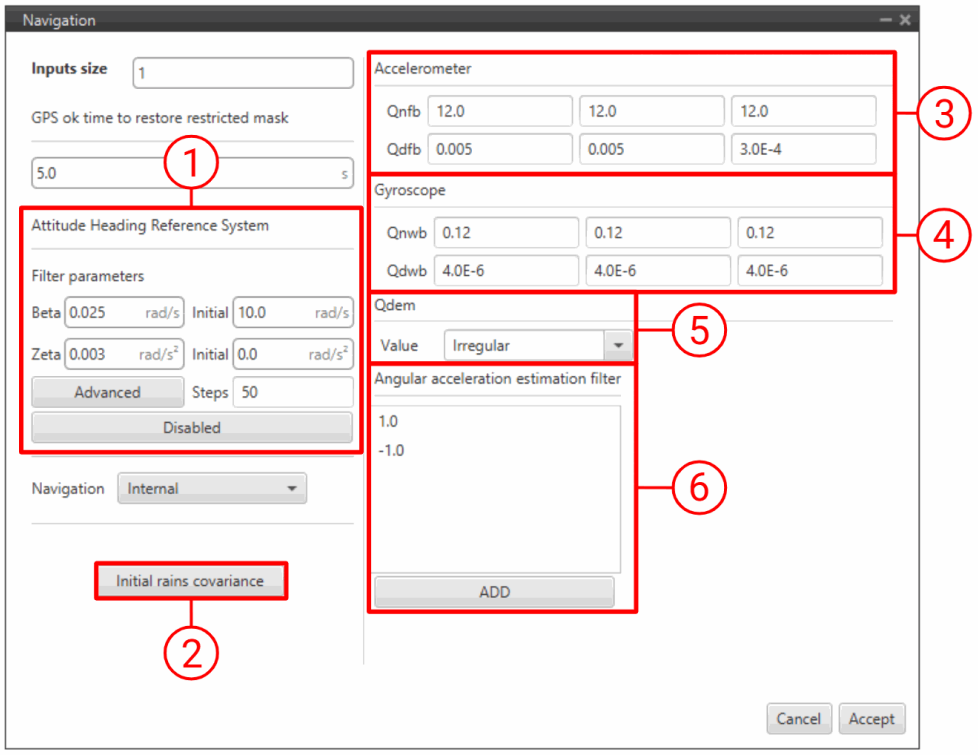


Navigation block configuration - Advanced parameters

1. **Attitude Heading Reference System**: Based on the Madgwick algorithm, an EWMA filter with initial values Beta0 and Zeta0 which converge to Beta and Zeta in the specified steps.
   - **Beta & Zeta**: The standard Madgwick algorithm variables.
   - The **Initial** entries correspond to Beta0 and Zeta0, used to transition between GPS and GPS denied navigation. They are the initial values for the Madgwick algorithm.
   - **Steps**: Steps to converge from Beta0 and Zeta0 to Beta and Zeta.
   - **Advanced** button:
     - **Accelerometer gain**: Manage the weight of the accelerometer raw readings when the given measurements are too dissimilar from the expected Earth's gravitational field.
     - **Filter attitude**: Smoothing factor of the EWMA filter to compute the accelerations term. Value 0 would mean infinitely filtered, and value 1 without filtering.
2. **Initial rains covariance**: The matrix of initial covariance, normally referred to as P.

3. **Accelerometer**:
   - **Qnfb**: Noise of the accelerometer. It is used in the states of position and velocity. These values correspond to the diagonal of the acceleration covariance matrix.
   - **Qdfb**: Stability of the accelerometer, used for the state of the bias of the accelerometer.
4. **Gyroscope**:
   - **Qnwb**: Noise of the gyroscope. It is used for the state of orientation.
   - **Qdwb**: Stability of the gyroscope, used for the state of the bias of the gyroscope.
5. **Qdem**: Noise of the terrain elevation. Users can choose between Almost plain, Slightly irregular, Irregular, Highly irregular and Vegetated.
6. **Angular speed estimation filter**: It is a FIR filter used to calculate the derivative of the gyroscope to get the angular acceleration. The values to introduce correspond to the coefficients of the filter.

Wind

The **wind block** activates the algorithm that calculates wind speed and direction in real time, combining data from the sensors.

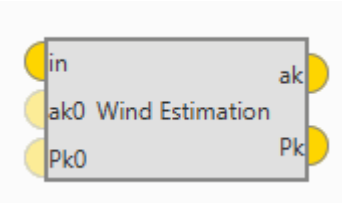

Wind block

- **Inputs**

  in: Wind measurement:


  - 0: new measurement.
  - 1: TAS measurement (m/s)
  - 2: Variance of speed (m^2/s^2)

  ak0: Initial estimation vector (1x3).

- **Pk0**: Initial uncertainty matrix (3x3).

- **Output**
  - **ak**: Estimated wind speed in NED frame (m/s).
  - **Pk**: Uncertainty matrix (3x3).

- **Configuration menu**:

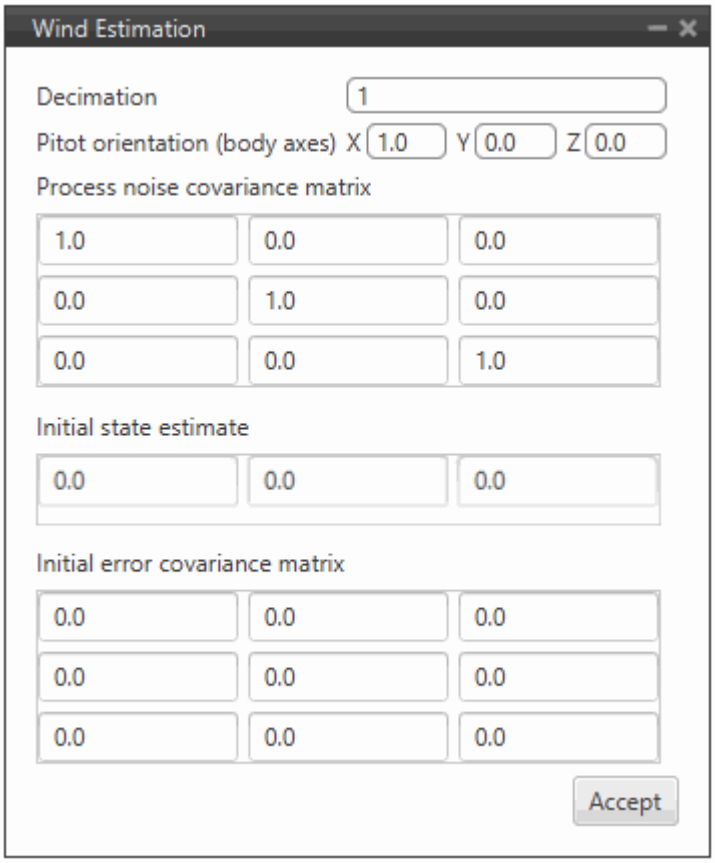

Wind configuration

The following parameters are configurable:

- **Decimation**: Parameter that defines the group of measurements for which 1 value will be stored. For example, if the decimation is 10, every 10 measurements will be counted as 1. This procedure is used **to reduce the number of samples**. **Recommended value 40** (in decimal units).
  If users have any questions about decimation, please refer to the What does decimation mean? - FAQ section of this manual.
- **Pitot orientation**: Defines the physical orientation of the airspeed sensor relative to the aircraft axes

- **Process noise covariance matrix**: Defines the uncertainty added to the wind status.

  > ⓘ **Note**
  > - Higher values indicate that the system expects large changes in wind from one moment to the next, making the filter more sensitive and quicker to adapt, but potentially less stable.
  > - Lower values imply that there is greater confidence in the model's prediction, making the filter more stable, but slower to react to real and sudden changes in wind.

- **Initial state estimate**: Provides a starting point for the EKF helping it converge on the actual estimate more quickly.
- **Initial error covariance matrix**: Indicates to the algorithm the confidence of the initial wind estimate provided in initial state estimate.

  > ⓘ **Note**
  > - High values: Indicate low confidence in the initial estimate (e.g., the initial wind is unknown). The EKF will aggressively correct the estimate using the first sensor measurements.
  > - Low values: Indicate high confidence in the initial estimate. The EKF will correct itself very slowly, assuming that the initial estimate is already very close to the truth.

Positions blocks

Position blocks allow to operate with position variables.

Note


In **1x PDI Builder**, position variables are also refered to as **Features**. These features variables are composed as follows:

Type	Name	Content	Range
Float64	latitude	Latitude component scaled as 10^{-7} degrees (centimeter-level precision on the surface of the Earth)	[–90, 90] * 10^{-7} scaled degrees
Float64	longitude	Longitude component scaled as 10^{-7} degrees (centimeter-level precision on the surface of the Earth)	[–180, 180] * 10^{-7} scaled degrees
Float64	height	Height above the WGS84	–

Type	Name	Content	Range
		ellipsoid in millimeters	

Constant Position

Constant Position block defines a position on Earth using Latitude, Longitude and WGS84 Height.

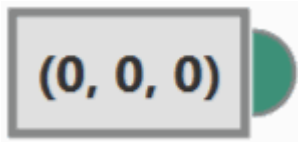


Constant Position block

- **Output**

  Pin 0: Output of the configured position.

- **Configuration menu**:

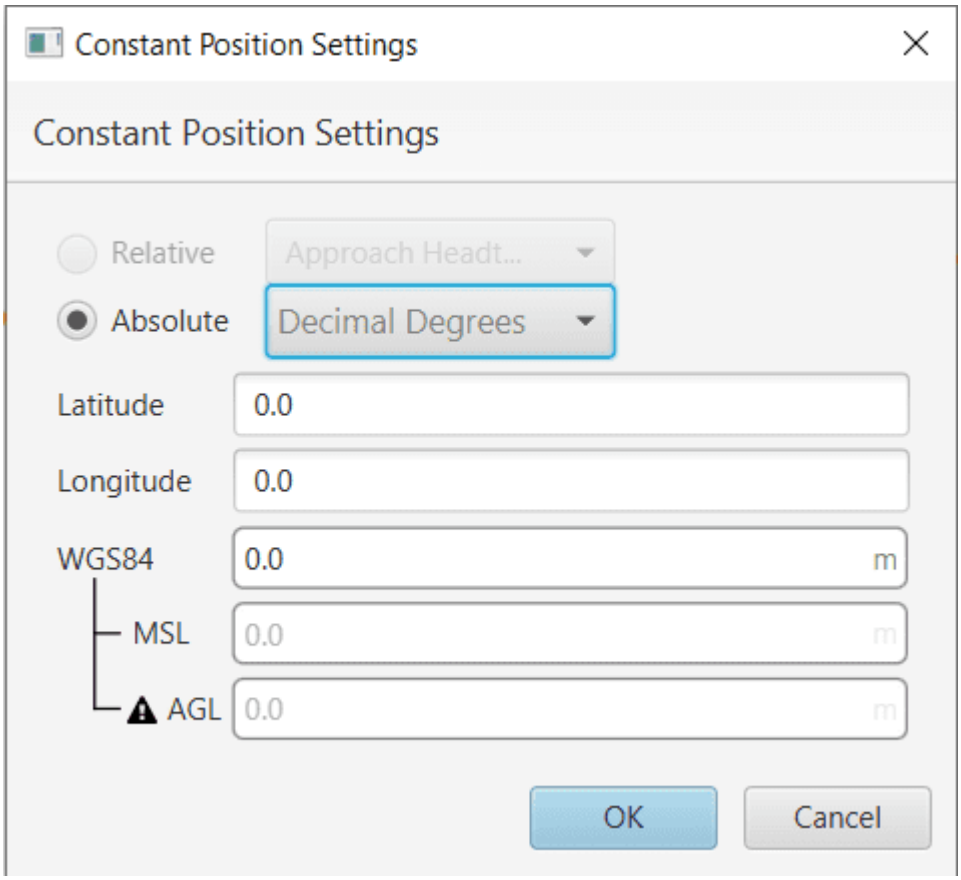


Constant Position block configuration

The following parameters must be configured to define the desired **absolute position**:

- The coordinates can be set in **UTM**, **MGRS** (Military Grid Reference System), **Decimal Degrees** or **Degress º ' "**.
- They are indicated through the **latitude**, **longitude** and **altitude**.
- **WGS84**: The first time, the altitude must be defined with respect to the ellipsoid, WGS84. After this, MSL and AGL values will be calculated automatically and the user will also be able to define the altitude with respecto to the sea level, MSL.

LLH to position

LLH to position block is used to cast three high-precision (64-bit) variables—longitude, latitude, and WGS84 height—into a single position data structure.

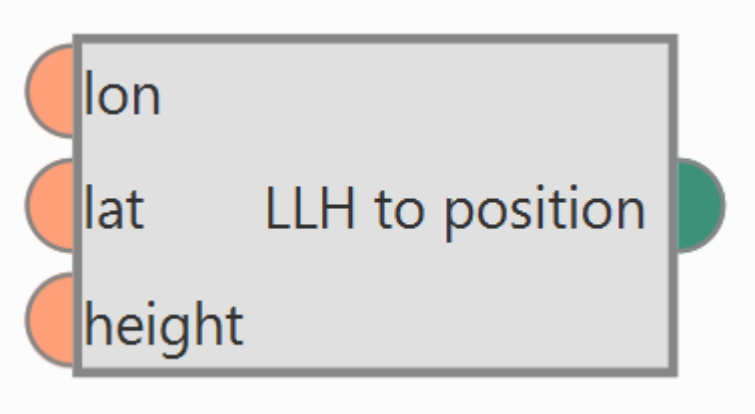

LLH to position block

This block consolidates individual geographic coordinates into a unified position format used by other navigation and guidance components within the autopilot.

- **Inputs**
  - **lon**: Longitude in radians.
  - **lat**: Latitude in radians.
  - **height**: WGS84 height in meters.
- **Output**
  - **Pin 0**: Position.

Move

Move block outputs the position which is the result of moving the input position with the displacement of the input vector.




Move block

- **Inputs**
  - **Pin 0**: Input position.
  - **Pin 1**: Input displacement vector in **NED frame**. It must be a vector of 3 elements, i.e. a 3x1 vector.
- **Output**
  - **Pin 0**: Output position.

Position to LLH

Position to LLH block is designed to deconstruct a unified position data structure into its three constituent high-precision (64-bit) variables: longitude, latitude, and WGS84 height.

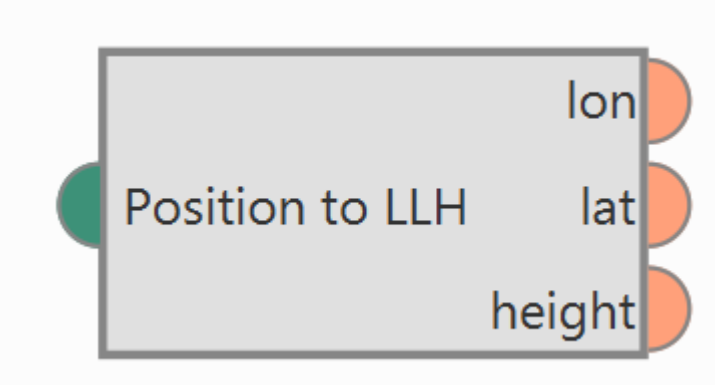

Position to LLH block

- **Input**
  - **Pin 0**: Position.

- **Outputs**


  lon: Longitude in radians.

  lat: Latitude in radians.

  height: WGS84 height expressed in meters.

Read Feature

Read Feature block reads a position from a FID (feature) variable.




Read Feature block

- **Outputs**

  Pin 0: Position to read.

  Pin 1: Enabled/disabled status: true for non operation features, falsa in operation features if they are not set to any value.

- **Configuration menu**:

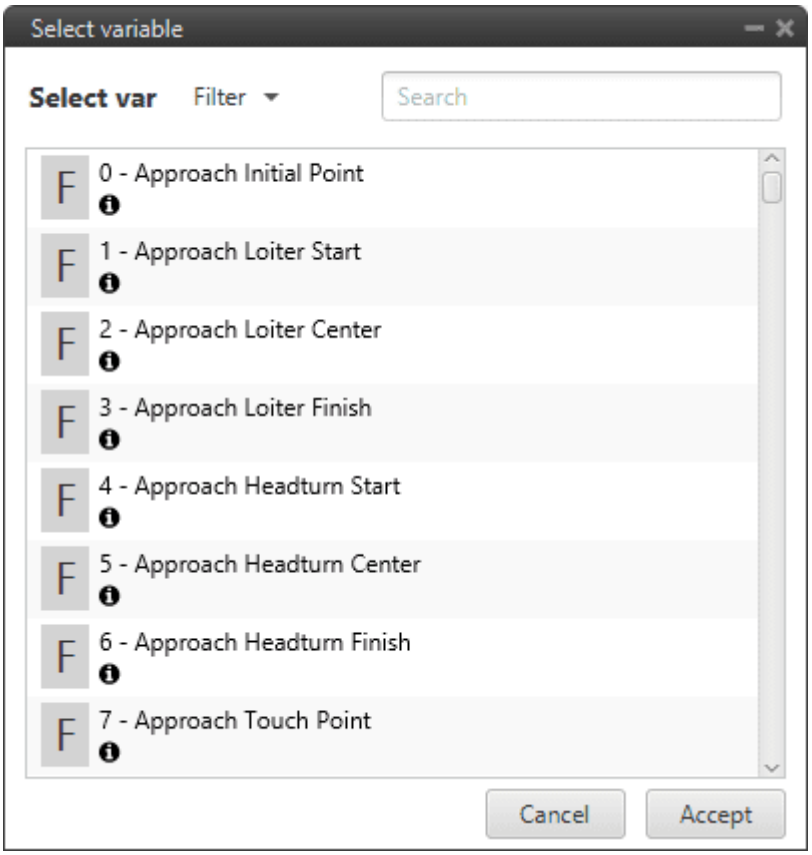


Read Feature block configuration

Users must select the **feature variable** where the position **is stored**.

Read Mission Point List

Read Mission Point List block functions as a position reader within an operation group. It is designed to return the position from a selected operation feature group that is closest to a given reference point.

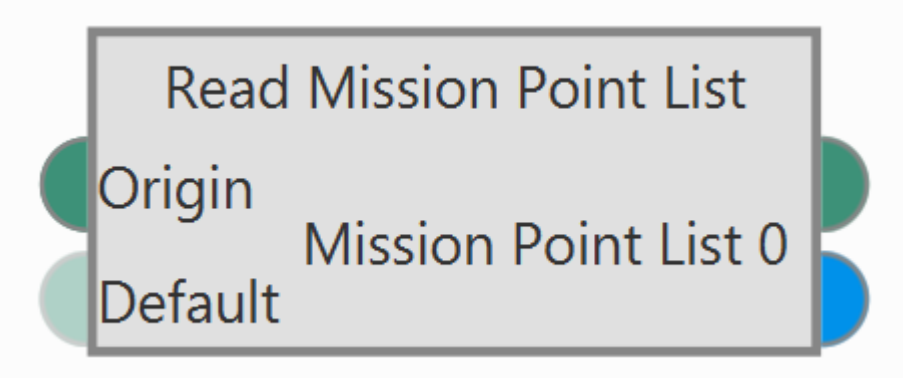

Read Mission Point List block

- **Inputs**

Origin: Reference position to compute distance.

Default: Default position (optional).


- **Outputs**

Pin 0: Closest position to the reference (3D distance).

Pin 1: Validity flag, it is set to false when the output position is not valid, for example when the group is empty or has no valid features if there is no default position connected.

Relative Vector

Relative Vector block calculates the relative vector in NED frame from the two input positions.

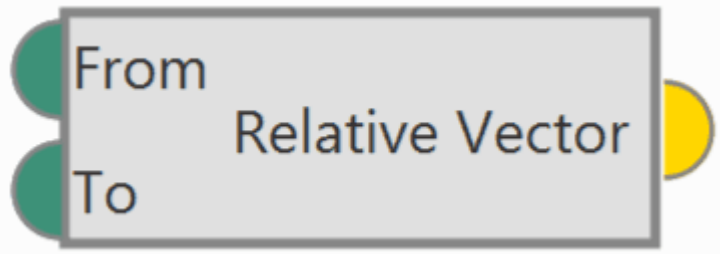


Relative Vector block

- **Inputs**
  - **From**: First position.
  - **To**: Second position.
- **Output**
  - **Vector**: Distance vector from the first position to the second position.


Write Feature

Write Feature block writes a position to a FID variable.

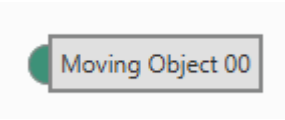

Write Feature block

- **Input**
  - **Pin 0**: Position to write.
- **Configuration menu**:

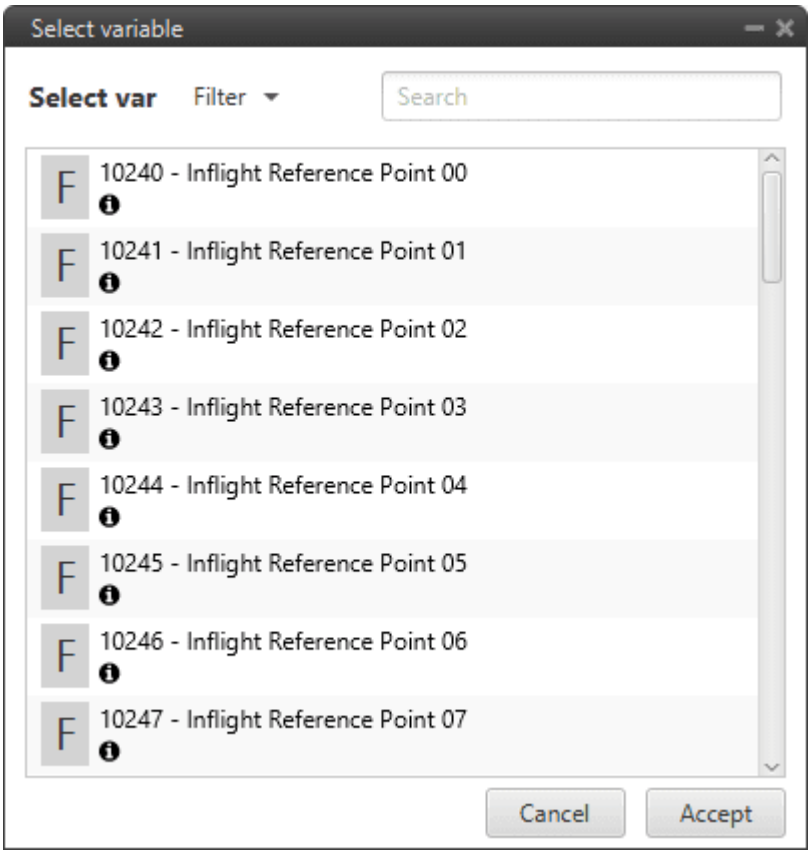

Write Feature block configuration

Users must select the **feature variable** where the position is **to be stored**.


Sensors blocks

Sensors blocks allows to configure any sensor connected externally or internally to Veronte Autopilot 1x.

As the outputs of these blocks are not 'ready' to be directly implemented in the navigation block (EKF algorithm), these blocks are usually connected afterwards to EKF Adapters blocks.

Altimeter

Altimer sensor block configures the parameters of external altimeters.

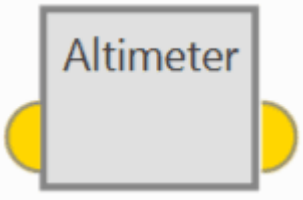

Altimeter block

- **Input**


  Pin 0: Sensor variance.

- **Output**

  Pin 0: Measurement as a **3-dimensional real array** with the following components:

  - 0: Update flag
  - 1: Altitude measurement
  - 2: Variance

- **Configuration menu**:

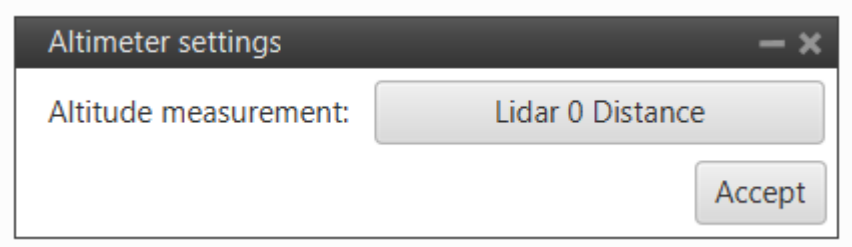

Altimeter block configuration

The following parameters must be configured:

- **Altitude measurement**: A real variable must be selected from which the altitude measurement is read. The parameters defined here shall be applied to this input variable.

> **Note**
>
> This is usually the measurement of a Lidar sensor.

> **Error**
>
> Lidar X Distance or External Range Sensor X Measure variables must be selected here for a correct configuration of the **Altimeter** sensor block, otherwise, PDI Error: 696 will occur when saving the configuration.

The **logic** of this block is summarized below:

1. Get Altitude data (usually from a Lidar sensor)


2. Calculate the time difference between the current time and the previous time the altitude data was acquired:
   - If this time is longer than "Sensor timeout", set the variance to "Maximum variance".
   - If this time is not longer than "Sensor timeout", check if the current variance is lower than the previous variance and apply an EWMA filter with "tau", previous variance and current variance.

   > **Note**
   > Note that the current variance must be lower than the previous one but never lower than the "Minimum variance"; if it is, it will get clamped to it.

3. Feed Altitude EKF adapter block with "Altitude measurement" and "variance".
4. Then, **EKF** will fuse SRTM and Altitude measurement together giving more weight to the one with lower variance.

Dynamic pressure

Dynamic pressure sensor block processes the received data in order to calculate the dynamic pressure.

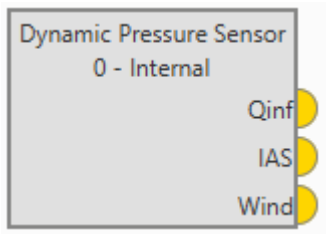

Dynamic pressure block

- **Outputs**

  Qinf: Raw measurement (Pa).


  IAS: IAS measurement (m/s).

  Wind: Wind measurement:

  - 0: New measurement.

- 1: TAS measurement (m/s).
- 2: Variance of speed (m^2/s^2)

- **Configuration menu**:

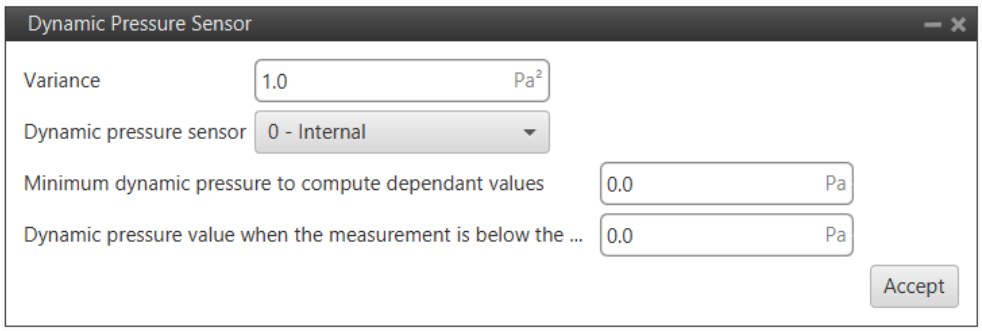

Dynamic pressure block configuration


The parameters to be configured in the first and last row of this configuration menu are presented below:

- **Variance**: Means the influence of the parameter on the Navigation filters. The higher the variance, the lower the effect.

  This is a parameter configured independently from the Static Pressure sensor selected.
- **Dynamic pressure sensor**: Allows you to select the physical source of the dynamic pressure data. It is possible to choose between 0 - Internal, 3 - Decimal var sensor 0 and 4 - Decimal var sensor 1.
- **Minimum dynamic pressure to compute dependant value**: Defines a dynamic pressure threshold below which the system considers the measurement to be unreliable.
- **Dynamic pressure value when the measurement is below the...**: The value assigned by the system when the actual reading falls below the defined minimum threshold.

GNSS sensor

GNSS sensor block configures GNSS receivers, RTK and External source.

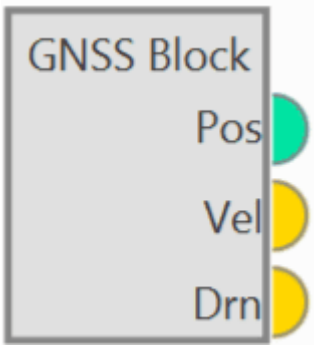

GNSS sensor block

- **Outputs**

  Pos: Absolute position measurement.

  Vel: Velocity measurement as a **12-dimensional real array** with the following components:


  - 0: Update flag
  - 1: Fix flag
  - 2: North velocity
  - 3: East velocity
  - 4: Down velocity
  - 5: North velocity variance
  - 6: East velocity variance
  - 7: Down velocity variance
  - 8: X body antenna position
  - 9: Y body antenna position
  - 10: Z body antenna position
  - 11: Measurement delay

  Drn: Relative position measurement as a **10-dimensional real array** with the following components:

  - 0: Update flag
  - 1: Rover flag (one is rover, zero is base)
  - 2: Time stamp
  - 3: North relative distance
  - 4: East relative distance
  - 5: Down relative distance

- 6: Relative distance variance
- 7: X body antenna position
- 8: Y body antenna position
- 9: Z body antenna position


- **Configuration menu**:

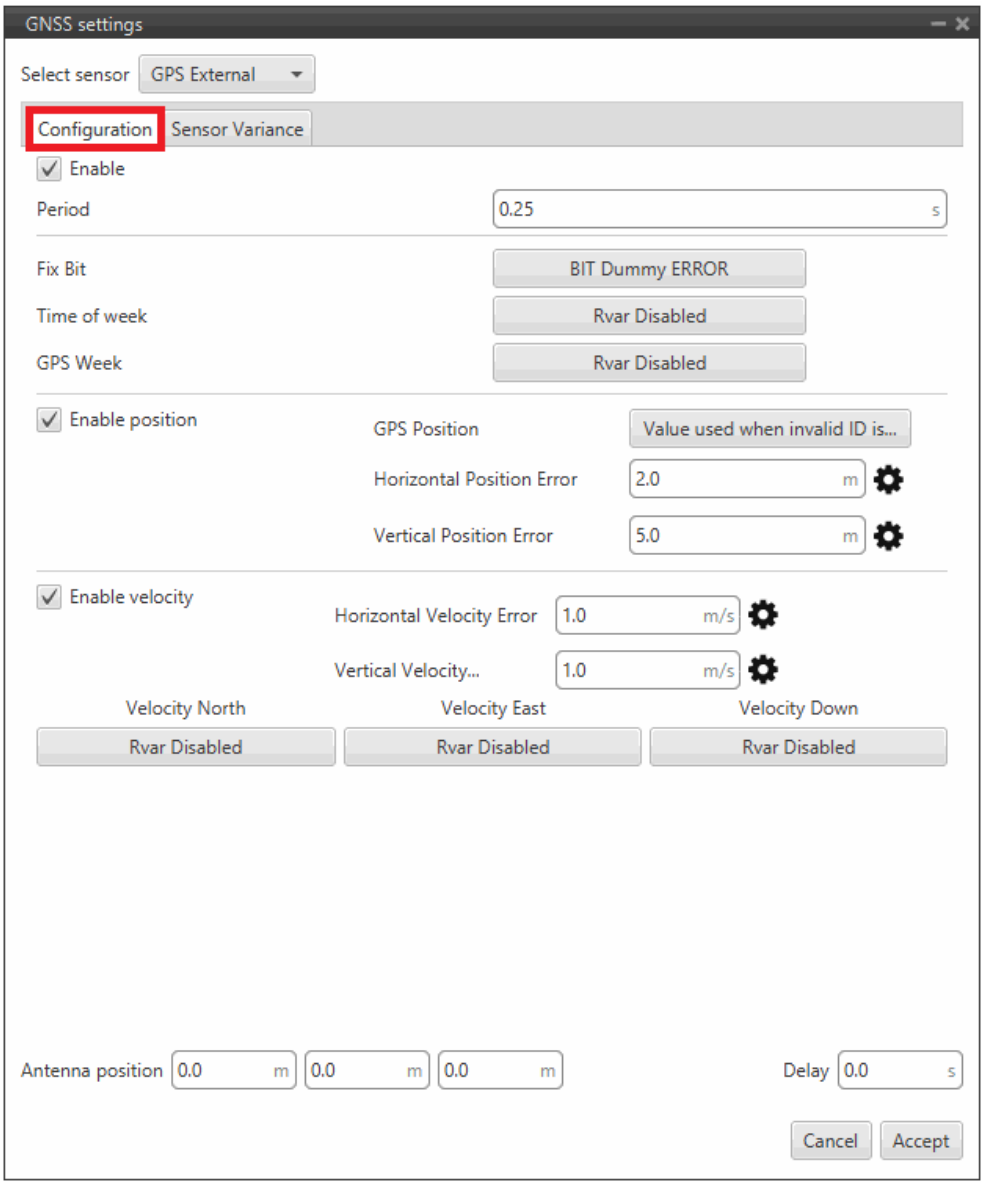

GNSS sensor block configuration


The parameters to be configured in the first and last row of this configuration menu are presented below:

- **Select sensor**: The first parameter to select is the GNSS sensor: **GNSS 1, GNSS 2** or **GPS External**. Depending on the sensor selected, the block will change name and configuration menu. However, GNSS 1-2 have the same configuration menu.

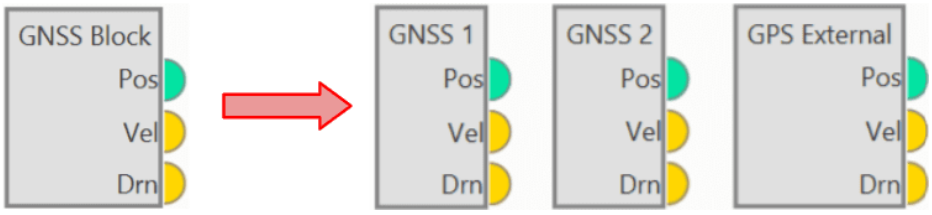

GNSS sensor blocks

- **Ublox preset**: By default, Custom is selected. If an **option other than** Custom is selected, users will **only be able to configure the 'Sensor Variance' tab** (this tab will be described below).

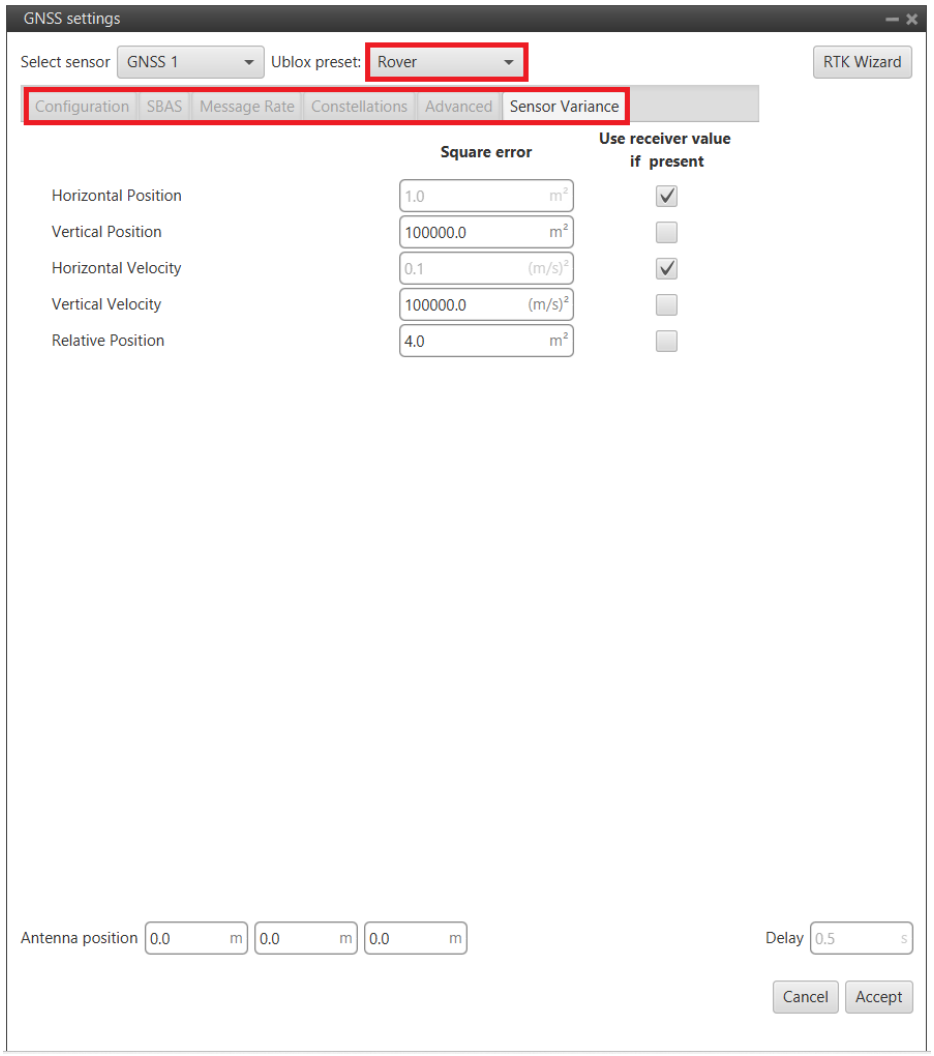

GNSS sensor block configuration - Rover/Dynamic base/Static base


- **Custom**: This option allows the user to modify all the tabs that appear in this menu (all tabs are described below).
- **Rover**: By choosing this option, a default 'Rover' configuration will be selected for this block.

This corresponds to 'MOVING BASE → Rover' units and 'STATIC BASE' AIR units of the RTK wizard (described below).

- **Dynamic base**: By choosing this option, a default 'Dynamic base' configuration will be selected for this block.
  This corresponds to 'MOVING BASE → Base' units of the RTK wizard (described below).
- **Static base**: By choosing this option, a default 'Static base' configuration will be selected for this block.
  This corresponds to GND units of the RTK wizard (described below).

For more information on these default configurations, click here (go to section 3.1.5).

- **RTK Wizard**: This interface helps the user configuring everything related to RTK or GNSS Compass. By clicking here, the configuration menu will be displayed:

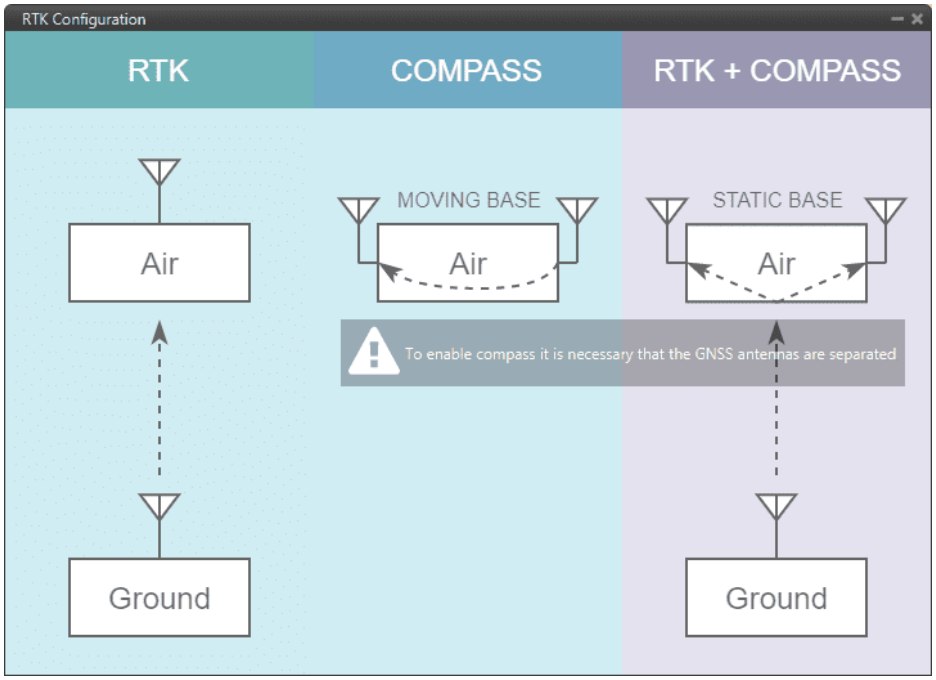

GNSS sensor block configuration - RTK Wizard

In this menu, the user can find 3 different options:

- **RTK**: Stands for **Real Time Kinematics** (RTK) and it is a satellite navigation technique used **to enhance the precision of position data derived from satellite-based positioning systems**. **To work, it requires 2 GNSS receivers placed in different autopilots**.

By clicking on 'Air', a default 'Custom' configuration will be loaded in this block. Likewise, by clicking on 'Ground', a default 'Static base' configuration will be selected.

> **Important**
>
> **Static base** mode is the only mode that improves absolute GNSS position accuracy, and the base receiver must remain stationary. Moving it can cause position and velocity estimation errors in the rover receiver using its RTK corrections.

- **Compass**: The GNSS compass provides accurate dual antenna GNSS-based heading that is not subject to magnetic interference. **It requires 2 GNSS receivers placed on the same autopilot to work**.

  By clicking on 'Air', a default 'Moving base' configuration will be loaded if this GNSS receiver has been selected as base. Otherwise, if this GNSS receiver has been selected as rover, a default 'Rover' configuration will be loaded.

  > **Important**
  >
  > **Moving base** mode allows the base receiver to move and improves the relative position accuracy between the base and rover receivers. It is used by GNSS Compass to provide accurate heading; it does not improve their absolute GNSS position accuracy.

- **RTK + Compass**: Hybrid combination where both tools are employed at the same time in a system where the **AIR unit must have 2 GNSS receivers** and the **GND must have**, at least, **1 GNSS receiver**.


  By clicking on 'Air', a default 'Rover' configuration will be loaded in this block. Likewise, by clicking on 'Ground', a default 'Static base' configuration will be selected.

- **Antenna position**: It is used to set the relative distance to the center of mass from the GNSS antenna in aircraft body axis.

This parameter has to be set correctly in order to get a correct value when using GNSS Compass.

- **Delay**: Delay with which the GPS information is 'picked up', as the GPS may have a small delay while it reads and processes the information. In case the user has selected **GNSS 1 or GNSS 2**, the internal GPS of the Veronte Autopilot 1x has a default **delay of 0.5 seconds**.

- **GNSS 1-2 configuration menu**:
  - **Configuration**: This menu contains some of the parameters needed to configure the GNSS 1-2 receiver located in Veronte Autopilot 1x.

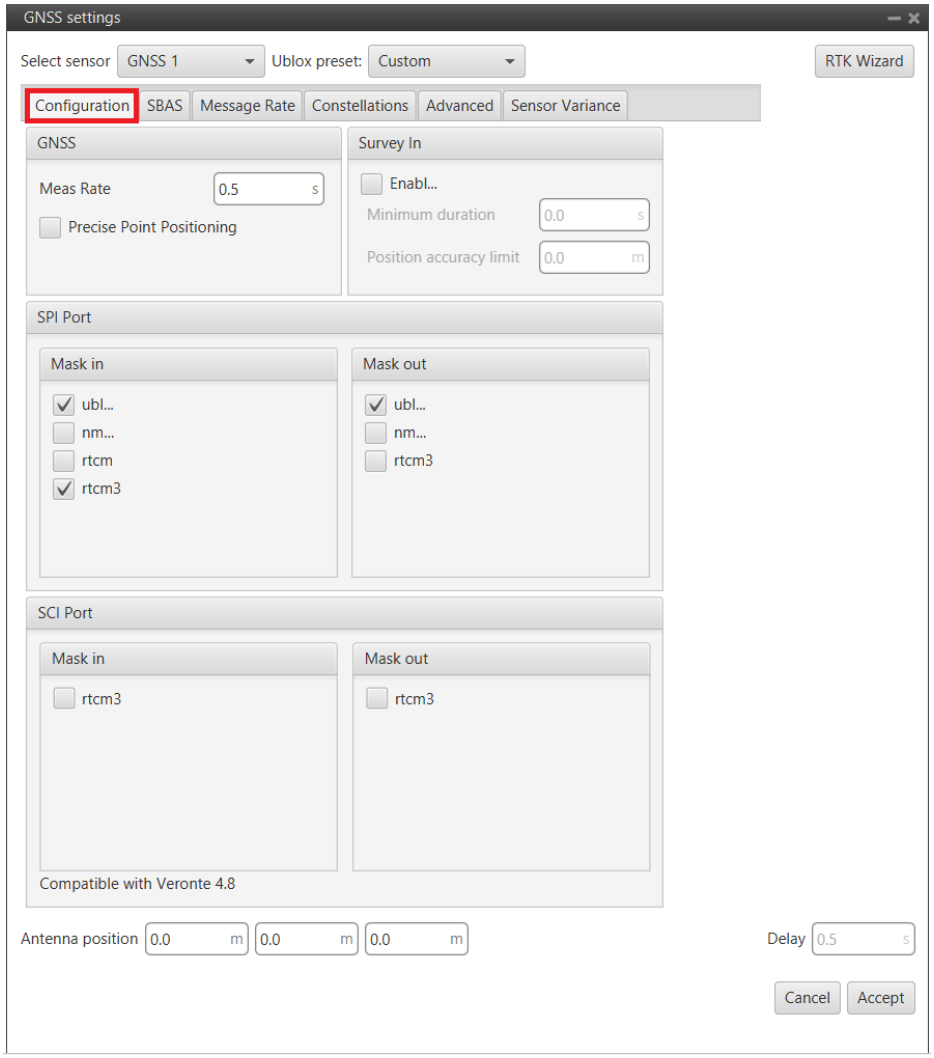

GNSS 1/2 sensor block configuration - Configuration tab

The following parameters are configurable:

- **GNSS**: Data values that can be configured.
  - **Meas Rate**: Defines the minimum time between data acquisition.
  - **Precise Point Positioning (PPP)**: This option is a precise global positioning service. PPP is able to **provide centimetre to decimetre level positioning solutions** after a few minutes with an unobstructed view of the sky.
- **Survey In**: Determines the position of a stationary receiver by building a weighted average of all valid 3D position solutions.


  This mode should be activated on a Ground unit to enable GNSS Differential mode and send corrections to the Air unit.

  Two requirements must be specified to stop the procedure. Survey in procedure shall **end when both requirements are met**:
  - **Minimum duration**: Defines a minimum amount of observation time independent of the actual number of valid fixes that were used for the position calculation. Reasonable values range from **one day for high accuracy** requirements to a **few minutes for approximate position determination**.
  - **Position accuracy limit**: Defines a limit on the dispersion of positions contributing to the calculated mean.
- **SPI Port**: Allows the user to select the different comunication protocols as input or output. One port can handle several protocols at the same time (e.g. NMEA and UBX).
  - **Mask in**: Defines the inputs, i.e., receives the data (usually the air unit). The available protocols are UBLOX, NMEA, RTCM and RTCM3.
  - **Mask out**: Defines the outputs, i.e. sends the data (usually the ground unit). The available protocols are UBLOX, NMEA and RTCM3.

  More information on protocols and configuration can be found in the U-blox documentation.


- **SCI Port**: In this case, RTK messages that are sent through the RTCM3 protocol are connected directly through an SCI port, so they do not occupy the bandwidth of the SPI port.

- **SBAS**: SBAS stands for **Satellite Based Augmentation System**. It is a set of geostationary satellites that are used to check the status of the signals sent by GPS Satellites and to improve tracking by correcting for atmospheric disturbations, orbit deviations, clock errors, etc.
  In **1x PDI Builder**, it is possible to select the satellites to be used for this purpose by **selecting the numbers listed in the table** in the figure below or have the **software choose them automatically** according to the location of the platform.
  The automatic option is recommended.

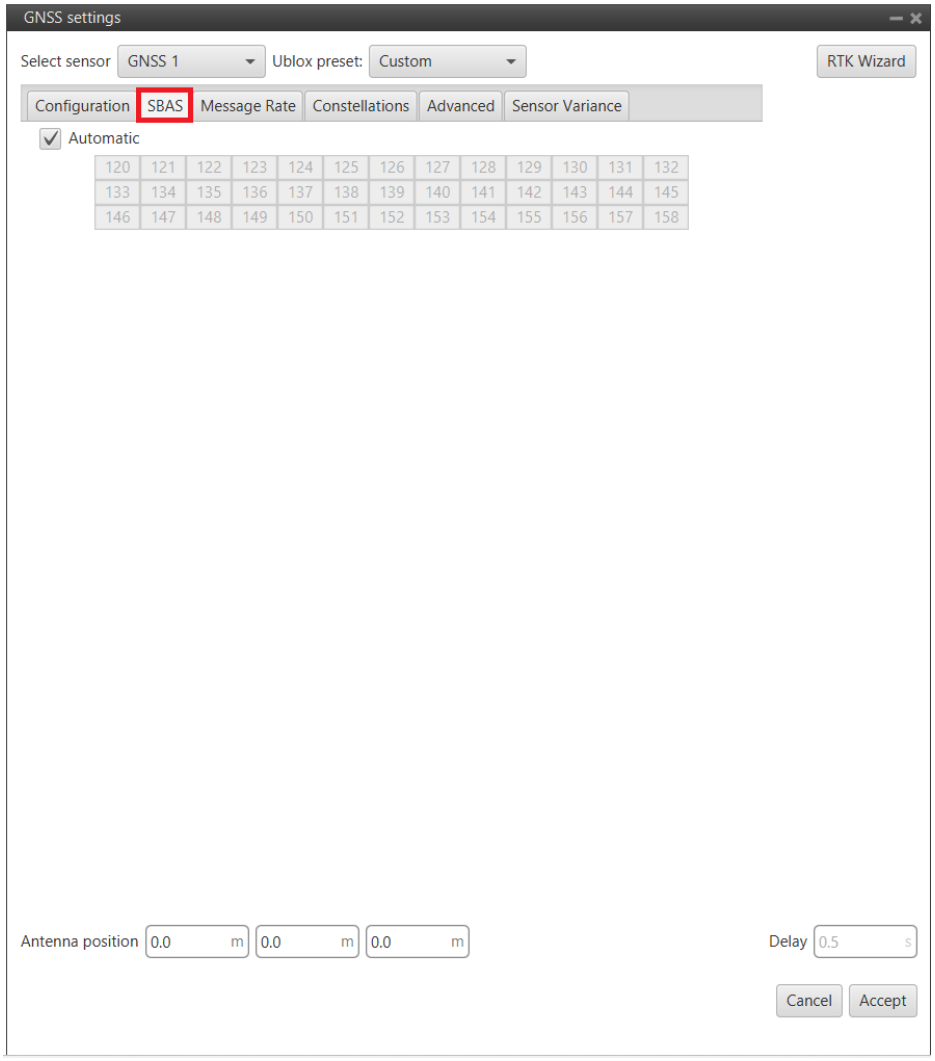

GNSS 1/2 sensor block configuration - SBAS tab


- **Message Rate**: The Message rate options are used to set the **time between the messages received on the autopilot**. Each of the different messages can be configured separately: ECEF (Earth Centred Fixed Reference Frame), LLH (Latitude, Longitude and Height), Speed, GPS Time, SV Status (status of the GPS satellite), etc.

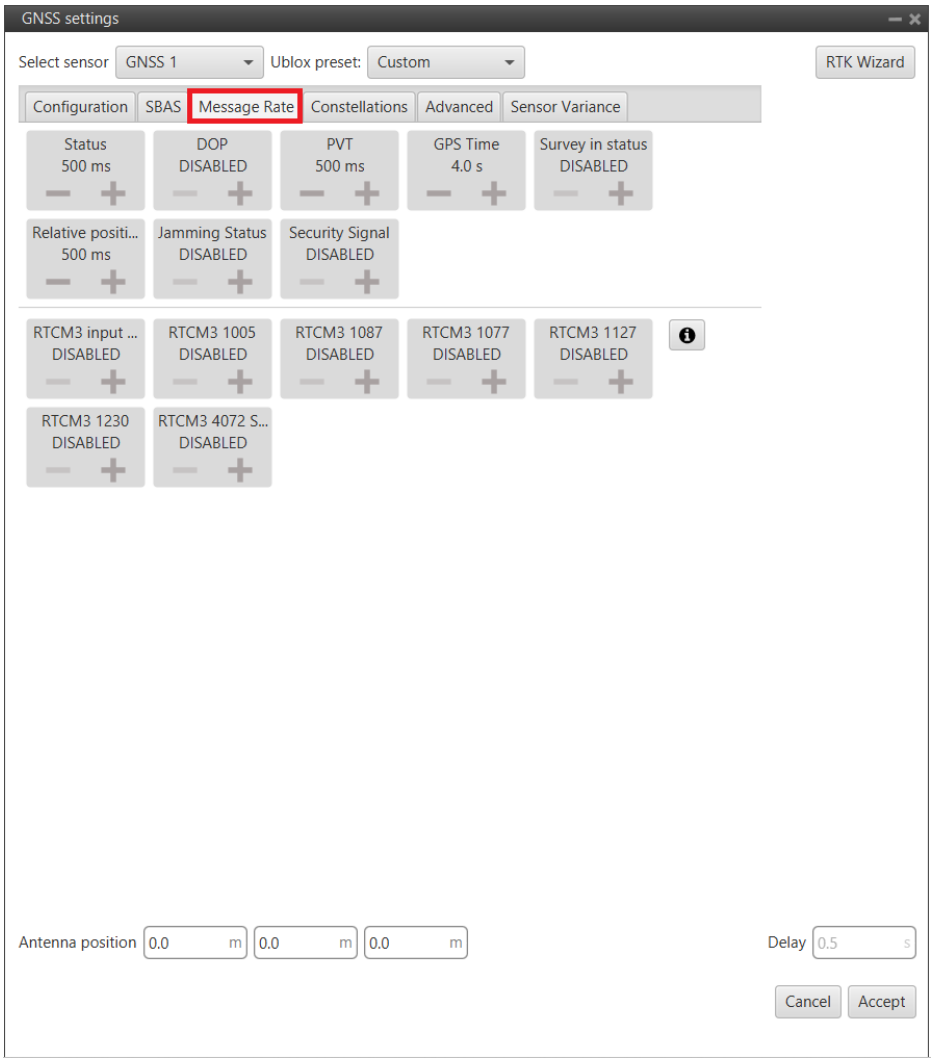

GNSS 1/2 sensor block configuration - Message Rate tab

More information on the list of RTCM 3 messages can be found here.


- **Constellations**: In this tab, the user can select which GNSS constellations are being used from the supported constellations listed in the figure below:

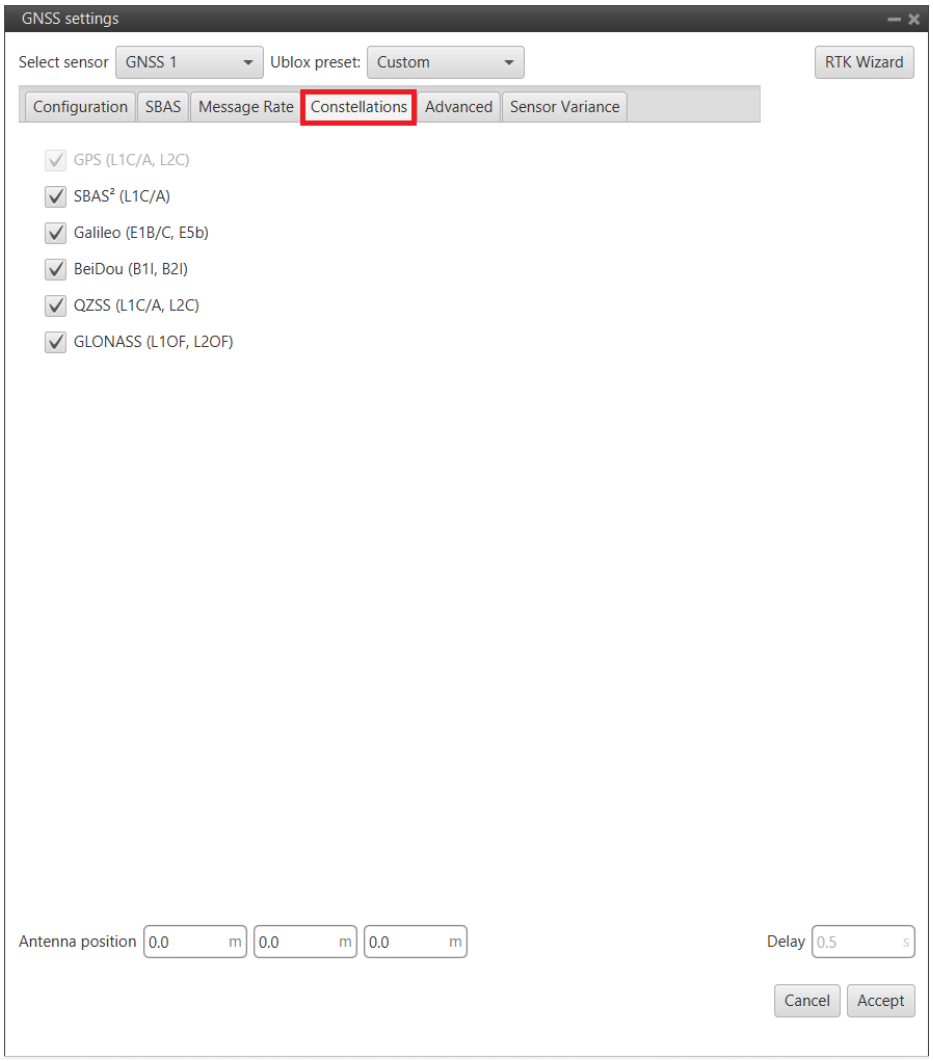


GNSS 1/2 sensor block configuration - Constellations tab

- **SBAS**
- **Galileo**
- **BeiDou**
- **QZSS**
- **GLONASS**

- **Advanced**: **The values shown here should only be modified by advanced users**. For this reason, the following message appears when entering this tab:

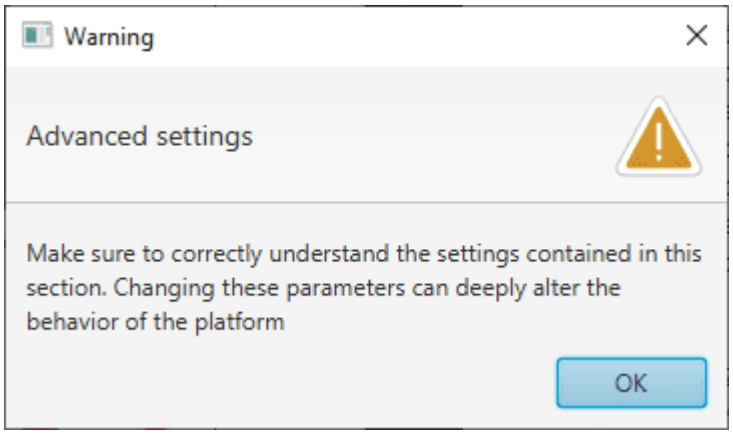

GNSS 1/2 sensor block configuration - Warning advanced tab

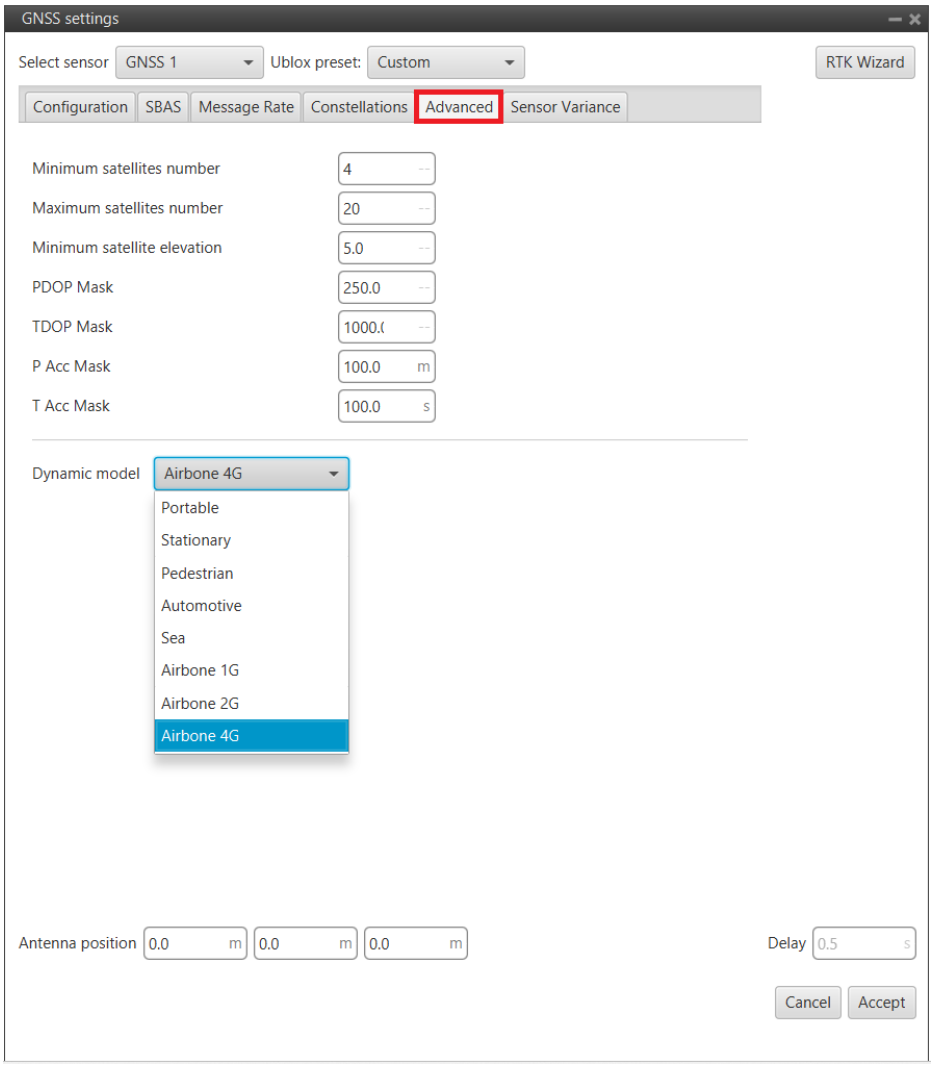

GNSS 1/2 sensor block configuration - Advanced tab

> ⚠ **Warning**
>
> Not recommend parameters may cause problems during the acquisition of GNSS positioning.

- **Minimum satellites number**: Minimum number of satellites needed to have position fixed (6 recommended).
- **Maximum satellites number**: Maximum number of satellites needed to have position fixed (20 recommended).
- **Minimum satellite elevation**: Minimum elevation of a satellite to be considered. **Value in degrees** (5.0 recommended).
- **PDOP mask**: Maximum Position Dilution of Precision to consider the solution (25.0 recommended).
- **TDOP mask**: Maximum Time Dilution of Precision to consider the solution (100.0 recommended).
- **P Acc mask**: Maximum Position Accuracy to consider the solution (5 m recommended).
- **T Acc mask**: Maximum Time Accuracy to consider the solution (100.0 s recommended).
- **Dynamic model**

  The embedded receiver supports different dynamic platform models to adjust the GNSS navigation engine to the expected application environment. The settings improve the receiver's interpretation of the measurements and thus provide a more accurate position output.


  Setting the receiver to an unsuitable platform model for the given application environment is likely to result in a loss of receiver performance and position accuracy.

Platform	Description
Portable	Applications with low acceleration.
Stationary	Stationary applications.

Platform	Description
	Velocity restricted to 0 m/s. Zero dynamics assumed.
Pedestrian	Applications with low acceleration and speed. Low acceleration assumed.
Automotive	Used for applications with equivalent dynamics to those of a car. Low vertical acceleration assumed.
Sea	Recommended for applications at sea, with zero vertical velocity. Zero vertical velocity assumed. Sea

Platform	Description
	level assumed.
Airborne 1G	Used for applications with a higher dynamic range and greater vertical acceleration than a car.
Airborne 2G	Recommended for typical airborne environments.
Airborne 4G	Recommended for extremely dynamic environments.

- **Sensor Variance**: The variances considered in the EKF for the GNSS solution are by default the values provided by the GNSS receiver but can be modified for more complex scenarios.

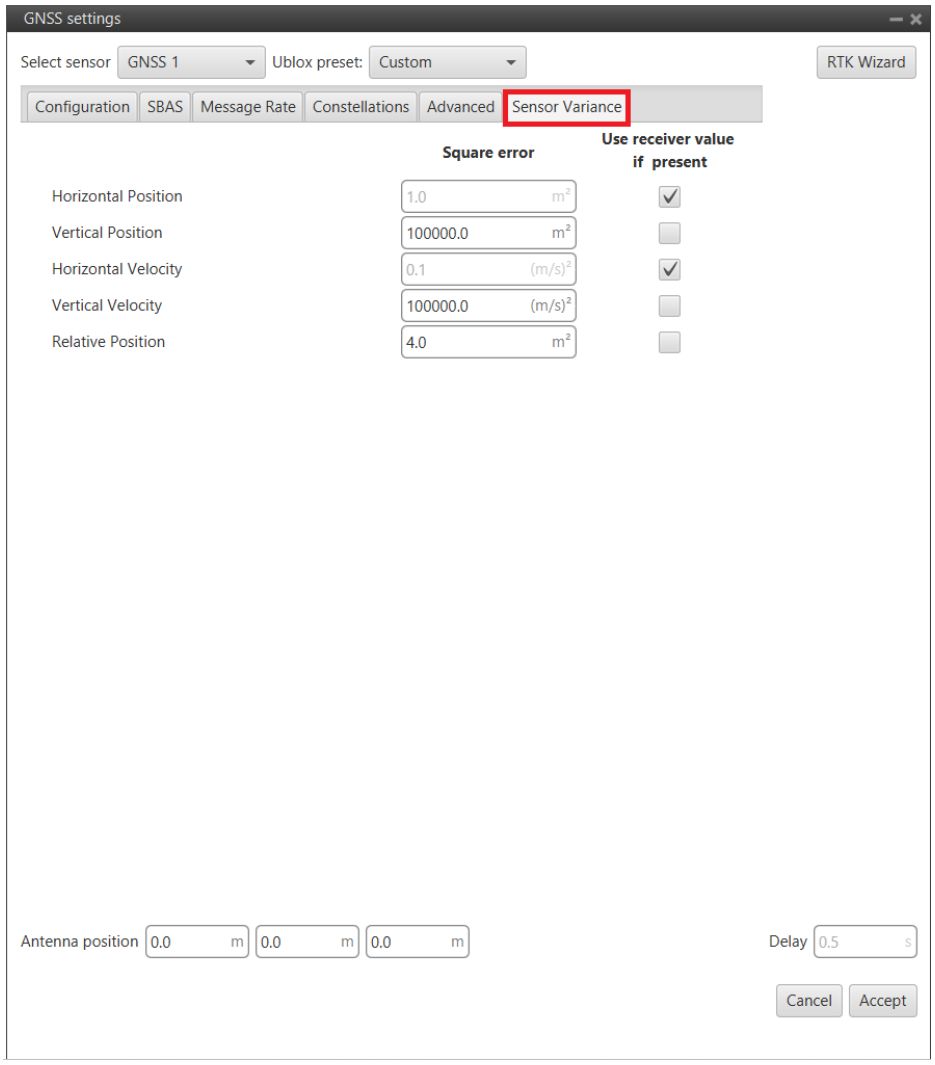


GNSS sensor block configuration - Sensor variance tab

- **Horizontal Position**: Variance for the North and East components of the position solution.
- **Vertical Position**: Variance for the Down component of the position solution.
- **Horizontal Velocity**: Variance for the North and East components of the velocity solution.
- **Vertical Velocity**: Variance for the Down component of the velocity solution.
- **Relative Position**: This is the variance of the relative position from one GNSS receiver to another.

- **GPS External configuration menu**: If the GNSS information is received via an external system, the user must configure it in this menu, so that this system can be included in the navigation filters. After correctly configuring

the communication protocol in the corresponding channel (RS232, RS485, CAN, ...) the GPS External variables of interest must be filled in this interface:

- **Configuration**:

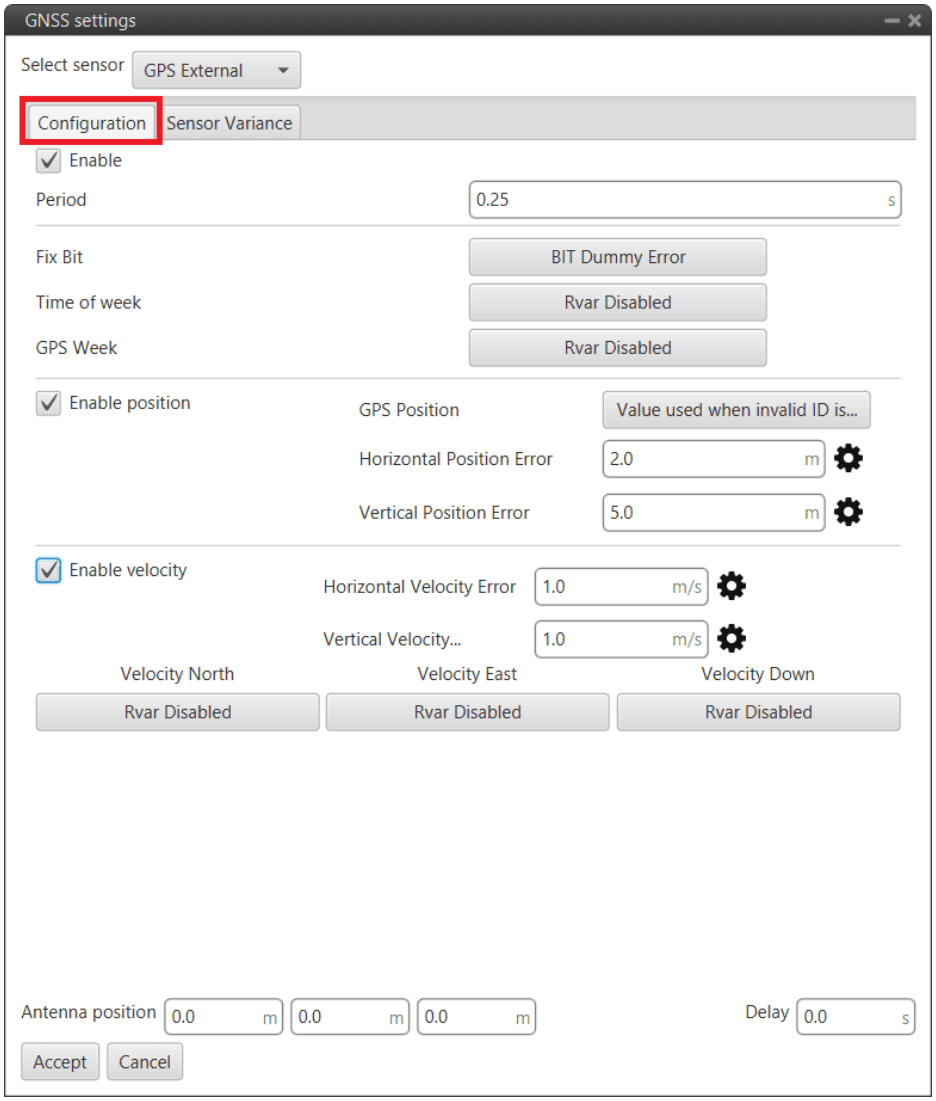

GPS External sensor block configuration - Configuration tab

> ⚠ **Caution**
>
> Check GNSS External device communication protocol before filling this menu.

The user must create a **Custom Message** according to the communication protocol used by the external sensor, so that its readings are stored in system variables. Then, the user can select these variables to configure the following parameters:

- **Enable**.

- **Period**: Defines the period of incoming information from the external system.
- **Fix Bit**: Data provided by the external device which is important to know the status of the positioning.
- **Time of week**: Variable extracted from the communication protocol defining the time of the week.
- **GPS Week**: Variable extracted from the communication protocol defining the week.
- **Enable position**:
  - **GPS Position**: Variable defining latitude, longitude and height from GNSS. Usually Moving Object variables are used in **1x PDI Builder**.
  - **Horizontal Position Error**: Defined by the GNSS External device provider.
  - **Vertical Position Error**: Defined by the GNSS External device provider.
- **Enable Velocity**:
  - **Horizontal Velocity Error**: Defined by the GNSS External device provider.
  - **Vertical Velocity Error**: Defined by the GNSS External device provider.
  - **Velocity North/East/Down**: Variables extracted from the communication protocol defining GNSS velocity measured.

- **Sensor Variance**: This tab is configured in the same way as described above.

Magnetic Field

Magnetic Field sensor block returns the configured magnetic field in the current location.

> **Note**
>
> The magnetic field configuration is global, shared by all blocks of this type.



Magnetic Field block


- **Output**

  Pin 0: Magnetic field in **NED frame** as a **5-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: North component of magnetic field
  - 2: East component of magnetic field
  - 3: Down component of magnetic field
  - 4: Variance (always zero)

Magnetometer

Magnetometer sensor block returns the magnetic field being read by the selected sensor in the body frame.

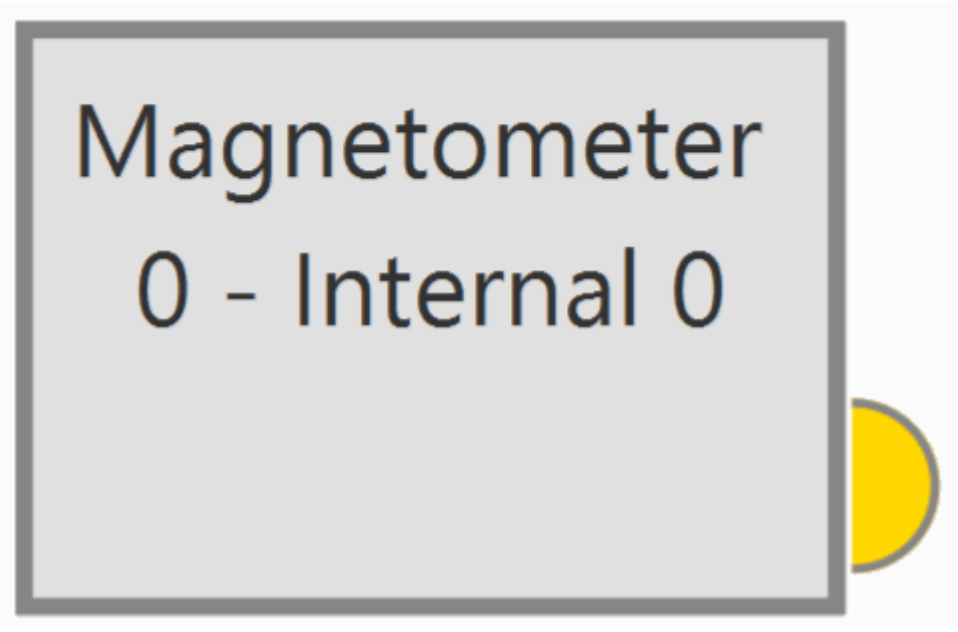


Magnetometer block

- **Output**

  Pin 0: Magnetic field in **body frame** as a **5-dimensional real array** with the following components:

- 0: Update flag (always 1)
- 1: X body component of magnetic field
- 2: Y body component of magnetic field
- 3: Z body component of magnetic field
- 4: Variance

- **Configuration menu**:

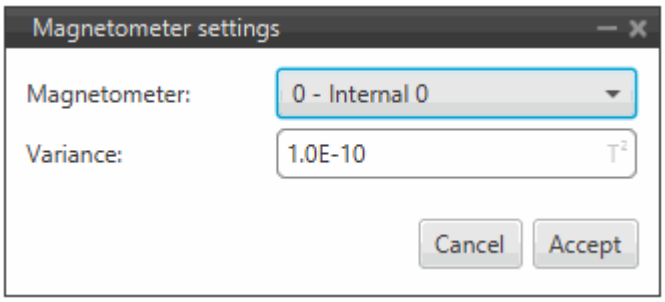


Magnetometer block configuration

  - **Magnetometer**: Users must select the desired internal or external sensor magnetometer to be used.
  - **Variance**: Means the influence of the parameter on the Navigation filters. The higher the variance, the lower the effect.
    This is the only parameter configured independently from the Magnetometer selected.

Position reader

This block extracts the absolute position measurement of the vehicle. It is typically used to provide the navigation system (EKF) or guidance modules with the spatial coordinates necessary for trajectory calculation and position holding

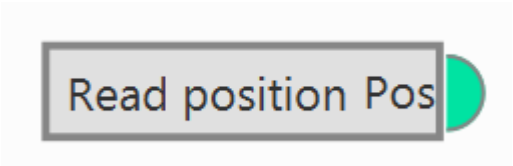


Position reader block

- **Output**:

  Pos: Absolute position measurement.

- **Configuration menu**:

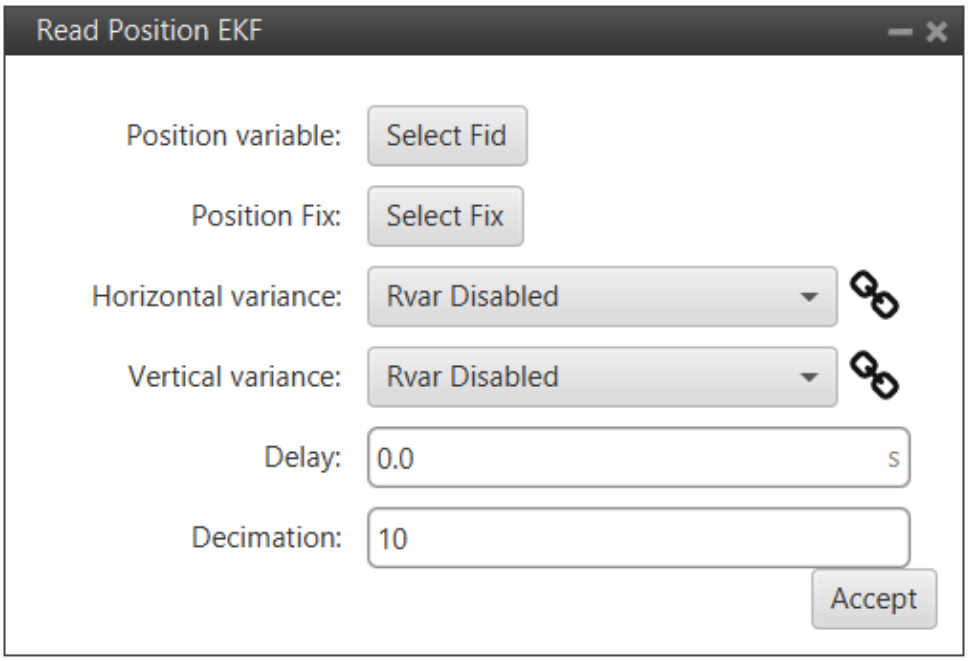


Position reader block configuration

- **Position variable**: Allows the selection of the Identifier (Fid) for the position variable to be read.
- **Position Fix**: Selection of the "Fix" signal indicating measurement validity.
- **Horizontal variance:** Defines the statistical uncertainty of the position on the horizontal plane.
- **Vertical variance**: Defines the statistical uncertainty of the altitude.
- **Delay**: Specifies the time latency of the measurement. This is essential for synchronizing position data (often slower) with high-frequency inertial calculations.
- **Decimation**: Indicates the downsampling factor. A value of 10 means the filter processes one measurement for every 10 samples received, reducing computational load without sacrificing estimation stability.

Relative position

Relative position sensor block works in conjunction with the Internest configuration panel (of the **Sensors menu**) to configure the **Internest system** as an ultrasound sensor that calculates the position of Veronte Autopilot 1x.

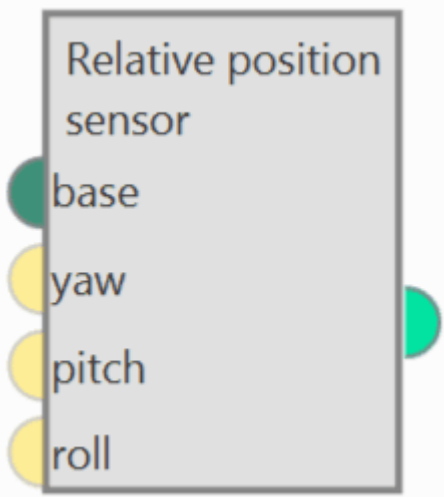

Relative position block

- **Inputs**: The 3 navigation angles (yaw, pitch and roll) of the **base** platform can be entered.

  base: Base position to which position measurements are relative. Usually a 'Moving object' is linked.

  (Optional) **yaw**: Yaw of system of reference in which position measurements are received (0 if not connected).


  (Optional) **pitch**: Pitch of system of reference in which position measurements are received (0 if not connected).

  (Optional) **roll**: Roll of system of reference in which position measurements are received (0 if not connected).

- **Output**

  Pin 0: Absolute position measurement.

- **Configuration menu**:

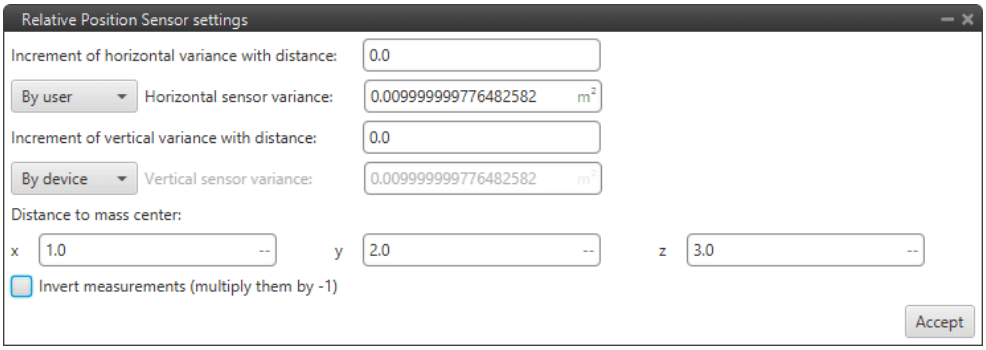

Relative position block configuration

- **Increment of horizontal/vertical variance with distance**: With this increment, the further away the Veronte Autopilot 1x is from the base, the more variance it is given in a linear fashion.
- **Horizontal/Vertical sensor variance**: Square error of the internest position in xy/z planes.


> **Note**
> If the option By device is selected, these parameters are automatically set by the autopilot.

- **Distance to mass center: x/y/z**: Defines the distance between the Internest system and the center of mass from the base.
- **Invert measurements (multiply them by -1)**: If enabled, the measurements shall be multiplied by -1.

> **More Information**
> These parameters are used in the calculation of the variance for the EKF algorithm by means of the following equation:
>
> $$square\ error = position\ error + (increment\ error \cdot distance)$$
>
> - *position error* : Horizontal/Vertical sensor variance position
> - *increment error* : Increment of hotizontal/vertical variance with distance
> - *distance* : Distance to the base

SRTM height

SRTM height sensor block gets the terrain altitude at the current UAV position according to the configured mesh.

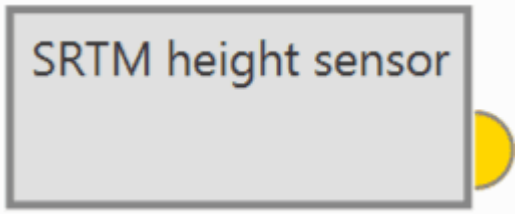


SRTM height block

- **Output**

  Pin 0: Terrain altitude as a **4-dimensional real array** with the following components:

  - 0: Update flag (always 1)
  - 1: Valid flag (inside mesh)
  - 2: Terrain height
  - 3: Variance

- **Configuration menu**:

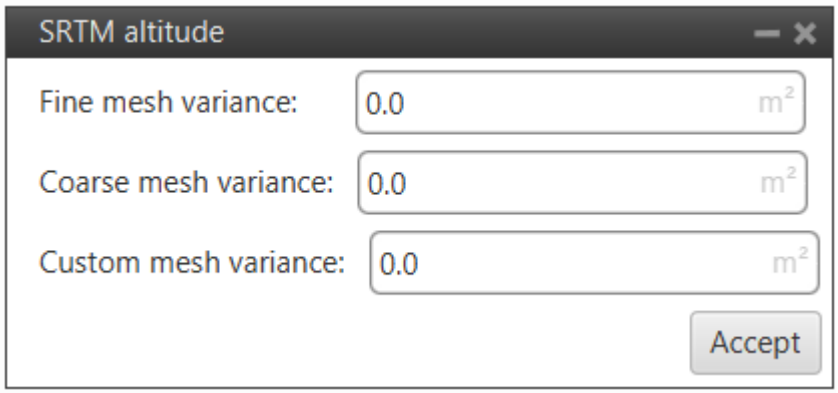


SRTM height block configuration

  - **Fine mesh variance**: Variance of the fine mesh. This is the smallest mesh, which contains detailed information on the altitude of the terrain.
  - **Coarse mesh variance**: Variance of the coarse mesh. This is the medium mesh with the least detail.
  - **Custom mesh variance**: Uncertainty assigned to user-defined terrain datasets.

> **Important**
>
> - **The values to be entered** in the configuration of this block must be > 0.
> - If the configured error values are very large, the EKF will converge more slowly to them or give more importance to other sensors, such as Lidar, to know the height of the terrain.
> - If these values are small, much more importance will be given to the terrain grid and it will converge faster.

Static Pressure

Static Pressure sensor block returns the static pressure measured by the selected sensor.

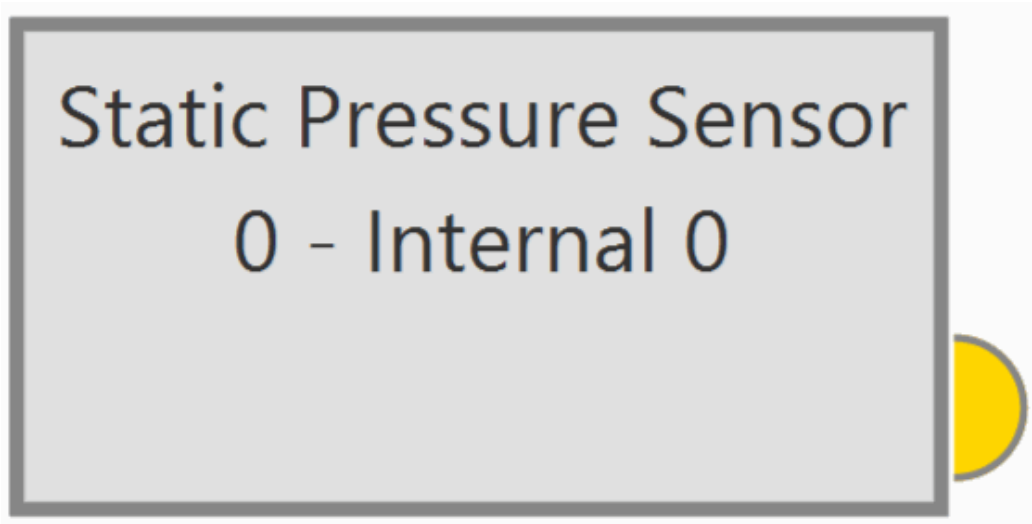


Static Pressure block

- **Output**

  Pin 0: Static pressure measurement as a 3-dimensional real array with the following components:

  - 0: Update flag
  - 1: Pressure
  - 2: Variance

- **Configuration menu**:

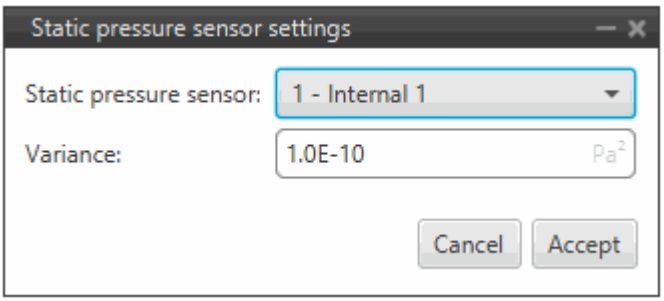

Static Pressure block configuration

  - **Static pressure sensor**: Users must select the desired static pressure sensor to be used.
  - **Variance**: Means the influence of the parameter on the Navigation filters. The higher the variance, the lower the effect.

This is a parameter configured independently from the Static Pressure sensor selected.

Signals blocks

Signal blocks include functions for processing and filter signals, control inputs and outputs, etc.

3D Table Interpolation

3D Table Interpolation block returns the value obtained interpolating the configured table with the input variables.



3D Table Interpolation block

- **Inputs**

  Pin 0: X component, **columns**.

  Pin 1: Y component, **rows**.

- **Output**

  Pin 0: Value interpolated from table for the input X and Y components.

- **Configuration menu**:



3D Table Interpolation block configuration


- **Sort**: By pressing this button, rows and columns are sorted from lowest to highest.
- **Add**: A row/column is added

> **Note**
>
> If **out of range**, the value for the closest limit shall be taken.

Acceleration limiter

Acceleration limiter block is a signal first and second derivative limiter.

It is like the Rate limiter block but "improved", as a less aggressive response is obtained, approaching the desired input in a "softer" way.

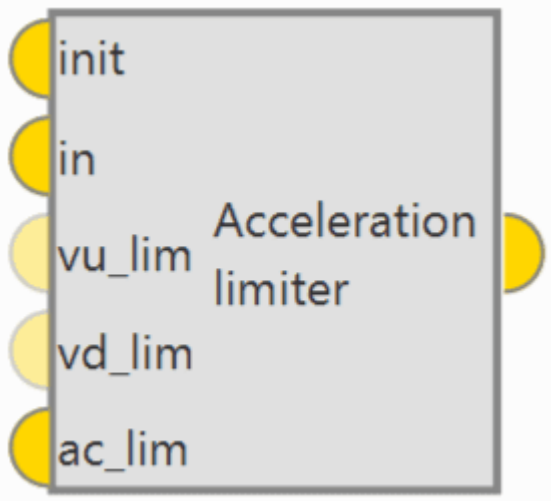

Acceleration limiter block

- **Inputs**

  init: Initialization value, this is the output of the block in the first step after on_focus.

  in: Input signal.

  (Optional) **vu_lim**: **First derivative limit** in the **up direction**. The value is read as **absolute value**, this means that **the sign** of this input is **neglected**.

  (Optional) **vd_lim**: **First derivative limit** in the **down direction**. The value is read as **absolute value**, this means that **the sign** of this input is **neglected**.


  ac_lim: **Second derivative limit**. The value is read as **absolute value**, this means that **the sign** of this input is **neglected**.

- **Output**

  Pin 0: Limited signal.

Bound


Bound block limits the input signal and produces a bit to indicate if it was within the allowed range.

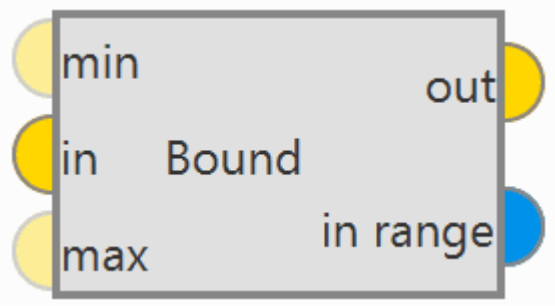

Bound block

- **Inputs**
  - (Optional) **min**: Minimum value allowed for input signal. If **not defined**, it is assumed to be **infinity**.
  - **in**: Input signal.
  - (Optional) **max**: Maximum allowed value for input signal. If **not defined**, it is assumed to be **infinity**.
- **Outputs**
  - **out**: Limited signal.
  - **in range**: Bit that is true when the input signal is within the allowed range and false otherwise.

User can use the **Bound** block to monitor critical system parameters that are within operating limits, e.g. airspeed. If **not OK**, **in range** can be used to trigger an alarm.

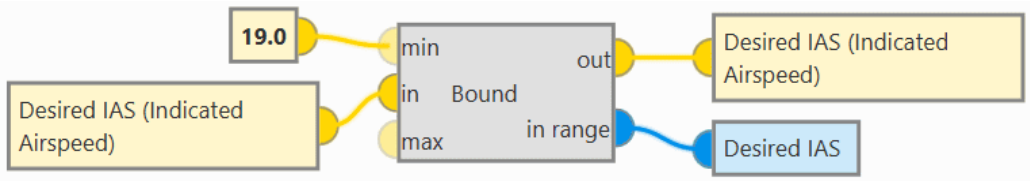


Bound block - Example of use

The bound block is in range if **in≥min** and **in≤max**, both included.

Derivative

Derivative block is a numerical derivative of an input signal.

> **ⓘ Note**
>
> As the result of a numerical derivative can be noisy, this block includes a simple first order filter with configurable time constant tau to smooth the output.

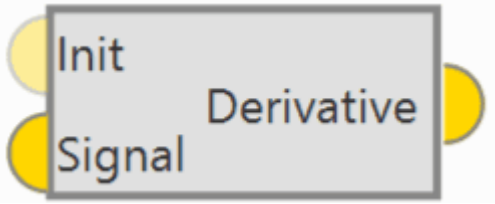

Derivative block

- **Inputs**


  (Optional) **Init**: Optional **initial value of the derivative**, if not connected a value of zero is assumed.

  Signal: Signal to compute the numerical derivative.

- **Output**

  Pin 0: Derived signal.

- **Configuration menu**:

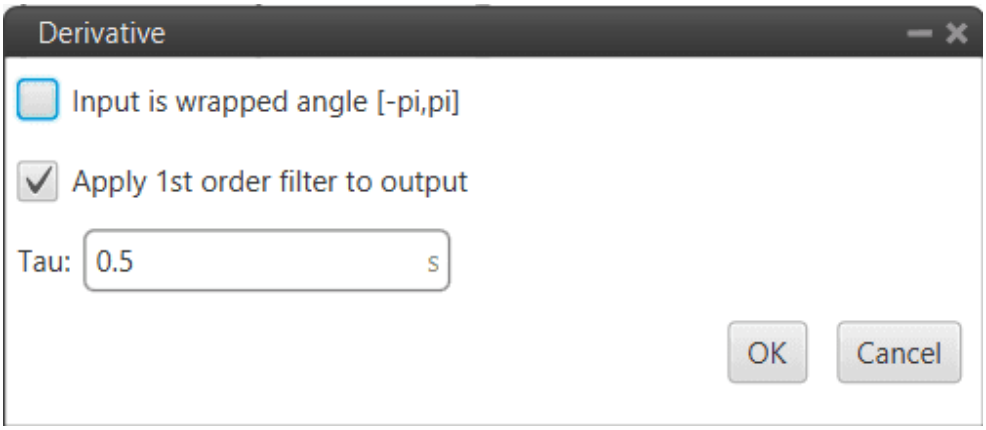

Derivative block configuration

  - **Input is wrapped angle [-pi,pi]**: Perform a [-pi, pi] wrap. It should be enabled when using angles.

- **Apply 1st order filter to output**: If enabled, a simple first order filter is applied to smooth the output. By default it is enabled and is also recommended.
- **Tau**: The time constant Tau must be entered.

EWMA Tau filter


EWMA (Exponentially Weighted Moving Average) Tau filter block is a simple first order filter with configurable time constant Tau.

This filter follows the following equation:

$$y = \alpha \cdot u + (1 - \alpha) \cdot y_{-1}$$


Where:

- $\alpha = \frac{dt}{dt + \tau}$
  - dt : GNC Timestamp
  - τ : Time constant
- u : Input value to be filtered
- y_{-1} : Initialization value at the first execution of the block (t=0)

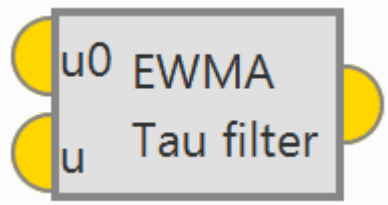

EWMA Tau filter block

- **Inputs**
  - **u0**: Initialization value (set in on_focus).
  - **u**: Current value to filter.
- **Output**
  - **Pin 0**: Filtered value.
- **Configuration menu**:

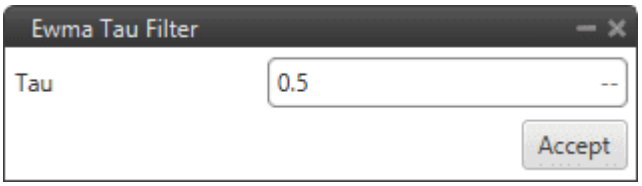

EWMA Tau filter block configuration

- **Tau**: The time constant Tau must be entered.

FFT


> **Error**
>
> The FFT block is temporarily disabled in this version.

FFT (Fast Fourier Transform) block outputs the Fast Fourier Transform of the input signal.



FFT block

- **Input**
  - **in**: Input signal.
- **Outputs**
  - **Amax**: 3D vector containing the magnitude of the three dominant frequencies (sorted from higher to lower magnitude).
  - **Fmax**: 3D vector containing the frequency of the three dominant frequencies (sorted from higher to lower magnitude).
- **Configuration menu**:

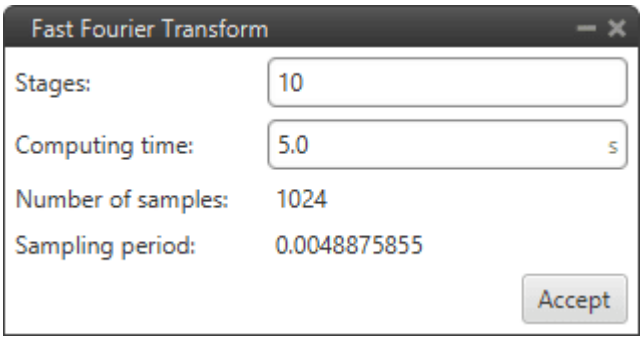


FFT block configuration

- **Stages**.
- **Computing time**.


Hysteresis

Hysteresis block applies hysteresis to input signal to prevent changes in output signal when the input is close to zero.



Hysteresis block

The behavior is as shown in the following diagram:

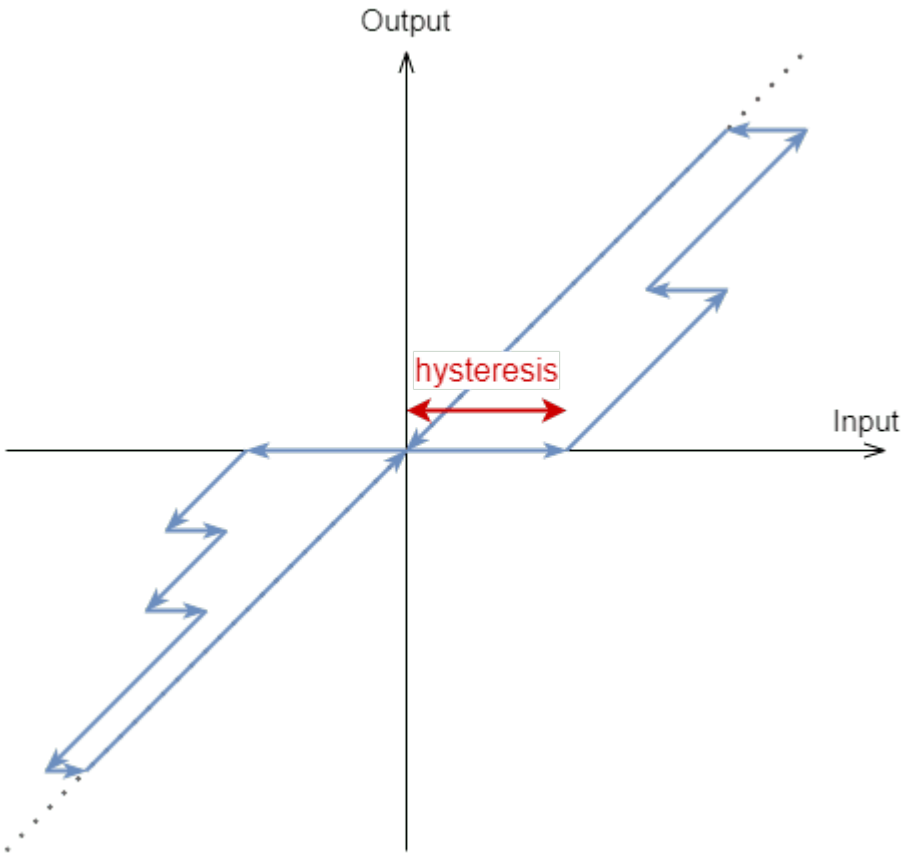

Hysteresis diagram


- **Input**

  Pin 0: Input signal.

- **Output**

  Pin 0: Output signal.

- **Configuration menu**:

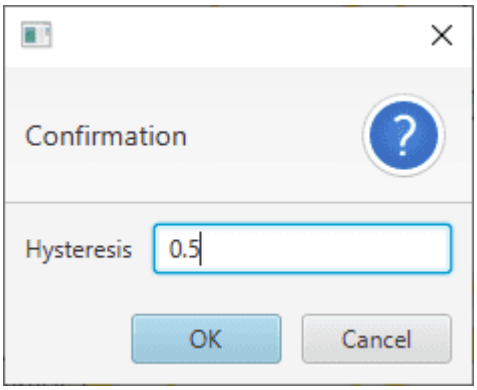

Hysteresis block configuration

  - **Hysteresis**: Users must enter the magnitud of the hysteresis.


IIR Filter

IIR Filter block allows the user to define an Infinite Input Response filter, it applies a **Z-transform**.



IIR Filter block


- **Input**
  - **Pin 0**: Input signal.
- **Output**
  - **Pin 0**: Output signal.
- **Configuration menu**:

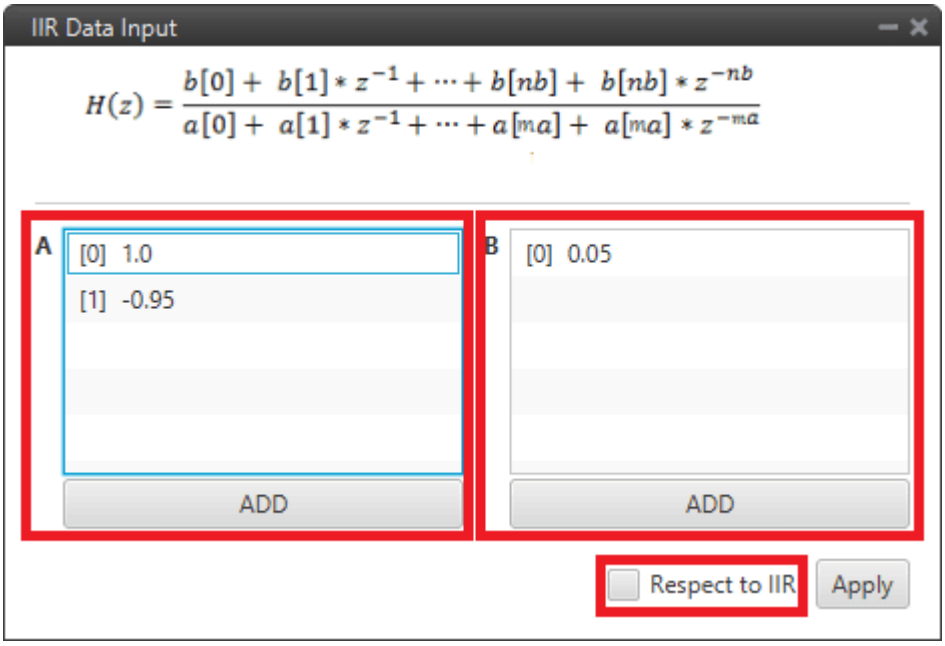

IIR Filter block configuration

  - **A**: Filter a coefficients. The user can add as many coefficients a as desired.
  - **B**: Filter b coefficients. The user can add as many coefficients b as desired.
  - **Respect to IIR**: If enabled, the first time the block is executed, it takes the value of input as the initial offset.


This block can be used as a derivative if configured as shown in the following figure:

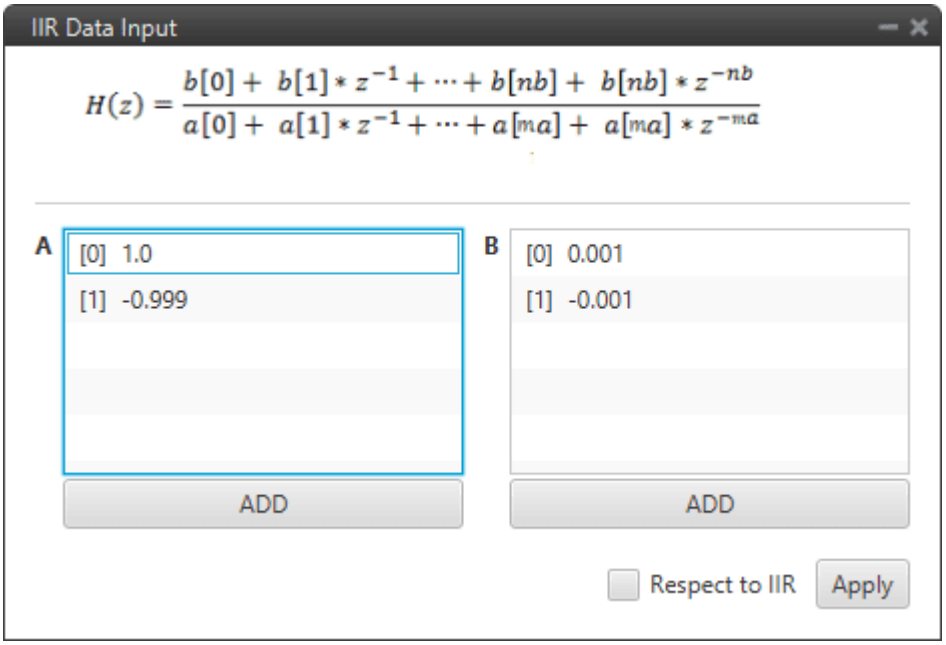

IIR Filter block - Derivative example

Integrator

Integrator block is a numerical integrator. It calculates the numerical integral of the input signal using the **trapezoidal formula**.

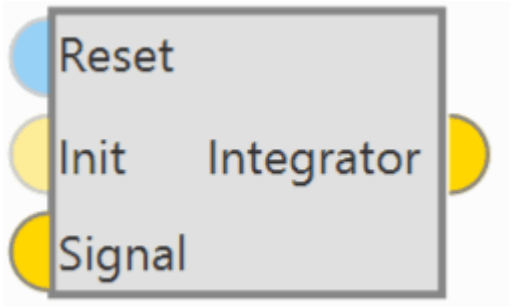

Integrator block

- **Inputs**

  (Optional) **Reset**: Optional reset, assumed false if not connected.

  (Optional) **Init**: Optional **initial value of the integral**, if not connected a value of zero is assumed.


  Signal: Signal to integrate.

- **Output**

  Pin 0: Integrated signal.

Interpolation Vector

Interpolation Vector block applies the configured table interpolation over each of the components of the input vector.

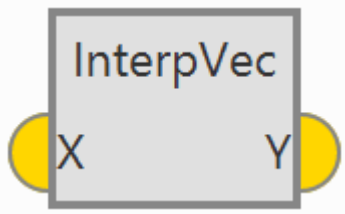

Interp Vec block


- **Input**

  X: Input vector.

- **Output**

  Y: Interpolated output vector.

- **Configuration menu**:

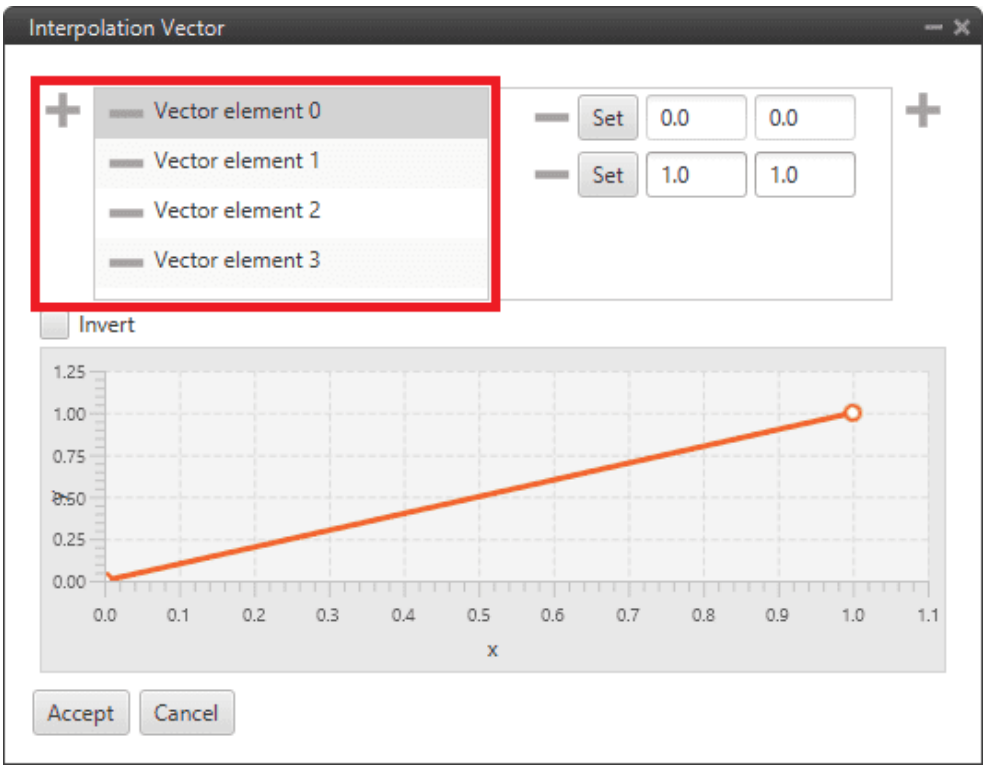


Interp Vec block configuration

- ➕: Users should add as many Vector elements as there are components in the input vector.
- **Points**: The interpolation function of each component must be configured by the user. It is represented by the graph below.
- **Invert**: If enabled, the y axis of the function will correspond to the input vector and the x axis to the interpolated output vector.


Ramp

Ramp block will **ramp up to** the **final value** defined as input, starting **from the initial value** defined as input, and respecting the parameters **Ramp Delay** and **Ramp Time**.

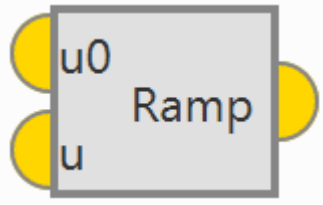

Ramp block

- **Inputs**
  - **u0**: Initial value of the ramp, read only in on_focus.
  - **u**: Final value of the ramp, updated in each step.
- **Output**
  - **Pin 0**: Output ramp value.
- **Configuration menu**:

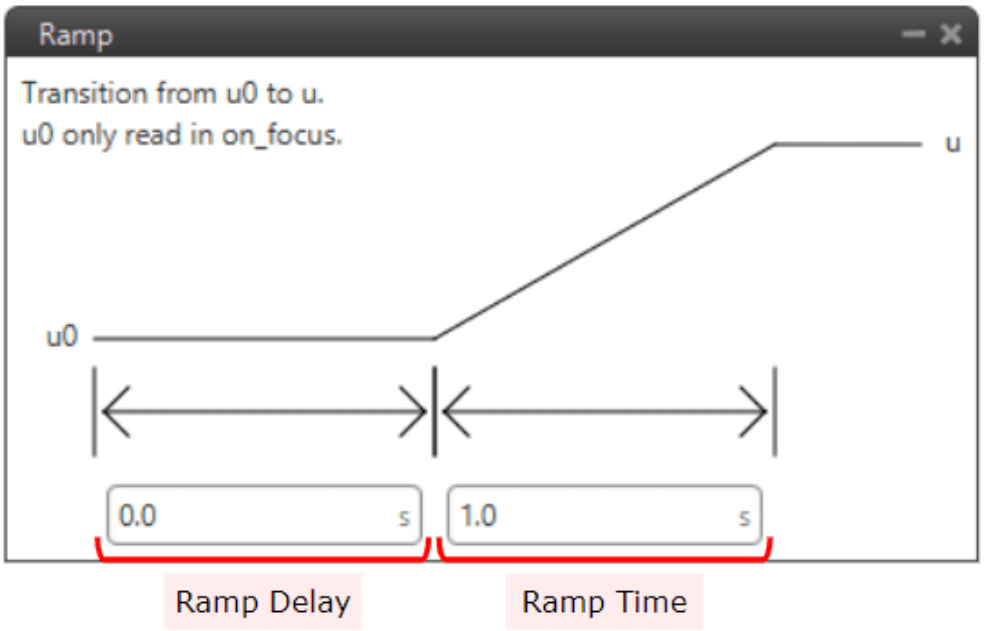


Ramp block configuration

- **Ramp Delay**: Time before starting the ramp.
- **Ramp Time**: Time in which the variable must change from the initial value to the final value.

Rate limiter

Rate limiter block limits the rate of change of the input signal. It returns the signal input, but limiting its maximum rate of change.

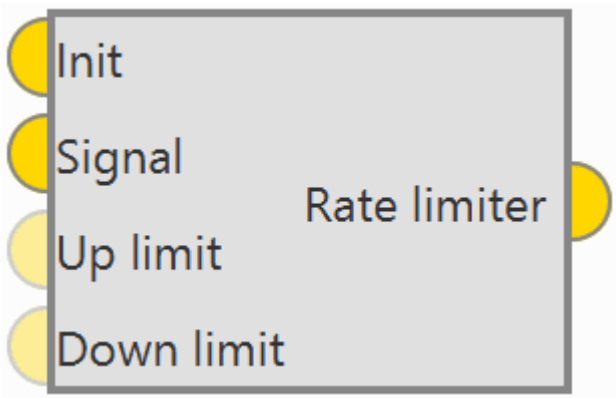

Rate limiter block

If the rate of change of the input is higher than the maximum, the output will try to converge to the input, but respecting the imposed maximum rate of change.

The **first time** the block is executed the **output will be equal to Init**.

The constraints defined within the **Rate Limiter** block must be interpreted as follows:

$$\frac{ds}{dt} = \frac{s(k) - s(k-1)}{time(k) - time(k-1)}$$

Where:

- $s(k)$ is the current signal value.
- $s(k-1)$ is the previous signal value.
- $time(k)$ and $time(k-1)$ are the corresponding timestamps.

The limits must satisfy:

$$\text{Down limit} \leq \frac{ds}{dt} \leq \text{Up limit}$$

This means that setting a limit value of **"1"** implies that the maximum allowed rate of change is **1 unit per second (1 ud/s)**.

> ⓘ **Note**
>
> The **Rate Limiter** ensures that signal variations do not exceed the defined upper and lower limits, preventing abrupt transitions in the system.

- **Inputs**

  Init: Initialization value, this is the output of the block in the first step after on_focus.

  Signal: Input signal.

  (Optional) **Up limit**: Rate limit in the up direction. The value is read as **absolute value**, this means that the sign of this input is neglected.

(Optional) **Down limit**: Rate limit in the down direction. The value is read as **absolute value**, this means that the sign of this input is neglected.

- **Output**

  Pin 0: Rate-limited signal.


- **Configuration menu**:



Rate limiter block configuration

  - **Angle wrap**: Perform a [-pi, pi] wrap. It should be enabled when using angles.


This block can be used to avoid instantaneous spikes and spikes in control signals, effectively reducing control noise and smoothing flight:

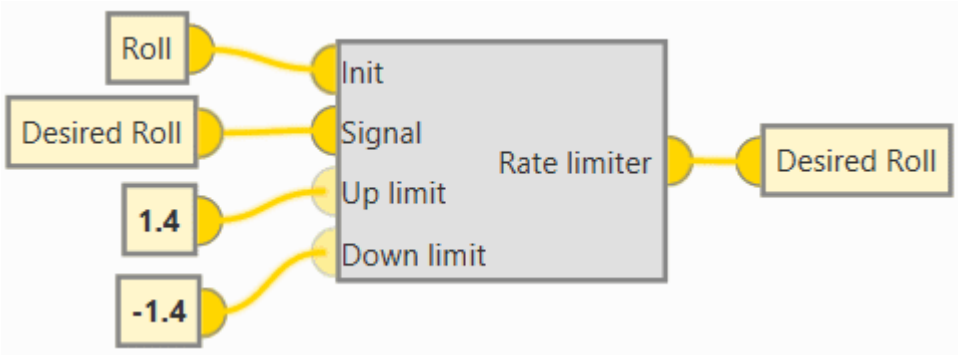

Rate limiter block - Example of use

Signal generator

Signal generator block is a wave signal generator.

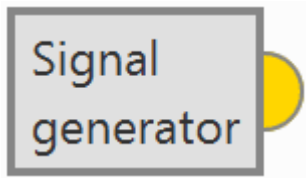


Signal generator block

- **Output**

Pin 0: Signal generated according to the configured type.

- **Configuration menu**:

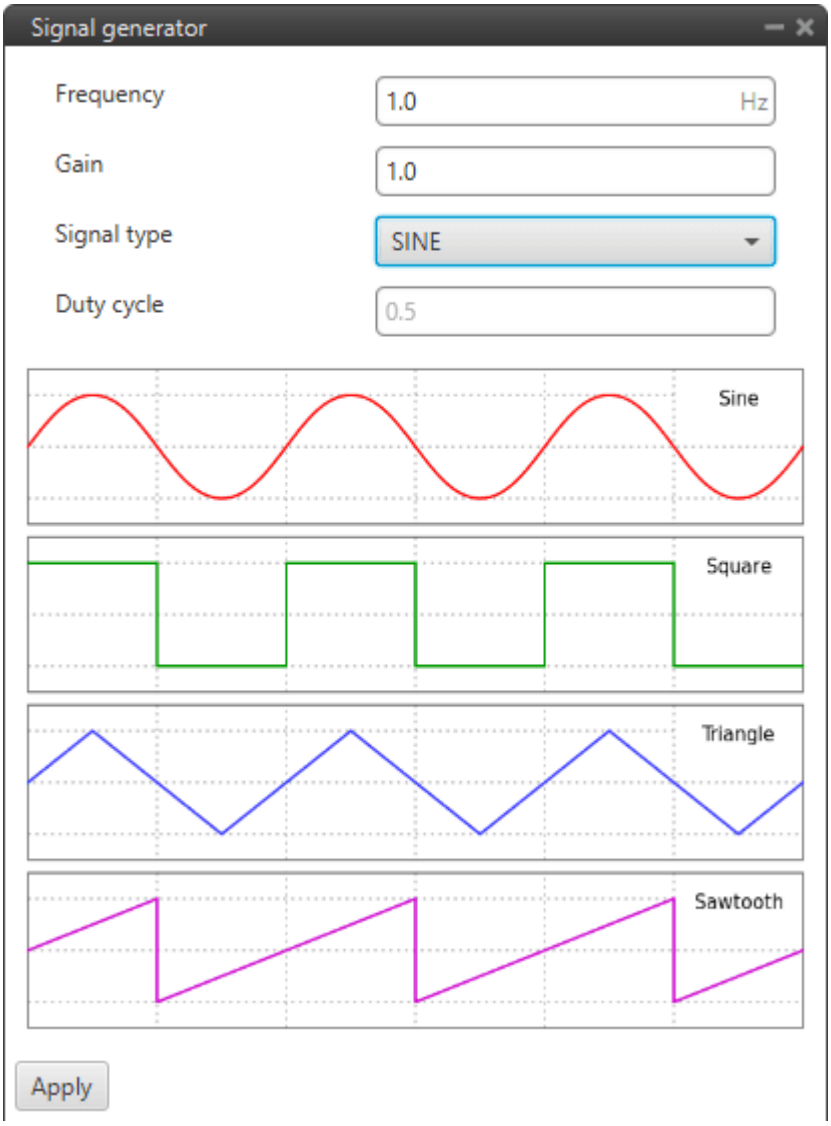


Signal generator block configuration

  - **Frequency**: Frequency of the signal.
  - **Gain**: Gain of the signal
  - **Signal type**: Users must select the type of signal to be generated. The available options are: **Sine**, **Square**, **Triangular** and **Sawtooth**.


    > ⓘ **Note**
    >
    > An example of the square signal type is shown below.

  - **Duty cycle**: Duty cycle of the signal. Can **only** be modified when **Square signal** is selected.

An example is given below:

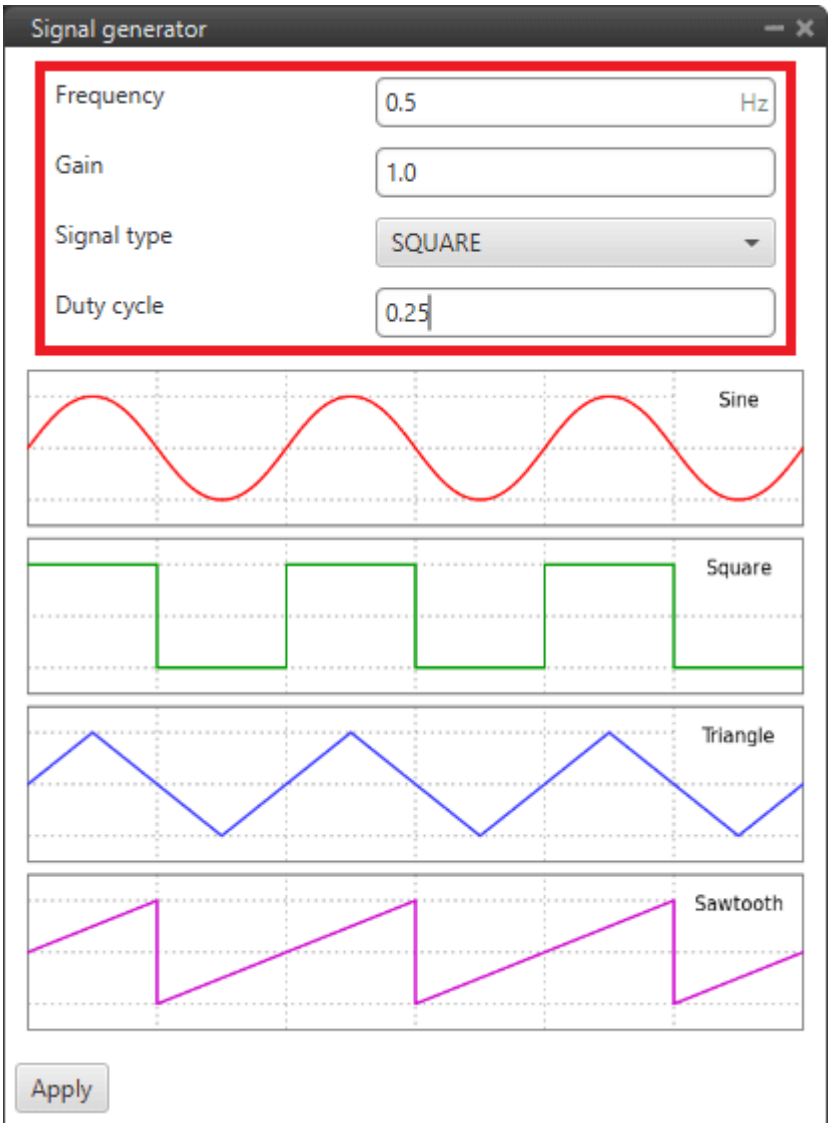


Signal generator block - Configuration example

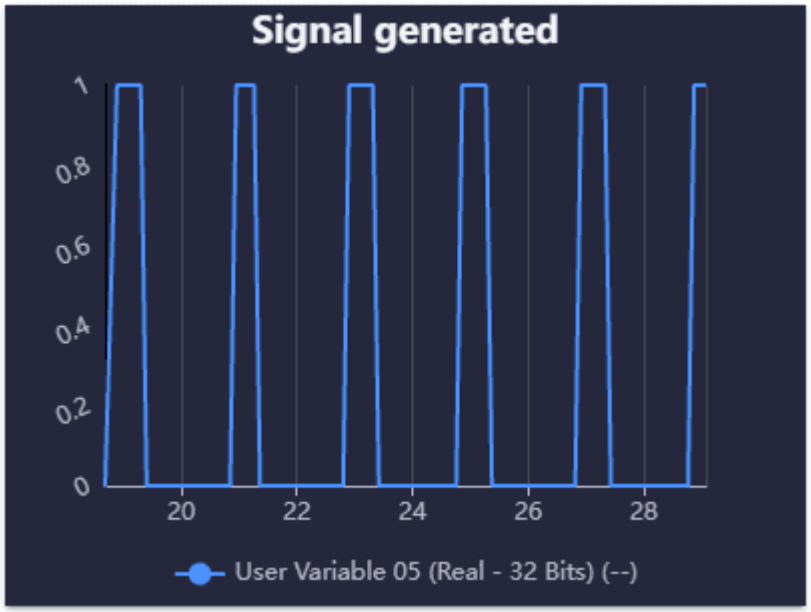

Signal generator block - Example of signal generated

Type Casting blocks

These blocks allow to change from one data type to another. There are four different blocks available:

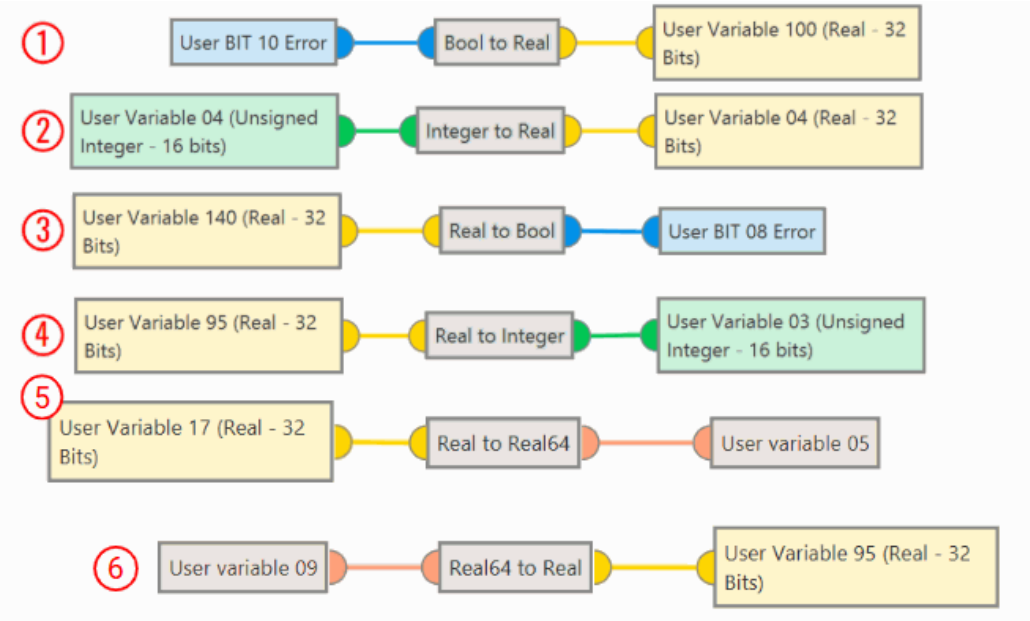


Type Casting blocks

1. **Bool to Real**: It transforms a boolean variable to a real variable.
2. **Integer to Real**: It converts an integer variable to a real variable.
3. **Real to Bool**: It transforms a real variable to a boolean variable.
   Any number (**negative numbers included**), except 0, will be transformed to TRUE; **0** will be **FALSE**.
4. **Real to Integer**: It converts a real variable to an integer variable.
5. **Real to Real 64**: It transforms a standard Real variable (32-bit) into a Real64 variable (64-bit).
6. **Real64 to Real**: It converts a Real64 variable (64-bit) back to a standard Real variable (32-bit).


Devices

This menu displays the possible payloads/devices that can be configured with Veronte Autopilot 1x. Each panel will allow the user to configure different parameters from the available variety of payloads.

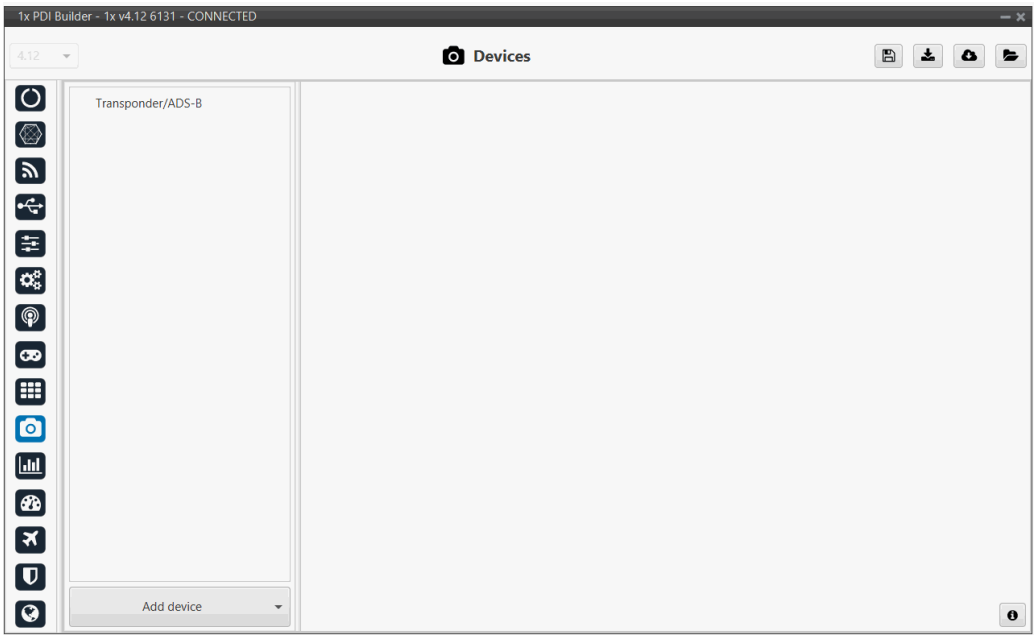

Devices menu

By default, only the Transponder/ADS-B device is added to this menu (as shown in the figure above). However, users can add other devices supported by Veronte Autopilot 1x simply by clicking **Add device**:

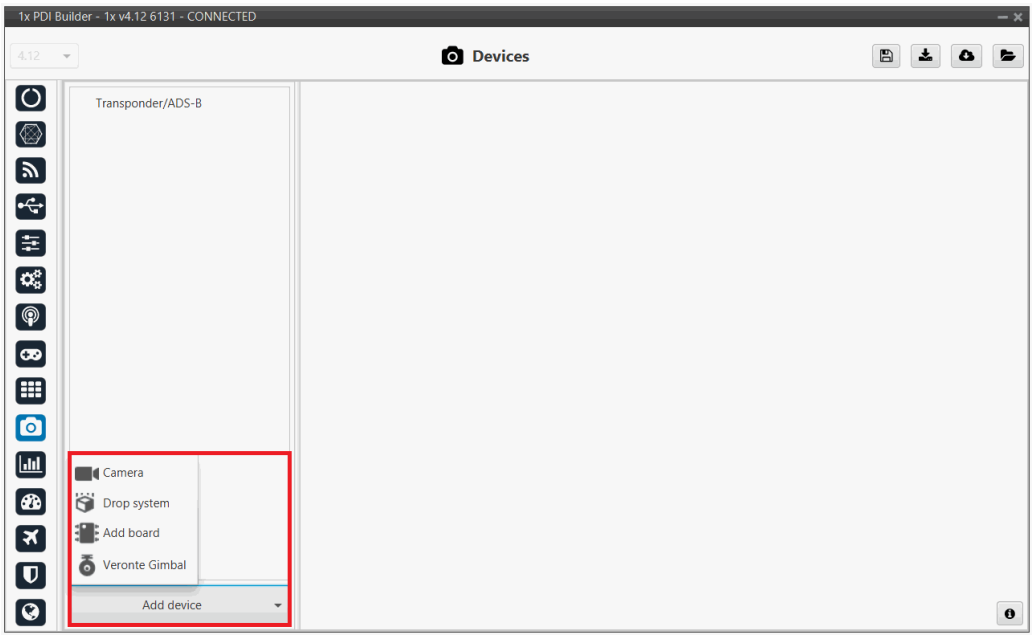


Devices menu - Add device

Transponder/ADS-B

A transponder is a device that generates or parses **ADS-B messages**. This menu allows the user to use/configure a transponder through **Custom Messages**.

The interface includes different transponder models, depending on the one selected, some configurable parameters are enabled or disabled.

> **Important**
>
> To configure the **Squawk Code**, enable/disable **Ident Mode** and select the "dynamic" **ADS-B Out mode**, users must use the **ADS-B widget** of **Veronte Ops**. For more information on this, please refer to ADS-B - Flight instruments widgets of the **Veronte Ops** user manual.

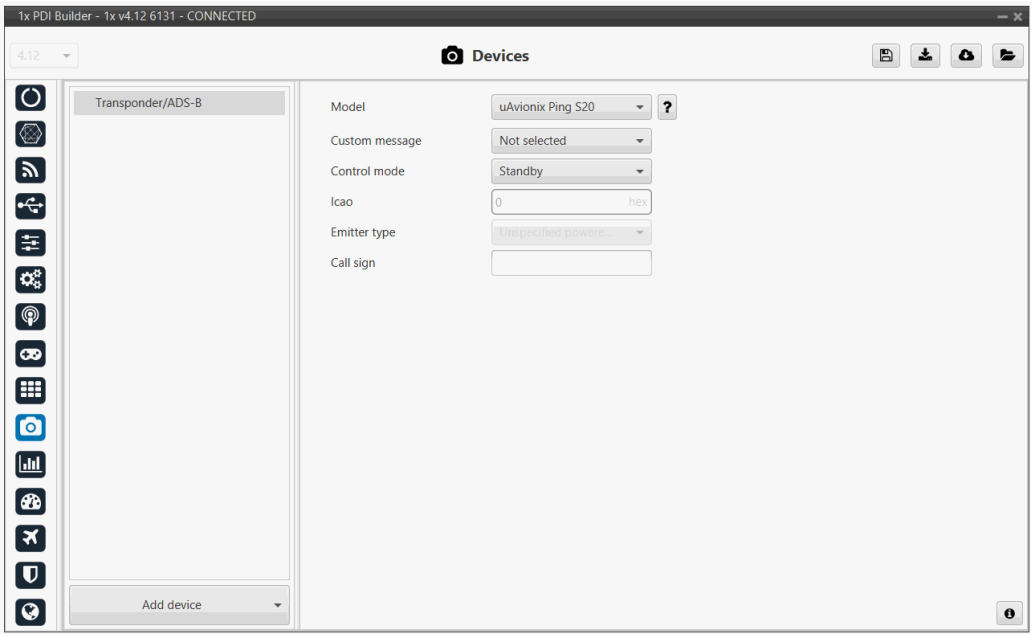


Transponder/ADS-B panel

The parameters that appear in this menu and that must be configured by the user depending on the transponder model are explained below:

- **Model**: The options available in Veronte Autopilot 1x are as follows:
  - Internal Transponder
  - uAvionix Ping 20s
  - uAvionix Ping 1090
  - Sagetech MX Series
  - Sagetech XPS-TR
  - Sagetech XPG-TR
  - Sagetech XPS-TRB
  - Daedalean

- Internal Remote ID
- Aerobits TT Series
- Aerobits TR Series

By clicking on the ? button next to the drop-down menu, an "information" dialog window about the selected model will appear. For example:

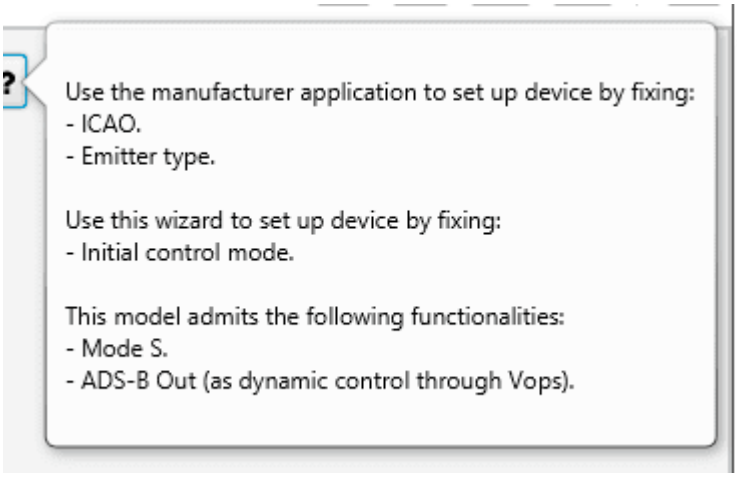

Transponder/ADS-B panel - Information dialog

- **Custom message**: Select the Custom message 0-2 to be used for the information exchange, as it will be automatically filled with the information required by the transponder/ADS-B.
- **Control Mode**: The user must configure the transponder type:
  - **Standby**: Silence mode.
  - **ADS-B In**: To detect external aircraft.
  - **ADS-B Out**: To communicate with external aircraft. There are 2 different types of information that can be shared:
    - **Static information**: This information should not change during operation (flight). Depending on the model, it can be configured from this app (1x PDI Builder) or from the app of each transponder.
    - **Dynamic information**: Information that can change during operation (flight). It is configured from the ADS-B widget of the **Veronte Ops** software.
  - **ADS-B In/Out**: To detect and communicate with external aircraft.
- **Icao**: Unique ICAO 24-bit address **permanent** for the aircraft, which becomes a part of the aircraft's Certificate of Registration.
- **Emitter type**: The user should specify the type/category of the vehicle in which the transponder is located.

- **Call sign**: Communication call sign assigned as unique identifier to the aircraft.

The following table summarizes the options that can be **selected** for each transponder model in the **1x PDI Builder** software:


Model	Custom message	Control Mode					
		Standby	ADS-B In	ADS-B Out		ADS-B In/Out	
				Static	Dynamic (through Veronte Ops)		
Internal Transponder	Not available	Available	Available	Available	Available	Available	A
uAvionix Ping s20	Available	Available	Not available	Available	Available	Not available	a
uAvionix Ping 1090	Available	Available	Available	Available	Available	Available	A
Sagetech MX Series	Available	Available	Available	Available	Available	Available	a
Sagetech XPS-TR	Available	Available	Not available	Available	Available	Not available	a
Sagetech XPG-TR	Available	Available	Not available	Available	Available	Not available	a
Sagetech XPS-TRB	Available	Available	Available	Available	Available	Available	a

Model	Custom message	Control Mode					
		Standby	ADS-B In	ADS-B Out		ADS-B In/Out	
				Static	Dynamic (through Veronte Ops)		
Daedalean	Available	Not available	Not available	Not available	Not available	Not available	a
Internal Remote ID	Not available	Available	Not available	Available	Available	Not available	a
Aerobits TT Series	Available	Not vailable	Not available	Not available	Not available	Not available	a
Aerobits TT Series	Available	Not available	Not available	Not available	Not available	Not available	a

> ⚠ **Caution**
>
> The control mode can be modified from the ADS-B widget of the **Veronte Ops** software.

Camera

Adding a camera will create a default Camera configuration menu.

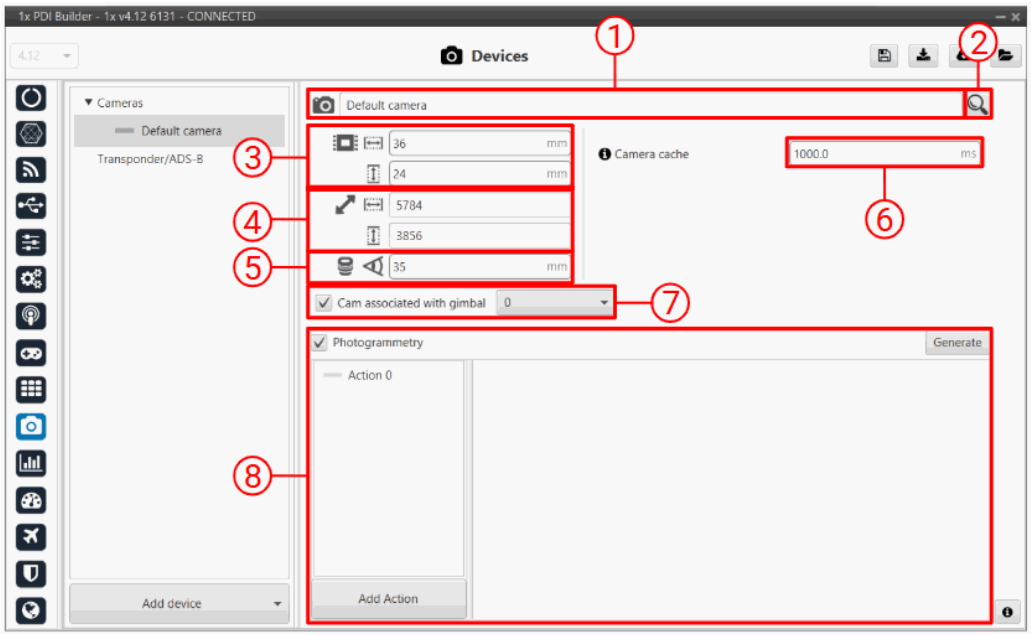

Cameras panel

1. **Name**: Give a name to the customized camera.
2. **Search**: Users can also choose a camera from the predefined list of cameras, which will automatically establish the values of the **Sensor**, **Resolution** and **Lens** parameters.
3. **Sensor**: Defines the camera sensor width and height in mm.
4. **Resolution**: Defines the camera resolution width and height.
5. **Lens**: Defines the focal length from the camera in mm.
6. **Camera cache**: Defines the **cache time used to play the selected camera on the gimbal widget**.
   - A **higher** cache might increase the **video delay**.
   - A **lower cache** might cause **video artifacts or disconnections**.


   > **Tip**
   >
   > 333 miliseconds should be enough for a 1080p video.

7. **Cam associated with gimbal**: If the camera is **from a Gimbal device**, it is important to configure this field and select **the Gimbal block number** that is related to this camera.
8. **Photogrammetry**: This allows the creation of Photogrammetry actions. The actions performed in a Photogrammetry mission can be defined here, following the same possibilities as in Actions - Automations menu.
   - **Add Action**: Will add a new action.

> ⚠ **Warning**
>
> A **maximum of 4 Actions** can be defined (Actions 0-3).


- **Generate**: Clicking on 'Generate' will create the automation 'Photogrammetry' with a Button as event and with the actions defined here.


An example is given below:

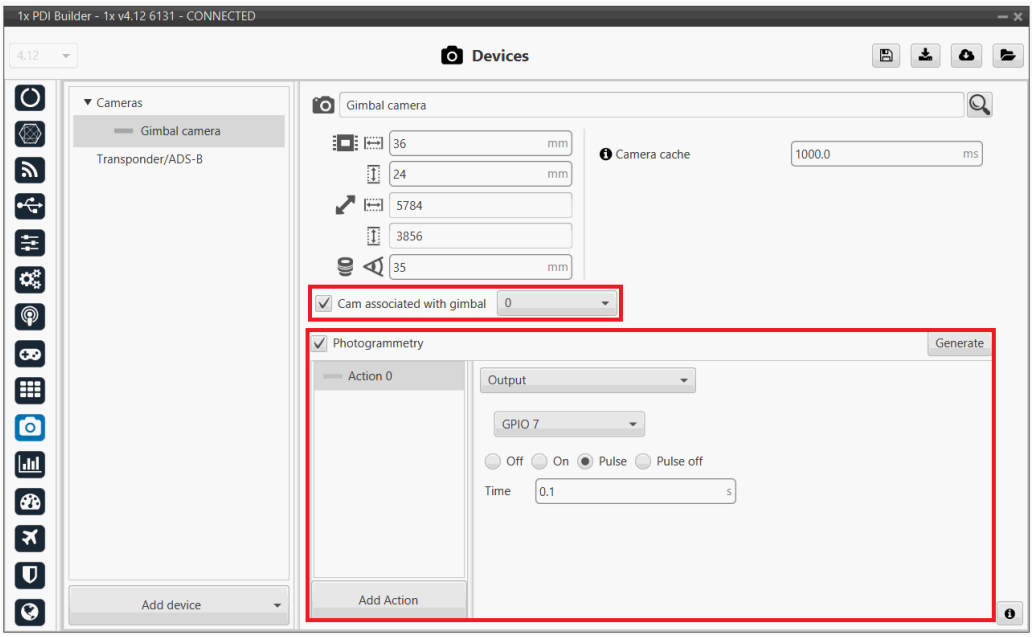

Cameras panel - Example

The automation created for Photogrammetry is shown below:

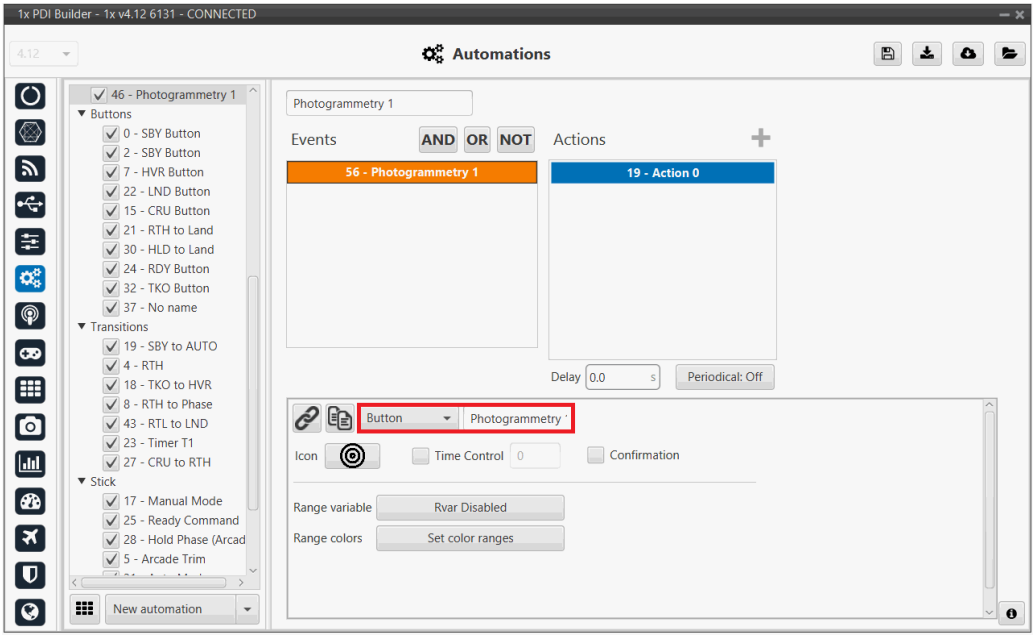


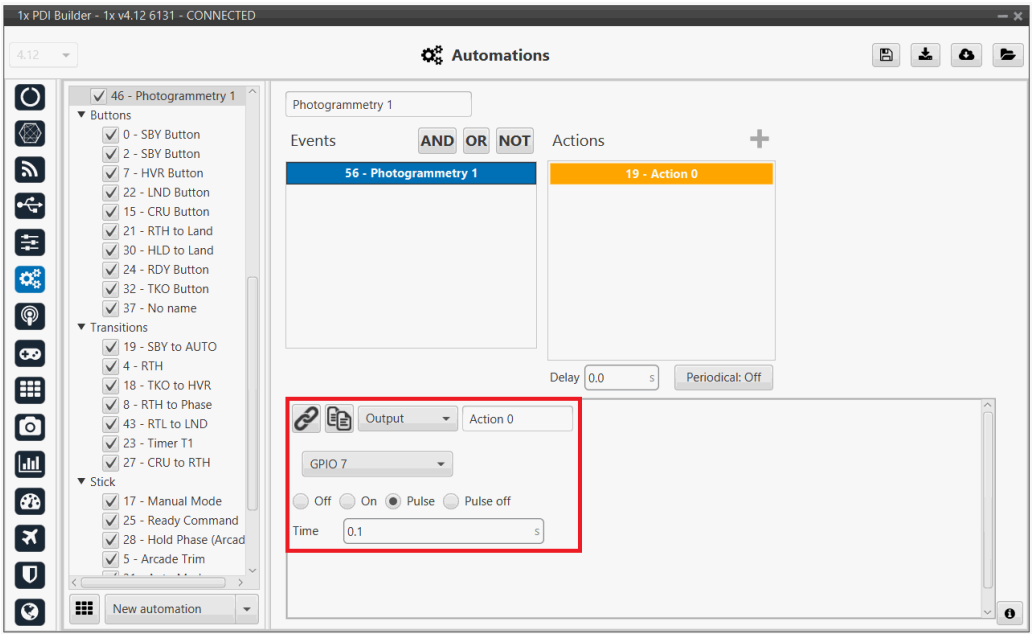

Cameras panel - Automation example

Drop system

Adding a **Drop System** allows for the configuration of payload release mechanisms, enabling the definition of automated or manual action sequences.

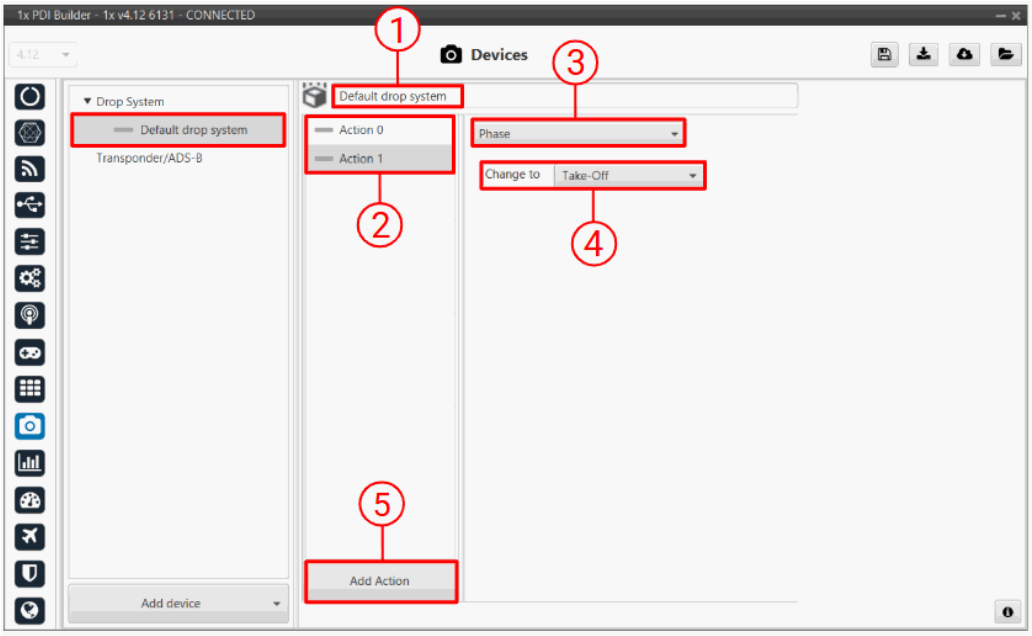

Drop System panel


1. **Name** to the customized drop system.
2. Displays the **list of configured actions** for the system. Each action represents a specific command or state change for the release mechanism.

3. Defines the type of **control or parameter** to be modified for the selected action. The following options can be selected: Phase, Output, Navigation, Mode, Periodical, Track, Variable, Features, UserLog, Go To.
4. Sets the desired **stat**e for the automation or hardware component depending on the selected parameter.
5. This button **adds a new action** to the Drop System list.

The actions performed by the drop system can be defined here, following the same possibilities as in the Actions - Automations section.

Board

This board menu allows the user to configure **communicate via CAN**, in **1x PDI Builder**, with another device such as CEX, MEX, MC01, etc., in **only 1 step**, so in only 1 interface window. Instead of doing it in several steps, as is explained in CEX/MEX - Integration examples section or MC01 - Integration examples section.

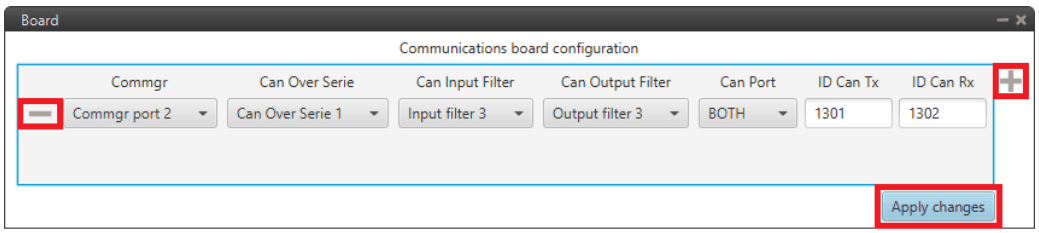

Board panel


- Click on the ➕ icon to add a new field. The following parameters must be defined:
  - **Commgr**: Select the desired COM Manager port: Commgr port 0-5.
  - **Can Over Serie**: Select the desired **Serial to CAN** / **CAN to serial**: CAN Over Serie 0-1 (that is Serial to CAN 0-1 and CAN to serial 0-1).
  - **Can Input Filter**: Select the desired input filter to use: Input filter 0-3.
  - **Can Output Filter**: Select the output filter the user wishes to use: Output filter 0-3.
  - **Can Port**: CAN A, CAN B, CANFD A or BOTH can be selected.
  - **ID Can Tx**: Enter the ID of the CAN message to be sent.
  - **ID Can Rx**: Enter the ID of the CAN message to be received.

> **⚠ Warning**
>
> Be careful not to select a producer/consumer that is being used for another purpose, as the configuration defined here has "priority" and will be changed to this.


For more information on these parameters, see Input/Output section of this manual.

- Clicking the — icon will remove the field and display a confirmation warning message.
- By clicking on '**Apply changes**', all these CAN communication settings are applied to the Autopilot 1x configuration.


Below is an example of before/after when changes are applied:

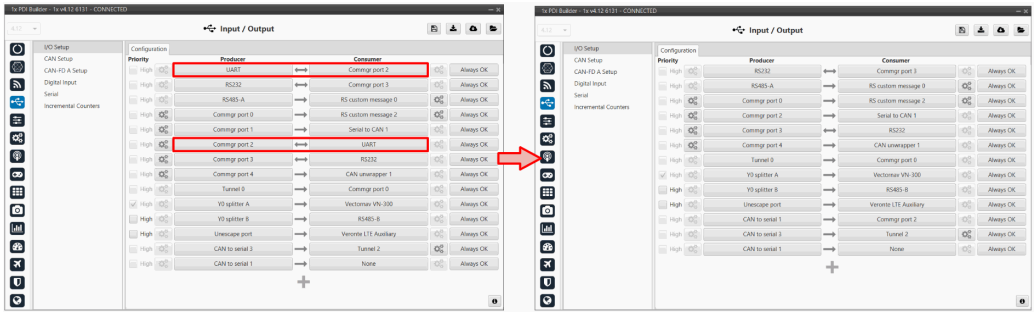

Board panel - I/O Setup configuration

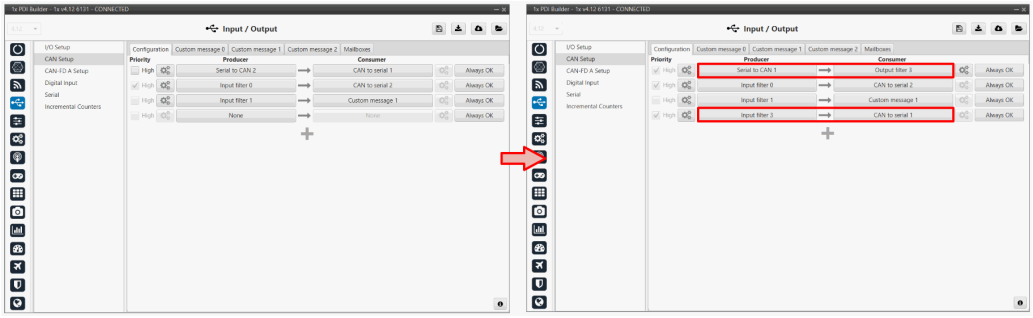


Board panel - CAN Setup configuration

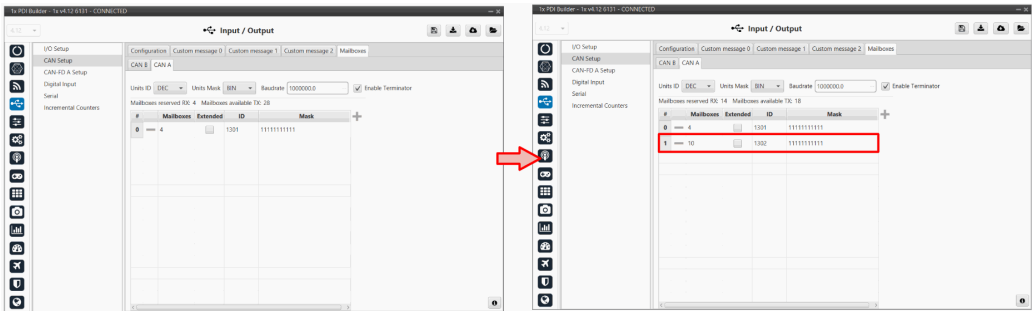

Board panel - Mailboxes configuration

Veronte Gimbal


The Veronte Gimbal menu allows for the integration and communication setup of gimbal systems within 1x PDI Builder.

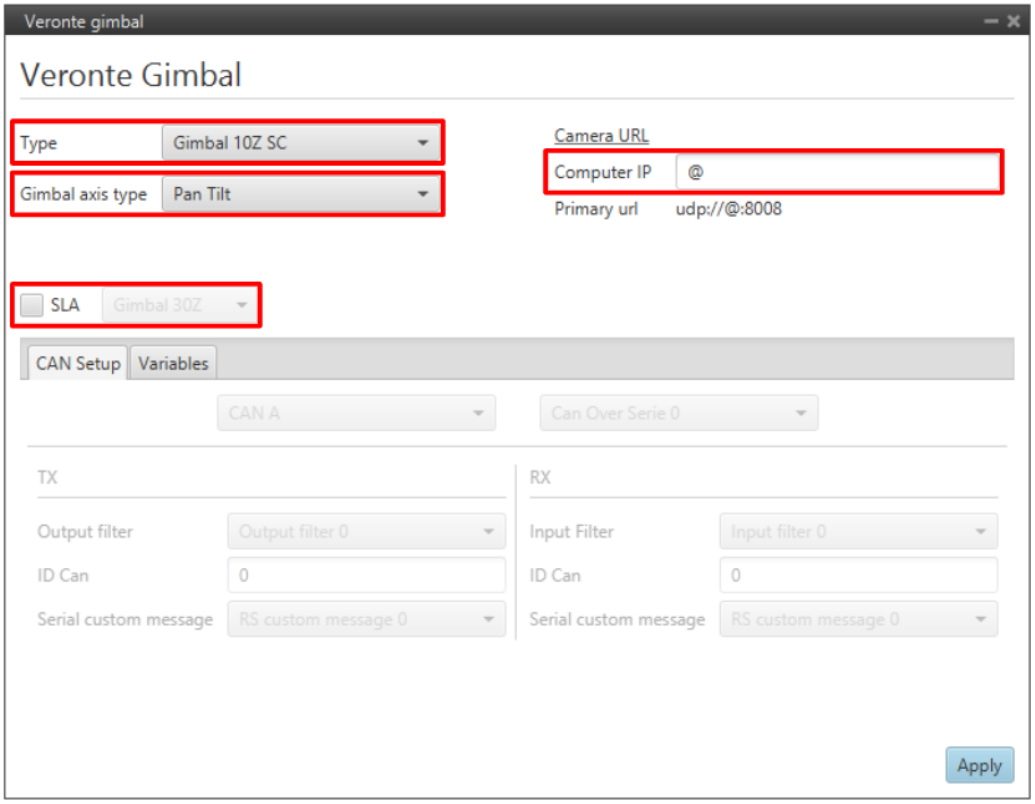

Veronte Gimbal panel

- **Type**: Select the Gimbal model from the list of supported devices.
- **Gimbal axis type**: Defines the mechanical configuration of the gimbal axes: Pan Tilt or Roll Tilt.
- **Computer IP**: The IP address of the ground station computer receiving the video.


- **SLA**: Enables compatibility with Sightline Applications protocols for advanced tracking and image processing.
  - **CAN Setup**: Configures the CAN bus communication:

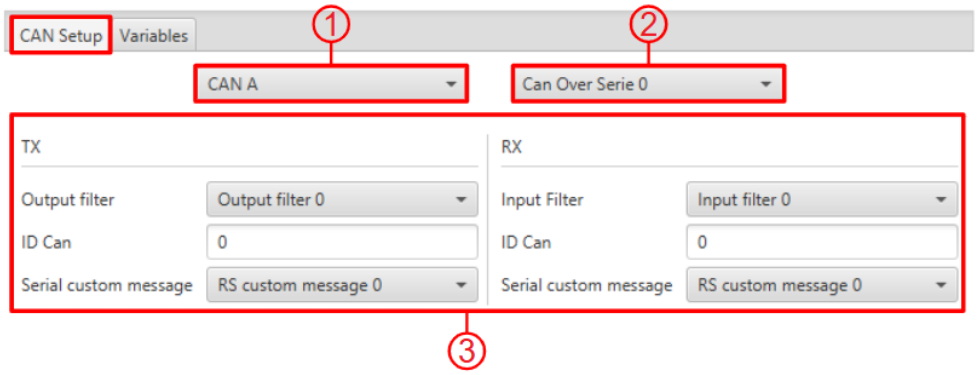

Veronte Gimbal - CAN Setup


1. Selection of the **CAN** bus (CAN A, CAN B, BOTH, CANFD A).
2. **CAN Over Serie 0/1** defines the physical serial port (Serial 0 or Serial 1) used to tunnel CAN bus communication when the gimbal is connected via a serial interface.
3. **TX/RX**: Sets the Output/Input filters, CAN IDs, and associated Serial custom messages for data transmission and reception.

  - **Variables**: This tab allows for the mapping of system variables to gimbal functions:

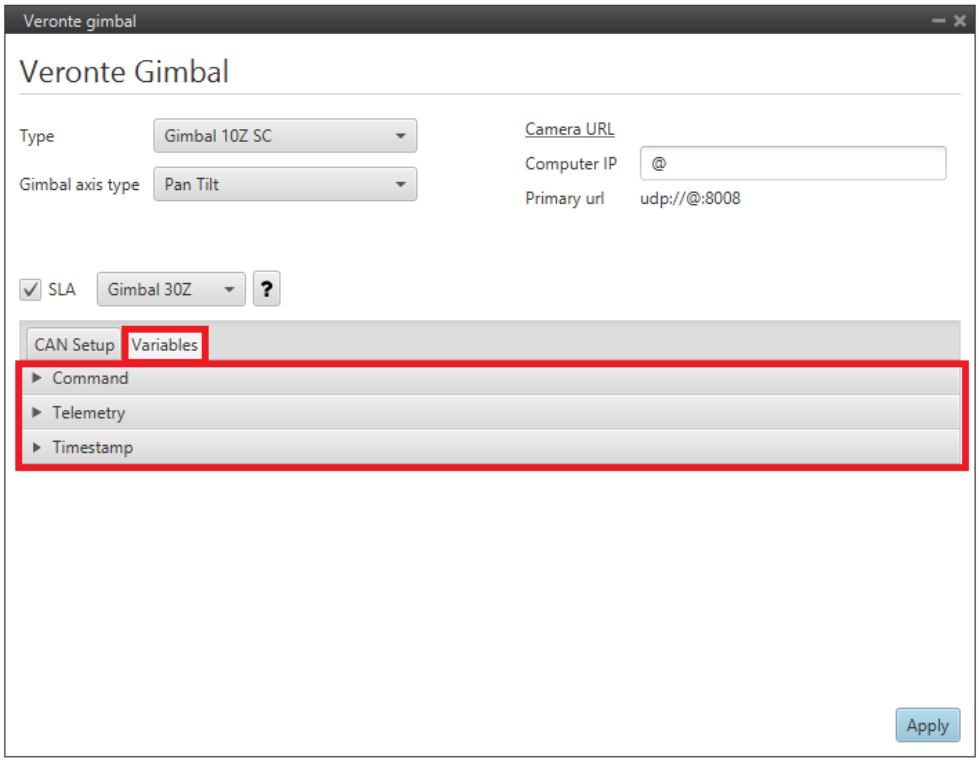


Veronte Gimbal - Variables

- **Command**: Mapping of variables used to send control commands to the gimbal.

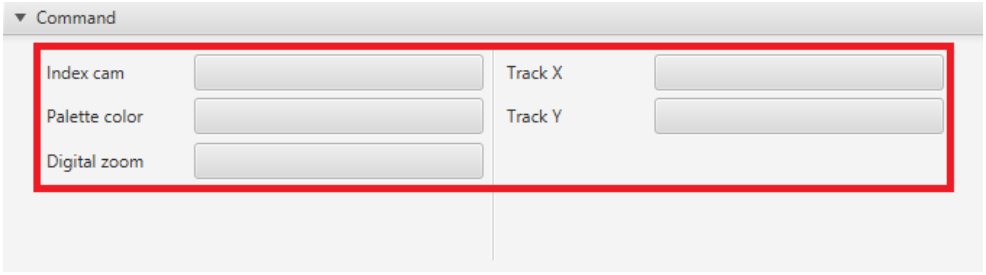


Variables - Command

  - **Index cam**: Assigns a variable to switch between different camera sensors on the gimbal.
  - **Palette color**: Assigns a variable to change the thermal palette or color display mode.
  - **Digital zoom**: Maps a variable to control the digital magnification level.
  - **Track X / Track Y**: Assigns variables to define the screen coordinates or offsets for object tracking targets.
- **Telemetry**: Mapping of variables to receive real-time feedback and status from the gimbal.

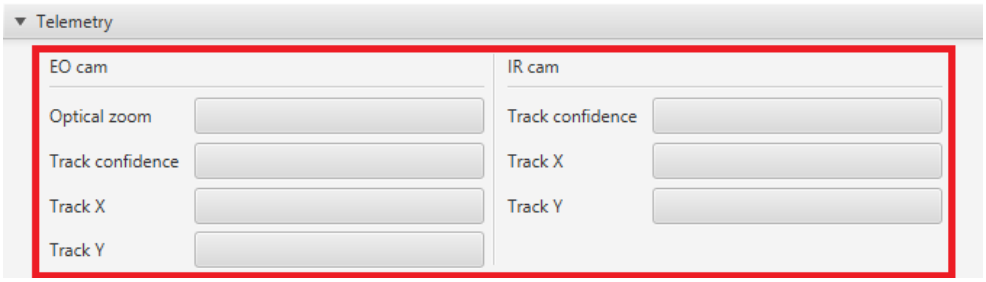

Variables - Telemetry


  - **Optical zoom**: Feedback of the current optical magnification level.
  - **Track confidence**: Reliability score of the current tracking task.
  - **Track X / Track Y**: Current tracking coordinates from the EO/IR sensor.
- **Timestamp**: Configuration of time-synchronization variables for data logging. Users can assign specific variables to each byte to define the timestamp structure used in the communication protocol.

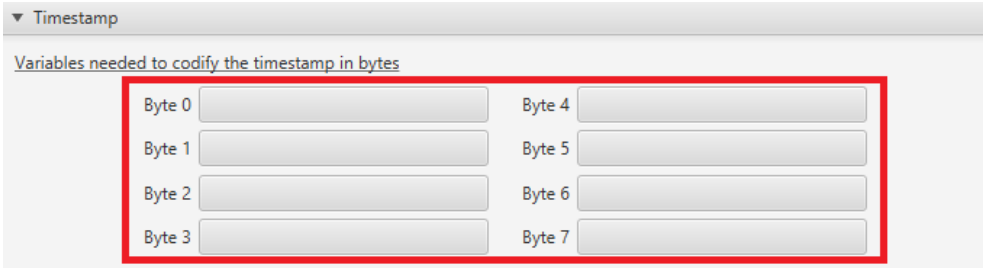

Variables - Timestamp

Telemetry

In this menu there are 2 options available: **Telemetry** and **Sniffer**.

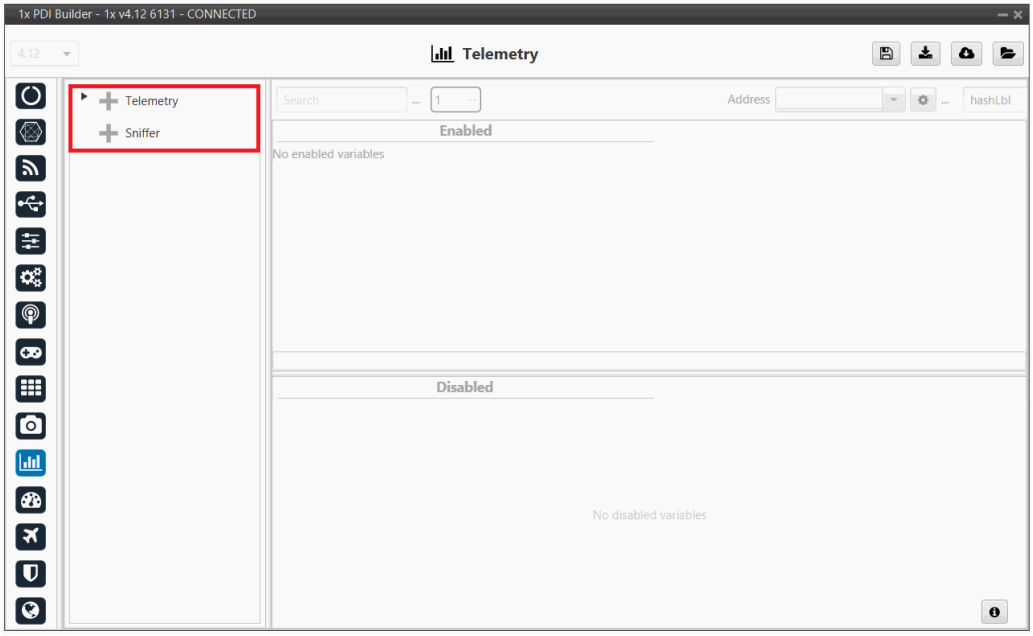

Telemetry menu

Telemetry

Telemetry controls permit to configure data to be stored or transmitted on the system. There are 4 main items that can be configured within this panel:

Type	Description
Data vectors	Configures the variables to send throughout

Type	Description
	the data link channel.
Onboard Log	Sets the variables to be stored on system Log (on 1x SD Card).
User Log	User Log for custom applications.
Fast Log	Saves data at the maximum frequency available on the system. Recording time depends on the selected variables.


Configuration display permits to enable the desired variables for each telemetry file and to set the maximum and minimum values together with precision for each one.

Data vectors

This panel contains the variables that **Veronte Autopilots 1x** send to the indicated address.

The system supports **10 telemetry vector**s and up to **2400 fields**. Additionally, **1000 variables** are available for each type (Bvar, Rvar, and Uint). It is also possible to enable or disable telemetry vectors dynamically.

By default, **1x PDI Builder** generates a Data vector to send telemetry from the configured Autopilot 1x to the **Address 2** (App) (Veronte applications). The variables indicated in **red** in a Data vector are **required for correct operation**.

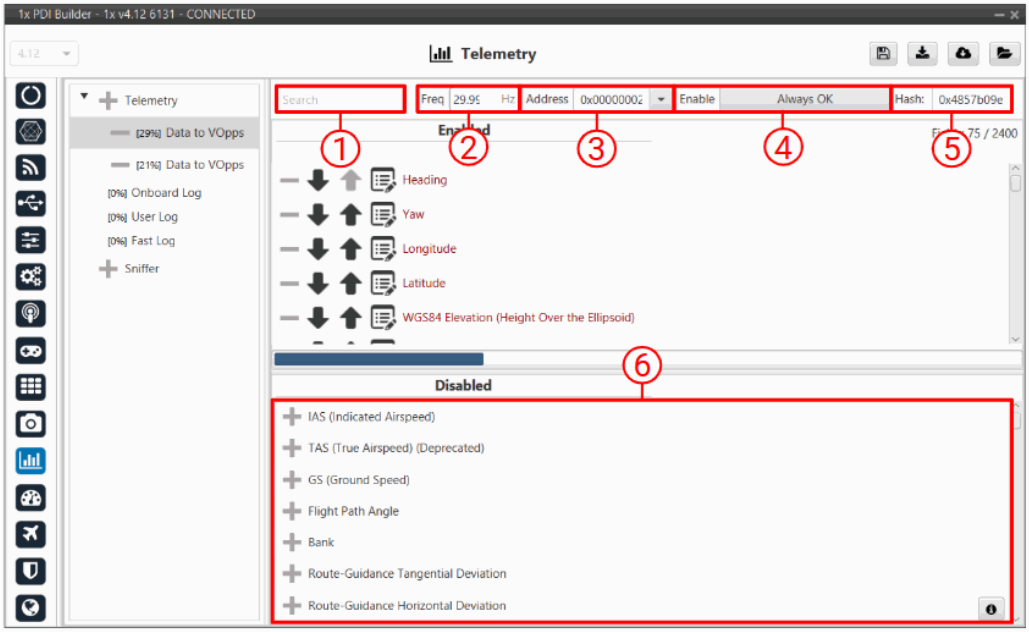

Data vectors panel

In order to configure the variables sent, users have to:

1. **Search**: Search the desired variables into the **Disabled** panel.
2. **Freq**: Specify the sending rate. 10 Hz usually works well, this frequency depends on the bandwidth of the radio.
3. **Address**: Enter the corresponding address, the following options are the most common: App 2 (Veronte applications address), Broadcast (all units on the network) and Veronte device address (to a specific unit). For more information on the available addresses, see List of Addresses - Lists of interest section of the **1x Software Manual**.

> **Dynamic Addresses**
> These **dynamic addresses of Veronte applications** can be used in the same way as Veronte applications address (App 2), and can be useful in configurations requiring more than one telemetry routing. Users can see an application example in the Dynamic addresses for telemetry vectors - Integration examples section of this manual.


4. **Enable**: To enable/disable telemetry submission.
5. **Hash**: It is a hexadecimal representation of the CRC of the fieldset.

> ⓘ **Note**
> **Hash** parameter is not configurable, it is automatically calculated by the system based on the telemetry vector configured by the user.

6. **Disabled**: When the desired variables are found, add them to the **Enabled** panel by dragging and dropping them into it or simply by clicking on the ➕ button.

1x PDI Builder allows the creation of more Data links by simply pressing in the ➕ icon next to 'Telemetry'.

As an example, another possible data link could be set between the **air** and **ground** autopilots directly (without **Veronte applications**) and used to send the position of the UAV to the ground autopilot for the configuration of a tracker. This data link example is presented in the following figure.

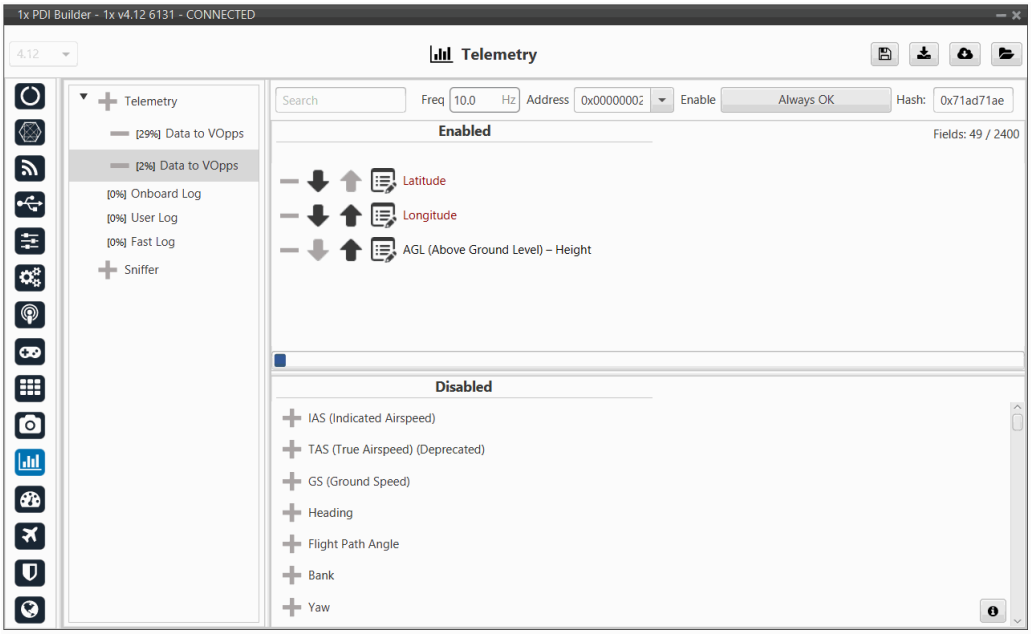

Data vectors panel - Ground/Air units communication

If we consider this configuration as that of the air unit, this **Autopilot 1x** will send the Latitude, Longitude and AGL to the autopilot with address 1x v4.8 4087. The unit that receives the telemetry has to configure its sniffer (more information about this in the following section) in order to store the data.

> ⚠ **Warning**
>
> If the number of variables enabled for telemetry communication are higher than the maximum supported by the system, the latest variables will not be sent, so they will display a zero value if shown in the workspace.


> ⓘ **Note**
>
> It is possible to create more than one data link associated to the same receiver address, and they can also have different sending rates. It could be useful in case one of the data links is almost full.

Onboard Log

The Onboard Log determines the variables that are being **stored** on the **autopilot SD Card**. In this case, there are not sending/receiving units, so the only thing to configure here is the list of variables that will be saved on the

autopilot internal memory for a further download and processing, as well as the writing frequency.

The log starts writing once the autopilot is turned on and **does not stop logging until the autopilot is turned off**.

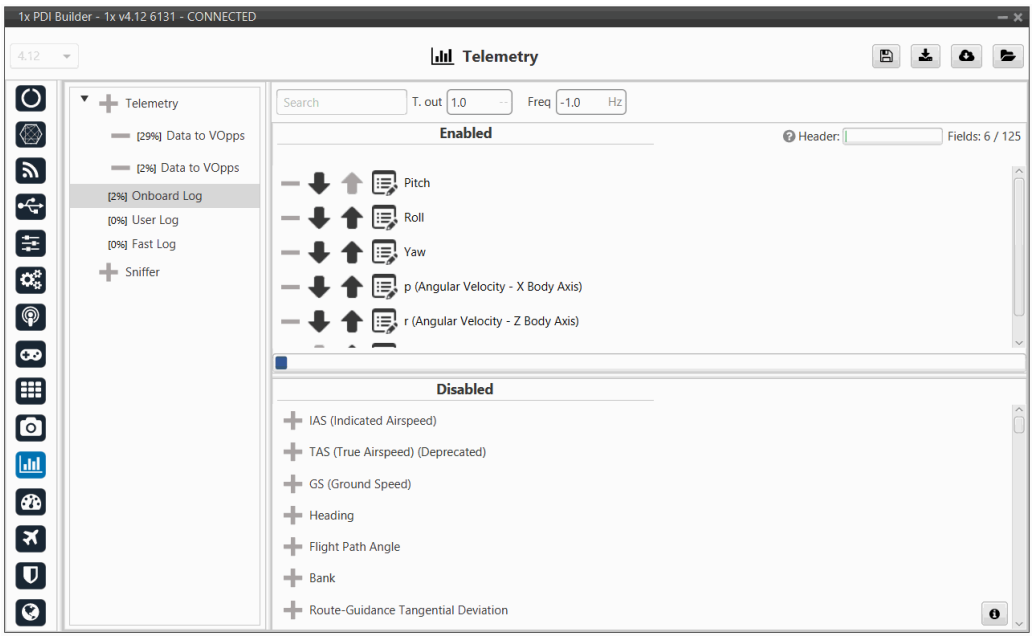


Onboard Log panel

> ⚠ **Warning**
>
> - The frequency defined here is not determinisitic since the onboard log saving task is performed in the Core 1-Low of **Autopilot 1x**, this means that this **defined frequency is not assured**. The **maximum guaranteed saving frequency** is about **60 Hz**.
>
> For detailed information on the distribution of tasks on each of the **Autopilot 1x** processors, please refer to the Core architecture section of the **1x Software Manual**.
>
> - This is a circular log, which means that if the SD card memory is full, **Veronte Autopilot 1x** will delete the oldest logs automatically so it can continue logging. **Autopilot 1x** has **2.5 GB** of memory reserved for these logs. Hence the registered time can be calculated, for example:
> - If 10 variables are stored with 4 bytes each one, then each log will occupy 40 bytes
> - With a frequency of 10 Hz, the writing speed will be 400 bytes/s
> - $\frac{2.5\ \text{GB}}{400\ \text{bytes/s}} = 6710886\ \text{s} = 1864\ \text{h} = 77.7\ \text{days}$
>
> - **Logs limitation**: each log entry has a limitation of **512 words**, with the **header** being the first **11 words**.
>
> > ⓘ **Note**
> >
> > 1 word = 2 bytes

User Log

The user log contains the variables that are stored according to an automation created by the user.

Considering an example, in a photogrammetry mission it is important to record the aircraft location when the photo is taken, so a user log could be used to record a certain set of variables (position, speed, direction, ...) each time a photo is taken.

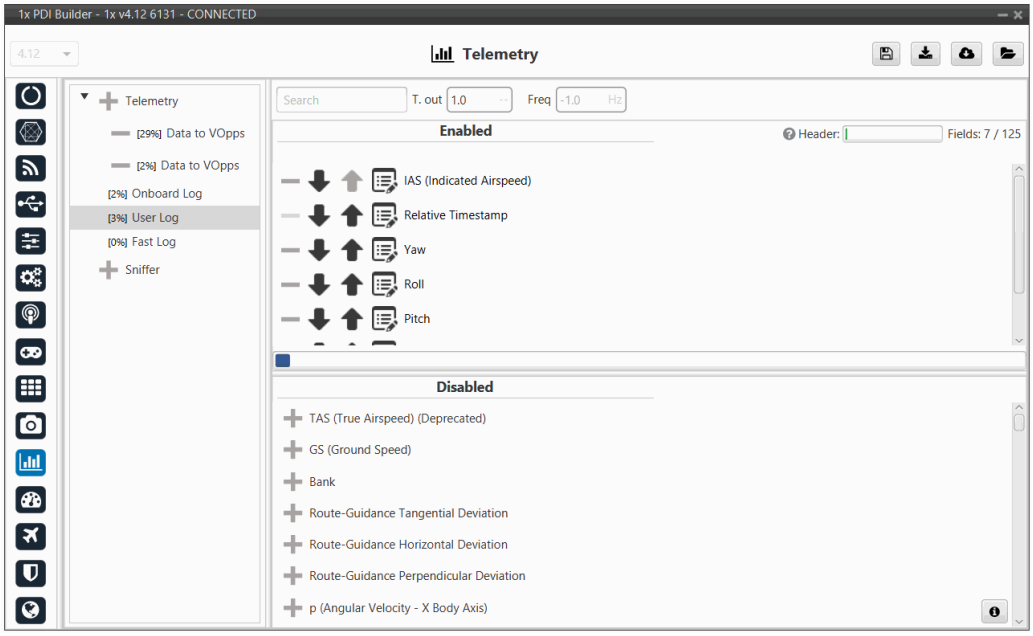


User Log panel

In order to create a **User Log action** where an entry is added to the log when a certain set of events are accomplished check the User Log action - Automations section of this manual.

Fast Log

The fast log store the specified variables at the maximum rate available on the system. This tool could be used to save information in an operation that happens extremely fast, such as missile launching. The time that this logging process lasts depends on the number of variables being saved.

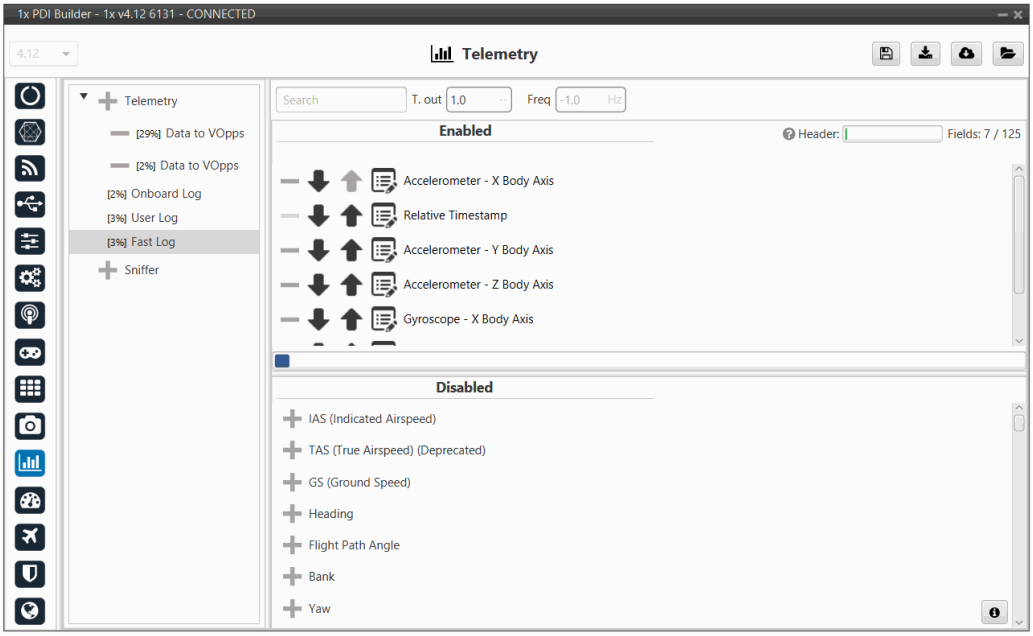


Fast Log panel

The Fast Log can be activated when the user wants, but must be done in **Veronte Ops**. For more information about Fast Log, check the Veronte Ops manual.


> **Important**
>
> The downloading of the information of an operation depends on how it has been stored, i.e depends on the type of log (data link, onboard, user or fast log).
>
> - For more information related to **Onboard Log**, **User Log** and **Fast log** downloading, visit Veronte FDR user manual.
> - Visit Veronte Link user manual for information about **Data vectors** downloading.

Besides, Autopilot 1x includes some compression tools that may be useful for increasing the amount of information transmitted in a certain bandwith or stored in a log. Each variable can be compressed separately in each log.

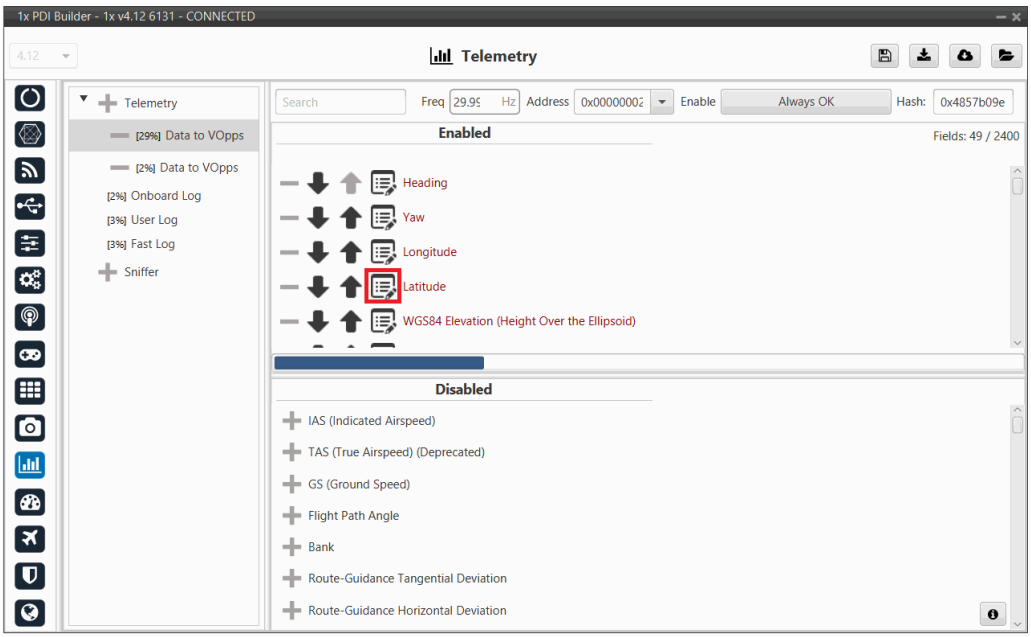

Compression options

There are different types of compression available:

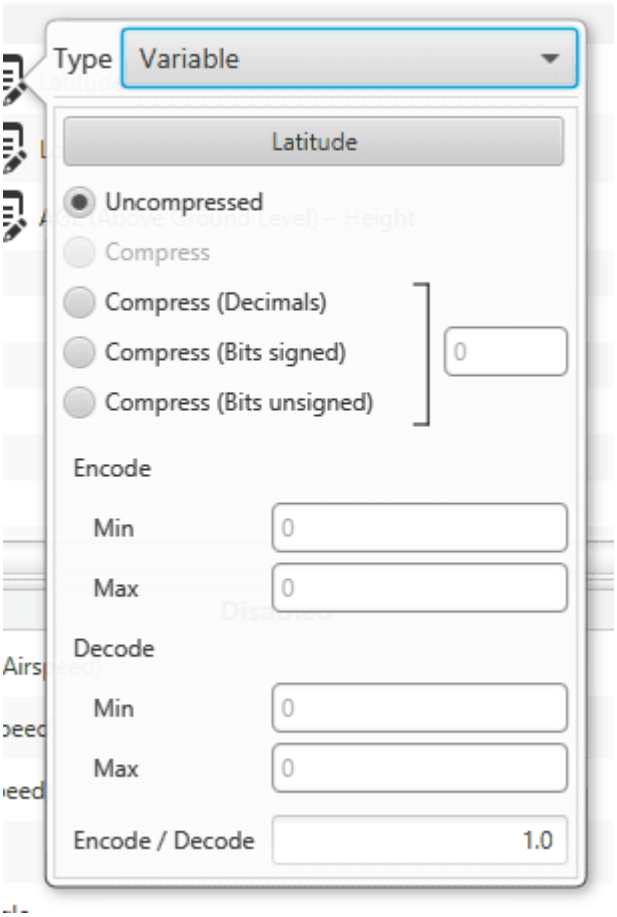


Compression options panel

- **Uncompressed**: The variable is taken in its full length, with no value modification.
- **Compress (Bits signed)**: Specify the number of bits to be compressed to (**negative values accepted**). The number of bits used can be limited if the required precision allows it. With n bits, the range of representable values follows the formula: $[-2^{(n-1)}, 2^{(n-1)} - 1]$. If the value falls outside this range, an overflow occurs. It is necessary that the user configures **Encode/Decode** options.
- **Compress (Bits unsigned)**: Specify the number of bits to be compressed to (**no negative values accepted**). the number of bits used can be limited if the required precision allows it. With n bits, the range of representable values follows the formula: $[0, 2^n - 1]$. If the value falls outside this range, an overflow occurs.
  It is necessary that the user configures **Encode/Decode** options.

- **Compress (Decimals)**: The variable is compressed according to the number of decimals specified and the range specified (max and min values).

  The resultant compression (number of bits) follows the relation $(max - min) \cdot 10^{decimals}$, which yields the encoding of the maximum value of the range (and the number of bits necessary for that). In addition to reducing the number of bits, quantization is performed for the decimals within a given range, achieving maximum compression and efficiency at the expense of greater loss of precision. The range needs to be specified on the **Encode - Min/Max** field.
- **Encode/Decode**: These values are used to apply a scaling factor after the transformation from binary to decimal value, or before the transformation from decimal to binary value.


In the example shown below, the Heading variable with 3 decimals will be compressed, so instead of using 32 bits, it will only require 19 bits.

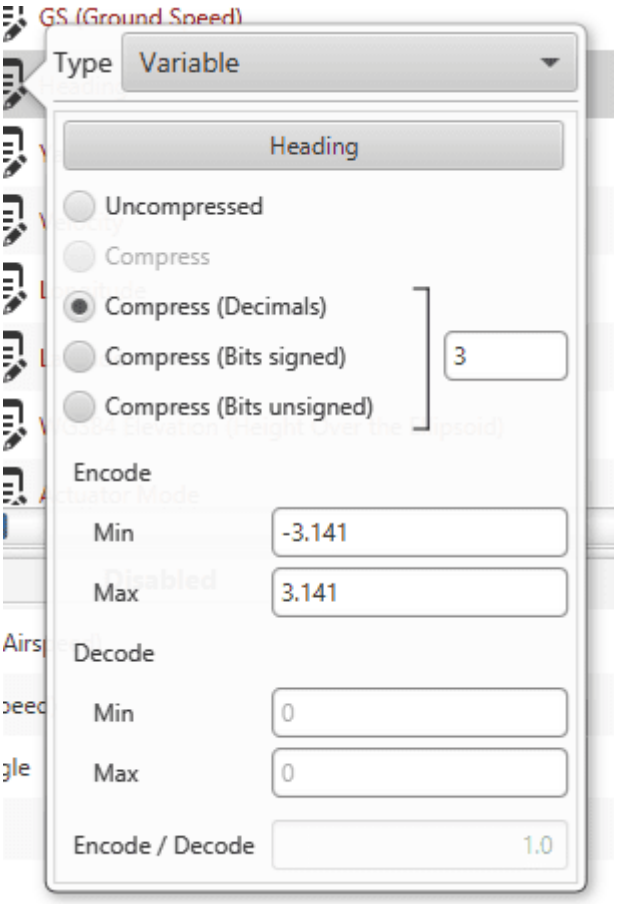

Compression example

Sniffer

This panel is used to establish telemetry communication between two Autopilots 1x. The autopilot being configured will "listen" the variables indicated in the window **Enabled**, from another autopilot whose address is indicated in **Address**. The sniffer is commonly used to make the aircraft listen the position of the ground station and the link quality.

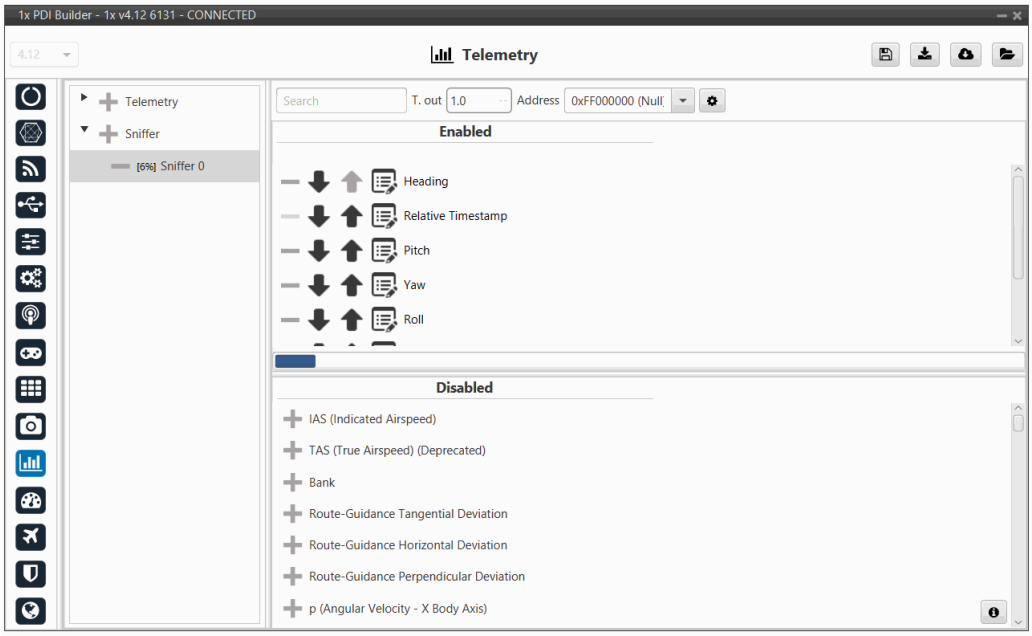

Sniffer panel


The source UAV, in this case, is the ground station (1x v4.8 4087), which communicates to the 1x air unit (address: 1x v4.0 1408) its position and some variables related to link quality (RX and TX Packet Error Rates).

The sniffer is configured so that the air autopilot has information about the state of the communications, and it could perform an action when the link is lost. The aerial platform also receives information about the ground station position, so it can perform a mission in relation to that point.

The Autopilot 1x unit that sends the data has to be configured as well (1x ground unit), in the Telemetry panel. That unit will send telemetry through a **Data Link**.

By clicking on the ⚙ icon, the user can access the **Mapping Variables** configuration. Here, the variables send by the ground unit are indicated in the

columm **From**, and they are stored in the variables indicated in **To** for its later use by the 1x air unit.

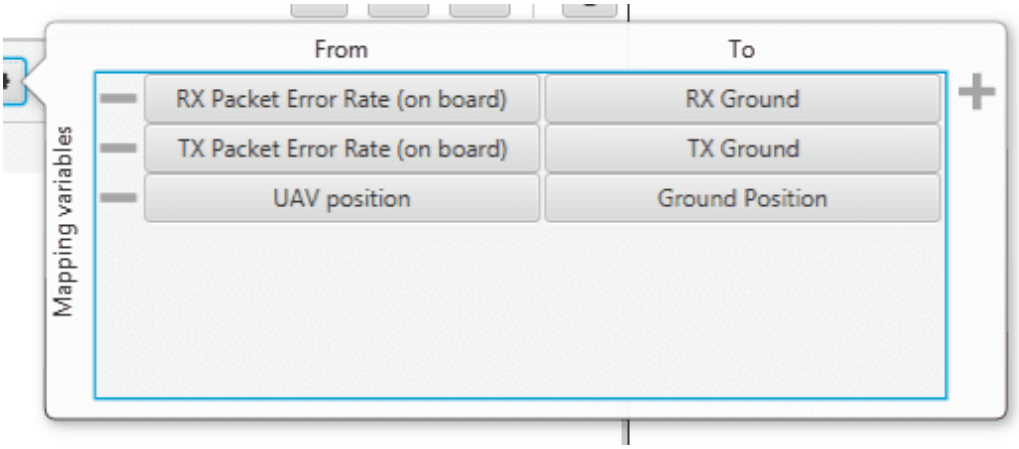

Mapping variables option

An example of the configuration required for communication between 1x ground and air units can be found in Data transmission between Veronte Autopilots 1x - Integration examples section of this manual.


UI

In this menu, the user can manage operation elements and system variables.

Operation elements

In this panel, users have to declare (rename) operation elements they wish to use in the configuration/operation. Once declared, the value of operation elements must be set in the Operation Panel of **Veronte Ops** software. Finally, users will now be able to reference them throughout the configuration, as in Automations menu.

> ⚠ **Warning**
>
> Not setting the value of these operation elements in **Veronte Ops** will result in **PDI errors** if used within the autopilot configuration, e.g., if the operation element is defined as a parameter of a **Block Program**.

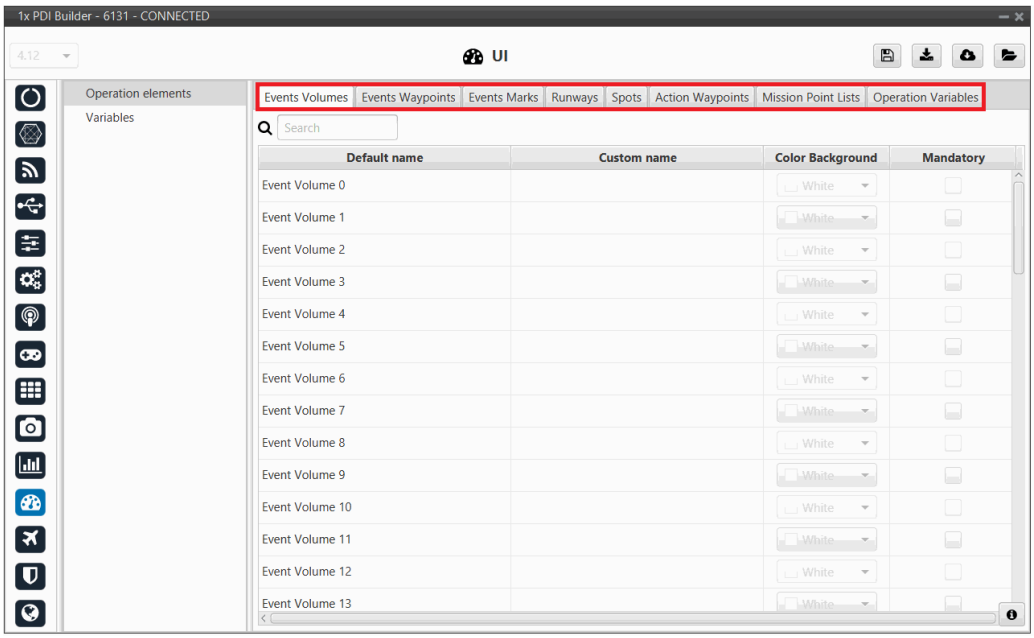


Operation elements panel

Operation elements are divided into 8 different types:

- **Events Volumes**: Defines three-dimensional areas in space. When the autopilot enters or exits these volumes, it can trigger a predefined event (e.g., activating a sensor, starting a procedure).
- **Events Waypoints**: Specific geographical points. When the vehicle reaches them, they trigger an action or an event. Unlike standard navigation Waypoints, these are focused on triggering a specific action.
- **Marks**: A mark is a reference that is placed in a patch and when the uav reaches it, an action takes place.
- **Runways**: These are the runways used during the take-off and landing phases.
- **Spots**: A spot is a kind of runway with an initial point, direction and azimuth.
- **Action Waypoints**: Navigation points that are not just passing points, but are intrinsically linked to the execution of a complex action by the system (e.g., initiating a search pattern, releasing a payload).
- **Mission Point Lists**: Geographical points that the operator can define and use as needed, often as a dynamic reference or a point to define new variables in real-time.
- **Operation Variables**: An operation guidance point is a value of the operation, such as the cruise speed.

In addition to assigning a specific name, the user can also select the unit of this variable as well as its maximum and minimum values (in SI units).

An example is shown below:

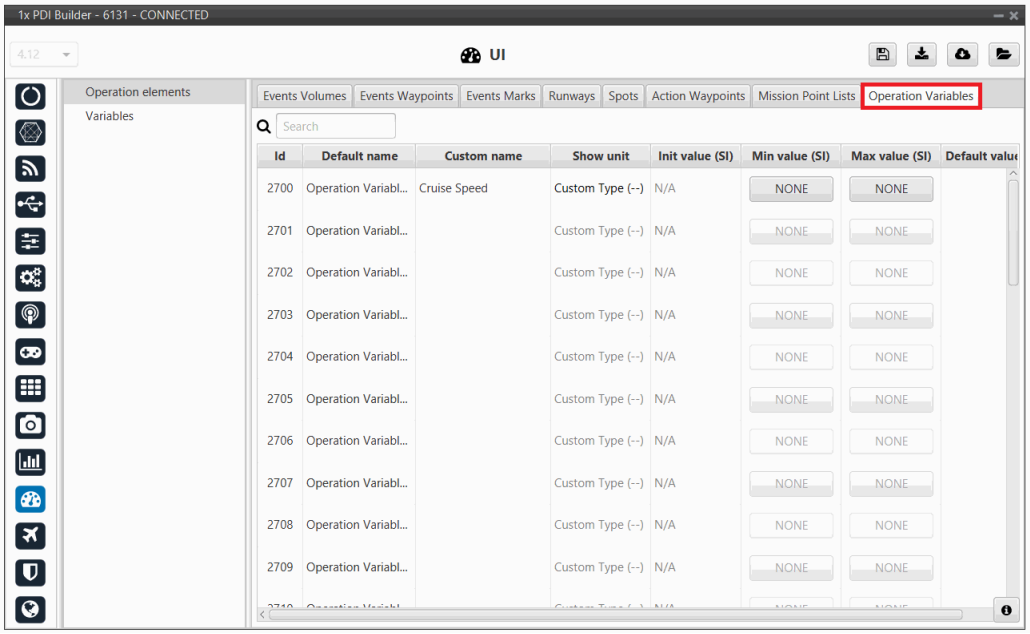

Operation elements panel - Operation Variables

Variables

In this panel, the user can find the name of all system variables, as well as their units and initial values. This is very useful, for example, in the case of 'User Variables'.

Variables are divided into 4 different tabs:


- **Real**: Real Variables, 32 bits.
- **Unsigned**: Unsigned integer variables, 16 bits.
- **Bit**: Bit variable, 1 bit.
- **Features**: Features variables, 192 bits. These features variables are composed as follows:

Type	Name	Content	Range
Float64	latitude	Latitude component	[–90, 90] *

Type	Name	Content	Range
		scaled as 10^{-7} degrees (centimeter-level precision on the surface of the Earth)	10^{-7} scaled degrees
Float64	longitude	Longitude component scaled as 10^{-7} degrees (centimeter-level precision on the surface of the Earth)	[–180, 180] * 10^{-7} scaled degrees
Float64	height	Height above the WGS84 ellipsoid in millimeters	–
Float64	latitude	Latitude component scaled as 10^{-7} degrees (centimeter-	[–90, 90] * 10^{-7} scaled degrees

Type	Name	Content	Range
		level precision on the surface of the Earth)	

> **Note**
>
> - There are 1000 User variables available for each class (Bits, Unsigned and Real Vars).
> - For a detailed list of all variables available in Veronte applications, consult the Lists of Variables - Lists of interest section of the **1x Software Manual**.

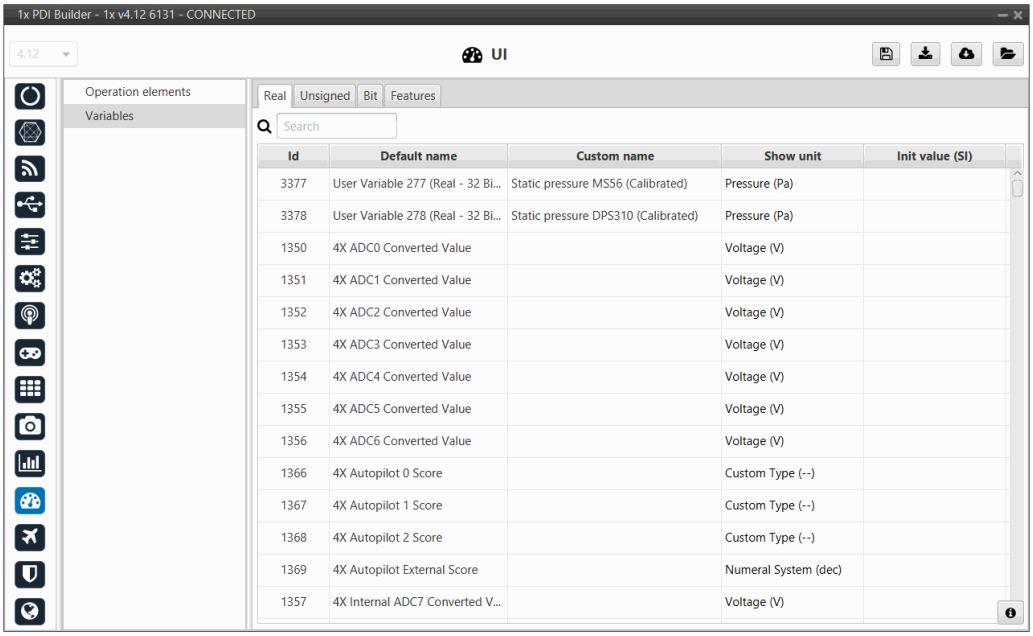

Variables panel

To set a custom name for one of the system variables:


1. Click on the **Custom Name** cell of the desired variable and **introduce the new name** for it.
2. When the name is introduced press **Enter** to store the name on the system.

3. Press **Save** to save all changes.

> **Error**
>
> In this version, there is a maximum amount of characters that the user can use to rename variables, i.e. there is no limit per se but there is a maximum size of the configurable (xml size).

Besides changing their name, the user can also configure the measurement units of the variables, as well as the initial value (expressed in SI units) they will have each time the system (re)starts, using the **Show unit** and the **Init Value (SI)** cells.

By right-clicking on the **Show unit** cell, the user can select the desired units.

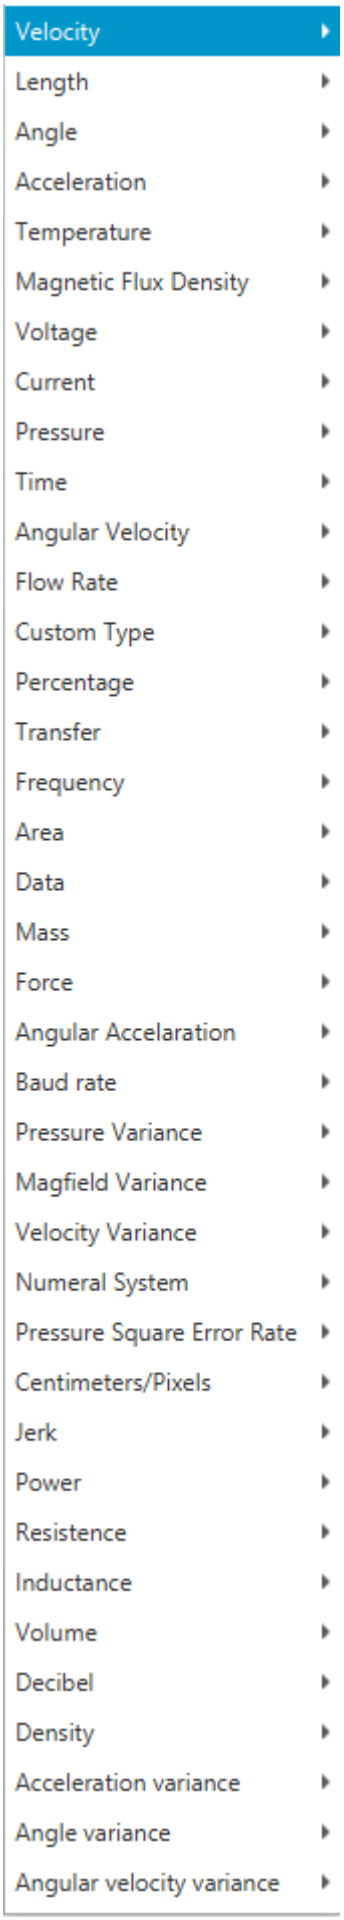
Velocity
Length
Angle
Acceleration
Temperature
Magnetic Flux Density
Voltage
Current
Pressure
Time
Angular Velocity
Flow Rate
Custom Type
Percentage
Transfer
Frequency
Area
Data
Mass
Force
Angular Accelaration
Baud rate
Pressure Variance
Magfield Variance
Velocity Variance
Numeral System
Pressure Square Error Rate
Centimeters/Pixels
Jerk
Power
Resistence
Inductance
Volume
Decibel
Density
Acceleration variance
Angle variance
Angular velocity variance

Variables units

The table below shows all the available units in **1x PDI Builder**.

Variable Type	Units
Velocity	[m/s] [kt] [km/h] [mph] [ft/s] [mm/s] [ft/m]
Length	[m] [km] [mi] [NM] [yd] [ft] [in] [cm] [mm]
Angle	rad[-π; π] ° [-180;180] °[0;360] [° ' “] [rad] rad[0; 2π] °
Acceleration	[m/s²] [ft/s²] [in/s²] [g]
Temperature	[K] [°C] [°F]
Magnetic Flux Density	

Variable Type	Units
	[T] [mG] [gauss] [nT]
Voltage	[V] [mV]
Current	[A] [mA]
Pressure	[Pa] [kPa] [bar] [mbar] [psi] [mmHg] [at] [atm]
Time	[s] [min] [h] [µs] [ms]
Angular Velocity	[rad/s] [rad/m] [rad/h] [rps] [rpm] [rph] [°/s]
Flow Rate	[m³/s] [gal/s] [gal/h] [l/s] [l/h]
Custom Type	[- -]
Percentage	[x1] [%]

Variable Type	Units
Transfer	[pkts/s]
Frequency	[Hz] [mHz] [kHz]
Area	[m²] [cm²] [mm²] [km²] [mile²] [ft²] [yd²]
Data	[bit] [byte] [KB] [GB] [bytes/s]
Mass	[kg] [g] [tonnes] [lbs] [oz]
Force	[N] [kN] [lbf] [pdl]
Angular Acceleration	[rpm/s] [rad/s²] [rad/m²] [rad/h²] [°/s²] [°/m²] [°/h²]
Baudrate	[Bd] [kBd] [MBd]


Variable Type	Units
Pressure Variance	[Pa²]
Magfield Variance	[T²]
Velocity Variance	[(m/s)²] [(cm/s)²] [(mm/s)²]
Numeral System	[bin] [octal] [dec] [hex]
Pressure Square Error Rate	[Pa²/s]
Centimeters/ Pixels	[cm/pixel]
Jerk	[m/s³]
Power	[W] [kW] [Kgm/s] [erg/s] [CV]
Resistence	[Ω]
Inductance	[H]
Volume	

Variable Type	Units
	[m^3] [dm^3] [mm^3] [L] [mL]
Decibel	[db]
Density	[kg/m^3]
Acceleration variance	[m^2/s^4]
Angle variance	[rad^2]
Angular velocity variance	[rad^2/s^2]

HIL

Professional Hardware In the Loop (HIL) Simulator package is a powerful tool for Autopilot 1x integration, development and operator training; allowing to extensively operate the system in a safe environment, prior to conducting real flight operations. For more information, please visit HIL Simulator user manual.

The user can link the variables on Autopilot 1x with the corresponding ones in the simulator. In this menu, simulator variables are available on the left side (**Disabled**). In addition, it can be seen 2 more panels, **To Simulator** and **To Veronte**.

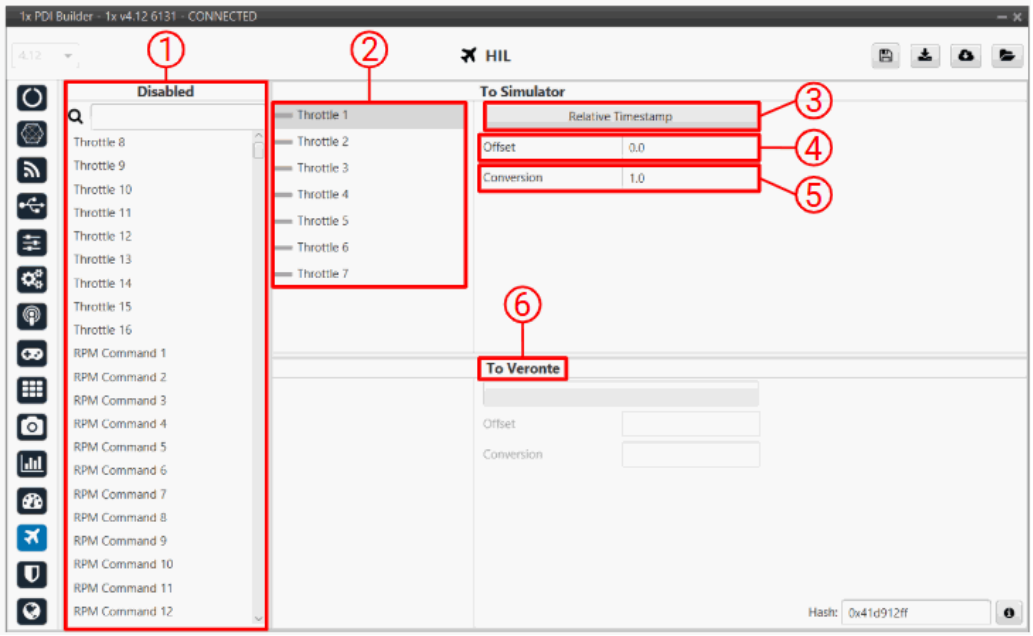


HIL menu

In order to configure the simulation variables, users have to:

1. **Disabled**: Select the simulator variables that have been configured in the aircraft model. Just drag and drop them into "**To Simulator**" panel.
2. Here users can see all the variables selected and sent to the simulator. Select the one to be configured.

   To remove a variable from the list, simply click on the ▬ icon next to it.
3. Select the actuator variable (Control Output) of Autopilot 1x that matches with the one in the simulator. A new window will be displayed for each variable.

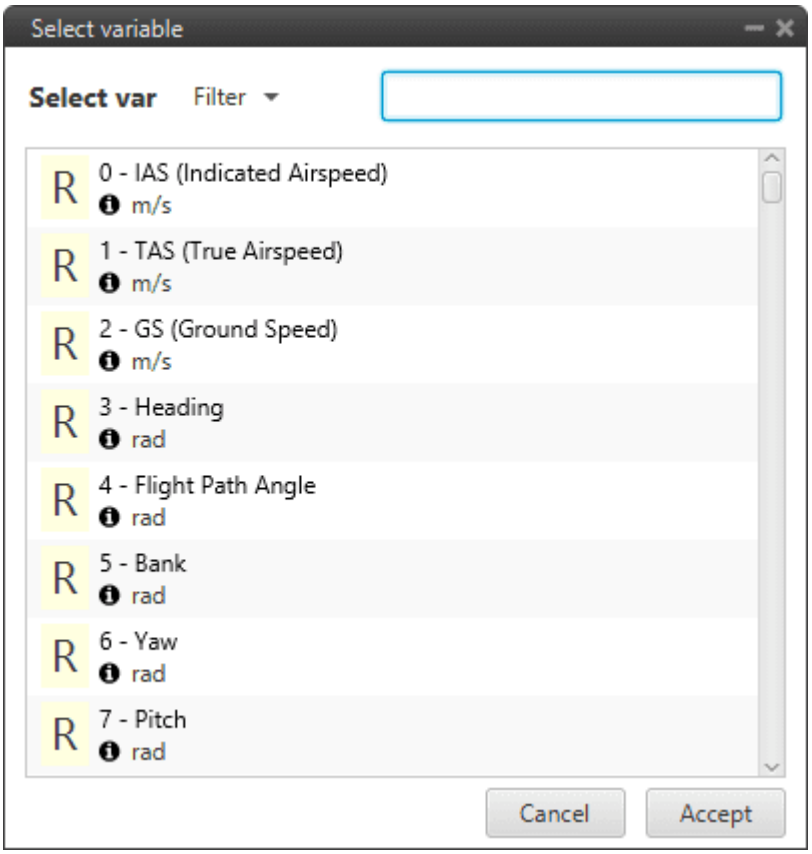

Autopilot 1x variables

4. **Offset**: Set an offset, if it is necessary.
5. **Conversion**: Set a conversion factor, if it is necessary. It multiplies the Autopilot 1x output signal and can be used in case units on 1x and the simulator do not match. For example, in X-Plane simulator, the unit of angles is radians.

> ⓘ **Note**
>
> To be sure of which units the simulator has, please refer to the relevant simulator manual (X-Plane, Microsoft Flight Simulator, etc.).

> ⚠ **Warning**
>
> Always make sure that surfaces are moving in the right direction and with the correct deflection angle.

6. **To Veronte**: The user can also select variables to be sent from the simulator to Autopilot 1x. **Veronte Autopilot** can receive a **maximum of 16 simulation variables**.

> **Hint**
>
> An interesting variable could be the RPM of the motor.

Simulation variables

The following table shows the correspondence between the nomenclature of simulation variables in 1x PDI Builder, X-Plane 11 and Microsoft Flight Simulator.

> **Note**
>
> **1x PDI Builder** variables represent the indicated variables in this table, depending on which simulator is in use.

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Throttle 1	Throttle (commanded)	25	0	GENERAL ENG THROTTLE LEVER POSITION:1
Throttle 2		25	1	GENERAL ENG THROTTLE LEVER POSITION:2
Throttle 3		25	2	GENERAL ENG THROTTLE LEVER POSITION:3
Throttle 4		25	3	GENERAL ENG THROTTLE

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				LEVER POSITION:4
Throttle 5		25	4	GENERAL ENG THROTTLE LEVER POSITION:5
Throttle 6		25	5	GENERAL ENG THROTTLE LEVER POSITION:6
Throttle 7		25	6	GENERAL ENG THROTTLE LEVER POSITION:7
Throttle 8		25	7	GENERAL ENG THROTTLE LEVER POSITION:8
Throttle 9	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:9
Throttle 10	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:10

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Throttle 11	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:11
Throttle 12	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:12
Throttle 13	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:13
Throttle 14	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:14
Throttle 15	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:15
Throttle 16	-	-	-	GENERAL ENG THROTTLE LEVER POSITION:16
	-	-	-	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
RPM Command 1				GENERAL ENG RPM:1
RPM Command 2	-	-	-	GENERAL ENG RPM:2
RPM Command 3	-	-	-	GENERAL ENG RPM:3
RPM Command 4	-	-	-	GENERAL ENG RPM:4
RPM Command 5	-	-	-	GENERAL ENG RPM:5
RPM Command 6	-	-	-	GENERAL ENG RPM:6
RPM Command 7	-	-	-	GENERAL ENG RPM:7
RPM Command 8	-	-	-	GENERAL ENG RPM:8
RPM Command 9	-	-	-	GENERAL ENG RPM:9
RPM Command 10	-	-	-	GENERAL ENG RPM:10
RPM Command 11	-	-	-	GENERAL ENG RPM:11

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
RPM Command 12	-	-	-	GENERAL ENG RPM:12
RPM Command 13	-	-	-	GENERAL ENG RPM:13
RPM Command 14	-	-	-	GENERAL ENG RPM:14
RPM Command 15	-	-	-	GENERAL ENG RPM:15
RPM Command 16	-	-	-	GENERAL ENG RPM:16
Governor	-	-	-	ROTOR GOV SWITCH POS
JATO	-	-	-	-
Jettison	-	-	-	-
Elevator All	Flight controls aileron/ elevator/ rudder	11	0	ELEVATOR POSITION:1
Aileron All	Flight controls aileron/	11	1	AILERON POSITION:1

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
	elevator/ rudder			
Rudder All	Flight controls aileron/ elevator/ rudder	11	2	RUDDER POSITION:1
Aileron Right 1	Aileron deflections 1	70	1	-
Aileron Right 2		70	3	-
Aileron Right 3		70	5	-
Aileron Right 4		70	7	-
Aileron Right 5	Aileron deflections 2	71	1	-
Aileron Right 6		71	3	-
Aileron Right 7		71	5	-
Aileron Right 8		71	7	-
Aileron Left 1	Aileron deflections 1	70	0	-
Aileron Left 2		70	2	-
Aileron Left 3		70	4	-
Aileron Left 4		70	6	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Aileron Left 5	Aileron deflections 2	71	0	-
Aileron Left 6		71	2	-
Aileron Left 7		71	4	-
Aileron Left 8		71	6	-
Elevator 1	Elevator deflections	74	0	-
Elevator 2		74	1	-
Elevator 3		74	2	-
Elevator 4		74	3	-
Rudder 1	Rudder deflections	75	0	-
Rudder 2		75	1	-
Rudder 3		75	2	-
Rudder 4		75	3	-
Flap All	Trim, flap, stats, & speedbrakes	13	4	FLAPS HANDLE INDEX:1
Flap Right 1	-	-	-	-
Flap Right 2	-	-	-	-
Flap Left 1	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Flap Left 2	-	-	-	-
Flap Handle	Trim, flap, stats, & speedbrakes	13	3	-
Landing Gear	Gear & brakes	14	0	GEAR HANDLE POSITION
Landing Gear Steering 0	Landing gear steering	134	0	-
Landing Gear Steering 1		134	1	-
Landing Gear Steering 2		134	2	-
Landing Gear Steering 3		134	3	-
Landing Gear Steering 4		134	4	-
Landing Gear Steering 5		134	5	-
Landing Gear Steering 6		134	6	-
Landing Gear Steering 7		134	7	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Brake All	Gear & brakes	14	1	-
Brake Right	Gear & brakes	14	3	BRAKE RIGHT POSITION
Brake Left	Gear & brakes	14	2	BRAKE LEFT POSITION
Speed Brake 1	Trim, flap, stats, & speedbrakes	13	6	SPOILERS HANDLE POSITION
Speed Brake 2	Trim, flap, stats, & speedbrakes	13	7	-
Roll Cyclic 1	Roll cyclic disc tilts	81	0	-
Roll Cyclic 2	Roll cyclic disc tilts	81	1	-
Roll Cyclic 3	-	-	-	-
Roll Cyclic 4	-	-	-	-
Roll Cyclic 5	-	-	-	-
Roll Cyclic 6	-	-	-	-
Roll Cyclic 7	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Roll Cyclic 8	-	-	-	-
Roll Cyclic 9	-	-	-	-
Roll Cyclic 10	-	-	-	-
Roll Cyclic 11	-	-	-	-
Roll Cyclic 12	-	-	-	-
Roll Cyclic 13	-	-	-	-
Roll Cyclic 14	-	-	-	-
Roll Cyclic 15	-	-	-	-
Roll Cyclic 16	-	-	-	-
Pitch Cyclic 1	Pitch cyclic disc tilts	80	0	-
Pitch Cyclic 2	-	80	1	-
Pitch Cyclic 3	-	-	-	-
Pitch Cyclic 4	-	-	-	-
Pitch Cyclic 5	-	-	-	-
Pitch Cyclic 6	-	-	-	-
Pitch Cyclic 7	-	-	-	-
Pitch Cyclic 8	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Pitch Cyclic 9	-	-	-	-
Pitch Cyclic 10	-	-	-	-
Pitch Cyclic 11	-	-	-	-
Pitch Cyclic 12	-	-	-	-
Pitch Cyclic 13	-	-	-	-
Pitch Cyclic 14	-	-	-	-
Pitch Cyclic 15	-	-	-	-
Pitch Cyclic 16	-	-	-	-
Pitch Cyclic 16	-	-	-	-
Clutch 0	Clutch & artificial stability switches	111	0	-
Clutch 1		111	1	-
Clutch 2		111	2	-
Joystick Alieron	Joystick aileron/ elevator/ rudder	111	0	-
Joystick Elevator		111	1	-
Joystick Rudder		111	2	-
Collective 1	Propeller pitch	39	0	-
Collective 2		39	1	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Collective 3		39	2	-
Collective 4		39	3	-
Collective 5		39	4	-
Collective 6		39	5	-
Collective 7		39	6	-
Collective 8		39	7	-
Collective 9	-	-	-	-
Collective 10	-	-	-	-
Collective 11	-	-	-	-
Collective 12	-	-	-	-
Collective 13	-	-	-	-
Collective 14	-	-	-	-
Collective 15	-	-	-	-
Collective 16	-	-	-	-
Motors Tilt Pitch 1	Wing sweep & thrust vectoring	12	3	-
	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Motors Tilt Pitch 2				
Motors Tilt Pitch 3	-	-	-	-
Motors Tilt Pitch 4	-	-	-	-
Motors Tilt Pitch 5	-	-	-	-
Motors Tilt Pitch 6	-	-	-	-
Motors Tilt Pitch 7	-	-	-	-
Motors Tilt Pitch 8	-	-	-	-
Motors Tilt Pitch 9	-	-	-	-
Motors Tilt Pitch 10	-	-	-	-
Motors Tilt Pitch 11	-	-	-	-
Motors Tilt Pitch 12	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Motors Tilt Pitch 13	-	-	-	-
Motors Tilt Pitch 14	-	-	-	-
Motors Tilt Pitch 15	-	-	-	-
Motors Tilt Pitch 16	-	-	-	-
Motors Tilt Roll 1	-	-	-	-
Motors Tilt Roll 2	-	-	-	-
Motors Tilt Roll 3	-	-	-	-
Motors Tilt Roll 4	-	-	-	-
Motors Tilt Roll 5	-	-	-	-
Motors Tilt Roll 6	-	-	-	-
Motors Tilt Roll 7	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Motors Tilt Roll 8	-	-	-	-
Motors Tilt Roll 9	-	-	-	-
Motors Tilt Roll 10	-	-	-	-
Motors Tilt Roll 11	-	-	-	-
Motors Tilt Roll 12	-	-	-	-
Motors Tilt Roll 13	-	-	-	-
Motors Tilt Roll 14	-	-	-	-
Motors Tilt Roll 15	-	-	-	-
Motors Tilt Roll 16	-	-	-	-
Wing Tilt 1	Wing sweep & thrust vectoring	12	5	-
Wing Tilt 2	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Wing Tilt 3	-	-	-	-
Wing Tilt 4	-	-	-	-
Wing Tilt 5	-	-	-	-
Wing Tilt 6	-	-	-	-
Wing Tilt 7	-	-	-	-
Wing Tilt 8	-	-	-	-
Wing Dihedral 1	Wing sweep & thrust vectoring	12	6	-
Wing Dihedral 2	-	-	-	-
Wing Dihedral 3	-	-	-	-
Wing Dihedral 4	-	-	-	-
Wing Dihedral 5	-	-	-	-
Wing Dihedral 6	-	-	-	-
Wing Dihedral 7	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Wing Dihedral 8	-	-	-	-
Wing Sweep 1	Wing sweep & thrust vectoring	12	4	-
Wing Sweep 2	-	-	-	-
Wing Sweep 3	-	-	-	-
Wing Sweep 4	-	-	-	-
Wing Sweep 5	-	-	-	-
Wing Sweep 6	-	-	-	-
Wing Sweep 7	-	-	-	-
Wing Sweep 8	-	-	-	-
Parachute	Miscellaneous switches	112	7	-
Throttle Actual 1	Throttle (actual)	26	0	-
Throttle Actual 2		26	1	-
Throttle Actual 3		26	2	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Throttle Actual 4		26	3	-
Throttle Actual 5		26	4	-
Throttle Actual 6		26	5	-
Throttle Actual 7		26	6	-
Throttle Actual 8		26	7	-
Throttle Actual 9	-	-	-	-
Throttle Actual 10	-	-	-	-
Throttle Actual 11	-	-	-	-
Throttle Actual 12	-	-	-	-
Throttle Actual 13	-	-	-	-
Throttle Actual 14	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Throttle Actual 15	-	-	-	-
Throttle Actual 16	-	-	-	-
Motor RPM 1	Engine RPM	37	0	GENERAL ENG RPM:1
Motor RPM 2		37	1	GENERAL ENG RPM:2
Motor RPM 3		37	2	GENERAL ENG RPM:3
Motor RPM 4		37	3	GENERAL ENG RPM:4
Motor RPM 5		37	4	GENERAL ENG RPM:5
Motor RPM 6		37	5	GENERAL ENG RPM:6
Motor RPM 7		37	6	GENERAL ENG RPM:7
Motor RPM 8		37	7	GENERAL ENG RPM:8
Motor RPM 9	-	-	-	GENERAL ENG RPM:9

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Motor RPM 10	-	-	-	GENERAL ENG RPM:10
Motor RPM 11	-	-	-	GENERAL ENG RPM:11
Motor RPM 12	-	-	-	GENERAL ENG RPM:12
Motor RPM 13	-	-	-	GENERAL ENG RPM:13
Motor RPM 14	-	-	-	GENERAL ENG RPM:14
Motor RPM 15	-	-	-	GENERAL ENG RPM:15
Motor RPM 16	-	-	-	GENERAL ENG RPM:16
Rotor RPM 1	Propeller RPM	38	0	PROP RPM:1
Rotor RPM 2		38	1	PROP RPM:2
Rotor RPM 3		38	2	PROP RPM:3
Rotor RPM 4		38	3	PROP RPM:4
Rotor RPM 5		38	4	PROP RPM:5
Rotor RPM 6		38	5	PROP RPM:6

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Rotor RPM 7		38	6	PROP RPM:7
Rotor RPM 8		38	7	PROP RPM:8
Rotor RPM 9	-	-	-	PROP RPM:9
Rotor RPM 10	-	-	-	PROP RPM:10
Rotor RPM 11	-	-	-	PROP RPM:11
Rotor RPM 12	-	-	-	PROP RPM:12
Rotor RPM 13	-	-	-	PROP RPM:13
Rotor RPM 14	-	-	-	PROP RPM:14
Rotor RPM 15	-	-	-	PROP RPM:15
Rotor RPM 16	-	-	-	PROP RPM:16
Power 1	Engine power	34	0	RECIP ENG BRAKE POWER: 1
Power 2		34	1	RECIP ENG BRAKE POWER: 2
Power 3		34	2	RECIP ENG BRAKE POWER: 3
Power 4		34	3	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				RECIP ENG BRAKE POWER: 4
Power 5		34	4	RECIP ENG BRAKE POWER: 5
Power 6		34	5	RECIP ENG BRAKE POWER: 6
Power 7		34	6	RECIP ENG BRAKE POWER: 7
Power 8		34	7	RECIP ENG BRAKE POWER: 8
Power 9	-	-	-	RECIP ENG BRAKE POWER: 9
Power 10	-	-	-	RECIP ENG BRAKE POWER: 10
Power 11	-	-	-	RECIP ENG BRAKE POWER: 11

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Power 12	-	-	-	RECIP ENG BRAKE POWER: 12
Power 13	-	-	-	RECIP ENG BRAKE POWER: 13
Power 14	-	-	-	RECIP ENG BRAKE POWER: 14
Power 15	-	-	-	RECIP ENG BRAKE POWER: 15
Power 16	-	-	-	RECIP ENG BRAKE POWER: 16
EGT (Exhaust Gas Temperature) 1	Exhaust has temperature (EGT)	47	0	ENG EXHAUST GAS TEMPERATURE: 1
EGT (Exhaust Gas Temperature) 2	-	-	-	ENG EXHAUST GAS TEMPERATURE: 2
	-	-	-	ENG EXHAUST GAS

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
EGT (Exhaust Gas Temperature) 3				TEMPERATURE: 3
EGT (Exhaust Gas Temperature) 4	-	-	-	ENG EXHAUST GAS TEMPERATURE: 4
EGT (Exhaust Gas Temperature) 5	-	-	-	ENG EXHAUST GAS TEMPERATURE: 5
EGT (Exhaust Gas Temperature) 6	-	-	-	ENG EXHAUST GAS TEMPERATURE: 6
EGT (Exhaust Gas Temperature) 7	-	-	-	ENG EXHAUST GAS TEMPERATURE: 7
EGT (Exhaust Gas Temperature) 8	-	-	-	ENG EXHAUST GAS TEMPERATURE: 8
EGT (Exhaust Gas Temperature) 9	-	-	-	ENG EXHAUST GAS

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				TEMPERATURE: 9
EGT (Exhaust Gas Temperature) 10	-	-	-	ENG EXHAUST GAS TEMPERATURE: 10
EGT (Exhaust Gas Temperature) 11	-	-	-	ENG EXHAUST GAS TEMPERATURE: 11
EGT (Exhaust Gas Temperature) 12	-	-	-	ENG EXHAUST GAS TEMPERATURE: 12
EGT (Exhaust Gas Temperature) 13	-	-	-	ENG EXHAUST GAS TEMPERATURE: 13
EGT (Exhaust Gas Temperature) 14	-	-	-	ENG EXHAUST GAS TEMPERATURE: 14
EGT (Exhaust Gas Temperature) 15	-	-	-	ENG EXHAUST GAS TEMPERATURE: 15

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
EGT (Exhaust Gas Temperature) 16	-	-	-	ENG EXHAUST GAS TEMPERATURE:16
Oil Pressure 1	Oil pressure	49	0	ENG OIL PRESSURE:1
Oil Pressure 2		49	1	ENG OIL PRESSURE:2
Oil Pressure 3		49	1	ENG OIL PRESSURE:3
Oil Pressure 4		49	2	ENG OIL PRESSURE:4
Oil Pressure 5		49	2	ENG OIL PRESSURE:5
Oil Pressure 6		49	3	ENG OIL PRESSURE:6
Oil Pressure 7		49	3	ENG OIL PRESSURE:7
Oil Pressure 8		49	4	ENG OIL PRESSURE:8
Oil Pressure 9	-	-	-	ENG OIL PRESSURE:9

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Oil Pressure 10	-	-	-	ENG OIL PRESSURE:10
Oil Pressure 11	-	-	-	ENG OIL PRESSURE:11
Oil Pressure 12	-	-	-	ENG OIL PRESSURE:12
Oil Pressure 13	-	-	-	ENG OIL PRESSURE:13
Oil Pressure 14	-	-	-	ENG OIL PRESSURE:14
Oil Pressure 15	-	-	-	ENG OIL PRESSURE:15
Oil Pressure 16	-	-	-	ENG OIL PRESSURE:16
IAT (Inlet Air Temperature) 1	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 1
IAT (Inlet Air Temperature) 2	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 2
	-	-	-	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
IAT (Inlet Air Temperature) 3				RECIP ENG TURBINE INLET TEMPERATURE: 3
IAT (Inlet Air Temperature) 4	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 4
IAT (Inlet Air Temperature) 5	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 5
IAT (Inlet Air Temperature) 6	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 6
IAT (Inlet Air Temperature) 7	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 7
IAT (Inlet Air Temperature) 8	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 8
IAT (Inlet Air Temperature) 9	-	-	-	RECIP ENG TURBINE INLET

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				TEMPERATURE: 9
IAT (Inlet Air Temperature) 10	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 10
IAT (Inlet Air Temperature) 11	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 11
IAT (Inlet Air Temperature) 12	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 12
IAT (Inlet Air Temperature) 13	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 13
IAT (Inlet Air Temperature) 14	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 14
IAT (Inlet Air Temperature) 15	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 15

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
IAT (Inlet Air Temperature) 16	-	-	-	RECIP ENG TURBINE INLET TEMPERATURE: 16
Oil Temperature 1	Oil temperature	50	0	ENG OIL TEMPERATURE: 1
Oil Temperature 2		50	1	ENG OIL TEMPERATURE: 2
Oil Temperature 3		50	2	ENG OIL TEMPERATURE: 3
Oil Temperature 4		50	3	ENG OIL TEMPERATURE: 4
Oil Temperature 5		50	4	ENG OIL TEMPERATURE: 5
Oil Temperature 6		50	5	ENG OIL TEMPERATURE: 6
Oil Temperature 7		50	6	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				ENG OIL TEMPERATURE: 7
Oil Temperature 8		50	7	ENG OIL TEMPERATURE: 8
Oil Temperature 9	-	-	-	ENG OIL TEMPERATURE: 9
Oil Temperature 10	-	-	-	ENG OIL TEMPERATURE: 10
Oil Temperature 11	-	-	-	ENG OIL TEMPERATURE: 11
Oil Temperature 12	-	-	-	ENG OIL TEMPERATURE: 12
Oil Temperature 13	-	-	-	ENG OIL TEMPERATURE: 13
Oil Temperature 14	-	-	-	ENG OIL TEMPERATURE: 14

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Oil Temperature 15	-	-	-	ENG OIL TEMPERATURE: 15
Oil Temperature 16	-	-	-	ENG OIL TEMPERATURE: 16
Coolant Tempreature 1	-	-	-	-
Coolant Tempreature 2	-	-	-	-
Coolant Tempreature 3	-	-	-	-
Coolant Tempreature 4	-	-	-	-
Coolant Tempreature 5	-	-	-	-
Coolant Tempreature 6	-	-	-	-
Coolant Tempreature 7	-	-	-	-
Coolant Tempreature 8	-	-	-	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Coolant Tempreature 9	-	-	-	-
Coolant Tempreature 10	-	-	-	-
Coolant Tempreature 11	-	-	-	-
Coolant Tempreature 12	-	-	-	-
Coolant Tempreature 13	-	-	-	-
Coolant Tempreature 14	-	-	-	-
Coolant Tempreature 15	-	-	-	-
Coolant Tempreature 16	-	-	-	-
Fuel mixture 1		29	0	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
	Mixture setting			RECIP MIXTURE RATIO:1
Fuel mixture 2	-	-	-	RECIP MIXTURE RATIO:2
Fuel mixture 3	-	-	-	RECIP MIXTURE RATIO:3
Fuel mixture 4	-	-	-	RECIP MIXTURE RATIO:4
Fuel mixture 5	-	-	-	RECIP MIXTURE RATIO:5
Fuel mixture 6	-	-	-	RECIP MIXTURE RATIO:6
Fuel mixture 7	-	-	-	RECIP MIXTURE RATIO:7
Fuel mixture 8	-	-	-	RECIP MIXTURE RATIO:8
Fuel mixture 9	-	-	-	RECIP MIXTURE RATIO:9
Fuel mixture 10	-	-	-	RECIP MIXTURE RATIO:10
Fuel mixture 11	-	-	-	RECIP MIXTURE RATIO:11

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Fuel mixture 12	-	-	-	RECIP MIXTURE RATIO:12
Fuel mixture 13	-	-	-	RECIP MIXTURE RATIO:13
Fuel mixture 14	-	-	-	RECIP MIXTURE RATIO:14
Fuel mixture 15	-	-	-	RECIP MIXTURE RATIO:15
Fuel mixture 16	-	-	-	RECIP MIXTURE RATIO:16
Total Fuel	Payload weights & center of gravity (CG)	63	2	-
Total Fuel Flow	-	-	-	-
Fuel 1	Fuel weights	62	0	FUELSYSTEM TANK WEIGHT:1
Fuel 2		62	1	FUELSYSTEM TANK WEIGHT:2
Fuel 3		62	2	FUELSYSTEM TANK WEIGHT:3
Fuel 4		62	3	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				FUELSYSTEM TANK WEIGHT:4
Fuel 5		62	4	FUELSYSTEM TANK WEIGHT:5
Fuel 6		62	5	FUELSYSTEM TANK WEIGHT:6
Fuel 7		62	6	FUELSYSTEM TANK WEIGHT:7
Fuel 8		62	7	FUELSYSTEM TANK WEIGHT:8
Fuel Flow 1	Fuel flow (FF)	45	0	ENG FUEL FLOW GPH:1
Fuel Flow 2		45	1	ENG FUEL FLOW GPH:2
Fuel Flow 3		45	2	ENG FUEL FLOW GPH:3
Fuel Flow 4		45	3	ENG FUEL FLOW GPH:4
Fuel Flow 5		45	4	ENG FUEL FLOW GPH:5
Fuel Flow 6		45	5	ENG FUEL FLOW GPH:6

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Fuel Flow 7		45	6	ENG FUEL FLOW GPH:7
Fuel Flow 8		45	7	ENG FUEL FLOW GPH:8
visRatio	Frame rate	0	3	-
grndRatio		0	5	-
flitRatio		0	6	-
presBar	System pressures	7	0	BAROMETER PRESSURE
eas	Speeds	3	1	AIRSPEED TRUE
tas		3	2	AIRSPEED TRUE
gs		3	3	GPS GROUND SPEED
Speed	Autopilot values	118	0	GROUND VELOCITY
Heading		118	1	GPS GROUND TRUE TRACK
VVI	Mach, VVI, g-load	4	2	-
distNm	Location, velocity, &	21	7	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
	distance traveled			
magComp	Magnetic compass	19	0	MAGNETIC COMPASS
magvar	-	-	-	MAGVAR
	-	-	-	-
AMpress	Aircraft atmosphere	6	0	AMBIENT PRESSURE
AMtemperature		6	1	AMBIENT TEMPERATURE
LEtemperature		6	2	AMBIENT TEMPERATURE
dens		6	3	AMBIENT DENSITY
A		6	4	-
Q		6	5	DYNAMIC PRESSURE
Position IAS	Speeds	3	0	AIRSPEED INDICATED
Position Latitude	Latitude, longitude, & altitude	20	0	PLANE LATITUDE

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Position Longitude		20	1	PLANE LONGITUDE
Position altitude Msl		20	2	PLANE ALTITUDE
Position altitude Agl		20	3	PLANE ALT ABOVE GROUND
Position altitude Ind		20	5	PRESSURE ALTITUDE
X	Location, velocity, & distance traveled	21	0	-
Y		21	1	-
Z		21	2	-
vX		21	3	VELOCITY BODY X
vY		21	4	VELOCITY BODY Y
vZ		21	5	VELOCITY BODY Z
Position gNormal	Mach, VVI, g-load	4	4	ACCELERATION BODY Z
Position gAxial		4	5	

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
				ACCELERATION BODY X
Position gSide		4	6	ACCELERATION BODY Y
Orientation Pitch	Pitch, roll, & headings	17	0	PLANE PITCH DEGREES
Orientation Roll		17	1	PLANE BANK DEGREES
Orientation Heading True		17	2	PLANE HEADING DEGREES TRUE
Heading Mag		17	3	PLANE HEADING DEGREES MAGNETIC
Orientation Pitch rate	Angular velocities	16	0	ROTATION VELOCITY BODY Y
Orientation Roll Rate		16	1	ROTATION VELOCITY BODY X
Orientation Yaw Rate		16	2	ROTATION VELOCITY BODY Z

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
Orientation alpha	Angle of attack, sideslip, & paths	18	0	INCIDENCE ALPHA
Orientation beta	Angle of attack, sideslip, & paths	18	1	INCIDENCE BETA
thrust1	Engine thrust	35	0	PROP THRUST:1
thrust2		35	1	PROP THRUST:2
torque1	Engine torque	36	0	ENG TORQUE:1
torque2		36	1	ENG TORQUE:2
fdirMode	Autopilot, flight director, & HUD switches	108	1	-
navArm	Autopilot armed status	116	0	-
altArm		116	1	-
appArm		116	2	-
autoThrottle	Autopilot values	117	0	AUTOTHROTTLE ACTIVE

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
modeHeading		117	1	-
modeAlt		117	2	-
cgControl	Payload weights & center of gravity (CG)	63	7	-
realTime	Times	1	0	-
totalTime		1	1	GENERAL ENG ELAPSED TIME: 1
missnTime		1	2	-
timer		1	3	-
diAlt	Autopilot values	118	3	-
useAlt	-	-	-	-
empty	Payload weights & center of gravity (CG)	63	0	-
payload		63	1	-
fuel		63	2	-
jetti		63	3	-
current		63	4	-

1x PDI Builder	X-Plane 11			Microsoft Flight Simulator
	Variable name	Index	Subindex	
maximum		63	5	-
cg		63	7	CG PERCENT
Speed North	-	-	-	VELOCITY WORLD Z
Speed East	-	-	-	VELOCITY WORLD X
Speed Down	-	-	-	VELOCITY WORLD Y


Safety

In this menu the user can create checklists for each phase, avoid changing certain parameters, settings or programs and define safety bits lists.

Checklist

This feature is used to make sure that some requirements have been accomplished, for example, prior to a phase change or to avoid a possible malfunction. These checklists will appear in a panel called **Checklist** of **Veronte Ops** (for more information about this, visit Veronte Ops manual).

> **Note**
>
> There are 3 different types of checks:
>
> - Checks that are performed automatically by Veronte Autopilot 1x, such as "**In Range check**".
> - Checks that need a command to Autopilot 1x, e.g. "**Calibrate Atmosphere**".
> - Checks for operator information only, which are performed with type "**None**".

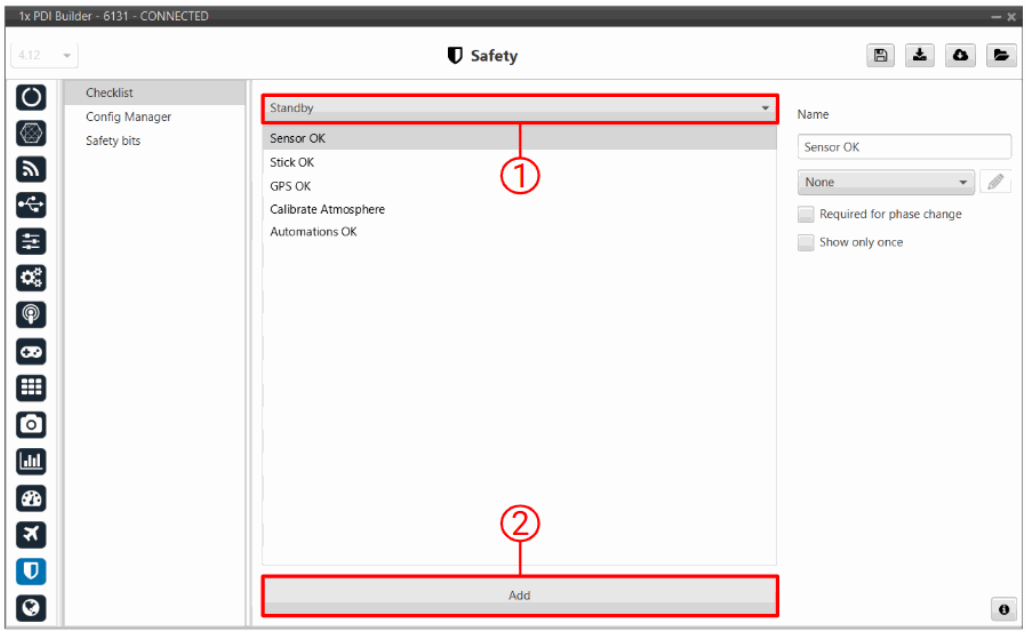

Checklist panel

In (1), the user will find all the phases configured for the operation. In each one of them, new elements for the checklist can be added with the button **Add** (2). The user can modify the checklist order of the phase by selecting and dragging elements in the list to the desired position.

The configurable parameters for each element are:

- **Name**: The name that will identify the element.
- **Type**: The element chosen from the checklist can be one of the following types:
  - **Calibrate Atmosphere**: The user can request the calibration of the atmosphere model.


- **Calibrate DEM**: The user can request the calibration of the DEM.
- **Command Position**: Send to the UAV a position.
- **Command Yaw**: Send to the UAV a yaw angle.
- **Enter Wind Information**: Enter initial values for wind state to the UAV.
- **In Range Check**: Allows checking if a variable is between the range selected.

> **Error**
> In order for **Veronte Ops** to correctly execute this functionality, variables that are added to a checklist as **In Range Check** must also be added to the mandatory telemetry vector Data vectors. This is because if they are not added to this telemetry vector, these variables are initialized in **Veronte Ops** with a value of **0**, which in reality may not be the actual value of these variables and may cause confusion in some range.

- **None**: Any action is performed, been just a check for the user to do something external.
- **Trim arcade**: The user can request the stick calibration for arcade commands.

- **Required for phase change**: If **enabled**, the element must be checked to switch to another phase.
- **Show only once**: If **enabled**, the check will only appear the first time its phase is executed.
- **Automatic check**: This option is only available when **'In Range check'** is selected.


An example of '**In Range Check**' can be shown below:

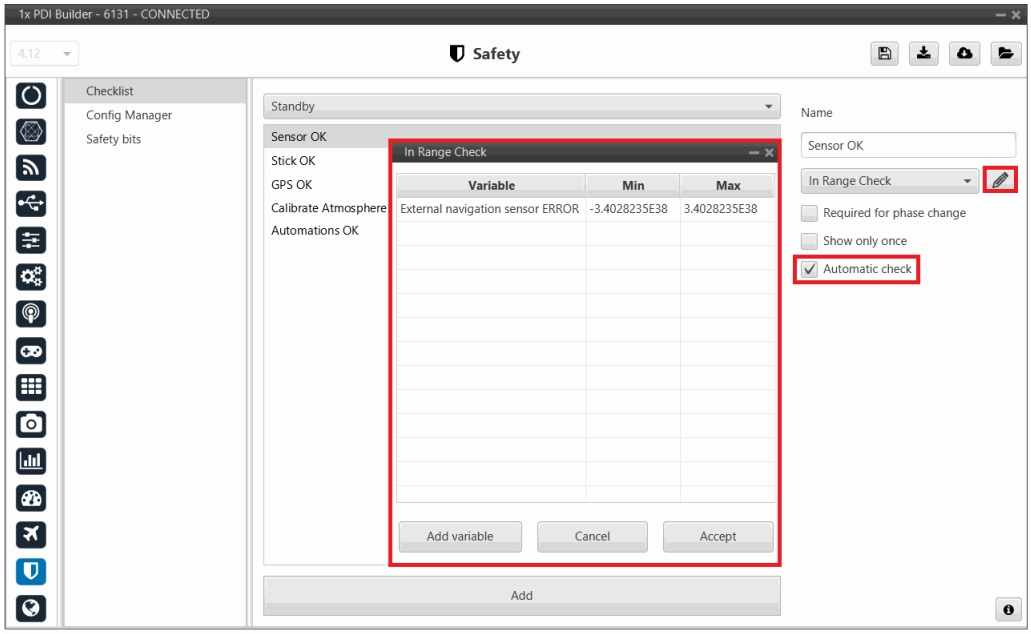

Checklist example

Config Manager

Config Manager avoids the user changing certains parameters, settings or programs of Autopilot 1x. It is shown in the picture below:

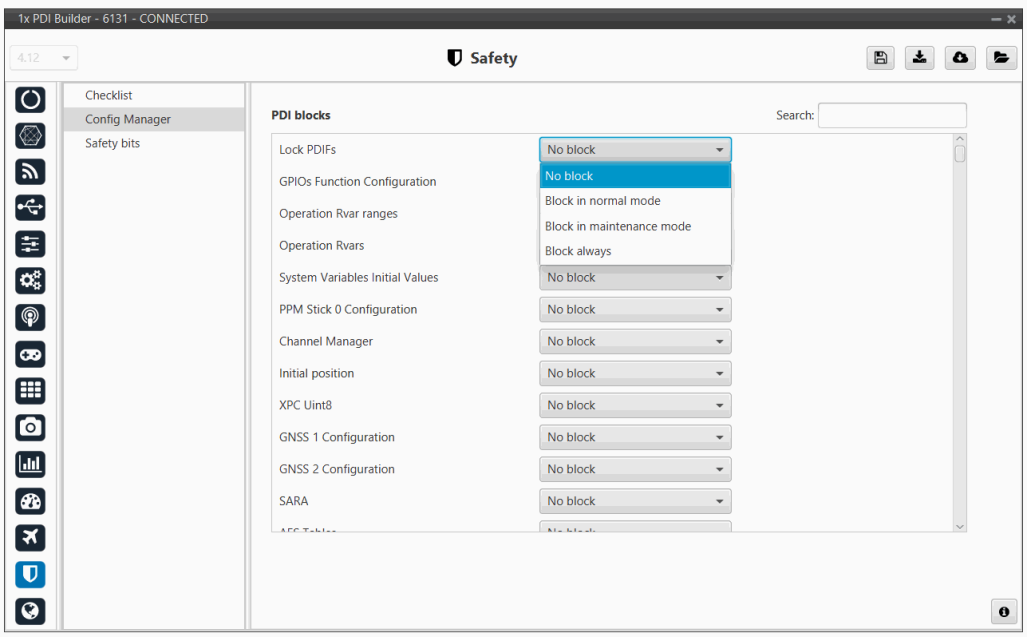

Config Manager panel

The user can choose between:


- No block
- Block in normal mode
- Block in maintenance mode

- Block always

Safety bits

In this panel the user can configure 3 different safety bits lists.

The bits included in these lists are added to the set of default system bits that trigger the **System error** variable, and therefore trigger the **FTS**. The user can refer to this list of default system bits in the Activation System Error bits - Lists of interest section of the **1x Software Manual**.

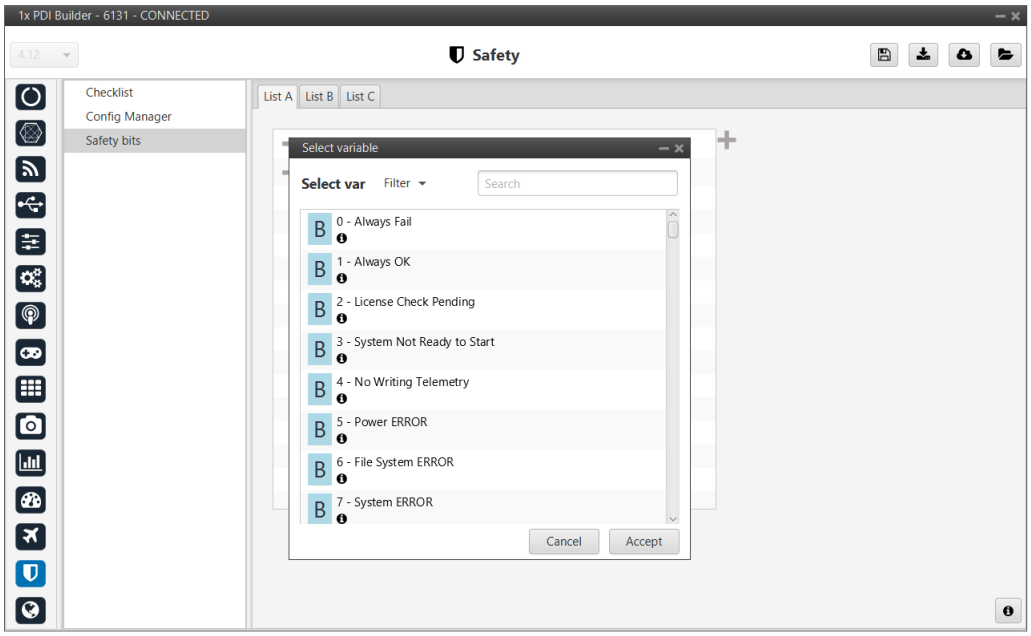

Safety bits panel

By default, there is no bit defined in any Safety bits list. To add them, just press ➕ icon and select the desired bits. A common user bit to add to these lists is the '**Sensors Error' bit**, so that if one of the sensors fails, the FTS is triggered.


In addition, the user can switch between the different lists with an action. For more information, see Actions - Automations section of this manual.

STANAG 4586

The STANAG 4586 panel is used to configure various communication messages, which represent the primary protocol for the autopilot's interactions. This interface allows the user to integrate specific messages one by one, making the process completely transparent within the firmware.

The STANAG 4586 panel is the interface dedicated to configuring interoperability protocols for Unmanned Aircraft Systems. This section allows for the mapping of internal system variables according to international standards, facilitating communication between the vehicle, the Ground Control Station (GCS), and other external assets.


The ➕ icon in the top right corner provides access to the following configuration sub-menus:

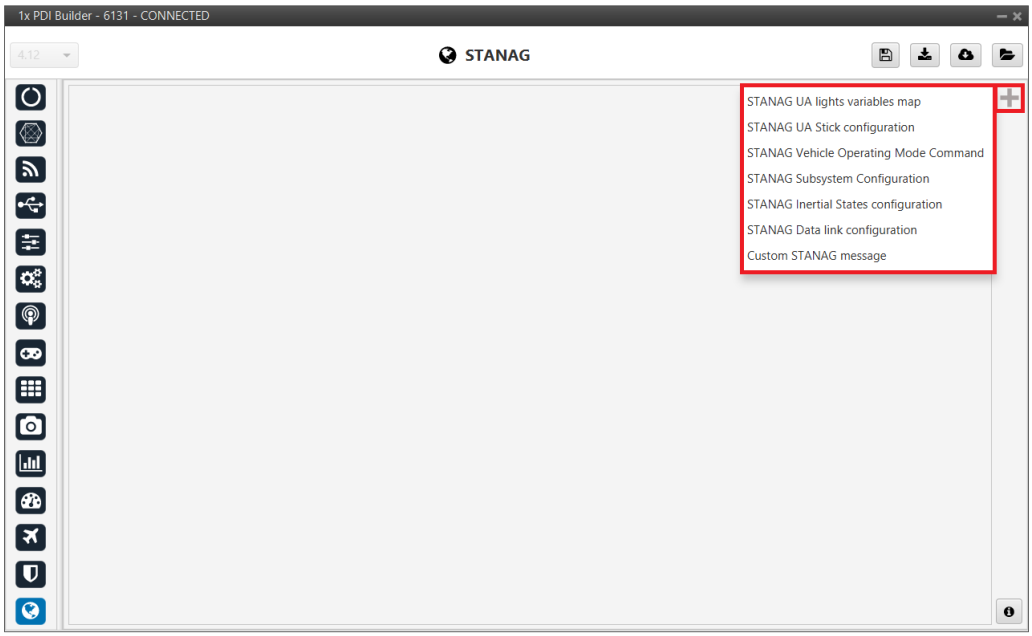

STANAG 4586 Panel

STANAG 4586 UA lights variables map

Used to map system state variables (e.g., strobe, navigation lights, landing lights) to commands defined by the STANAG 4586 standard.

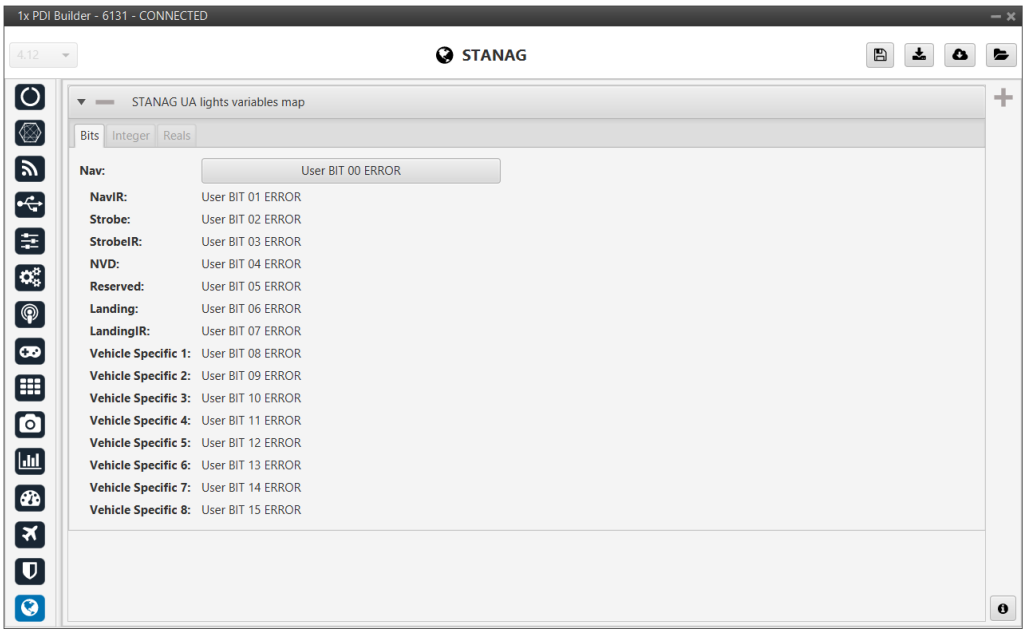


STANAG 4586 - UA lights variable map

- **Nav & Strobe**: Controls for navigation and strobe lights (both visible and IR).
- **NVD & Landing**: Indicators for Night Vision Devices (NVD) and landing lights.
- **Vehicle Specific (1-8)**: Customizable fields for vehicle-specific functions that fall outside the standard parameters.

> **Note**
>
> Light controls as a continuous data block.

STANAG 4586 UA Stick configuration

A section dedicated to mapping physical inputs (joystick/sticks) from the control station for manual or assisted vehicle piloting.

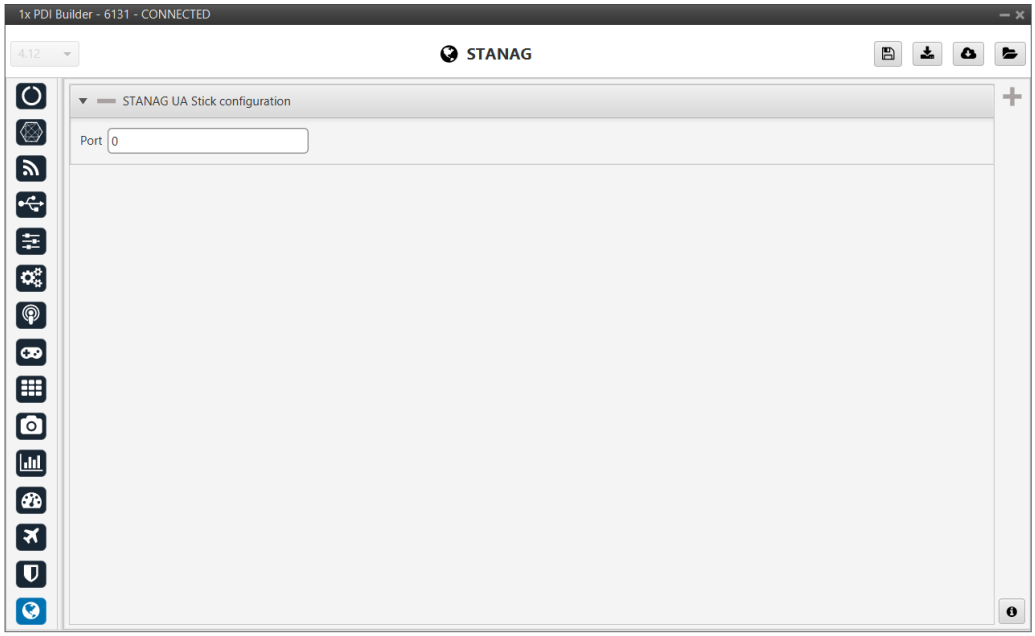


STANAG 4586 - UA Stick configuration

- **Port**: This field defines the logical communication index used to identify the specific STANAG 4586 data stream containing stick inputs. It allows the system to distinguish between multiple control sources or GCS instances, ensuring the commands are processed from the correct controller.

STANAG 4586 Vehicle Operating Mode Command

Configures the vehicle's operating modes so they are correctly interpreted by external command and control systems.


- **Integer panel**:

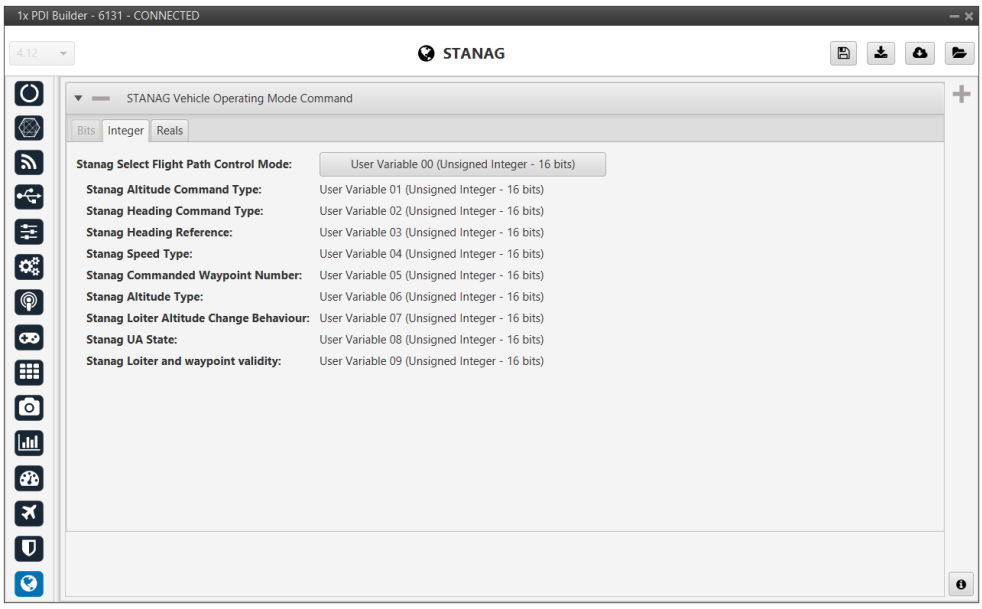

STANAG 4586 - Vehicle Operating Mode Command

- **STANAG 4586 Select Flight Path Control Mode**: Maps the variable that dictates the primary navigation method.
- **STANAG 4586 Altitude Command Type**: Defines how the altitude commands are interpreted.
- **STANAG 4586 Heading Command Type**: Assigns the variable for heading control.
- **STANAG 4586 Heading Reference**: Sets the reference for heading data.
- **STANAG 4586 Speed Type**: Maps the variable defining the speed reference.
- **STANAG 4586 Commanded Waypoint Number**: Identifies the integer variable that tracks the active waypoint being targeted by the GCS.
- **STANAG 4586 Altitude Type**: Specifies the reference for altitude data.
- **STANAG 4586 Loiter Altitude Change Behaviour**: Defines how the aircraft transitions between altitudes while in a loiter pattern.
- **STANAG 4586 UA State**: Maps the general operational state of the Unmanned Aircraft.
- **STANAG 4586 Loiter and waypoint validity**: Links a variable that indicates whether the current navigation commands are valid and executable.

- **Reals panel**:

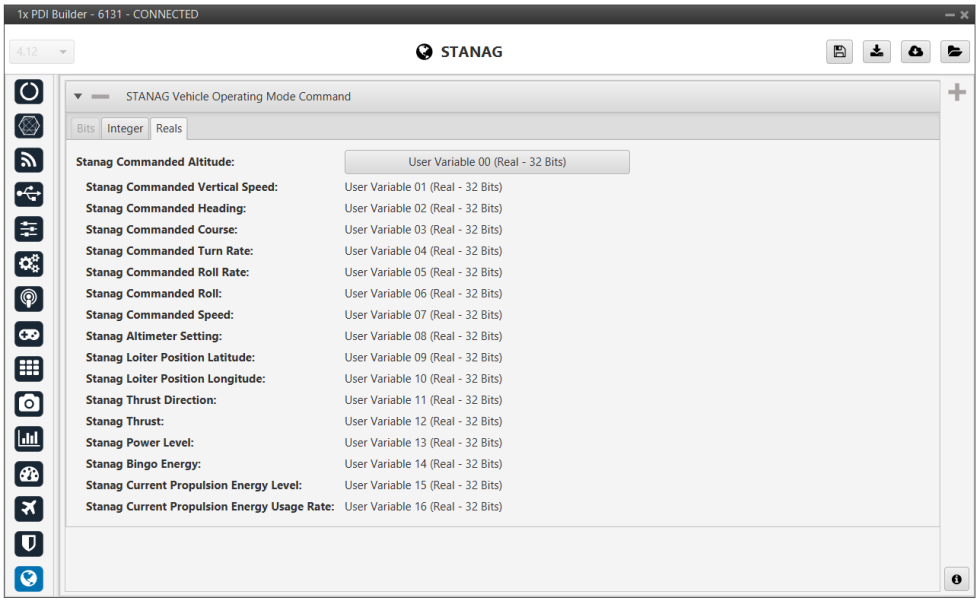


STANAG 4586 - Vehicle Operating Mode Command

- **STANAG 4586 Commanded Altitude**: The target altitude for the aircraft.
- **STANAG 4586 Commanded Vertical Speed**: The desired rate of climb or descent.
- **STANAG 4586 Commanded Heading / Course**: The target directional orientation or intended ground track.
- **STANAG 4586 Commanded Turn Rate / Roll Rate / Roll**: Precision flight dynamic setpoints used during coordinated maneuvers or specific autopilot modes.
- **STANAG 4586 Commanded Speed**: The target airspeed or ground speed for the mission.
- **STANAG 4586 Altimeter Setting**: The pressure setting used to calibrate the aircraft's barometric altimeter.
- **STANAG 4586 Loiter Position Latitude / Longitude**: The precise geographical coordinates for the center of a loiter pattern.
- **STANAG 4586 Thrust Direction / Thrust / Power Level**: Parameters related to propulsion control and vectoring.
- **STANAG 4586 Bingo Energy**: The critical energy threshold at which the aircraft must return to base.
- **STANAG 4586 Current Propulsion Energy Level / Usage Rate**: Real-time monitoring of available energy and the instantaneous consumption rate.

STANAG 4586 Subsystem Configuration


Allows for the management and status reporting of subsystems.

Click the ➕ icon to define additional subsystems.

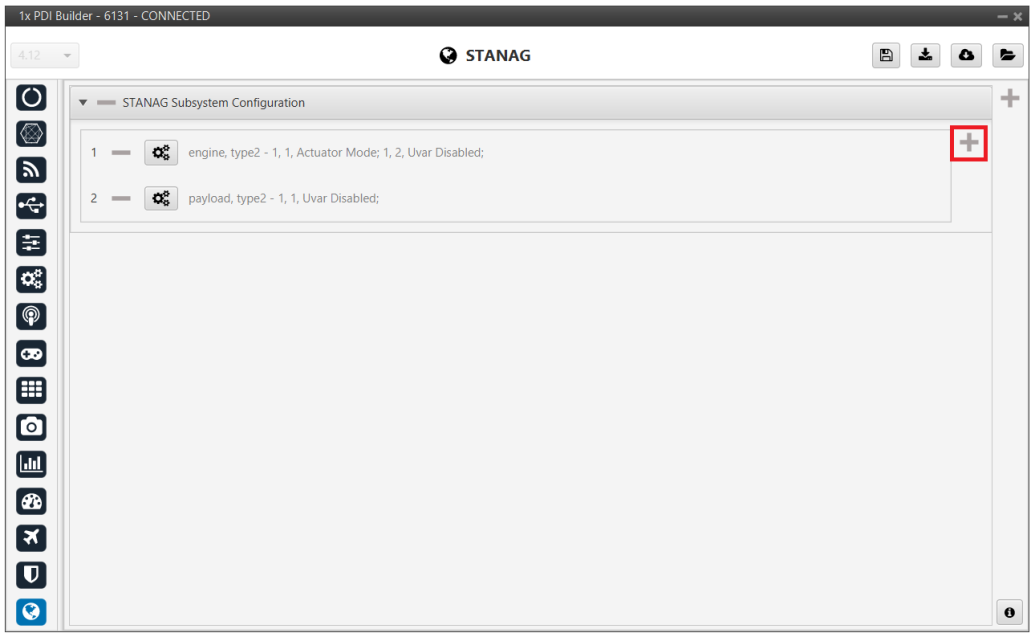

STANAG 4586 - Subsystem Configuration

Select the ⚙ icon to configure the parameters.

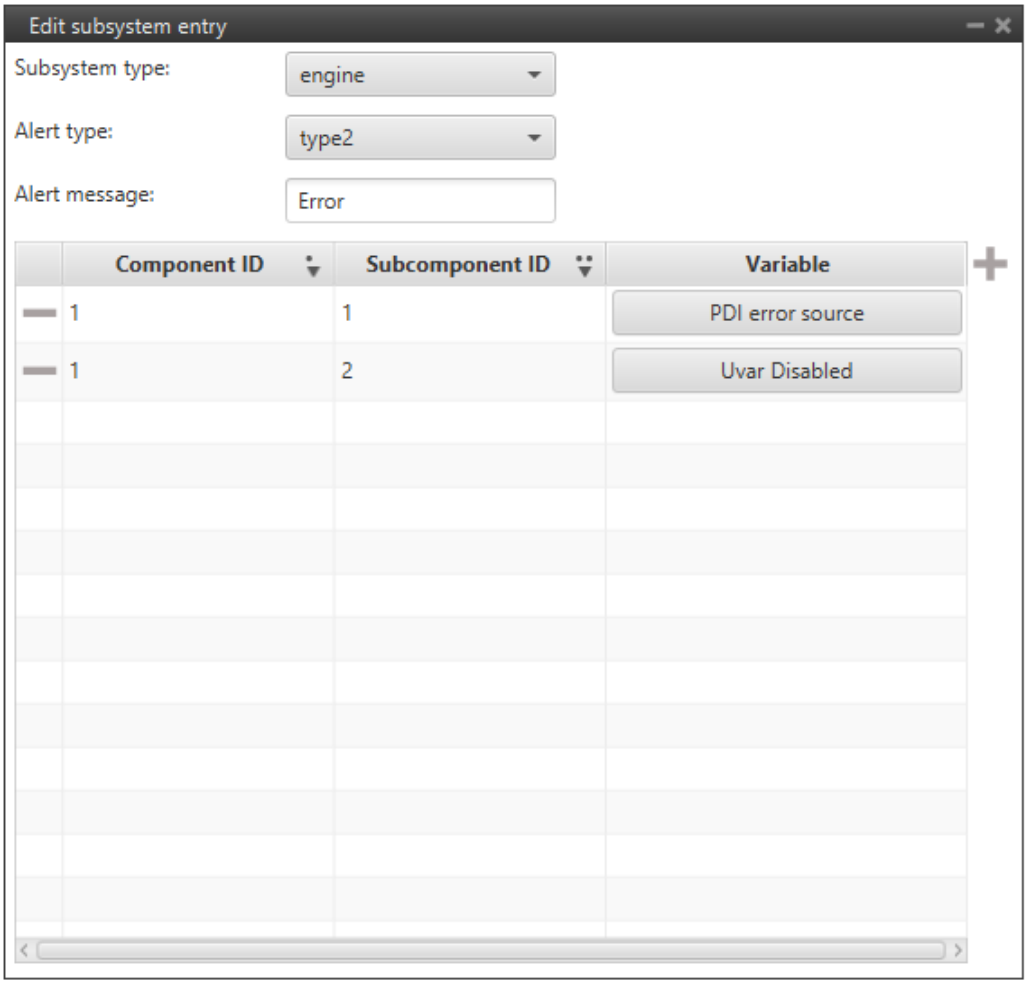


Edit subsystem

This window is used to create or modify the mapping between internal system errors and the standardized STANAG 4586 subsystem alerts. It ensures that when a specific component fails, the GCS receives a clear and categorized notification.

- **Subsystem type**: Defines the category of the hardware being monitored (e.g., engine, mechanical, electrical).
- **Alert type**: Specifies the severity or classification of the alert. This usually dictates how the GCS displays the warning.
- **Alert message**: A text string that will be displayed on the GCS when the alert is triggered.


Click the ➕ icon, available variables can be viewed for selection.

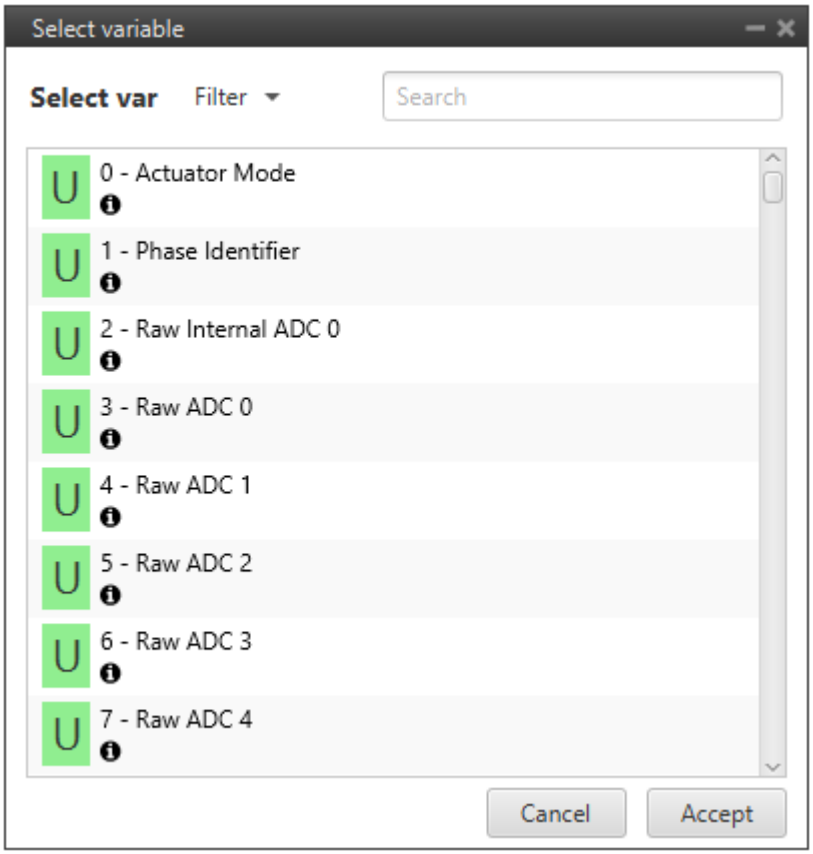

Select Variable

STANAG 4586 Inertial States configuration

It maps data from the IMU and the Orientation and Directional Unit into the standard format for GCS visualization.

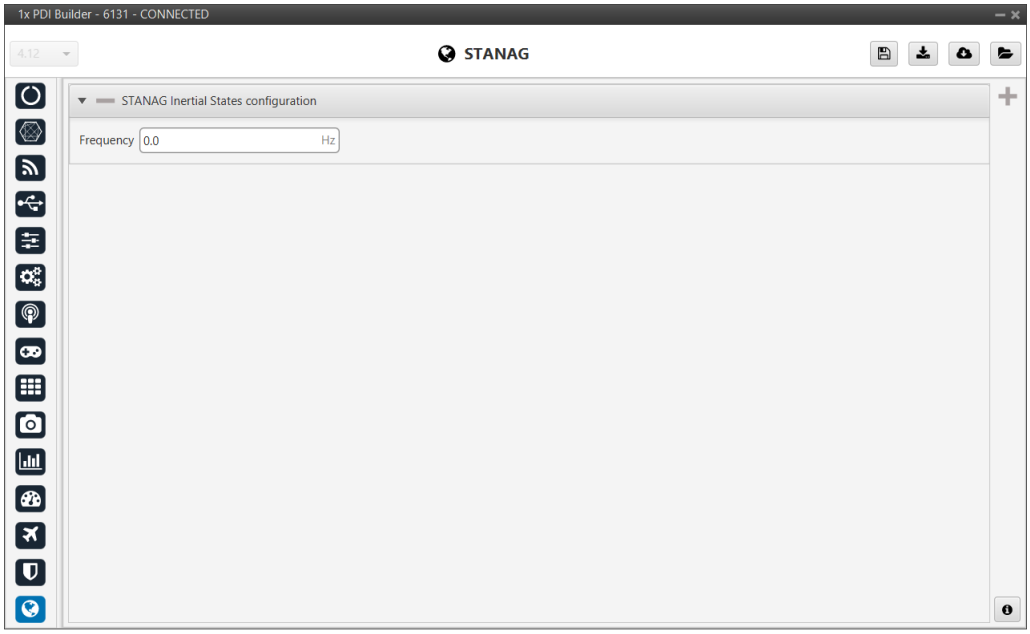


STANAG 4586 - Inertial States configuration

- **Frequency**: This field allows the user to set the update rate, measured in Hertz (cycles per second), for the transmission of inertial state messages.


STANAG 4586 Data link configuration

Settings related to signal quality and network parameters of the data connection (Datalink), essential for monitoring signal stability.

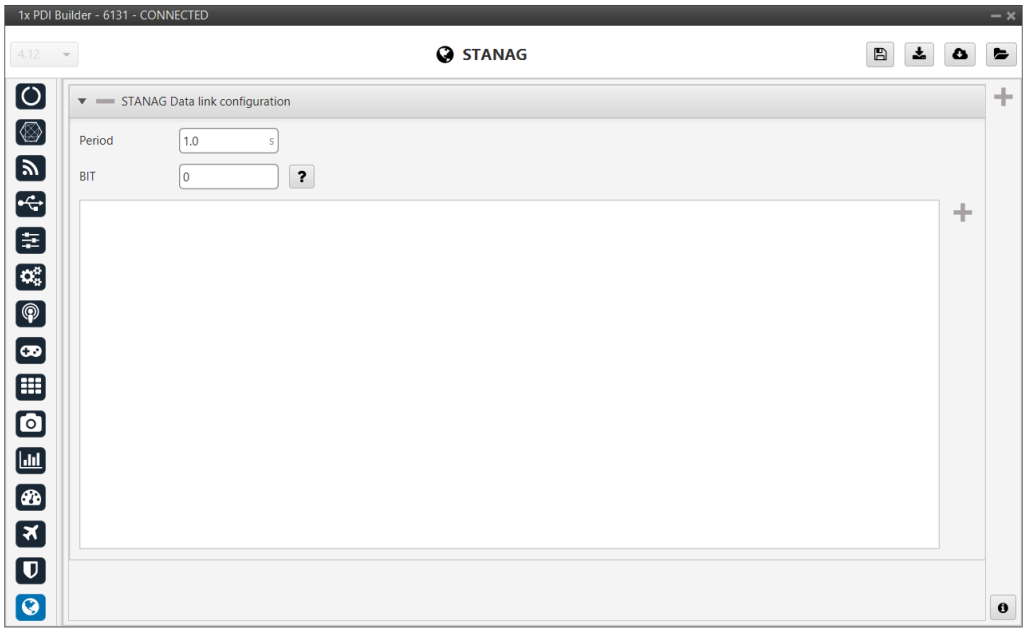


STANAG 4586 - Data link configuration

- **Period**: This field defines the time interval, measured in seconds, between each transmission of the data link status message.
- **BIT**: This numerical field is used to assign or monitor the status of the Built-In Test associated with the data link hardware. It identifies specific internal test routines that verify if the communication hardware is functioning correctly.
  Click the ? icon to display additional information.

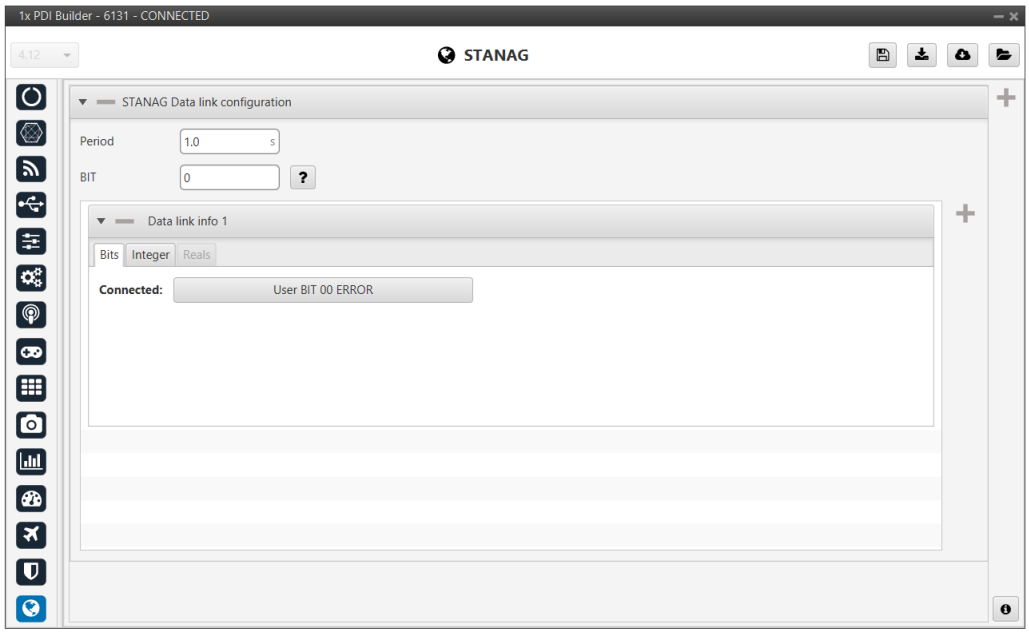

STANAG 4586 - Data link configuration

- **Connected**: This field defines the internal system variable that indicates the current connectivity status of the data link.

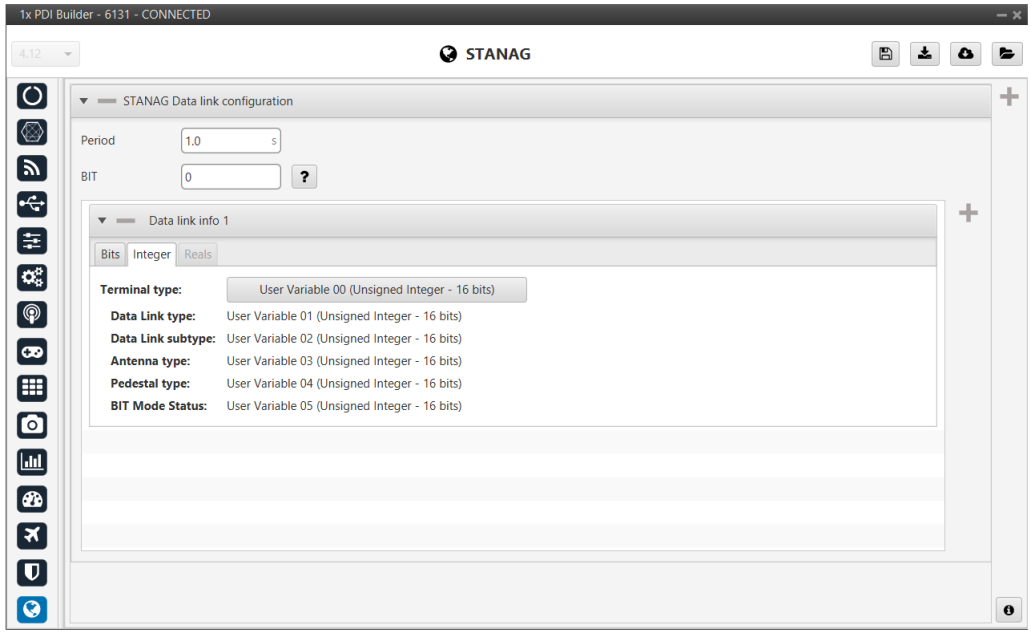

STANAG 4586 - Data link configuration


Terminal type: Maps the variable that identifies the specific model or class of the communication terminal.

- **Data Link type**: Defines the primary technology of the link.
- **Data Link subtype**: Provides further classification for the link type.
- **Antenna type**: Identifies the hardware configuration of the antenna.

- **Pedestal type**: Maps the variable for the antenna tracking system or gimbal base, if applicable.
- **BIT Mode Status**: Tracks the current mode of the Built-In Test system.

Custom STANAG 4586 message

Allows for the definition of personalized data packets that do not fall under standard categories while maintaining the STANAG 4586 protocol structure.

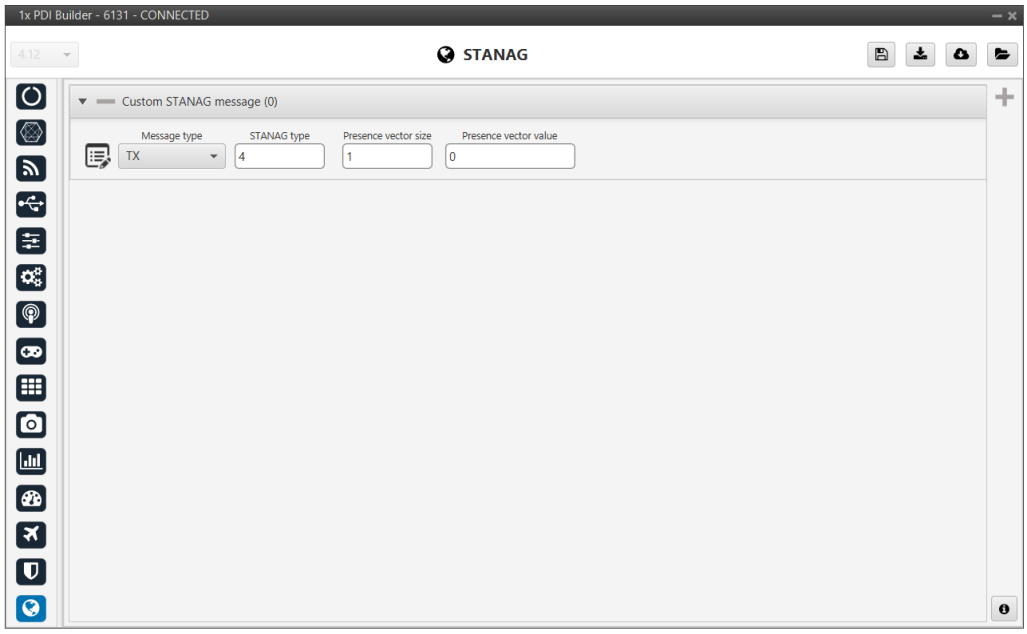

STANAG 4586 - Custom message

- **Message type**: Defines the communication direction.
  - **TX (Transmit)**: The vehicle sends this message to the GCS.
  - **RX (Receive)**: The vehicle expects to receive this message from the GCS.
- **STANAG 4586 type**: This numerical identifier specifies the unique ID assigned to the custom message within the protocol. This ID must match on both the aircraft and the Ground Control Station to ensure correct packet identification.
- **Presence vector size**: Defines the size of the "presence vector," which tells the system which optional fields within the custom message are actually being used in a given transmission.

Presence vector value: Sets the default value for the presence vector.

Integration examples

In this section, a series of examples will be presented so that the user knows how to perform **certain customizations in the 1x PDI Builder**. In addition, some examples of integration between the **Autopilot 1x and external devices** are presented.


AP communication with PC

Veronte Autopilot 1x can be connected to a computer via serial interface. The configuration for the connections is already set by default in **1x PDI Builder**.

However, users should check that this configuration has not been modified to ensure a correct communication via both ways in case one of them is lost. For this:

Go to Input/Output menu → **I/O Setup panel**. Each **RS232 and RS485 Producers must be bidirectionally connected to a Commgr port**:

> **Important**
>
> Users should also check that the Commgr ports to which RS-232 and serial ports are connected are **not routed**. For more information on Routing, see Ports - Communications section of this manual.

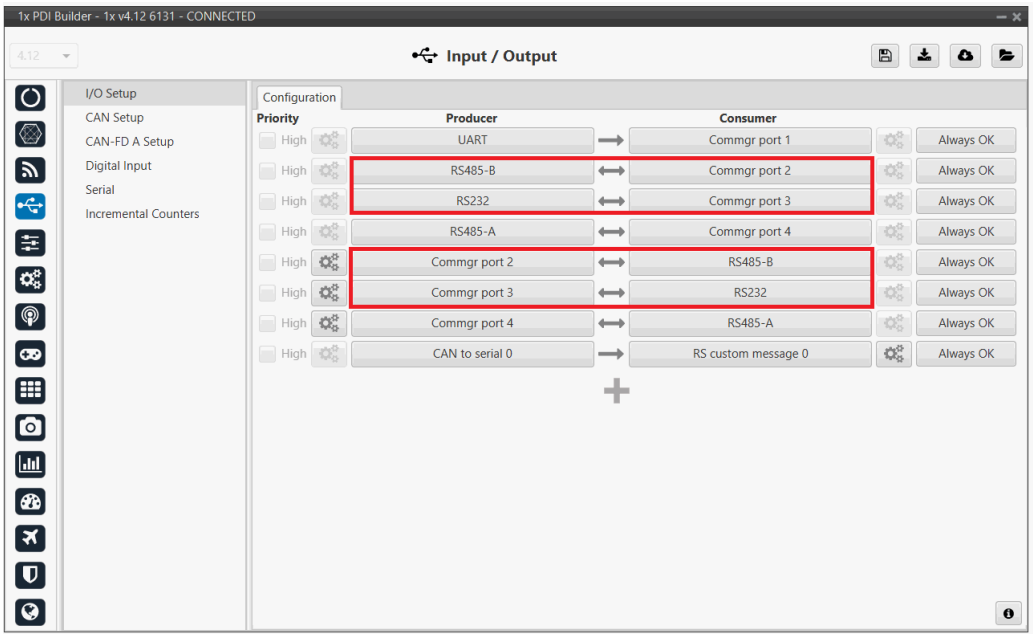

RS232/RS485 ↔ Commgr port

ArcTrim Button


The ArcTrim button allows the user to trim the stick signal directly from the stick position, before the operation, by simply clicking on it. In addition, this button is considered as an '**action button**' that can be embedded **in the Veronte Panel**.

To do this, the following steps should be followed:

1. Go to **Block Programs menu**.
    - Create a program to make the necessary connection to the Arc Trim block.

      Usually the user has a **Stick program** where the blocks that are related to the stick are implemented.
    - Add the Arc Trim block and connect the input and output variables to it.

      Usually the **input** variables are **Stick Input u0-u3** and the **output** variables **Stick Input d0-d3**.
    - Finally, **enable the block to be commandeded** by simply clicking on the  icon.

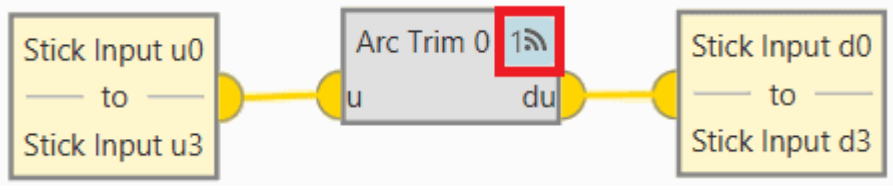


ArcTrim Button - Block

2. Go to **Automations menu** → create a **New automation** → go to **Events**.


   Select the **Button** option and choose the desired icon for this button.

   In addition, it is recommended to activate the **Confirmation** checkbox, to avoid trimming the stick by mistake.

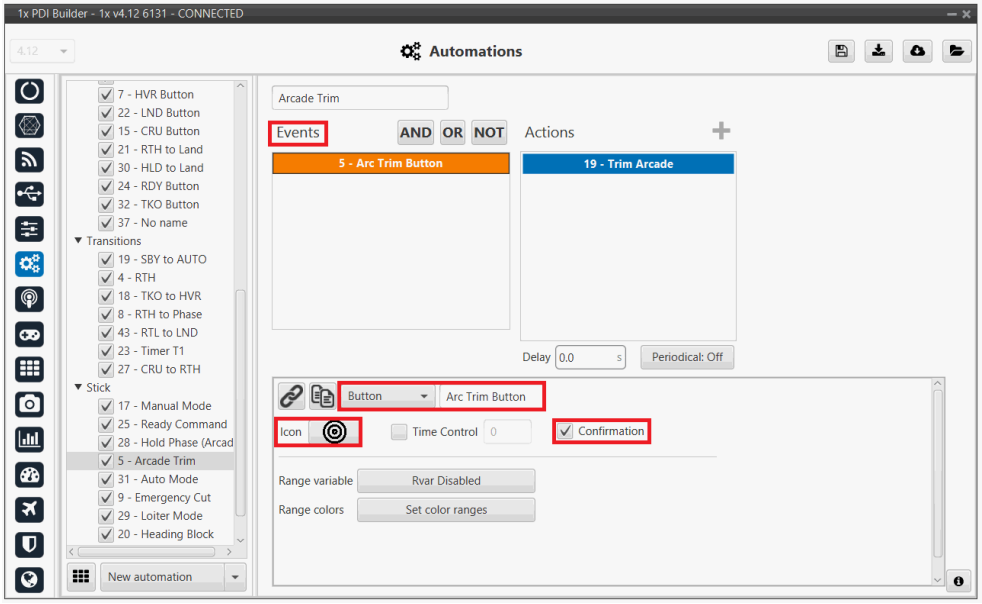

ArcTrim Button - Events


3. In the created automation, go to **Actions**.
   - Add the **Command block** action.
   - Select **ArcTrim** block to command and choose the commandable **Id**.
   - Finally, it is recommended to activate both checkboxes:

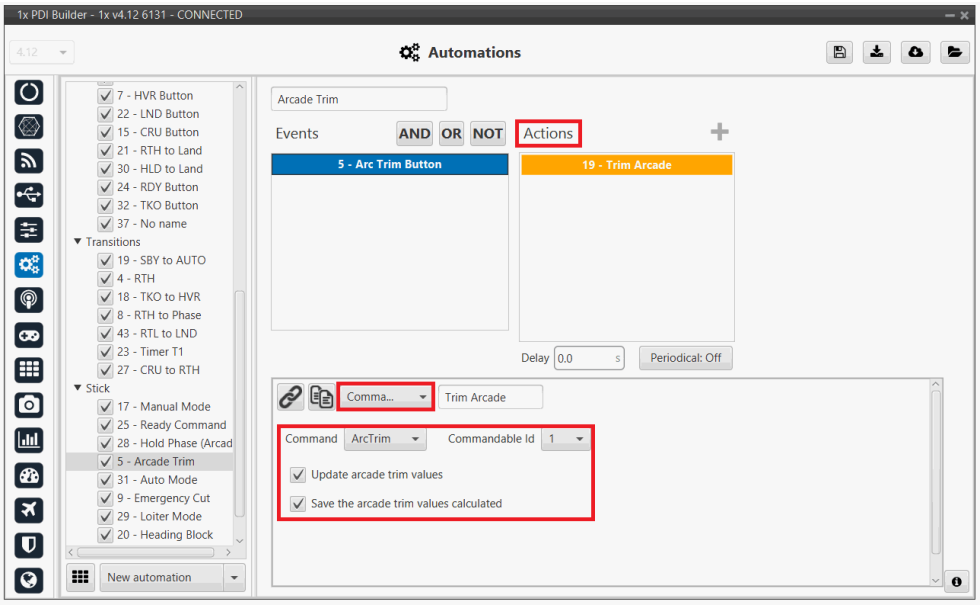

ArcTrim Button - Actions


4. In **Veronte Ops**, this button will appear embedded in the **Veronte Panel**.

> **Note**
> This action button will only appear on the Veronte Panel if the action buttons have been enabled to be shown on it. For more information on this, see Veronte Panel - Main widgets section on the **Veronte Ops** user manual.

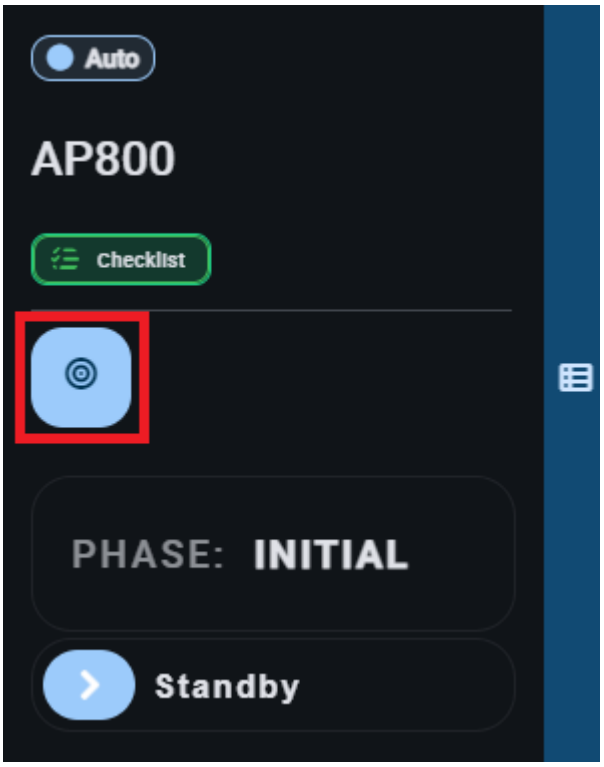

ArcTrim Button - Veronte Panel

When clicking on it, the following confirmation message will be displayed (as the confirmation checkbox has been activated in the automation):

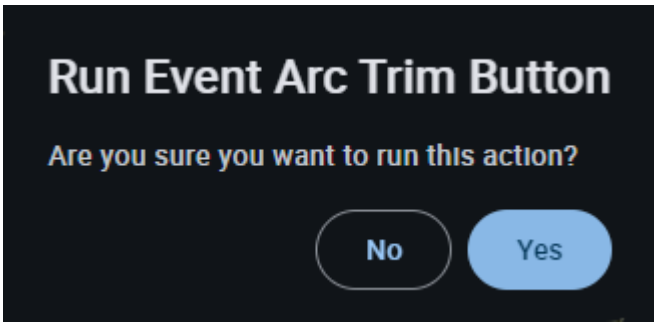

ArcTrim Button - Confirmation message


Now, the stick is trimmed.

CAN communication

Here are described the steps to be followed in order to correctly receive and transmit **CAN messages**, both via CAN and serial interfaces.

CAN messages transmission

This section summarizes the configuration to be carried out **to send CAN streams over a CAN bus**.

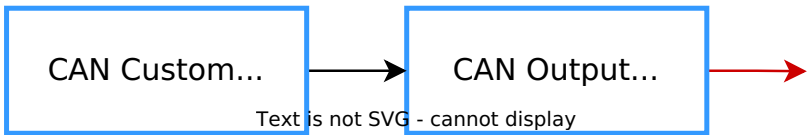


CAN messages transmission diagram

1. Go to Input/Output menu → CAN Setup panel → **Custom message 0 tab**.

   Select the fields to send in **TX** or TX Ini, as it is a Producer.

   More information on the configuration of CAN messages can be found in the TX/TX Ini Messages (Custom Messages) - Input/Output section of this manual.


   For example, a CAN message set to ID 12:

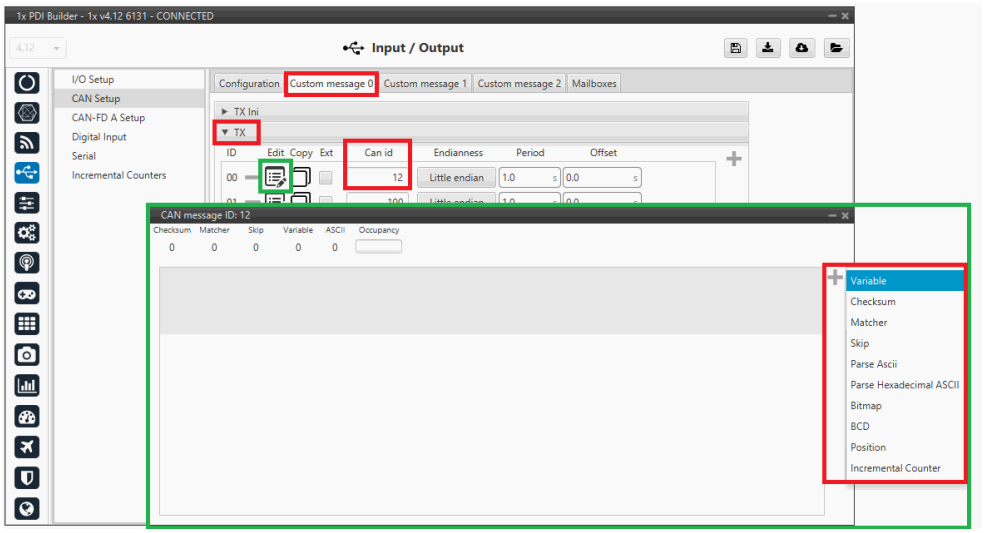

CAN messages transmission - Custom message configuration

2. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect **CAN custom message 0** producer (as the message has been configured in the Custom Message **0** tab) to an **Output filter** as follows:

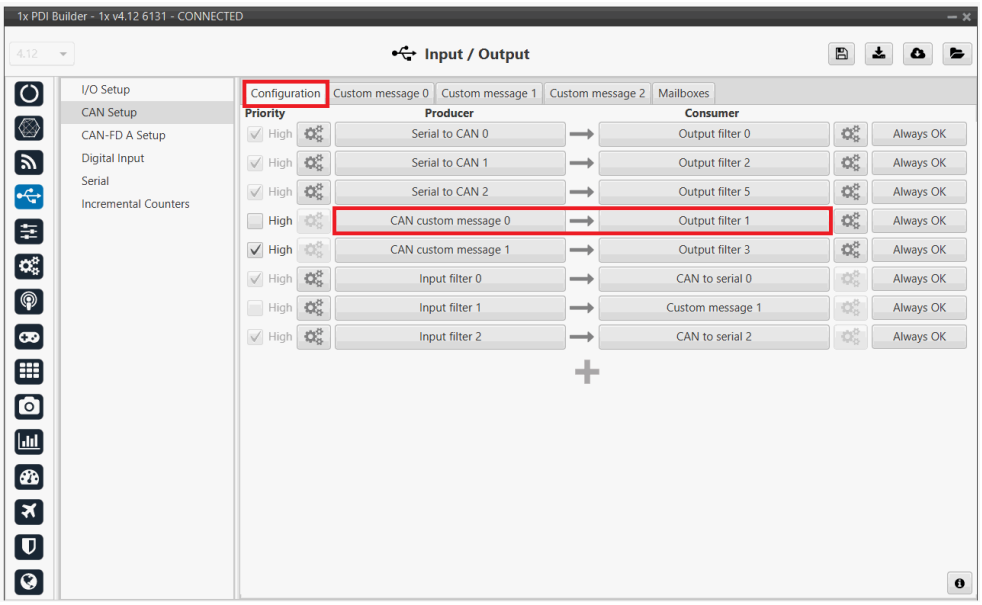

CAN messages transmission - CAN Setup configuration

> ⚠ **Warning**
>
> Remember that it is necessary to have **at least 1 free mailbox for TX messages**.

CAN messages reception


This section summarizes the configuration to be carried out **to receive CAN streams over a CAN bus**.



CAN messages reception diagram


1. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.

   Configure the mailbox to receive a message with the appropiate **ID** (in this example ID 28 has been configured):

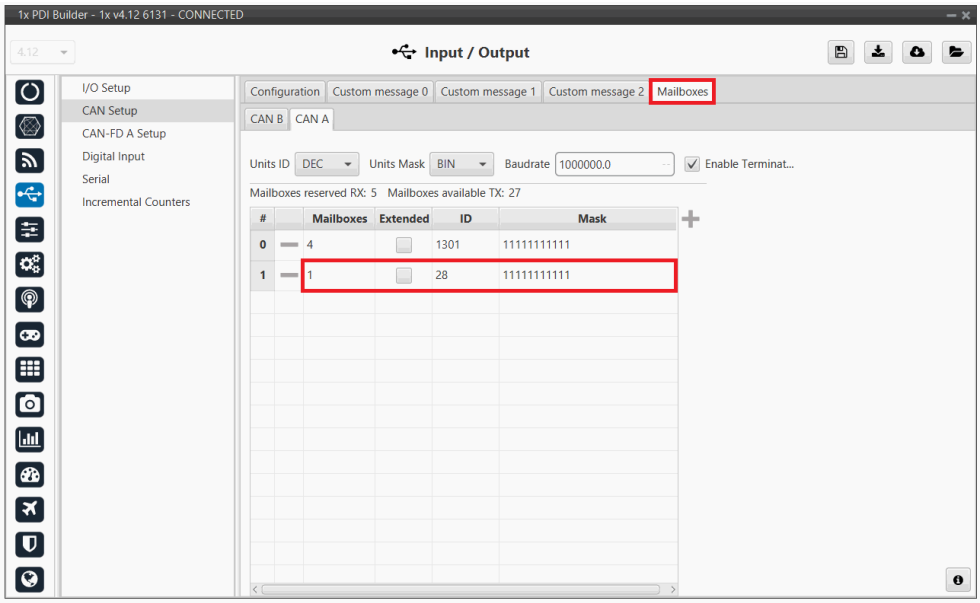


CAN messages reception - Mailboxes configuration

2. Go to Input/Output menu → CAN Setup panel → **Configuration tab**. Connect an **Input filter** with the **right CAN ID** to a **Custom message consumer**:

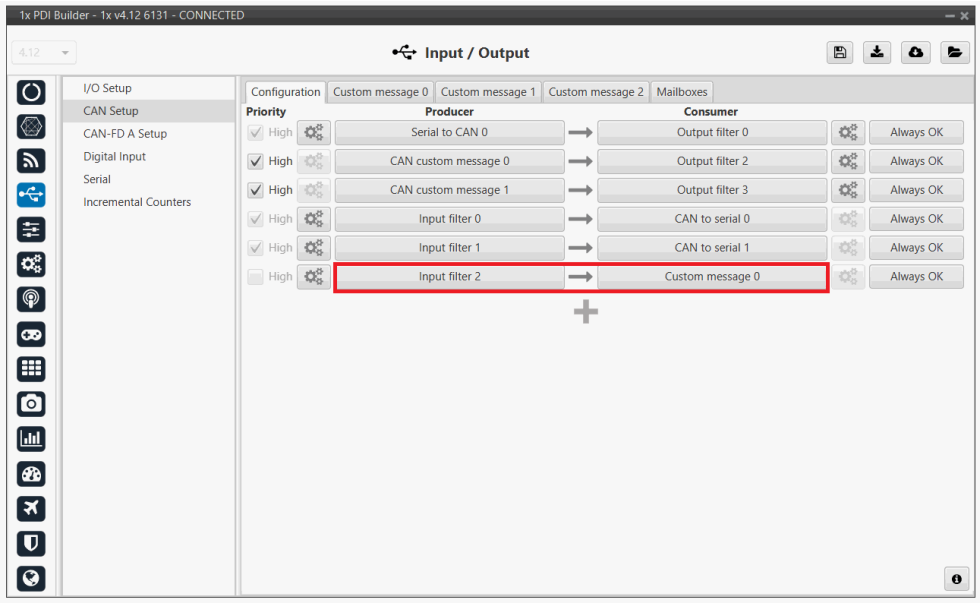


CAN messages reception - CAN Setup configuration

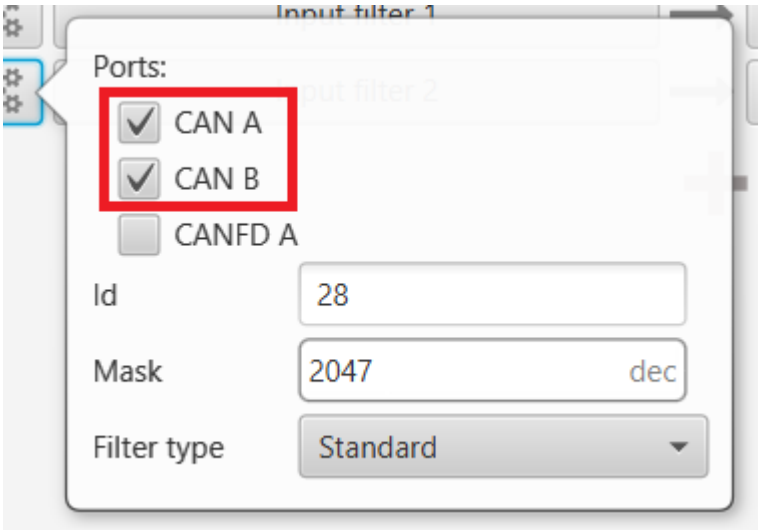

CAN messages reception - Input filter configuration

3. Go to Input/Output menu → CAN Setup panel → **Custom message 0 tab** (as Custom Message **0** has been selected as consumer).
   Configure the message reading as desired in **RX** by setting the correct CAN ID.
   The different options and parameters to be configured are explained in the RX Messages (Custom Messages) - Input/Output section of this manual.

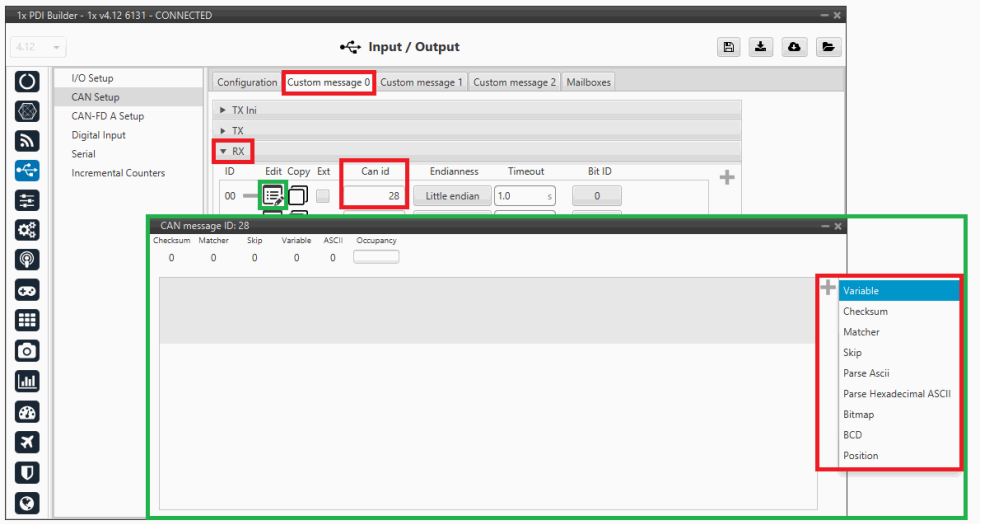


CAN messages reception - Custom message configuration

CAN messages transmission via serial

This section summarizes the configuration to be carried out **to send CAN streams over a serial bus**.

> **Note**
>
> For sending CAN streams over a serial bus, a **CAN wrapper** port is needed. For further details of this port, please consult the CAN wrapper/ CAN unwrapper - I/O Setup section of the present manual.




CAN messages transmission via serial diagram

1. Go to Input/Output menu → CAN Setup panel → **Custom message 0 tab**.

   > **Important**
   >
   > The index of the **Custom message tab** must match the index of the **CAN custom message producer** to configure. In this example, tab **0** is selected.


   Select the fields to send in **TX** or TX Ini, as it is for transmission.
   More information on the configuration of CAN messages can be found in the TX/TX Ini Messages (Custom Messages) - Input/Output section of this manual.
   For example, a CAN message set to ID 12:

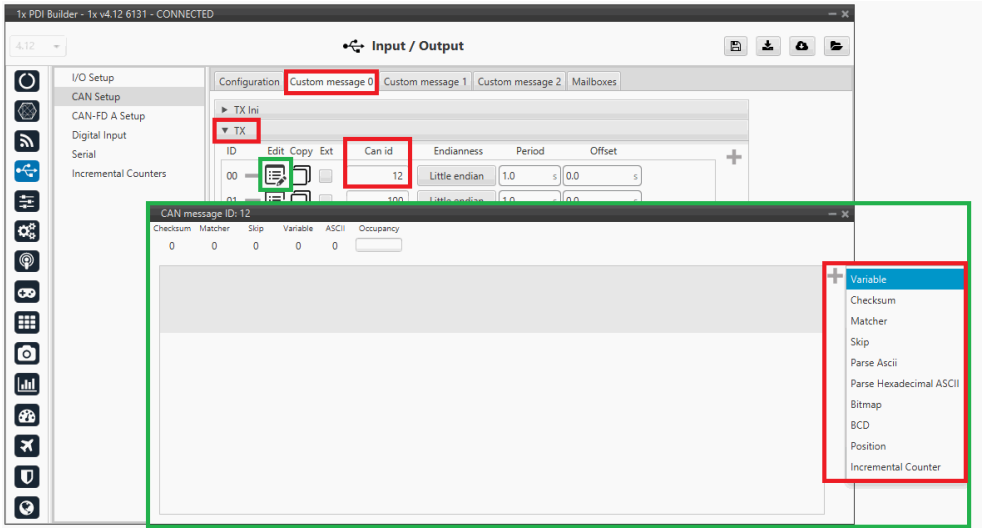

CAN messages transmission via serial - Custom message configuration

2. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect **CAN custom message 0** producer (as the message has been configured in the Custom message **0** tab) to a **CAN wrapper** consumer as follows:

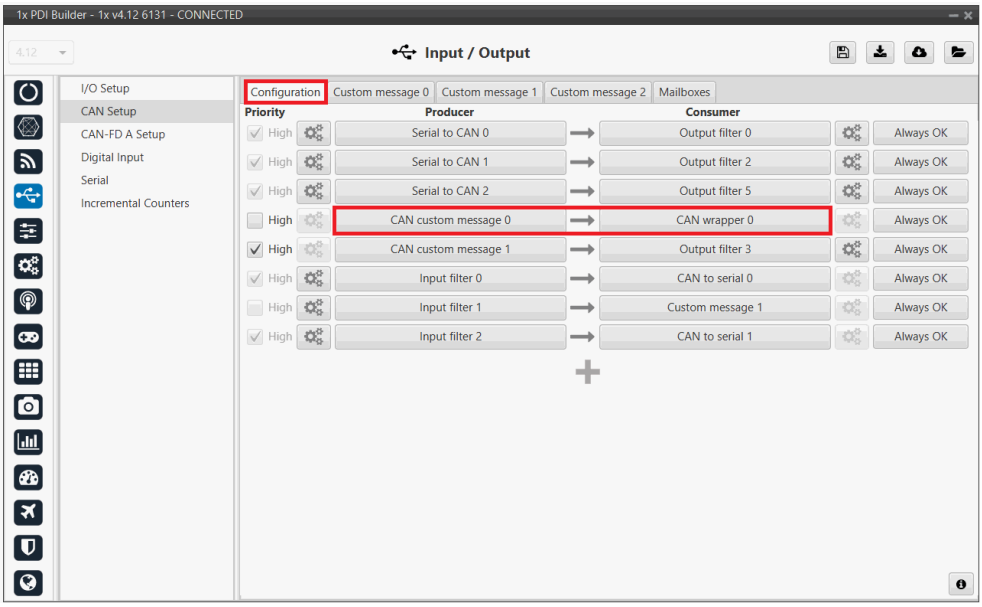


CAN messages transmission via serial - CAN Setup configuration

3. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **CAN wrapper 0** producer to a **RS232** or **RS485** consumer as shown below.

> **Important**
>
> The **index of the CAN wrapper producer** must match **the index of the CAN wrapper consumer** configured in the previous step.

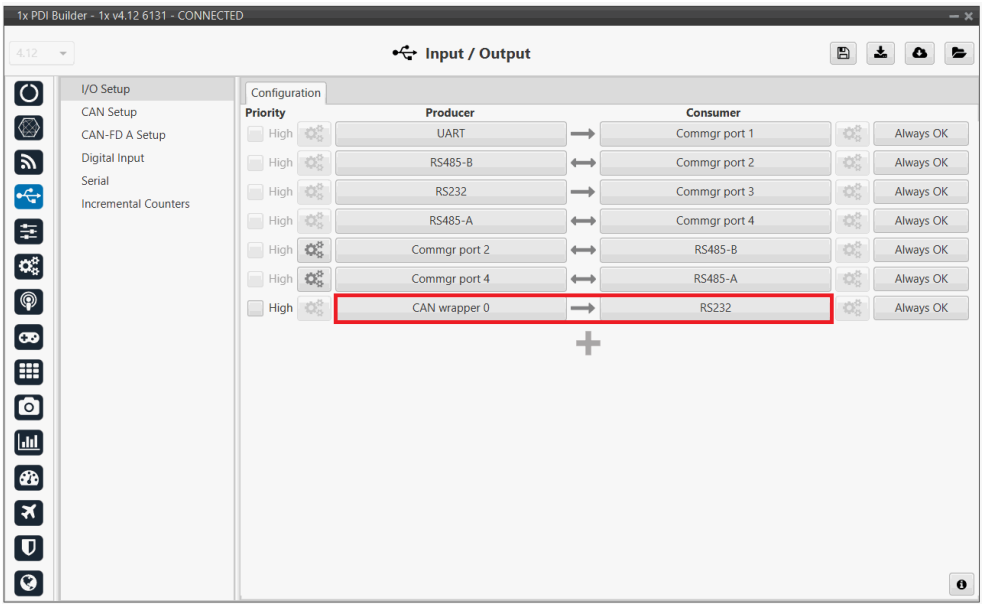


CAN messages transmission via serial - I/O Setup configuration

> **⚠ Warning**
>
> Remember that it is necessary to have **at least 1 free mailbox for TX messages**.

CAN messages reception via serial

This section summarizes the configuration to be carried out **to receive CAN streams over a serial bus**.


> **ⓘ Note**
>
> For receiving CAN streams over a serial bus, a **CAN unwrapper** port is needed. For further details of this port, please consult the CAN wrapper/ CAN unwrapper - I/O Setup section of the present manual.



CAN messages reception via serial diagram

1. Go to Input/Output menu → **I/O Setup panel**.


   Connect a **RS232/RS485** producer to a **CAN unwrapper** consumer.

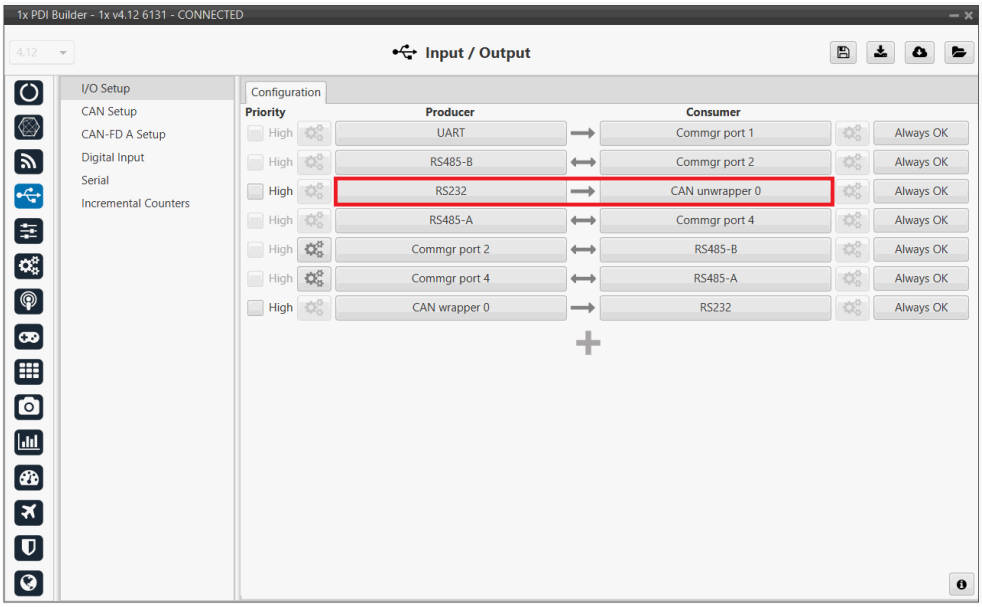

CAN messages reception via serial - I/O Setup configuration

2. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.

   Configure the mailbox to receive a message with the appropiate **ID** (in this example ID 28 has been configured):

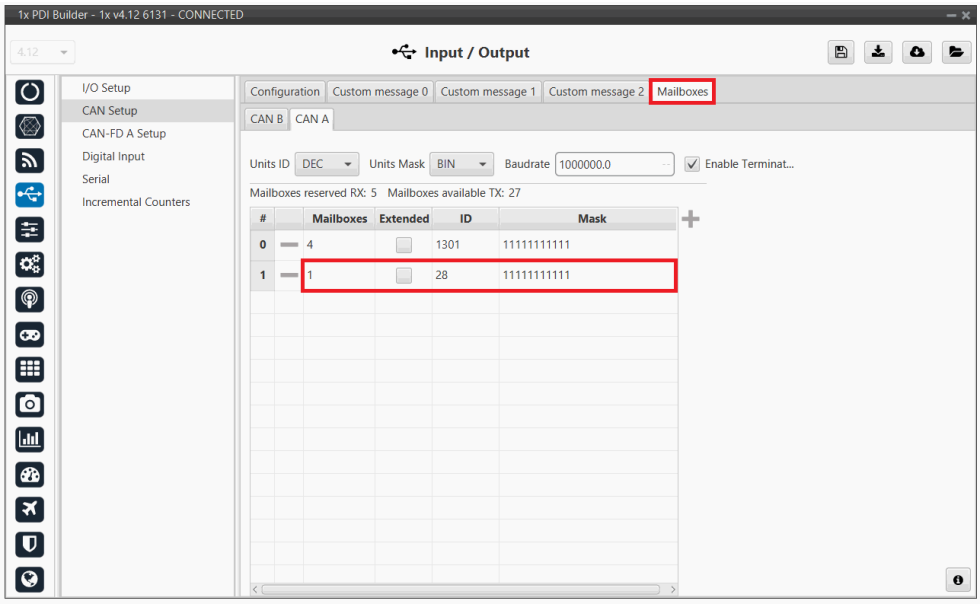


CAN messages reception via serial - Mailboxes configuration

3. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect a **CAN unwrapper** producer to a **Custom message** consumer. In this example, **Custom message 0** consumer is selected.

> **Important**
>
> The **index of the CAN unwrapper producer** must match **the index of the CAN unwrapper consumer** configured in the previous step.

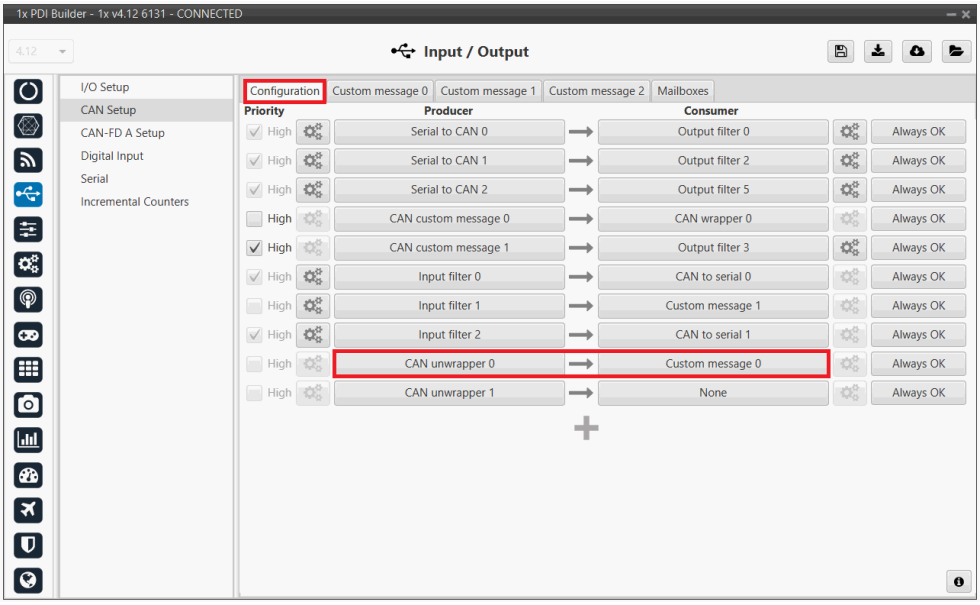


CAN messages reception via serial - CAN Setup configuration

4. Go to Input/Output menu → CAN Setup panel → **Custom message 0 tab**.

> **Important**
>
> The index of the **Custom message tab** must match the index of the **Custom message consumer** to configure. In this example, tab **0** is selected.

Configure the message reading as desired in **RX** by setting the correct CAN ID.

The different options and parameters to be configured are explained in the RX Messages (Custom Messages) - Input/Output section of this manual.

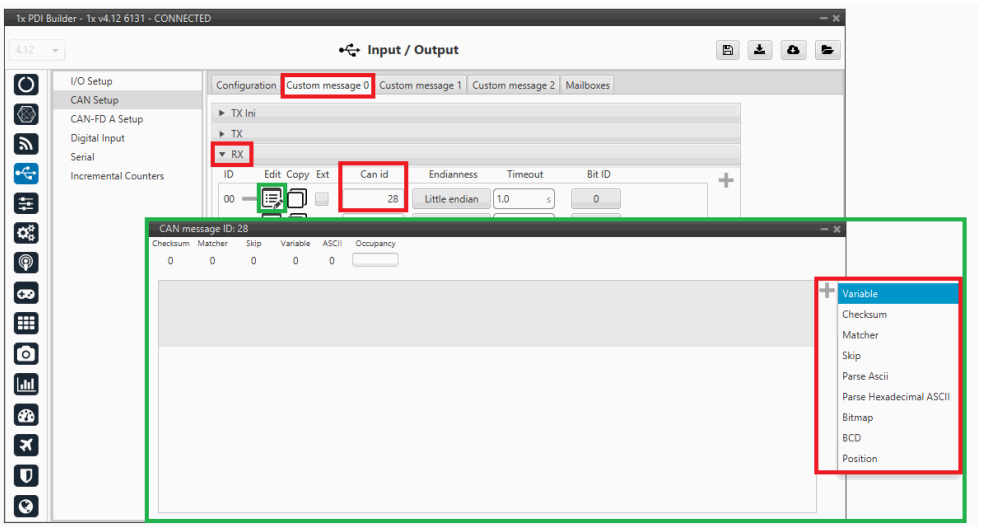


CAN messages reception via serial - Custom message configuration

Communication between Veronte Autopilots 1x

To establish a proper communication between the ground and air units, it is necessary to configure the **ports** menu of the **ground unit**.


1. Go to Communications menu → **Ports panel** (for more information about this, see Ports - Communications section of this manual).
2. Set a routing of **Address 2 (App)** (address by which Autopilots 1x ground and air units **communicates with all Veronte applications**) through the port to which the **RS-232** is connected (to allow connection to the PC), in this case it is **PORT 0**.

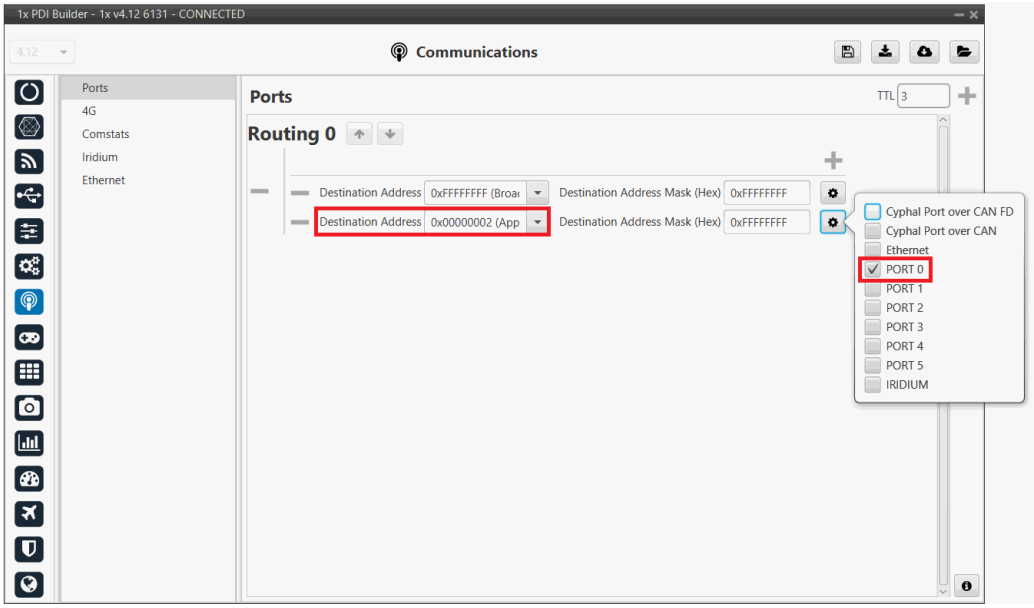

1x ground unit - Ports configuration

This way, any messages that are received through a Commgr Port with **Address 2 (App)**, will be re-routed through **Port 0** (RS-232) and received by **Veronte Link/Ops** software, including any messages generated by 1x ground unit itself.

The following diagram summarizes the connection:

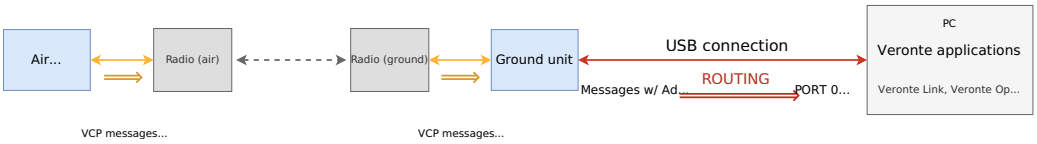

Communication diagram

> **⚠ Caution**
>
> If routing of Address 2 (APP) is not configured on the Ground unit, VCP messages arriving to it with a Source other than its own (in this case the source is the Air unit) will be ignored.


Data transmission between Veronte Autopilots 1x

To enable the data transmission between the **ground and air units**, the **telemetry** and **sniffer** menus must be configured, respectively.

A simple example of use between a **ground unit** and an **air unit** is shown below:

In the **1x ground unit**:


1. Go to Telemetry menu → Telemetry panel → **Data to VOpps tab** (for more information about this, see Data vectors - Telemetry section of this manual).
2. Add the variables: Absolute: UAV position, Yaw, Pitch and Roll.
3. Set a **Frequency**, it is recommended to set it to **10 Hz**.
4. On **Address**, point to the **1x air unit** (it is needed to have both units connected through the radio in order to be able to see them on the menu).

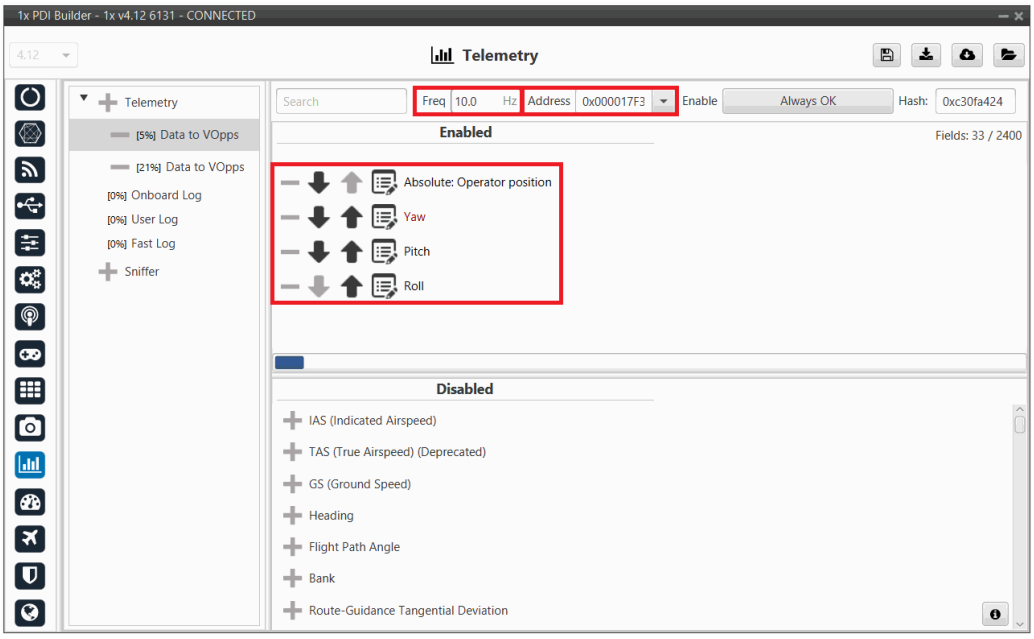

1x ground unit - Telemetry

For the **1x air unit** :

1. Go to Telemetry menu → **Sniffer panel** (for more information about this, see Sniffer - Telemetry section of this manual).
2. Add a new Sniffer.
3. Configure the **same variables** (keeping the **same order**) than in the ground unit.
4. On **Address**, point to the **1x ground unit**.
5. In the gear next to it, configure the 4 incoming variables as System Variables: assign UAV Position to **Moving Object** and the 3 variables from attitude to 3 different **User Variables** (keeping the **same order** as well).

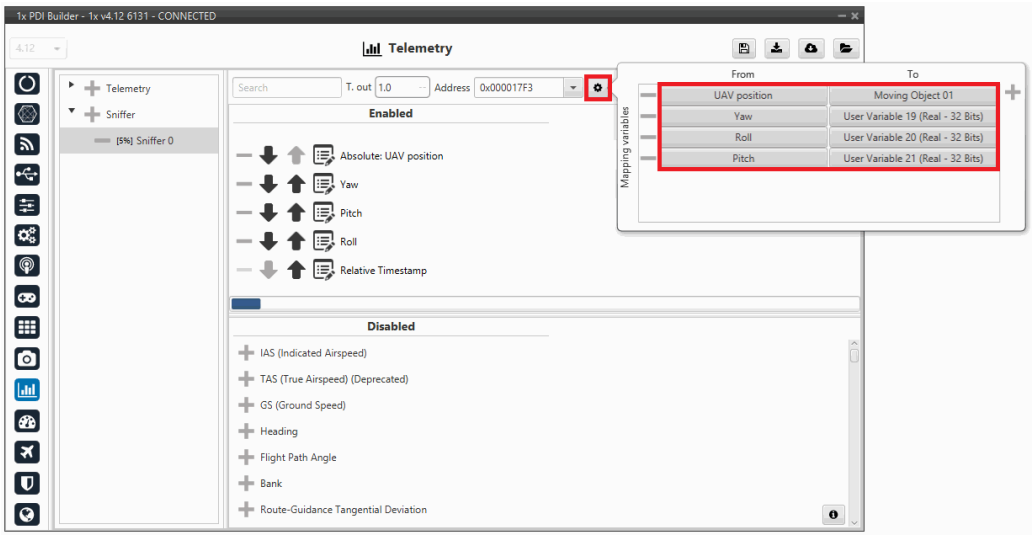


1x air unit - Sniffer

Dynamic addresses for telemetry vectors

In cases where users need to use more than one telemetry vector for Veronte data, they would need to send telemetry through dynamic addresses of Veronte applications. Consult the range of the dynamic addresses that can be used in the List of Addresses - Lists of interest section of the **1x Software Manual**.


In this example, we will send telemetry through **UART** and through **SATCOM**. For this:

1. Go to Telemetry menu → Telemetry panel → **Data link to VOpps tab** (for more information about this, see Data vectors - Telemetry section of this manual).
    - Change the address to the **255** (0x000000FF in hexadecimal) **dynamic address** (this can be the dynamic address of the user's choice).
    - Add a second data vector by clicking ➕ and set it to the **256** (0x00000100 in hexadecimal) **dynamic address** (this can be the dynamic address of the user's choice).

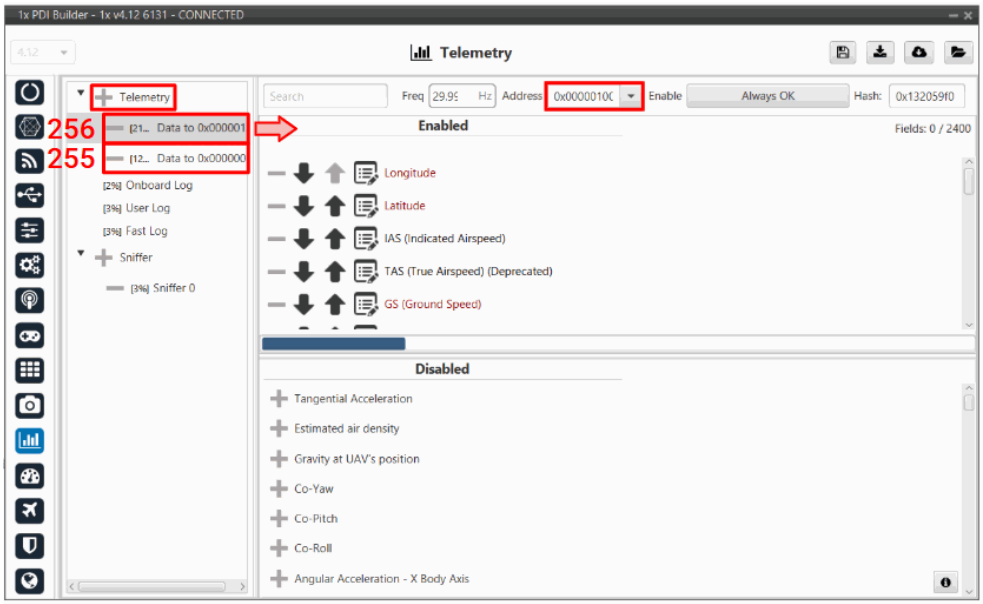

Dynamic addresses for telemetry vectors - Telemetry configuration


2. Go to Input/Output menu → **I/O Setup panel**.
   - Connect the **UART producer** to a **COM manager port** consumer, in this example Commgr port **1** is chosen.
   - Connect the **RS232 producer** (since in this example SATCOM is connected via RS232 to Autopilot 1x) to another **COM manager port** consumer, in this example Commgr port **3** has been selected.

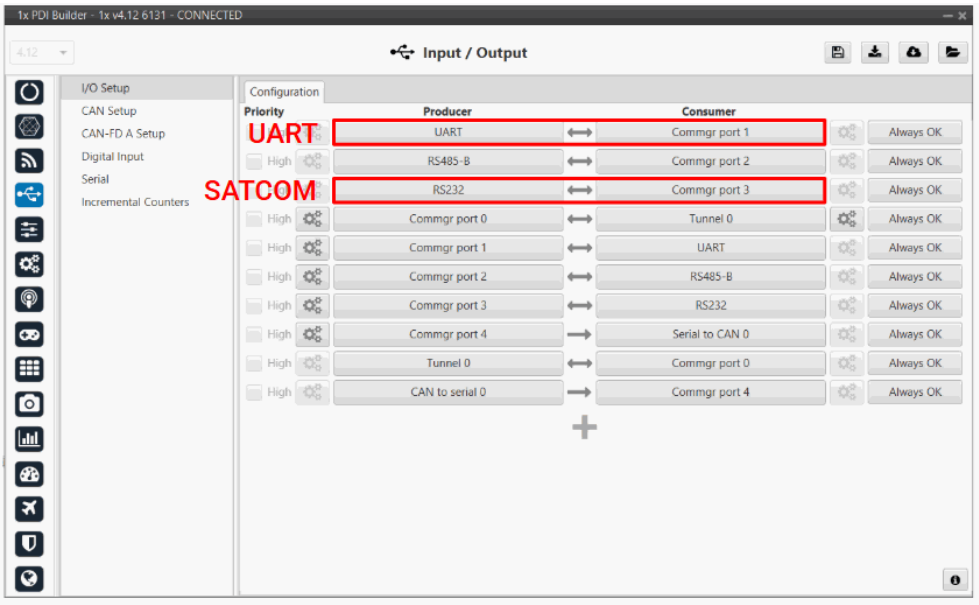

Dynamic addresses for telemetry vectors - I/O Setup configuration

3. Go to Communications menu → **Ports panel**.
   - Add a routing for the dymamic address previously configured for UART telemetry, in this case address **255** to **PORT 1** (UART connection).

- Add another routing for the dymamic address previously configured for SATCOM telemetry, in this case address **256** to **PORT 3** (SATCOM connection).

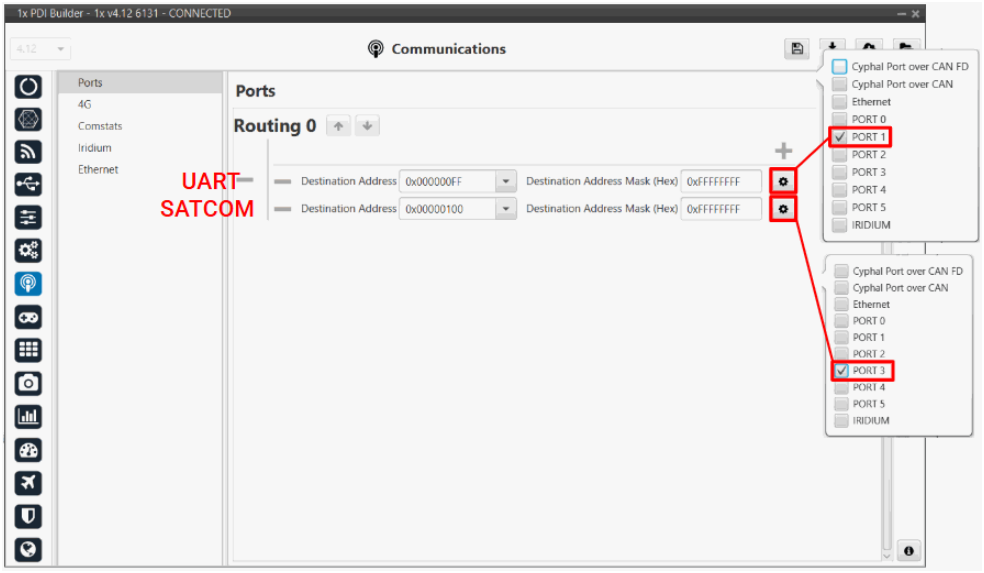

Dynamic addresses for telemetry vectors - Ports configuration

Therefore, with these configurations we get that any message received with address **255** to any COM mananger port, will be redirected to UART (PORT 1). And, in the same way, we get that any message received with address **256** to any COM manager port, will be redirected to SATCOM (PORT 3).


> **Important**
>
> If you want to send **only** the telemetry vector (the vector configured with the specific address) through the port, you must also remove the corresponding port from the **Forward** column. Otherwise, for example in this case, everything will be sent through PORT 1 except the messages with address 256, which will be sent through PORT 3, and vice versa.

Flare and Decrab phase configuration

As flare and decrab guidance are not included in the landing algorithm, since the decrab is control dependent (yaw must be aligned with the runway

direction), the following shows how to implement this guidance in a generic fixed wing configuration:

1. First, it can be useful to create a program that computes the altitude above the touchpoint, the lateral error over the desired route and the heading error. If all conditions met, the flare phase is triggered:

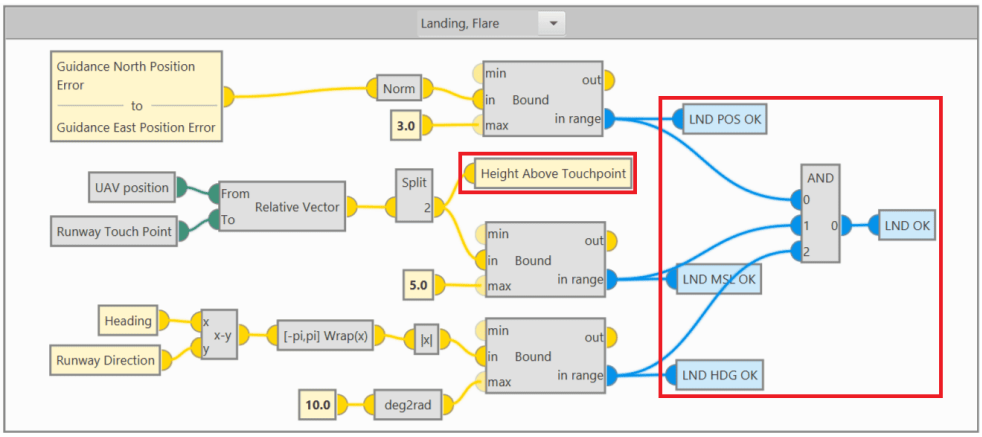


Flare and Decrab phase - Auxiliary program

2. **Flare and Decrab guidance definition**

   In the **Guidance program** (where the guidances for all phases are defined), add the **Flare phase** to the Phase Switch block.

   Then, the **flare and decrab guidance** must be built as follows:


   - The **desired vertical speed** is overwritten to be a function of the height above the runway. In this case the height is calculated in an auxiliary program (**Height Above Touchpoint** variable calculated in step 1), but the AGL could be used.
   - The **desired yaw** is overwritten directly by the **runway direction**.
   - The **desired roll** is overwritten to 0º.
   - The **desired IAS** is overwritten to a speed slightly above the stall speed, in this example 15 m/s.

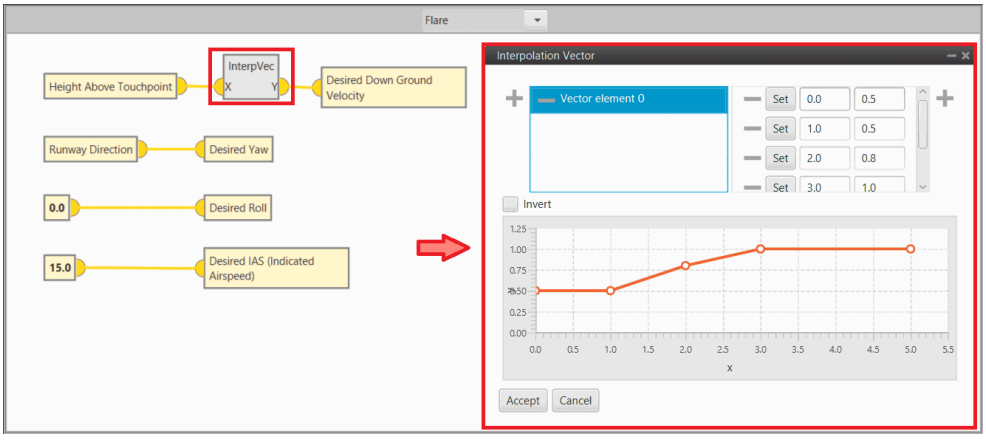

Flare and Decrab phase - Flare and decrab guidance definition

3. **Pitching control**

   The **desired vertical speed** is used for **pitch control** as shown below:

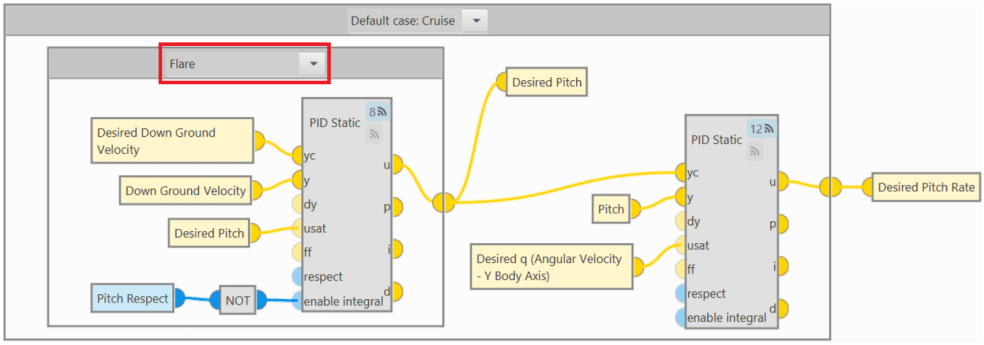


Flare and Decrab phase - Pitching control

4. **Thrusting control**

   The **throttle** is used to maintain the IAS (slightly above stall) and when a height above touchpoint of 1 m is reached, the motor is cut off.


   Again, a user variable is used here (**Height Above Touchpoint** variable calculated in step 1), but the AGL could be used:

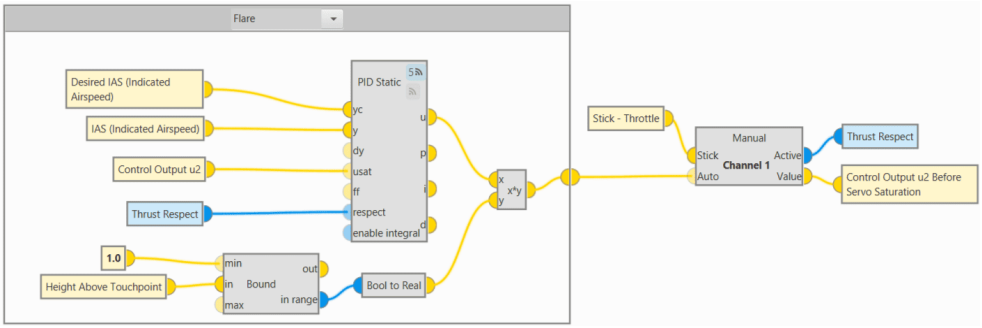

Flare and Decrab phase - Thrusting control

5. **Rolling control**


   For the **roll**, simply try to maintain the desired roll (0º):

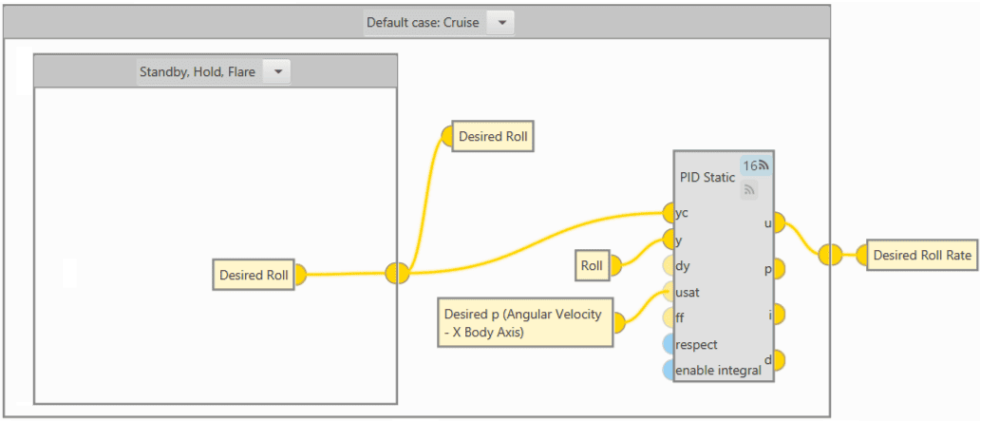

Flare and Decrab phase - Rolling control

6. **Yawing control**

   The **yaw control** (rudder) is based on the **desired yaw**:

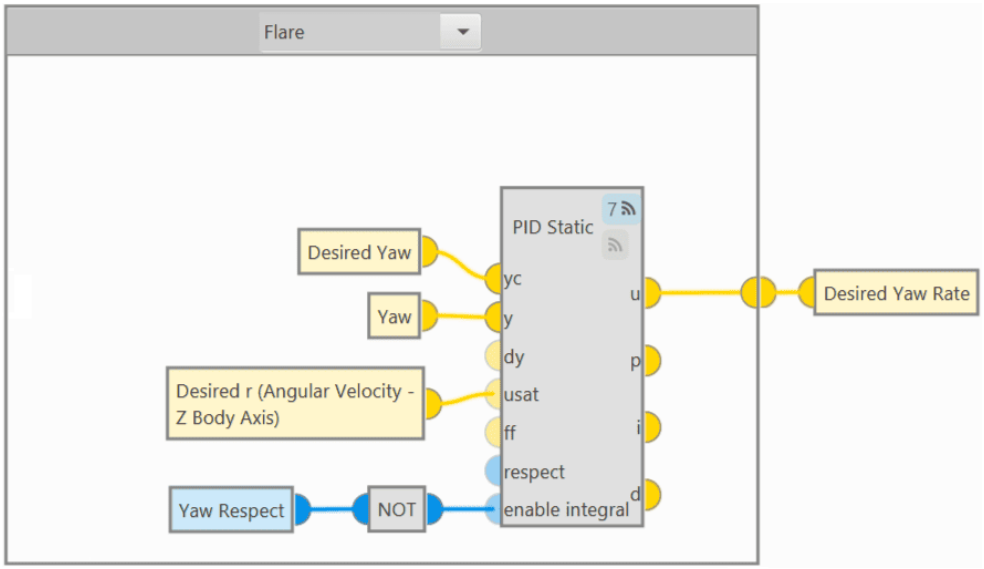


Flare and Decrab phase - Yawing control


> **Important**
>
> This algorithm requires a good yaw estimation if users want to have **Decrab**, so **magnetometer** or **GNSS Compass** is required.

Flare phase configuration

However, for a **Flare** phase **without Decrab**, the **yaw** control should be based on **heading** instead of being based on yaw. To do so, the **Guidance and Yawing programs** must look as shown below:

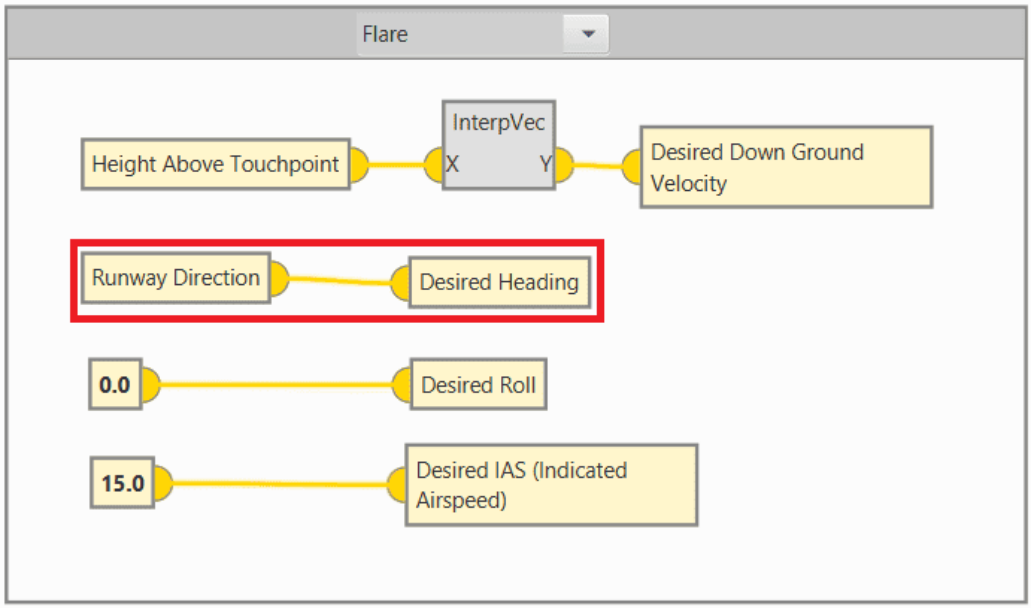

Flare phase - Flare guidance definition

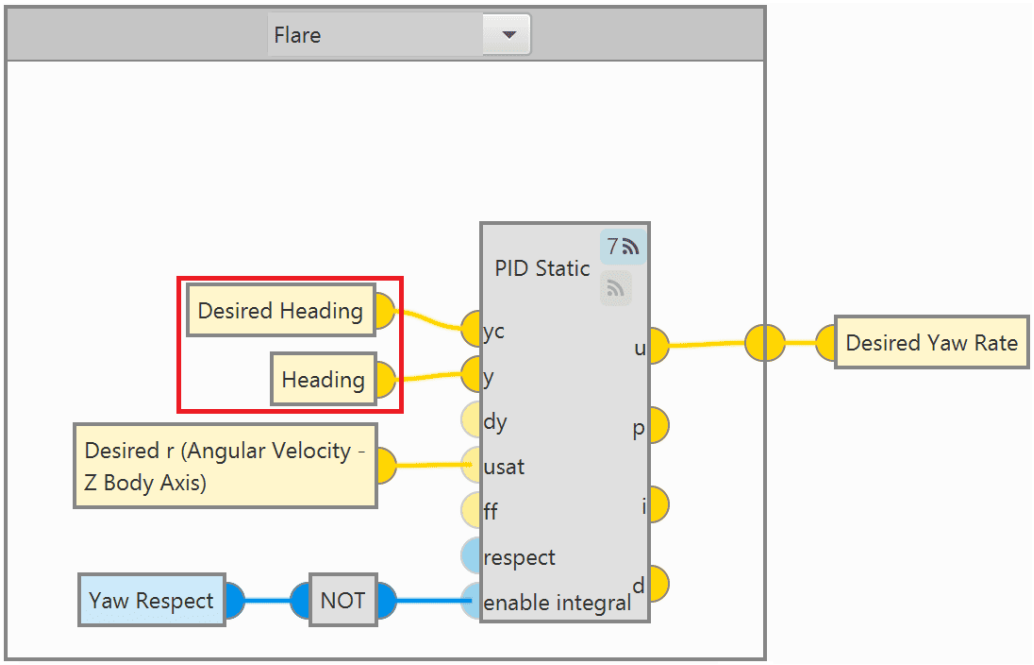

Flare phase - Yawing control


For more information on block programs, please refer to Block Programs section of this manual.

GNSS Compass Configuration

The GNSS Compass configuration is performed through the GNSS sensor block with the help of the **RTK Wizard** and the GNSS Compass block.

In this case, users must have **2 GNSS sensor blocks**, 1 with the "Dynamic Base" configuration (Base) and the other with a "Rover" configuration.


1. Open the configuration of one of the GNSS sensor blocks, in this case, this is the configuration for the GNSS1 sensor block.
2. Users must use the RTK Wizard to perfom the corresponding settings:

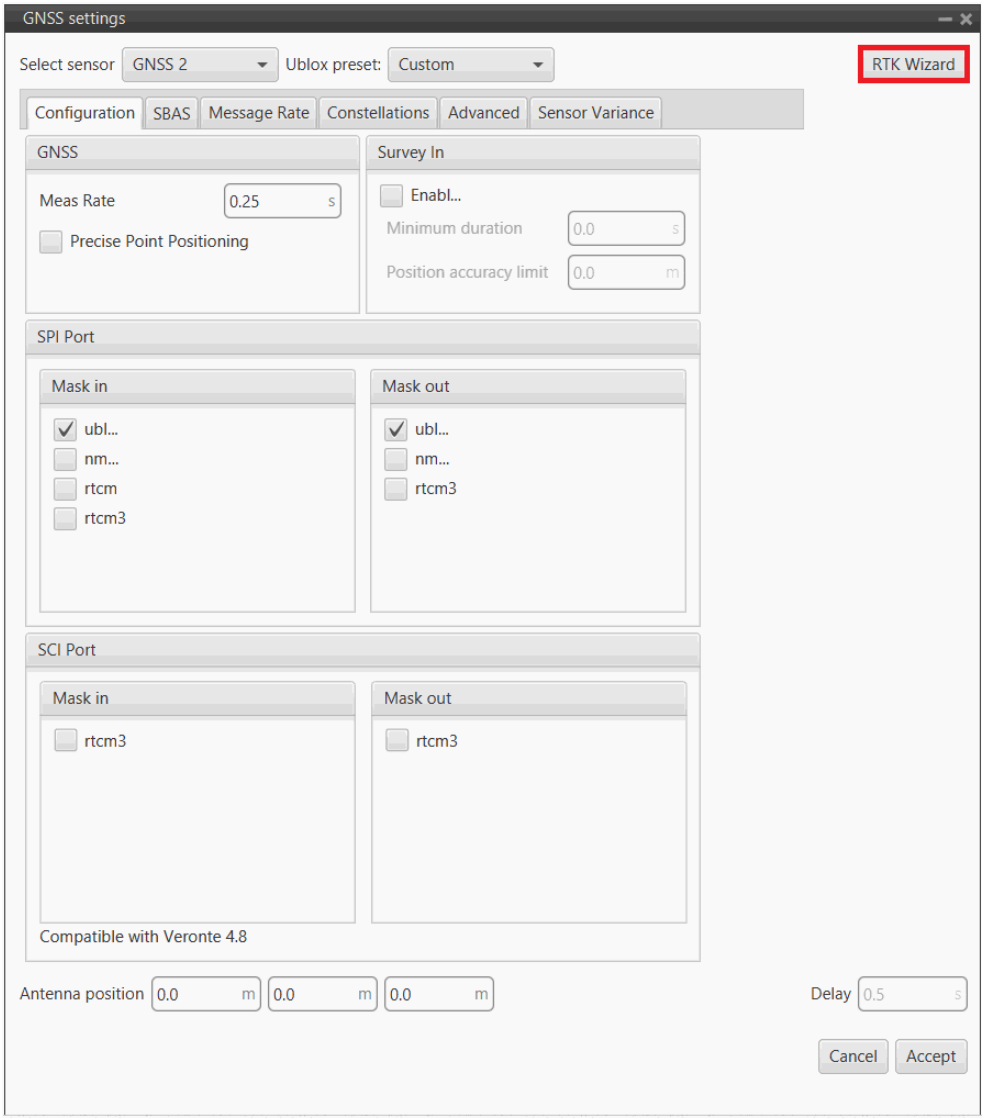

GNSS Compass Configuration - GNSS block

3. Click "Air" in the COMPASS column, then choose which will be the Base and which will be the Rover, in this example **GNSS1** is set as Rover and **GNSS2** is set as Base.

   Then, the corresponding Compass configuration will be automatically applied to the users configuration.

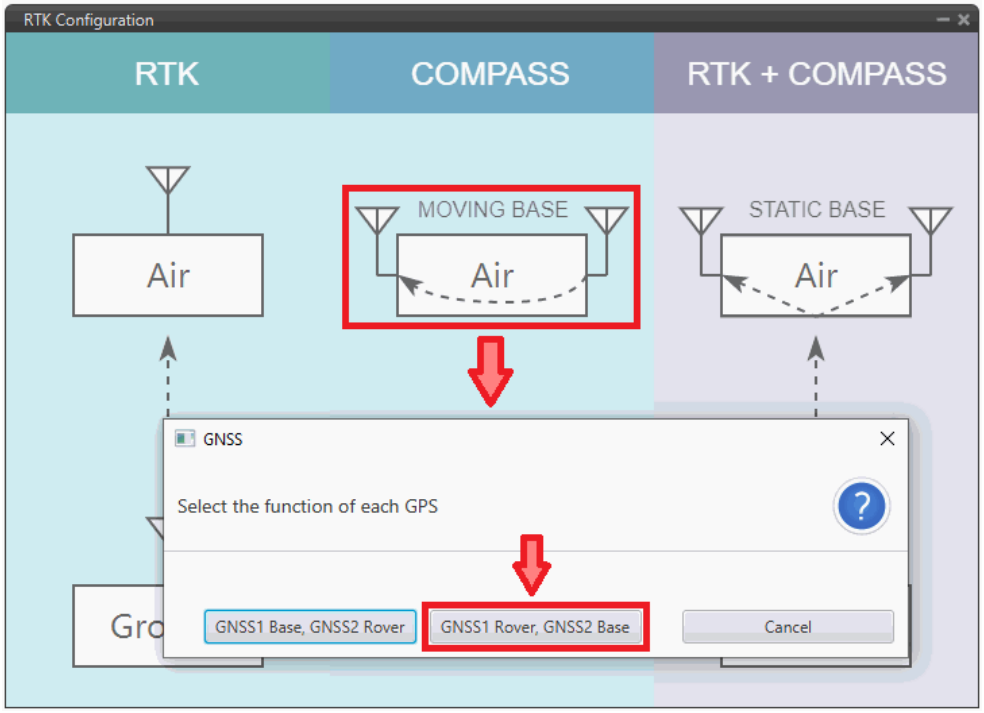


GNSS Compass Configuration - RTK Wizard

4. Once the corresponding configurations have been selected, it is necessary to set the following parameters in both GNSS sensor blocks.


   First change the Ublox preset parameter to **Custom**, then:

   - Go to the **Configuration tab**:

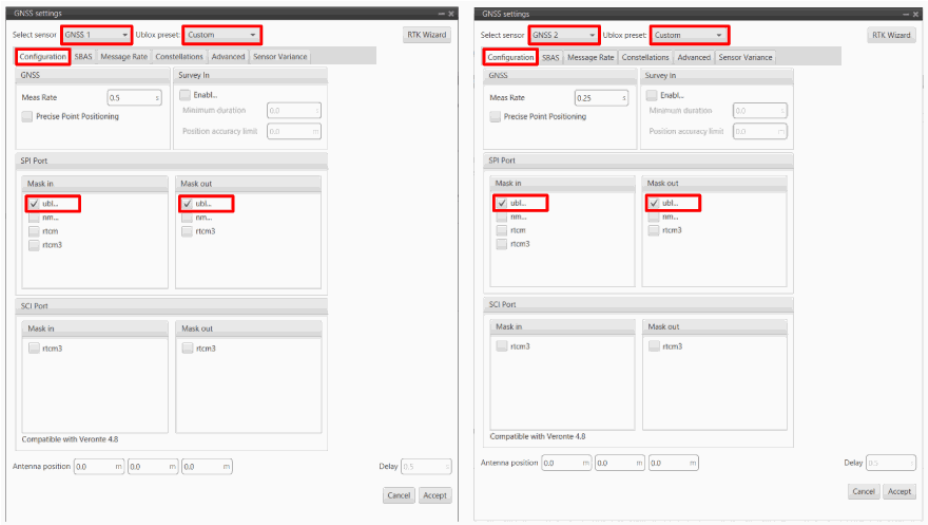


GNSS Compass configuration - Configuration tab configuration

     - Meas Rate: Recommended value **0.25 s** (4 Hz)
     - SPI Port: **ublox** should be **checked** in Mask in and Mask out
     - SCI Port: **rtcm3** should be **unchecked** in Mask in and Mask out
   - In the **SBAS tab**, leave the configuration as **Automatic**.
   - Go to the **Message Rate tab**, it should look as follows:

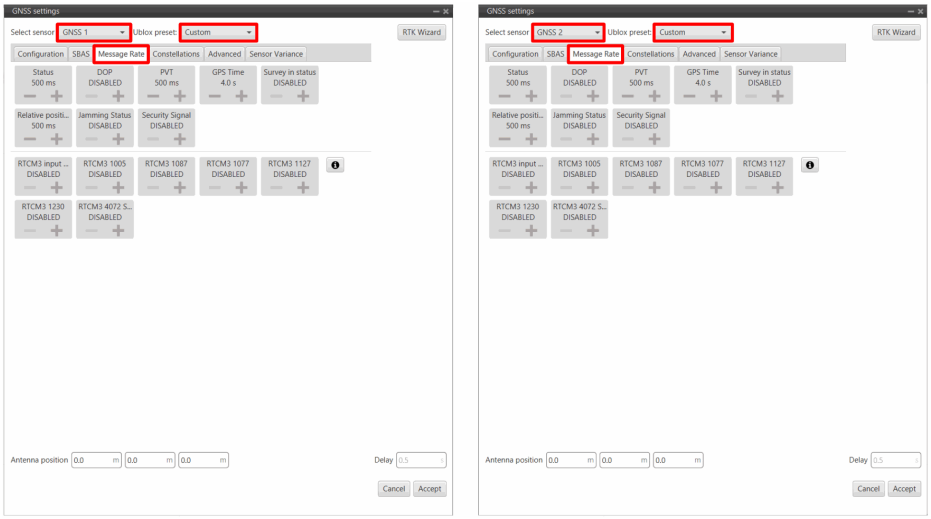

GNSS Compass configuration - Message Rate tab configuration


- Go to the **Constellations tab**:

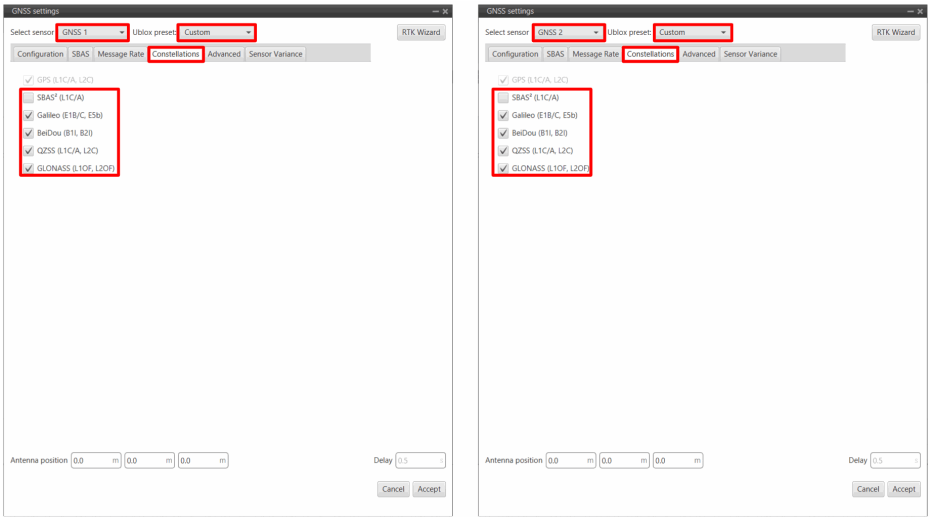

GNSS Compass configuration - Cosntellations tab configuration

- $SBAS^2$ (L1C/A): Recommended **Disabled**
- Galileo (E1B/C, E5b): Recommended **Enabled**
- BeiDou (B1I, B2I): Recommended **Enabled**
- QZSS (L1C/A, L2C): Recommended **Enabled**
- GLONASS (L1OF, L2OF): Recommended **Enabled**


- Go to the **Advanced tab**:

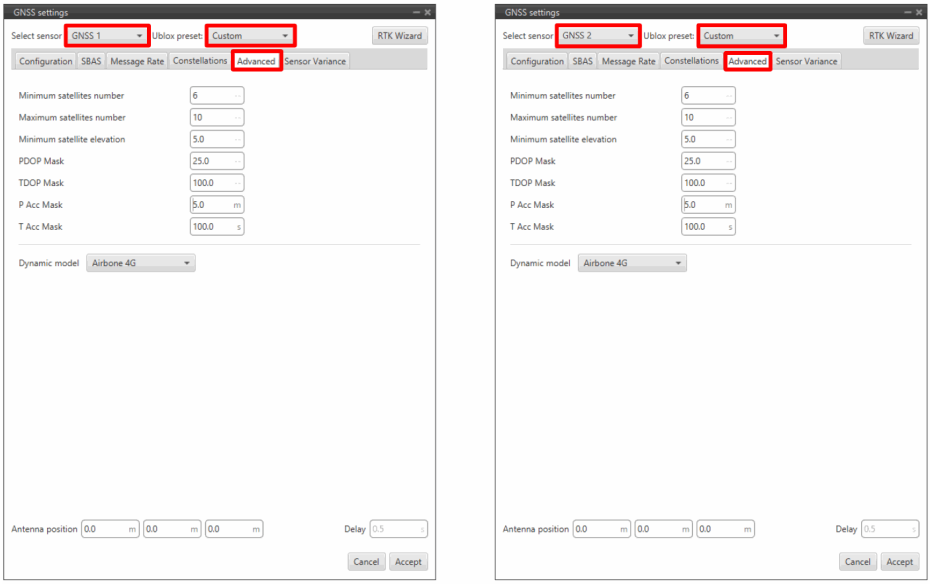

GNSS Compass configuration - Advanced tab configuration

- Minimum satellites number: Recommended value **6**
- Maximum satellites number: Recommended value **10**
- Minimum satellite elevation: Recommended value **5.0**
- PDOP mask: Recommended value **25.0**
- TDOP mask: Recommended value **100.0**
- P Acc mask: Recommended value **5.0 m**
- T Acc mask: Recommended value **100.0 s**
- Dynamic model: Recommended value **Airbone 4G**


◦ Go to the **Sensor Variance tab**

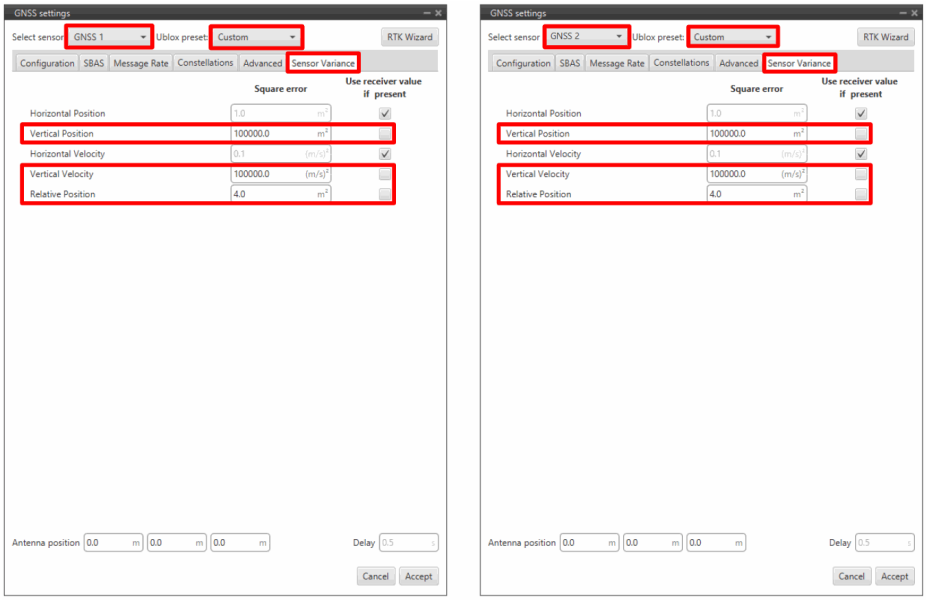

GNSS Compass configuration - Sensor Variance tab configuration

- Vertical Position: Recommended value **20.0** m^2 .
- Vertical Velocity: Recommended value **2.0** $(m/s)^2$.
- Relative Position: To enhance the **GNSS Compass** configuration, if the separation between antennas is given by
  $(X_1 - X_2,\ Y_1 - Y_2,\ Z_1 - Z_2)$,
  and the distance between them is calculated as
  $d = \sqrt{(X_1 - X_2)^2 + (Y_1 - Y_2)^2 + (Z_1 - Z_2)^2}$.
  Then, this variance must be **at most** d^2 . However, the recommended variance should be set as $\alpha \cdot d^2$
  Where α represents the percentage tolerance, which can be adjusted to be more or less strict but **should never exceed 1**.
  Thus, if the antennas are **2 meters apart**, the variance **should not exceed 4** m^2 and should typically be set between **10% and 30%** of this value.


5. Next, the connection between **GNSS1** and **GNSS2** sensor blocks and the **GNSS Compass** block must be properly made.
   Considering that in the GNSS Compass configuration DRN1 is designated as Rover and DRN2 is assigned as Base, the GNSS sensor block designated as Rover must be connected to the DRN1 input of the GNSS Compass block and the GNSS sensor block designated as Base must be connected to the DRN2 input.
   Therefore, in this example the Drn output of the **GNSS1** sensor block is connected to the **Drn1 input** and the Drn output of the **GNSS2** sensor block is connected to the **Drn2 input**.

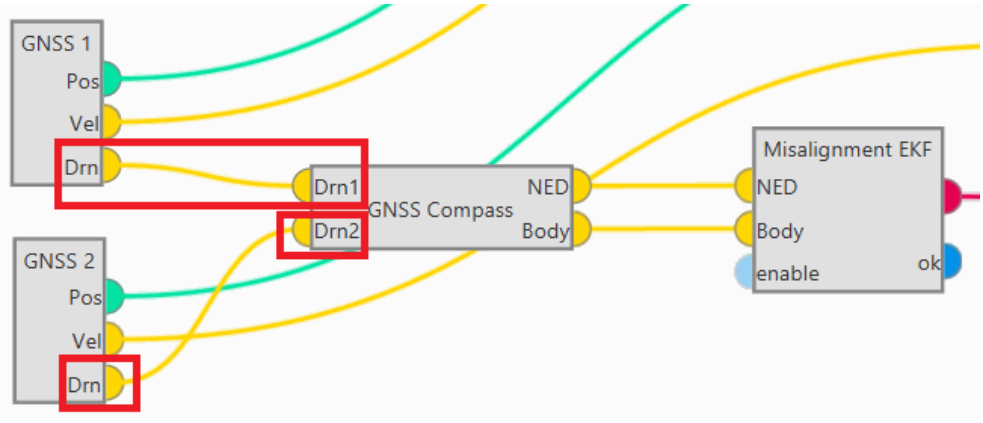

GNSS Compass Configuration - GNSS sensor and GNSS Compass blocks

6. In addition, in order to properly use the of **GNSS Compass values in navigation**, the following values are recommended for the Misalignment EKF Block in cases where **yaw misalignment** occurs:
   - Norm diff. threshold: Should be around **10-20%**.
   - Minimum norm: Should be around **50% of the absolute distance between the antennas**.
   - Norm filter: **0.1**.
   - Decimation: **10**.

Therefore, in the Navigation program, the connections for GNSS should look like this:

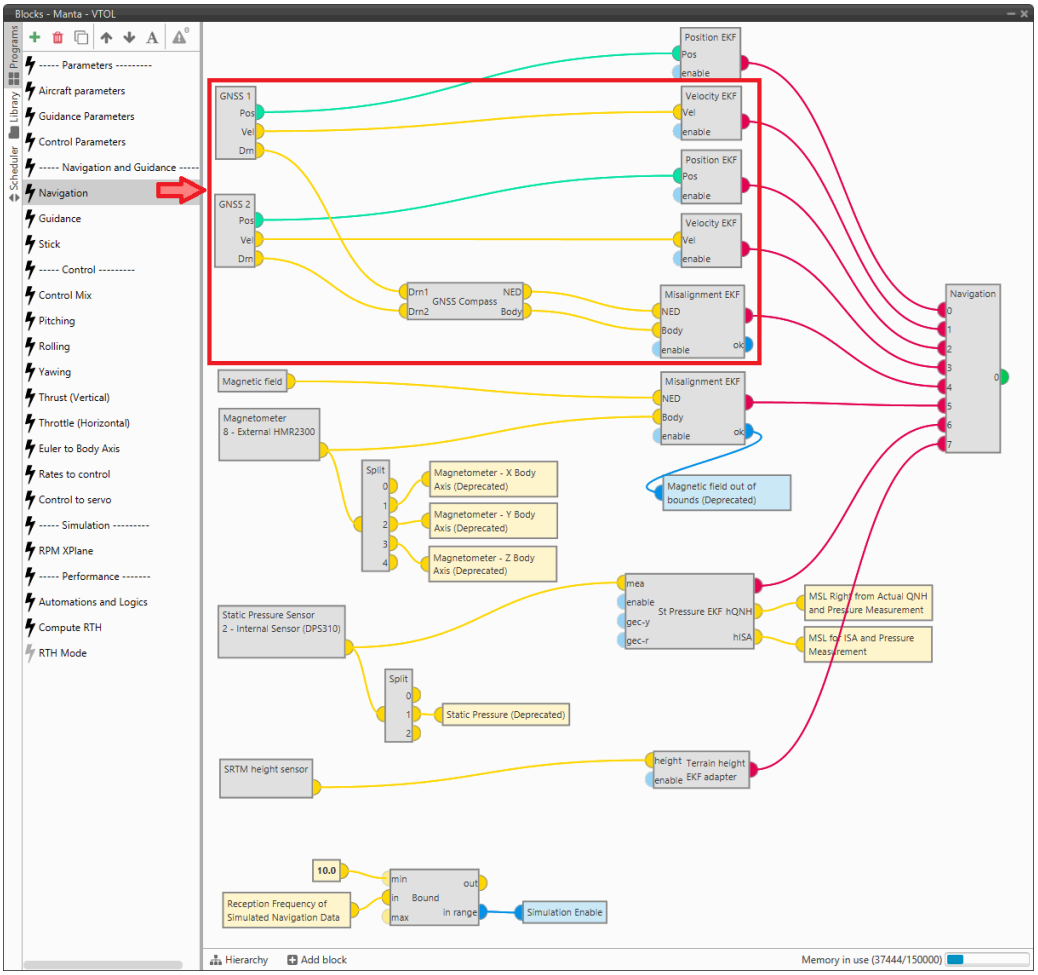


GNSS Compass Configuration - Navigation program example

1. Finally, go to Input/Output menu → **I/O Setup panel**. A Base-to-Rover RTCM connection must be established.
   In this example, the Base corresponds to **GNSS2** and the Rover to **GNSS1**.

Therefore, connect the **GPS 1 RTCM** producer to the **GPS 0 RTCM** consumer.


> **Note**
>
> Note that the GNSS index starts from 0 in this panel so it will be GPS 1 RTCM = GNSS2 sensor and GPS0 RTCM = GNSS1 sensor.

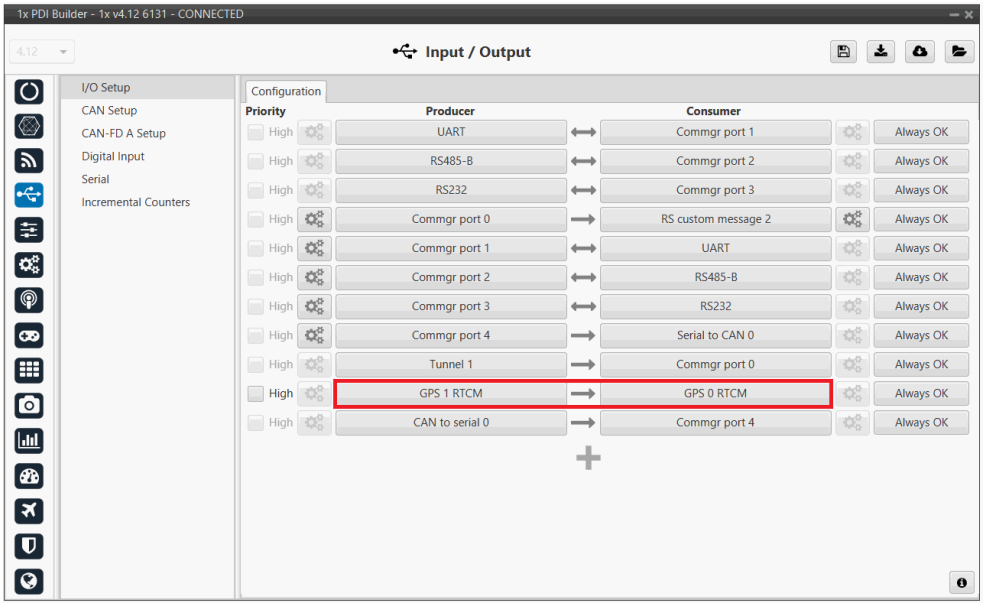

GNSS Compass configuration - I/O Setup configuration


RTK Configuration

The RTK configuration is performed through the **GNSS sensor block** with the help of the **RTK Wizard**.

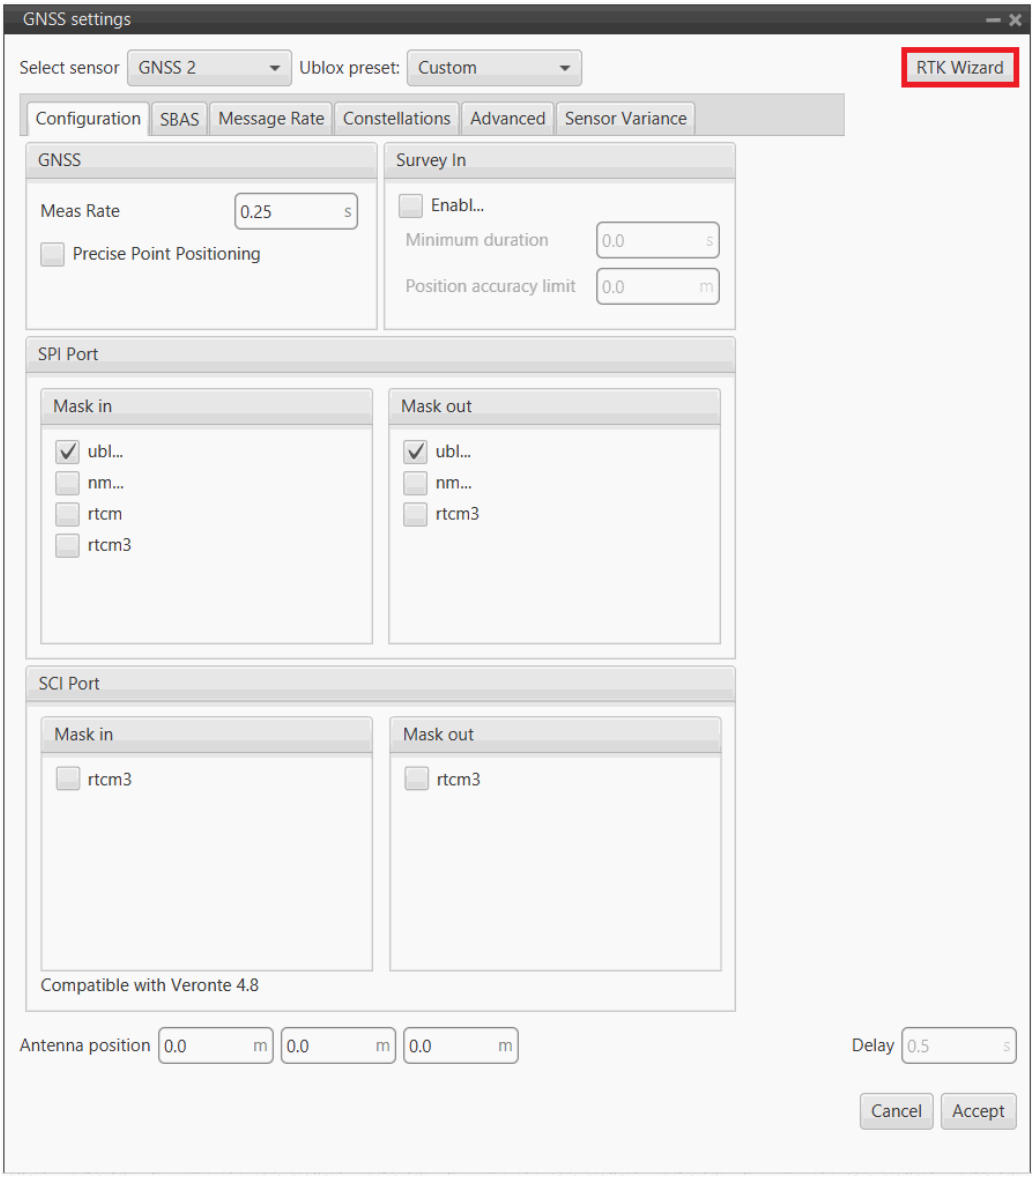

RTK Configuration - GNSS block

Users must use this wizard to perfom the corresponding settings for the 1x air and ground units:

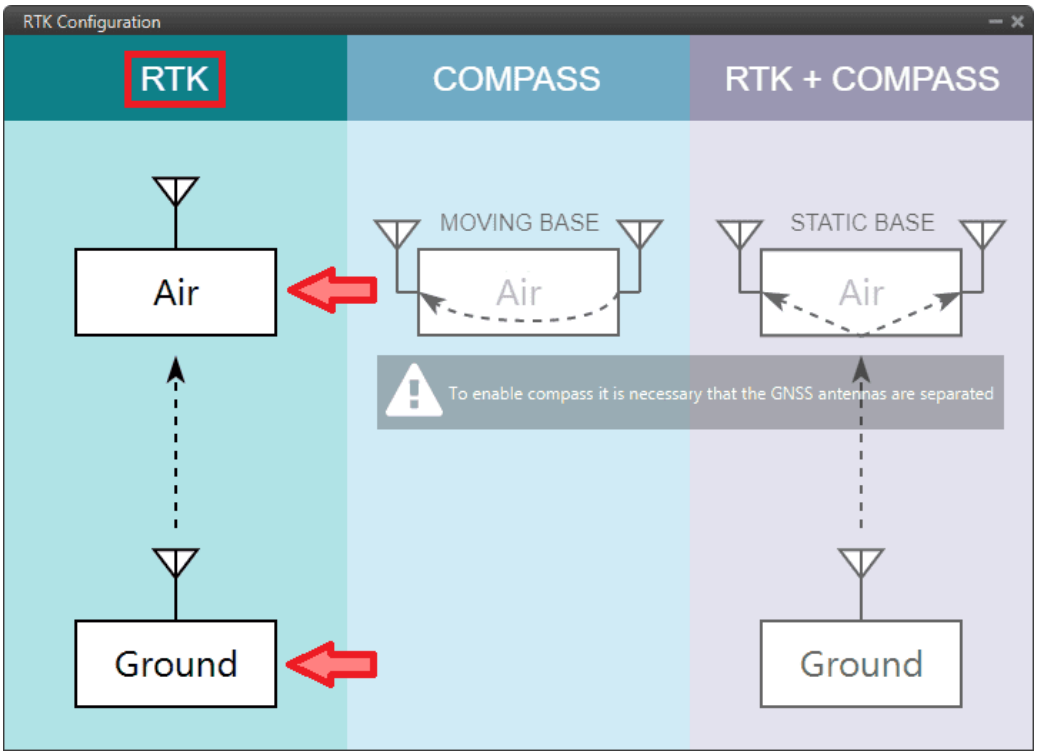


RTK Configuration - RTK Wizard

> **Danger**
>
> This wizard uses **by default** the **Y0 splitter** port. Consequently, if it has been configured for another use, the configuration will be now **overwritten**.
>
> Therefore, to avoid system malfunction when using RTK, it is **highly recommended** to leave the **Y0 splitter** on the **ground unit** "free".
>
> **This is especially important if the ground unit is a PCS**.

- For the **1x air unit**, click on "Air" in the RTK column and the corresponding RTK configuration will be automatically applied to the user's configuration.
- For the **ground unit**, click on "Ground" in the RTK column and the corresponding RTK configuration will be automatically applied to the user's configuration.

  In the Ublox preset parameter, the **Static base** option will be selected. However, if user wishes to consult the configuration made, just select the **Custom** option:

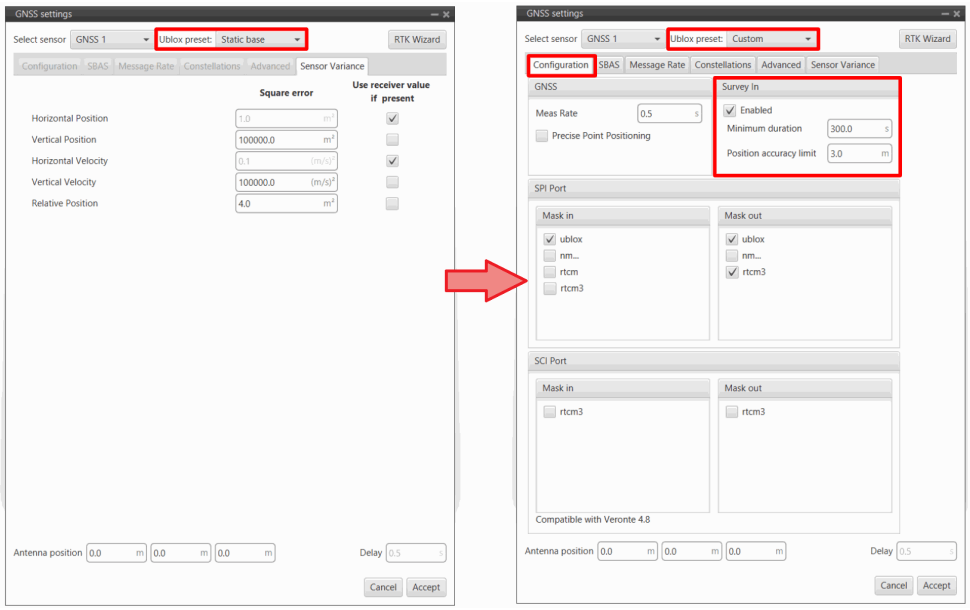

RTK Configuration - GNSS block ground configuration

> **Important**
>
> Please pay specific attention to the "**survey configuration**" options.
>
> For a detailed explained of the **GNSS sensor block**, please refer to GNSS sensor - Sensors blocks of **Block Programs** section.

With the previous configurations, when **GNSS accuracy < 3 m** ⇒ **GNSS sensor** will start the **survey in during 300 seconds** while taking measurements for **RTK correction**.

To verify correct **survey in** behavior, in **Veronte Ops** users can query the status of the following variables.

- In the **ground unit**, if the survey in has **started**, 'GNSS1 Survey In Off' bit should be in "success" mode ⇒ **GNSS1 Survey In** (if the label has the default setting, it will be green).
  Therefore, when **finished**, the bit will switch to "fail" mode ⇒ **GNSS1 Survey In Off** (if the label has the default setting, it will be colored red).
- On the 1x **air unit**, once the survey in has **finished**, check that 'DGNSS1 Input Off' and 'DGNSS1 Navigation Off' bits are in "success" mode ⇒ **DGNSS1 Input On** and **DGNSS1 Navigation On** respectively (if the labels have the default setting, they will be colored green).


At this time, the **GNSS1 Accuracy** value in the **air unit**, should be very low, probably between 0.01-0.05 m.

Serial communication

Here are described the steps to be followed in order to correctly receive and transmit **Serial messages**, both via CAN and serial interfaces.

Serial messages transmission

This section summarizes the configuration to be carried out **to send Serial streams over a serial bus**.

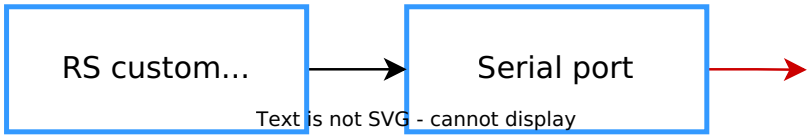


Serial messages transmission diagram

1. Go to Input/Output menu → **I/O Setup panel**.


   Connect a **RS custom message** producer (in this case RS custom message **0** has been chosen) to a **Serial port**, in this example **RS232** is selected:

   > **Note**
   >
   > Serial ports: RS232, RS485 and UART

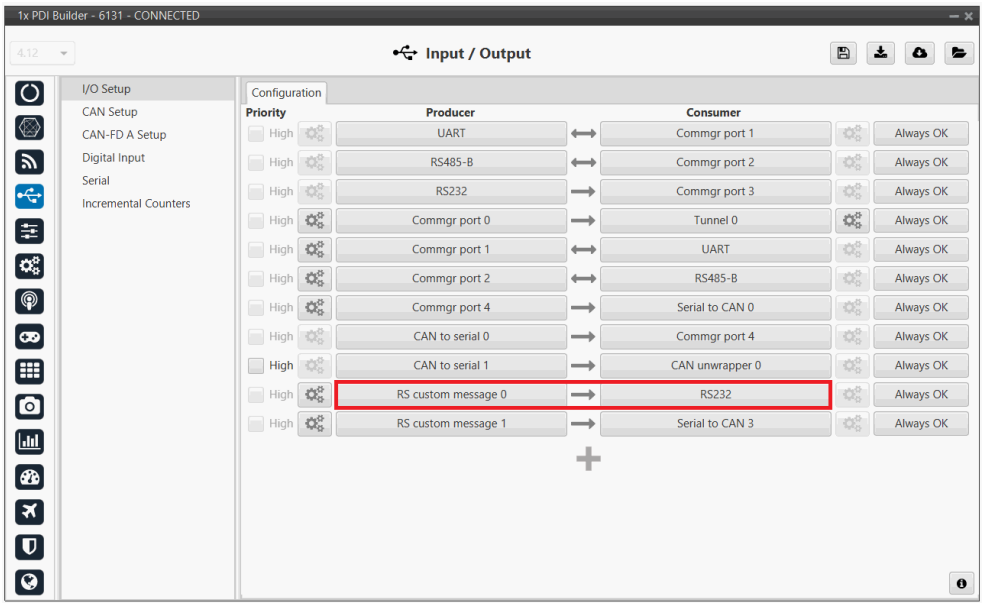


Serial messages transmission - I/O Setup configuration

2. Click on the **configuration button** (icon) and a pop-up window will be displayed.
   More information on the configuration of serial custom messages can be found in the Serial Custom Messages - Input/Output section of this manual.
   For example:

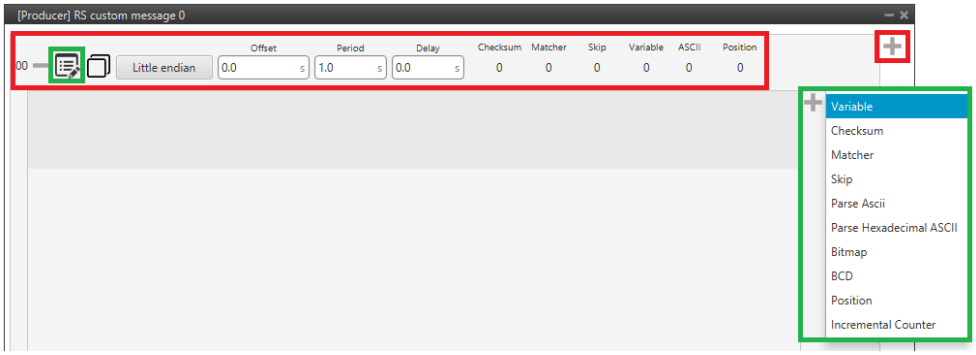

Serial messages transmission - RS custom message configuration


3. Go to Input/Output menu → Serial panel → **RS232 tab** (as **RS232** has been selected as consumer).
   Configure the serial port parameters according to the user's specifications.
   For example:

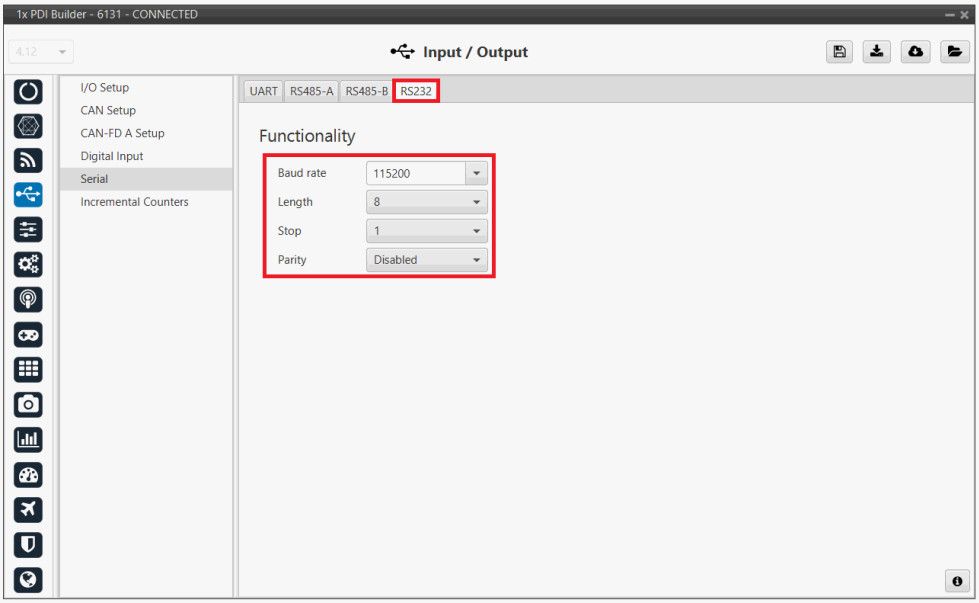

Serial messages transmission - Serial configuration

Serial messages reception


This section summarizes the configuration to be carried out **to receive Serial streams over a serial bus**.

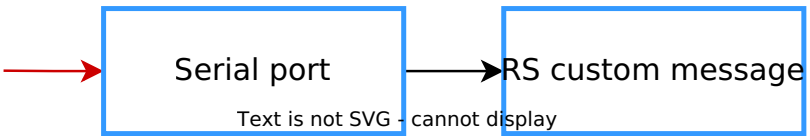

Serial messages reception diagram

1. Go to Input/Output menu → Serial panel → Serial port **tab** (in this case **RS232 port** has been chosen).

   Configure the serial port parameters according to the user's specifications. For example:

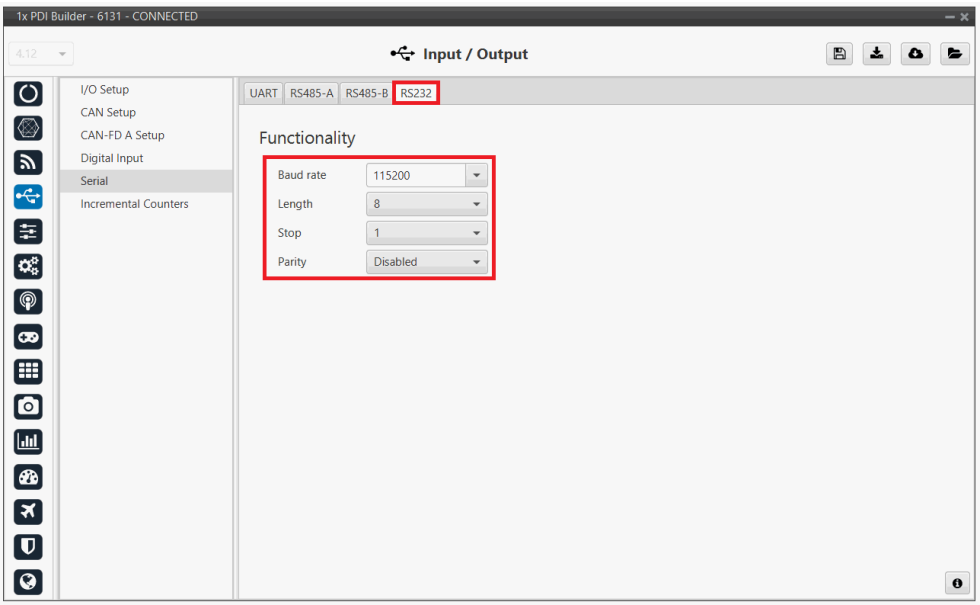


Serial messages reception - Serial configuration

2. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **RS232** producer to a **RS custom message** consumer, in this example RS custom message **0** is selected:


> **Note**
>
> The **serial port producer** to configure must match the serial port configured in the previous step. In this example, **RS232** is selected.

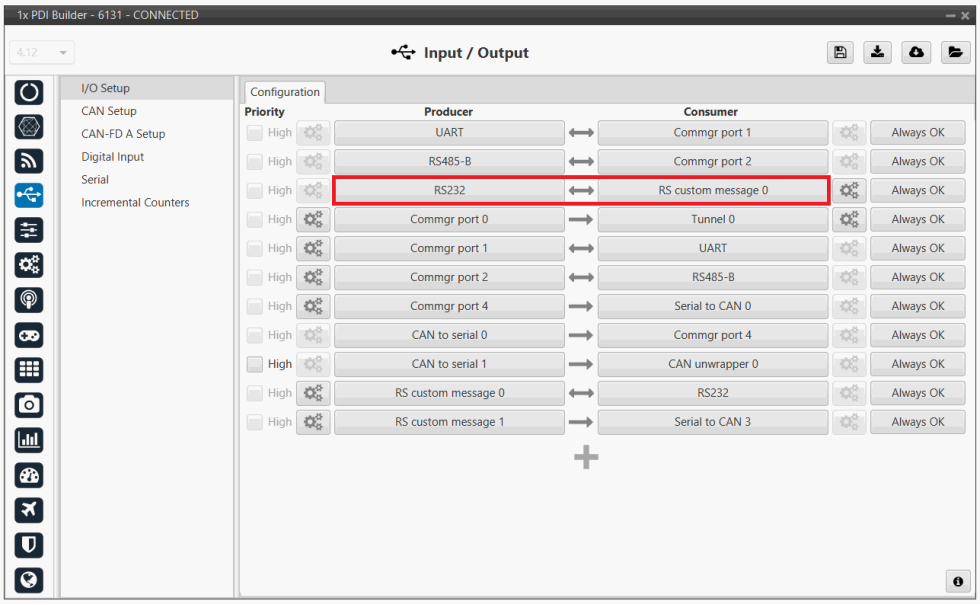

Serial messages reception - I/O Setup configuration

3. Click on the **configuration button** (icon) and a pop-up window will be displayed.

   Configure the message reading as desired. The different options and parameters to be configured are explained in the Serial Custom Messages - Input/Output section of this manual.

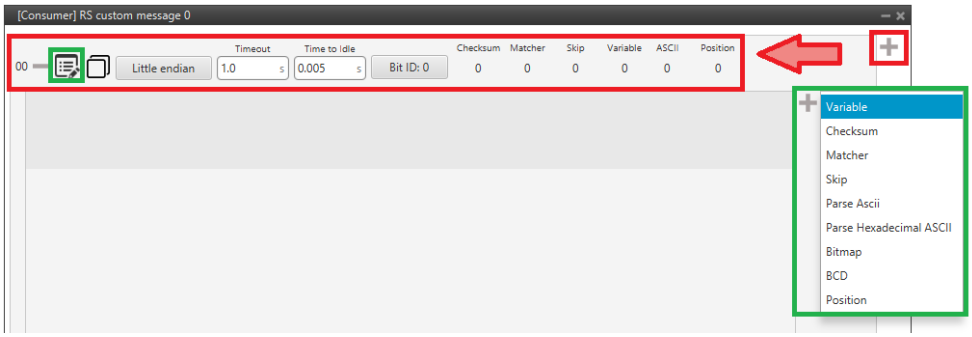


Serial messages reception - RS custom message configuration

Serial messages transmission via CAN bus

This section summarizes the configuration to be carried out **to send Serial streams over a CAN bus**.


> **Note**
>
> For sending Serial streams over a CAN bus, a **Serial to CAN** port is needed. For further details of this port, please consult the CAN to serial/ Serial to CAN - I/O Setup section of the present manual.

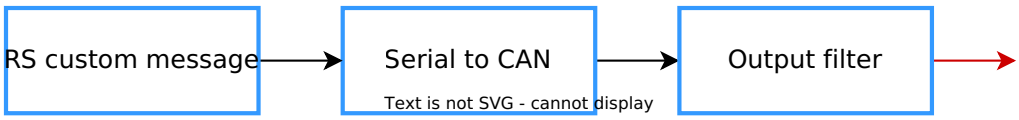

Serial messages transmission via serial diagram

1. Go to Input/Output menu → **I/O Setup panel**.

   Connect a **RS custom message** producer to a **Serial to CAN** consumer, in this case RS custom message **0** and Serial to CAN **0** have been selected:

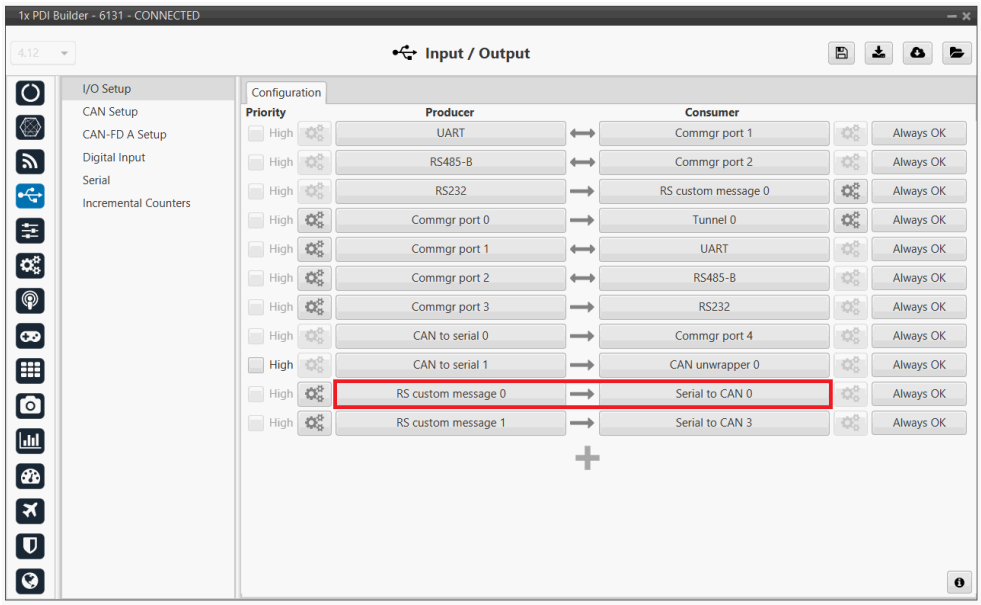


Serial messages transmission via CAN - I/O Setup configuration

2. Click on the **configuration button** ( icon) and a pop-up window will be displayed.

   More information on the configuration of serial custom messages can be found in the Serial Custom Messages - Input/Output section of this manual.

   For example:

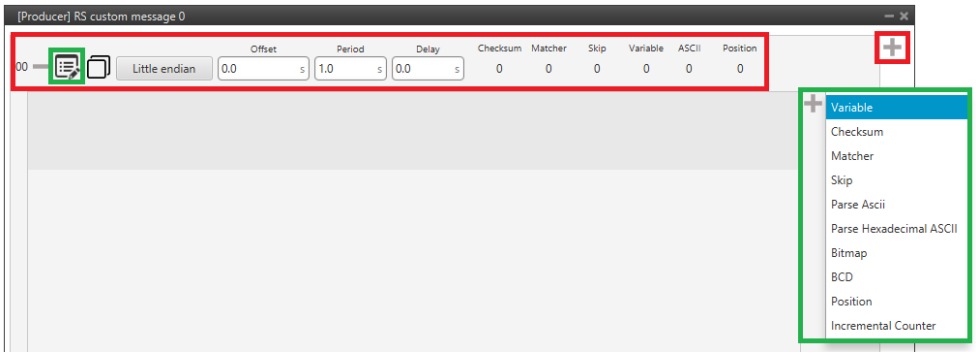


Serial messages transmission via CAN - RS custom message configuration

3. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

Connect the **Serial to CAN 0** producer to an **Output filter** consumer, in this case Output filter **0** has been chosen.


> **Important**
>
> The **Serial to CAN producer** index must match the one previously selected as **Serial to CAN consumer** in the **I/O Setup** panel.

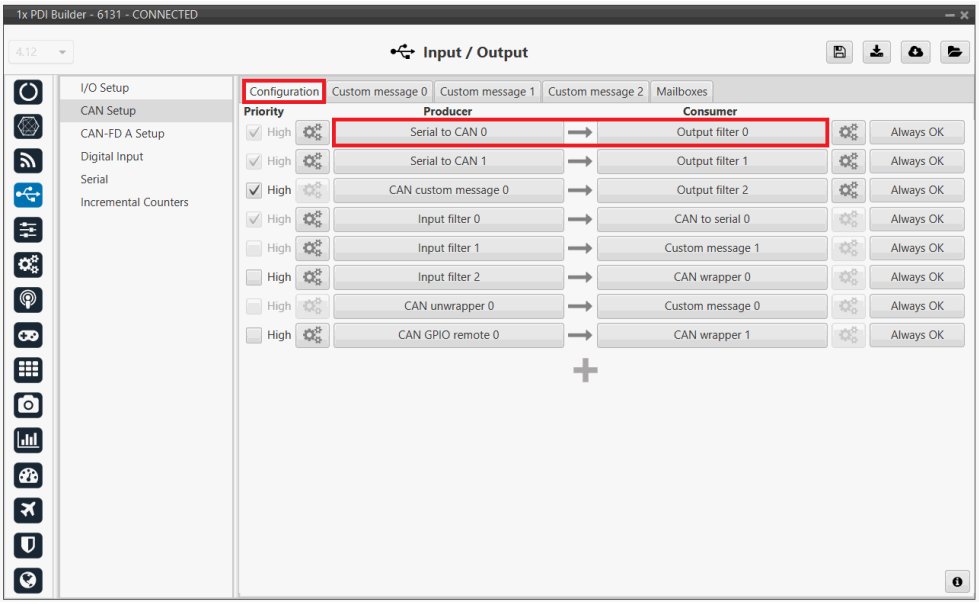

Serial messages transmission via CAN - CAN Setup configuration

- Configure the parameters of the **Serial to CAN** producer by clicking on the  icon.


  For more information on these parameters, refer to the CAN Setup - Input/Output section of this manual.

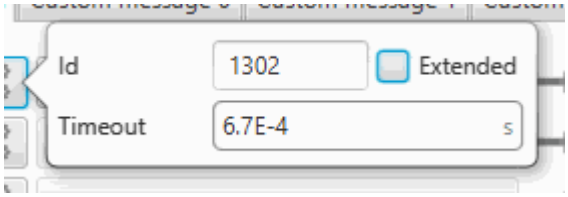

Serial messages transmission via CAN - Serial to CAN configuration

- Configure the **Output filter** consumer by clicking on the  icon. Set it to the **CAN** port used, in this example CAN **A** port.

  For more information on this parameter, refer to the CAN Setup - Input/Output section of this manual.

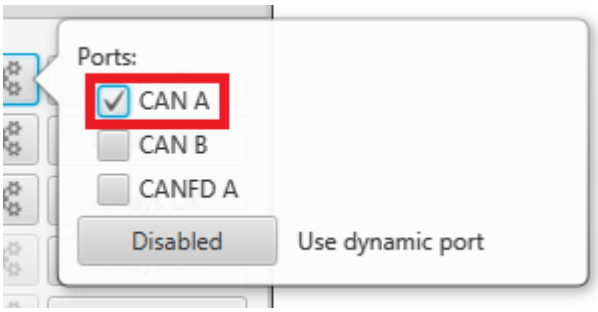


Serial messages transmission via CAN - Output filter configuration

> ⚠ **Warning**
>
> Remember that it is necessary to have **at least 1 free mailbox for transmission messages**.

Serial messages reception via CAN bus


This section summarizes the configuration to be carried out **to receive Serial streams over a CAN bus**.

> ⓘ **Note**
>
> For receiving Serial streams over a CAN bus, a **CAN to serial** port is needed. For further details of this port, please consult the CAN to serial/ Serial to CAN - I/O Setup section of the present manual.



Serial messages reception via CAN diagram


1. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.
   Configure at least one mailbox to receive the message with the appropiate **ID**.
   For more information on mailboxes configuration, please refer to the Mailboxes - Input/Output section of the present manual.

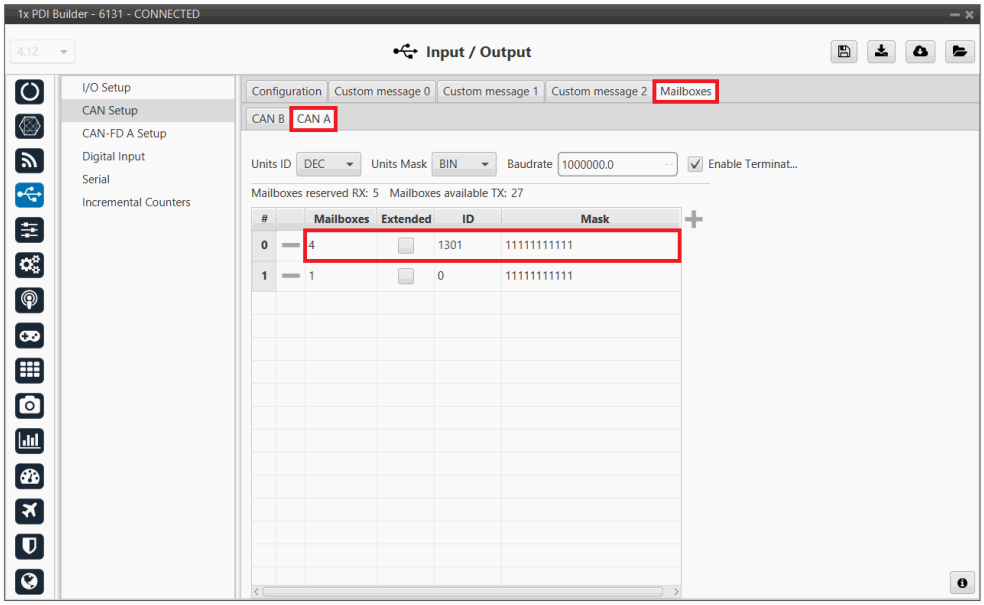

Serial messages reception via CAN - Mailboxes configuration

2. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect an **Input filter** producer to a **CAN to serial** consumer. In this example, Input filter **0** has been connected to CAN to serial **0**.

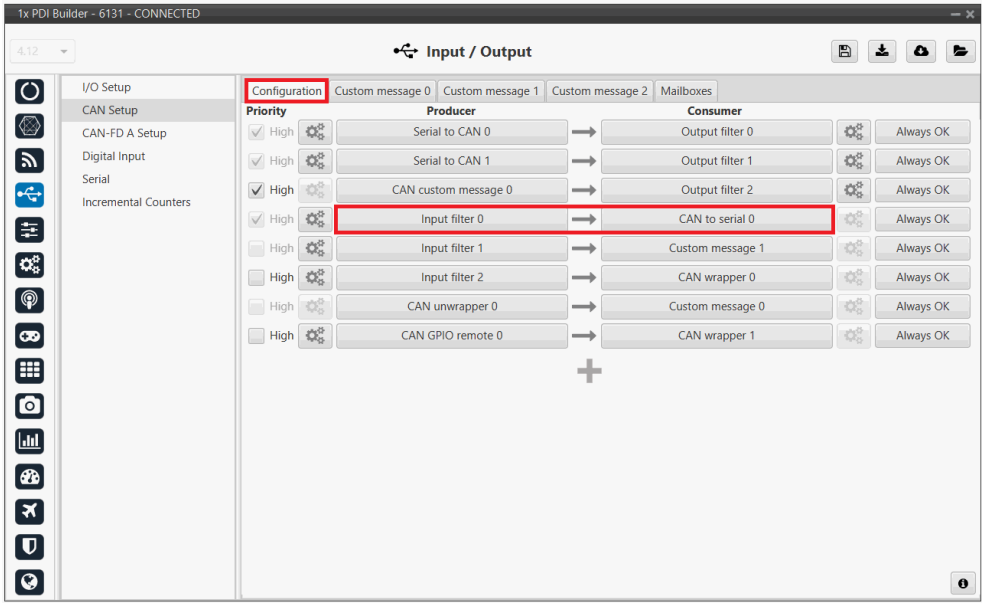


Serial messages reception via CAN - CAN Setup configuration

   - Configure the parameters of the **Input filter** producer by clicking on the  icon.

     The configuration must be the same as for the mailbox to correctly receive the message.

     For more information on these parameters, refer to the CAN Setup - Input/Output section of this manual.

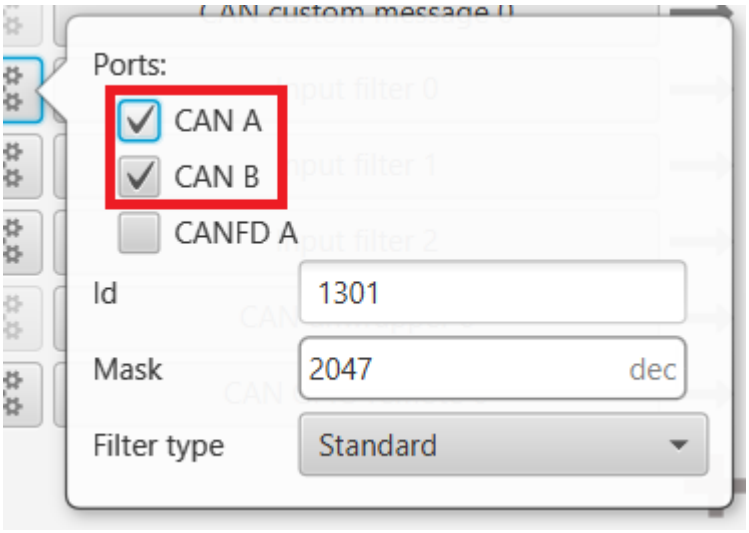


Serial messages reception via CAN - Input filter configuration

3. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **CAN to serial 0** producer to a **RS custom message** consumer, in this example RS custom message **0** has been chosen.


> **Important**
>
> The **index of the CAN to serial producer** must match **the index of the CAN to serial consumer** configured in the previous step.

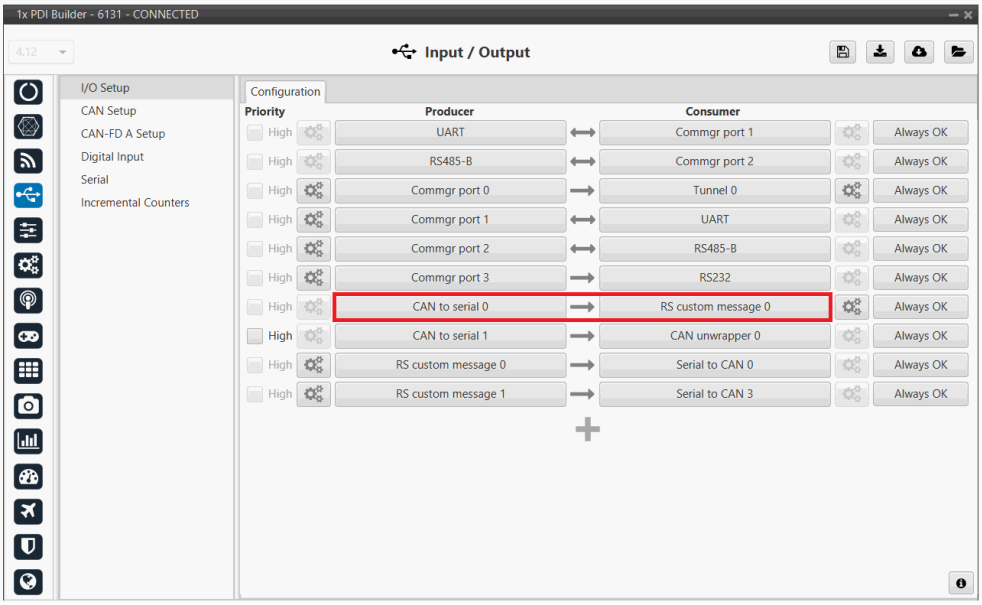

Serial messages reception via CAN - I/O Setup configuration

4. Click on the **configuration button** (icon) and a pop-up window will be displayed.

Configure the message reading as desired. The different options and parameters to be configured are explained in the Serial Custom Messages - Input/Output section of this manual.

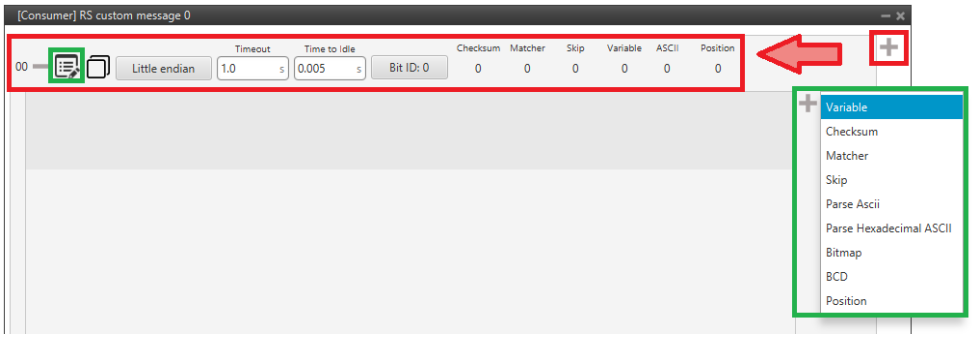

Serial messages reception via CAN - RS custom message configuration

External devices

The step-by-step instructions for the following external devices will be explained in detail in the following sections:

- Actuators/Servos
- Air Data Sensors
- Altimeters
- Datalinks
- GNSS Receivers
- IMUs & Compass
- Remote ID
- RPM Sensors
- Stick
- Veronte products

Actuators/Servos

The user can configure any actuator compatible with the communication interfaces.

CAN

Ultra Motion

1x PDI Builder configuration

Follow these steps to configure **Veronte Autopilot 1x** to **command** the **Ultra Motion** servo using **CAN2.0B protocol**.


1. (optional) Connect the **Ultra Motion** servo to the PC to adjust its configuration.

   > **Important**
   >
   > This example uses the **default device settings**. For custom configurations, please refer to the manufacturer's CAN communication protocol.

2. Connect the servo to the Autopilot 1x via **CAN**. Detailed information on this connection can be found in the Ultra Motion - Integration examples section of the **1x Hardware Manual**.
3. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect a **CAN custom message** producer (in this case CAN custom message 0 is used) to an **Output filter** consumer, in this example Output filter 1.


   And, configure this **Output filter** with the correct CAN bus, corresponding to the physical connection of the device.

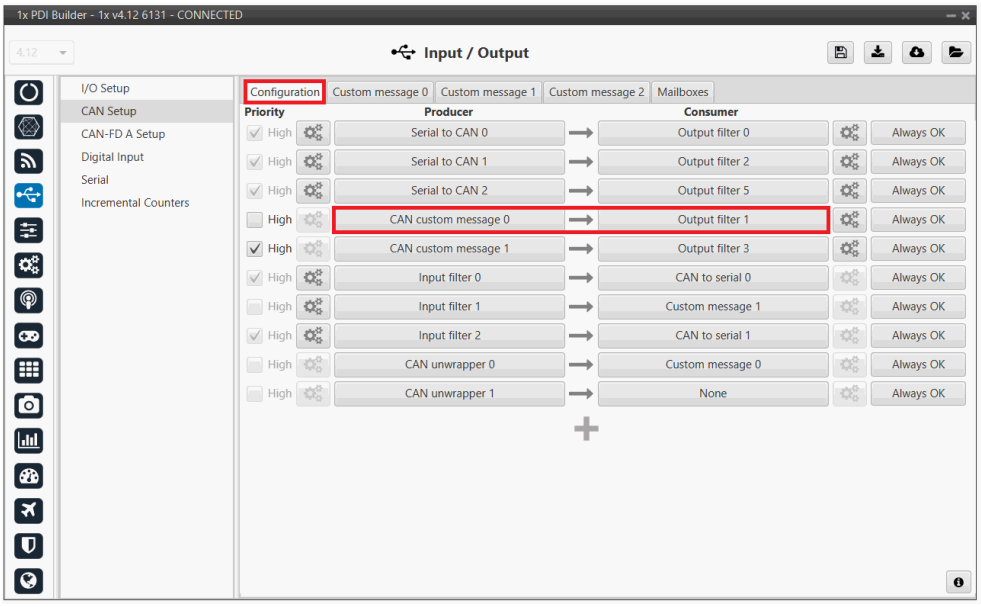

Ultra Motion - CAN Setup configuration

4. Go to Input/Output menu → CAN Setup panel → **Custom message 0 tab** (since the producer CAN custom message 0 has been connected to the output filter).
    - Add a new message in **TX** (as it is for transmission) and configure the parameters as follows:
        - **Extended**: Enabled
        - **CAN ID**: 3
        - **Endianness**: Little endian

      More information on the configuration of CAN messages can be found in the TX/TX Ini Messages (Custom Messages) - Input/Output section of this manual.

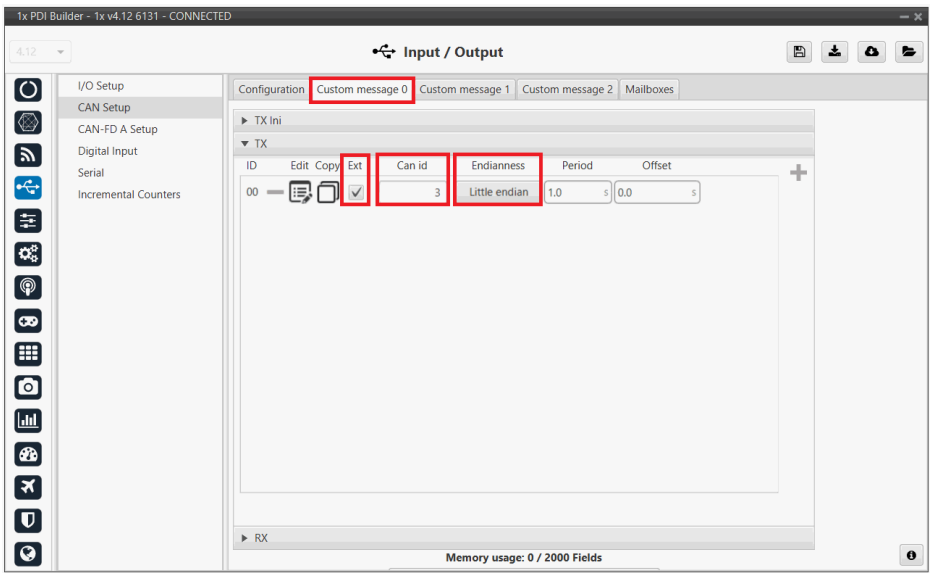

Ultra Motion - TX message


    - Next, click on  to access the message configuration.

      Configure the message to be sent with the variable that users want to use for commanding. This variable should be set to **compressed unsigned 16-bit**.

      In addition, users must send values from **0 to the maximum position of the Servo Cylinder**.

      To do this, it is recommended to control the variable internally as a throttle, for this set the **Encode from 0 to 1**.

      And to decode it to position values, the **Decode** parameter must be set from **0 to the maximum position**:

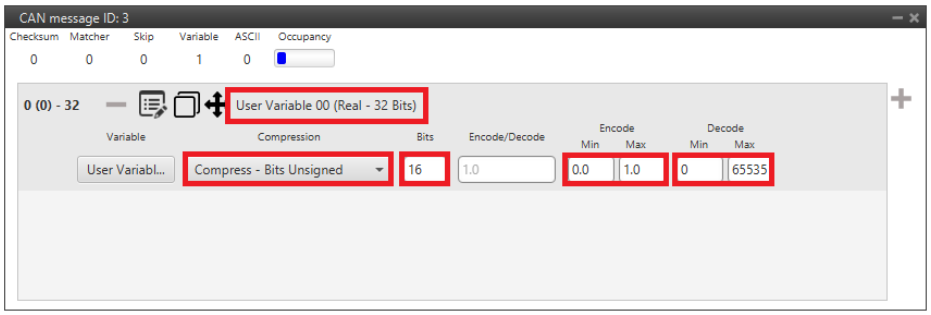


Ultra Motion - TX message configuration

For more information on configuring CAN custom messages, refer to the Custom Messages types - Input/Output section of this manual.

Servo custom configuration

When connecting the **Ultra Motion** servo to the PC, a folder named "**UltraMotion**" will automatically open containing two text configuration files: `CONFIG.TXT` and `HARDWARE.TXT`.

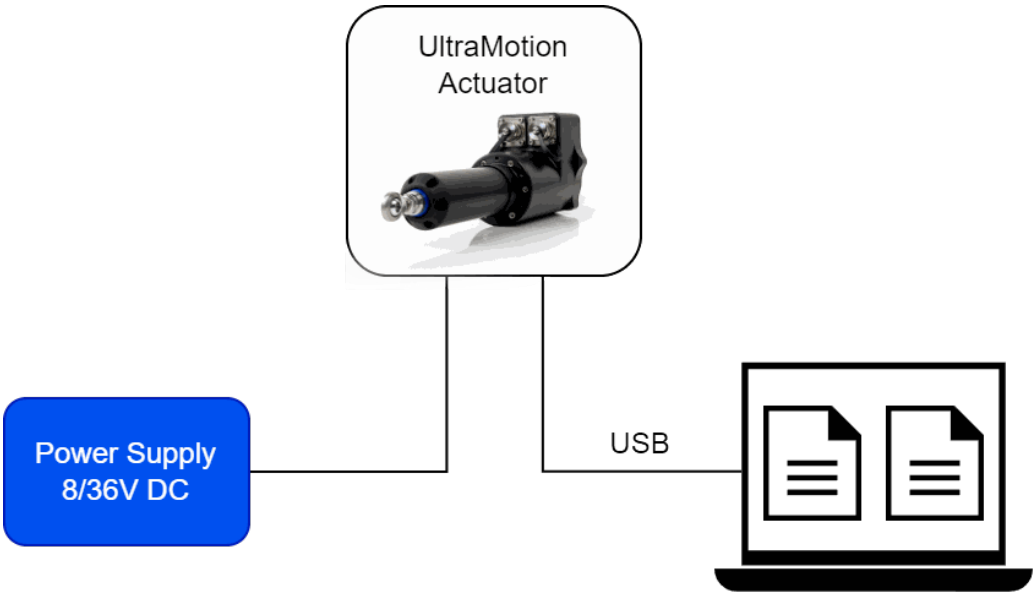

These files define the servo configuration parameters, which should be adjusted according to the user's specific requirements.

> **Note**
>
> It is recommended to create a **backup** of the **default configuration** files before making any changes. This backup can be used if necessary.

> **Danger**
>
> Before modifying the `HARDWARE.TXT` file, please refer to the manufacturer's product manual. Altering this file may result in product damage.

Modification of the `CONFIG.TXT` file is **necessary** if **more than one servo** is to be integrated into the setup.

This section explains how to configure the **key parameters** of the `CONFIG.TXT` file.

When opening the `CONFIG.TXT` file, the user will see a layout similar to the following, where each line corresponds to a specific configuration parameter.



Ultra Motion - CONFIG.TXT file

- **opMode**. Operating Mode: 0 for RS-485 command line interface and 1 for commands via CAN bus.
- **kp, ki, and kd**. Gains values for the proportional, integral, and derivative terms, respectively, of the position PID control loop.
- **spMin**. This configuration variable sets the minimum allowable position of the Servo Cylinder.

> **Important**
> This value must be **greater** than **rPos**, defined in the `HARDWARE.TXT` file.

- **spMax**. This setting sets the maximum allowable position of the Servo Cylinder.

> **Important**
> This value must be **less** than **ePos**, defined in the `HARDWARE.TXT` file.

> **Explanation**
> **ePos** and **rPos** define the **physical limits** of the actuator. For safety reasons, it is necessary to set more **restrictive operating limits** (**spMin** and **spMax**) to prevent the actuator from reaching or exceeding these physical limits.

- **CANspd**. This defines the baudrate of the CAN interface. There are 6 options designated by the integers 0 to 5:

Integer	0	1	2	3	4	5
Baud Rate	1 Mbps	500 Kbps	250 Kbps	125 Kbps	100 Kbps	50 Kbps

- **CANext**. CAN Message Type: CANext = 0 configures **standard** message type (11-bit identifiers), and CANext ≠ 0 sets the actuator to **extended** message type (29-bit identifiers).
- **unitID**. **Actuator's network address** and is used along with IDmask to filter incoming CAN command messages.
  Since there are **multiple** servos integrated into the system, it is essential to assign a **unique CAN ID to each one**.
  This configuration allows Autopilot 1x to send CAN messages to each actuator individually, ensuring precise and independent control of each unit.
  Proper **CAN ID** assignment is critical to avoid communication conflicts and ensuring smooth operation within the network.

- **IDmask**. Mask for CAN Identifier used along with unitID to filter incoming CAN command messages.
  For acceptance, the message identifier must match unitID, where each corresponding bit in IDmask is set to '1'.
  If a bit in IDmask is set to '0', the corresponding bit of an incoming can message is matched for acceptance regardless of its value.

  > ⓘ **Note**
  > - If IDmask is set to **0x00000000**, CAN messages with **any identifier** will be **accepted**.
  > - If IDmask is set to **0x1FFFFFFF**, only CAN messages with an identifier that exactly **matches** the relevant bits of unitID will be accepted.
  > - If CANext = 0, only the **lower 11 bits** of unitID and IDmask are **examined** (standard message type).
  > - If CANext ≠ 0, the **lower 29 bits** of unitID and IDmask are **examined** (extended message type).

- **pMin and pMax**. These variables define the valid range of position commands that will be sent to the actuator via CAN messages.
  The value of pMin/pMax will be mapped to the actuator travel range spMin/spMax.
- **SUact**. Startup Action: Defines the behavior of the actuator at startup **before receiving a valid CAN command message**.
  - SUact = 0 ⇒ Actuator holds position.
  - SUact = 1 ⇒ Actuator executes a trajectory movement to defPos (default position).
- **defPos**. This is the absolute encoder value of the default position.
  Depending on the values of the SUact and TOact variables:
  - SUact → Actuator may move to defPos upon startup if no valid position command messages have been received.
  - TOact → Actuator can move to defPos in case no position command message is received within the rxTO timeout period.
- **rxTO**. Defines the interpolation timeout period in increments of 800 μs .

- **TOact**. Timeout Action: Defines the behavior of the actuator **after not receiving a valid CAN position command message** within the configurable reception timeout period rxTO.
  - TOact = 0 ⇒ Actuator holds position.
  - TOact = 1 ⇒ Actuator executes a trajectory movement to defPos (default position).
- **txData**. This configuration variable is a character string that selects the specific telemetry data bytes to be broadcast.
  This string may have a **length from 1 to 8 characters**, which will determine how many bytes of data are included in the telemetry message.
  Each character in txData designates one byte in the telemetry message.
- **txID**. CAN Message ID: Represents the destination address of the telemetry message.
  It can be 29-bit or 11-bit CAN 2.0B identifier, however, if CANext = 0, only the lower 11 bits are used.

Interface Control

This section explains how the **encode/decode** needs to be configurated.

> **Note**
>
> As an example, we can take servo position data represented as a 12-bit two's complement format, which provides 2^{12} = 4096 discrete steps.
> Therefore, each step corresponds to an angle of 360º / 4096 = 0.088º.

Encoding

To **encode** an angle into steps:

$$Steps = \frac{Angle}{Step\ Size}$$

ⓘ Note

For example, if the angle is 25º and each step represents 0.088º, then:

$$Steps = \frac{25}{0.088} = 284\ steps$$

The encoded value of 25º in digital steps is 284 (0x11C in hexadecimal).

⚠ Caution

The calculation for the minimum deflection depends on the user's servo specifications and how position data is represented. For example, if the minimum deflection is -30º, this corresponds to:

$$Steps = \frac{-30}{0.088} = -341\ steps$$

Since the value is negative, in 12-bit two's complement format, it is represented as:

$$4096 + (-341) = 3755\ steps$$

Decoding

To **decode** the steps into an angle:

$$Angle = Steps \times Step\ Size$$

ⓘ Note

If the encoded value is 284, decoding would give:


$$Angle = 284 \times 0.088 = 25^{o}$$

So, decoding the value 284 returns the angle of 25º.

PWM

The following steps explain how to configure a PWM servo in Veronte Autopilot 1x.

1. Connect the servo according to the manufacturer's documentation and follow the PWM - Integration examples section of the **1x Hardware Manual** to connect it to the Autopilot 1x.
2. Go to Connections menu → **PWM panel**.
   - Select and configure the PWM pins where the servos are connected. Set the frequency according to the manufacturer's specifications.

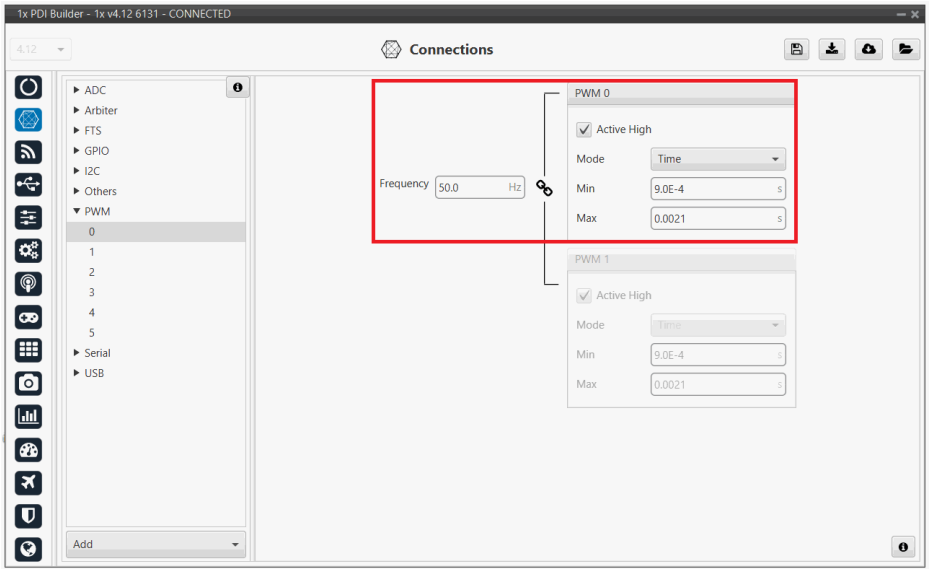


PWM - Connections configuration

> ⚠ **Caution**
>
> If there is no PWM tab or the PWM pin where the servo is connected is not shown on the interface, it must be because it is configured as GPIO. For more information on this, refer to PWM - Connections section of this manual.

3. Go to **Block Programs menu**.
   - Create a program to make the necessary connection to the servo blocks.

     Usually the user has a **Control to servo program** where the servo blocks are implemented.

- Configure the Actuator block connecting **PWM** block as Pulse and **Actuator Outputs** as Servo:

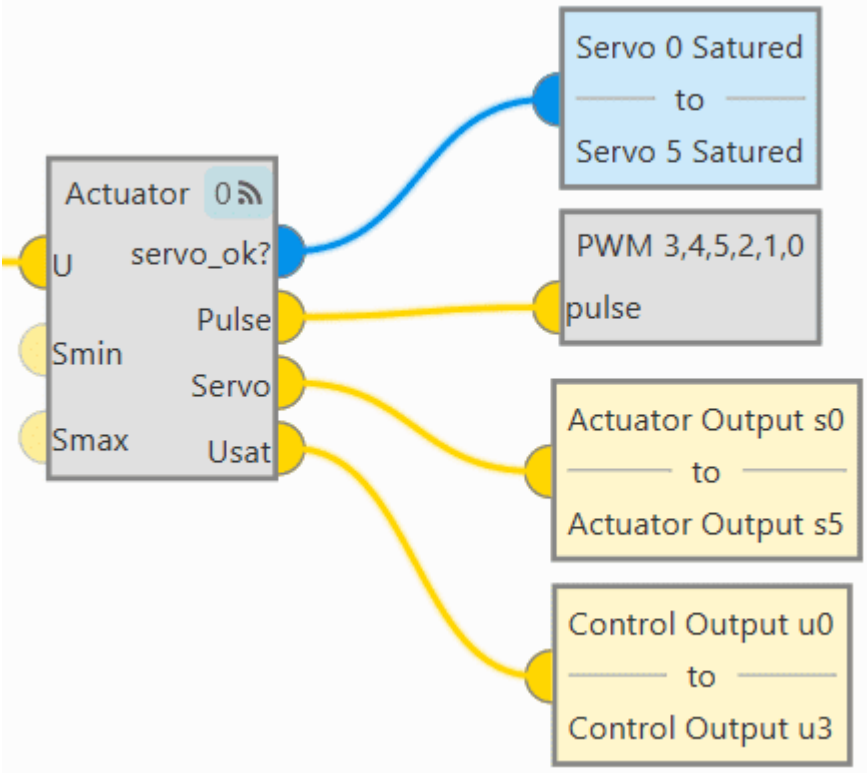


PWM - Block Programs connection

- Assign a given PWM to a given actuator output.

  The assignment is done automatically in the order in which they are configured in the blocks. That is, the first PWM (the one with Id 0) will relate to the first actuator output, which does not necessarily mean that PWM 0 is assigned to Actuator Output s0.

  In this example, the PWMs are assigned to the actuator outputs as shown in the following figure:

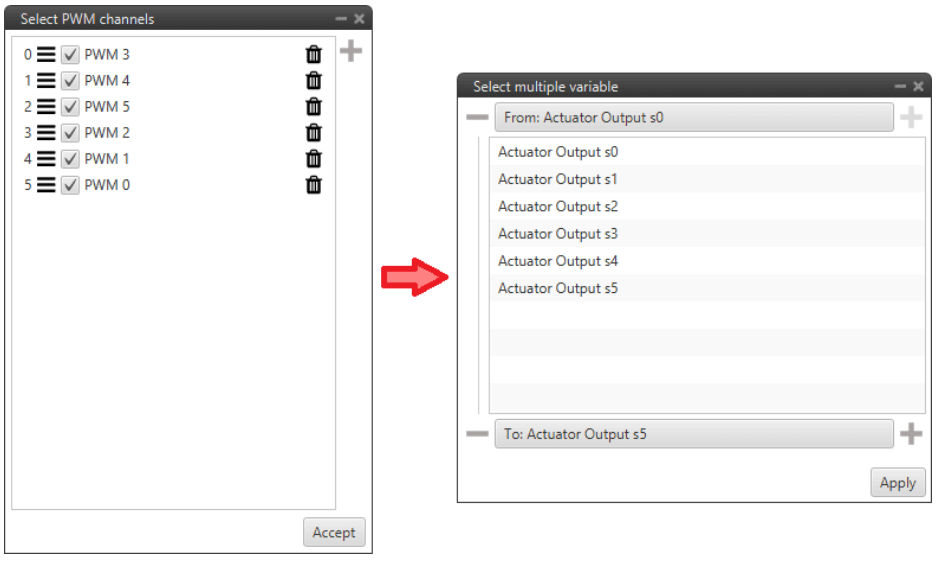

PWM - Block Programs configuration

> **Note**
>
> For instance, PWM 5 (with id 2) is assigned to Actuator Output s2.

For more information on Actuator and PWM blocks, see Actuator - Servos blocks and PWM - Servos blocks of **Block Programs** section.

Serial

Serial servos are configured differently than PWM servos as the protocol of a serial device must be defined with serial custom messages.

In this case a **PWM** variable must be sent through a serial interface.


Volz DA26 - RS485

First, users can find the recommended wiring connection for **RS485** connection between Volz DA26 servos and Veronte Autopilot 1x in the Volz DA26 - RS485 - Integration examples section of the **1x Hardware Manual**.

Then, follow the steps below to configure a **Volz DA26 servo via RS-485**.

1. Go to Input/Output menu → **I/O Setup panel**.


   Bidirectionally connect the **RS485** port to a **RS custom message**, in this example RS custom message 0 is used:

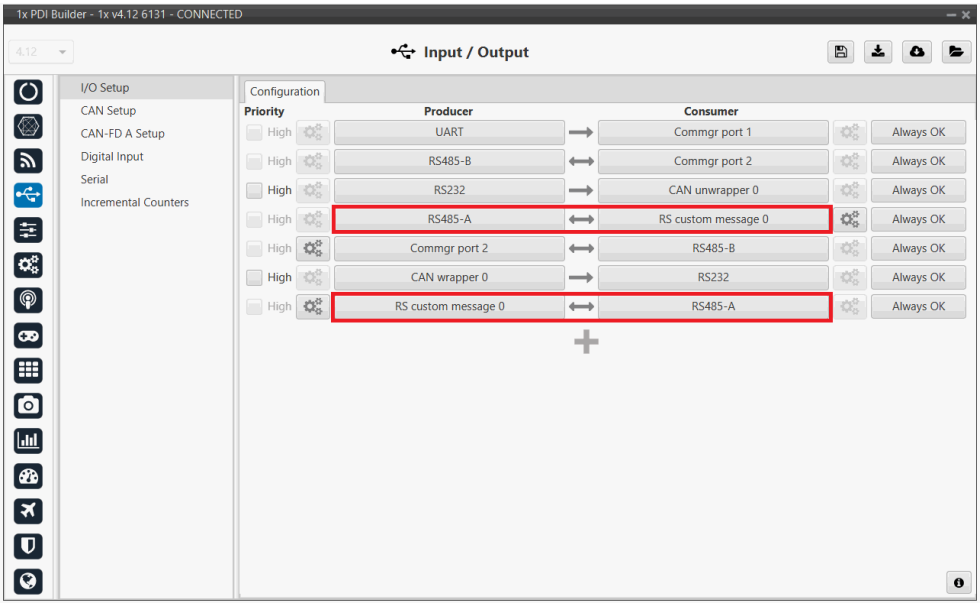

RS485 ↔ RS custom message 0

2. Click on  to configure the RS custom message 0 producer. Users must setup it by defining the protocol specified by the manufacturer:

> **Note**
>
> As the RS-485 is a **Half Full duplex** serial port, Veronte Autopilot 1x needs to leave this serial bus free for a certain time in order to receive the servo response. This is done by setting the **Delay** parameter.

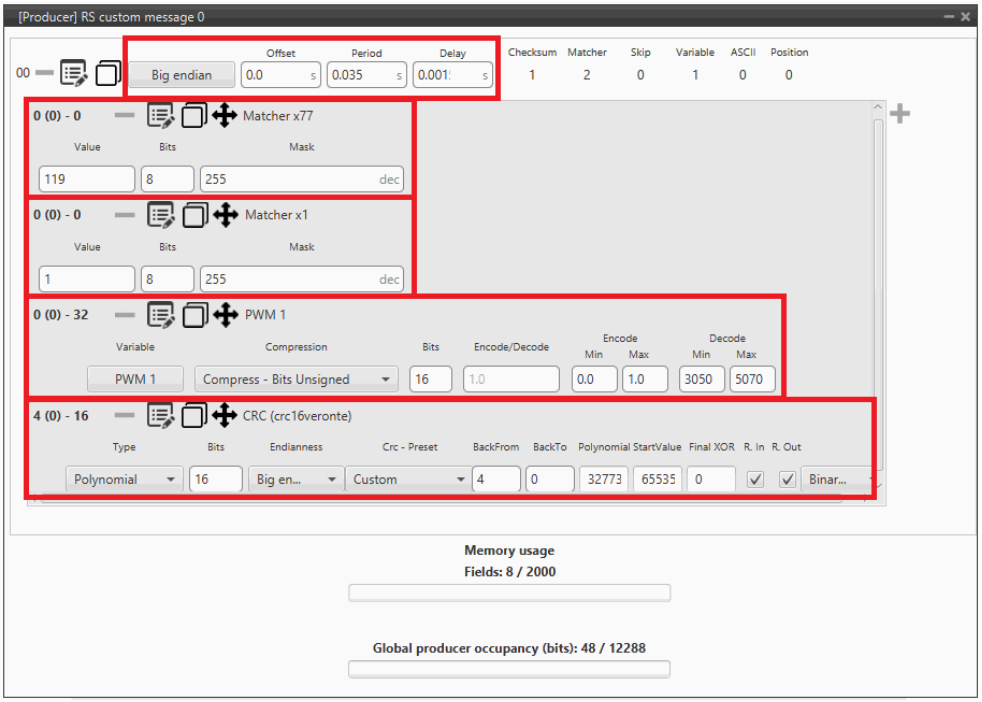

Volz DA26 - RS custom message 0 configuration

- **Endianness**: Big endian
- **Period**: 0.035
- **Delay**: 0.0015
  - **Matcher x77**: Silent mode command (0x77).
    - **Value**: 119
    - **Bits**: 8
    - **Mask**: 255
  - **Matcher x1**: Servo interface Id = 1. The Id will be different for each servo and/or interface.
    - **Value**: 1
    - **Bits**: 8
    - **Mask**: 255

- **PWM 1**: PWM is the variable that carries the information that has to be applied to the servo. Therefore, it must be included in the message.
  - **Variable**: PWM 1
  - **Compression**: Compress - Bits Unsigned
  - **Encode**: 0 / 1
  - **Decode**: 3050 / 5070
- **CRC (Custom)**: A Checksum is needed to complete the communication protocol.
  - **Type**: Polynomial
  - **Bits**: 16
  - **Endianness**: Big endian
  - **CRC - Preset**: Custom
  - **BackFrom**: 4
  - **BackTo**: 0
  - **Polynomial**: 32773
  - **Start Value**: 65535
  - **Final XOR**: 0

> ⓘ **Note**
>
> For more information on checksum, see Checksum (CRC) explanation - Input/Output section of this manual.

Air Data Sensors

Veronte Autopilot 1x can be integrated with any external sensor that shares the communication interface.

Air data sensors can be configured to be considered as part of the sensors fusion.

OAT Sensor


Once **OAT sensor** is connected to **Autopilot 1x** (according to OAT sensor 428 of MGL Avionics - Integration examples section of the **1x Hardware Manual**),

the value can be monitored in **1x PDI Builder** by using the variables ADC0 to ADC4.

> **Note**
>
> For pin ANALOG_0 the correspondent ADC variable in **1x PDI Builder** is ADC0, for ANALOG_1 is ADC1 and so on.


Read the following steps to configure it:

1. Go to Connections menu → **ADC 1 panel** (This is only an example, the user must select the ADC pin where the signal is connected).
   Click on 'Create new program':

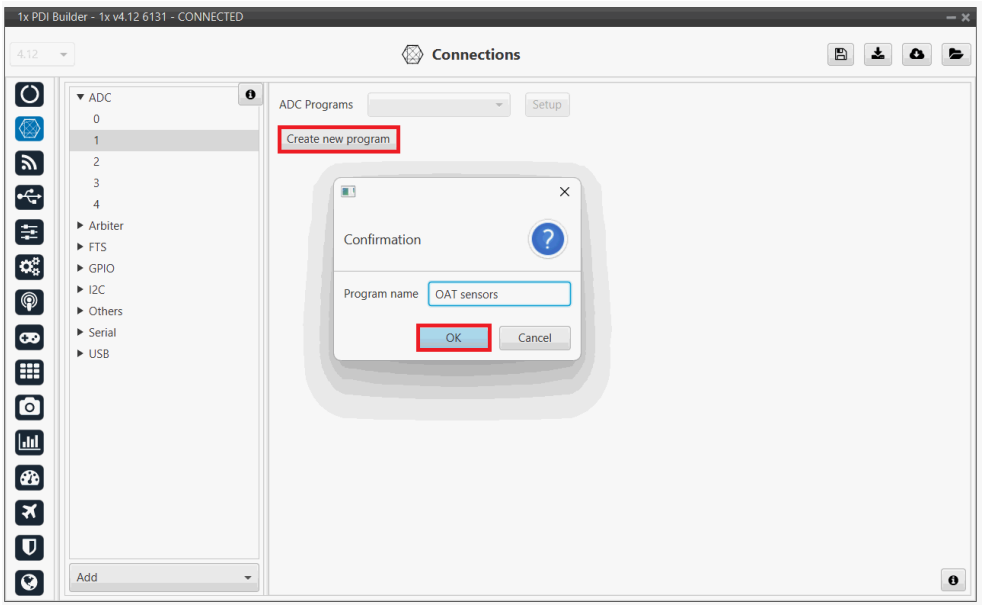


OAT Sensor - Create ADC program


2. Go to **Block programs menu**.
   Configure the following operation (for more information about blocks, read Block Programs section of this manual):

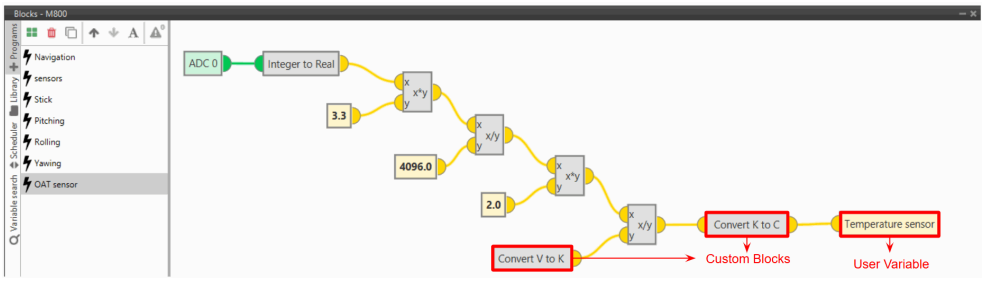

OAT sensor - Block Programs operation

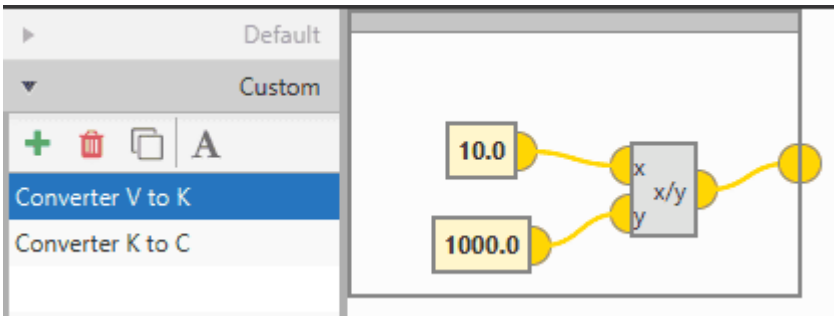

OAT sensor - Custom block: Converter from V to K

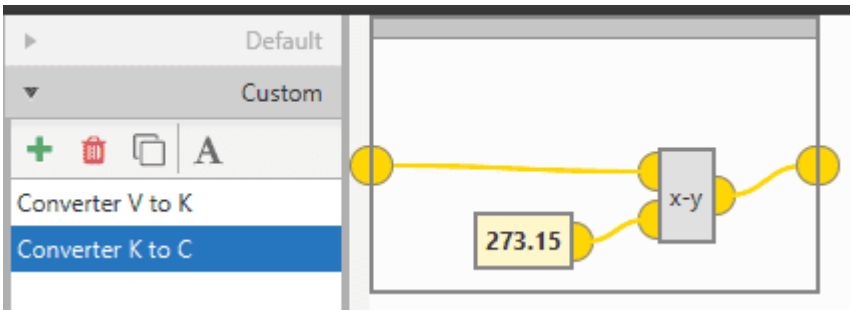

OAT sensor - Custom block: Converter from K to °C

After implementing the operation, the variable Temperature sensor will represent the temperature (in °C) measured by the OAT sensor.

> ⓘ **Note**
>
> If the temperature is needed in other units, the only thing necessary would be to modify the Custom block Converter K to C, or simply remove it.

Altimeters

Lidar

The integration between Veronte Autopilot 1x and a lidar is performed using a variety of interfaces depending on the lidar device. The most common interfaces are I2C or analog although serial or CAN bus can also be used if the lidar is compatible.


ADC lidar

An ADC lidar changes the voltage depending on the measured distance and therefore the connection to the Autopilot 1x is made using the **ADC pins** (see Pinout - Hardware Installation section of the **1x Hardware Manual**).

Once connected to Autopilot 1x, the value can be monitored in **1x PDI Builder** by using the variables ADC0 to ADC4.


> **Note**
>
> For pin ANALOG_0 the correspondent ADC variable in **1x PDI Builder** is ADC0, for ANALOG_1 is ADC1 and so on.

1. Go to Connections menu → **ADC 0 panel** (This is only an example, the user must select the ADC pin where the signal is connected).
   Click on 'Create new program':

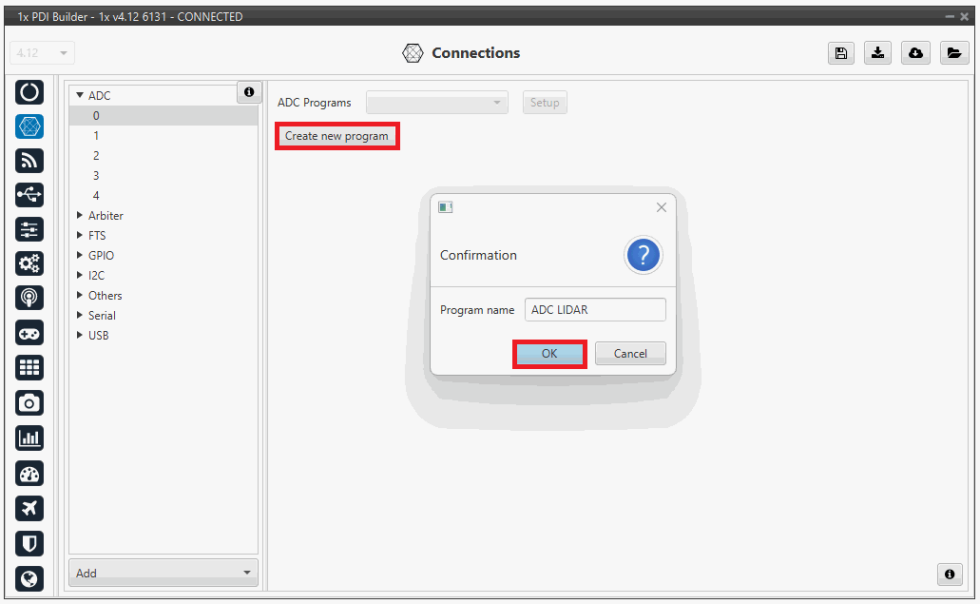

ADC lidar - Create ADC program

2. Go to **Block programs menu**.
   Configure the following operation (for more information about blocks, see Block Programs section of this manual):

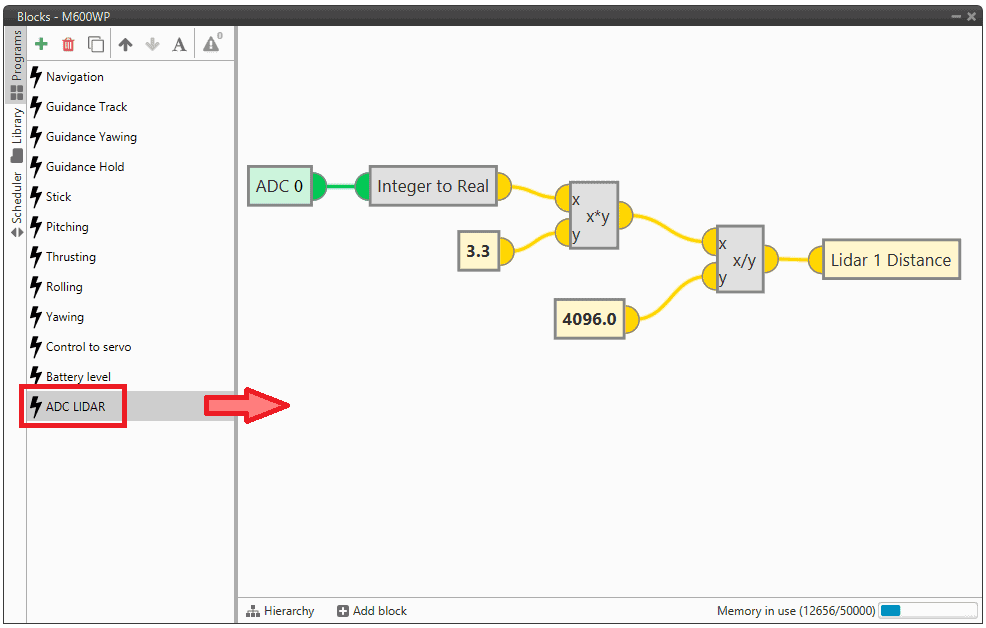

ADC lidar - Lidar operation

After implementing the operation the variable Lidar 1 Distance will represent the distance measured by the lidar.

> **Note**
>
> As DRX can read up to 36 V per each ADC, the `3.3` value of the ADC program must be changed to `36` if applicable.

I2C lidar

I2C lidars are configured slightly differently.


Connect the lidar following the pinout provided by the manufacturer and connect it to the Veronte Autopilot 1x **I2C bus** following the Pinout - Hardware Installation section of the **1x Hardware Manual**.

In this case it is not needed to transform the lidar readings, the readings will be reported directly in the selected lidar distance variable.

Go to Sensors menu → **Lidar panel**.

- Enable Lidar 0
- Select the desired Lidar from the drop-down menu
- Set the I2C address

More information on the available lidar options can be found in the Lidar - Sensors section of this manual.

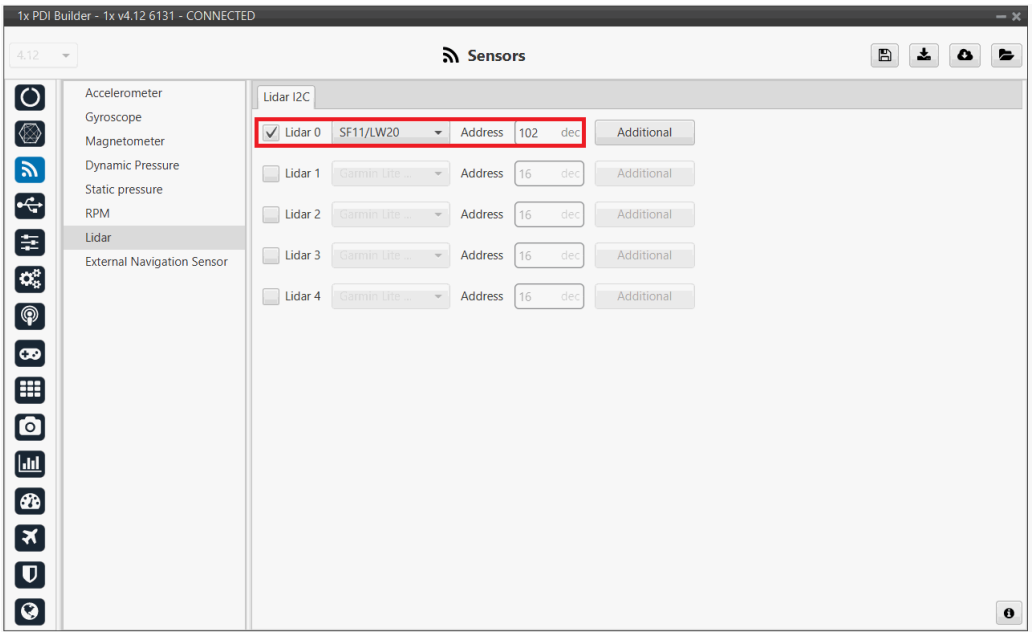

I2C lidar


> ⚠ **Warning**
>
> I2C address will be different for different devices make sure to define it properly by checking the manufacturer documentation.

Lidar Garmin Lite v3

Once the device **hardware installation** explained in the Lidar Garmin Lite v3 - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

To integrate the **Garmin Lidar**, users must configure this menu as follows:

- Enable the desired lidar, in this case **Lidar 0** has been used.
- Select the **Garmin Lidar Lite v3** option from the drop-down menu.
- Enter the address **98** in **decimal format**.

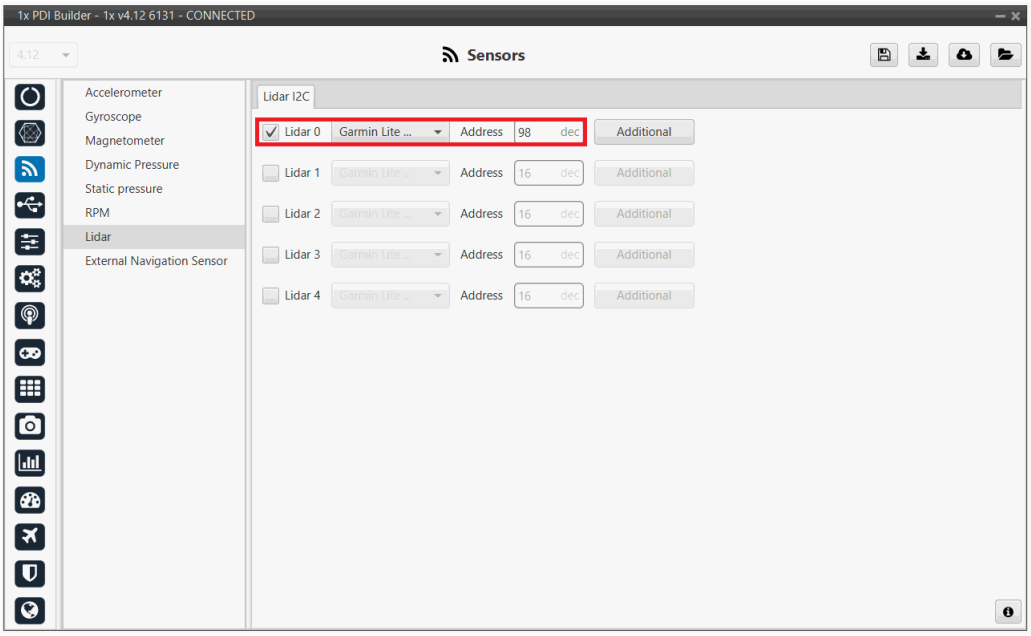

Lidar Garmin Lite v3


Lightware LW20 Lidar

Once the device **hardware installation** explained in the Lightware LW20 Lidar - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

> **Important**
>
> **Lightware SF20 Lidar** is configured with the same settings. Users can refer to its hardware installation in the Lightware SF20 Lidar - Integration examples section of the **1x Hardware Manual**.

To integrate the **Lightware LW20 Lidar**, users must configure this menu as follows:

- Enable the desired lidar, in this case **Lidar 0** has been used.
- Select the **SF11/LW20** option from the drop-down menu.
- Enter the address **102** in **decimal format**.

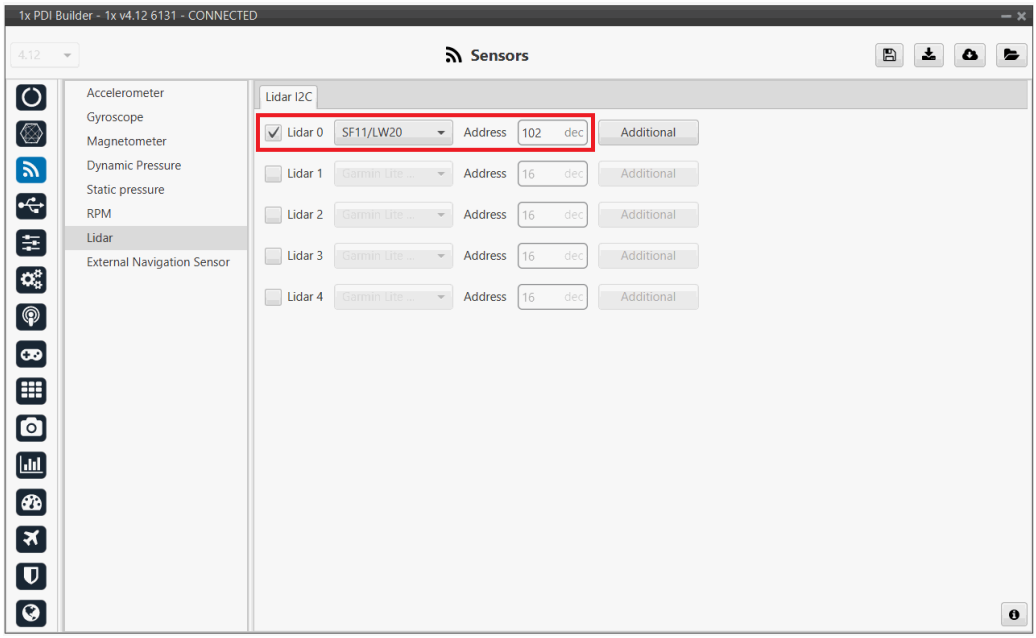

Lightware LW20 Lidar

Radar

Radar altimeters are common devices on aircrafts.

Ainstein CAN Radar


The following explanation corresponds to the integration of the **Ainstein CAN Radar**.

Once the device **hardware installation** explained in the Ainstein CAN Radar - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

These settings will allow Autopilot 1x to read out via **CAN A** the radar altimeter reading, in particular **distance**.


> **ⓘ Note**
>
> In the datasheet of the radar, the user can access the complete protocol of the device.

1. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.
   Connect an **Input filter** producer to **Custom message 0**, in this example Input filter 1 has been selected:

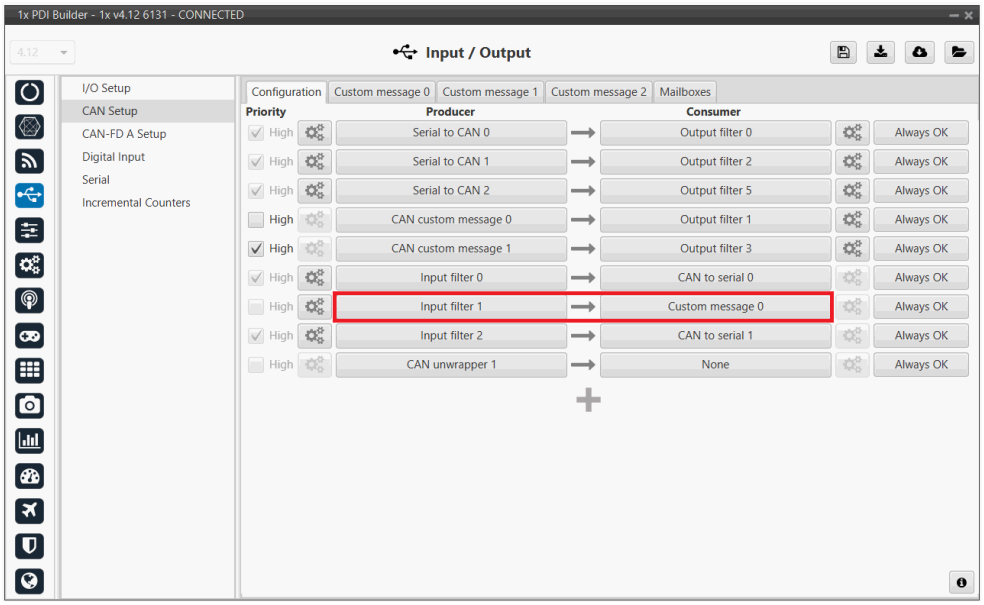


Ainstein CAN Radar - CAN Setup configuration

Click on  to configure this Input filter to read from **CAN A**, with **Id 589826** and allow both types of messages to enter the input filter (since the radar altimeter uses **extended IDs**).

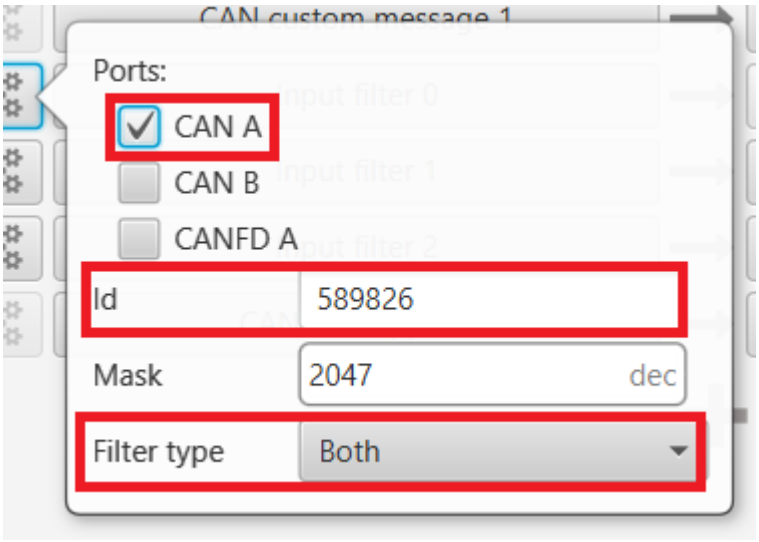

Ainstein CAN Radar - Input filter configuration

2. After specifying that **Custom message 0** will receive the data from **CAN A**, go to **Mailboxes tab**.
   Configure a **CAN A mailbox** for **extended CAN ID message: 589826**:

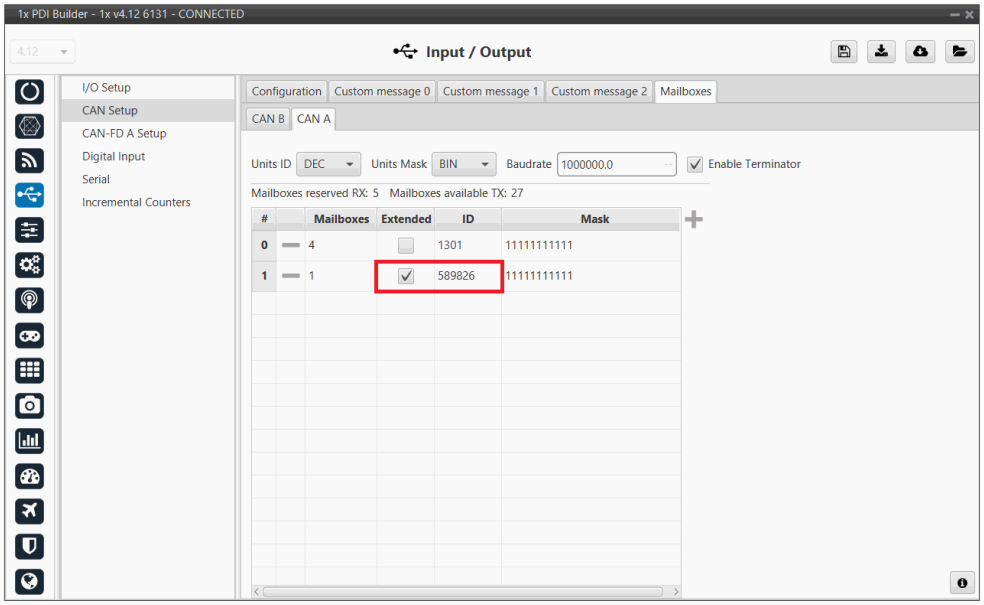


Ainstein CAN Radar - Mailboxes configuration

3. Go to UI menu → Variables panel → **Real tab**.


   Rename a User Variable that will be used to store the measurement read from the radar:

> **Important**
>
> If users wish to later use the radar readings to enter the EKF algorithm, the variable selected here must be Lidar X Distance or External Range Sensor X Measure, as explained in the Using altimeter readings section below.

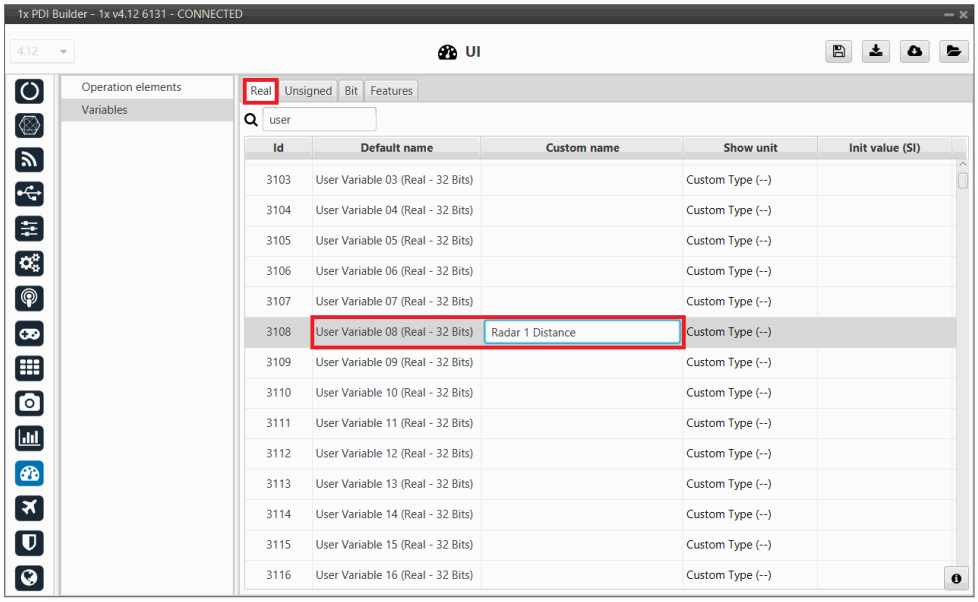


Ainstein CAN Radar - User Variable renamed

4. Finally, go to Input/Output menu → CAN Setup panel → **Custom message 0 tab** (since the consumer Custom message 0 has been connected to the input filter).
    - Add a new message in **RX** with **extended ID 589826** and **Big endian**:

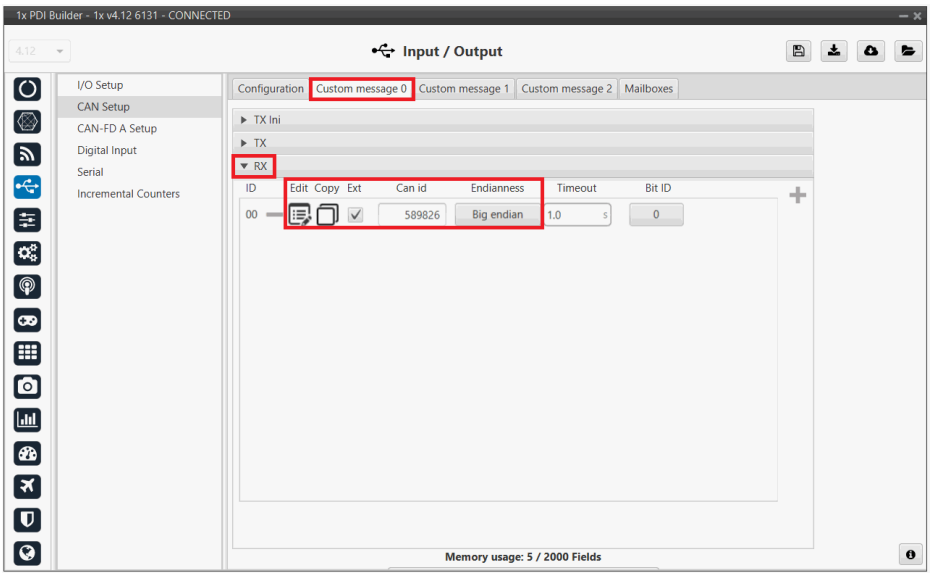

Ainstein CAN Radar - Custom message 0

    - Clicking on  , configure the reading of the message by setting the following values for the different parameters:
        - **Variable**: Radar 1 Distance (to store the received value in the user variable that has been renamed above)
        - **Compression**: Compress - Bits Unsigned
        - **Bits**: 16
        - **Encode - Min/Max**: 0.0/1.0
        - **Decode - Min/Max**: 0/100

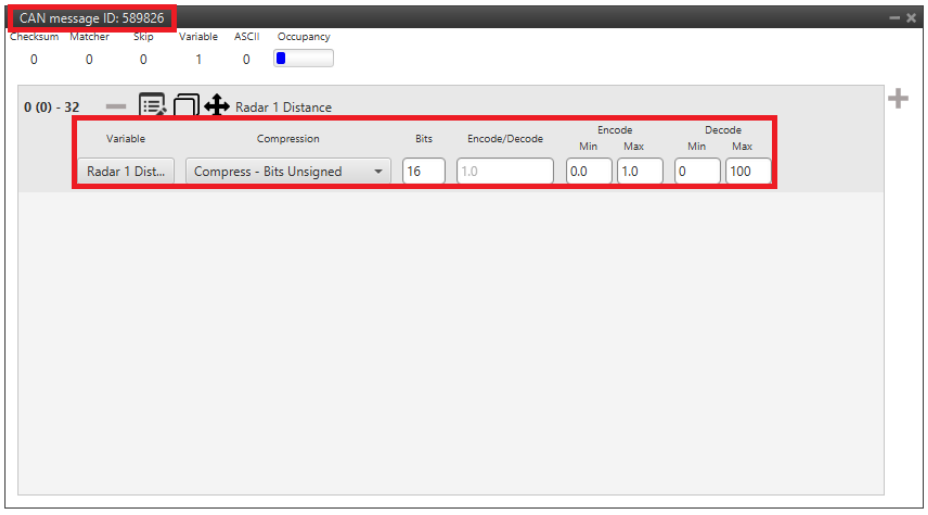

Ainstein CAN Radar - Custom message 0 configuration


For more details on CAN configuration see CAN Setup - Input/Output section of this manual.

> **Note**
>
> CAN ID messages and messages content will change for different Radar altimeters. Check the documentation of your device for further details.

Using altimeter readings

Once the information provided by a lidar/radar sensor is stored in a system variable such as Lidar X Distance or External Range Sensor X Measure via an ADC reading, I2C, serial or CAN, the user has to set how this data will be considered. Common uses are: to consider the lidar/radar data as external sensor or to trigger an action based on a predefined event.


- **Altimeter configuration**: The following operation must be configured in the Block Programs menu to consider the lidar/radar measurement as an EKF input.

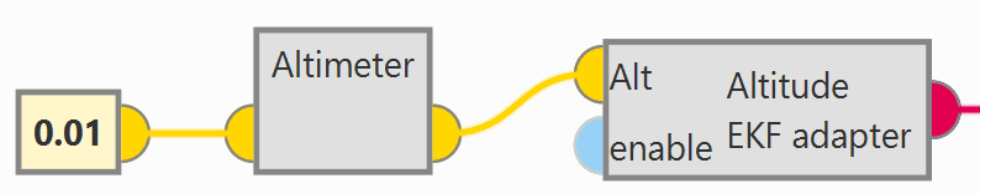


Altimeter connection in Block Programs

The variable where the lidar/radar measurement is stored must be selected. In this example, Lidar 1 Distance has been used:

> **Error**
>
> Lidar X Distance or External Range Sensor X Measure variables must be selected here for a correct configuration of the **Altimeter block**, and therefore they must have been previously used to store the measurement. Otherwise, PDI Error: 696 will occur when saving the configuration.

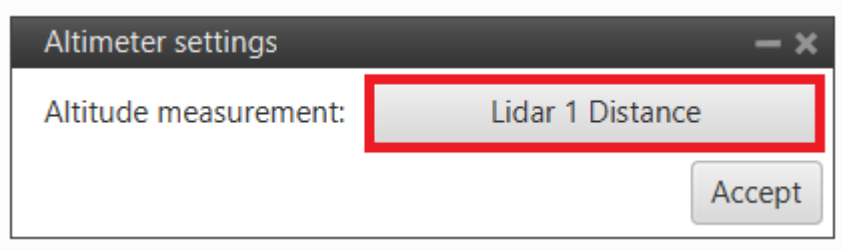


Altimeter sensor block configuration

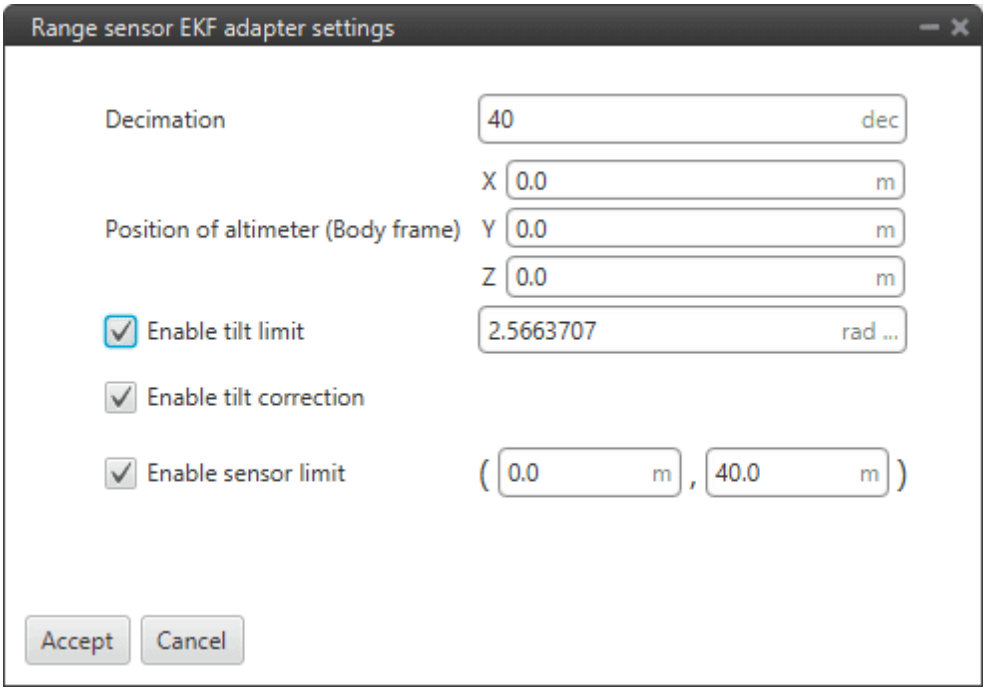

Altitude EKF adapter block configuration

For more information on these blocks, see Altimeter - Sensors blocks and Altitude EKF adapter - Navigation blocks of **Block Programs** section.

- **Automation**: This automation will trigger a change of phase, Flare phase, when the aircraft is landing and at 5 m AGL.

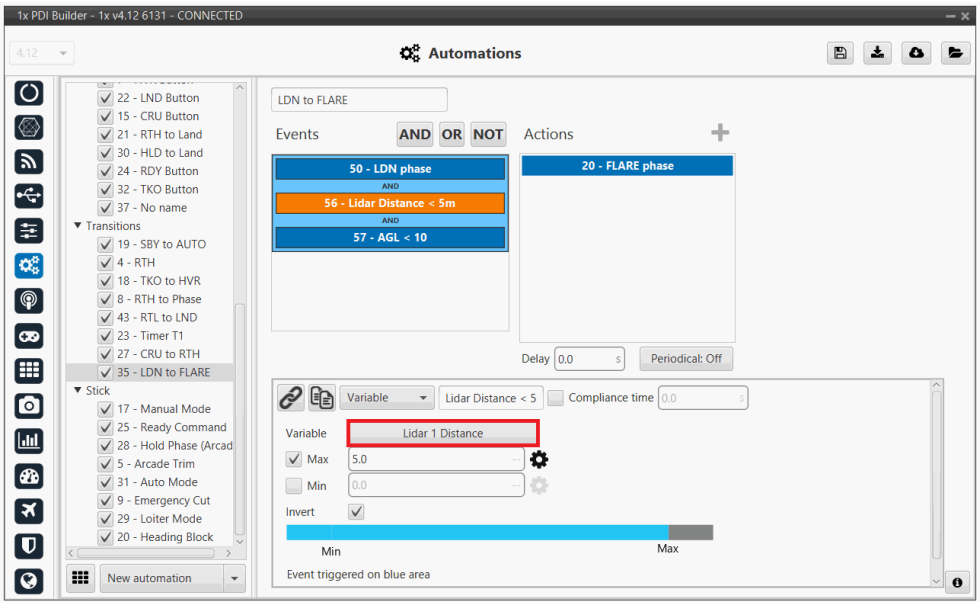

Lidar automation example

For more information on automations, see Automations section of this manual.

Datalinks

LOS

External radios


This section describes the required configuration to be performed in **1x PDI Builder** to allow a **correct connection between Veronte Autopilot 1x and any external radio**.

External radios compatible with the Autopilot 1x, such as Microhard, DTC, Digi, Silvus, SDL and XDL24 (Embention external datalinks, contact sales@embention.com for more information).

After configuring the external radio in the corresponding software, follow the steps below:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.


   Check that these parameters are the same as the parameter values previously set in the external radio.

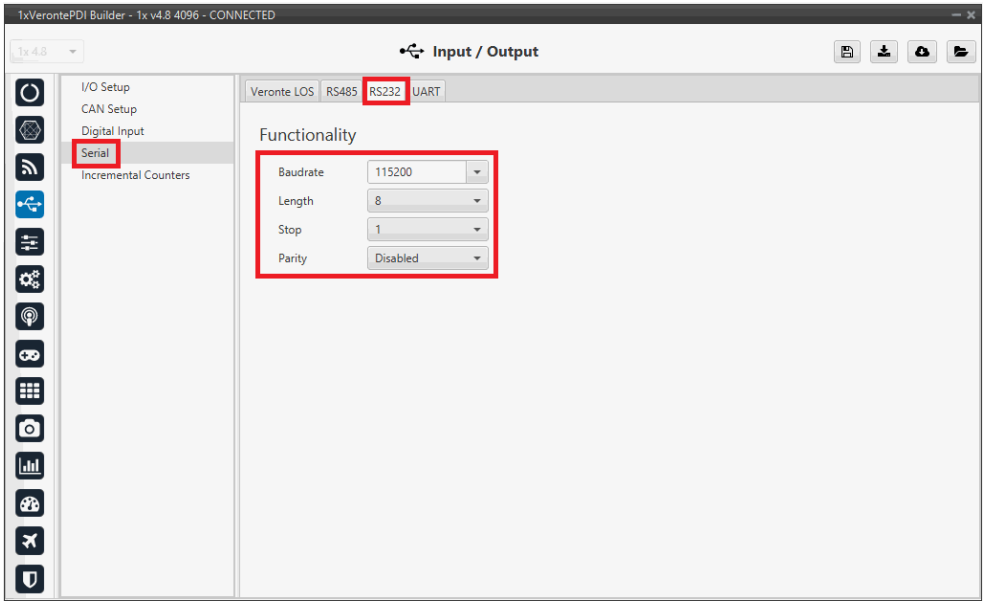

External radios - RS232 port configuration

2. Go to Input/Output menu → **I/O Setup panel**.

RS-232 has to be configured as a **bidirectional** commgr port.

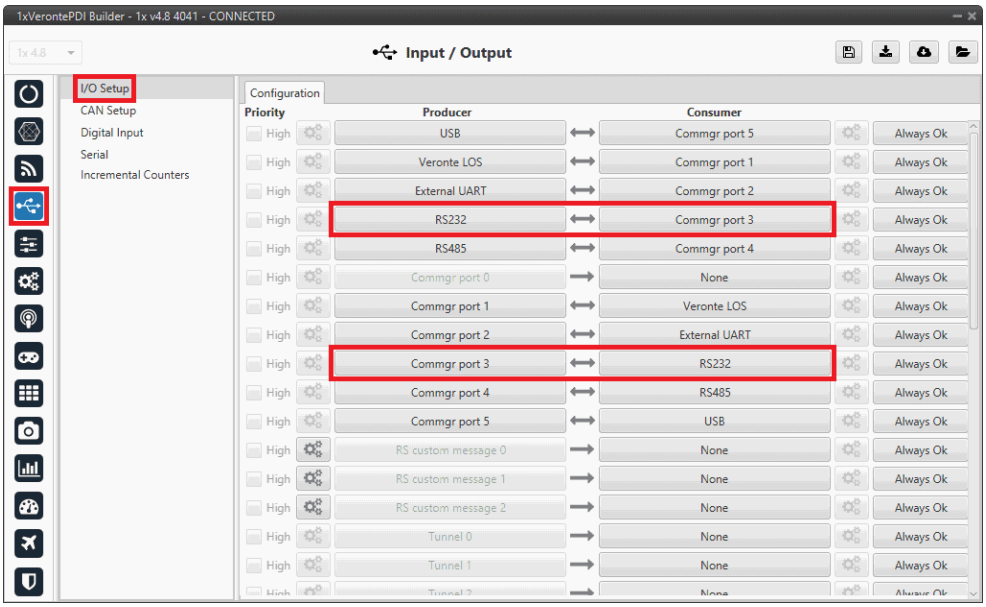

External radios - I/O Setup configuration

> **Note**
>
> These settings have to be made in both Autopilot 1x units (GND and AIR).

GNSS Receivers

NexNav GNSS


Once the device **hardware installation** explained in the NexNav GNSS - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

The following steps explain how to configure **Veronte Autopilot 1x** to integrate **NexNav** as an external GNSS sensor via **RS232**:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.

   Configure the serial port parameters:


   - **Baudrate**: 19200
   - **Length**: 8
   - **Stop**: 1
   - **Parity**: Disabled

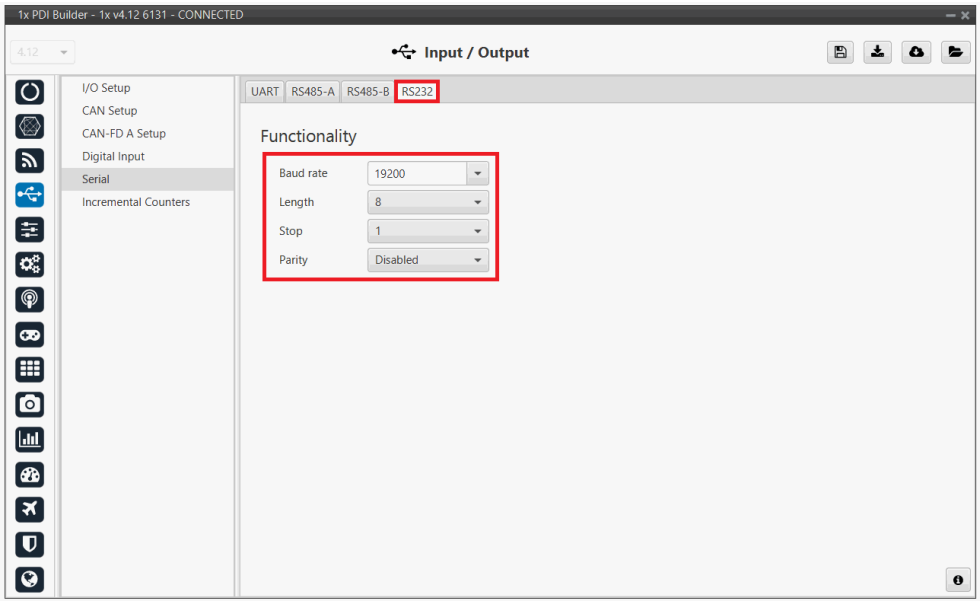

NexNav GNSS - RS232 configuration


2. Go to Input/Output menu → I/O Setup panel → **Configuration tab**.

   Connect the **RS232** producer to a **RS custom message** consumer, in this example RS custom message 1 is used:

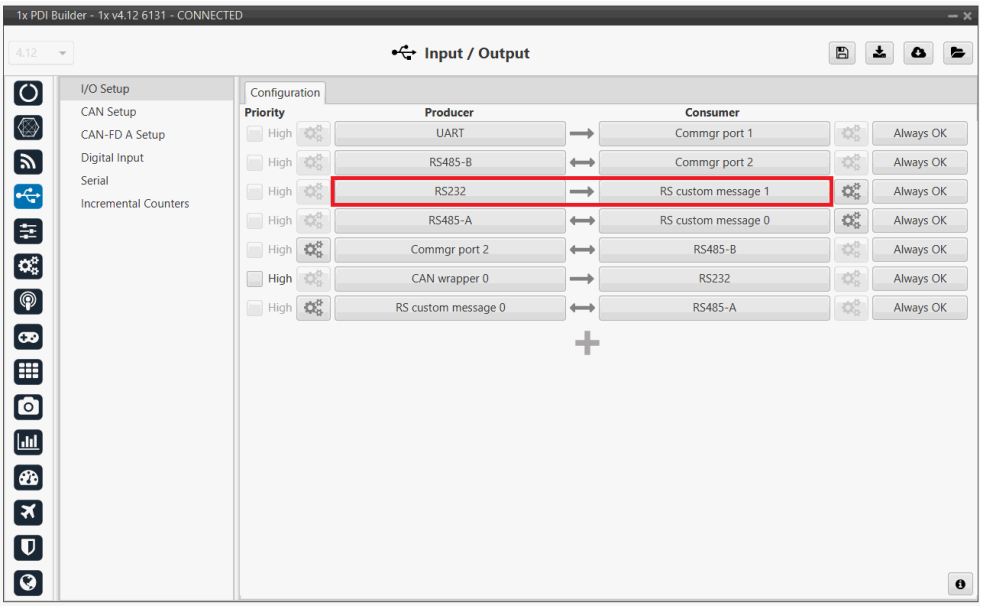

NexNav GNSS - RS232 → RS custom message 1

3. Click on  to configure the RS custom message 1 consumer to store the information received from the external GNSS. Users must set it up by defining the protocol specified by the manufacturer:

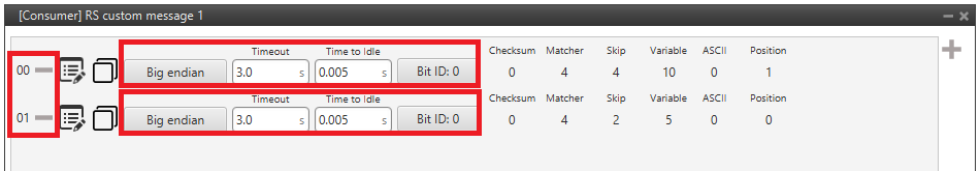

NexNav GNSS - RS custom message 1 configuration

For both messages:

- **Endianness**: Big endian
- **Time out**: 3 seconds
- **Time to Idle**: 0.005 seconds
- **Bit ID**:
  - For message 00 ⇒ "Custom msg 0 Rx Error" renamed to **Navigation Data**
  - For message 01 ⇒ "Custom msg 1 Rx Error" renamed to **Auxiliary Navigation Data**

4. Then, to configure each message, access its configuration  :

(00) - Navigation Data Message

Byte	Parameter	Custom Message Type	Message Configuration
0	Matcher x10	**Matcher**	◦ **Value**: 16 ◦ **Bits**: 8 ◦ **Mask**: 255
1	Matcher x51	**Matcher**	◦ **Value**: 81 ◦ **Bits**: 8 ◦ **Mask**: 255
2	Nav State (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Unsigned ◦ **Bits**: 8 ◦ **Encode - Min/Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
3-4	Data Validity	**Variable**	

Byte	Parameter	Custom Message Type	Message Configuration
	Flags (Real Variable, 32 bits)		◦ **Compression**: Compress - Bits Unsigned ◦ **Bits**: 16 ◦ **Encode - Min/Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
5-8	Time of Fix (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/Decode**: 1.0
9-32	External GNSS Position (Feature Variable, 192 bits)	**Position**	◦ **Units**: Radians ◦ **Factor**: 1.0
33-36	UTC Time (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/Decode**: 1.0
37-38	Skip 16	**Skip**	**Bits**: 16
39-42	GPS North Velocity (Real	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/Decode**: 1.0

Byte	Parameter	Custom Message Type	Message Configuration
	Variable, 32 bits)		
43-46	GPS East Velocity (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
47-50	GPS Vertical Velocity (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
51-62	Skip 96	**Skip**	**Bits**: 96
63-66	HFOM (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
67-78	Skip 96	**Skip**	**Bits**: 96
79-82	VFOM (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
83-88	Skip 48	**Skip**	**Bits**: 48
89		**Matcher**	◦ **Value**: 16

Byte	Parameter	Custom Message Type	Message Configuration
	Matcher x10		◦ **Bits**: 8 ◦ **Mask**: 255
90	Matcher x3	**Matcher**	◦ **Value**: 3 ◦ **Bits**: 8 ◦ **Mask**: 255

(01) - Auxiliary Navigation Data Message


Byte	Parameter	Custom Message Type	Message Configuration
0	Matcher x10	**Matcher**	◦ **Value**: 16 ◦ **Bits**: 8 ◦ **Mask**: 255
1	Matcher x80	**Matcher**	◦ **Value**: 128 ◦ **Bits**: 8 ◦ **Mask**: 255
2	Data Validity Flags Auxiliar (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Unsigned ◦ **Bits**: 8 ◦ **Encode - Min/Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
3-6		**Variable**	

Byte	Parameter	Custom Message Type	Message Configuration
	VHFOM (Real Variable, 32 bits)		◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
7-10	VVFOM (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Uncompress ◦ **Encode/ Decode**: 1.0
11-22	Skip 96	**Skip**	**Bits**: 96
23-24	HDOP (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Unsigned ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
25-26	VDOP (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Unsigned ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
27-28		**Variable**	◦ **Compression**: Compress - Bits Unsigned

Byte	Parameter	Custom Message Type	Message Configuration
	PDOP (Real Variable, 32 bits)		◦ **Bits**: 16 ◦ **Encode - Min/Max**: 0.0/1.0 ◦ **Decode - Min/Max**: 0/1
29-31	Skip 24	**Skip**	**Bits**: 24
32	Matcher x10	**Matcher**	◦ **Value**: 16 ◦ **Bits**: 8 ◦ **Mask**: 255
33	Matcher x3	**Matcher**	◦ **Value**: 3 ◦ **Bits**: 8 ◦ **Mask**: 255

> **Important**
> All user variables used in these messages have been previously renamed in the Variables panel of the **UI menu**.

5. Go to **Block Programs menu** and create a new program, in this example the program is renamed to NexNav.
   The following program is defined to check that the information coming from the external GNSS is valid and can be used as an input of the Navigation block:

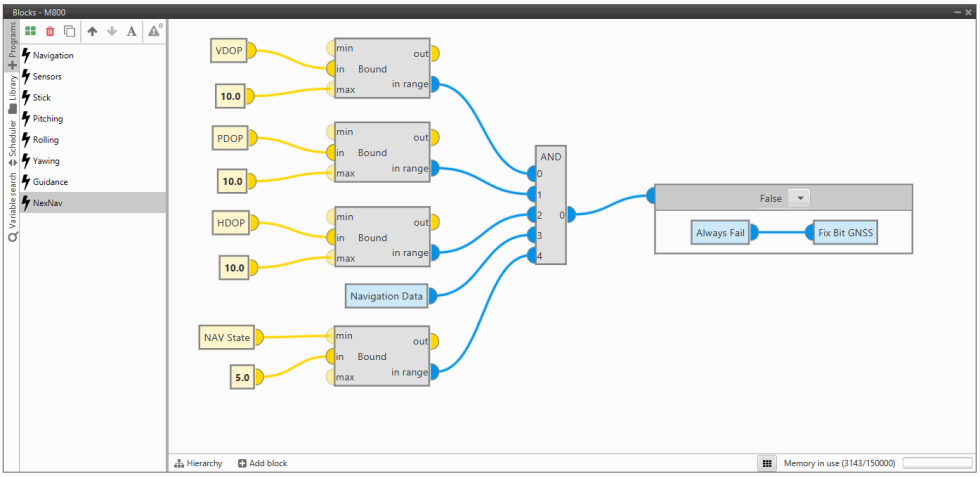


NexNav GNSS - NexNav block program

> **Important**
>
> **Navigation Data** is the bit that has been previously assigned to the CAN custom message "Navigation Data Message" to check that it is received correctly.

6. Go to **Block Programs menu** → **Navigation program**.

> **Note**
>
> Usually, the user has a **Navigation program** where the navigation blocks are implemented. However, the user can name the program as desired.


   - Add a GNSS sensor block, set it as **GPS External** and configure it as follows:

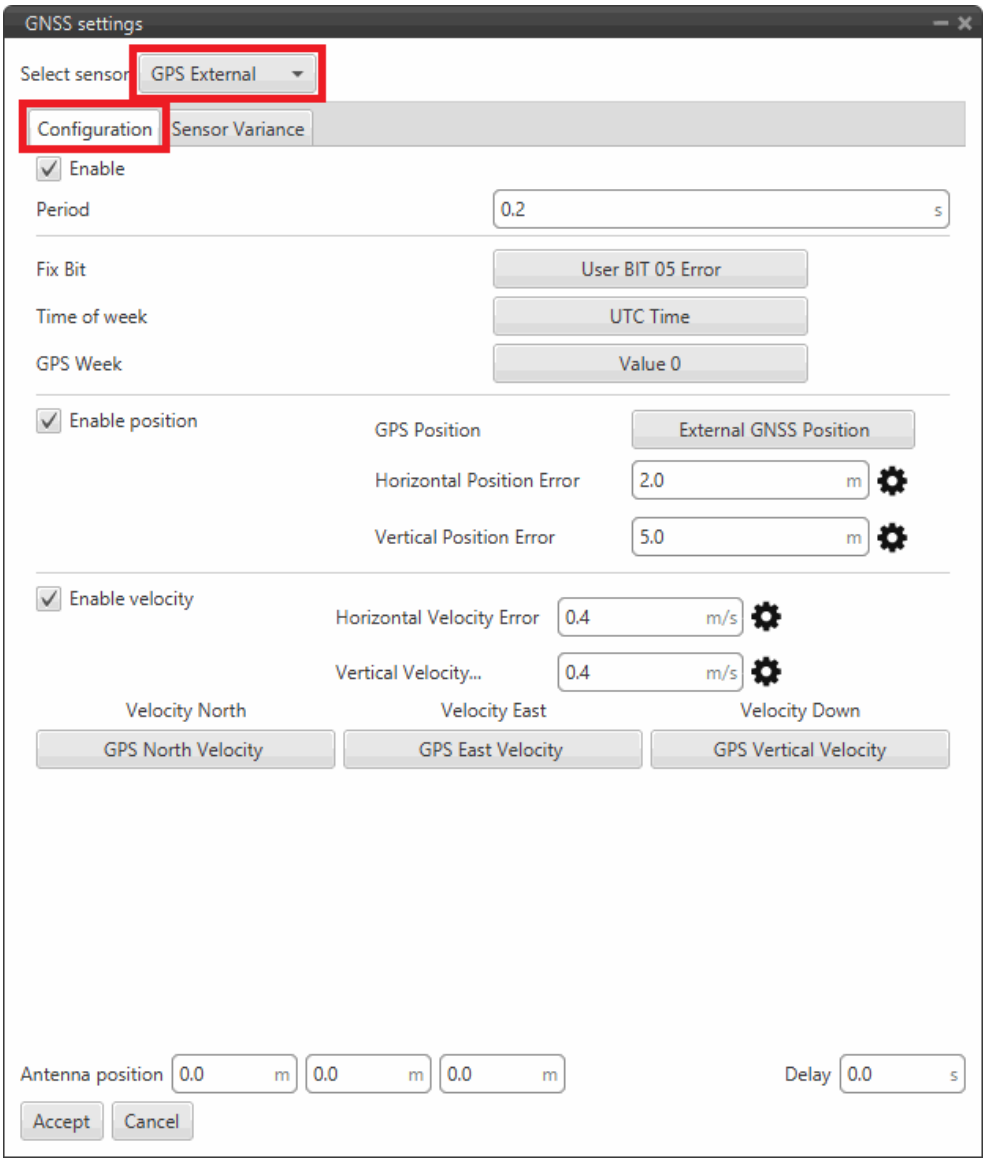

GPS External block configuration - Configuration tab

- **Enable**
- **Period**: 0.2 s
- **Fix Bit**: User BIT 05 Error, renamed to "**Fix Bit GNSS**".
  This bit is written on the **NexNav** program detailed above
- **Time of Week**: UTC Time (real user variable received from the sensor)
- **GPS Week**: Value 0 (real user variable previously renamed and defined with an init value of 0)
- **GPS Position**: External GNSS Position (feature user variable received from the sensor)
- **Horizontal Position Error**: 2 m
- **Vertical Position Error**: 5 m
- **Horizontal Velocity Error**: 0.4 m/s

- **Vertical Velocity Error**: 0.4 m/s
- **Velocity North**: GPS North Velocity (real user variable received from the sensor)
- **Velocity East**: GPS East Velocity (real user variable received from the sensor)
- **Velocity Down**: GPS Vertical Velocity (real user variable received from the sensor)

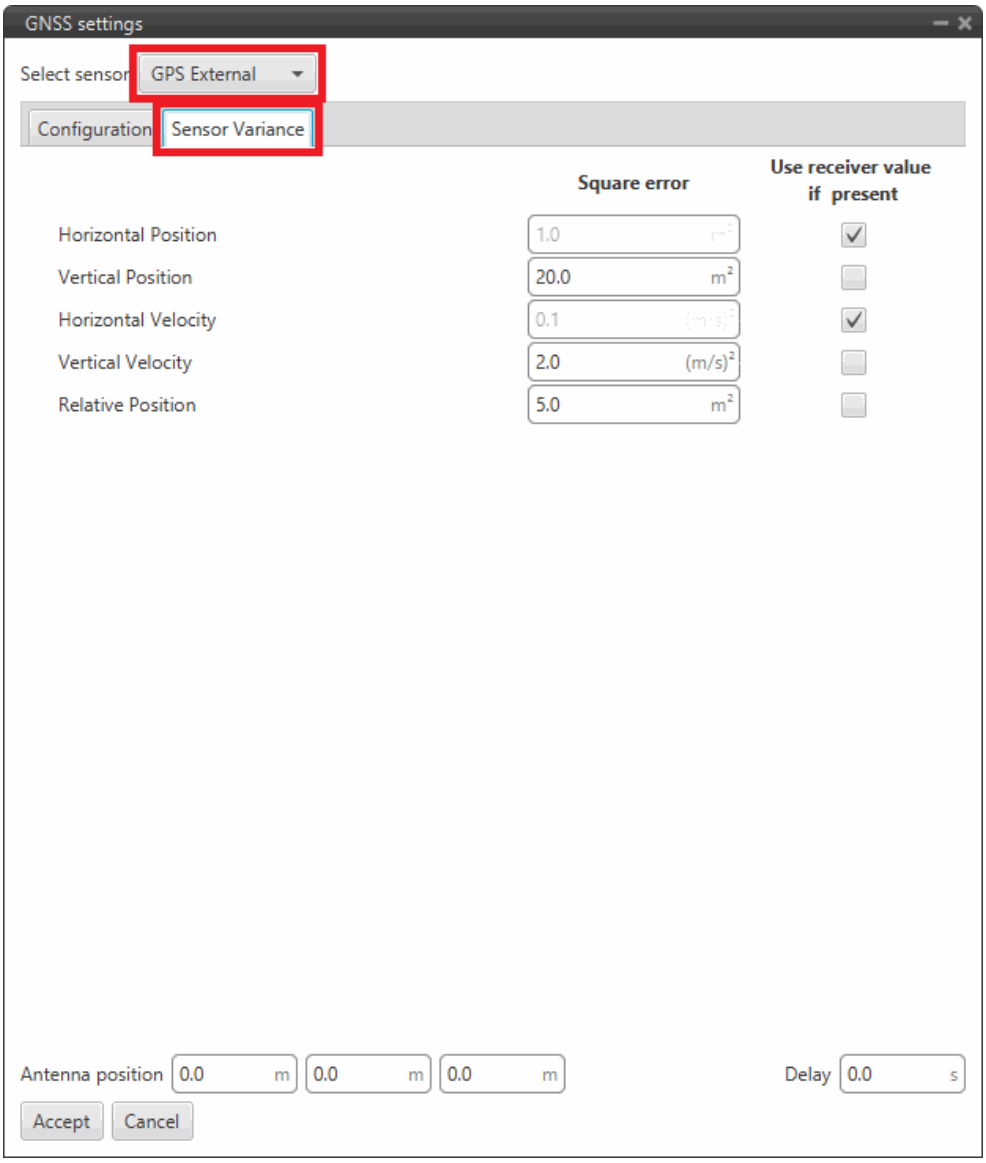


GPS External block configuration - Sensor Variance tab

- **Horizontal Position** ⇒ Use receiver value if present: Enabled<
- **Vertical Position** ⇒ Square error: 20.0 m²
- **Horizontal Velocity** ⇒ Use receiver value if present: Enabled
- **Vertical Velocity** ⇒ Square error: 2.0 (m/s)²
- **Relative Position** ⇒ Square error: 5.0 m²

For more information on this block, see GNSS sensor block - Block Programs section of this manual.

- Add **2 EKF adapter blocks** to be able to use the sensor information in the calculation of the navigation algorithm, Position EKF adapter block and Velocity EKF adapter block.


  And, Connect the outputs of the **GNSS external block** to the corresponding inputs of these blocks, as shown below:

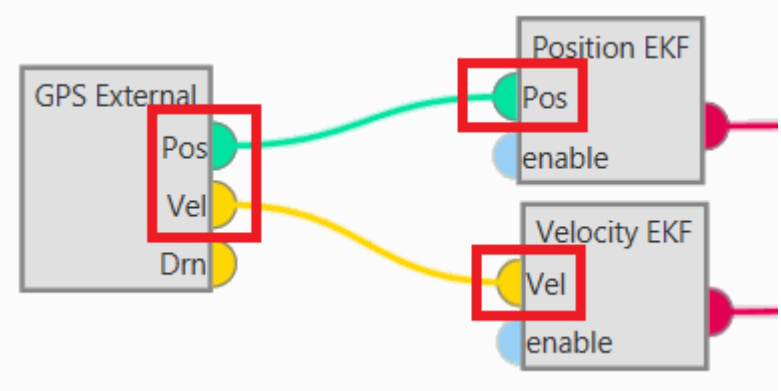

NexNav GNSS - Position and Velocity EKF adapter blocks

- Finally, the outputs of these 2 blocks must be inputs to the Navigation block.

The complete setup should look like this:

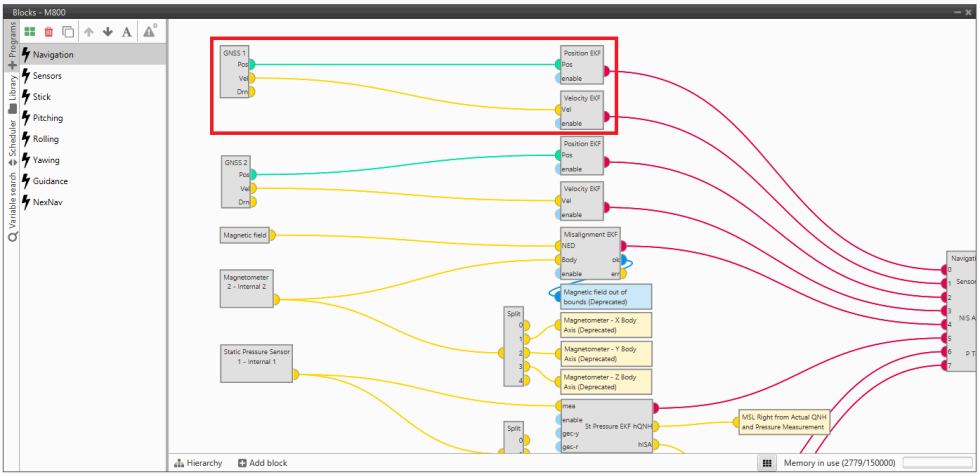

NexNav GNSS - Navigation program

Septentrio Mosaic-X5


Once the device hardware installation explained in the Septentrio Mosaic-X5 - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

The following steps explain how to configure **Veronte Autopilot 1x** to integrate **Septentrio Mosaic-X5** as an external GNSS sensor via **RS232**:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.

   Configure the serial port parameters:


   - **Baudrate**: 115200
   - **Length**: 8
   - **Stop**: 1
   - **Parity**: Disabled

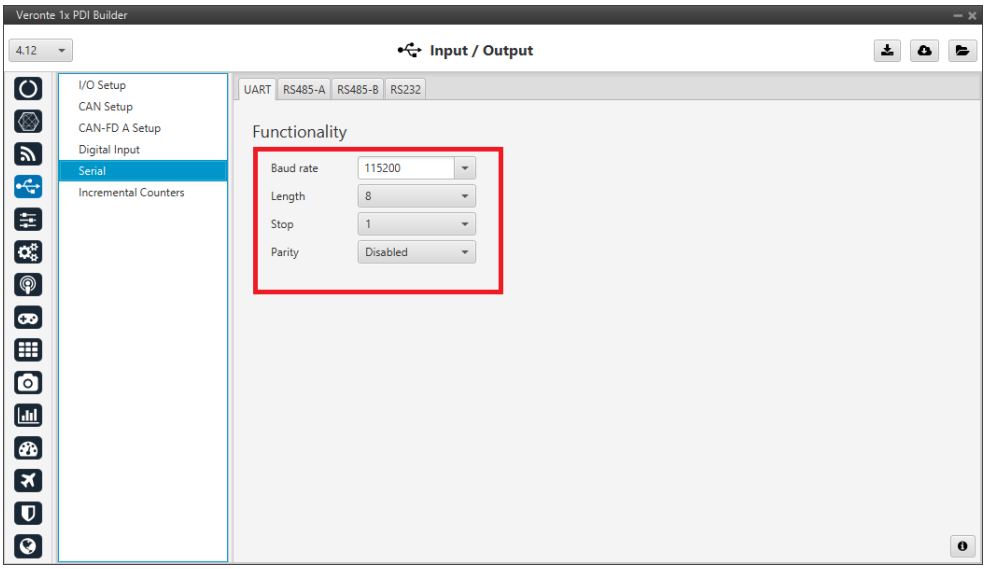

Septentrio Mosaic-X5 - RS232 configuration


2. Go to Input/Output menu → I/O Setup panel → **Configuration tab**.

   Connect the **RS232** producer to the **NMEA 0183 GGA** consumer:

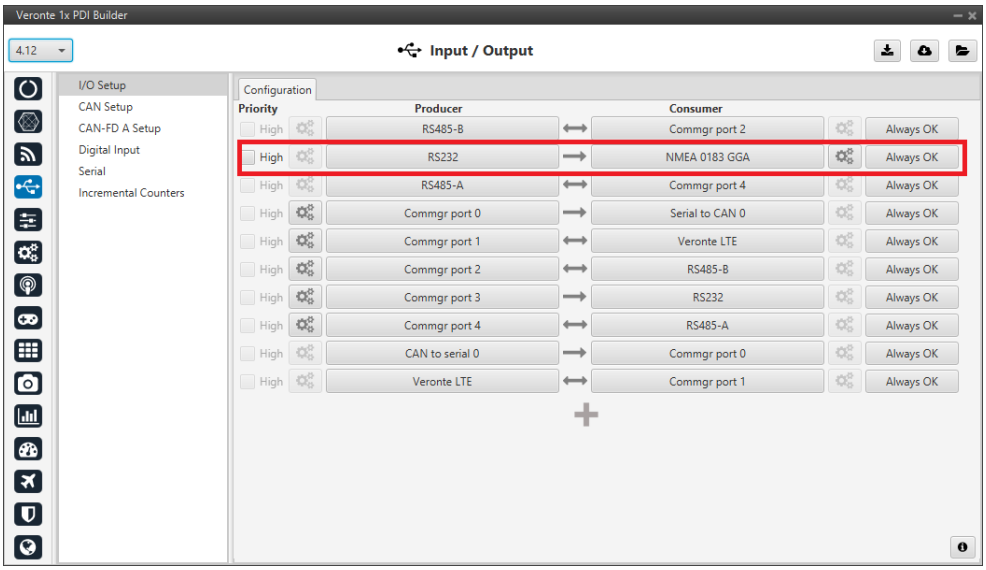

Septentrio Mosaic-X5 - RS232 → NMEA 0183 GGA

3. Click on  to configure the **NMEA parser** consumer.
   - Enable a **control bit** to verify that data is being received.
   - Select the **Moving Object** option.

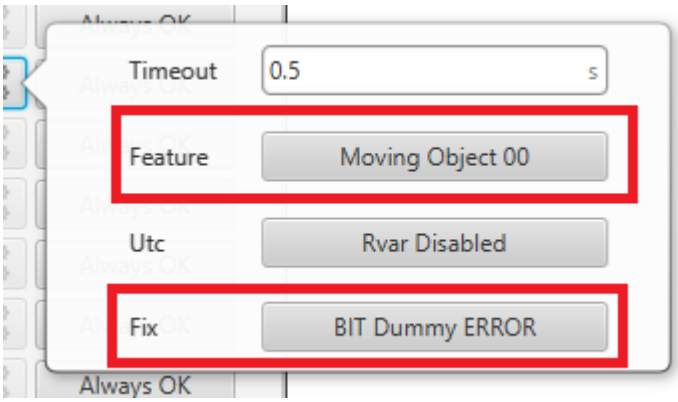


Septentrio Mosaic-X5 - NMEA 0183 GGA configuration

4. Go to **Block Programs menu** → **Navigation program**.

> **Note**
> Usually, the user has a **Navigation program** where the navigation blocks are implemented. However, the user can name the program as desired.

Add a GNSS sensor block, set it as **GPS External** and configure it to correctly link it to the configured data source:

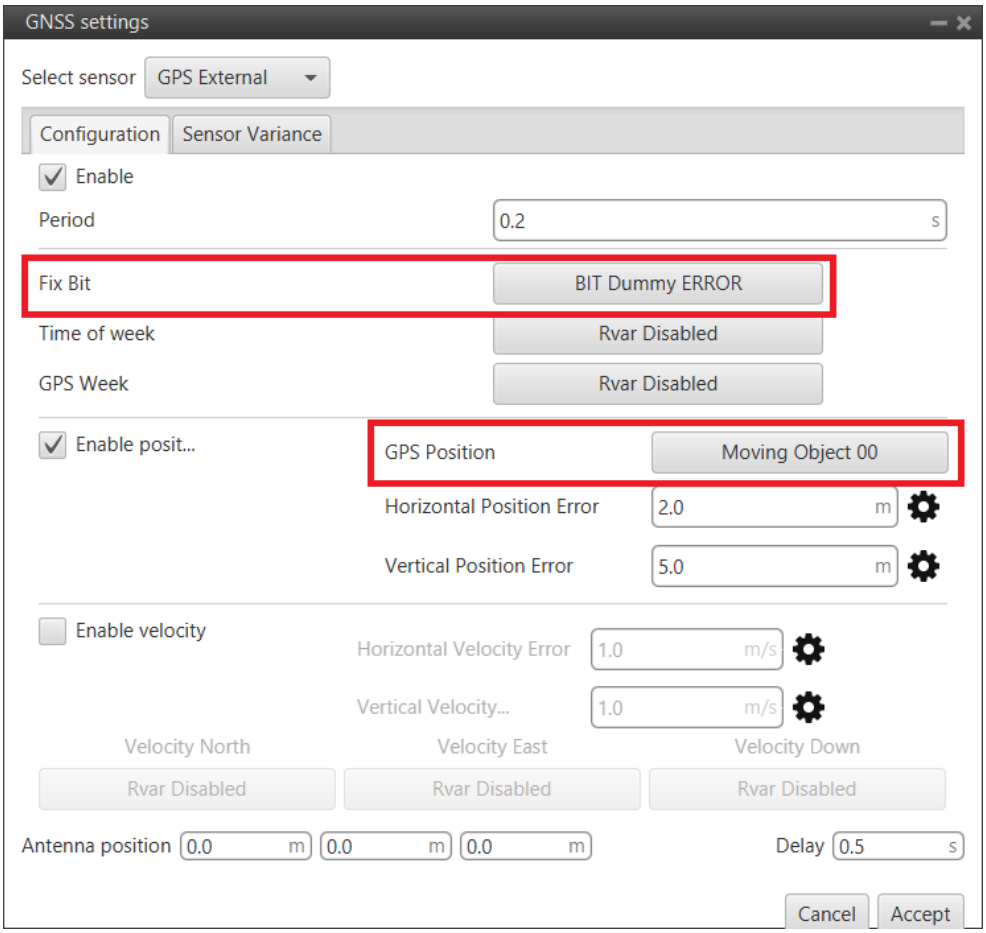

Septentrio Mosaic-X5 - GPS External block configuration

> **Important**
>
> The fix bit and GPS position must match the corresponding fix bit and feature configured in the NMEA parser consumer.

For more information on this block, see GNSS sensor block - Block Programs section of this manual.

IMUs & Compass

IMUs

Vectornav VN-300


Vectornav VN-300 is an **external IMU** that can be connected via **RS-232** (serial interface) to **Veronte Autopilot 1x**.

Once the device **hardware installation** explained in the Vectornav VN-300 - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.

   Configure the serial port parameters:


   - **Baudrate**: 115200
   - **Length**: 8
   - **Stop**: 1
   - **Parity**: Disabled

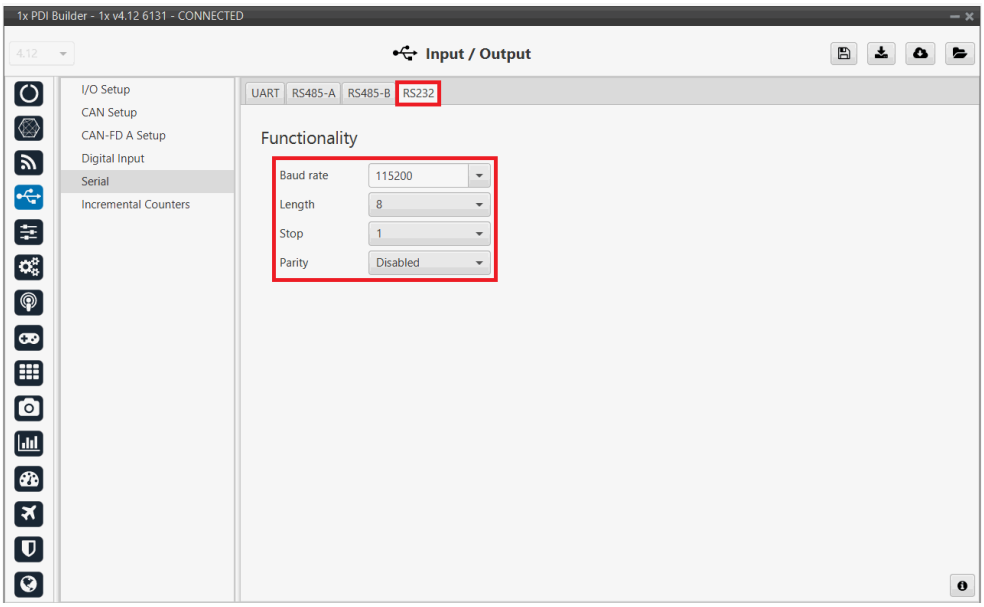

Vectornav VN-300 - RS232 port configuration

2. Go to Input/Output menu → **I/O Setup panel**.


   Connect the **RS232 Producer** to the **Vectornav VN-300 Consumer**:

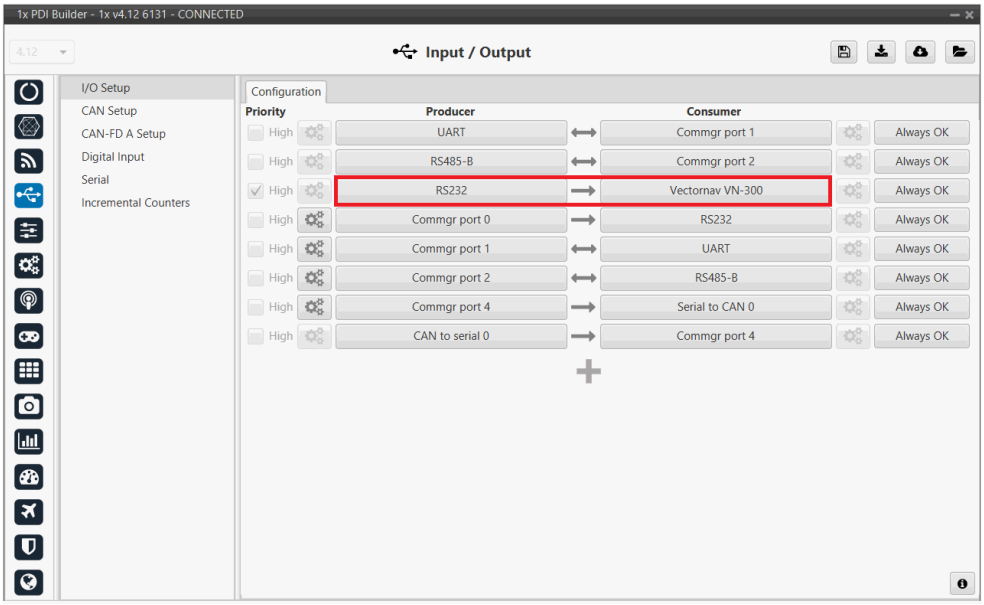

RS232 → Vectornav VN-300

3. Go to **Block Programs menu**.
   - Create a program to configure the Vectornav VN-300 as the type of navigation.

     Usually the user has a **Navigation program** where the blocks that are related to the navegation are implemented.
   - Configure the Navigation block selecting **Vectornav VN-300**.

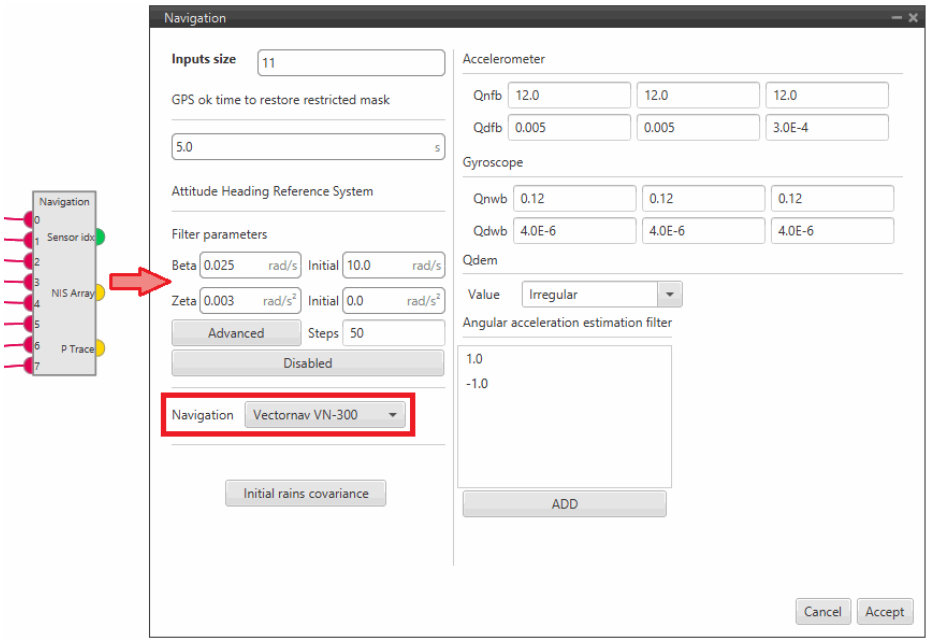

Vectornav VN-300 - Navigation sensor block configuration

For more information on this block, see Navigation - Navigation blocks of **Block Programs** section.

Vectornav VN-300 configuration

It is also required a configuration on the **Vectornav VN-300** IMU.

Follow the steps below to establish proper communication between **Vectornav VN-300** and **Veronte Autopilot 1x via RS-232**:

1. Connect the **Vectornav VN-300** IMU via RS-232 to the PC.
2. Connect one or both GPS antennas to it.
3. For its configuration, enable **periodic binary messages at 100 Hz**. Only the following outputs from the **Group 1 (Common group)** must be sent:

Outputs	Bit Offset
TimeGps	1
YawPitchRoll	3
AngularRate	5
Position	6
Velocity	7
Accel	8
InsStatus	12

> ⚠ **Warning**
>
> Veronte Autopilot 1x is only capable to decode messages with **exactly that structure**, any **missing or added field** will cause Autopilot 1x to **reject the messages**.
>
> In addition, the **baudrate** configured on the VN-300 must match that configured for Veronte Autopilot 1x. Therefore, it is recommended to configure the baudrate of the serial port to the standard **115200**.
>
> The update **frequency is limited to 100Hz** due to the serial port bandwidth constraints associated with a **baudrate of 115200**.

> ⓘ **Note**
>
> Navigation can be managed either through the internal Veronte navigation system or via external navigation units using **Custom messages**.

WitMotion HWT905-232

WitMotion HWT905-232 is an external IMU that can be connected via **RS-232** (serial interface) to **Veronte Autopilot 1x**.

The following **WitMotion HWT905-232** algorithms will be implemented in the configuration

- **Acceleration Output**: The acceleration output data is structured as follows:

Byte 1	Byte 2	AxL	AxH	AyL	AyH	AzL	AzH	TL	TH	SUM
0x55	0x51	AxL	AxH	AyL	AyH	AzL	AzH	TL	TH	SUM

  The acceleration values are calculated using the following formulas:

$$a_x = \frac{(AxH \ll 8)|AxL}{32768} \times 16g$$

$$a_y = \frac{(AyH \ll 8)|AyL}{32768} \times 16g$$

$$a_z = \frac{(AzH \ll 8)|AzL}{32768} \times 16g$$

  Where **g** is the gravitational acceleration (**9.8 m/s²**).
  The temperature is computed as:

$$T = \frac{((TH \ll 8)|TL)}{100}\ ^{\circ}\mathrm{C}$$

  The checksum is obtained using:

$$\text{Sum} = 0x55 + 0x51 + AxH + AxL + AyH + AyL + AzH + AzL + T$$

- **Angular Velocity Output**: The angular velocity output data is structured as follows:

Byte 1	Byte 2	wxL	wxH	wyL	wyH	wzL	wzH	TL	TH	SUM
0x55	0x52	wxL	wxH	wyL	wyH	wzL	wzH	TL	TH	SUM

The angular velocity values are calculated using the following formulas:

$$w_x = \frac{(wxH \ll 8)|wxL}{32768} \times 2000\ (^o/s)$$

$$w_y = \frac{(wyH \ll 8)|wyL}{32768} \times 2000\ (^o/s)$$

$$w_z = \frac{(wzH \ll 8)|wzL}{32768} \times 2000\ (^o/s)$$

The temperature is computed as:

$$T = \frac{((TH \ll 8)|TL)}{100}\ ^\circ C$$


The checksum is obtained using:

$$Sum = 0x55 + 0x52 + wxH + wxL + wyH + wyL + wzH + wzL +$$

Once the device **hardware installation** explained in the WitMotion HWT905-232 - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.

   Configure the serial port parameters:
   - **Baudrate**: 115200
   - **Length**: 8
   - **Stop**: 1
   - **Parity**: Disabled

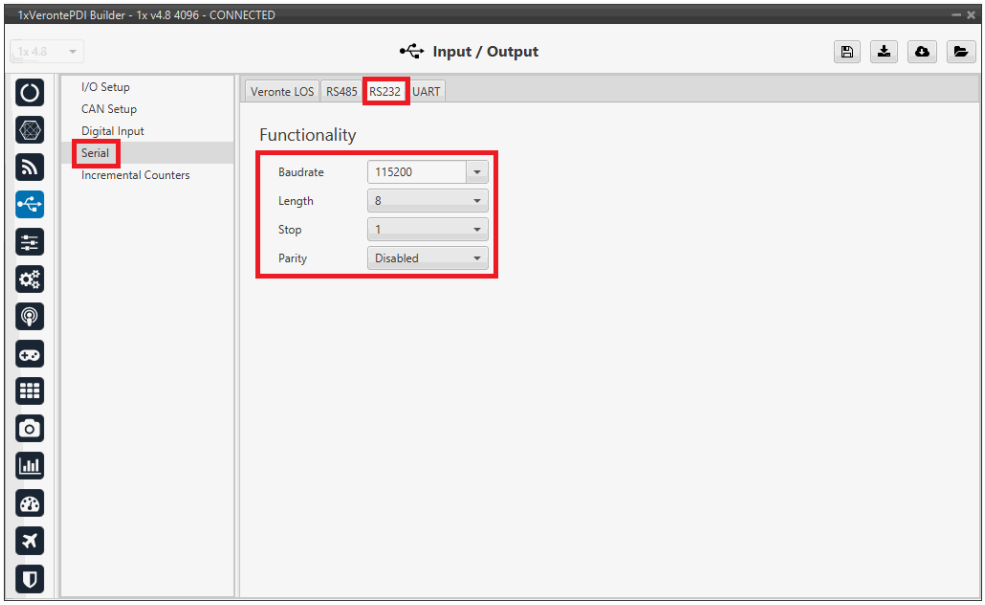

WitMotion HWT905 - RS232 port configuration

2. Go to Sensors menu → **Accelerometer panel**.

   Configure the following:


   - For the **Def. Sensor** select **External sensor 0**.
   - **Time constant for mean**: 2.0 s
   - **Time constant for variance**: 20.0 s
   - **Initial variance**: 1.0
   - **Minimum variance**: 1.0E-4

   Then, **External sensor 0** should be automatically added to the accelerometers list. Select it and configure it as follows:

   - **Edit Rotation Matrix**: Modify this rotation matrix to correctly align the IMU axes with the Autopilot 1x axes:

$$\begin{bmatrix} 0.0 & -1.0 & 0.0 \\ -1.0 & 0.0 & 0.0 \\ 0.0 & 0.0 & -1.0 \end{bmatrix}$$

     Click **Apply** to save the change.
   - **Desired frequency**: 100.0 Hz
   - **Enable filter**: unchecked

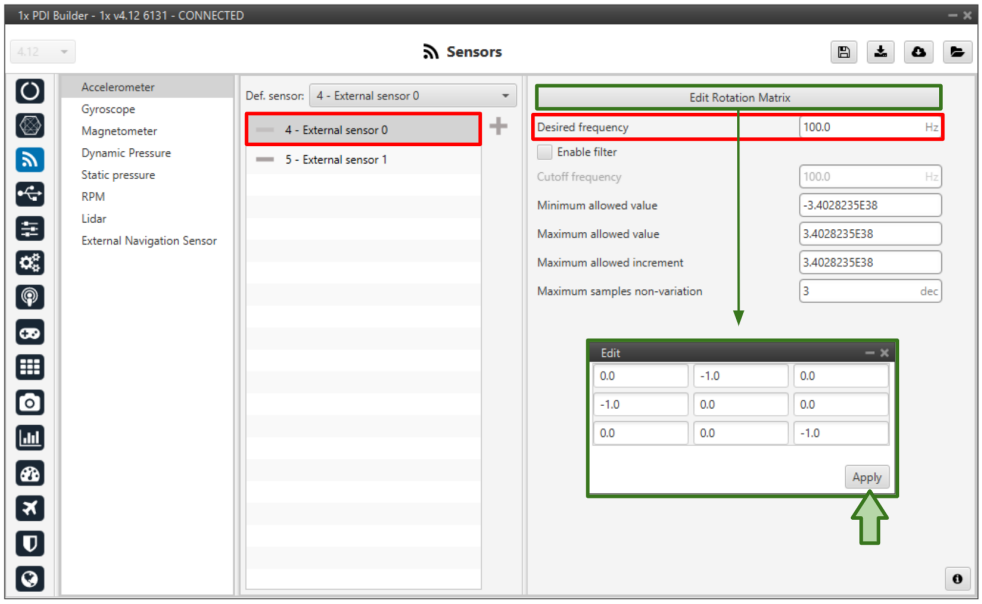

WitMotion HWT905 - Accelerometer configuration

Rotation Matrix Explanation

To correctly align the IMU axes with the Autopilot 1x axes, **two consecutive rotations** have been carried out to obtain the resulting matrix:

1. **First rotation**: **+180° around X-axis** (Matrix B)

$$\begin{bmatrix} 1.0 & 0.0 & 0.0 \\ 0.0 & -1.0 & 0.0 \\ 0.0 & 0.0 & -1.0 \end{bmatrix}$$

2. **Second rotation**: **-90° around Z-axis** (Matrix A)

$$\begin{bmatrix} 0.0 & 1.0 & 0.0 \\ -1.0 & 0.0 & 0.0 \\ 0.0 & 0.0 & 1.0 \end{bmatrix}$$


The resulting matrix after these rotations to be entered is as follows:

$$\begin{bmatrix} 0.0 & -1.0 & 0.0 \\ -1.0 & 0.0 & 0.0 \\ 0.0 & 0.0 & -1.0 \end{bmatrix}$$

> ⓘ **Note**
>
> For more information on Autopilot 1x coordinates, please refer to the Orientation - Hardware Installation section of the **1x Hardware Manual**.

3. Go to Sensors menu → **Gyroscope panel**.


   Configure it exactly the same way as the Accelerometer in the previous step. It should look like this:

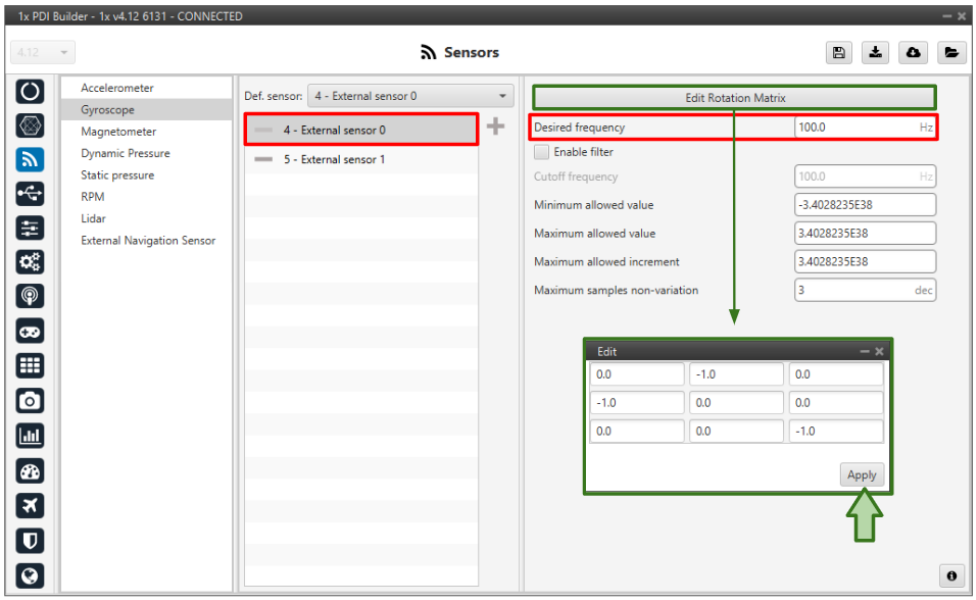

WitMotion HWT905 - Gyroscope configuration


4. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **RS232** producer to a **RS custom message** consumer, in this example RS custom message 0 is used.

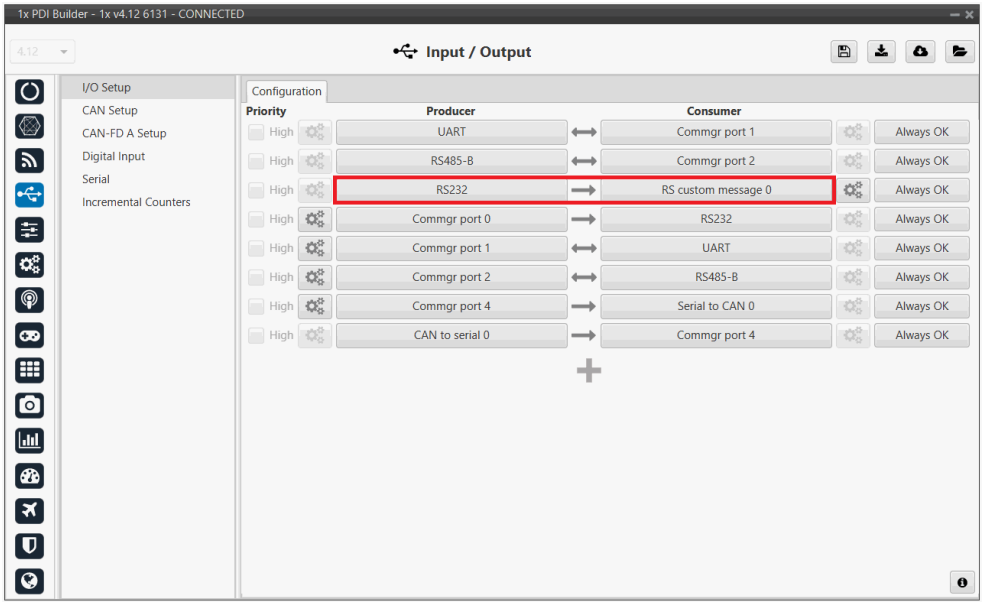

WitMotion HWT905 - RS232 → RS custom message 0

5. Click on  to configure the RS custom message 0 consumer to store the information received from the external IMU. Users must set it up by defining the protocol specified by the manufacturer:

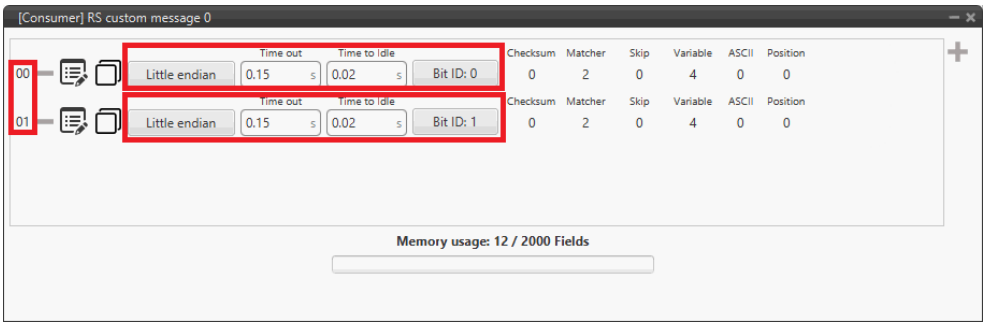

WitMotion HWT905 - RS custom message 0 configuration

For both messages:

- **Endianness**: Little endian
- **Time out**: 0.15 seconds
- **Time to Idle**: 0.02 seconds
- **Bit ID**:
  - For message 00 ⇒ "Custom msg 0 Rx Error"
  - For message 01 ⇒ "Custom msg 1 Rx Error"

6. Then, to configure each message, access its configuration :

00 - Acceleration Output Message

Byte	Parameter	Custom Message Type	Message Configuration
0	Matcher x55	**Matcher**	◦ **Value**: 85 ◦ **Bits**: 8 ◦ **Mask**: 255
1	Matcher x51	**Matcher**	◦ **Value**: 81 ◦ **Bits**: 8 ◦ **Mask**: 255
2-3	External IMU 0 raw accelerometer x measurement (Real	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16

Byte	Parameter	Custom Message Type	Message Configuration
	Variable, 32 bits)		◦ **Encode - Min/ Max**: 0.0/0.0047851563 ◦ **Decode - Min/ Max**: 0/1
4-5	External IMU 0 raw accelerometer y measurement (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/0.0047851563 ◦ **Decode - Min/ Max**: 0/1
6-7	External IMU 0 raw accelerometer z measurement (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/0.0047851563 ◦ **Decode - Min/ Max**: 0/1
8-9	External IMU 0 temperature measurement (Real	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 283.0/293.0

Byte	Parameter	Custom Message Type	Message Configuration
	Variable, 32 bits)		◦ **Decode - Min/ Max**: 1000/2000

01 - Angular Velocity Output Message

Byte	Parameter	Custom Message Type	Message Configuration
0	Matcher x55	**Matcher**	◦ **Value**: 85 ◦ **Bits**: 8 ◦ **Mask**: 255
1	Matcher x52	**Matcher**	◦ **Value**: 82 ◦ **Bits**: 8 ◦ **Mask**: 255
2-3	External IMU 0 raw gyroscope x measurement (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/0.0010652645 ◦ **Decode - Min/ Max**: 0/1
4-5	External IMU 0 raw gyroscope y measurement	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16

Byte	Parameter	Custom Message Type	Message Configuration
	(Real Variable, 32 bits)		◦ **Encode - Min/ Max**: 0.0/0.0010652645 ◦ **Decode - Min/ Max**: 0/1
6-7	External IMU 0 raw gyroscope z measurement (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 0.0/0.0010652645 ◦ **Decode - Min/ Max**: 0/1
8-9	External IMU 0 temperature measurement (Real Variable, 32 bits)	**Variable**	◦ **Compression**: Compress - Bits Signed ◦ **Bits**: 16 ◦ **Encode - Min/ Max**: 283.0/293.0 ◦ **Decode - Min/ Max**: 1000/2000

Magnetometers

External Magnetometer


RS-232

Magnetometer External sensor 0-1 can be connected via **RS-232** (serial interface) in accordance with the manufacturer's specifications and following

the Pinout - Hardware Installation section of the **1x Hardware Manual**. Detailed information on this connection can be found in the External Magnetometer (RS232) - Integration examples section of the **1x Hardware Manual**.


The following steps explain how to configure **Veronte Autopilot 1x** to integrate this External magnetometer:

1. Go to Input/Output menu → Serial panel → **RS232 tab**.
   Configure the serial port parameters:
   - **Baudrate**: 9600
   - **Length**: 8
   - **Stop**: 1
   - **Parity**: Disabled

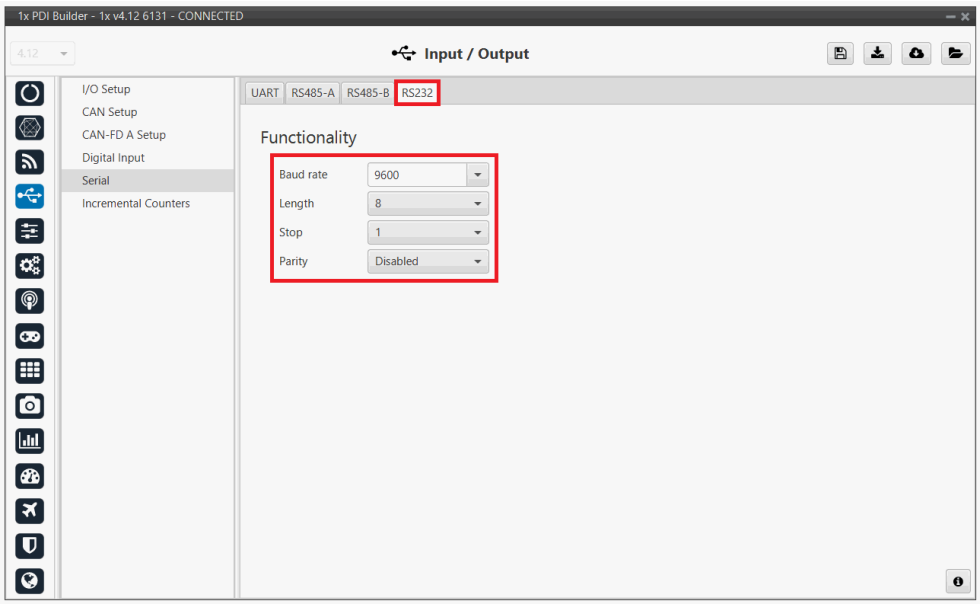

External Magnetometer - RS232 port configuration

2. Go to **Block Programs menu**.
   - Create a program to make the necessary connection to the sensor blocks.
     Usually the user has a **Navigation program** where the sensor blocks are implemented.
   - Configure the Magnetometer sensor block selecting **External sensor 0-1** .

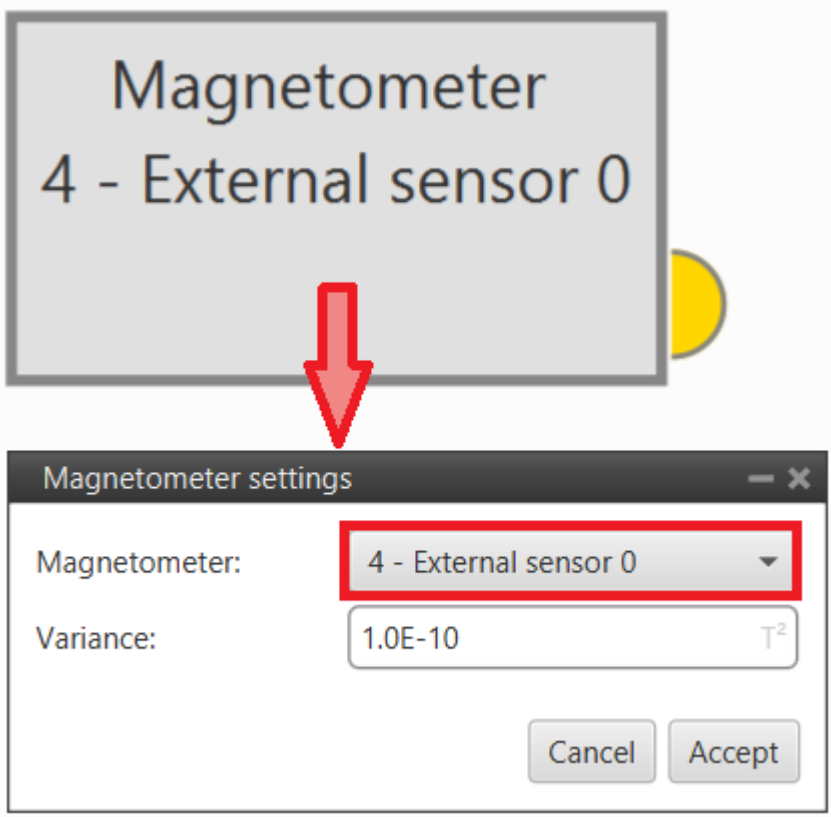


External Magnetometer - Magnetometer sensor block configuration

For more information on this block, see Magnetometer - Sensors blocks of **Block Programs** section.


3. Go to Input/Output menu → **I/O Setup panel**.

   Bidirectionally connect the **RS232 Producer** to the **External sensor 0 magnetometer Consumer**:

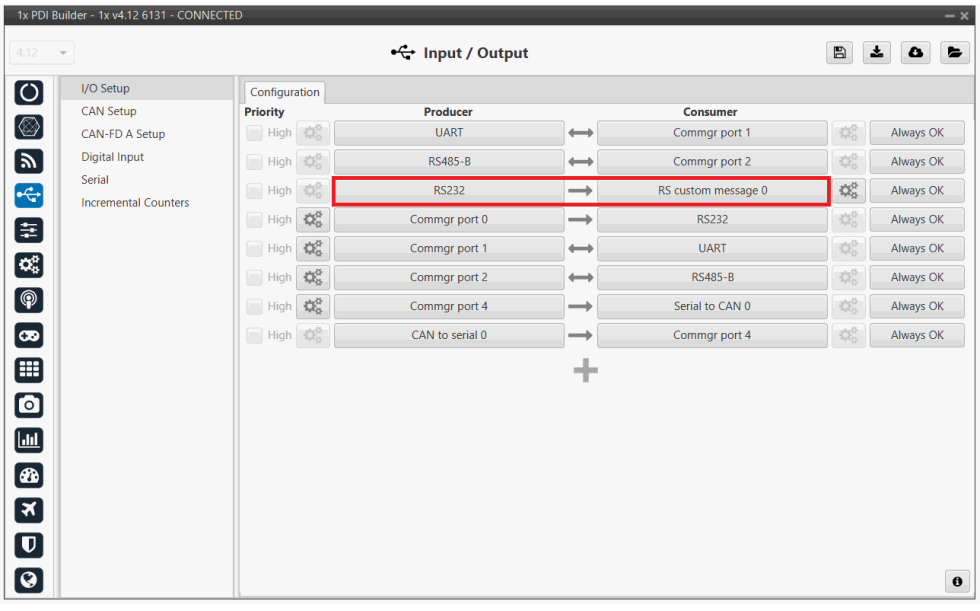


RS232 ↔ RS Custom message

Insert the following variables into **RS custom message**:

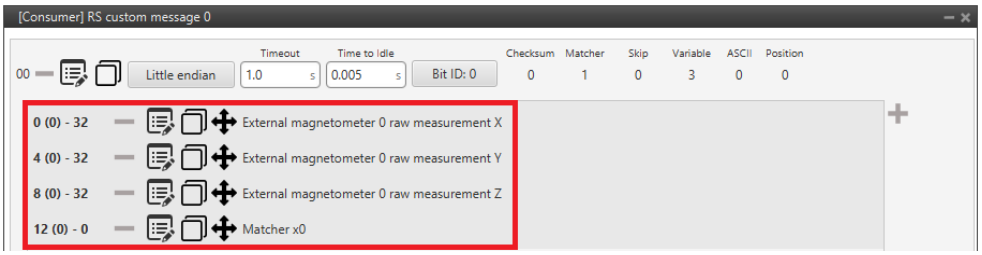

RS Custom message - Variables

Then, the **External sensor 0 magnetometer Producer** should be automatically connected to the **RS232 Consumer**:

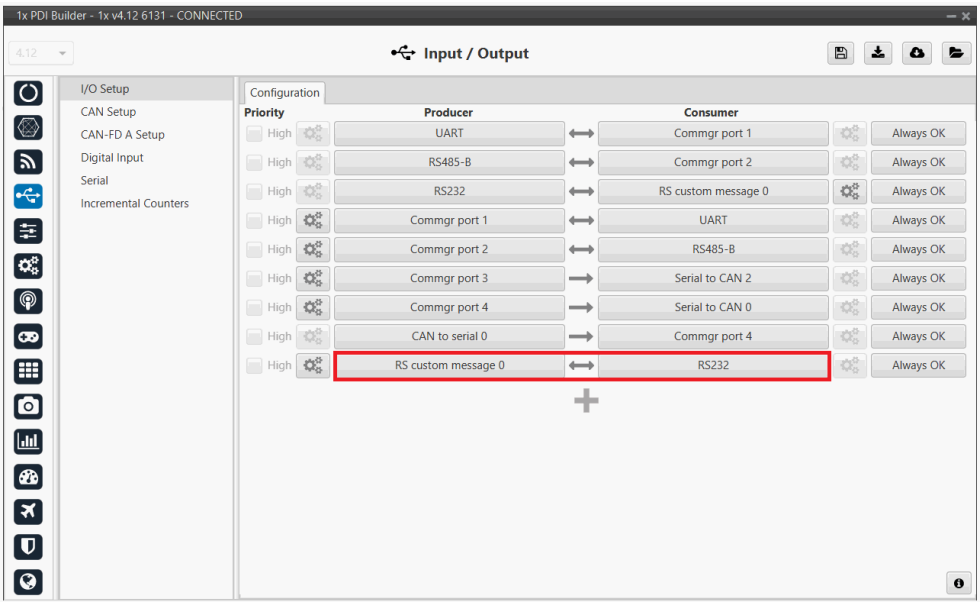

RS Custom message ↔ RS232

RS-485

External Magnetometer can be connected via **RS-485** (serial interface) in accordance with the manufacturer's specifications and following the Pinout - Hardware Installation section of the **1x Hardware Manual**. Detailed information on this connection can be found in the External Magnetometer (RS485) - Integration examples section of the **1x Hardware Manual**.

Follow the next steps to establish a correctly communication between External magnetometer and Veronte Autopilot 1x via **RS-485**:

1. Connect the External magnetometer via RS-232 to the PC (with a RS-232 - RS-485 converter).
2. The configuration to establish communication must be:
    - In **binary** mode

- With **continuous fowarding**
- **ID = 00**

To configure the magnetometer in this way, the following commands must be sent to it:

- `*99Q` : This command reads the default values, including the device ID.
- `*00WE` : This enables writing.
- `*ddID=00` : Changes the ID to 00, where **dd** is the device ID obtained with the first command.
- `*00WE` : Enables writing.
- `*00B` : Binary mode.
- `*00C` : Continuous send mode.
- `*00WE` : Enables writing.
- `*00SP` : Finally, this command saves the configuration in EEPROM.

3. Autopilot can now be configured to communicate via **RS485** with the External magnetometer.

   The configuration to be carried out is very similar to that described above for communication with the magnetometer via RS-232:

   - Instead of configuring the 232 serial port, the **485 serial port is configured**.
   - And, the **bidirectional connection** must be made between the **RS485 port and External magnetometer** and not with the RS232 port.

MEX as External Magnetometer

MEX can be used as an **External magnetometer** connected to Veronte Autopilot 1x via serial or CAN interfaces.

> **Important**
>
> Both **MEX** and **Autopilot 1x** devices must be configured to conduct this integration, therefore, the following explanations are consequent to the MEX configuration detailed in the MEX as External magnetometer for Autopilot 1x - Integration examples section of **MEX PDI Builder** manual.

Communication via **serial** and **CAN** interfaces are explained separately.


CAN

For this CAN connection, first check the MEX as External Magnetometer (CAN) - Integration examples section of the **1x Hardware Manual**.

The following steps explain how to configure **Veronte Autopilot 1x** to integrate MEX as an External magnetometer via **CAN**:

1. Go to **Block Programs menu**.
    - Create a program to make the necessary connection to the sensor blocks.

      Usually the user has a **Navigation program** where the sensor blocks are implemented.
    - Configure the Magnetometer sensor block selecting **External sensor 0-1**.

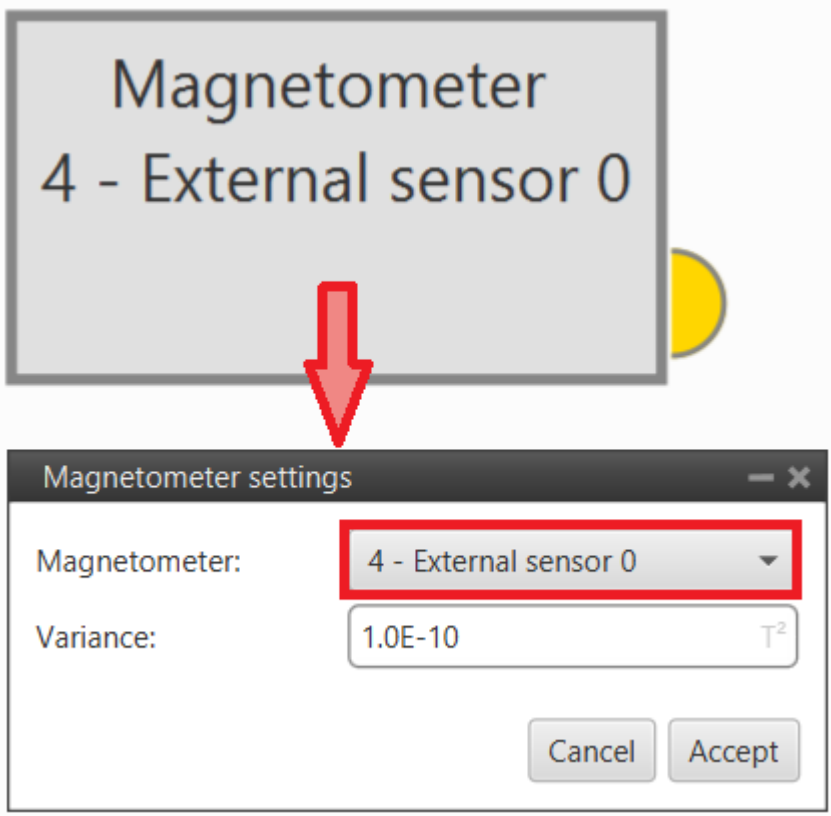


MEX as External Magnetometer - Magnetometer sensor block configuration

    For more information on this block, see Magnetometer - Sensors blocks of **Block Programs** section.
2. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.

Configure the required **mailboxes** to receive a message with the **CAN ID that matches the corresponding MEX configuration**.


> **Note**
>
> In this example, 4 mailboxes are added for **CAN A** with **ID 1301**, according to the MEX configuration carried out in CAN - MEX as External magnetometer for Autopilot 1x in the Integration examples section of **MEX PDI Builder** manual.

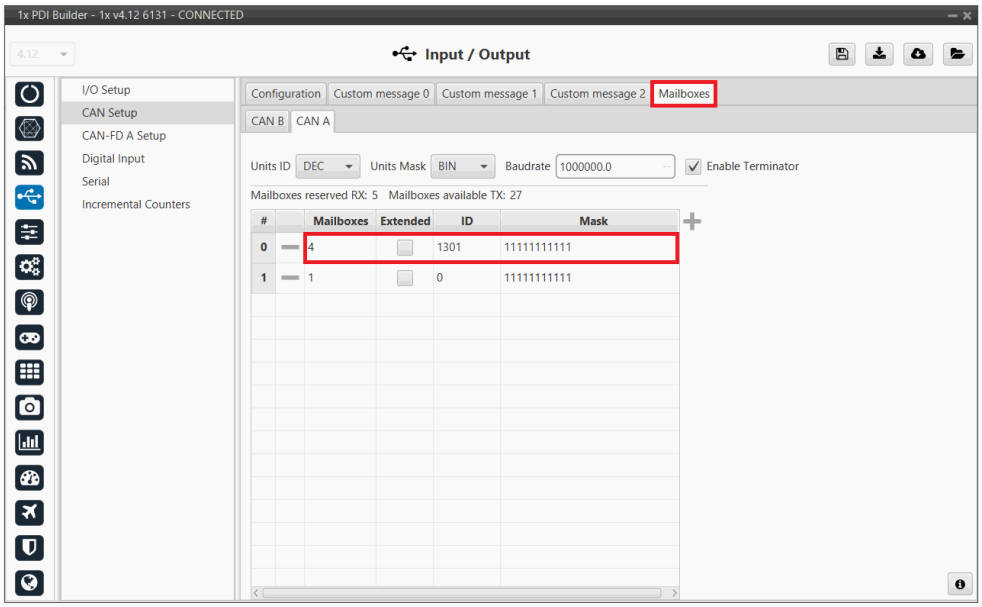

MEX as External Magnetometer - CAN Mailboxes configuration

3. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.


   Connect an **Input filter** Producer to a **CAN to serial** Consumer.

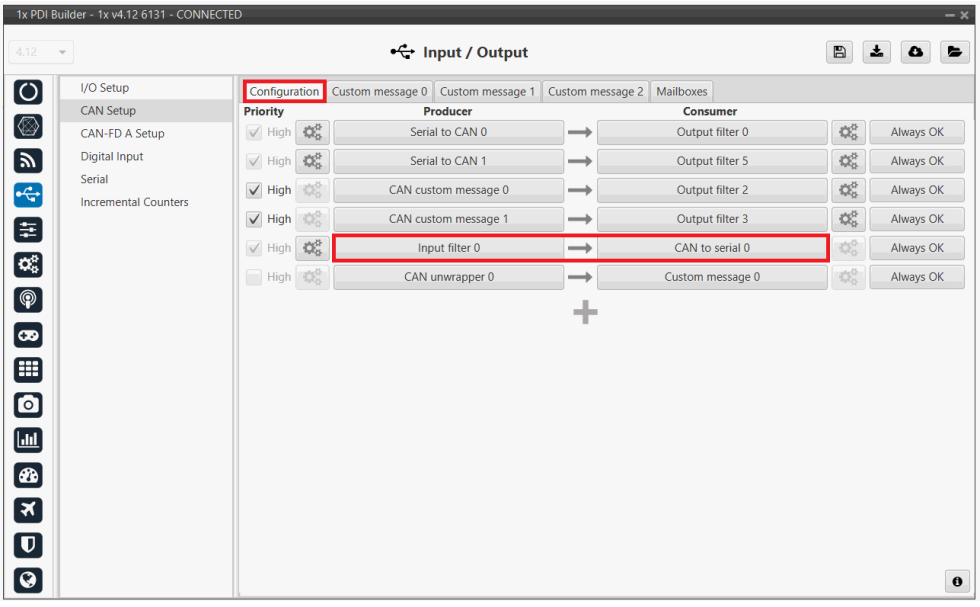

MEX as External Magnetometer - CAN Setup configuration

Click on ⚙ of the selected Input filter and configure it with the **CAN port** and **CAN ID** that **matches those of the corresponding MEX configuration**.


> **Note**
> This example is configured according to the MEX configuration carried out in CAN - MEX as external magnetometer for Autopilot 1x in the Integration examples section of **MEX PDI Builder** manual.

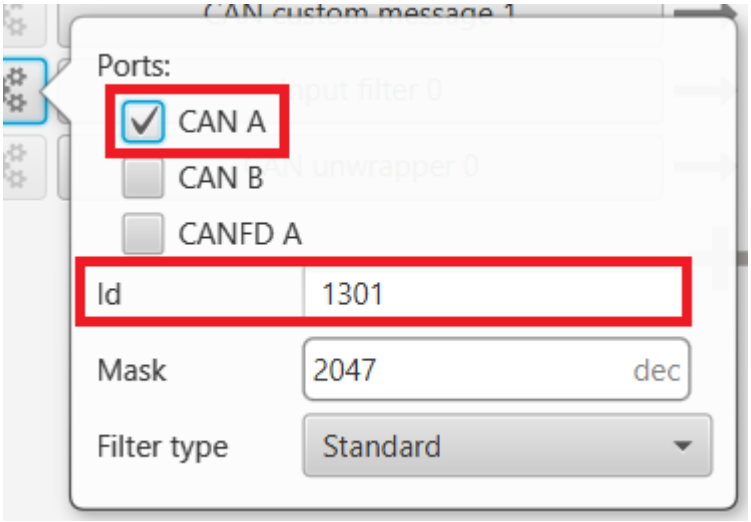

MEX as External Magnetometer - Input filter configuration


4. Go to Input/Output menu → I/O Setup panel → **Configuration tab**.
   Connect a **CAN to serial** Producer to the **External sensor 0 magnetometer** Consumer.

> **Important**
> **The index of the CAN to serial Producer** must match the index of the **CAN to serial Consumer** configured in the previous step.

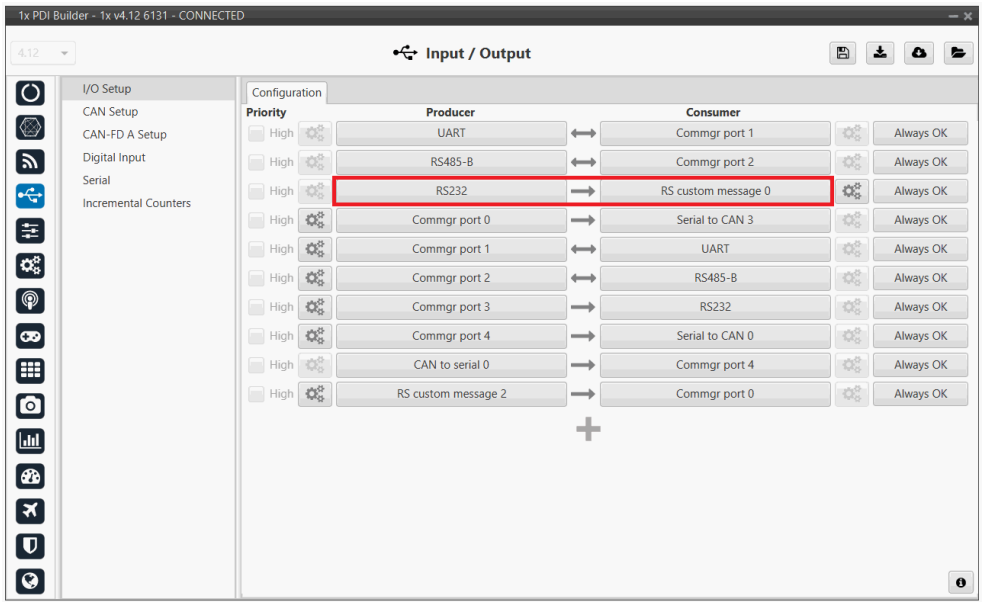

MEX as External Magnetometer - I/O Setup configuration

Insert the following variables into **RS custom message 0**:

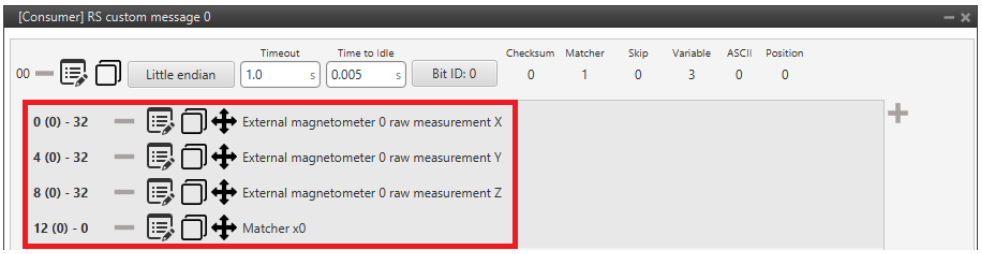

RS Custom message - Variables

Serial

For this serial connection, first check the MEX as External Magnetometer (RS232/RS485) - Integration examples section of the **1x Hardware Manual**.

The following steps explain how to configure **Veronte Autopilot 1x** to integrate MEX as an external magnetometer via **serial**:


1. Go to Input/Output menu → Serial panel → **RS232/RS485 tab**.

   Configure the serial port parameters:

   > **Note**
   >
   > This is an example of RS-232 connection, if **MEX is connected via RS-485**, configure the **RS485 serial tab**.

   - **Baudrate**: 115200
   - **Length**: 8


- **Stop**: 1
- **Parity**: Disabled

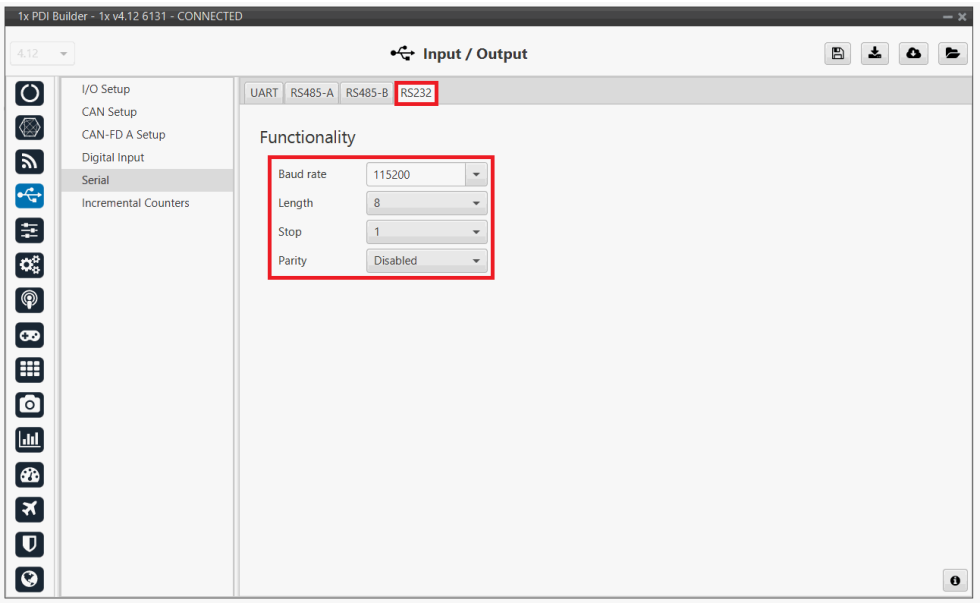

MEX as External Magnetometer - RS232 port configuration

2. Go to **Block Programs menu**.
   - Create a program to make the necessary connection to the sensor blocks.

     Usually the user has a **Navigation program** where the sensor blocks are implemented.
   - Configure the Magnetometer sensor block selecting **External sensor 0-1**.

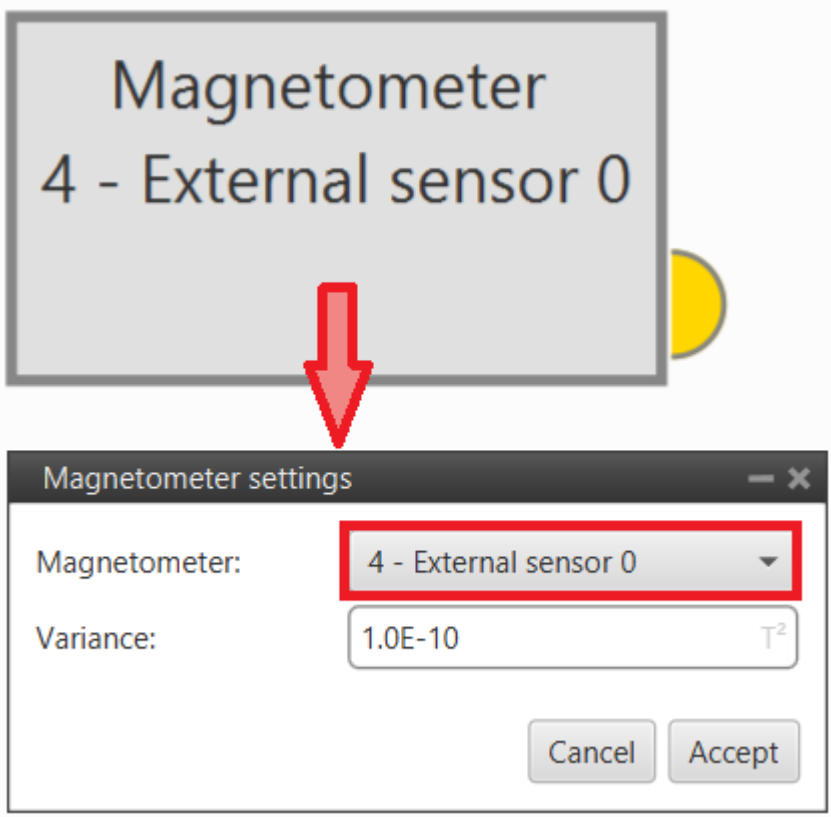


MEX as External Magnetometer - Magnetometer sensor block configuration

For more information on this block, see Magnetometer - Sensors blocks of **Block Programs** section.

3. Go to Input/Output menu → **I/O Setup panel**.


   Connect the **RS232 Producer** to the **External sensor magnetometer Consumer**:

> ⓘ **Note**
>
> If the user connects the **MEX via RS-485**, connect the **RS485 Producer** instead of RS232 Producer.

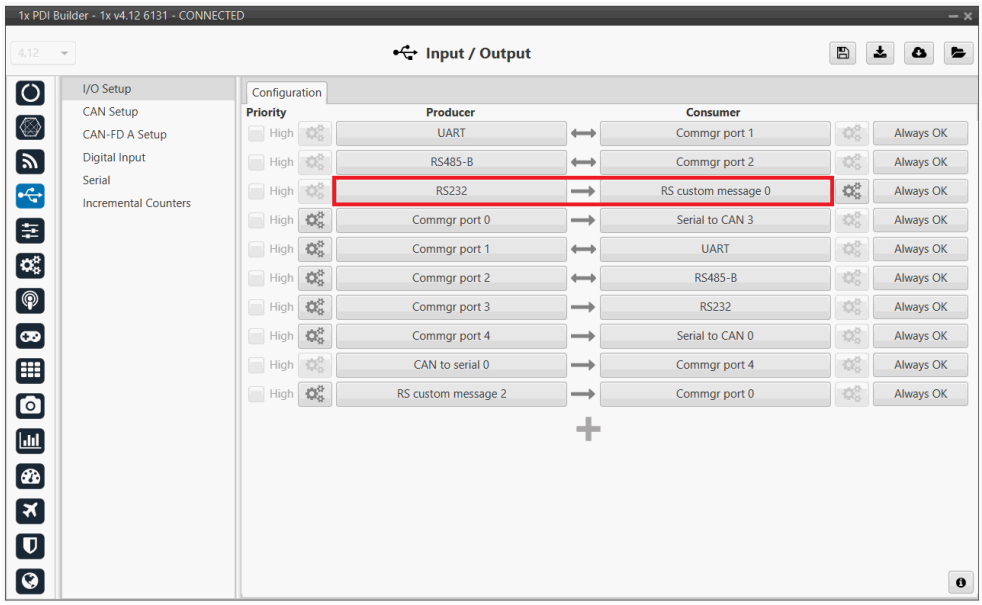

MEX as External Magnetometer - I/O Setup configuration

Insert the following variables into **RS custom message 0**:

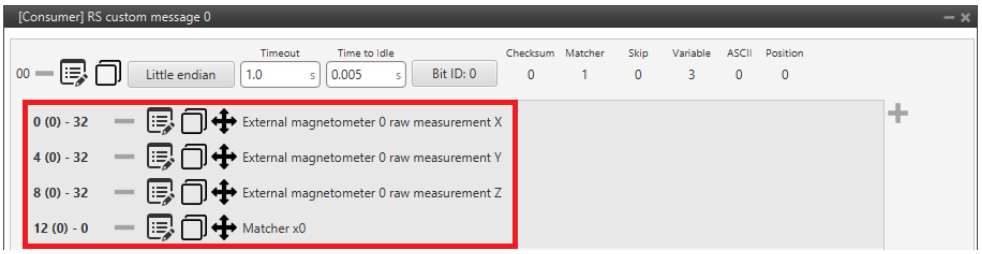

RS Custom message - Variables

PNI RM3100

PNI RM3100 **must** be connected via **I2C** in accordance with the manufacturer's specifications and following the Pinout - Hardware Installation section of the **1x Hardware Manual**.


Detailed information on this connection can be bound in the PNI RM3100 - Integration examples section of the **1x Hardware Manual**.

> **Important**
>
> Autopilot 1x is preconfigured to **automatically detect** and read the PNI RM3100 magnetometer via the **I2C interface**. This means the user does not need to manually select the communication interface, as the 1x automatically detects it.

For the software installation of this magnetometer:

- Go to **Block Programs menu**.
  - Create a program to make the necessary connection to the sensor blocks.

    Usually the user has a **Navigation program** where the sensor blocks are implemented.
  - Configure the Magnetometer sensor block selecting **External RM3100**.

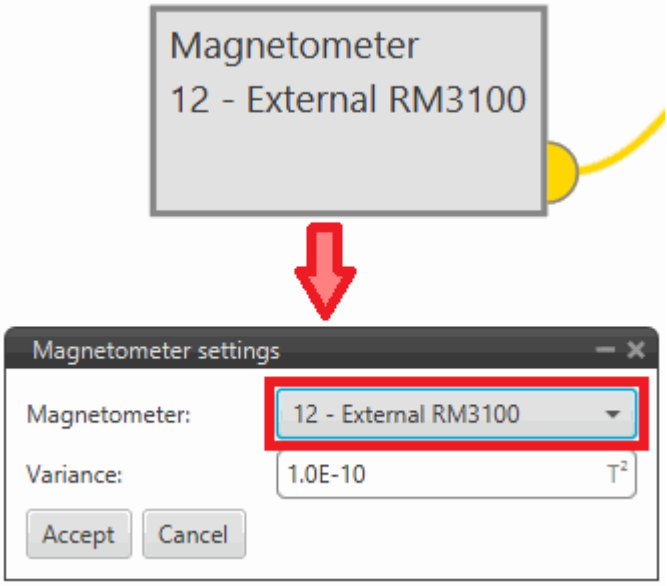

PNI RM3100 - Magnetometer sensor block configuration

> **Important**
>
> Since the user cannot modify the configuration parameters of the I2C interface, it is essential to ensure that the address of the external sensor matches the one preconfigured in Veronte Autopilot 1x.
>
> For **RM3100** sensor, the **address** is **0x20**.
>
> For more information, visit the Magnetometer - Sensors section of this manual.

RPM Sensors


This section defines a general explanation of how to integrate **RPM sensors** with **Autopilot 1x**.

Once the device **hardware installation** explained in the RPM Sensors - Integration examples section of the **1x Hardware Manual** has been completed, follow the steps below to perform the proper software installation.

1. Go to Input/Output menu → **Digital Input panel**.

   Connect any CAP producer to a **RPM** consumer, in this example:


   - Producer: **CAP 1**
     - Enabled
     - Select the pin to which the RPM sensor is connected.
     - Edge detection: Select the desired detection option.
   - Consumer: **RPM 0**

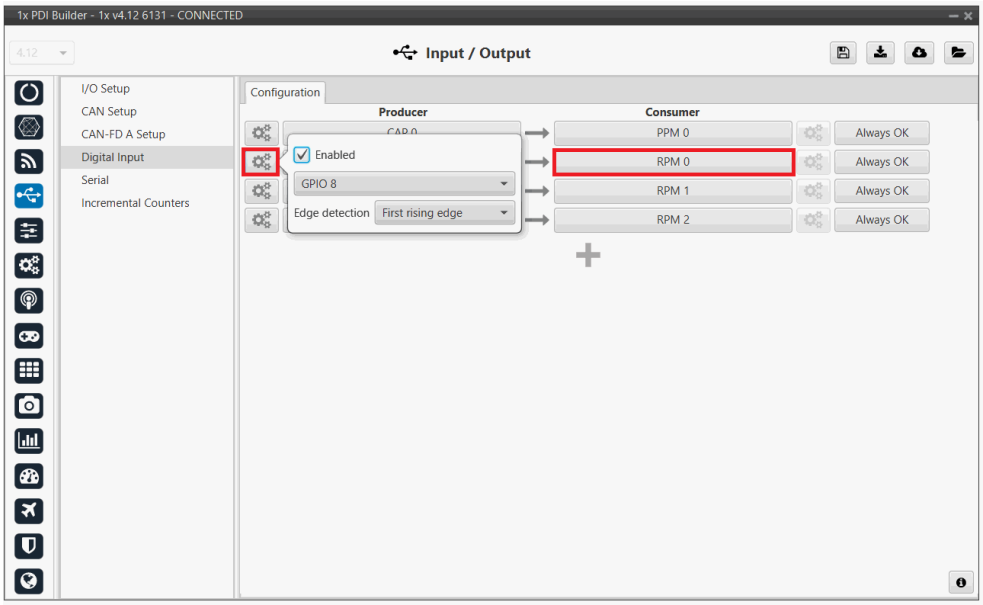

RPM Sensors - Digital Input configuration

2. Go to Connections menu → **GPIO panel**.


   Verify that the pin to which the RPM sensor is connected, in this case GPIO 12, is set as input.

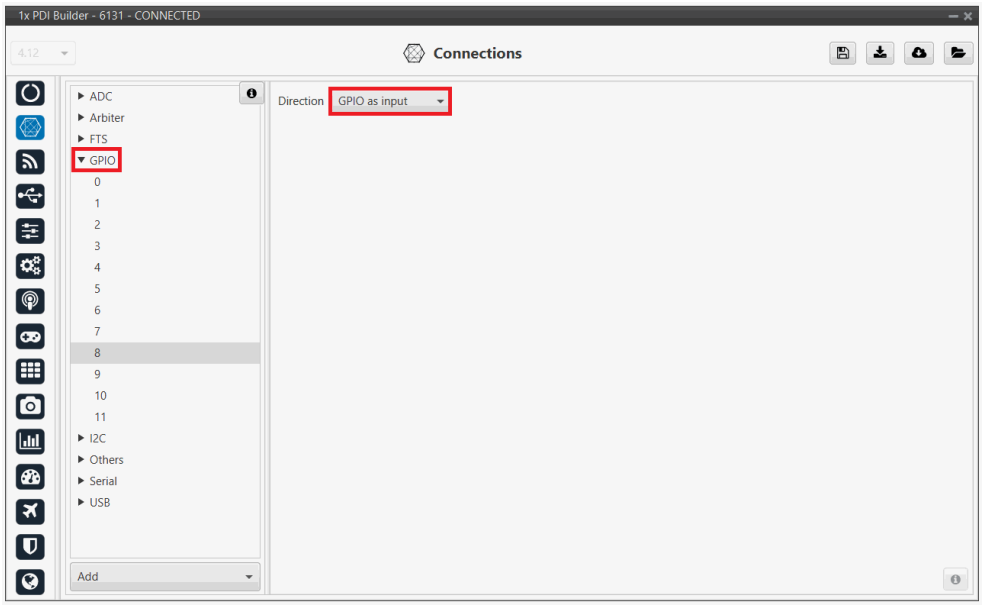

RPM Sensors - GPIO configuration

3. Go to Sensors menu → RPM panel → **RPM 0 tab** (since the consumer RPM 0 has been chosen).

   Set the configuration parameters according to the user's specific RPM sensor characteristics and requirements:

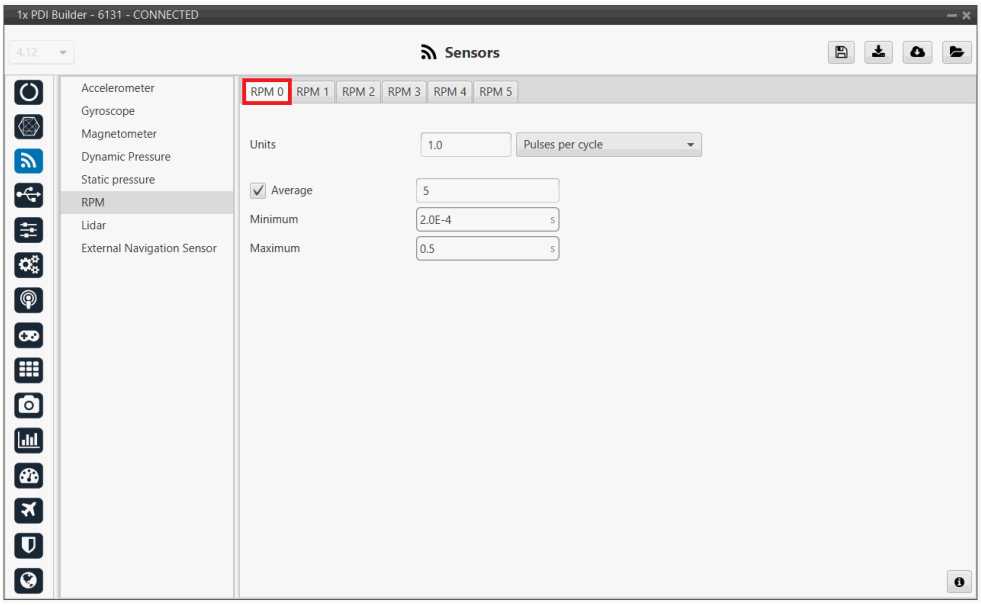

RPM Sensors - RPM configuration

   For more information about this panel, visit the RPM - Sensors section of the **1x PDI Builder** user manual.

In addition, users can monitor the sensor signal reading in the corresponding **real variable** (RPM X), in this case this variable is RPM 0.

Stick


Joystick 16CH

Joystick 16CH is a joystick with 16 channels which sends command signals through radio frequency and CAN bus.

Joystick 16CH can be connected to a control station PCS via CAN bus. This electrical connection is explained in the Hardware Installation section of **Joystick 16CH Hardware Manual**.

If a **Joystick 16CH** is connected to a **PCS**, it will be required to configure the **Veronte Autopilot 1x** inside the **PCS**. This configuration is already built and accessible to users as a template in this app.

- To download it, click on the **Import PDI from repo** button, then select the **PCS CAN Joystick** template and finally click on **Import**.

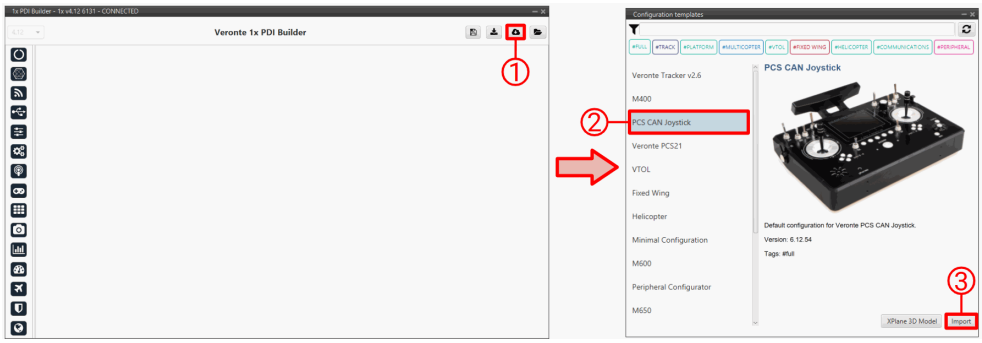


Joystick 16CH - Download template

> **Important**
>
> **Joystick 16CH** has an internal **MEX** which manages the CAN bus. Therefore, to communicate **Joystick 16CH** with the **1x** of **PCS**, its address has to be specified in the **1x** configuration.
>
> Since this is a template, for standard operation, users only need to change the MEX address.


CAN Joystick configuration

- **Autopilot 1x** has to be configured with a Virtual Stick as it receives signals via CAN bus (not PPM as usual).
  - This must be **enabled** in the Stick menu → Virtual Stick panel → **Input Variable tab** with the following configuration:
    - Input variables selected from **Stick Input r0** to **Stick Input r15**.
    - **Update period** set to 0.02 seconds.
    - **Stick Not Detected** bit as the Stick ok bit.

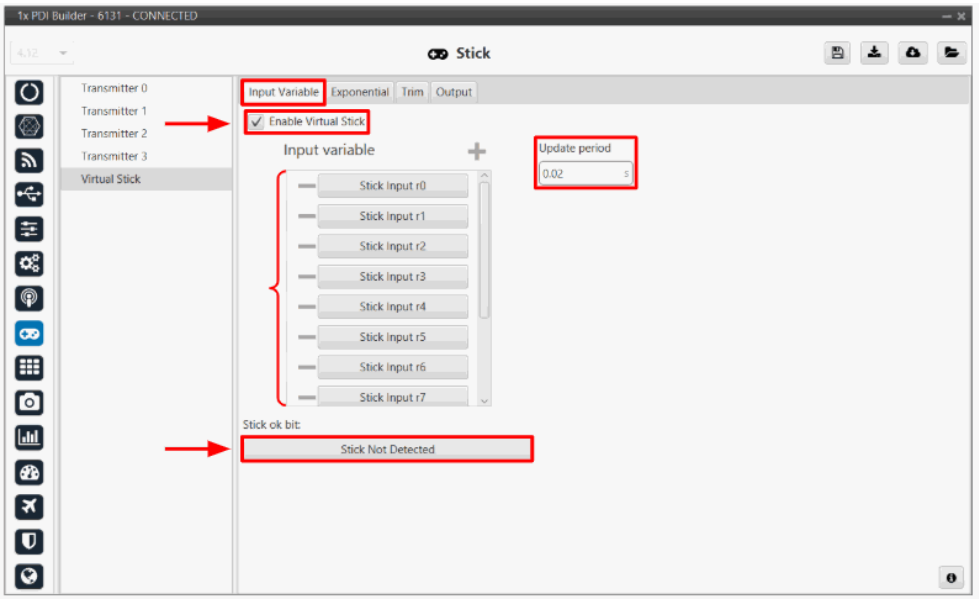

Joystick 16CH - Input Variable configuration

  - In addition, the **Output tab** is configured as follows:
    - **Enable:** checked.
    - **Initial:** 1.
    - **Port:** 0.
    - **Remote:** checked.
      - **UAV:** Broadcast.
      - **Min period:** 0.025 s.
      - **Max period:** 0.2 s.
      - **Delta:** 10.

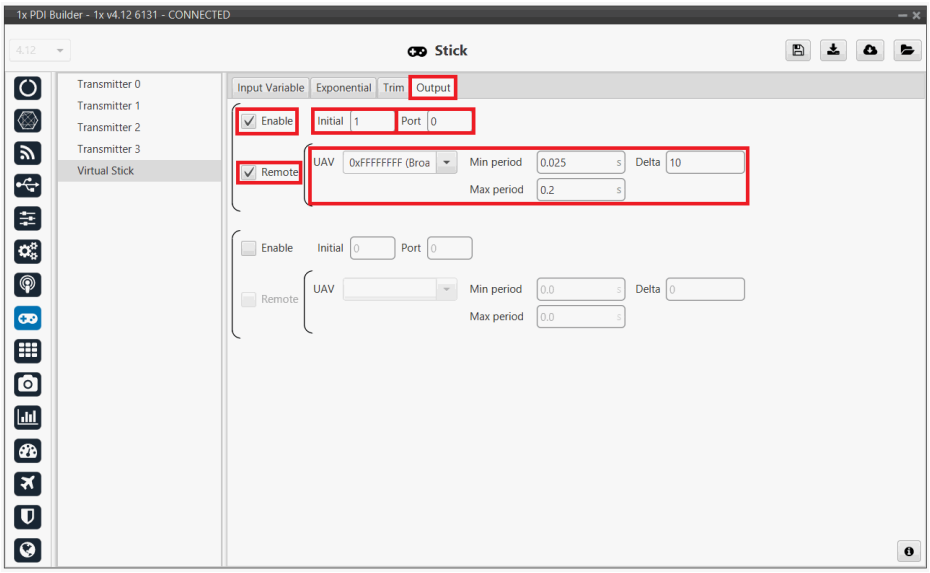


Joystick 16CH - Output configuration

I/O Connections


- In Input/Output menu → CAN Setup panel → **Configuration tab**.

  An **Input filter** producer is connected to a **CAN to serial** consumer. In this example, Input filter 0 is connected to CAN to serial 0.

  In addition, this **Input filter** is configured to take data from **Port** CAN B, with **Id** 1301, **Mask** 2047 and Standard as **Filter type**.

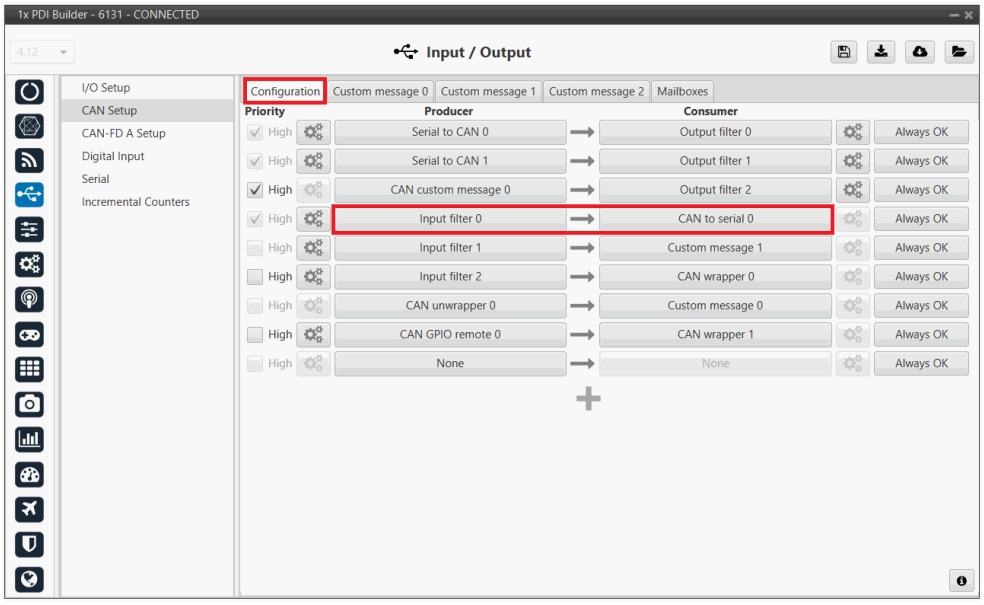


Joystick 16CH - CAN Setup configuration

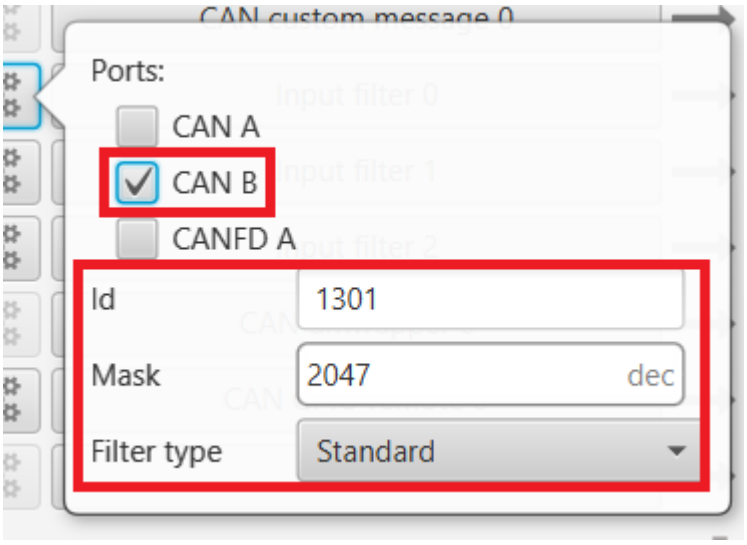


Joystick 16CH - Input filter configuration

- In the **I/O Setup panel**, a **CAN to serial** producer is connected to a **Commgr Port** consumer, and a **Commgr port** producer is linked to a **Serial to CAN** consumer.

  In this example, CAN to serial 0 producer is connected to Commgr port 4 consumer, and Commgr port 4 producer is linked to Serial to CAN 0 consumer.

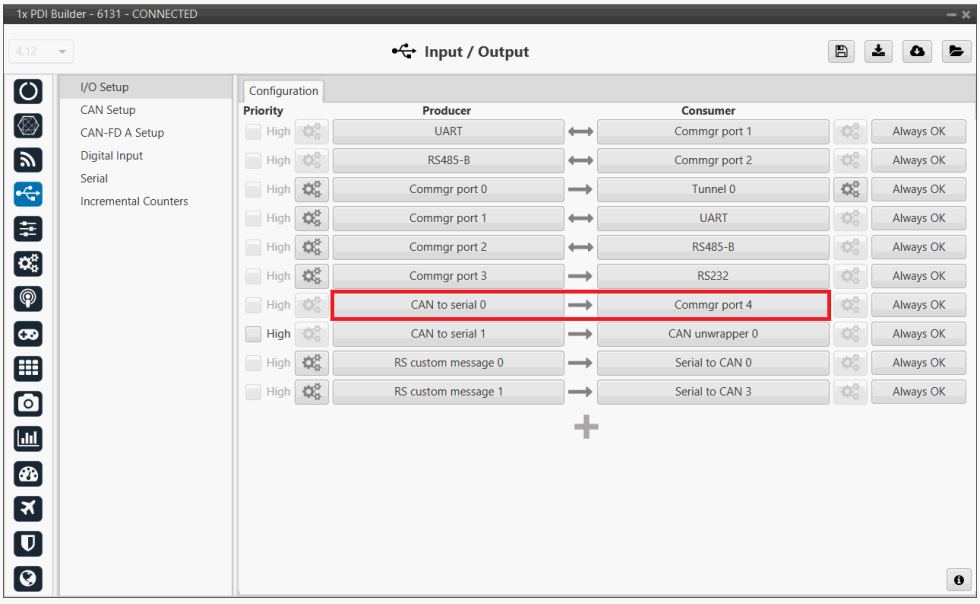


Joystick 16CH - I/O Setup configuration: CAN to serial

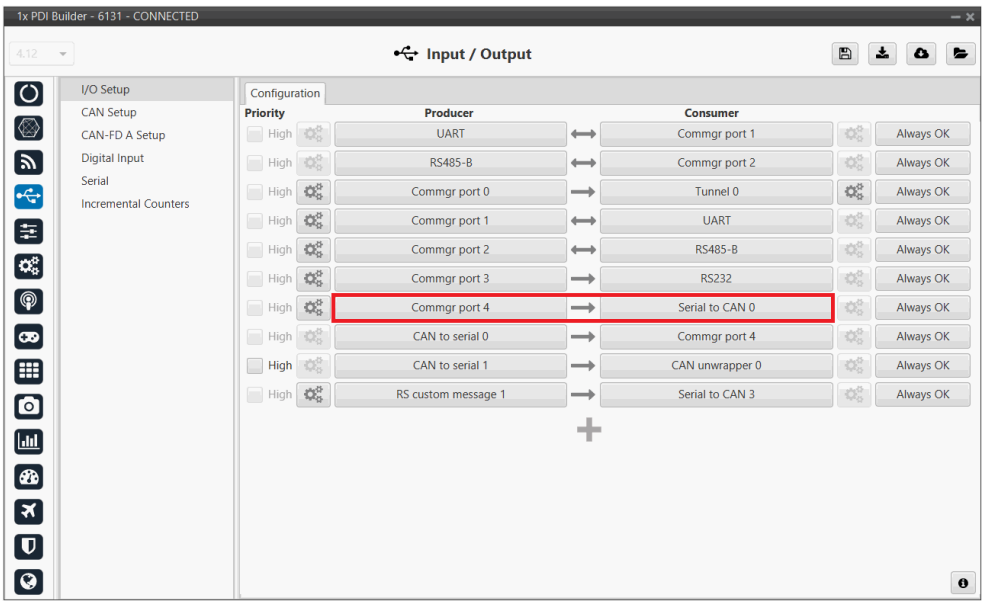

Joystick 16CH - I/O Setup configuration: Serial to CAN

- To properly receive **CAN messages** from **Joystick 16CH**, it is necessary to configure some **mailboxes** on the **CAN B** port.
  In the Input/Output menu → CAN Setup panel → **Mailboxes tab**, add at least 4 mailboxes on **CAN B** with **ID 1301**.

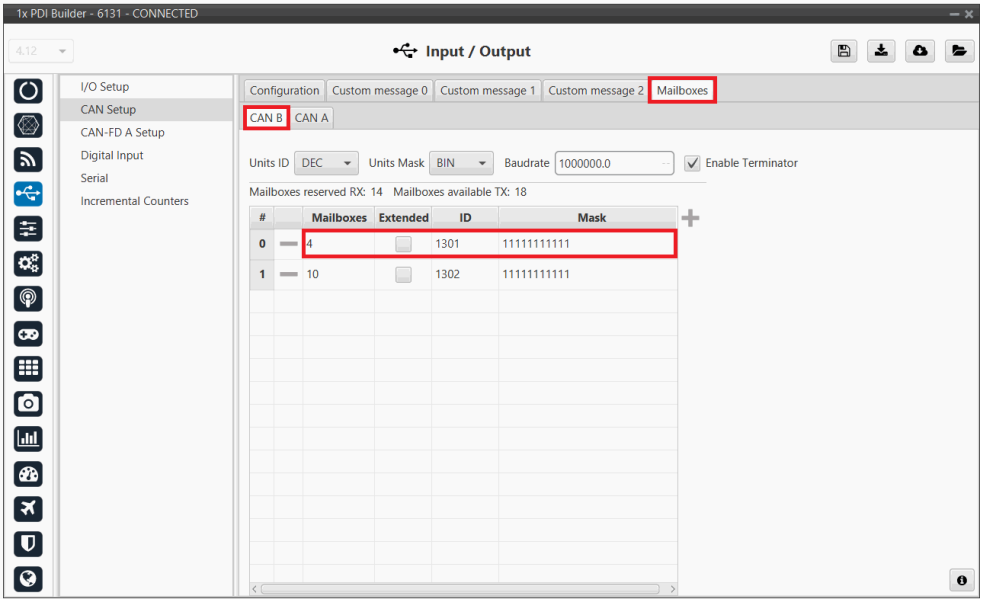

Joystick 16CH - Mailboxes configuration


MEX address configuration

MEX address is configured in the Stick block; this block is usually in a program named Stick by users. To access, go to **Block Programs menu** and click on **Launch Editor**.

1. Go to the program where the **Stick block** is located.


> **Note**
>
> Normally the user has a **Stick Program** where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

2. Double-click on the **Stick** block to access its configuration.

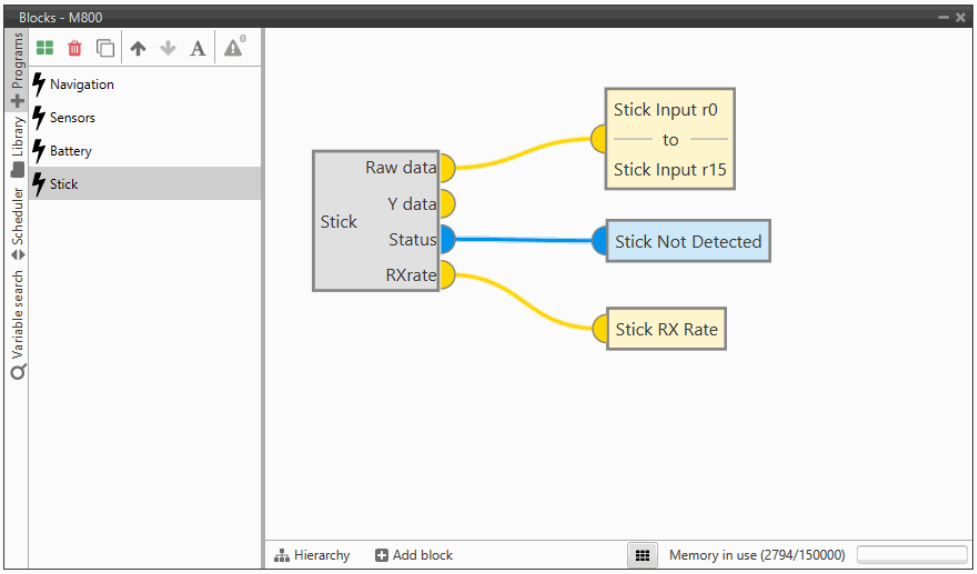

Joystick 16CH - Stick block

3. Go to the **Sources** tab in the new window.
4. Click on the **Edit Sources** button and:
   - Change the address by the one of the **MEX** installed on the **Joystick 16CH**, to receive the stick information from that source.
   - Select the port previously chosen (0 by default).
   - A **Time Out of 0.4 s** is recommended, which is already set by default.

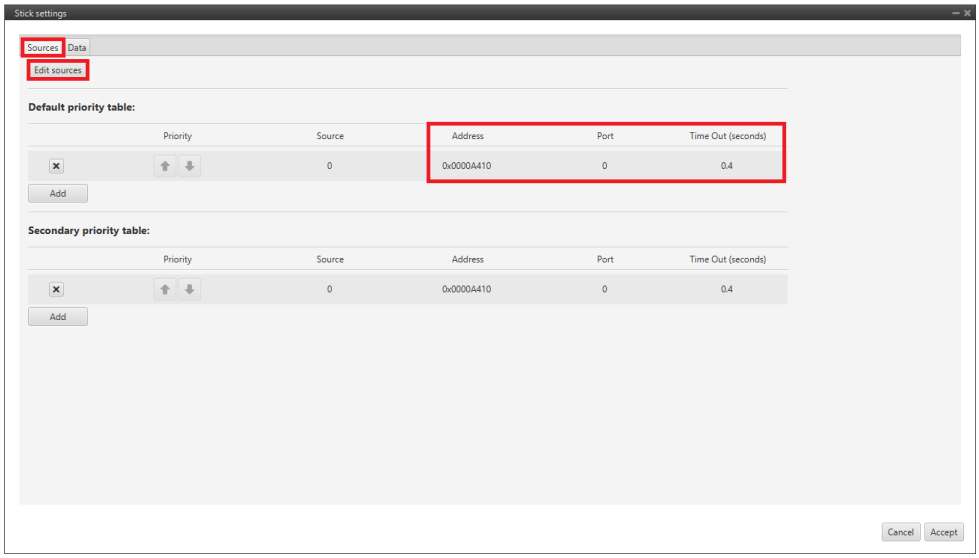

Joystick 16CH - Stick block settings

Then, if all is correct, users can check that 'Stick not detected' variable will be true.



Stick not detected variable - True

And that means that the communication is correctly configured.

PPM Stick


General case

This is the case where the 1x ground unit (or PCS) sends commands directly to the 1x air unit.

Follow the steps below to perform a correct stick configuration on both units.

Ground unit


1. Go to Input/Output menu → **Digital Input panel**.
   Make sure that the following parameters have been configured:
   - Producer: **CAP 0**
     - Enabled
     - Select the pin to which the transmitter is connected, normally GPIO 8 (old EQEP_A)
     - Edge detection: First rising edge
   - Consumer: **PPM 0**

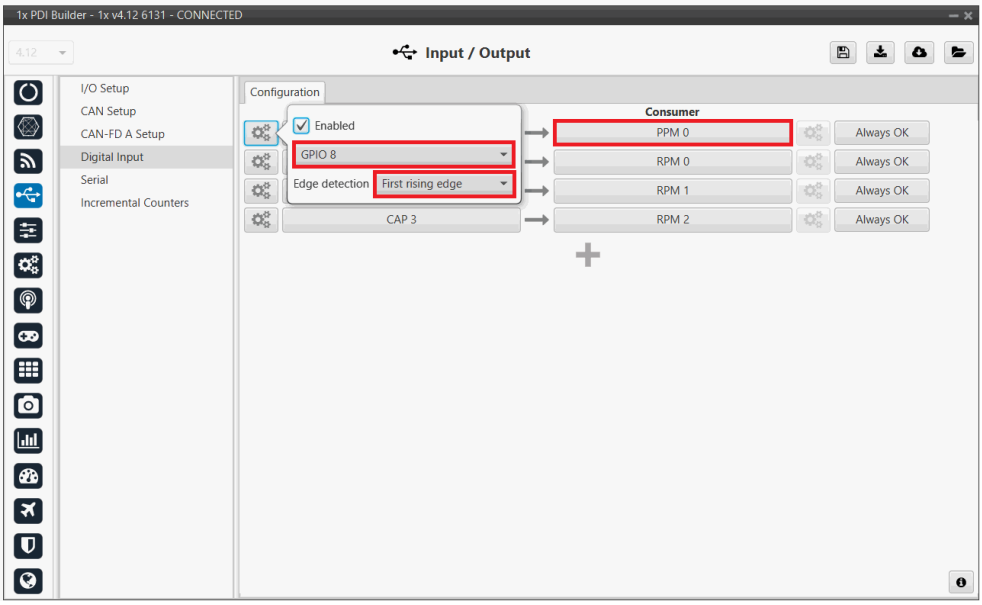

General case (Ground unit) - Digital Input configuration

2. Go to Connections menu → **GPIO panel**.

   Verify that the pin to which the transmitter is connected, in this case GPIO 8, is set as input.

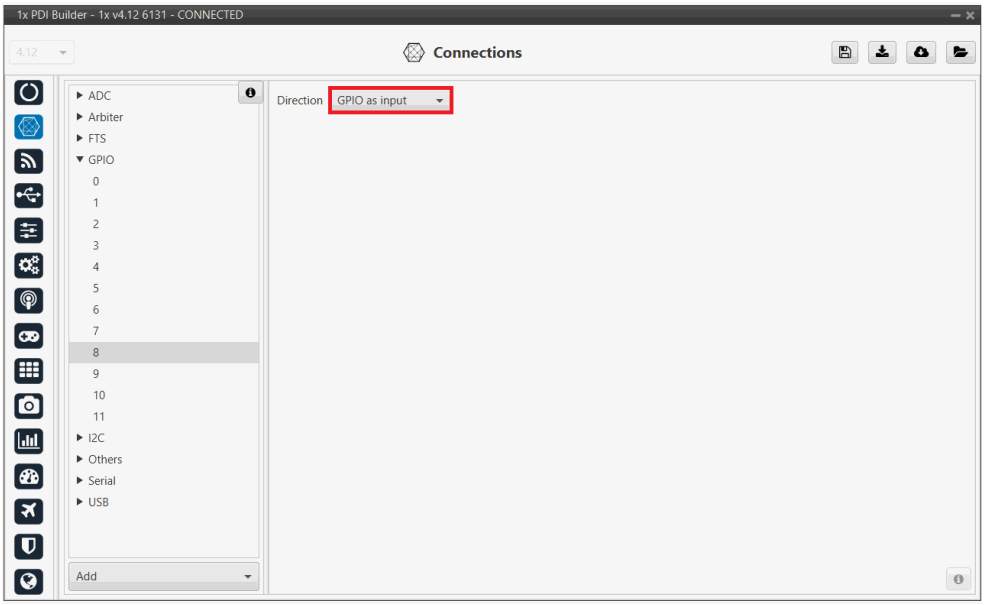


General case (Ground unit) - GPIO configuration


3. Go to Stick menu → **Transmitter 0 panel** → **PPM tab**.

> **Note**
>
> **Transmitter 0** is configured since the consumer **PPM 0** has been chosen in the Digital Input panel.

   Select the brand of transmitter that applies.

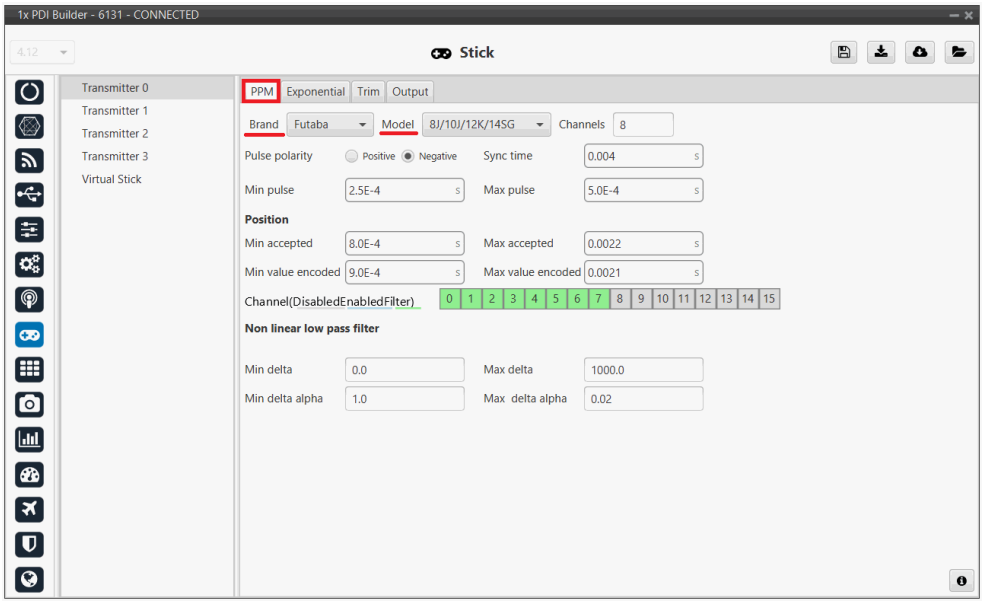


General case (Ground unit) - PPM configuration
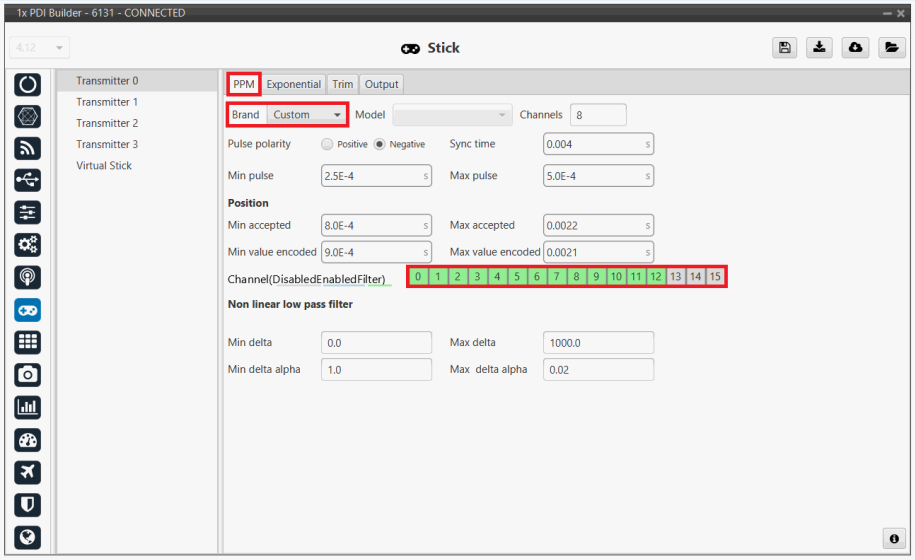
> **Note**
>
> **Jeti 12CH**
>
> To integrate the **JETI 12 channel** model:
>
> - In transmitter brand, select the **Jeti** option
> - Set the **Channels** to **12**
> - Disabled the channels 13 to 16
>
> Once the number of channels has been configured, the Brand category will change to **Custom**, but will retain the Jeti specific configuration.
>
> 
>
>
> **Jeti 12CH - PPM configuration**

4. Go to Stick menu → Transmitter 0 panel → **Output tab**.

   Click on **Enable** and on **Remote** to send the stick information to the air unit. Please check the recommended values for the configurable parameters described in the Ouput - Stick section of this manual.

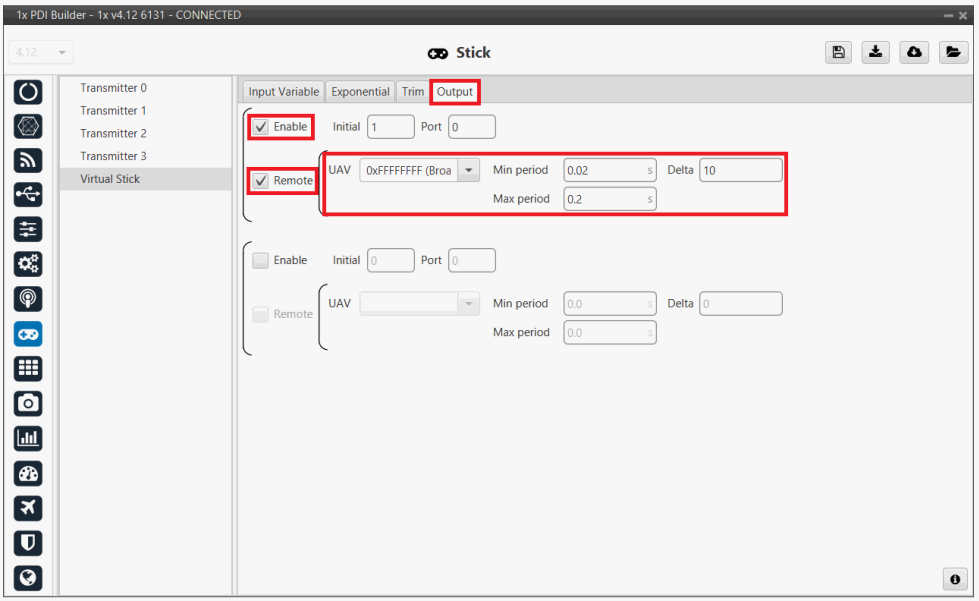

General case (Ground unit) - Output configuration

If all these settings are correct, users can check that **'Stick PPM 0 not detected'** variable of the **GND unit** will be true.



Stick PPM 0 not detected variable - True


Air unit

1. Go to Stick menu → Transmitter 0 panel → **PPM tab**.

   Select the brand of transmitter that applies (make the same configuration as the ground unit).

1. Go to Stick menu → Transmitter 0 panel → **Output tab**.

   Just click on **Enable**.

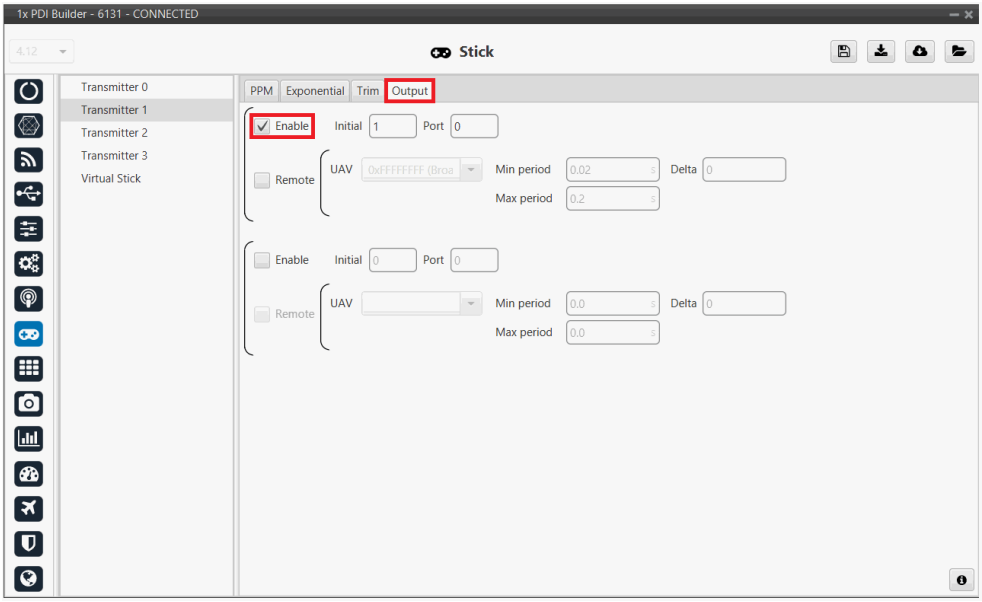


General case (Air unit) - Output configuration

2. Go to Block Programs menu → **Stick program** → Double click on the **Stick block** → **Edit sources**.

> **Note**
>
> Normally the user has a **Stick Program** where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

Input the **ground unit address** to receive the stick information from that source and put it as the **highest priority** in the priority table. We recommend a Time Out of **0.4 s**.

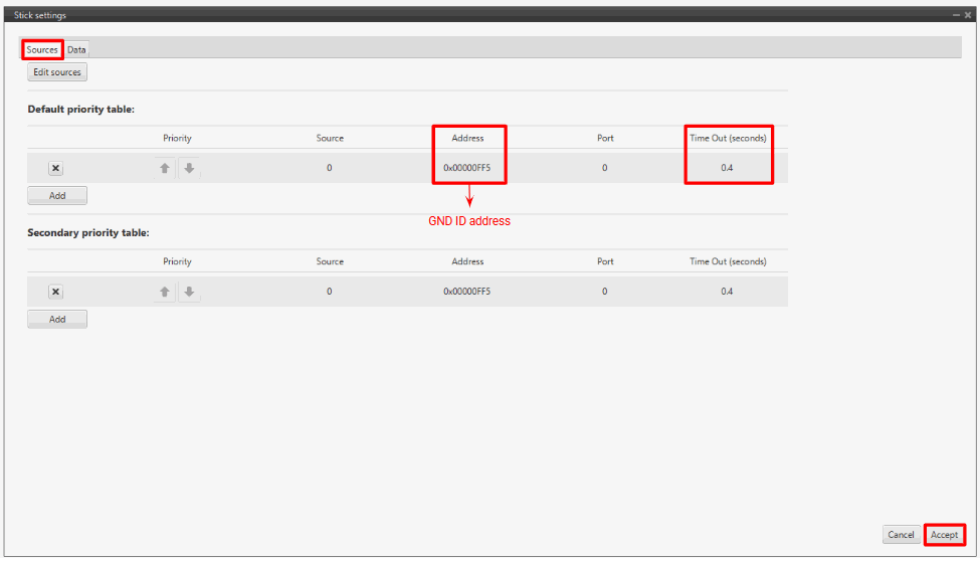

General case (Air unit) - Stick block configuration

Then, if all is correct, users can check that **'Stick not detected'** variable of the **AIR unit** will be true.



Stick not detected variable - True

And that means that the communication between the GND and the AIR unit is correctly configured.

Simulation case (HIL)


In this case, the user is only using one Autopilot 1x.

So users will have to follow steps 1, 2 and 3 explained above for the **ground unit**, but also steps 2 and 3 of the **air unit** configuration. However, instead of entering the **ground unit address**, select the **Local** option.

On-board PPM receiver case

In this case, follow the steps below to configure the **1x air unit**:


1. Go to Input/Output menu → **Digital Input panel**.
   Make sure that the following parameters have been configured:
   - Producer: **CAP 0**
     - Enabled
     - Select the pin to which the transmitter is connected, normally GPIO 8 (old EQEP_A)
     - Edge detection: First rising edge
   - Consumer: **PPM 0**

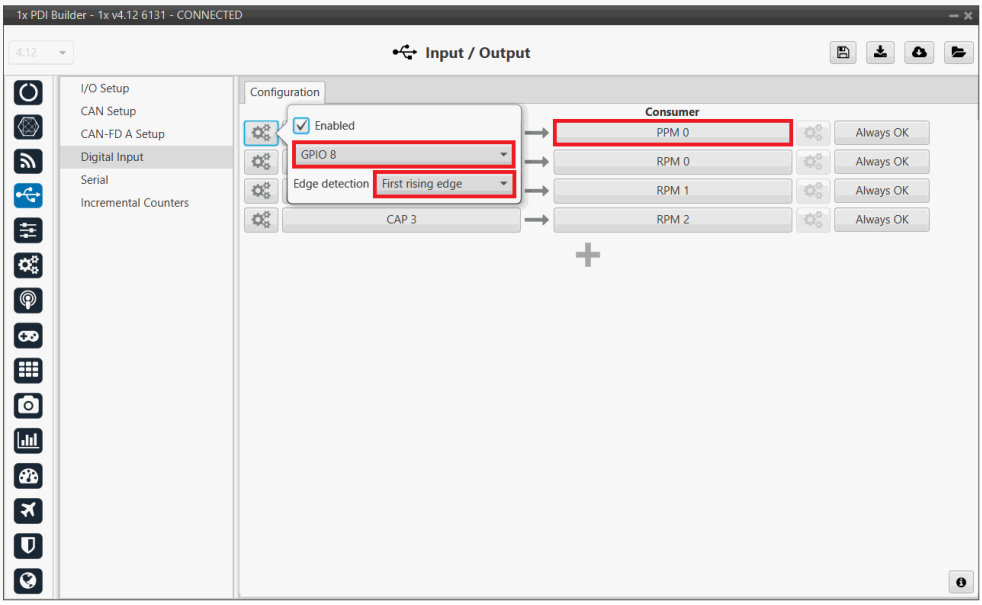

On-board PPM receiver case - Digital Input configuration

2. Go to Connections menu → **GPIO panel**.

   Verify that the pin to which the transmitter is connected, in this case GPIO 16 (i.e., EQEP A), is set as input.

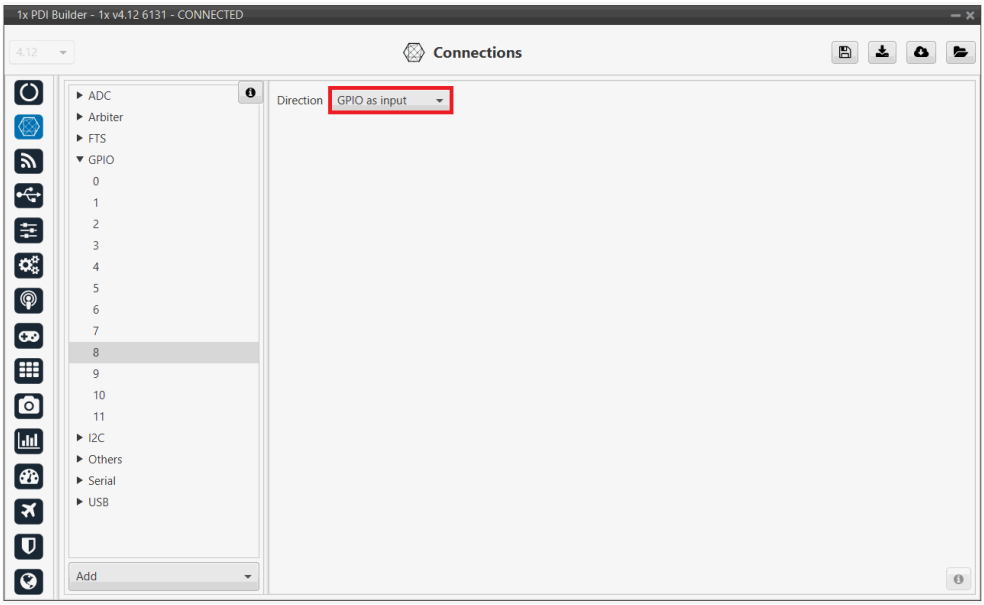


On-board PPM receiver case - GPIO configuration

3. Go to Stick menu → **Transmitter 0 panel** → **PPM tab**.

> **Note**
>
> **Transmitter 0** is configured since the consumer **PPM 0** has been chosen in the Digital Input panel.

   Select the brand of transmitter that applies.

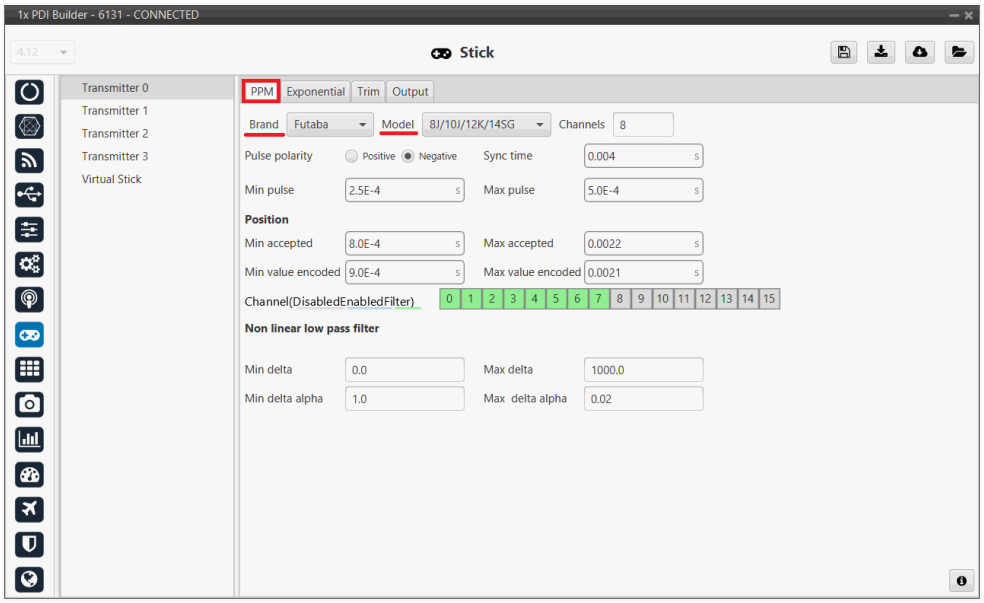

On-board PPM receiver case - PPM configuration


Note

Jeti 12CH

To integrate the **JETI 12 channel** model:

- In transmitter brand, select the **Jeti** option
- Set the **Channels** to **12**
- Disabled the channels 13 to 16


Once the number of channels has been configured, the Brand category will change to **Custom**, but will retain the Jeti specific configuration.

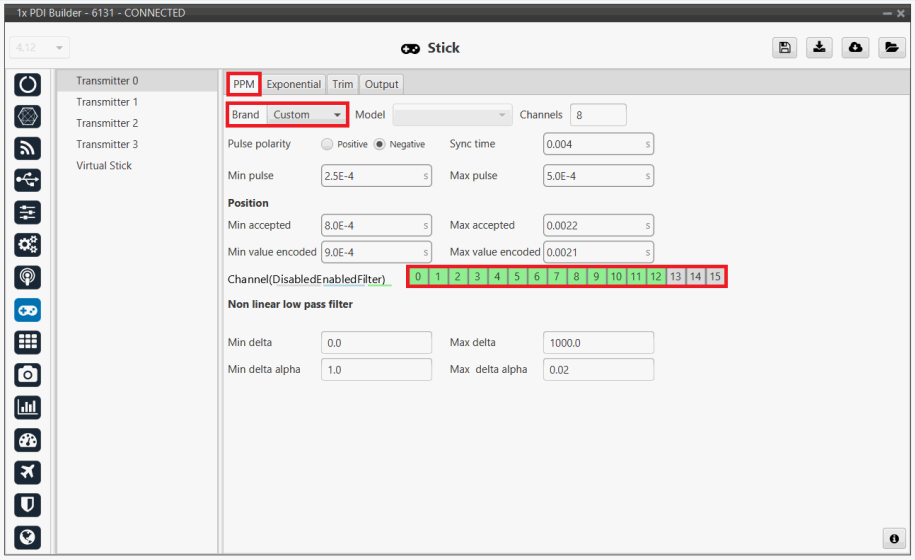

Jeti 12CH - PPM configuration

4. Go to Stick menu → Transmitter 0 panel → **Output tab**.

   Just click on **Enable**.

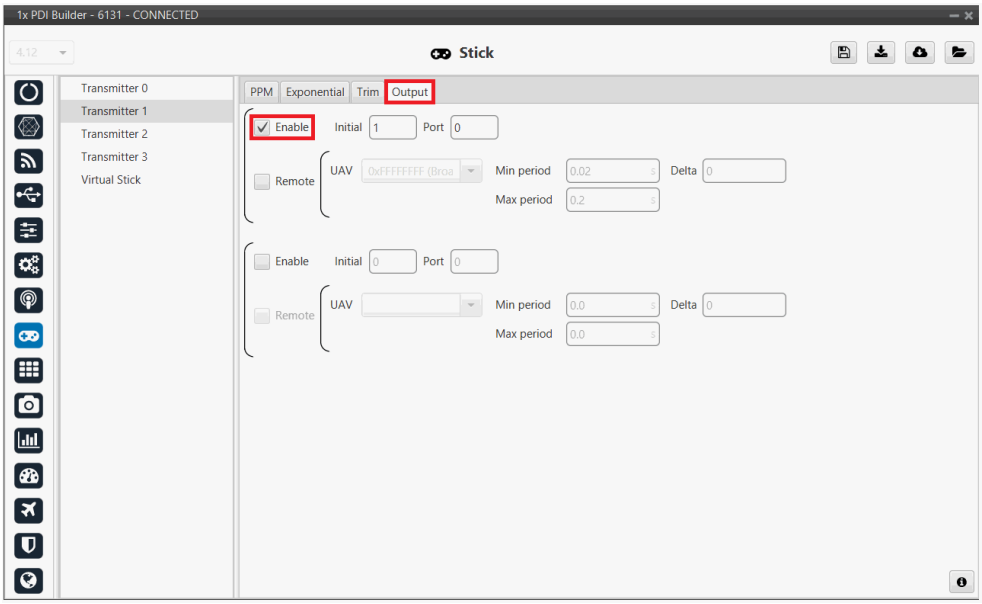

On-board PPM receiver case - Output configuration

If all these settings are correct, users can check that **'Stick PPM 0 not detected'** variable of the **AIR unit** will be true.




Stick PPM 0 not detected variable - True

1. Go to Block Programs menu → **Stick program** → Double click on the **Stick block** → **Edit sources**.

   > **Note**
   >
   > Normally the user has a **Stick Program** where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

   Input the address as **Local** to receive the stick information from that source and put it as the **highest priority** in the priority table. We recommend a Time Out of **0.4 s**.

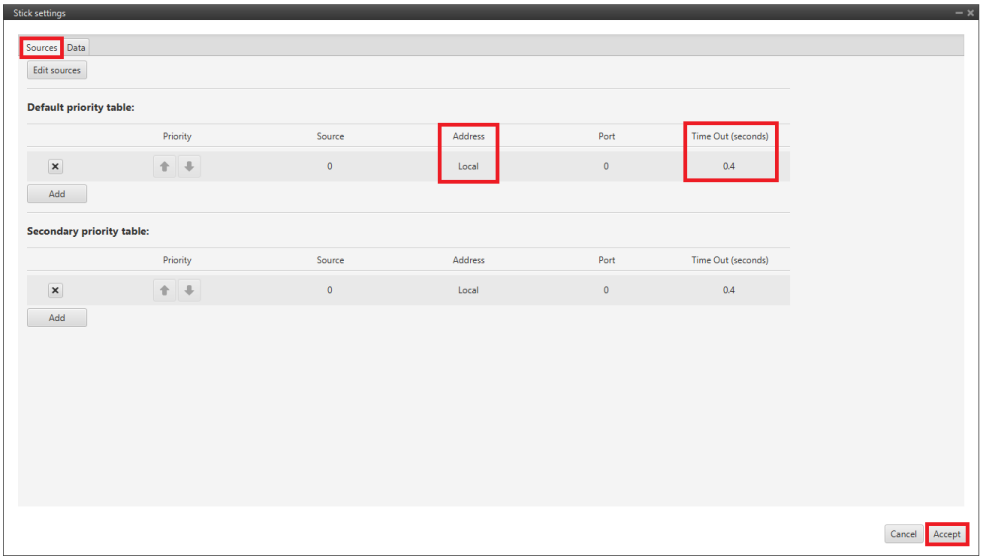

On-board PPM receiver case - Stick block configuration


Then, if all is correct, users can check that **'Stick not detected'** variable of the **AIR unit** will be true.



Stick not detected variable - True

And that means that the communication with the AIR unit is correctly configured.

Stick widget

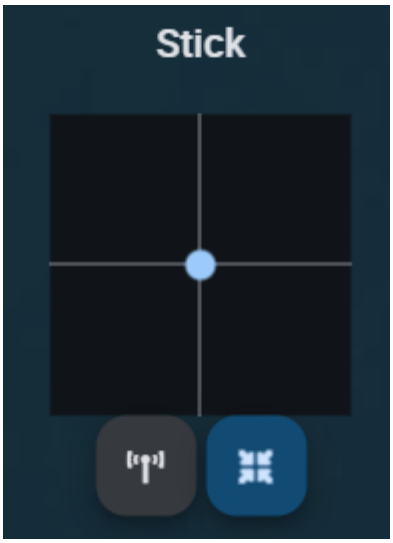


Veronte Ops - Stick Widget

To configure the **Stick widget** of **Veronte Ops** as a control input of **1x**, follow the next steps:

1. Go to Block Programs menu → Stick program → Double click on the **Stick block** → **Edit sources**.

   > **Note**
   >
   > Normally the user has a Stick Program where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

   Add a source with **Address 2** (App) (App 2) to receive the stick information from the stick widget (of Veronte Ops) and put it as the highest priority in the priority table. A Time Out of 0.4 s is recommended.

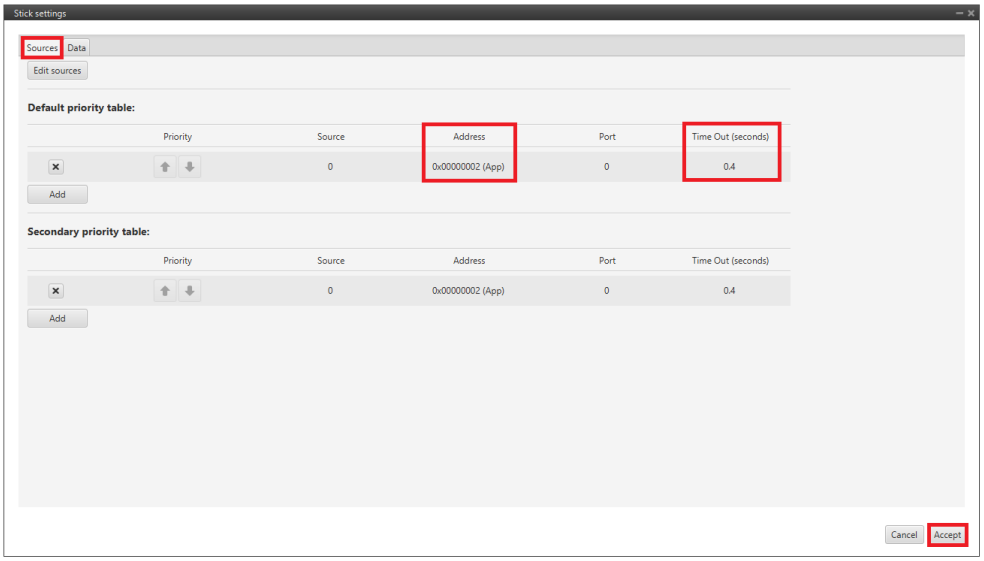

Stick block - Stick settings

2. Configure the **Stick Widget** in **Veronte Ops**. Please find an example of how to configure it in the Stick widget - Integration examples section of the **Veronte Ops** user manual.

USB joystick


Veronte software is able to detect USB devices such as joystick. The signals of these devices can be read and configured to send stick information to **Veronte Autopilot 1x** through the **Stick widget** of **Veronte Ops**.

To configure them:

1. Connect the USB joystick to the computer.
2. Go to Block Programs menu → Stick program → Double click on the **Stick block** → **Edit sources**.

   > **Note**
   >
   > Normally the user has a Stick Program where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

   Add a source with **Address 2** (App) (App 2) to receive the stick information from the stick widget (of Veronte Ops) and put it as the highest priority in the priority table. A Time Out of 0.4 s is recommended.

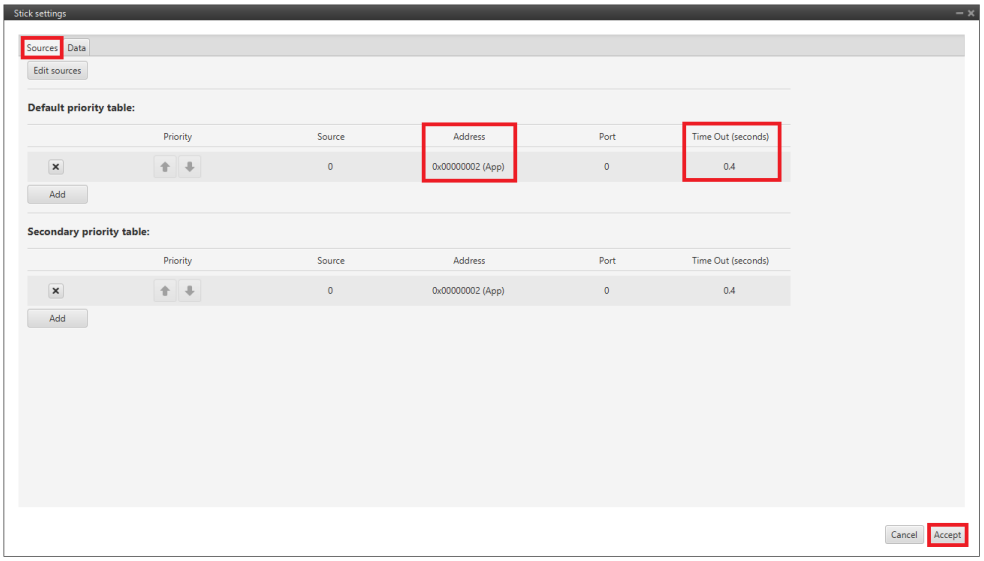

Stick block - Stick settings

3. In **Veronte Ops**, configure the **Stick Widget** to be used with a USB joystick. Please find an example of how to configure it in the USB joystick - Integration examples section of the **Veronte Ops** user manual.


> **Note**
>
> It is also possible to convert USB joystick commands into PPM signals using the Veronte Stick Expander.
>
> For more information about this product, please visit the Stick Hardware Manual or contact sales@embention.com.

Virtual Stick

It is necessary to configure a **Virtual Stick** to process the stick information received from sources other than PPM or USB (by CAN, Serial, ADC, etc.). This stick data must be stored in user variables, and once the virtual stick is configured, these will be processed as stick control signals.

To configure a virtual stick, follow the next steps:


1. Go to Stick menu → Virtual Stick panel → **Input Variable tab**.
   - **Enable** the virtual stick
   - Enter an **update period** (**0.02 s** is recommended).
   - Add the variables containing the stick information in **Input Variable** field.
   - Select as **Stick ok bit** a user bit variable to indicate if the Virtual Stick configuration has been properly set.

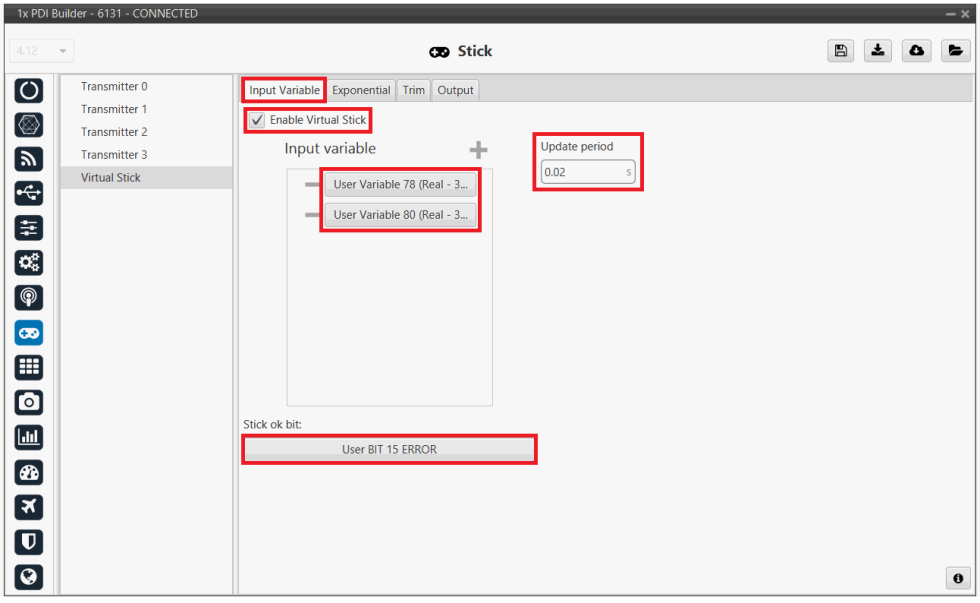

Virtual Stick - Input Variable configuration

2. Go to Stick menu → Virtual Stick panel → **Output tab**.

   Just click on **Enable**.

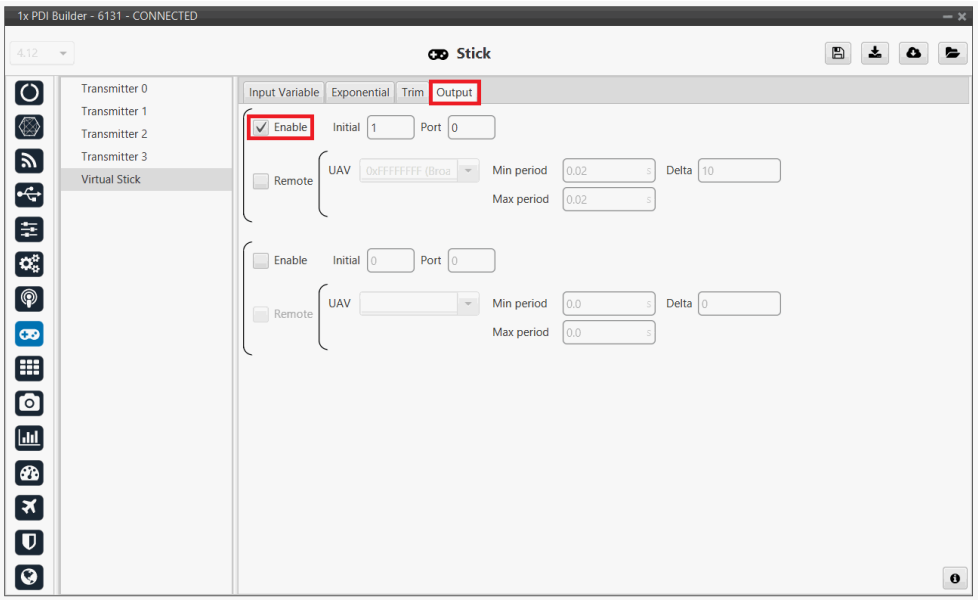


Virtual Stick - Output configuration

> **Note**
>
> If all these settings are correct, users can check the variable previously set as Stick ok bit is true.

3. Go to Block Programs menu → Stick program → Double click on the **Stick block** → **Edit sources**.

> **Note**
>
> Normally the user has a **Stick Program** where the blocks that are related to the stick are implemented, however, the name of the user's program may be different.

Add a source with address **Local** to receive the stick information from the configured variables and put it as the **highest priority** in the priority table. A Time Out of **0.4 s** is recommended.

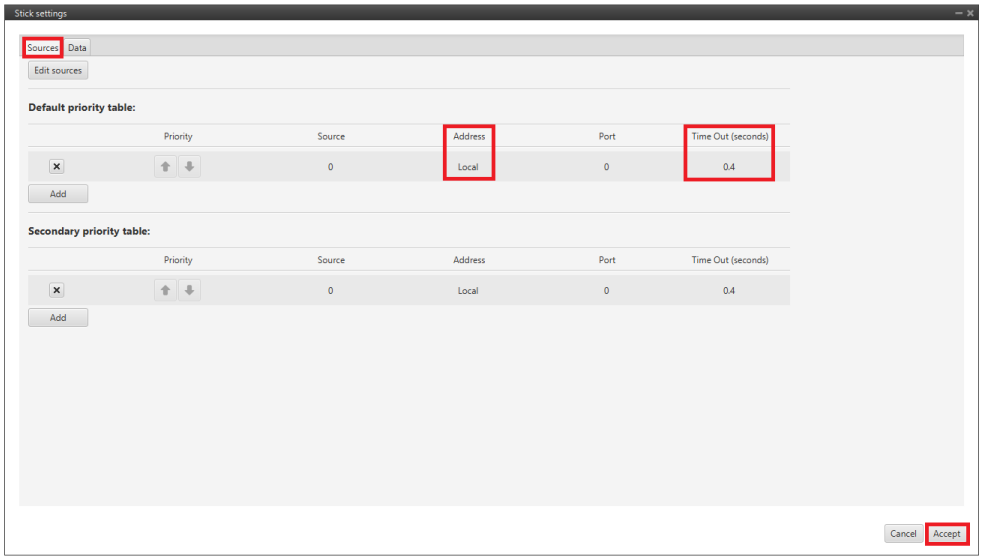

Virtual Stick - Stick block configuration


Then, if all is correct, users can check that Stick not detected variable is true, which means that the communication is correctly configured.

Veronte products

CEX/MEX

As it is sometimes not possible to connect a CEX/MEX directly to the PC in order to configure it (access **CEX/MEX PDI Builder**), the **Veronte Autopilot 1x** is connected to the computer and a connection is made between **CEX/MEX and Veronte Autopilot 1x via CAN**.

To be able to **communicate** with CEX/MEX via **CAN**, the following connection is necessary:

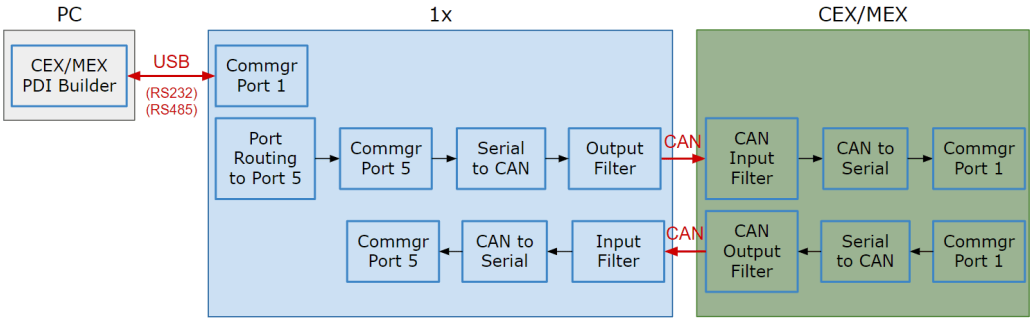

Communication diagram PC ↔ CEX/MEX

> **ⓘ Note**
>
> - **1x** usually has this configuration by default, but check it out.
> - As the steps to be performed in **CEX PDI Builder and MEX PDI Builder are exactly the same**, **only the steps for one of them will be detailed**. The interface may differ slightly, but the configuration is the same.

First, connect the **CEX/MEX** to the **Autopilot 1x** via **CAN**. Detailed information on this connection can be found in the:


- CEX connection - Integration examples section of the **1x Hardware Manual**.
- MEX connection - Integration examples section of the **1x Hardware Manual**.

Then, follow the steps below to make this configuration:

1x PDI Builder side

1. Go to Input/Output menu → **I/O Setup panel**.

   Check the connection between the computer and the **1x** (usually via RS232 or RS485 are also possible).

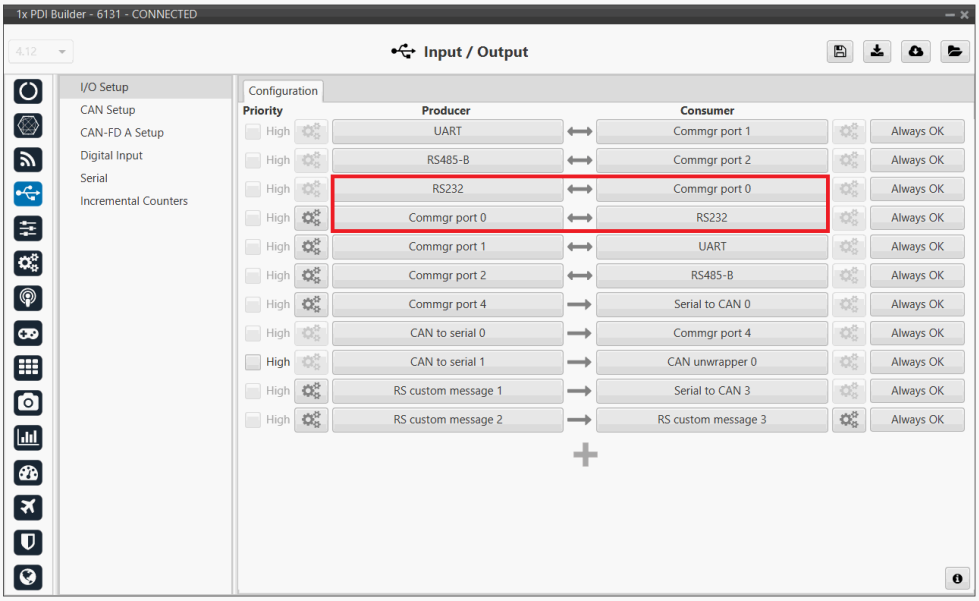

1x PDI Builder - I/O Setup configuration


2. Go to Communications menu → **Ports panel**.

Remove Port 5 from the Forward group and **add Port 5 to the Route group**, with target CEX's Address:

⇒ **Address = 44000 + Serial number**.

The CEX address must be in the **range 45000 - 49999**.


> **Note**
>
> - For **MEX**, the address should look like this:
>   - **Address = 42000 + Serial number**.
>   - The MEX address must be in the **range 43000 - 43999**.
> - If the theorical address does not work, 999 (unknown) can be used as sometimes the address has not been set in CEX/MEX.

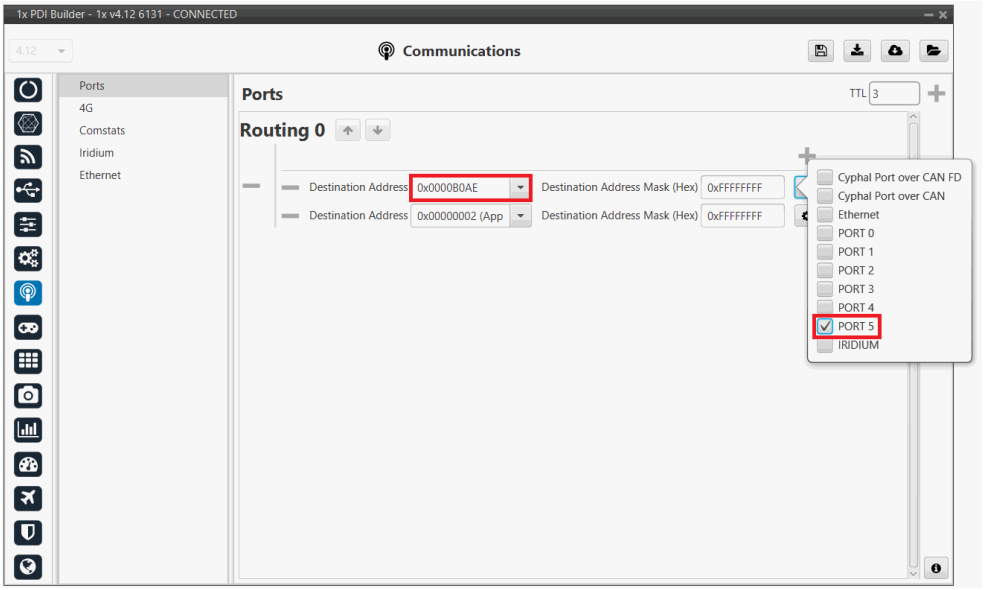

1x PDI Builder - Routing configuration


3. Go to Input/Output menu → **I/O Setup panel**.

   Connect **Commgr port 5** to **Serial to CAN 1** consumer:

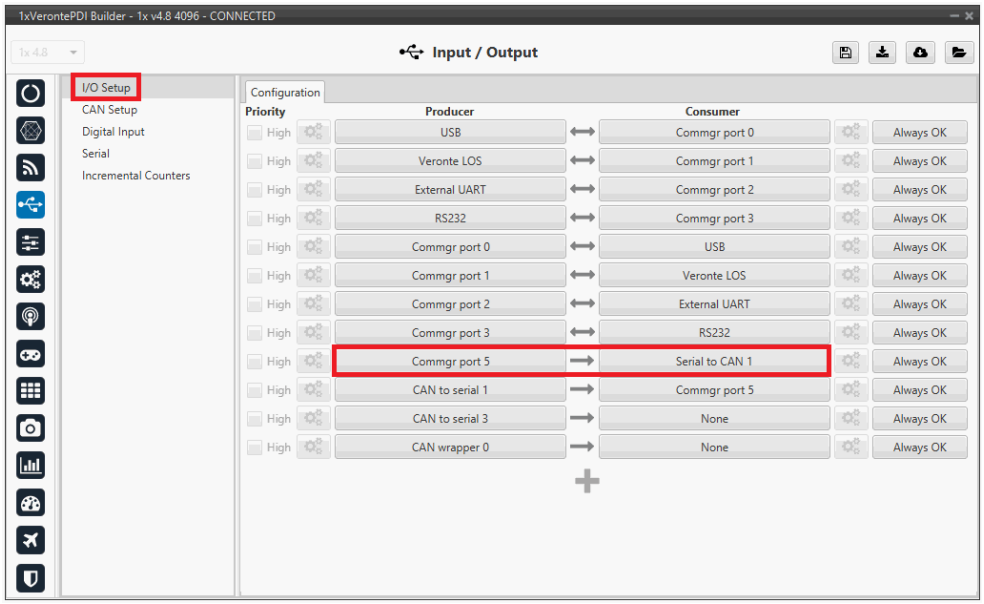

1x PDI Builder - I/O Setup configuration: Serial to CAN

Then, connect **CAN to serial 1** to **Commgr port 5**:

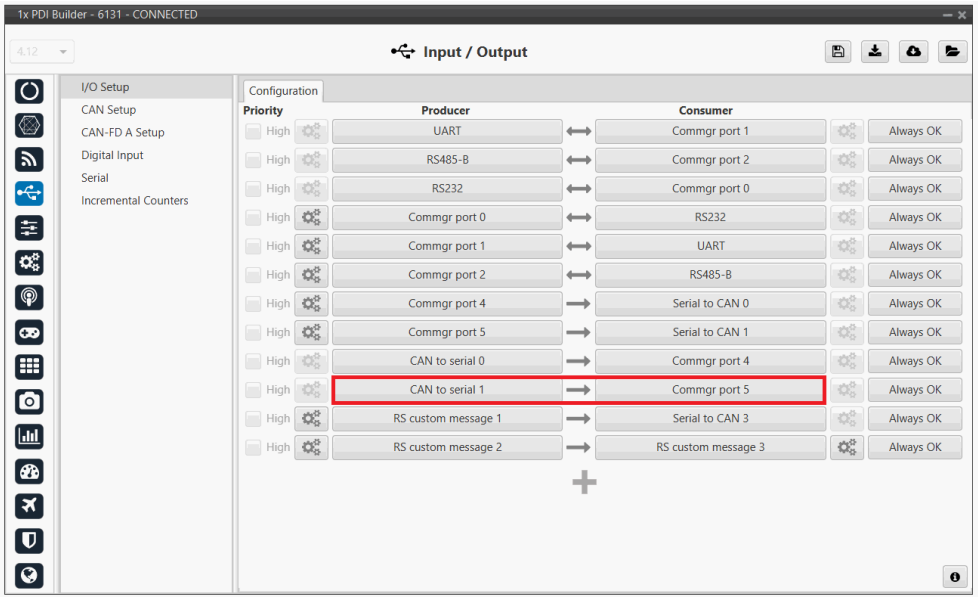


1x PDI Builder - I/O Setup configuration: CAN to serial

4. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect a **Serial to CAN** with the right Id (**CAN ID 1302**) to an **Output filter**.


   In addition, connect an **Input filter** with the right Id (**CAN ID 1301**) to a **CAN to serial**:

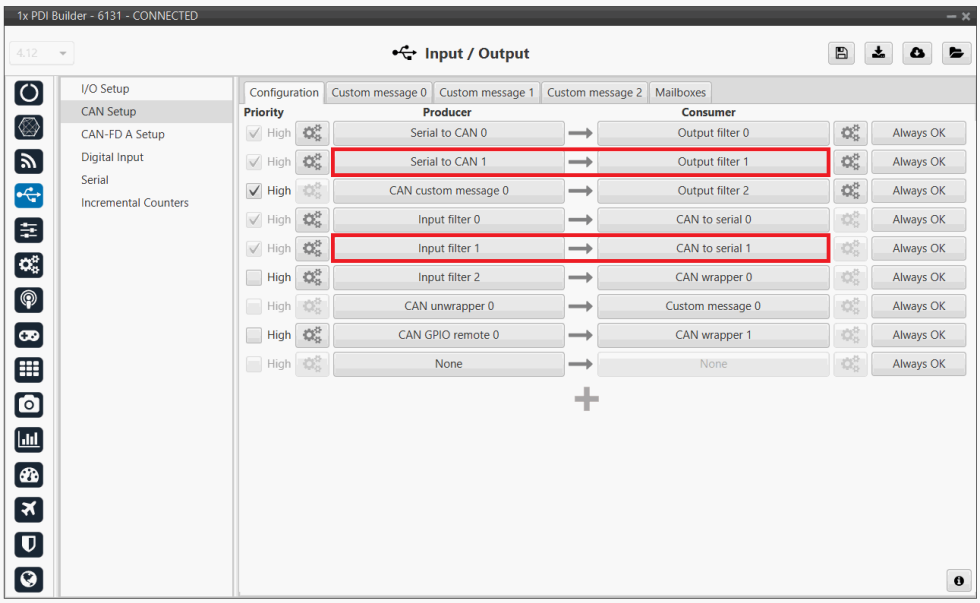

1x PDI Builder - CAN Setup configuration




1x PDI Builder - Serial to CAN configuration

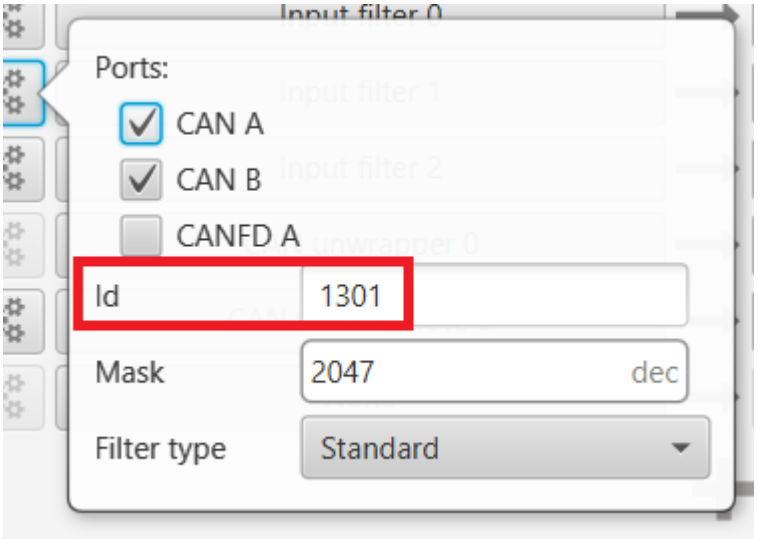

1x PDI Builder - Input filter configuration

5. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.

   Finally, configure the reception **mailbox with ID 1301**, assign at least 4 mailboxes:

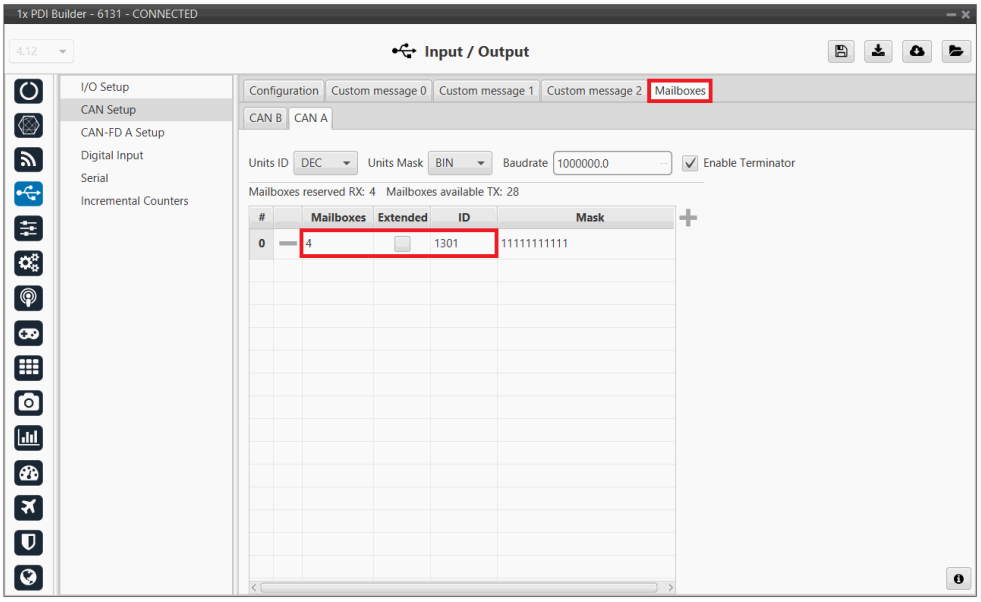

1x PDI Builder - Mailboxes configuration


CEX PDI Builder side

> **Note**
>
> This part is already built for CEX default configuration, but the user can check it.

1. Go to Input/Output menu → CAN I/O panel → **Configuration tab**.

   Connect a **CAN Input Filter** with the right CAN Address (**CAN ID 1302**) to **CAN to Serial 0**.

   In addition, connect **Serial to CAN 0** with the right CAN Address (**CAN ID 1301**) to a **CAN Output Filter** port:

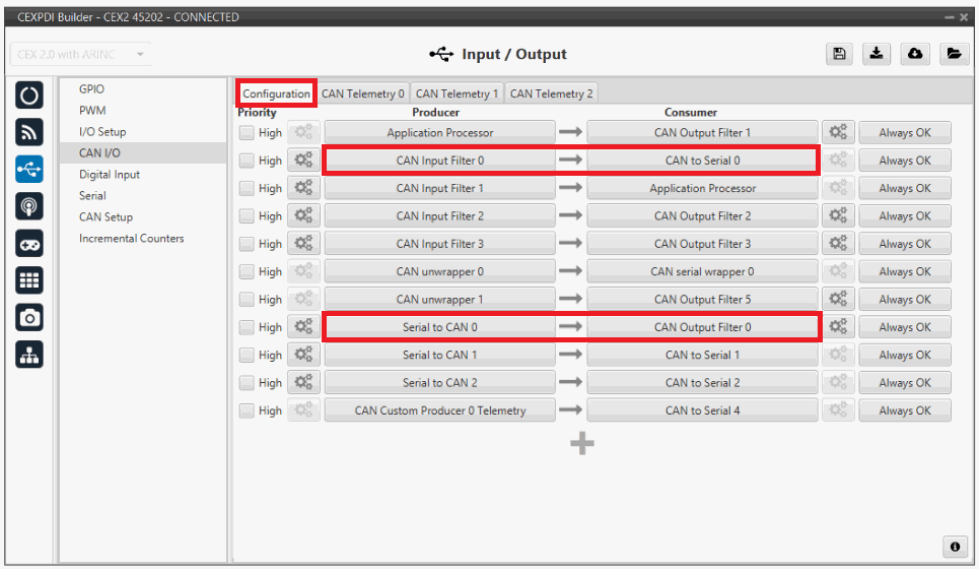

CEX PDI Builder - CAN I/O configuration


CEX PDI Builder - CAN Input Filter configuration

CEX PDI Builder - Serial to CAN configuration

2. Go to Input/Output menu → **I/O Setup panel**.

   Connect **CAN to Serial 0** to any **Commgr port**, in this case Commgr port 0 is used.


   In addition, connect **Commgr port 0** to **Serial to CAN 0** consumer:

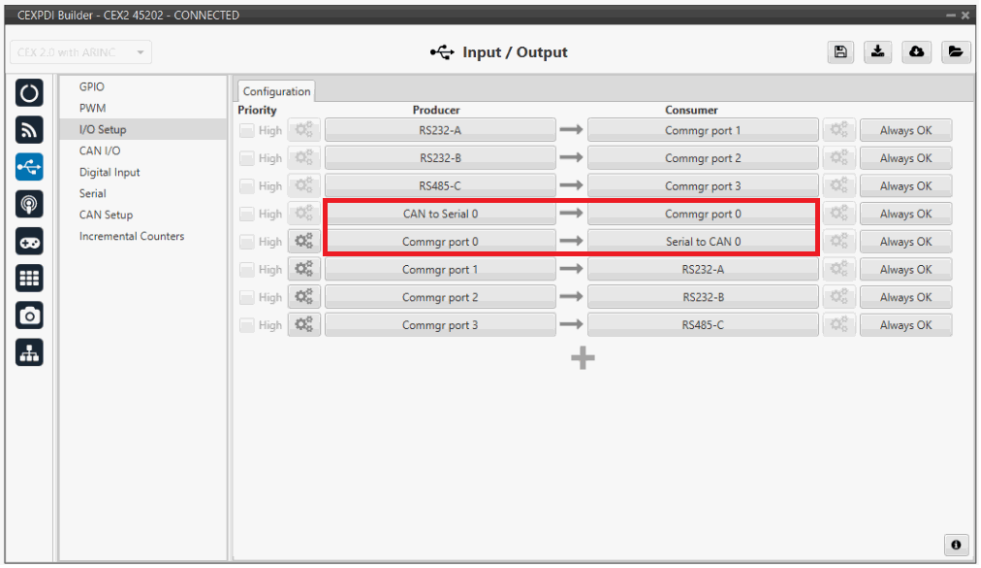

CEX PDI Builder - I/O Setup configuration

3. Go to Input/Output menu → **CAN Setup panel**.

   Finally, configure the reception **mailbox with ID 1302**, assign at least 4 mailboxes:

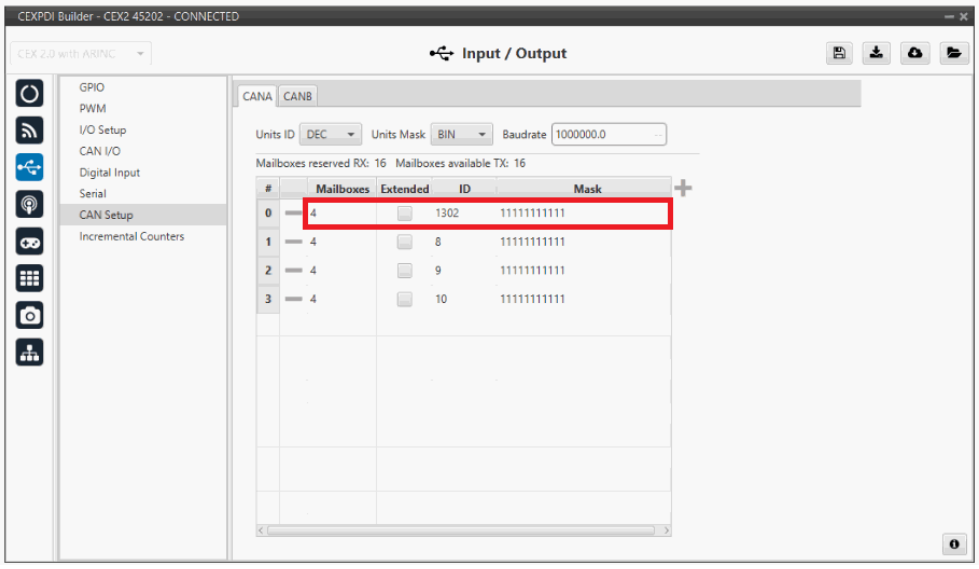


CEX PDI Builder - CAN Setup (Mailboxes) configuration

DRx

DRx is a redundant system composed of three complete **Veronte 1x autopilots**. Each autopilot is individually configurable and they communicate with each other via CAN-FD.

The DRx architecture consists of three units serving the following roles:

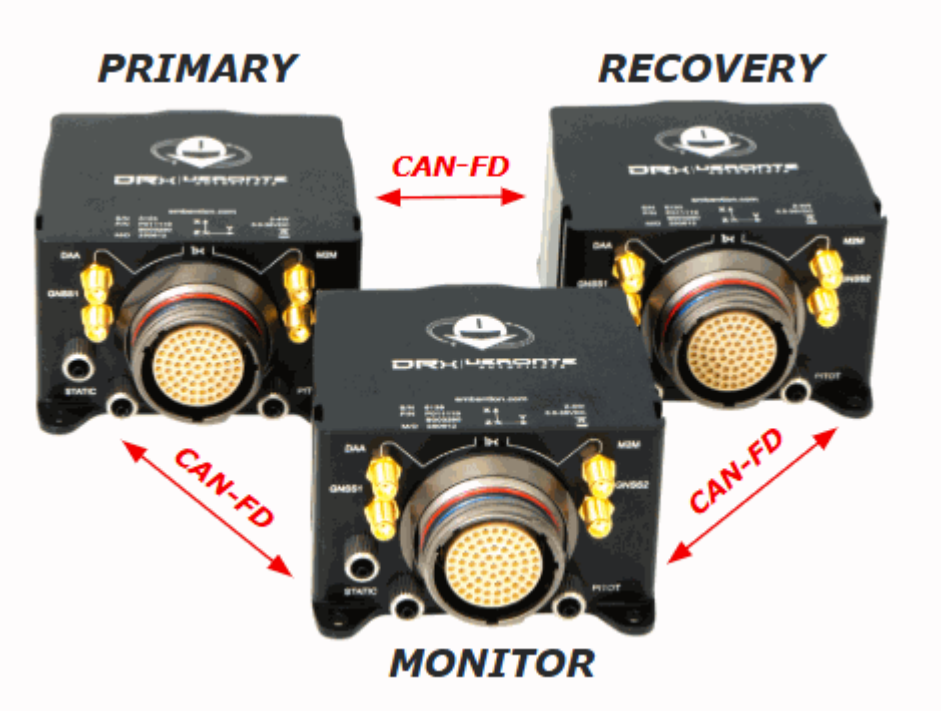

DRx System Architecture

- **Primary Unit**: The default command unit. It acts as the lead controller during standard operations.
- **Recovery Unit**: The backup (failover) unit. It assumes command instantly if the Primary unit fails or exceeds defined error thresholds.
- **Monitor**: The system supervisor. It does not pilot the vehicle; instead, it executes the arbitration algorithm to assign command to the most suitable unit.

Unit Identification


The DRx system utilizes a specific address configuration. The entire system requires a dynamic address, which is assumed by the unit currently in command. Additionally, each hardware unit must be assigned a unique physical address to allow for individual targeting.

Note

The table below provides an example of the address allocation for each unit:


Unit	Address
DRx	0x8000
Primary Unit	0x8001
Recovery Unit	0x8002
Monitor Unit	0x8003

- Go to **Veronte → Vehicle information**. Assign the respective physical address to each hardware unit. In this example, the Primary unit's address configuration is shown.

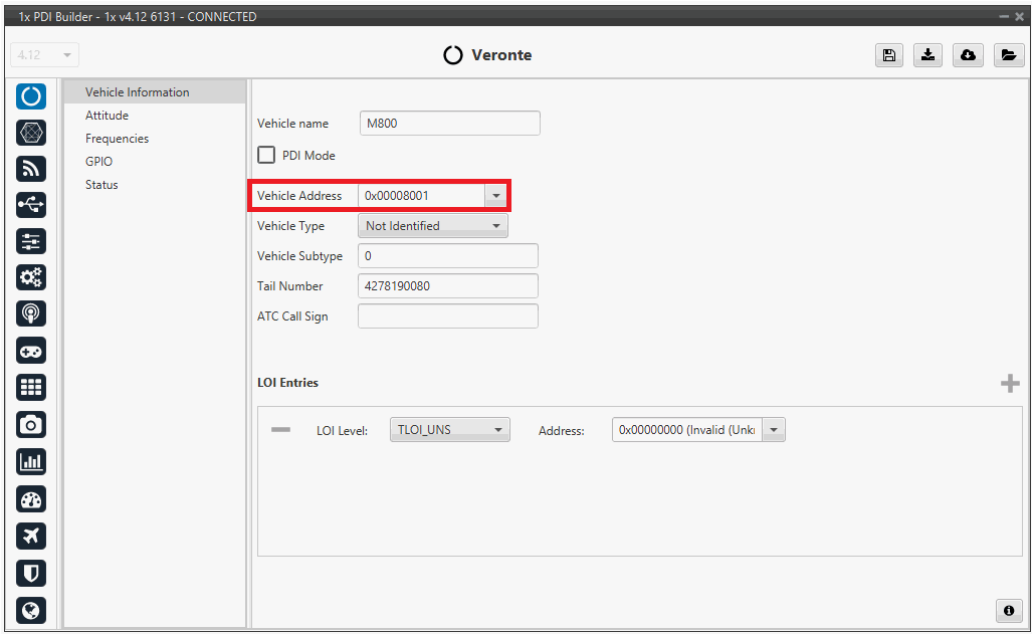

Vehicle Address - Configuration

- Go to **Control → Redundancy setup**.
  - Set the DRx cluster address in the Arbiter address field.
  - Enable the redundancy feature.
  - Input the corresponding unit addresses.

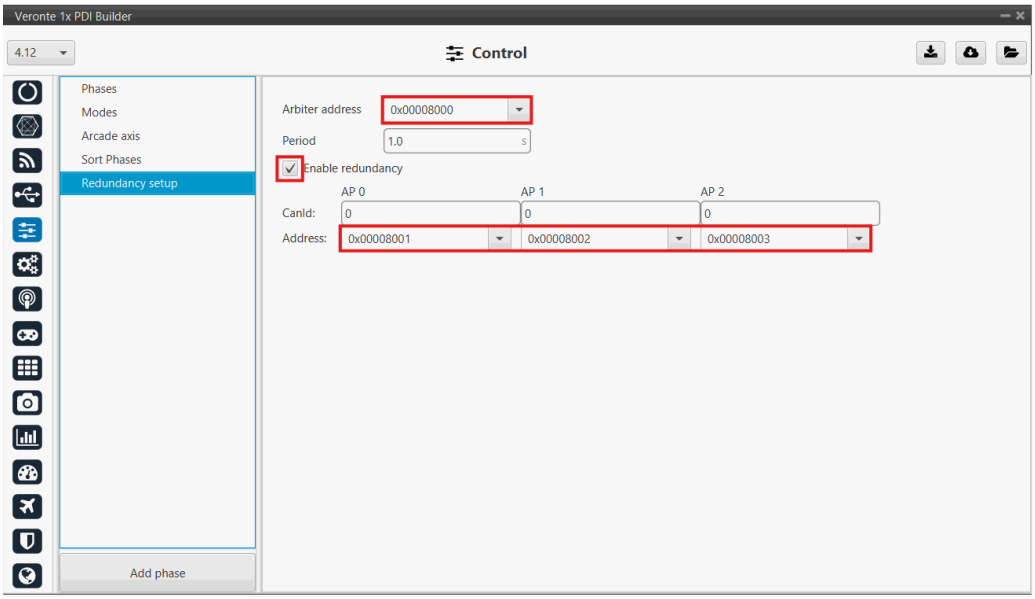

Redundancy Setup - Configuration


> ⚠ **Warning**
>
> Assign a **non-zero value** to the **Period** field to avoid triggering a PDI Error.

I/O Configuration

Communication Messages

The following I/O configuration enables the correct communication across the three units that compose the DRx system, retransmitting commands to ensure full synchronization among all units.


The communication messages must be configured **separately** for each unit, assigning a **unique ID to every communication pathway**. The diagram and table below provide a **configuration example** illustrating the **specific ID assignments** for each DRx unit:

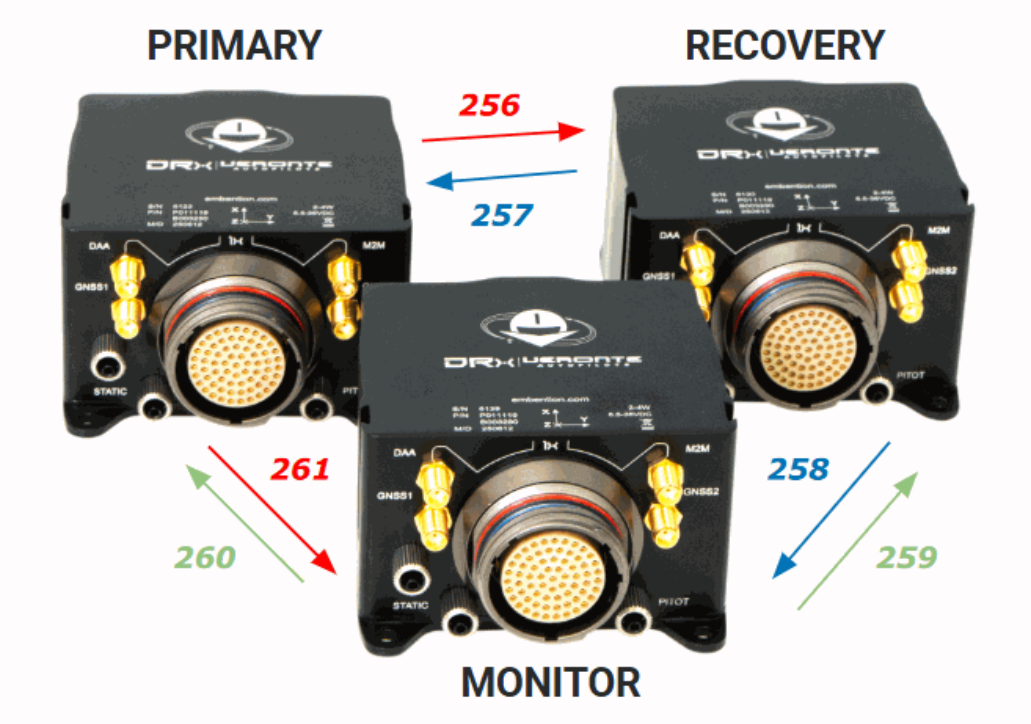

TX \ RX	Primary	Recovery	Monitor
Primary	-	**256**	**261**
Recovery	**257**	-	**258**
Monitor	**260**	**259**	-

Communication IDs between DRx units


- Go to **Input/Output → I/O Setup → Configuration** and configure the following parameters to enable the Serial-to-CAN communication between units.

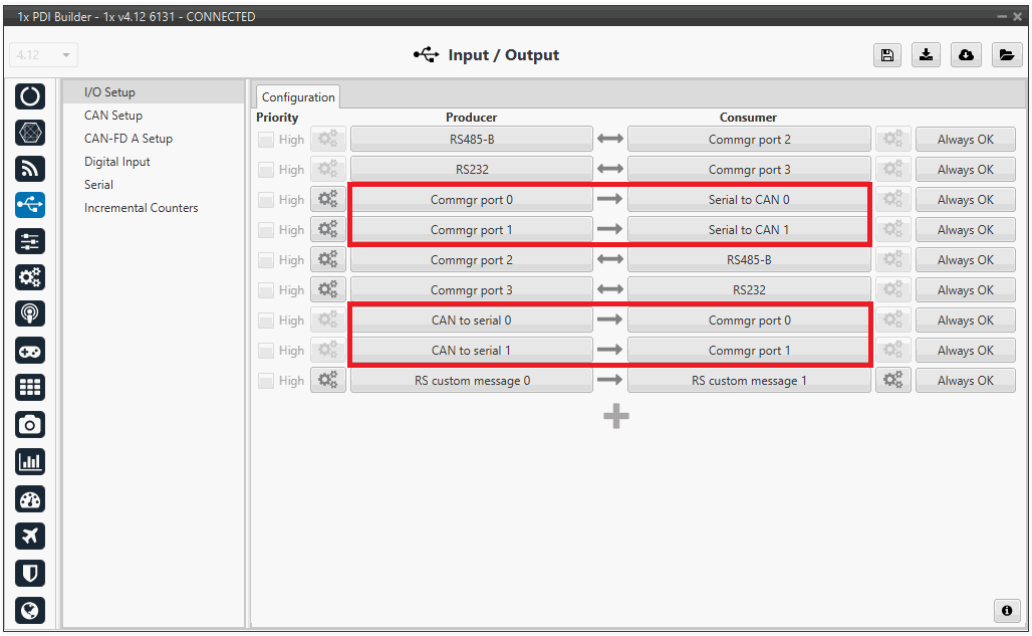


I/O Configuration

- Go to **Input/Output → CAN Setup → Configuration tab**.
  - To **send commands** from this autopilot, connect 2 Serial to CAN producers to 2 Output filter consumers, both configured for CAN-FD A. In this case Output filter 0 and Output filter 1 are selected.
  - To **receive commands** from the other two units, connect 2 Input Filter producers to 2 CAN to Serial consumers. In this case, Input filter 0 and Input filter 2 are selected.

Therefore, to ensure seamless communication between units, you must correctly configure the IDs of both Serial to CAN producers, as well as the ID and mask in the Input Filters.

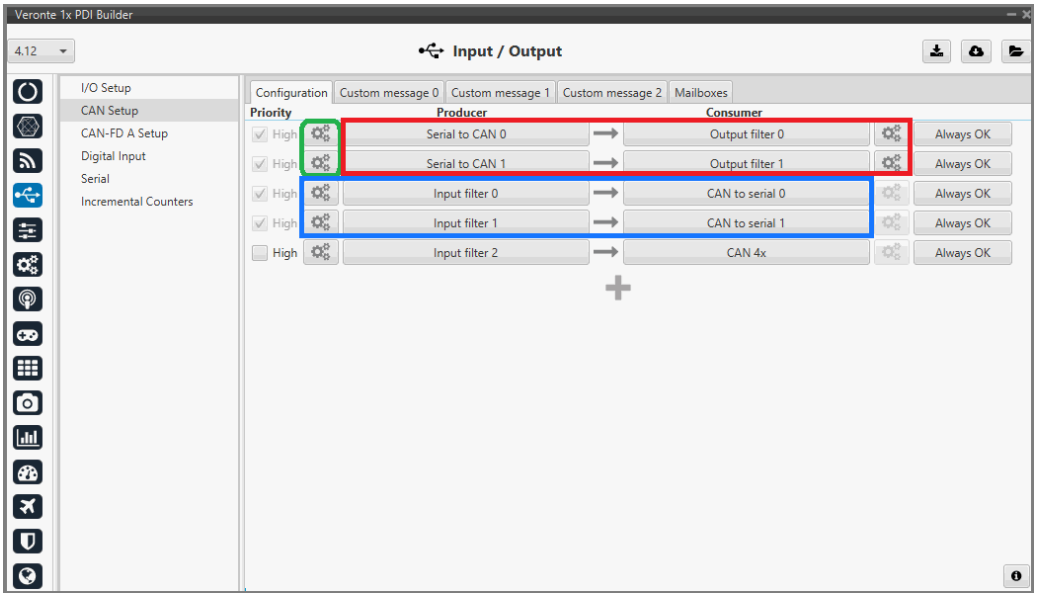

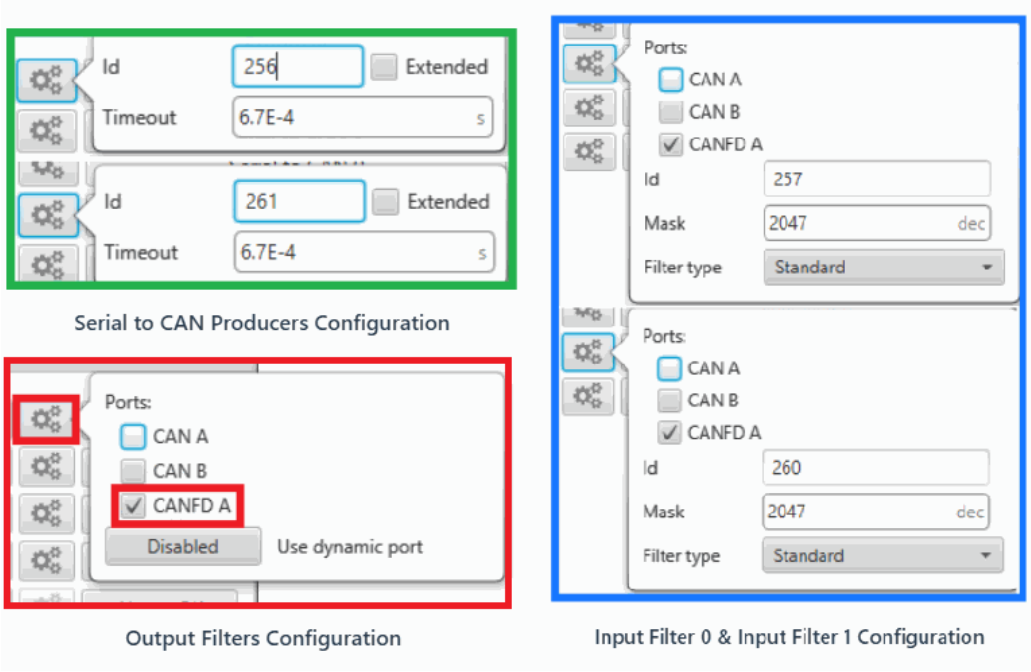


CAN Setup Configuration (Example: Primary unit)

Arbitration Messages


The **Monitor** must inform both the **Primary** and **Recovery** units of the current command status by transmitting the Arbitration message.

- In the **Monitor Configuration**: Go to **Input/Output → CAN Setup → Configuration tab**.
  - To transmit the Arbitration message, connect a CAN Custom message producer to an Output filter consumer, also configured for CAN-FD A. In this case CAN Custom message 0 and Output filter 2 are selected.

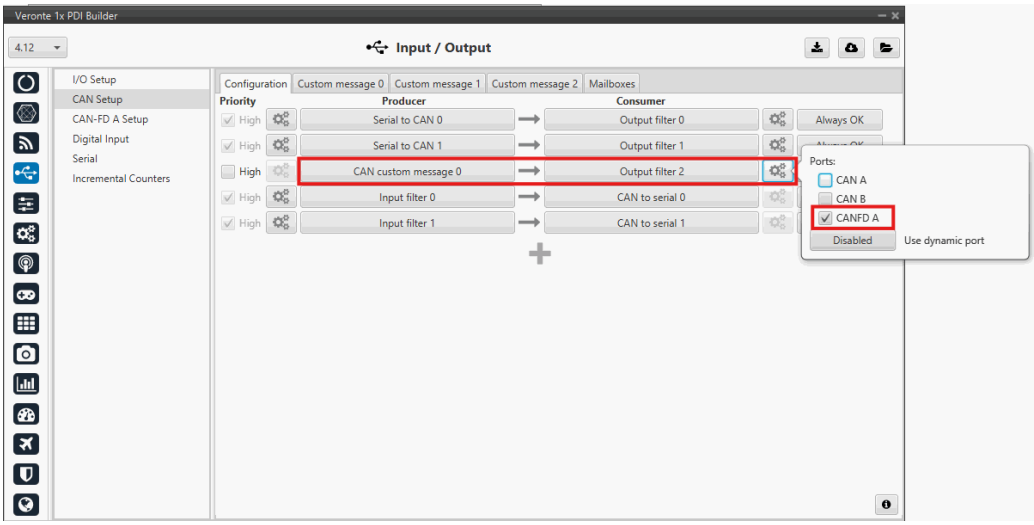

Monitor CAN Setup Configuration - Arbitration Message Transmission

- Go to **Input/Output → CAN Setup → Custom message 0 → TX** and select the ➕ icon to add a field.
  - Enter the corresponding **CAN ID** of the Arbitration message. In this example **127**.
  - Select the Little Endian mode.
  - Enter the corresponding period and offset. In this example, a period of 0.01s and no offset have been set.

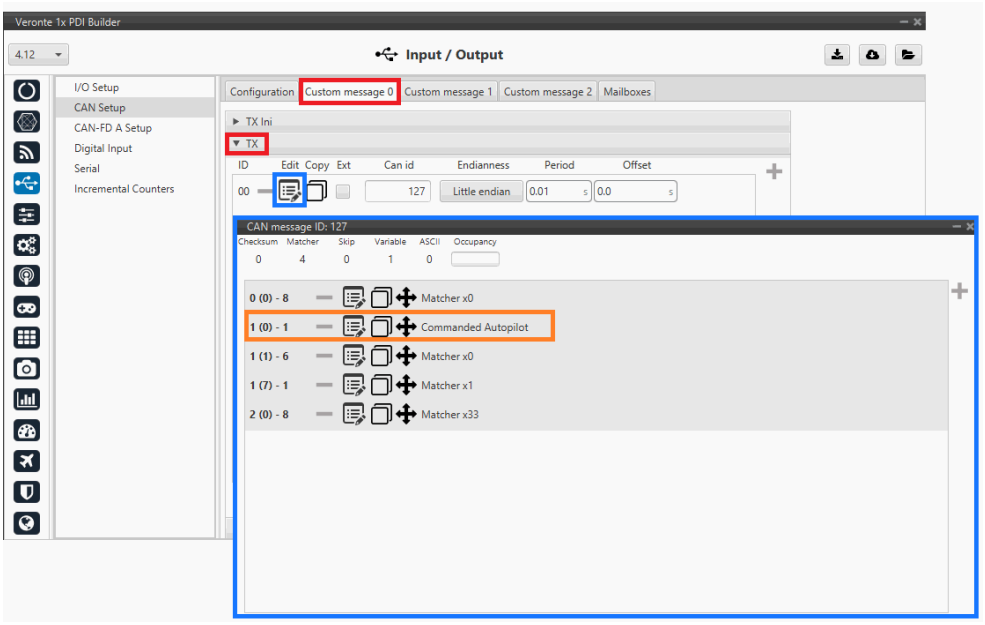

Arbitration Message Configuration

Important


The Arbitration message follows a predefined structure:

Byte	Position	Value	Description
0	0 - 7	0x00	Header
1	0	0x00 / 0x01	CAP (Commanded Autopilot)
1	1 - 6	0x00	Hardcoded
1	7	0x01	Hardcoded
2	0 - 7	0x33	Hardcoded


The **Commanded Autopilot** is the boolean final output (User bit) of the Arbitration algorithm:

- If the variable is FALSE: Primary unit is in command.
- If the variable is TRUE: Recovery unit is in command. Additionally, the **Primary** and **Recovery** units must be configured to accept and interpret the arbitration message.

- In the **Primary/Recovery Configuration**: Go to **Input/Output → CAN Setup → Configuration tab**
  - Connect an Input filter producer to the predefined CAN 4x consumer, in this case Input filter 2 is selected.
  - In the **Producer** settings, enable reception of arbitration message. In this example, **ID 127** is selected.

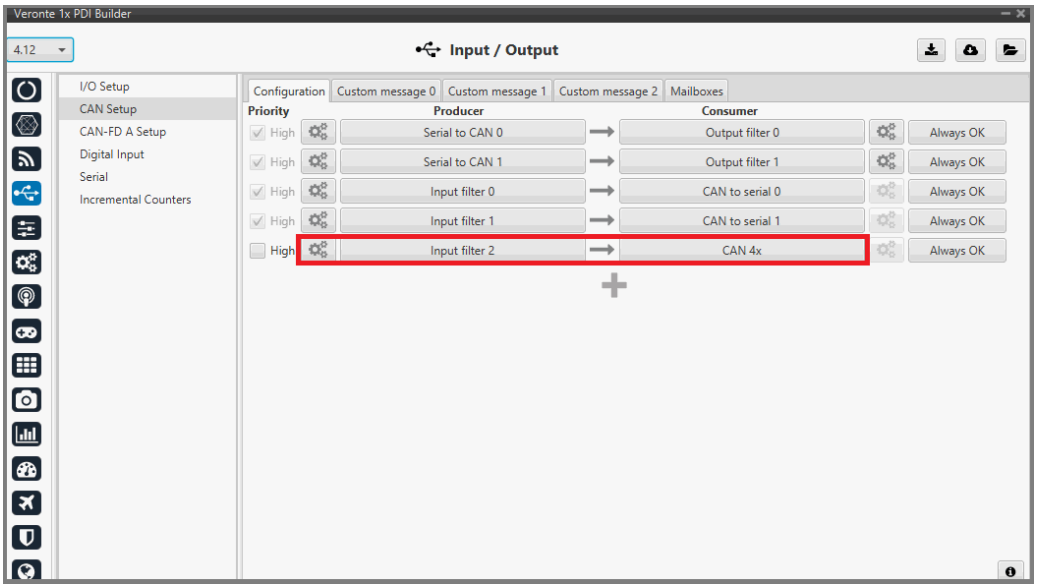


Primary/Recovery CAN Setup Configuration- Arbitration Message Reception

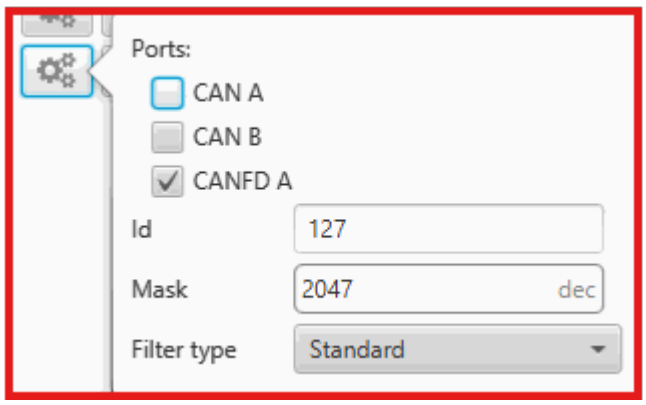

Input Filter 2 Configuration - Arbitration Message


- In the **Primary/Recovery Configuration**: Go to **Input/Output → CAN-FD A Setup → Mailboxes tab**.
  - Configure the CAN-FD mailboxes to accept the incoming messages defined. According to this example (Primary unit), the corresponding **IDs** are **257** (Data from Recovery unit), **260** (Data from Monitor unit) and **127** (Arbitration message).
  - **Enable** the internal CAN-FD **Terminator**.

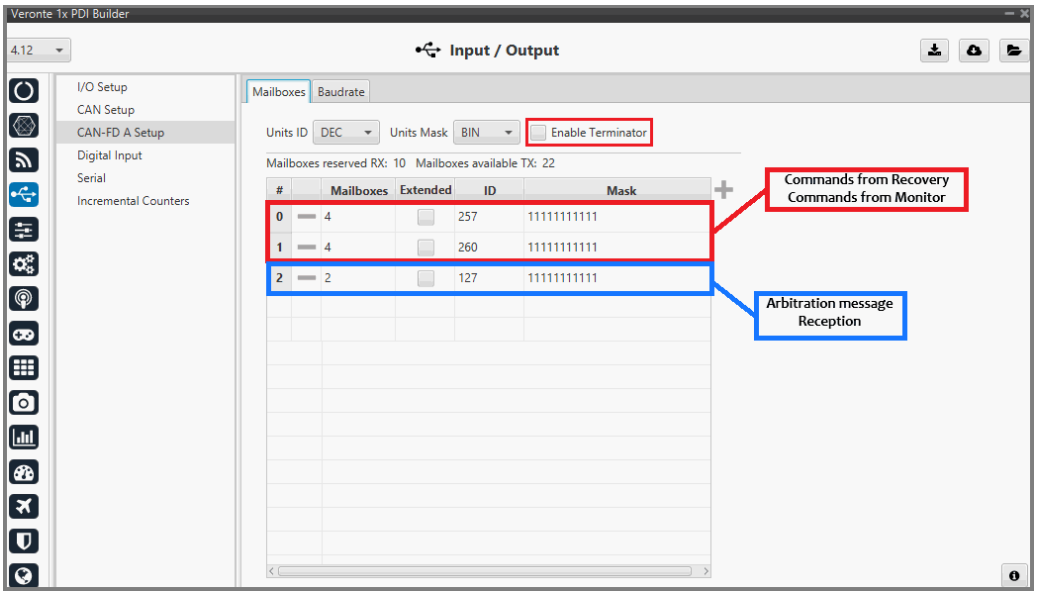

CAN-FD A Setup - Primary/Recovery Mailboxes

Note

In the **Monitor** configuration, **only 2 Mailboxes** need to be configured. The mailbox for the Arbitration message is not required. In this example (Monitor unit), the corresponding **IDs** are **261** (Data from Primary unit) and **258** (Data from Recovery unit). Enabling the internal CAN-FD Terminator is required to ensure proper bus operation.

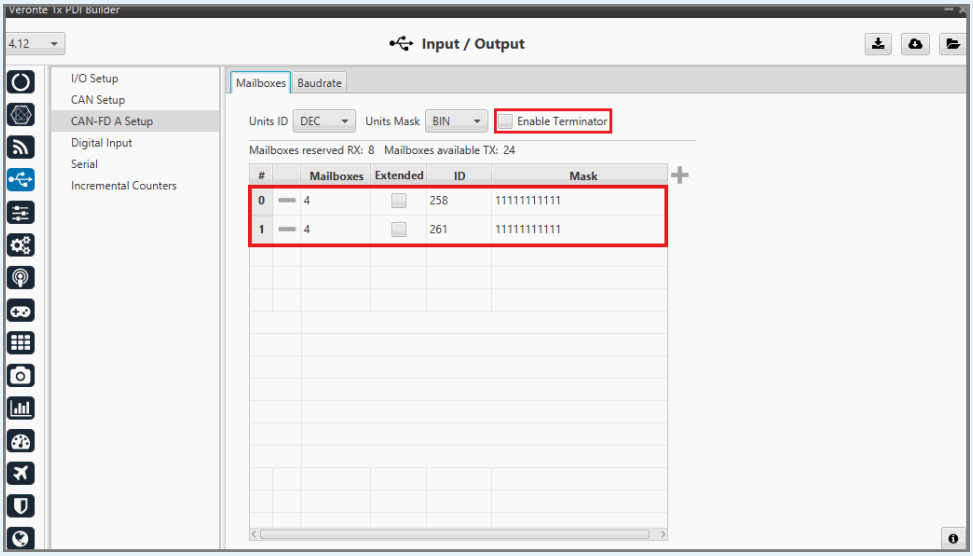


CAN-FD A Setup - Monitor Mailboxes

Communication Configuration

Routing

Configure the system to route messages to the CAN interfaces based on the target Unit Address, i.e. tell the system exactly which physical port to use when sending a message to a specific Unit Address (whether the message comes from Ground or is generated internally).

- **CASE 1: Primary/Recovery Configurations**

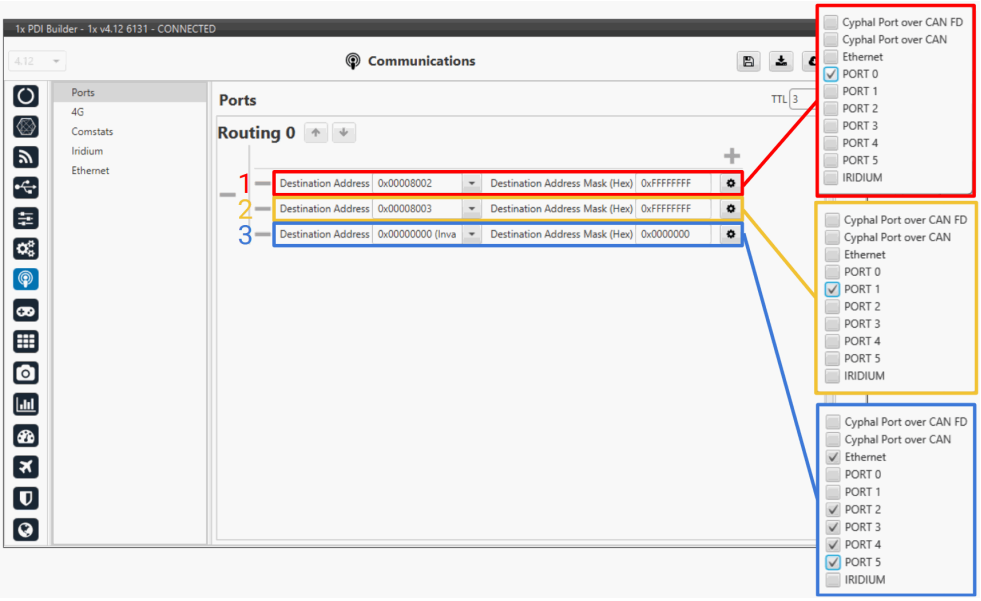


Ports - Primary/Recovery Configuration

  - **Route 1** (red): Establishes the communication port between the Primary and Recovery units.
  - **Route 2** (yellow): Establishes the communication port between the Primary and Monitor units.
  - **Route 3** (blue): Establishes communication port between the Primary and other system components.

> **ⓘ Note**
>
> **Symmetric Address Configuration**
>
> The image above illustrates the configuration from the **Primary** unit's perspective (where the route targets the Recovery address, e.g., `0x00008002`). When configuring the **Recovery** unit, the port layout and logic remain identical, but you must invert the target address to point to the Primary unit instead (e.g., changing `0x00008002` to `0x00008001`).

- **CASE 2: Monitor Configuration**

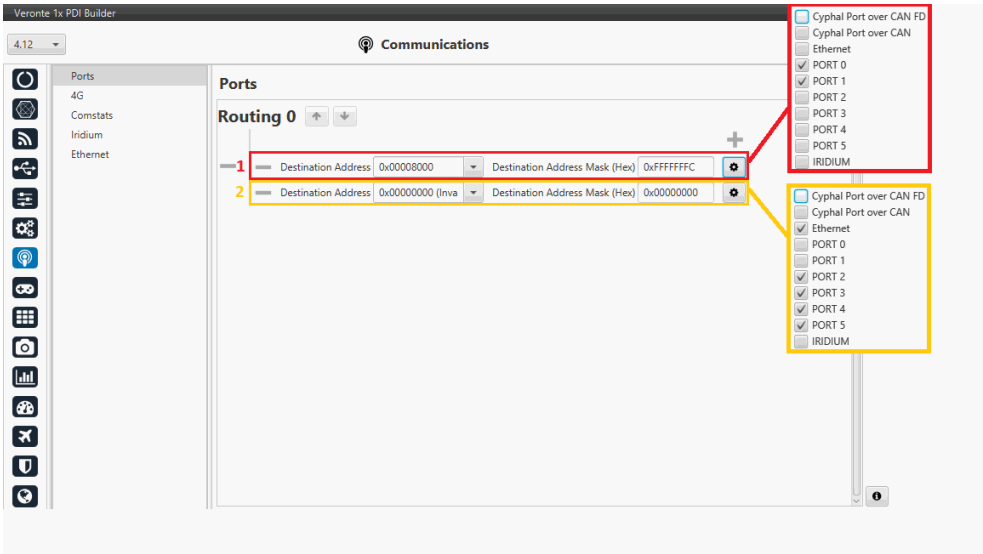

Ports - Monitor Configuration

  - **Route 1** (red): Establishes the communication port between the Monitor and the Primary and Recovery units.
  - **Route 2** (yellow): Establishes the communication port between the Monitor and other system components.


Ethernet

It is recommended to modify the port addresses of the hardware units to optimize Ethernet performance. The following table outlines the specific port assignments used in this example:

Unit	Port
Primary	52001

Unit	Port
Recovery	52002
Monitor	52003
Default (Maintenance Mode)	52000

- Go to **Communications → Ethernet** and and assign a unique port to each unit to prevent bottlenecks. The example below illustrates the configuration for the Primary unit:

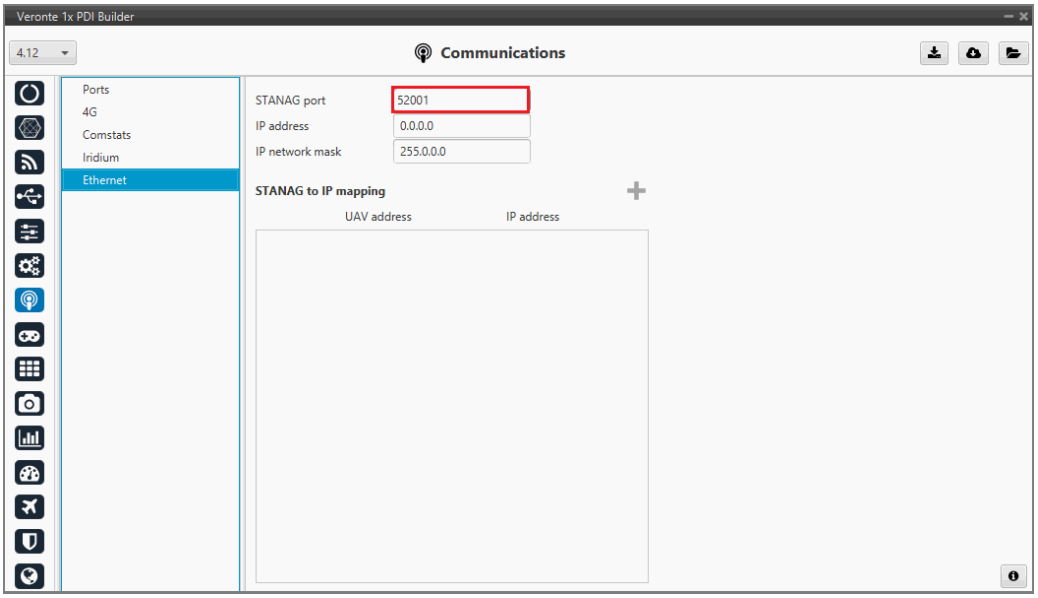

Ethernet port Configuration

- **FIREWALL CONFIGURATION**: Users must enable the **new UDP ports** (In the example 52001, 52002 and 52003) in the firewall to ensure the correct operation of the three Autopilot 1x **Ethernet connection**. This configuration might need to be performed by the cybersecurity manager of your company.

> **Important**
>
> Veronte Link must be configured to detect all three operational ports simultaneously. For further information, please refer to the UDP Multicast Configuration - Operation section of the **Veronte Link** user manual.




Ports Configuration in Veronte Link

Monitor Arbitration Logic

The Arbitration Logic implemented in the **Monitor unit** is the core decision-making process of the DRx system. It is responsible for evaluating the operational integrity of the flight controllers and managing the transition of command. The boolean output of this logic is the 'Commanded Autopilot' variable included in the Arbitration message.

- **Implementation**: Configured via Block Programs in the PDI.
- **Flexibility**: The user defines the criteria for a "Healthy" vs. "Failed" unit.
  - Binary Approach: Simple Pass/Fail flags (e.g., "If IMU Status is failed -> Unit unhealthy -> Switch").
  - Score-Based Approach: Weighted average of multiple variables.
- **Data Inputs**: The Monitor receives health flags and sensor data from Primary and Recovery via custom messages in CANFD.

An example is provided in the image below. Access the Core 2 - Blocks menu to perform the configuration.

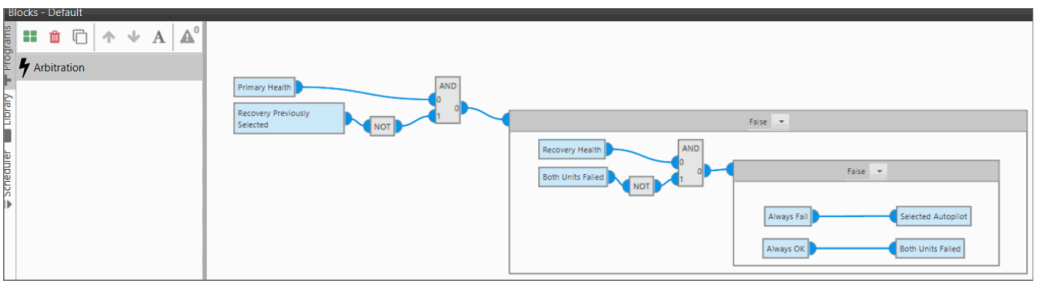


Blocks - Configuration

Units Synchronization

Automations

To guarantee that a Phase Change command triggers the exact same state across all three units simultaneously. For example, if an event is assigned ID 55 on the Primary unit, it must share that same ID on both the Recovery and Monitor units.

Ensure that every major system event (e.g., Phase changes, Flight Mode switches) **has an identical ID across all three configurations.**

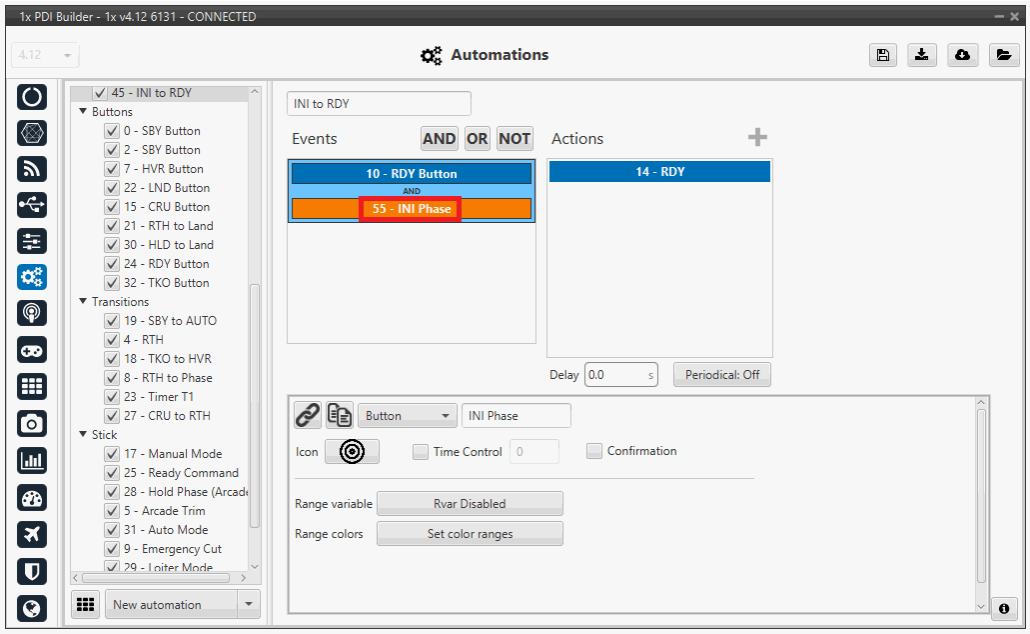

Automations - Configuration


Hint

Keep Event IDs Synchronized Across Units

When one of the units has unique automations, use **Dummy Events** to prevent ID mismatch across the rest of the cluster.

For example:

- Scenario: The Primary unit has complex automations that the Monitor or Recovery units do not need.
- Problem: These extra events consume IDs, potentially offsetting the numbering for subsequent shared events.
- Solution: Create "Dummy Events" on the Recovery/Monitor units:
  1. Create a new event.
  2. Assign it the exact same ID as the Primary's unique event.
  3. Leave the action completely empty.
- Go to **Automation** → **New Automation** and press and hold the lock button until it unlocks. You can then assign the matching IDs to the dummy events across the DRx units.

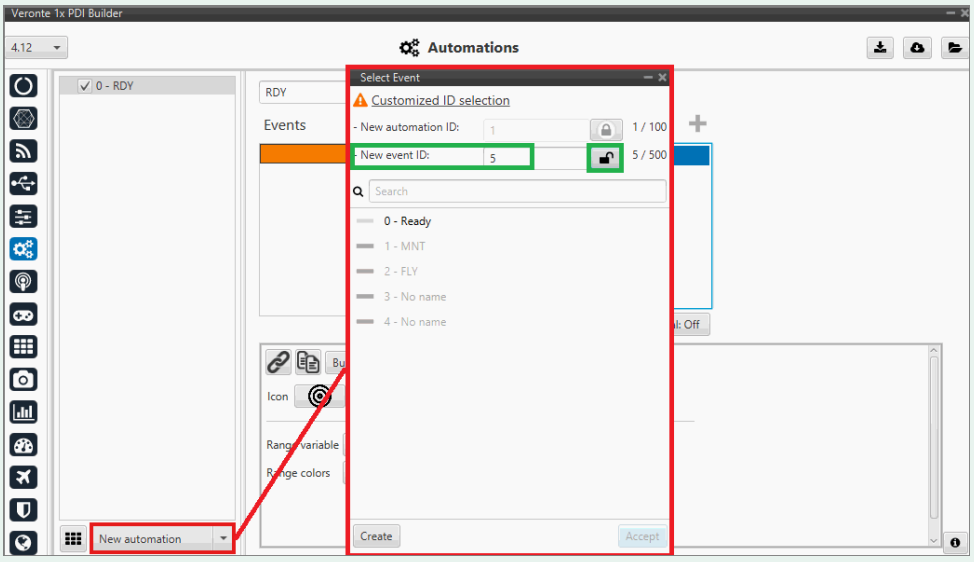

Events Ids - Automations Configuration

User Variables

Ensure that shared commands modify the same parameter in every unit.

- Go to **UI** → **Variables** and ensure that the same variables are configured with the identical ID across all units.


PRIMARY			RECOVERY		
Id	Default name	Custom name	Id	Default name	Custom name
3119	User Variable 19 (Real - 32 Bits)	Max Roll Rate	3119	User Variable 19 (Real - 32 Bits)	Max Roll Rate
3120	User Variable 20 (Real - 32 Bits)	Max Roll Acceleration	3120	User Variable 20 (Real - 32 Bits)	Max Roll Acceleration
3121	User Variable 21 (Real - 32 Bits)	Desired Yaw Rate	3121	User Variable 21 (Real - 32 Bits)	Desired Yaw Rate

Variables - Configuration

Telemetry

To ensure that only the **Active Unit** transmits data to the Ground Control Station (Veronte Ops), locate the **Enable** bit field for the telemetry stream and map it to the 4x Selected internal bit. In the present example (Primary unit configuration):

- If **4x Selected == 1** (TRUE): Telemetry is **Enabled**. Primary unit talks to the ground.
- If **4x Selected == 0** (FALSE): Telemetry is **Disabled**. Recovery unit talks to the ground.

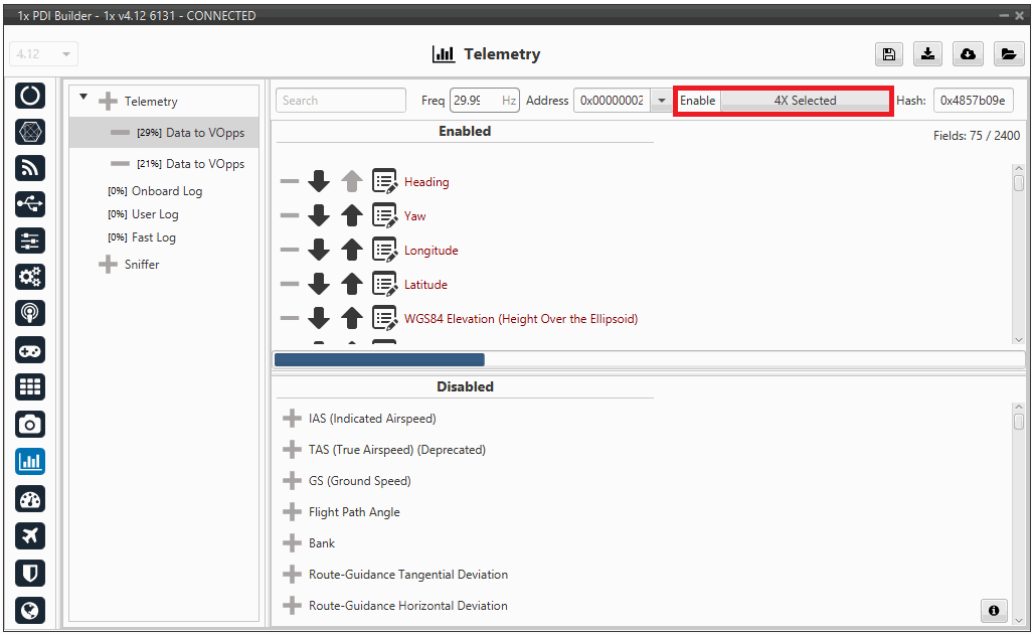


Telemetry - Configuration


Pilot Input

If a stick program is required, ensure that Pilot Commands sent to the Shared DRx System Address are accepted by all three hardware units. The system requires configuring all three units to listen for commands from the shared address:


- Go to **Block Programs → CORE 2 → Launch Editor**:
  - Create a Stick program and add the **Stick block**. For further information, please review the Stick block.
  - Open **Stick block properties** by double-clicking on the stick block.
  - Navigate and **Edit sources** tab.
  - Add a **new source** using the DRx ID. In this example, the Id is 0x8000.

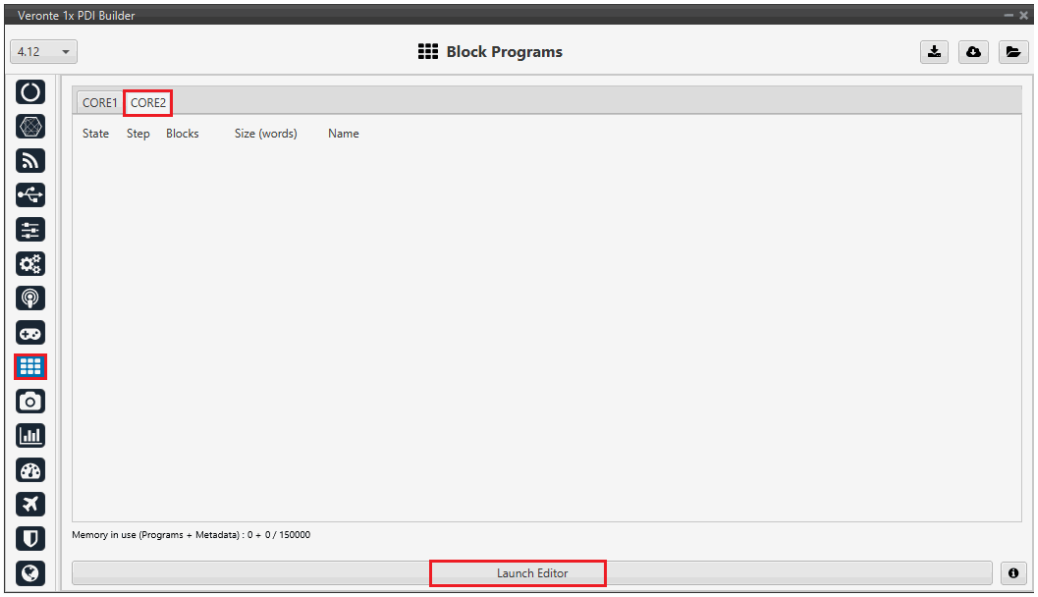



Block Programs Configuration

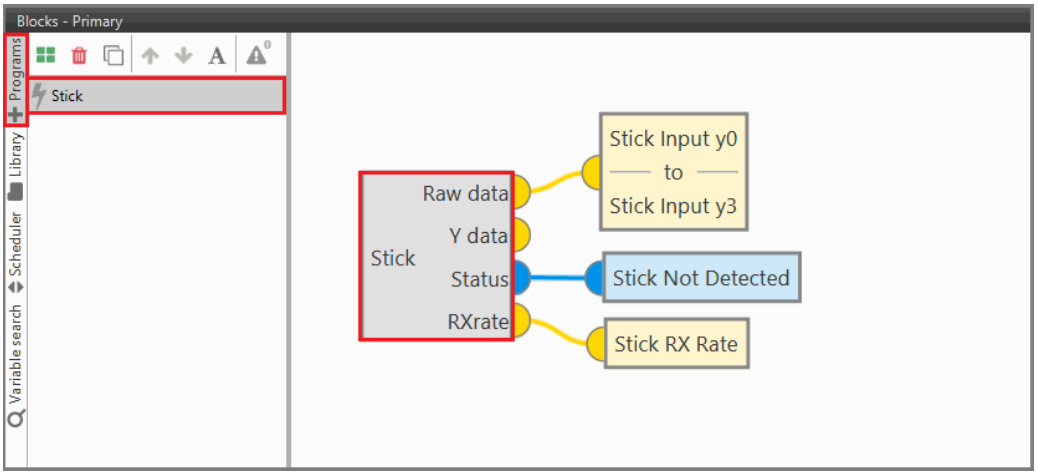

Stick block Configuration

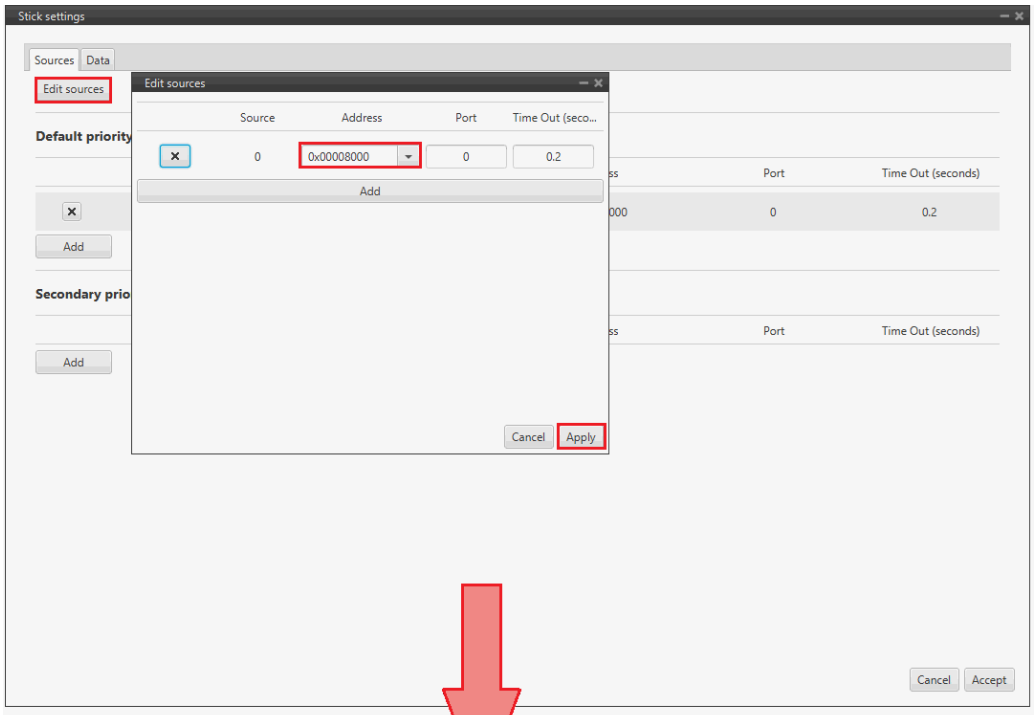
Stick settings
Sources
Data
Edit sources
Default priority
Source
Address
Port
Time Out (seco...
0
0x00008000
0
0.2
Add
Secondary prio
Time Out (seconds)
Cancel
Apply
Accept

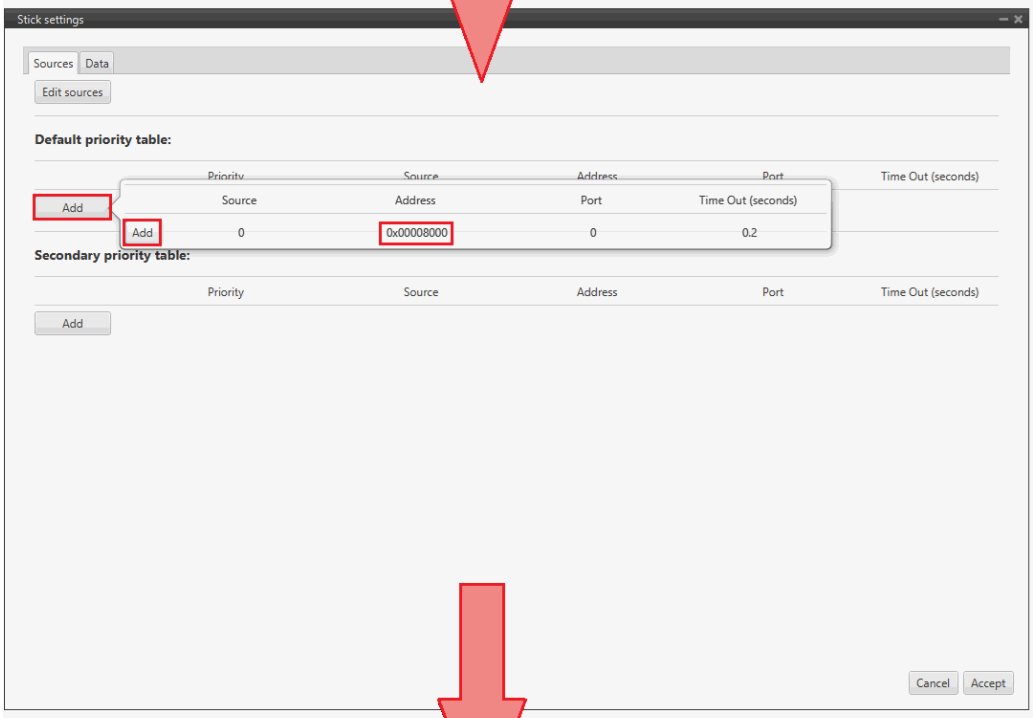

Stick settings
Sources
Data
Edit sources
Default priority table:
Priority
Source
Address
Port
Time Out (seconds)
Add
0
0x00008000
0
0.2
Secondary priority table:
Cancel
Accept

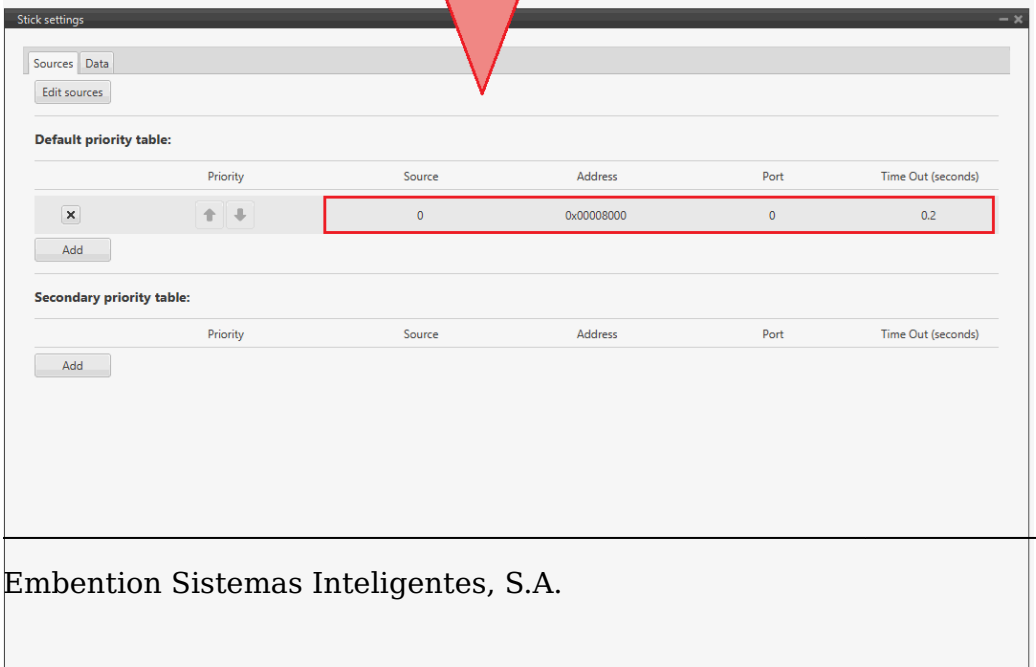
Stick settings
Sources
Data
Edit sources
Default priority table:
Priority
Source
Address
Port
Time Out (seconds)
0
0x00008000
0
0.2
Add
Secondary priority table:

Stick properties Configuration

MC01

In order to communicate a **Veronte Autopilot 1x** with a **MC01** via **CAN**, the following connection is required:

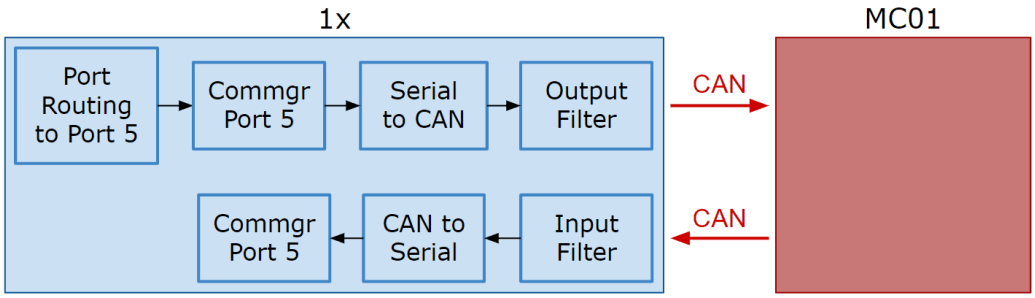

Communication diagram 1x ↔ MC01

First, connect the **MC01** to the **Autopilot 1x** via **CAN**. Detailed information on this connection can be found in the MC01 connection - Integration examples section of the **1x Hardware Manual**.

Then, the following steps explain how to configure the communication between an **Autopilot 1x** and a **MC01**.


MC01 PDI Builder side

1. By default, **MC01** is configured with a connection Serial to CAN, with the following **Standard** CAN IDs:
   - Tx CAN Id: 1301
   - Rx CAN Id: 1302

1x PDI Builder side

1. Go to Communications menu → **Ports panel**.


   Remove Port 5 from the Forward group and **add Port 5 to the Route group**, with target MC01's Address. This address must be chosen in the destination path of the **MC01** (40117 for the example).

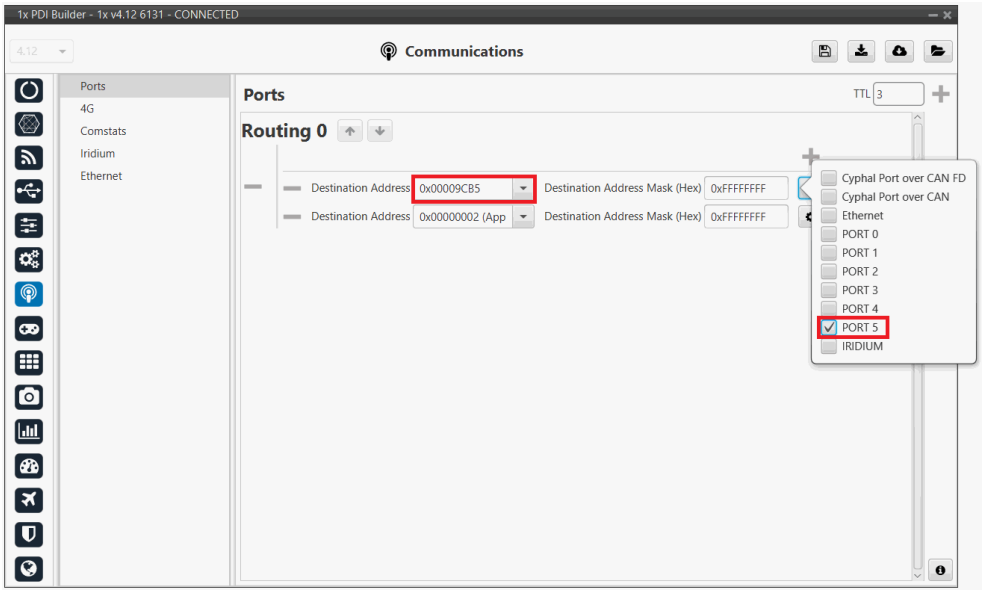

1x PDI Builder - Routing configuration


2. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **Commgr port 5** to the **Serial to CAN 1**.

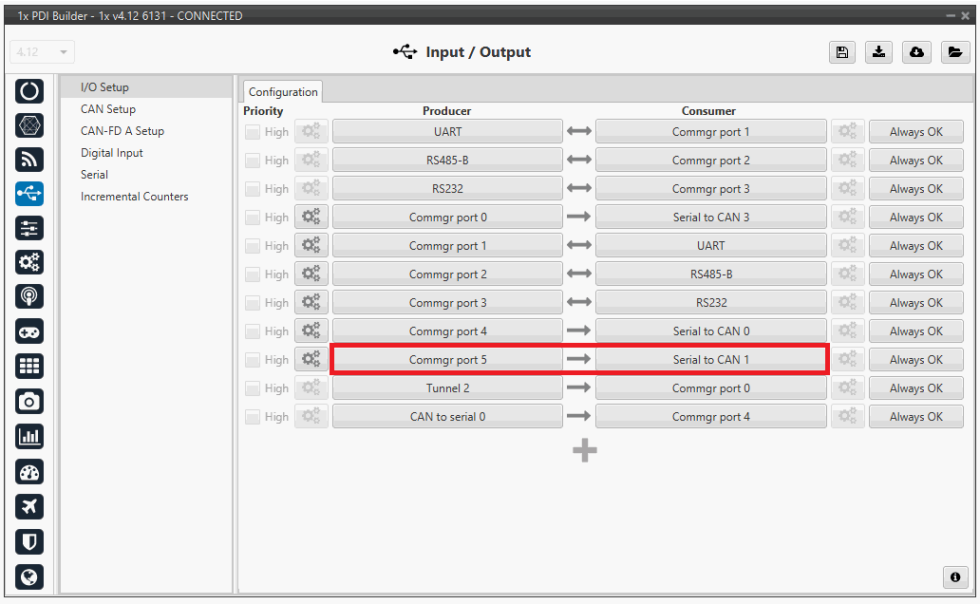

1x PDI Builder - I/O Setup configuration: Serial to CAN

   Then, connect **CAN to serial 1** to **Commgr port 5**:

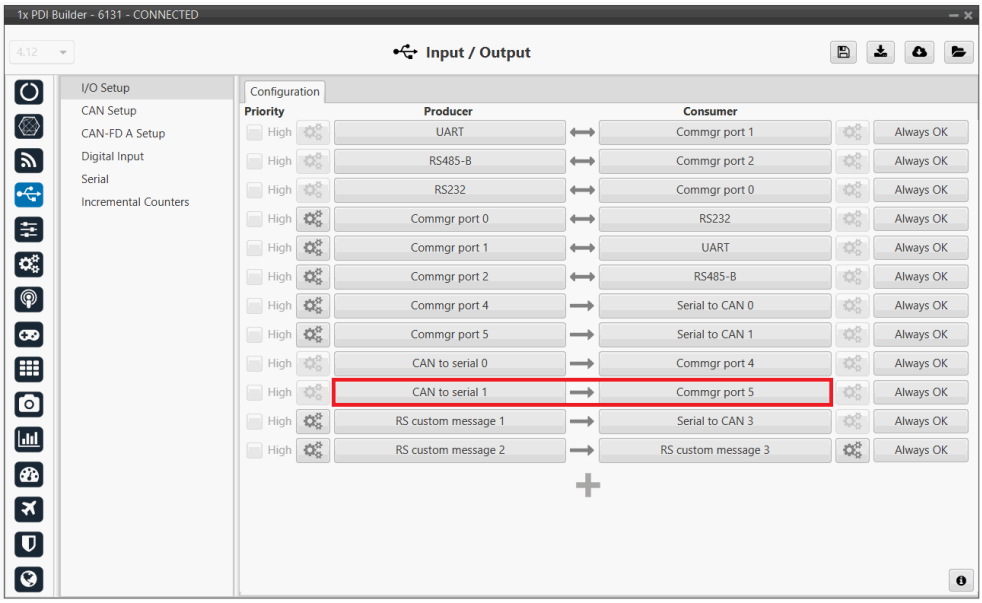


1x PDI Builder - I/O Setup configuration: CAN to serial


3. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.

   Connect a **Serial to CAN** with the right Id (**CAN ID 1302**) to an **Output filter**.


   In addition, connect an **Input filter** with the right Id (**CAN ID 1301**) to a **CAN to serial**:

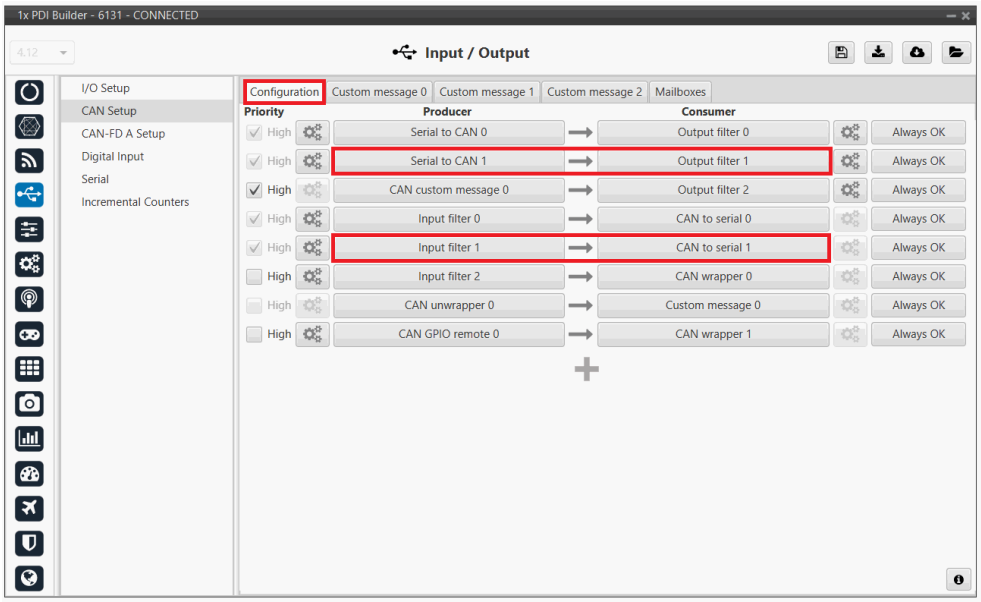

1x PDI Builder - CAN Setup configuration

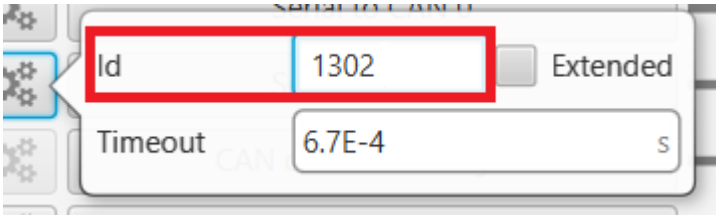


1x PDI Builder - Serial to CAN configuration

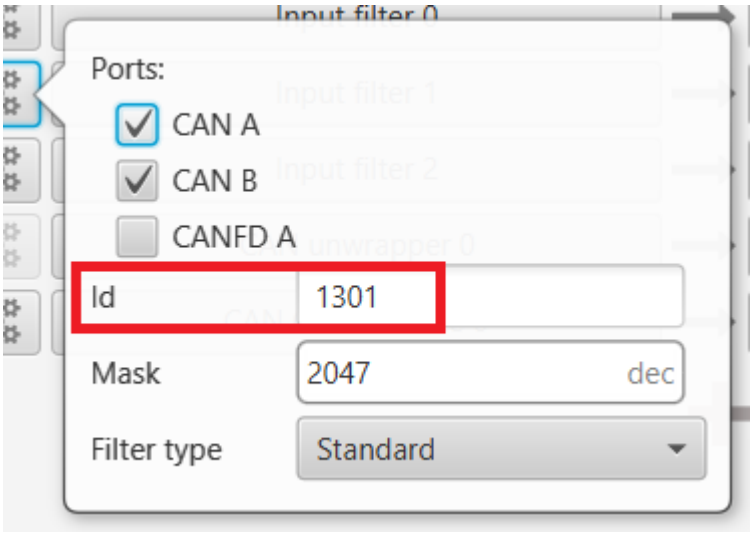

1x PDI Builder - Input filter configuration

4. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.


   Finally, configure the reception **mailbox with ID 1301**, assign at least 1 mailbox:

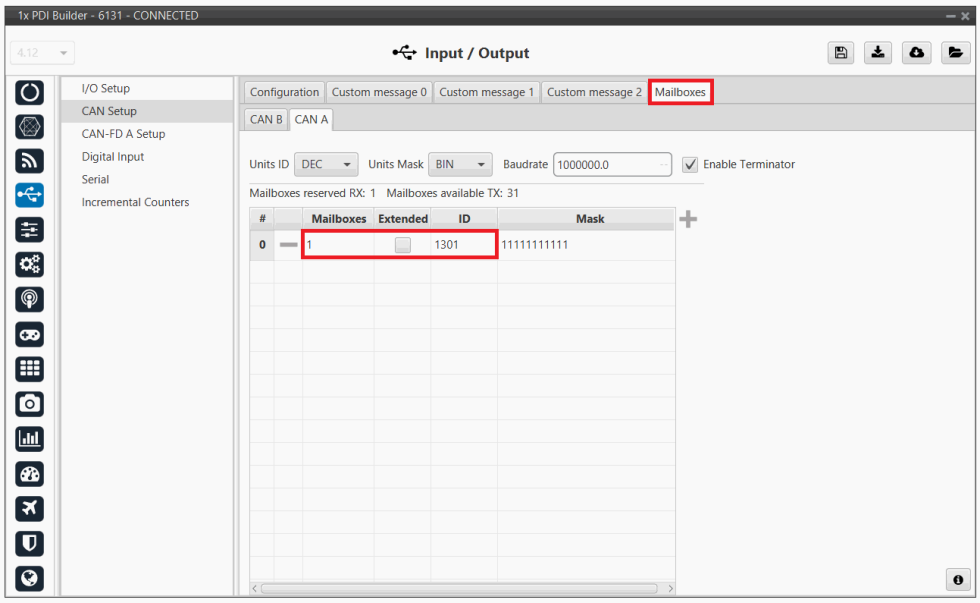

1x PDI Builder - Mailboxes configuration

MC110

In order to send commands from a **Veronte Autopilot 1x** to a **MC110** via CAN and vice versa, the following connection is required:

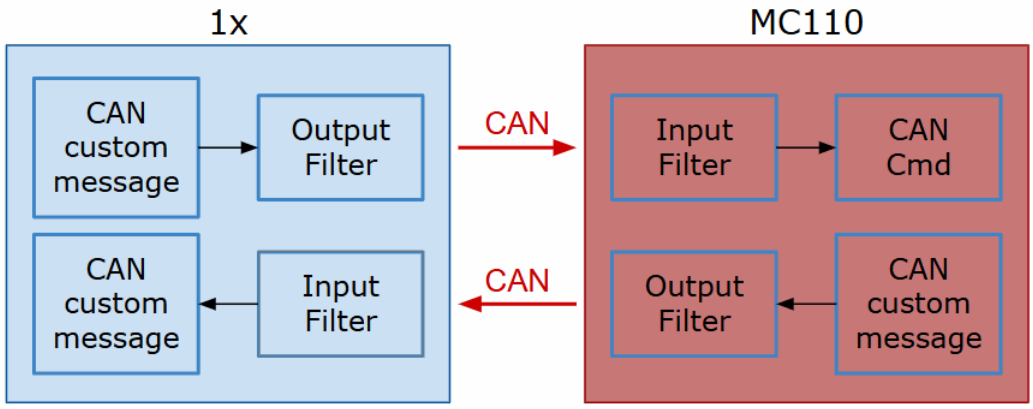

Communication diagram 1x ↔ MC110

> ⚠ **Warning**
>
> If users have the **Autopilot 1x** connected to a **PC** while commanding via CAN to a **MC110** unit (e.g. when performing test operations), this **connection** to the **PC** must be via **RS232/485**.
>
> For more information on a connnection via RS232/485 with a **Veronte Autopilot 1x**, refer to the Wiring connection - Integration examples section of the **1x Hardware Manual**.

First, connect the **MC110** to the **Autopilot 1x** via **CAN**. Detailed information on this connection can be found in the:


- MC110 connection - Integration examples section of the **1x Hardware Manual**.

CAN commands from Autopilot 1x to MC110

Follow the steps below to make this configuration:

1x PDI Builder side

1. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.
   Connect a **CAN custom message** producer (in this case CAN custom message 1 is used) to an **Output filter** consumer, in this example Output filter 3.
   In addition, configure the **Output filter** with the **correct CAN Bus**, in this example CAN A has been selected:

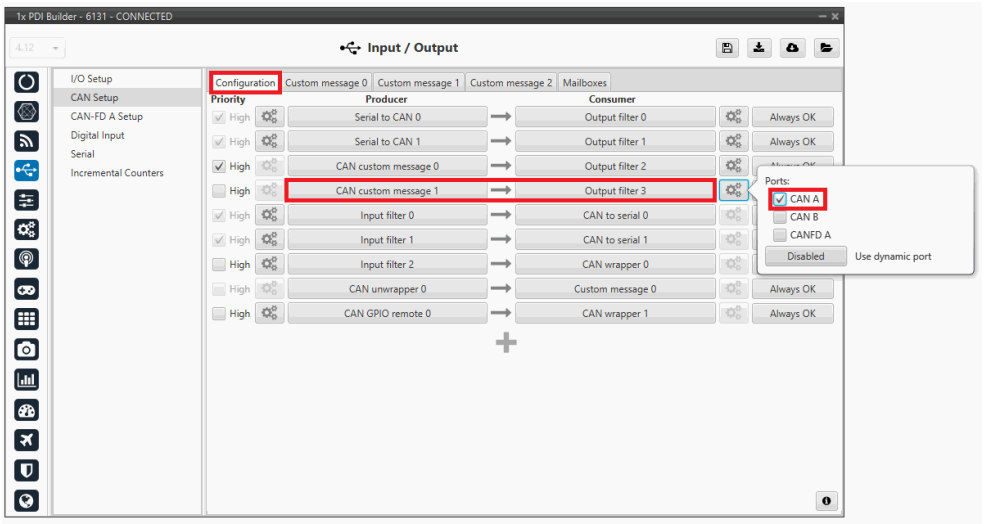


1x PDI Builder - CAN Setup configuration

2. Go to Input/Output menu → CAN Setup panel → **Custom message 1 tab** (since the producer CAN custom message 1 has been connected to the output filter).
   - Add a new message in **TX** (as it is for tranmission) with **CAN ID 1434**. More information on the configuration of CAN messages can be found in the TX/TX Ini Messages (Custom Messages) - Input/Output section of this manual.
   - Next, configure the message to be sent with whatever variable users wish to use to command. The variable should be set to **compressed signed 32-bit**.

     Users should send the values from **0 to max_rpm** (or from **-max_rpm to max_rpm** if negative commands are desired to be allowed).

     To do this, it is recommended to control the variable internally as a throttle, for this set the **Encode from 0 to 1** (or **from -1 to 1** for negative speeds).

     And for decode it to rpm values, the **Decode** parameter must be configured from **0 to max_rpm** (or from **-max_rpm to max_rpm** if negative commands are allowed):

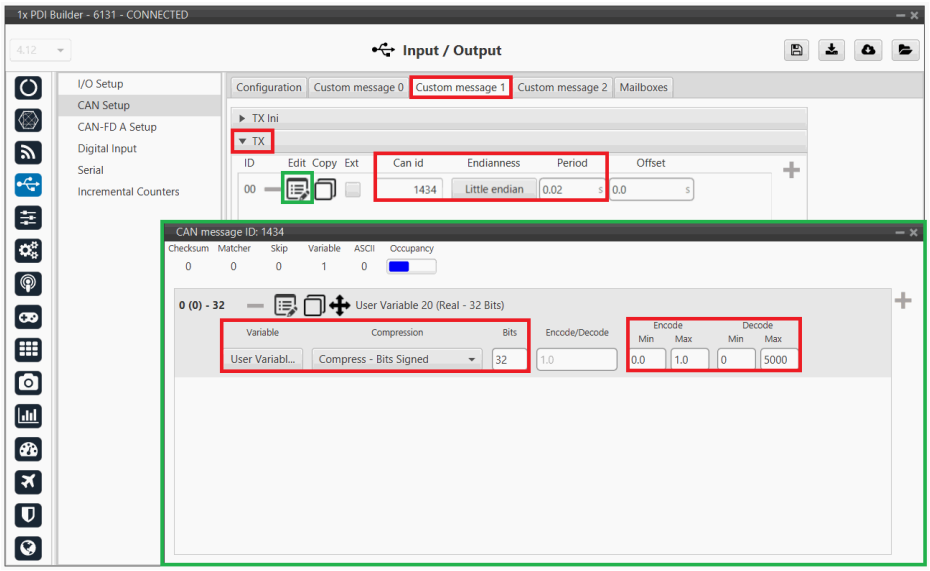

1x PDI Builder - CAN custom message 1 configuration

For more information on configuring CAN custom messages, refer to the Custom Messages types - Input/Output section of this manual.

> ⚠ **Warning**
>
> Remember that it is necessary to have **at least 1 free mailbox for TX messages**.


MC110 PDI Builder side

1. Go to Input/Output menu → CAN I/O panel → **Configuration tab**.


   Connect an **Input filter** producer, in this example Input filter 1, to the **CAN Cmd** consumer.

   In addition, configure the input filter with the following parameters:

   - Port: **CAN B**
   - **CAN Id 1434**
   - Mask: **2047** dec
   - Filter type: **Standard**

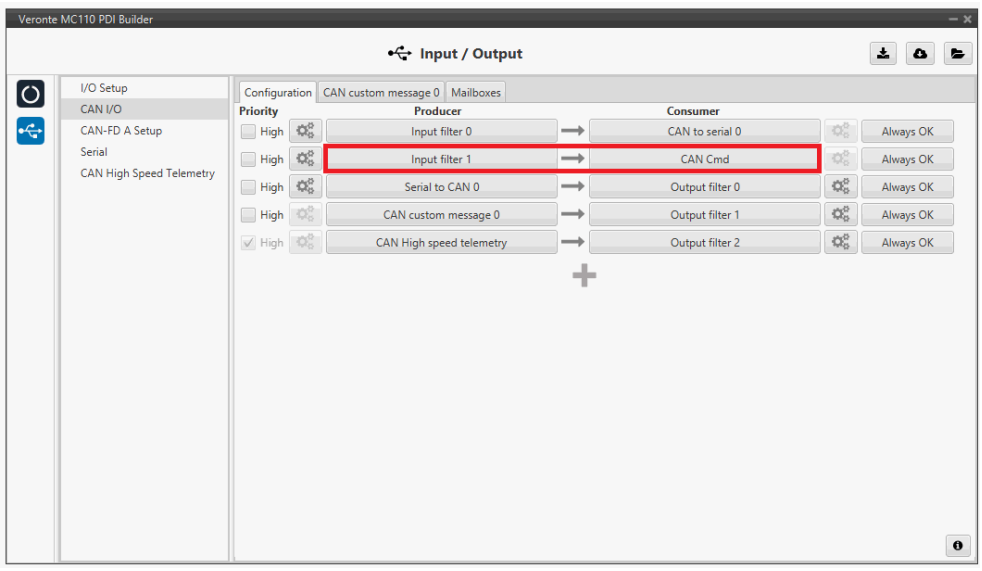


MC110 PDI Builder - CAN I/O configuration

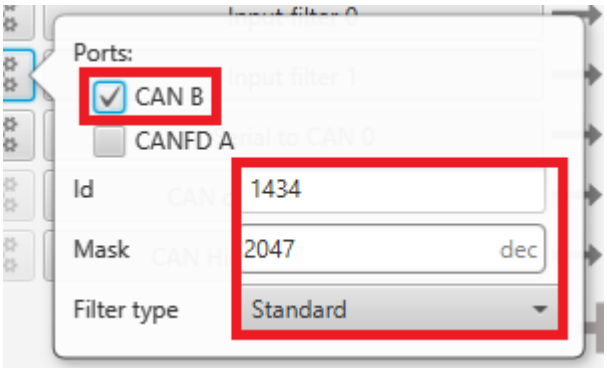

MC110 PDI Builder - Input filter configuration

2. Go to Input/Output menu → CAN I/O panel → **Mailboxes tab**.

   Configure at least 4 reception mailboxes with **ID 1434** in the **CAN B** bus:

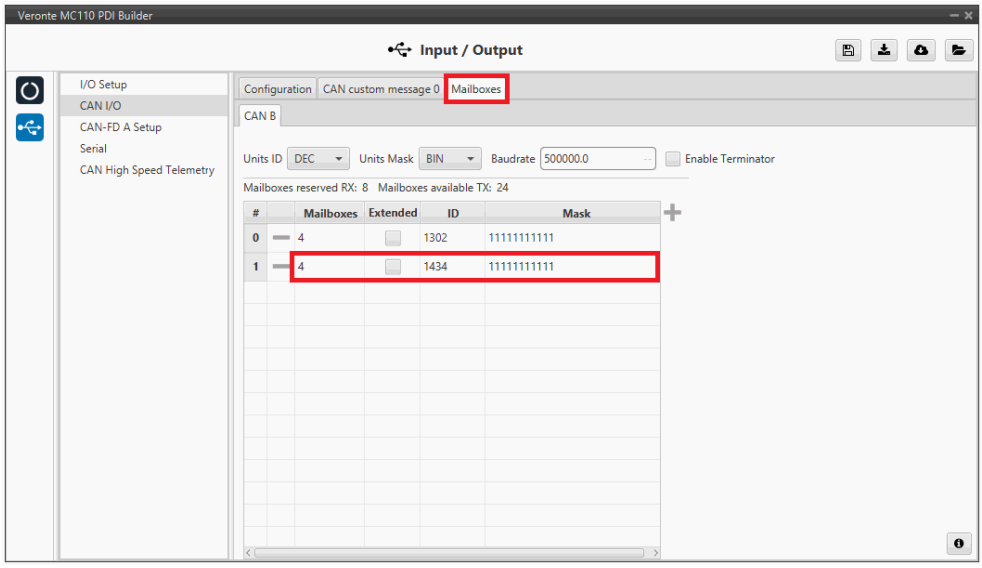

MC110 PDI Builder - Mailboxes configuration

3. Go to MC menu → FOC Control panel → **Control Input**.

Make sure that **m_CAN** or **m_CAN_PPM** mode is selected. For more information on these parameters, refer to the Control Input (FOC Control) - MC section of **MC110 PDI Builder** user manual.

CAN commands from MC110 to Autopilot 1x


Follow the steps below to make this configuration:

MC110 PDI Builder side

1. Go to Input/Output menu → CAN I/O panel → **Configuration tab**.

   Connect **CAN custom message 0** producer to an **Output filter** consumer, in this example Output filter 1.

   In addition, configure the **Output filter** with the **correct CAN Bus**, in this example CAN A has been selected:

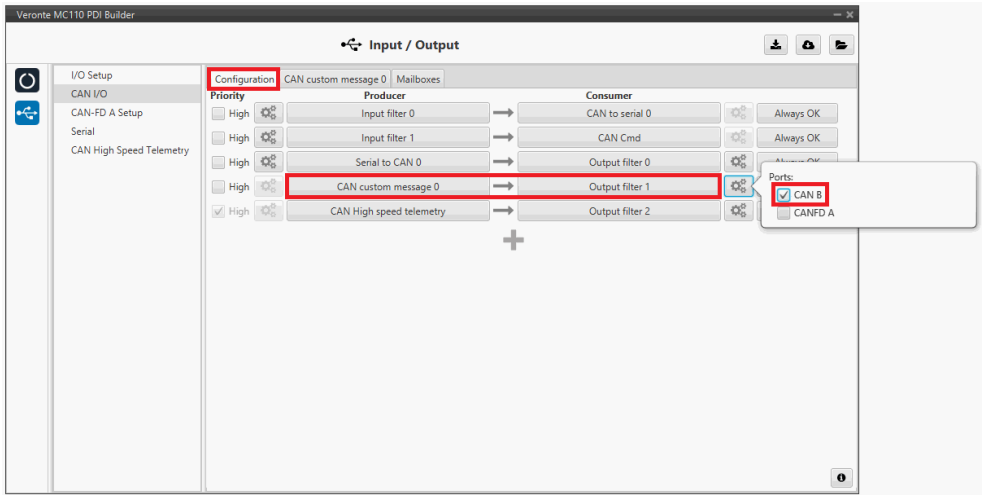


MC110 PDI Builder - CAN I/O configuration

2. Go to Input/Output menu → CAN I/O panel → **CAN custom message 0 tab**.

   Add a new message in **TX** with the variables the user wishes to send back to **Autopilot 1x**.

   In this example, the message with **CAN ID 100** is sending the **power input** as well as the **board temperature** as **uncompressed variables**.

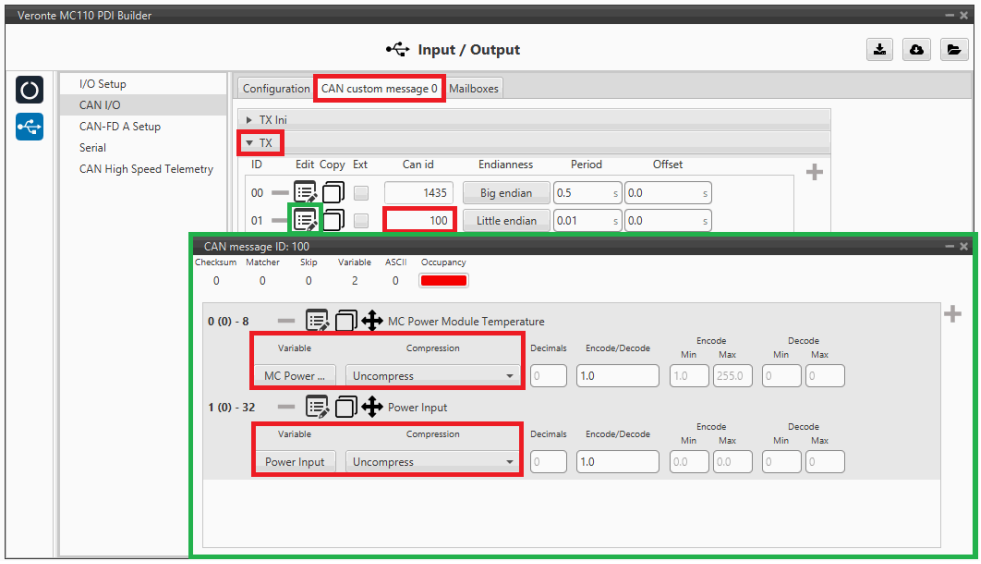

MC110 PDI Builder - CAN custom message 1 configuration


For more information on configuring CAN custom messages, refer to the Custom Messages types - Input/Output section of this manual.

> **Note**
>
> If the variables are compressed/encoded on the MC110 side when sent, they must be decompressed/decoded on the **Autopilot 1x** unit on reception.

1x PDI Builder side

1. Go to Input/Output menu → CAN Setup panel → **Configuration tab**.


   Connect an **Input filter** producer (in this case Input filter 3) to a **Custom message** consumer (Custom message 1 has been selected).

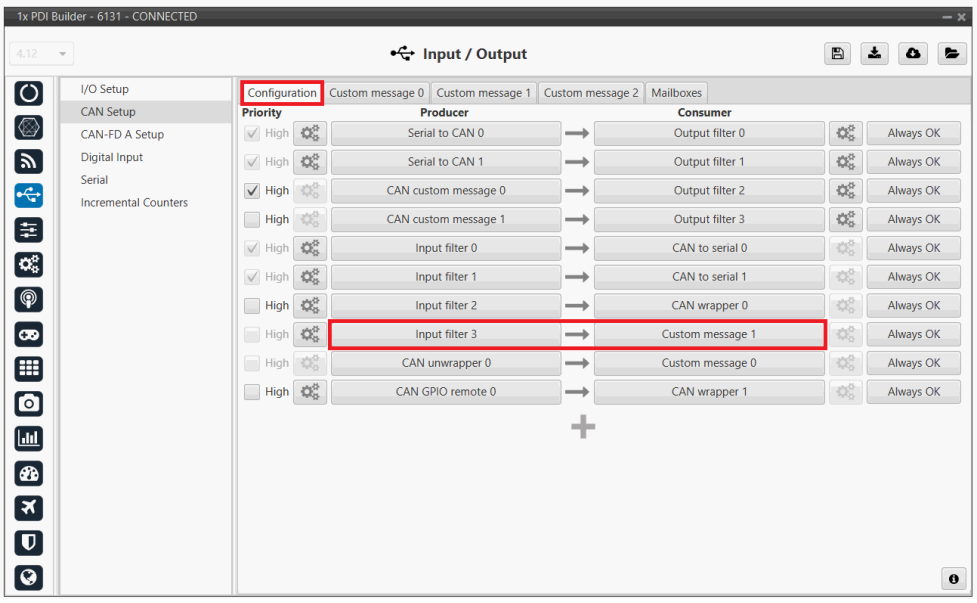

1x PDI Builder - CAN Setup configuration


In addition, according to the send message set in the **MC110 PDI Builder** software, configure the input filter with the following parameters:

- Port: **CAN A**
- **CAN Id 100**
- Mask: **1110000** bin
- Filter type: **Standard**

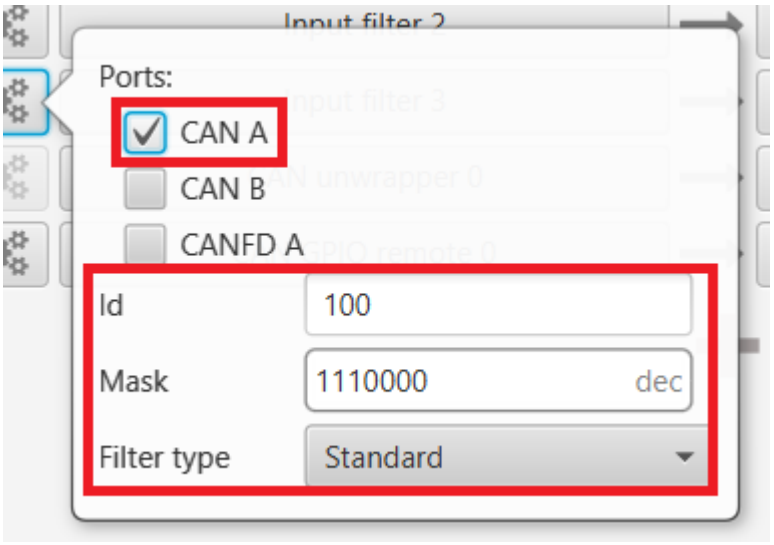

1x PDI Builder - Input filter configuration

2. Go to Input/Output menu → CAN Setup panel → **Custom message 1 tab** (since the input filter has been connected to the Custom message 1 consumer).
   Users can configure the reception of MC110 variables and store them internally for other uses in the configuration.
   To do this, add in **RX** fields the same messages that have been configured in the **MC110 PDI Builder** as **TX Messages**:

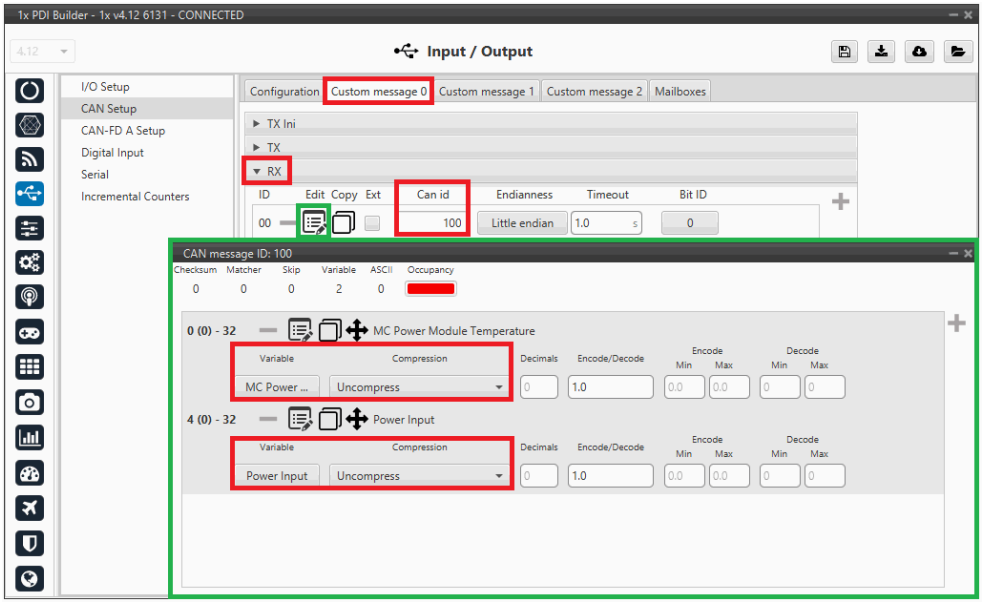

1x PDI Builder - Custom message 1 configuration


For more information on configuring CAN custom messages, refer to the Custom Messages types - Input/Output section of this manual.

3. Go to Input/Output menu → CAN Setup panel → **Mailboxes tab**.

   Finally, configure the reception mailboxes.

   In this case, CAN messages with ID **100** and with ID **103 to 109** (8 messages in total) are being sent, which in **binary** is: 0110 0100 and from 0110 0111 to 0110 1101.

   Therefore, **8 mailboxes** are configured with **ID 01100100** and **mask 1110000** in the **CAN A** bus:

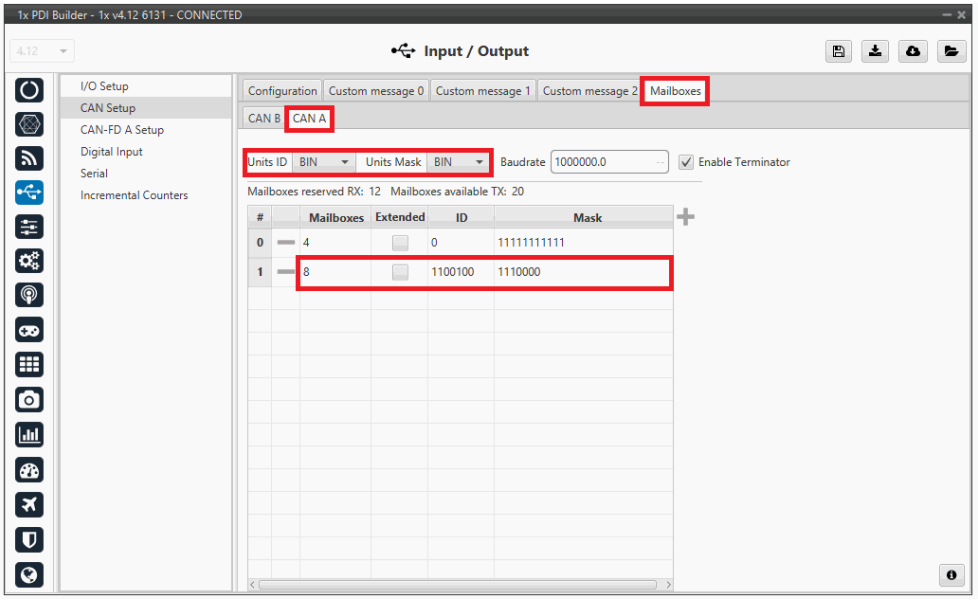


1x PDI Builder - Mailboxes configuration

For more information on mailboxes, see the Mailboxes (CAN Setup) - Input/Output section of this manual.

Veronte Gimbal


This section explains the configuration required to control and operate **Veronte Gimbal 10z** or **Veronte Gimbal 30z**.

On the one hand, the following diagram illustrates the communication required between a **Veronte Autopilot 1x** and the **Veronte Gimbal to control its movements**:

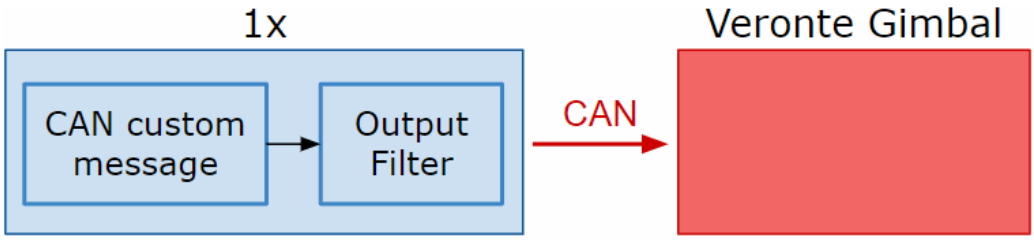

Communication diagram 1x → Veronte Gimbal


On the other hand, to allow communication between **Veronte Autopilot 1x and the video board integrated in the Veronte Gimbal camera** the following connection is required:

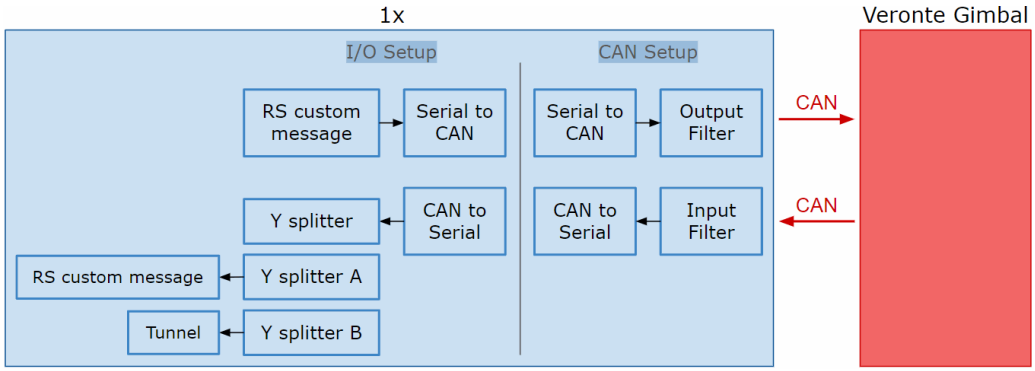

Communication diagram 1x ↔ Veronte Gimbal


In the **1x PDI Builder** software there is already a **template** with the required configuration shown in the diagrams above. Users can access it in the following way:

1. Open **1x PDI Builder** app.
2. Click '**1xVeronte**' option.

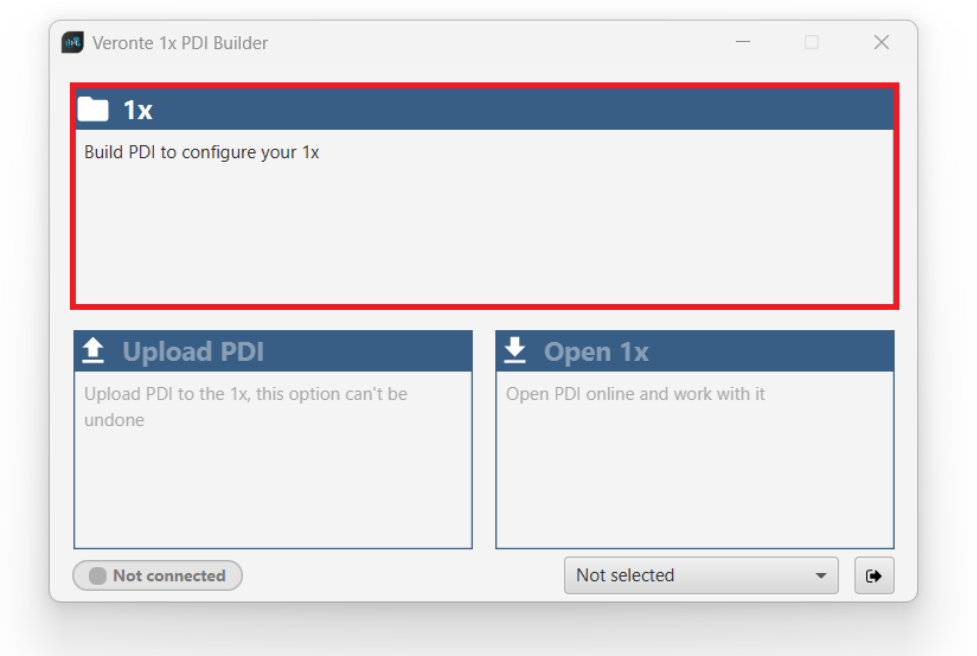


Veronte Gimbal - 1xVeronte option

3. In the initial menu of the app, import a configuration from the repo clicking on  .

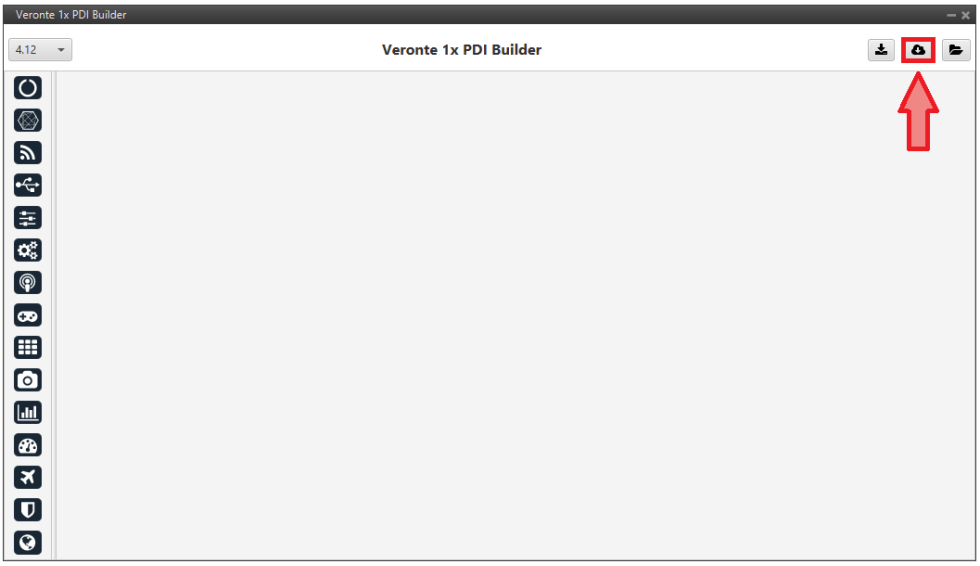


Veronte Gimbal - Import from repo

The following window will appear while the templates are being downloaded:

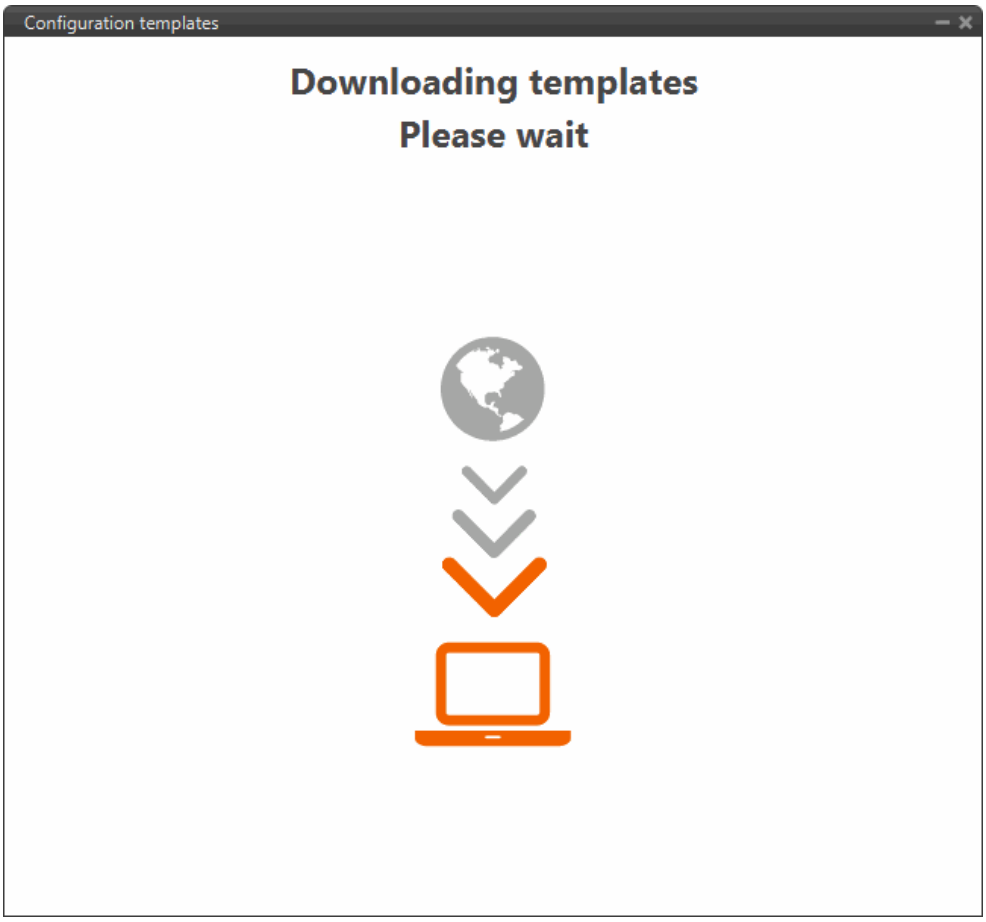

Veronte Gimbal - Downloading templates

4. In the templates menu, select the **Veronte Gimbal** configuration template and press **Import** to import it to the app.

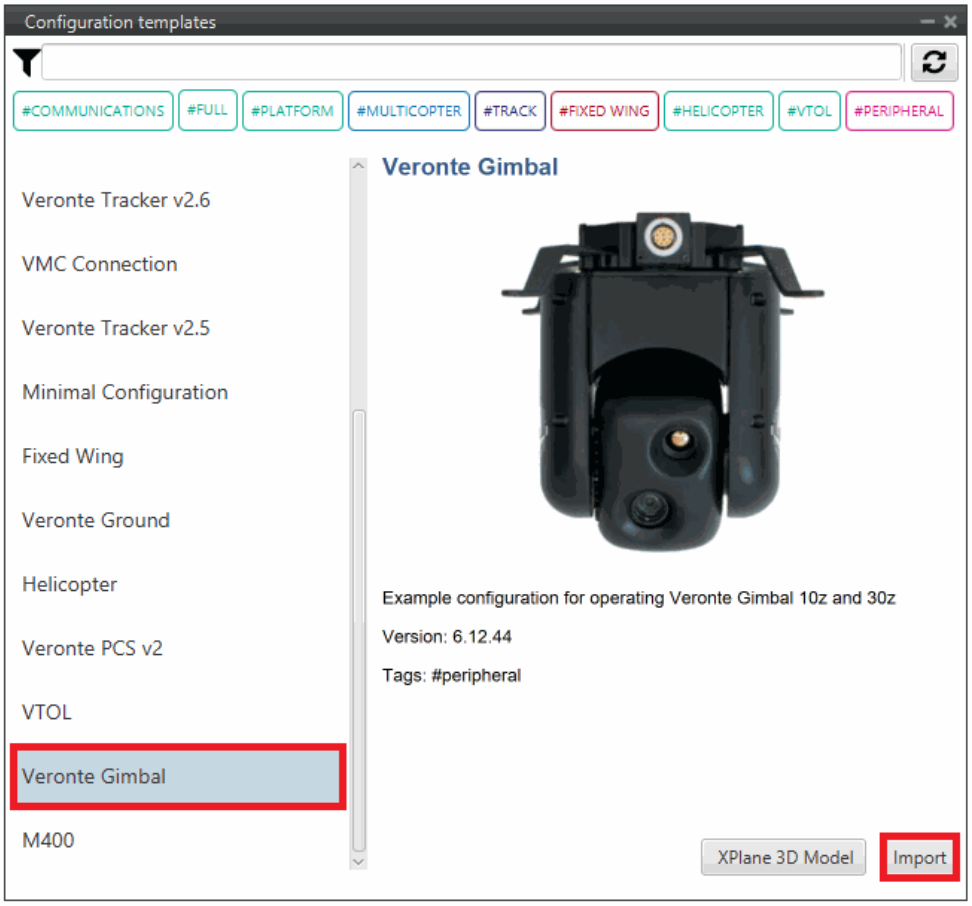

Veronte Gimbal - Veronte Gimbal configuration template


Now, users have to **add** the Veronte Gimbal control aspects of this configuration template **to their own Autopilot 1x configuration**.

Controlling Veronte Gimbal movement

Concerning the movement control of the Veronte Gimbal, these are the relevant parts of the configuration:

- In the Input/Output menu → CAN Setup panel → **Configuration tab**.

  A **CAN custom message producer** must be connected to an **Output filter consumer**. In this example, CAN custom message 0 is connected to Output filter 2 and CAN A bus has been chosen.

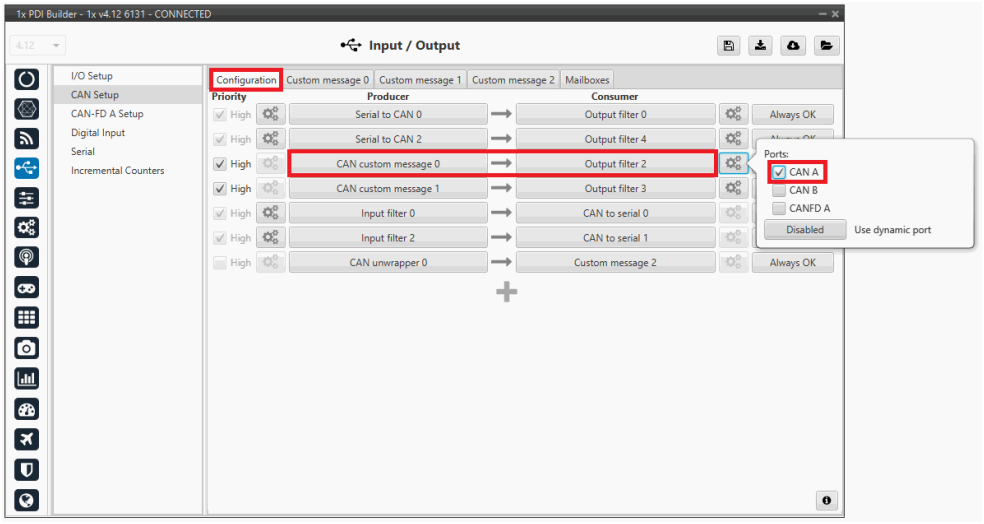


Veronte Gimbal - CAN Setup configuration panel

- In the Input/Output menu → CAN Setup panel → **Custom message 0 tab** (since the producer CAN custom message 0 has been connected to the output filter).

  The following parameters must be set for 2 CAN messages on **TX** (as they are for tranmission) with CAN ID 0 and 1. More information on the configuration of CAN messages can be found in the TX/TX Ini Messages (Custom Messages) - Input/Output section of this manual.


  > ⚠ **Warning**
  >
  > These specific CAN IDs are entered because they have to match the ones configured in the Gimbal, which are configured by default with these ids.

  - **Can id**: 0 / 1
  - **Endianness**: Little endian
  - **Period**: 0.01 s

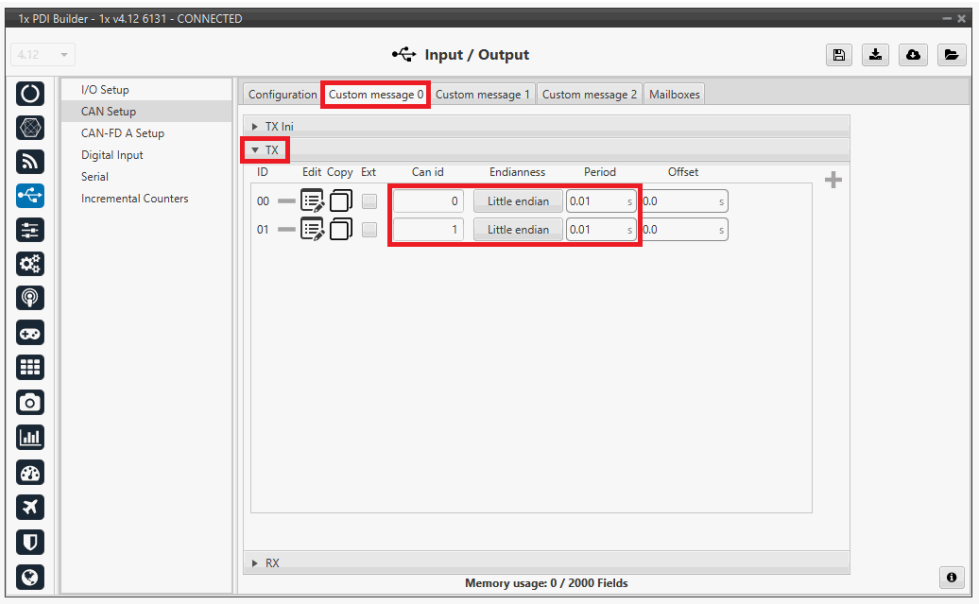


Veronte Gimbal - Custom message panel

Click on  to access their configuration. This is almost the same for both messages but changing the variable:

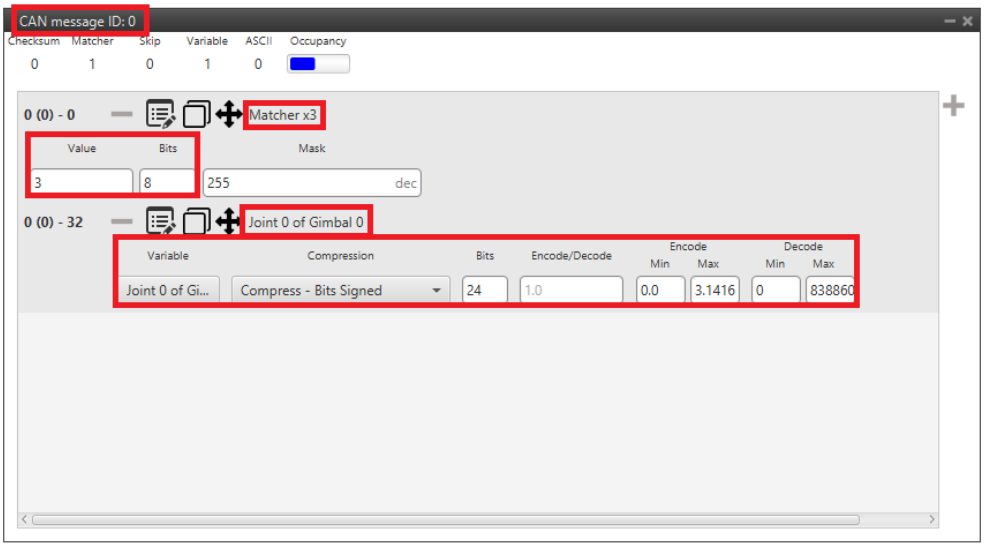

Veronte Gimbal - CAN custom message ID 0 configuration

1. **Matcher**
   - **Value**: 3
   - **Bits**: 8
2. **Variable**
   - **Variable**: Joint 0 of Gimbal 0
   - **Compression**: Compress - Bits Signed
   - **Bits**: 24
   - **Encode - Min/Max**: 0.0/3.1416
   - **Decode - Min/Max**: 0/8388608

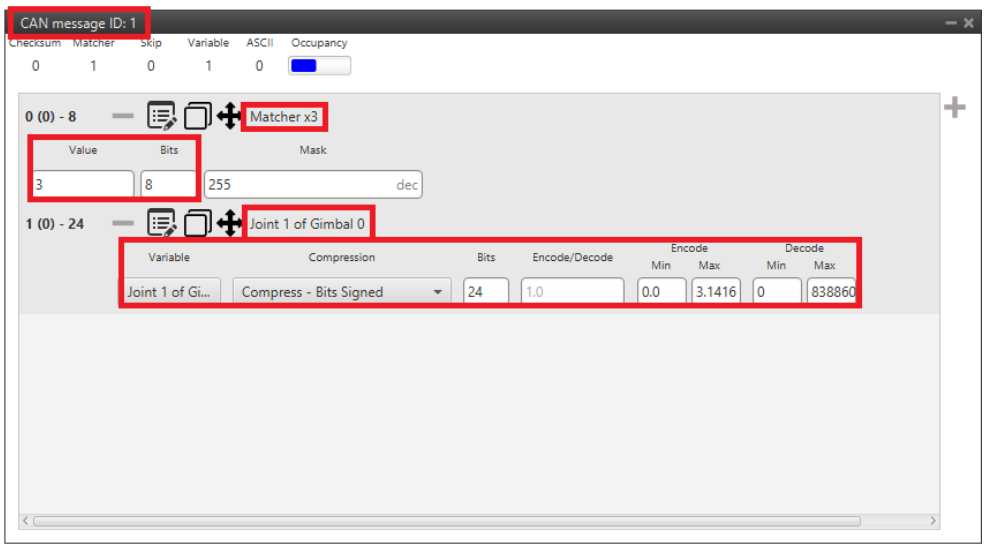

Veronte Gimbal - CAN custom message ID 1 configuration

1. **Matcher**
   - **Value**: 3
   - **Bits**: 8
2. **Variable**
   - **Variable**: Joint 1 of Gimbal 0
   - **Compression**: Compress - Bits Signed
   - **Bits**: 24
   - **Encode - Min/Max**: 0.0/3.1416
   - **Decode - Min/Max**: 0/8388608


Communication with Veronte Gimbal camera video board

The following are the configuration aspects of the communication with the gimbal camera video board.

CAN commands sent by Autopilot 1x


- In the Input/Output menu → **I/O Setup panel**.

  A **RS custom message producer** is connected to a **Serial to CAN consumer**. In this example, RS custom message 0 is connected to Serial to CAN 1.

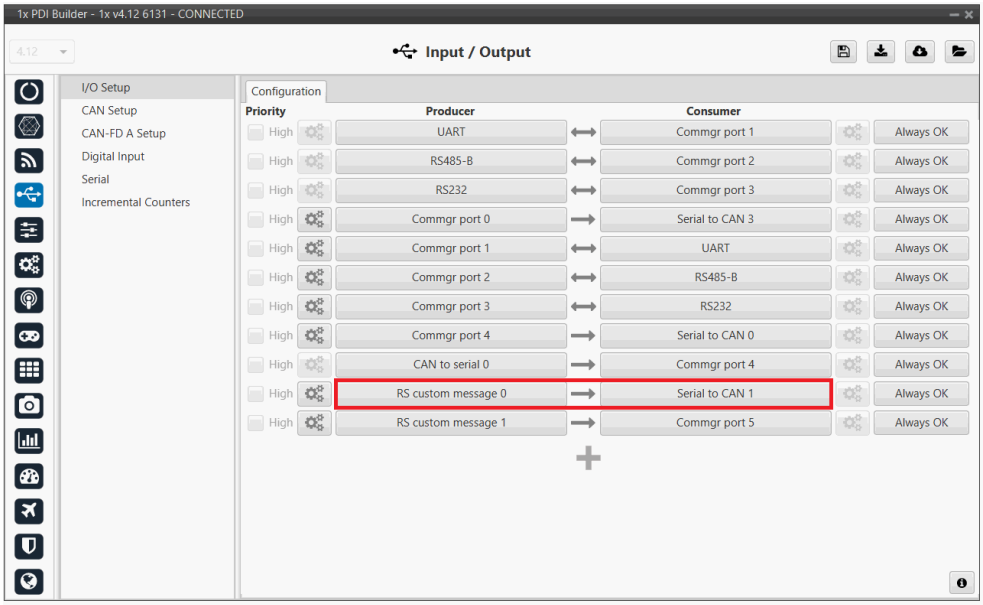

Veronte Gimbal - I/O Setup configuration panel

Click on  to access the RS custom message configuration. It consists of 4 messages for **request variables**, i.e. they request information from the video board of the gimbal camera.

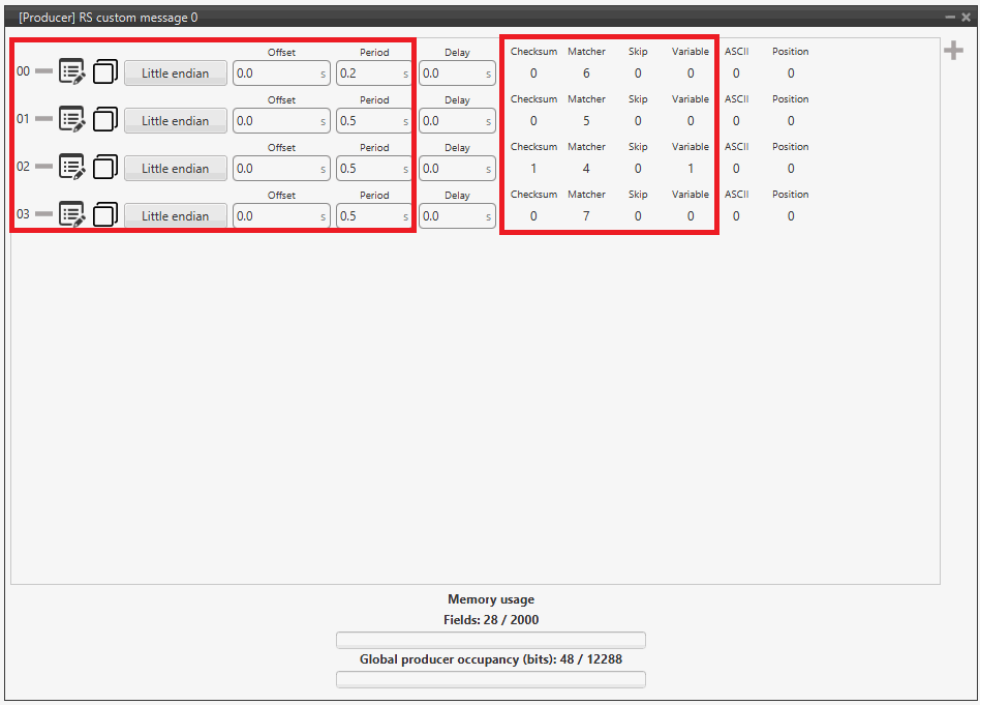


Veronte Gimbal - RS producer custom message configuration

Message	Endianness	Period
00	Little endian	0.2 s
01	Little endian	0.5 s


Message	Endianness	Period
02	Little endian	0.5 s
03	Little endian	0.5 s

- In the Input/Output menu → CAN Setup panel → **Configuration tab**.

  A **Serial to CAN producer** with **Id 1304** must be connected to an **Output filter consumer**. In this example, Serial to CAN 1 is connected to Output filter 1 and CAN A bus has been chosen.

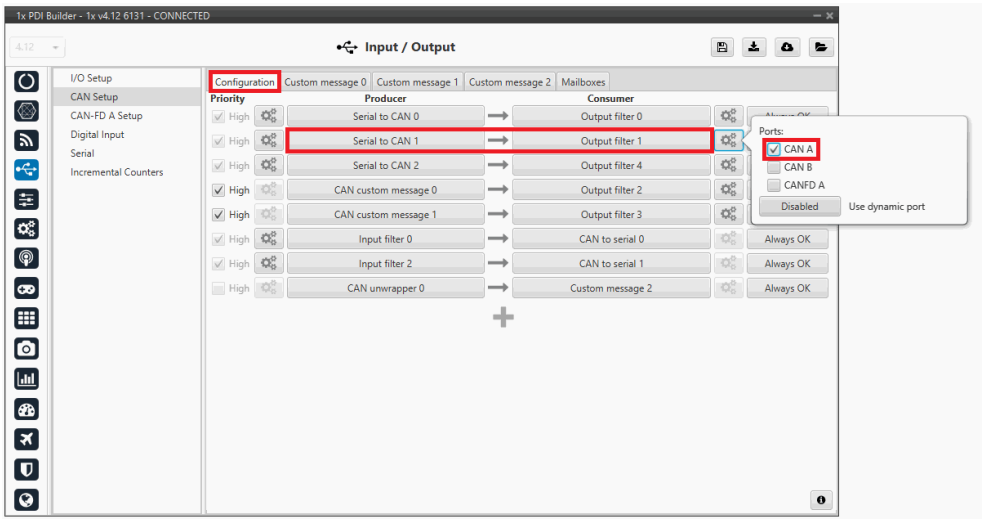

Veronte Gimbal - CAN Setup configuration panel

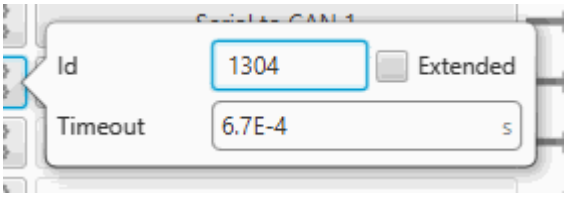


Veronte Gimbal - Serial to CAN configuration


CAN commands received on Autopilot 1x

- In the Input/Output menu → CAN Setup panel → **Configuration tab**.

  An **Input filter producer** with **Id 1303** must be connected to a **CAN to serial consumer**. In this example, Input filter 1 configured to CAN A bus, is connected to CAN to serial 1.

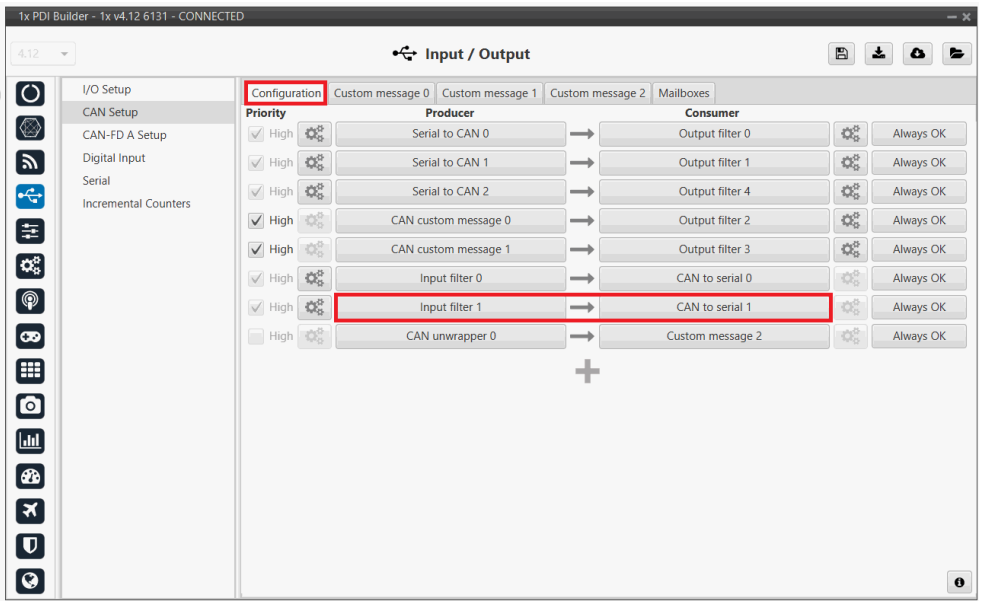


Veronte Gimbal - CAN Setup configuration panel

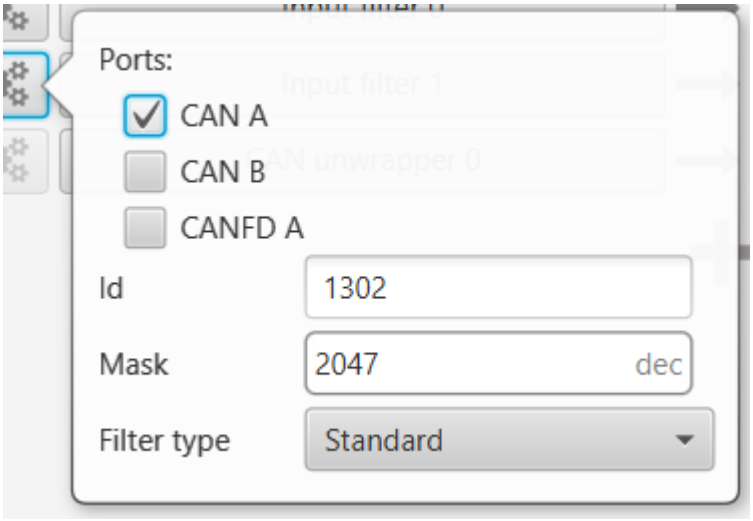

Veronte Gimbal - Input filter configuration

- In the Input/Output menu → CAN Setup panel → **Mailboxes tab**.

  20 reception mailboxes with **ID 1303** are configured in **CAN A** bus (as the input filter has been configured to CAN A):

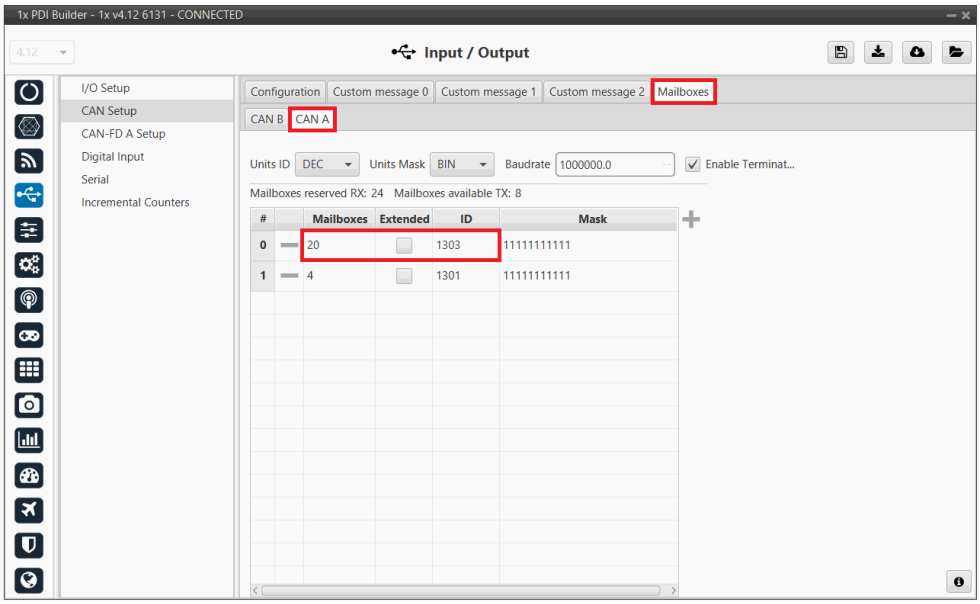


Veronte Gimbal - Mailboxes configuration

- In the Input/Output menu → **I/O Setup panel**.

  A **CAN to serial producer** is connected to a **Y splitter consumer**. Then, a **Y splitter A producer** is connected to a **RS custom message consumer** and a **Y splitter B producer** is connected to a **Tunnel consumer**, configured to **Address 2** (App) (App 2).

  This connection is made in order to read and process the information received from the video board (RS custom message consumer) while sending this information to Veronte Ops. So **Autopilot 1x** is acting as a tunnel between the video board and Veronte Ops.


  In this example, CAN to serial 1 is connected to Y1 splitter, Y1 splitter A to RS custom message 2 and Y1 splitter B to Tunnel 0.

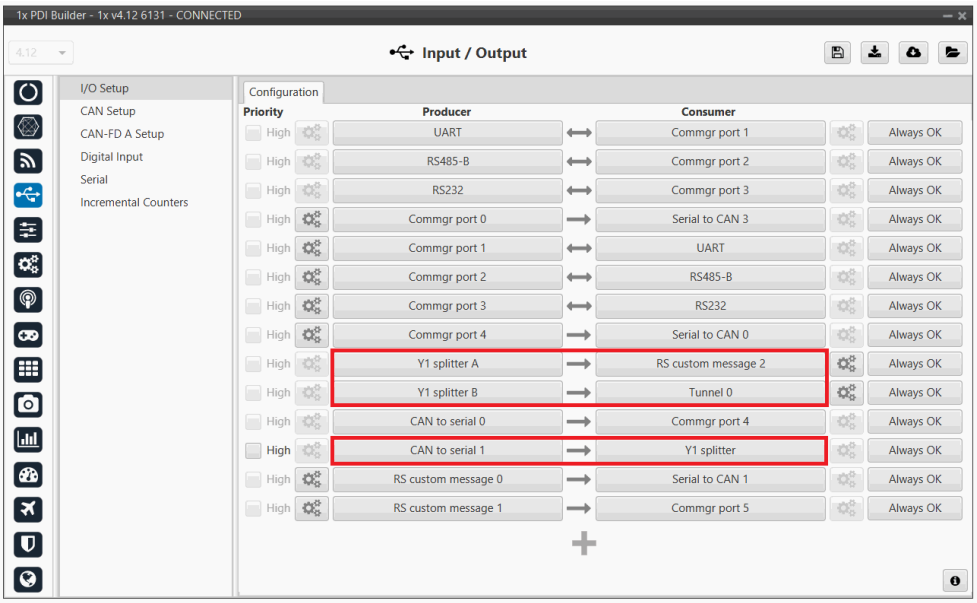

Veronte Gimbal - CAN Setup configuration panel


Click on  to access the RS custom message configuration. It consists of 4 messages to read the video board information from the gimbal camera that has been previously requested.

> **Important**
>
> They must be configured as **Little endian**.

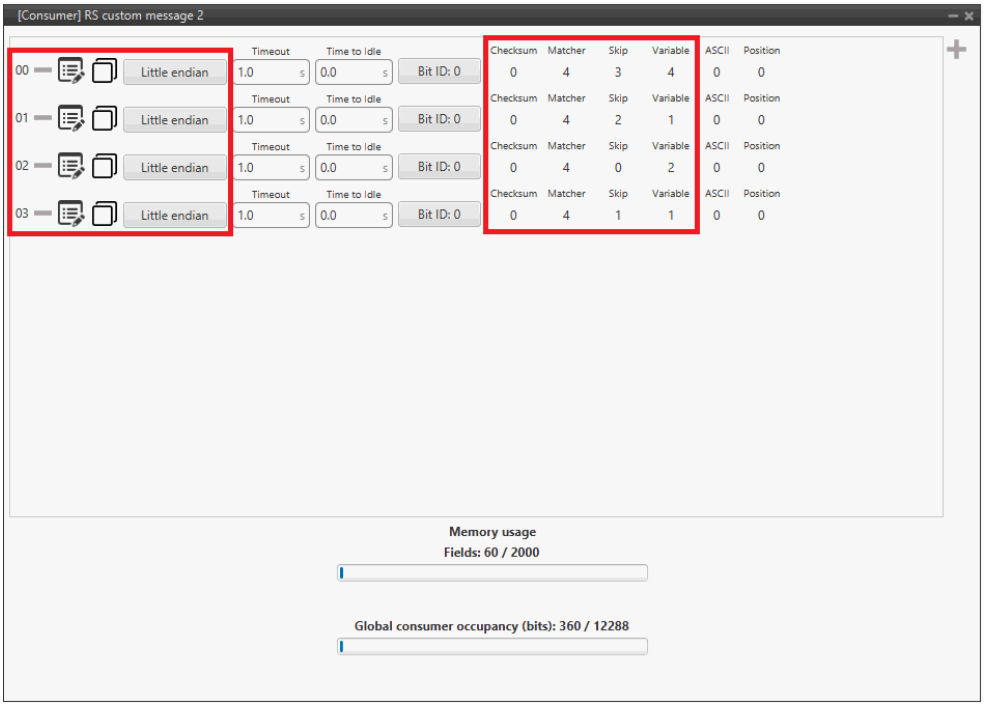

Veronte Gimbal - RS consumer custom message configuration

Finally, click on  to access the Tunnel configuration:

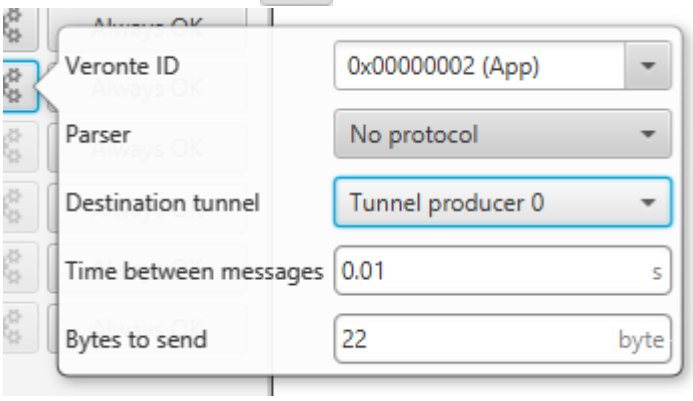

Veronte Gimbal - Tunnel configuration


- **Veronte ID**: App
- **Parser**: No protocol
- **Destination tunnel**: Tunnel producer 0

- **Time between messages**: 0.01 s
- **Bytes to send**: 22 byte

Gimbal block program

Finally, in the **Block Programs menu**, a **Gimbal** program has also been created to allow a correct communication between **Veronte Autopilot 1x and the video board integrated in the Veronte Gimbal camera**.

> **⚠ Warning**
>
> Users must add it to their own configuration in exactly the same way.

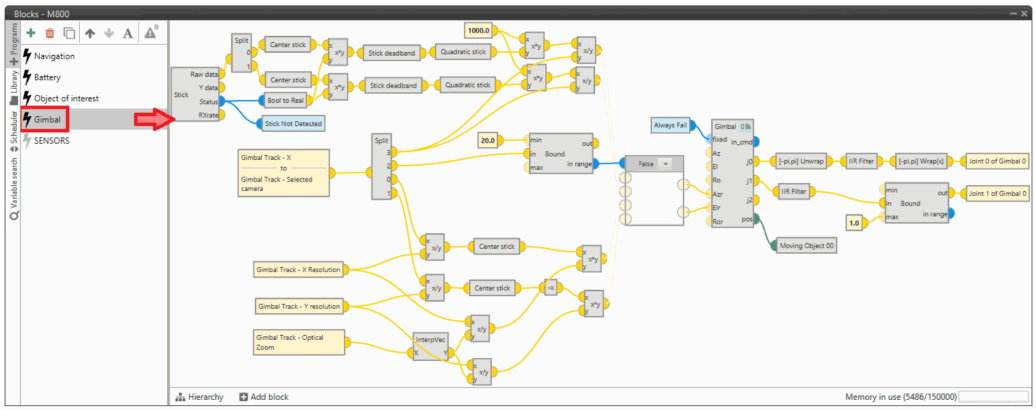

Veronte Gimbal - Block program

VSE (Veronte Stick Expander)

To configure the VSE in **1x PDI Builder** it is only needed to follow the steps explained in the **Ground unit configuration** of the General case - PPM Stick integration example.

Important

In the **step 1** of that explanation, there is already a transmitter configured with the required VSE configuration, users will find it as **Brand: Embention** and **Model: Stick Expander**.

The **number of channels** configured here must match those set in the **VSE application**. For more information on this, refer to the Channels - Software Installation section of the **Stick Hardware Manual**.

Furthermore, as the number of channels is modified, the **Brand** name will change to **Customize**.

Troubleshooting

Debug serial messages transmission


To check that the transmission of serial messages is being carried out correctly, the user can view what is being sent in the 1x PDI Calibration software hyperterminal. To do this:

1x PDI Builder side

1. Go to Input/Output menu → **I/O Setup panel**.

   Connect the **RS custom message producer** (where the message is configured) to a **Tunnel** with **Address 2** (App) (App).

   In this case, the message is configured in the RS custom message 0 producer and sent through Tunnel 0.

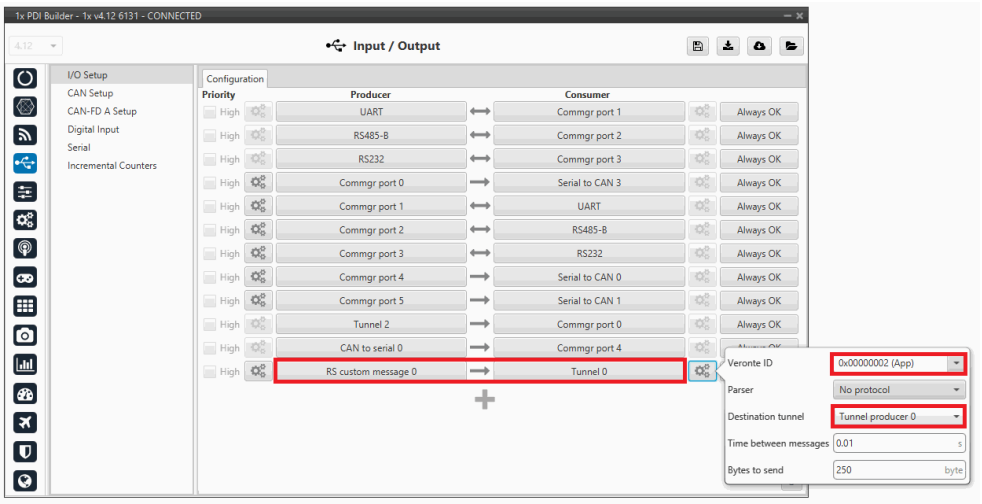


RS custom message → Tunnel

1x PDI Calibration side


1. Go to **Terminal tab**.

   Click on **Agree**:

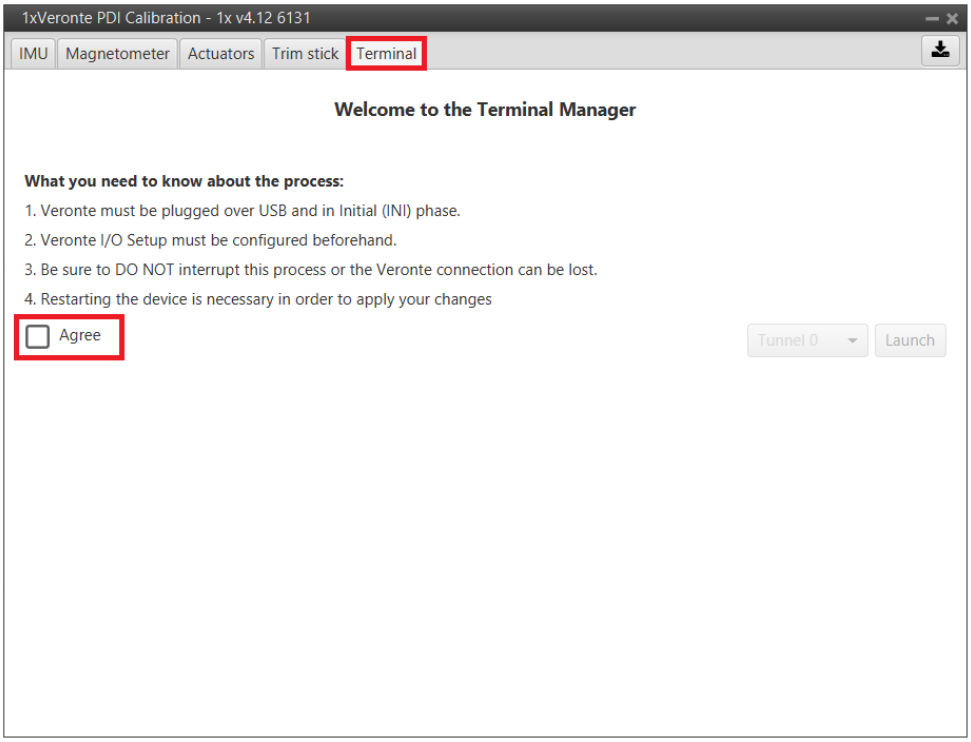


Terminal tab

2. Next, select the **Tunnel 1** (this corresponds to the Tunnel 0 that has been configured in the **1x PDI Builder**, as the numbering here starts at 1 and not 0) and click on **Launch**:

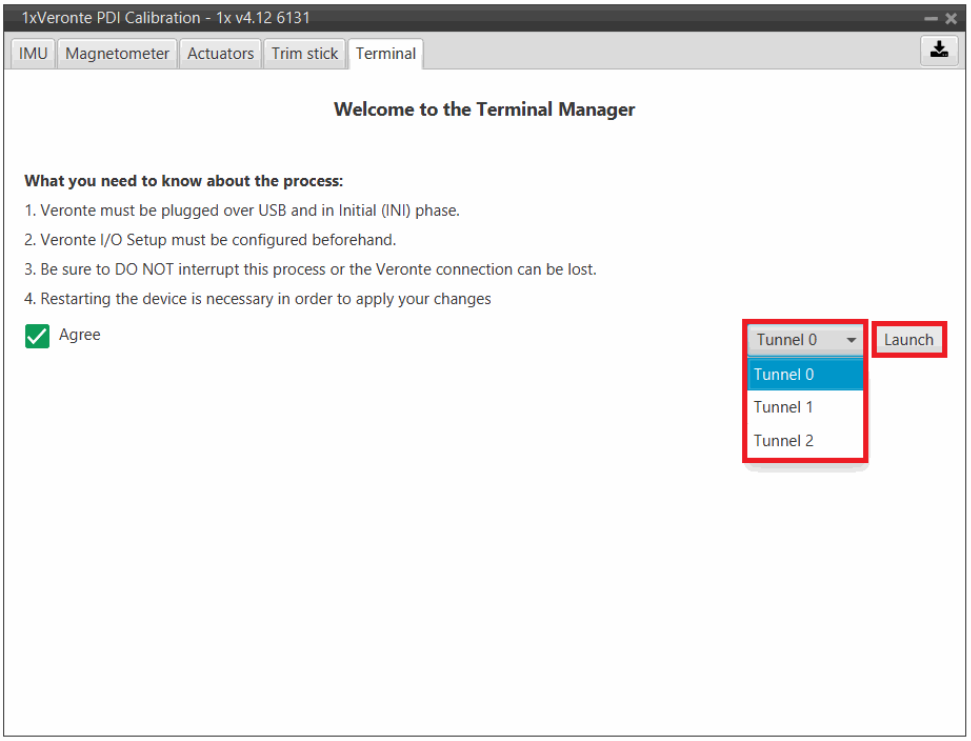

Terminal tab - Tunnel selected

The tunnel console should open and the user will be able to view the message being sent:

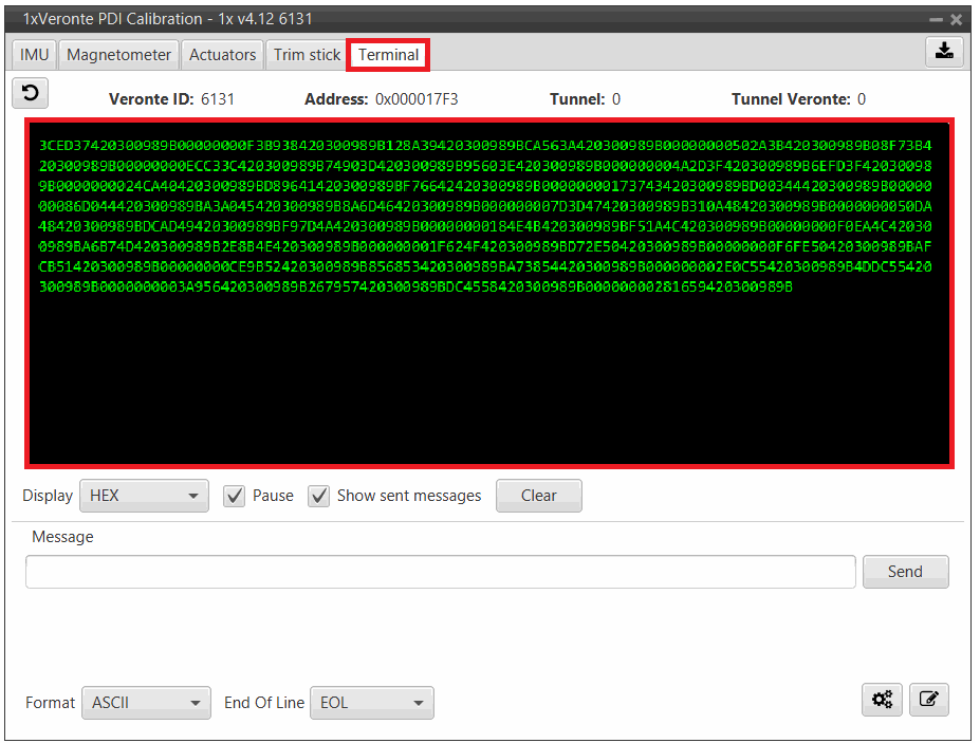


Tunnel console

For more information on the **Terminal configuration**, please refer to the Terminal section of the **1x PDI Calibration** user manual.

Maintenance mode

The user can simply enter maintenance mode via **1x PDI Builder** by clicking on the "Normal mode" button in the initial menu. In addition, exiting maitenance mode is the same process.


Below is an example of how to do this:

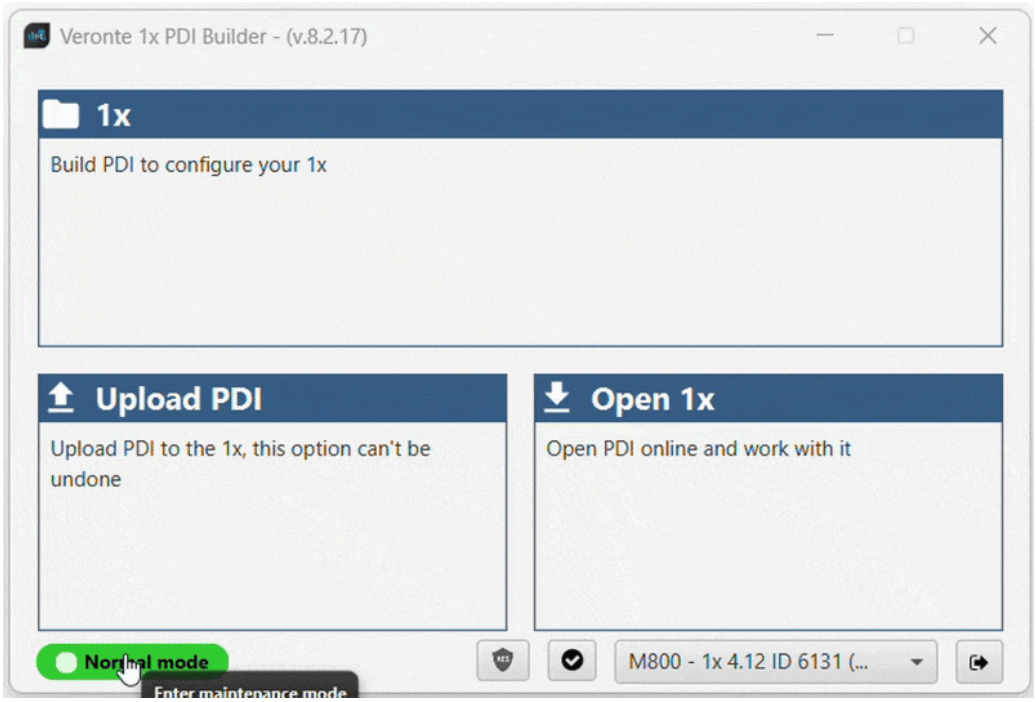

Enter/Exit maintenance mode


Maintenance mode (loaded with errors)

The following error message may appear when trying to save a change or import a configuration.

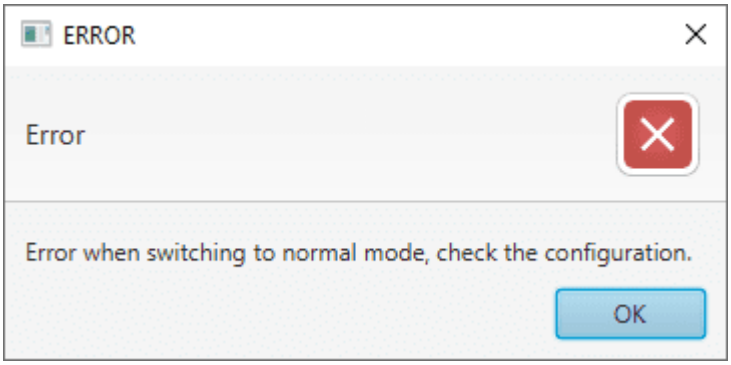


Error message

Therefore, Veronte Autopilot 1x will be in 'Maintenance mode (loaded with errors)':

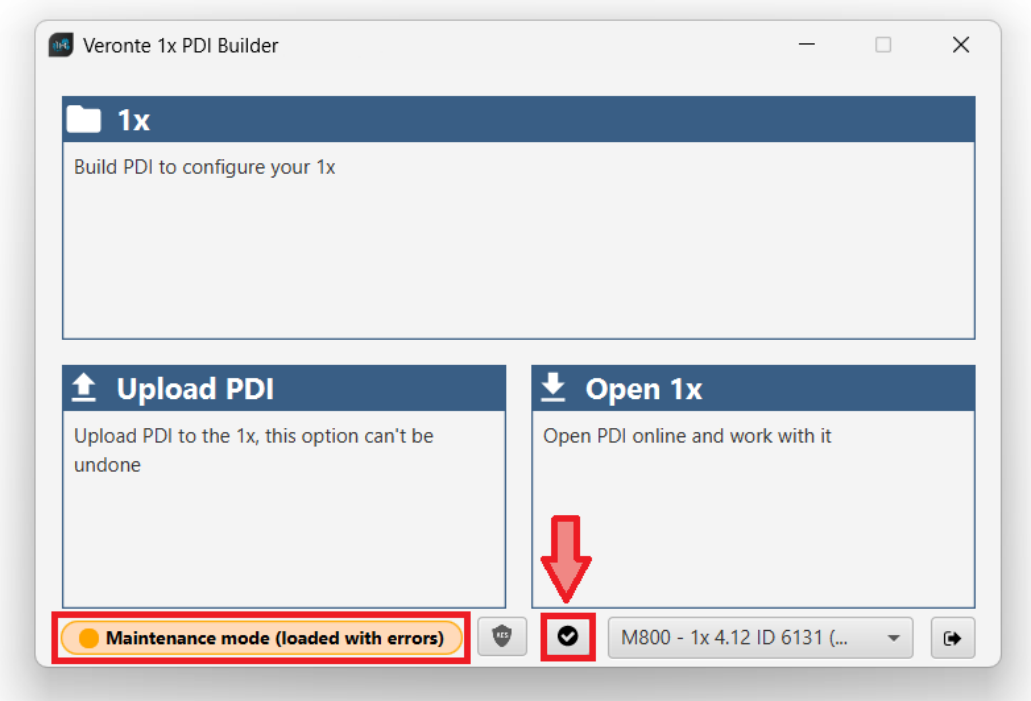

Maintenance mode (loaded with errors)

To check what the source of the problem is, the user can simply click on the **PDI Error button**  , which will show what the PDI Error is:

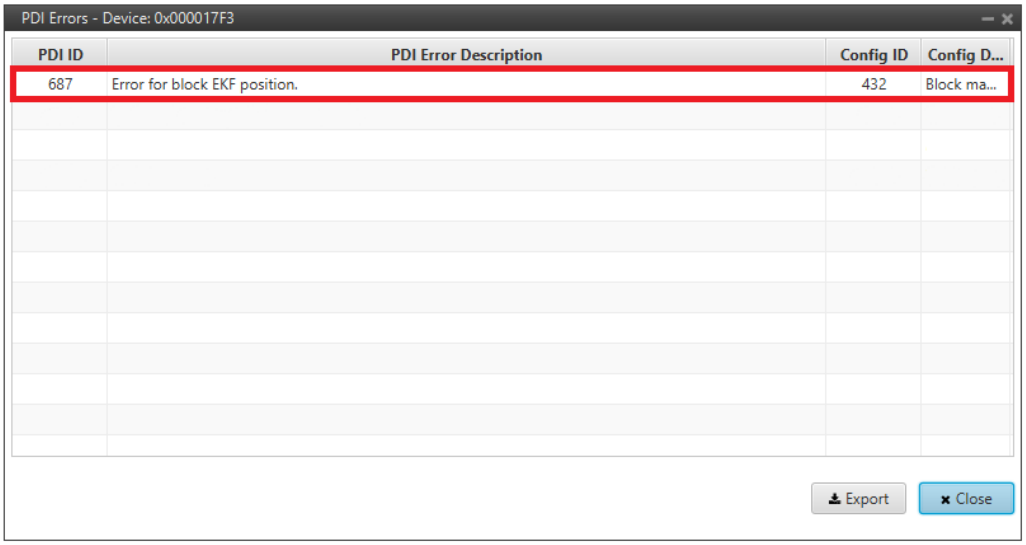

Maintenance mode (loaded with errors) - PDI Errors panel

- **PDI ID**: ID of the PDI Error.
- **PDI Error Description**: Description of this PDI Error. A list of all PDI Errors can also be accessed in the List of PDI Errors - Lists of interest section of the **1x Software Manual**.
- **Config ID**: ID of the configurable (.xml file) containing the data in which the PDI Error has been caused.

- **Config Description**: Description of the configurable (.xml file) containing the data in which the PDI Error has been caused.

Clicking the **Export** button will export a `.csv` file with the same information shown in this PDI Errors panel.

> **Tip**
>
> If the PDI error is related to a **migration**, it is usually caused by the **selection of accelerometer, gyroscope and magnetometer sensors**.

In addition, a list of all PDI Errors can be accessed in the List of PDI Errors - Lists of interest section of the **1x Software Manual**.


Migrate configuration

> **Warning**
>
> When performing automatic migration from a previous version to the current version of the software, errors may occur.
>
> **It is then the responsibility of the user to check the subsequent result**.

Radios paired but 1x air unit not showing

If the radios of both Autopilots 1x, air and ground units, are paired but the 1x air unit does not appear connected in **Veronte Link**, it may be because the **routing on the 1x ground unit is not correctly configured**. Therefore, users should check the **Ports** configuration on the 1x **ground unit**. To do this:

Go to Communications menu → **Ports panel**, and the routing of **Address 2** (App) (address by which Autopilots 1x ground and air units **communicates with all Veronte applications**, such as Veronte Link) must be set to the port that is connected to the USB (PC connection), in this case it is **PORT 0**.

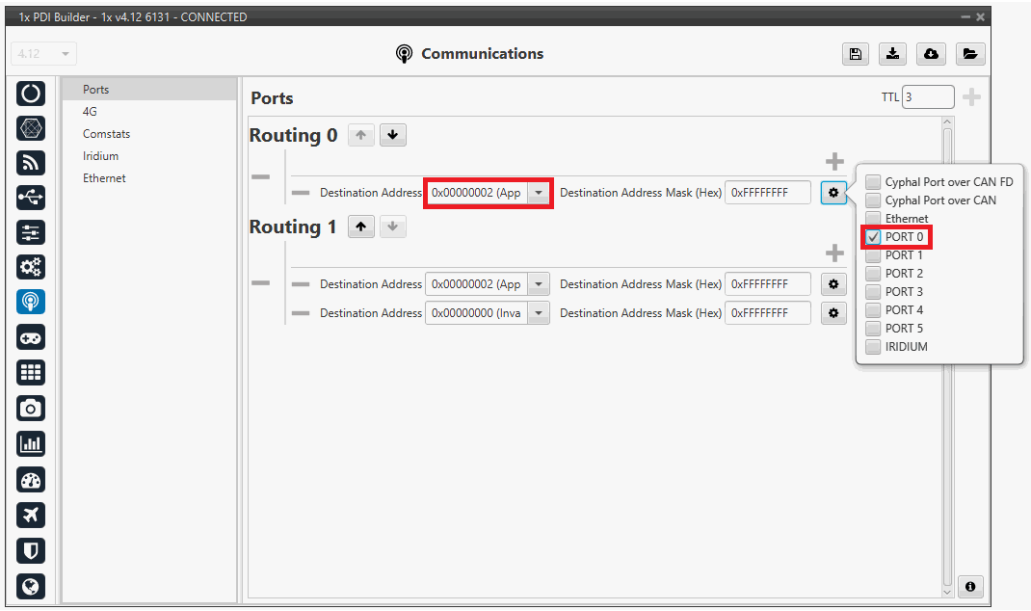

1x ground unit - Ports configuration

Reducing GNC Task frequency

400 Hz is the **maximum** possible **frequency**, but can only be used in **simple configurations**, in other cases it is advisable to **reduce** it to **250-300 Hz**.

To find out if the frequency needs to be reduced in the user configuration, check the **GNC Task Average CPU Ratio variable**.


For **correct operation**, this variable should be at approximately **60-70%**. If it reports a **higher value**, the **frequency must be lowered**.

Trajectory Overshoot

If the user observes significant **meandeling** or overshoot in the mission path, this can be reduced by modifying the gains of the guidance PIDs:

- **Reducing** the **proportional** gain.
- Ensure that the **integral** gain is **0**.

Guidance error accumulates and leads to increasing overshoot, as can be seen in the following example:

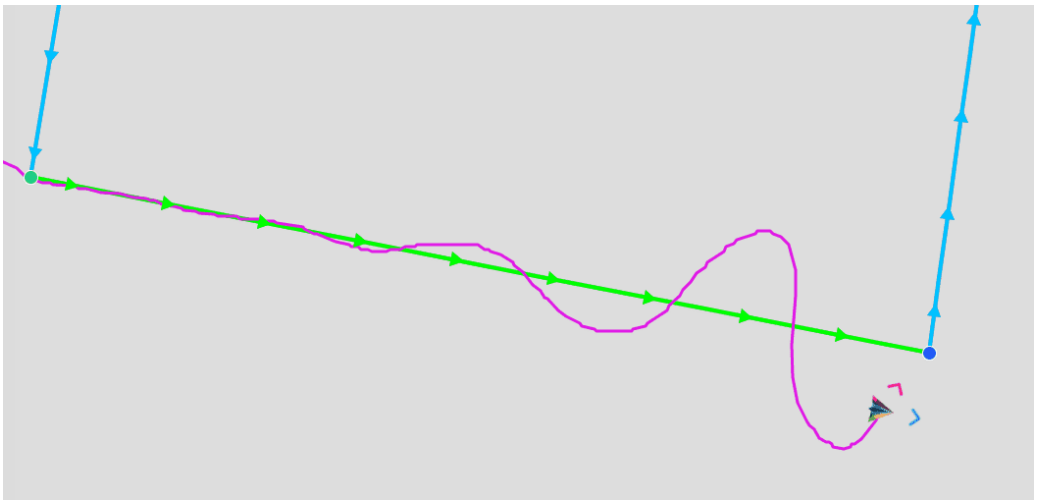

Trajectory overshoot


FAQ

How to calculate a mask

This section attaches a python program that allows users to easily calculate their mask in standard or extended frame format by simply entering the CAN Ids as a **vector**. In addition, this program also converts each Id entered into binary.

maskCalculator.py

An example of the execution of this program is shown below:

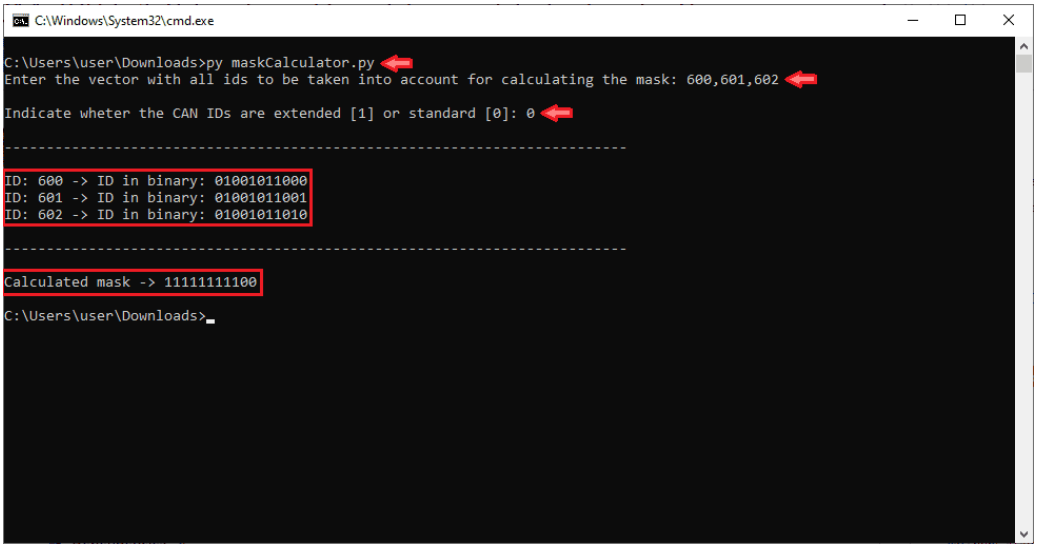

Example of maskCalculator program

What does decimation mean?

EKF implementation in Veronte Autopilot 1x algorithm means that only one sensor can enter per run step.

Therefore, if more than one sensor is read in the same GNC step, then **the sensor with highest priority is the one introduced to the EKF**. The rest of the sensor measurements will be introduced to the EKF in subsequent GNC steps according to their priority order.

The **priority order of the sensors from highest to lowest priority** is as follows:

- GNSS position

- GNSS velocity
- Relative position sensor
- GNSS compass
- Magnetometer
- Static pressure
- Altimeter
- Velocity down
- Terrain mesh

Consequently, if there is a sensor with a high priority and it has a high refresh rate it may cause other sensors to never enter.

To avoid this, the **decimation** parameter has been introduced, which allows the user to set a downsampling factor that determines how often a sensor is used in the EKF. That is, with decimation 10, a sensor's new measurement only enters the EKF in 1 out of 10 GNC steps.

It is recommended **not to change the default values** if users are not sure what they are doing.

Automations evaluation and execution

- **What is the approximate rate of evaluation of all automations?**
  The evaluation rate of these automations depends on the type of event in terms of priority: high and low events.
  High events are those that check whether a system variable is within the defined limits or those which check if the selected bits are correct.
  Low events are the rest of events of the system.

  Considering that automations run at **Core 2 (C2) frequency**, these are the evaluation rates of each type of event:
  - **High events**: Evaluated in all steps of C2.
  - **Low events**: The evaluation rate is given by the following equation:


$$\text{Evaluation rate} = \frac{\text{nº low events}}{\text{floor}\left(\frac{\text{nº of low events} + 35}{36}\right)} + 3$$

> **Example**
>
> **56 low events** → low events are evaluated each **31 C2 steps**

- **Are the automations evaluated in sequential order from top to bottom (similar to block programs that are evaluated in sequential order)?**

  No, they are evaluated in the order of the automation ID, which may not necessarily coincide with the order in which they appear in the list of automations.

  For instance, considering the following automations configuration, the automation with ID 9 (Auto Mode), will be executed before the automation with ID 27 (RDZ Button), regardless of whether the automation RDZ Button is first in the "sequential order".

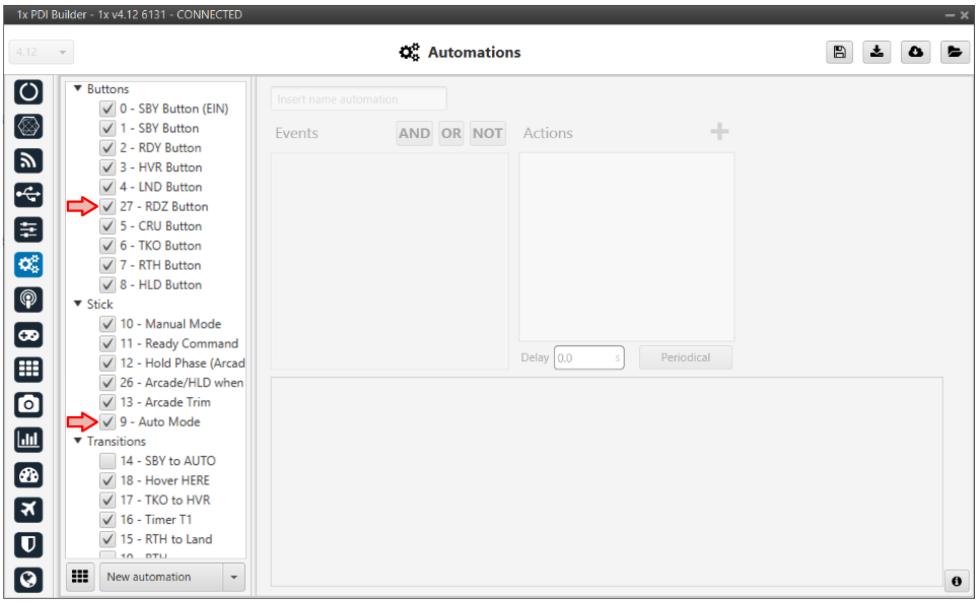

Automations evaluation order example

- **Is it possible for one automation action to be executed before the complete list of automations is evaluated?**

  No, this is not possible because the Veronte Autopilot 1x system first checks all automation events and then executes the corresponding actions triggered by the evaluated events.

- **Could a block program use a variable set by an action of an automation before the complete list of automations is evaluated?**
  No, because block programs are executed before automations.

- **Could a CAN message with a variable value set by an automation be sent before the complete set of automations is evaluated?**
  No, because CAN is evaluated in Core 1, while automations are executed in Core 2. For more information on the tasks and functioning of each Core, please refer to the Core architecture section of the **1x Software Manual**.

Software Changelog

This section presents the changes between the previous software version **v. 7.8.20** and the current **v.8.2.20**.

Added:

- STANAG 4586 Data link configuration option in STANAG 4586 configuration
- Device type specific descriptions for configurations
- Empty block programs are removed for memory optimization when saving configuration
- Tabs are disabled for Virtual stick when Enable Virtual Stick is not selected. Configuration in these tabs do not save when the Virtual Stick is not enabled
- Variable search sub panel for block programs
- Limits from 1 to 1000 in Desired frequency field for external sensors in Magnetometer section

Changed:

- Name of IMU blocks
- Max bits value for matcher type fields to 32

Removed:

- Initial and minimum variance values from Gyroscope and Accelerometer
- Time constant for mean and variance fields from Gyroscope and Accelerometer

Fixed:

- Encryption and errors buttons are still visible after deselecting device
- Loading speed for large block programs
- Incorrect saving of BackTo and BackFrom values
- Serial panel errors on devices with incomplete SCI configurations
- Inverted row and column names in Actuator block US and SU matrices